


FOG LIGHT (FOR USA)

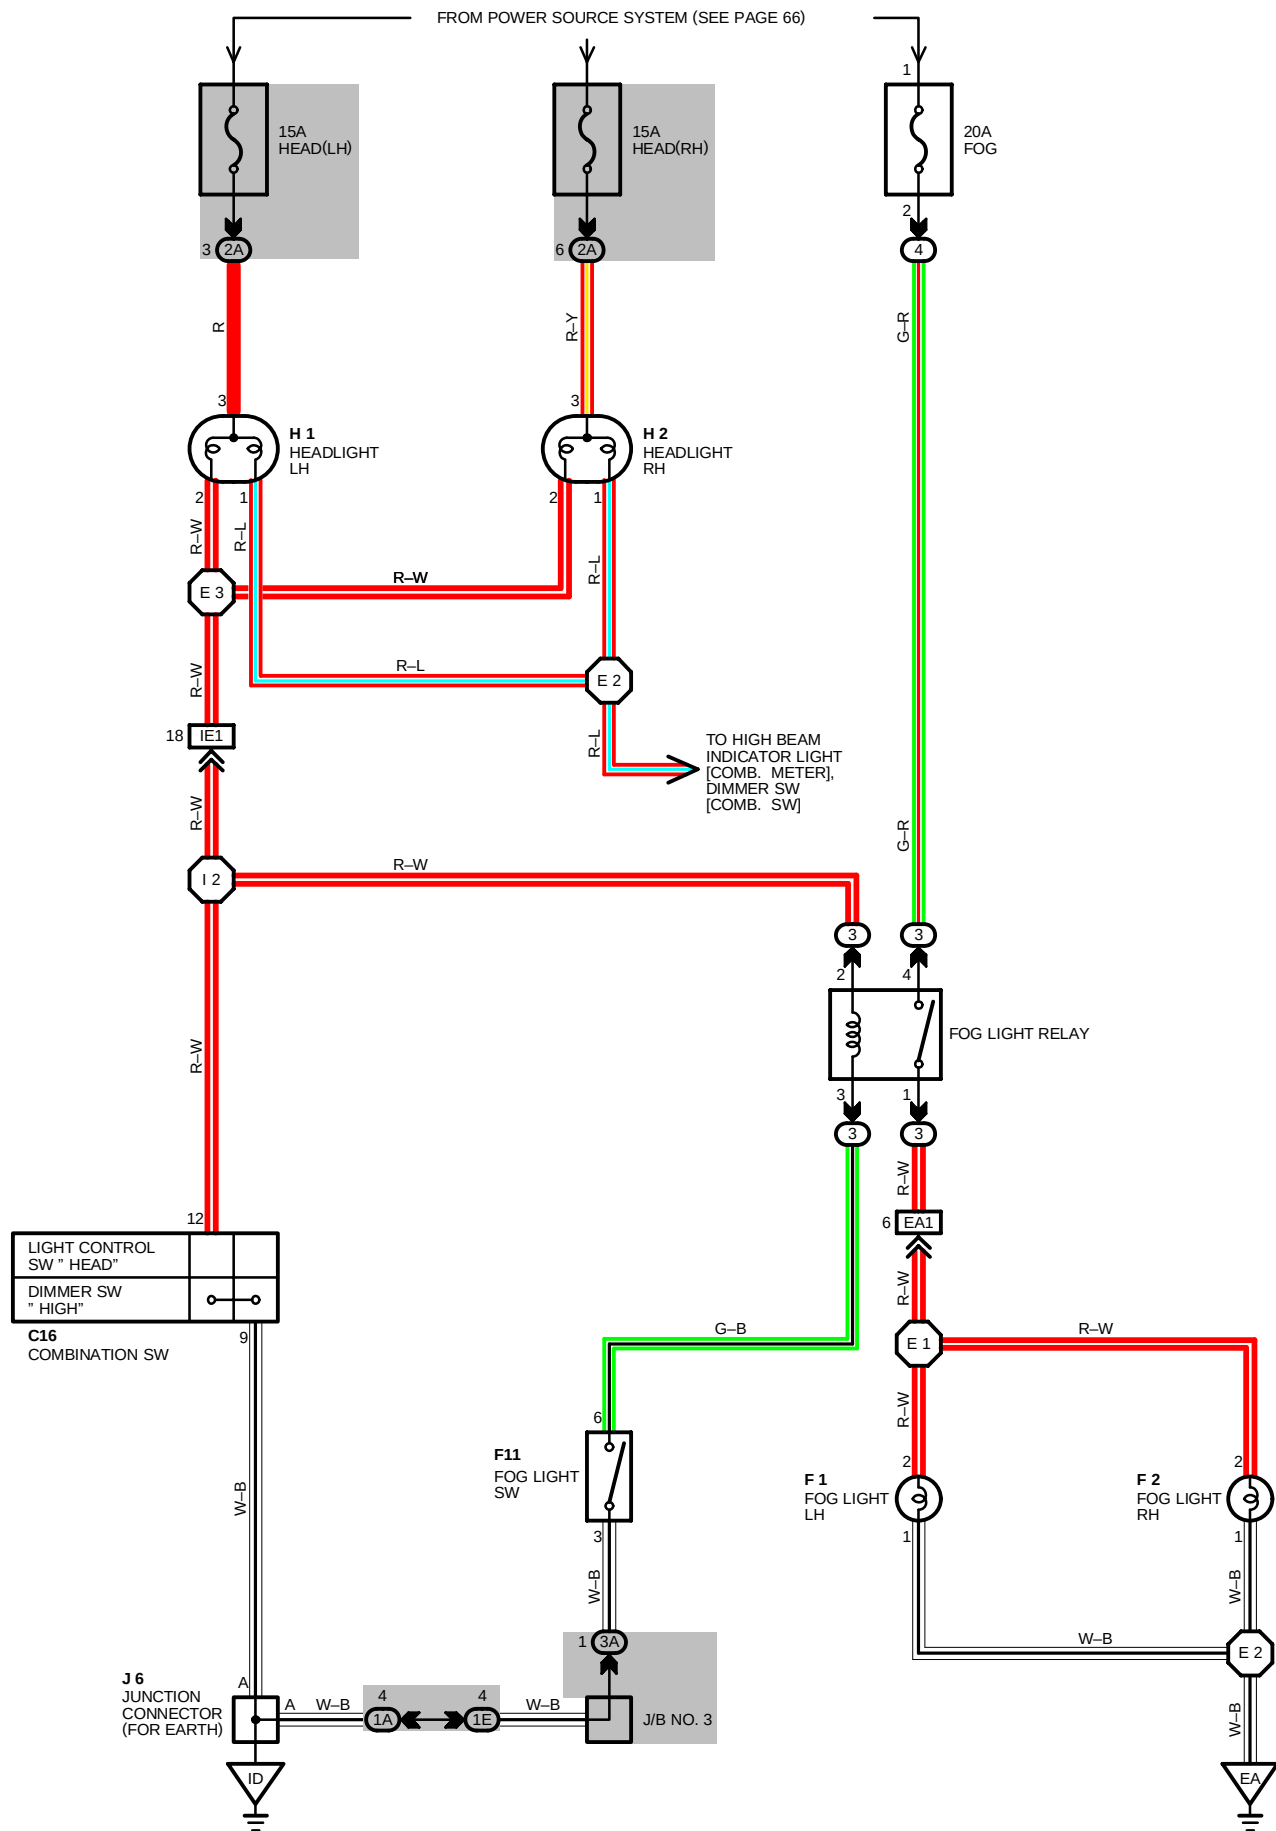

SERVICE HINTS

FOG LIGHT RELAY

(3) 1–(3) 4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND FOG LIGHT SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	32	F 2	31 (4A–FE)	H 2	28 (3S–GTE), 30 (5S–FE)
F 1	28 (3S–GTE), 30 (5S–FE)	F11	33		31 (4A–FE)
	31 (4A–FE)	H 1	28 (3S–GTE), 30 (5S–FE)	J 6	33
F 2	28 (3S–GTE), 30 (5S–FE)		31 (4A–FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
3	26	R/B NO. 3 (RIGHT KICK PANEL)
4	27	R/B NO. 4 (RIGHT KICK PANEL)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
2A	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL–TRAC/4WD)	
3A	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	38 (3S–GTE)	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
	40 (5S–FE)	
	42 (4A–FE)	
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	38 (3S–GTE)	FRONT RIGHT FENDER
	40 (5S–FE)	
	42 (4A–FE)	
ID	44	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	38 (3S–GTE)	ENGINE ROOM MAIN WIRE	E 2	42 (4A–FE)	ENGINE ROOM MAIN WIRE
	40 (5S–FE)		E 3	38 (3S–GTE)	
	42 (4A–FE)			40 (5S–FE)	
E 2	38 (3S–GTE)			42 (4A–FE)	
	40 (5S–FE)		I 2	46	COWL WIRE

C16 BLACK

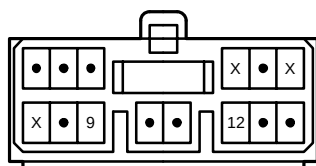


F 1, F 2




F11 BLACK



H 1, H 2 BROWN

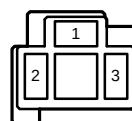

J 6

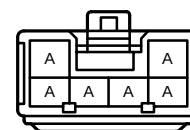

(HINT : SEE PAGE 7)