


ELECTRIC TENSION REDUCER

FROM POWER SOURCE SYSTEM (SEE PAGE 66)

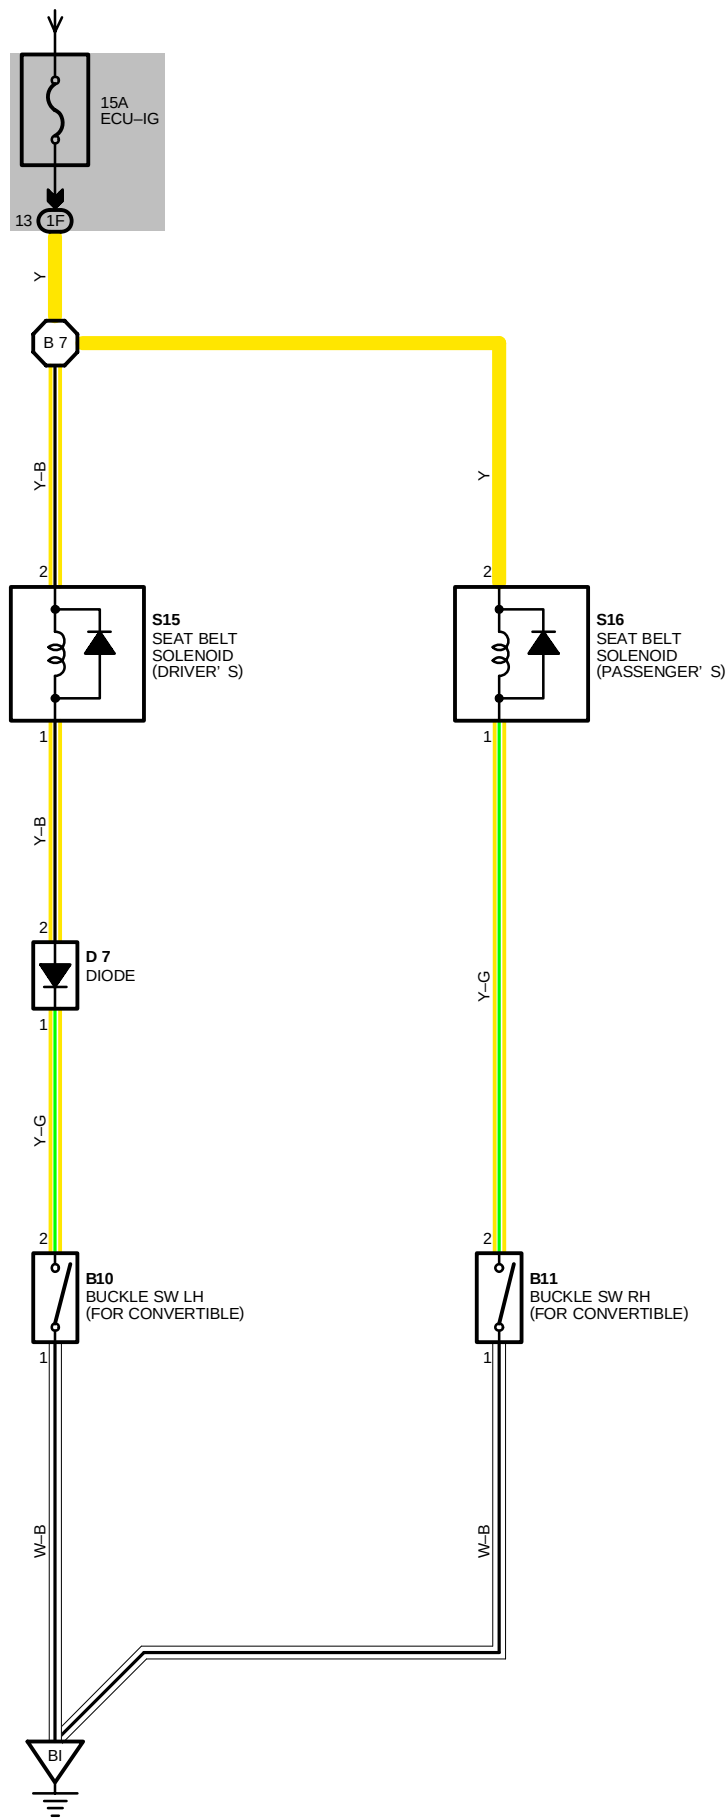

SERVICE HINTS

B10 BUCKLE SW LH

1-2 : CLOSED WITH DRIVER'S LAP BELT IN USE

B11 BUCKLE SW RH

1-2 : CLOSED WITH PASSENGER'S LAP BELT IN USE

S15, S16 SEAT BELT SOLENOID LH, RH

2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B10	36	D 7	36 (CONVERTIBLE)	S16	36
B11	36	S15	36		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1F	20	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	52 (CONVERTIBLE)	UNDER THE LEFT CENTER

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 7	52 (CONVERTIBLE)	FLOOR WIRE			

B10, B11, S15, S16



D 7

