


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

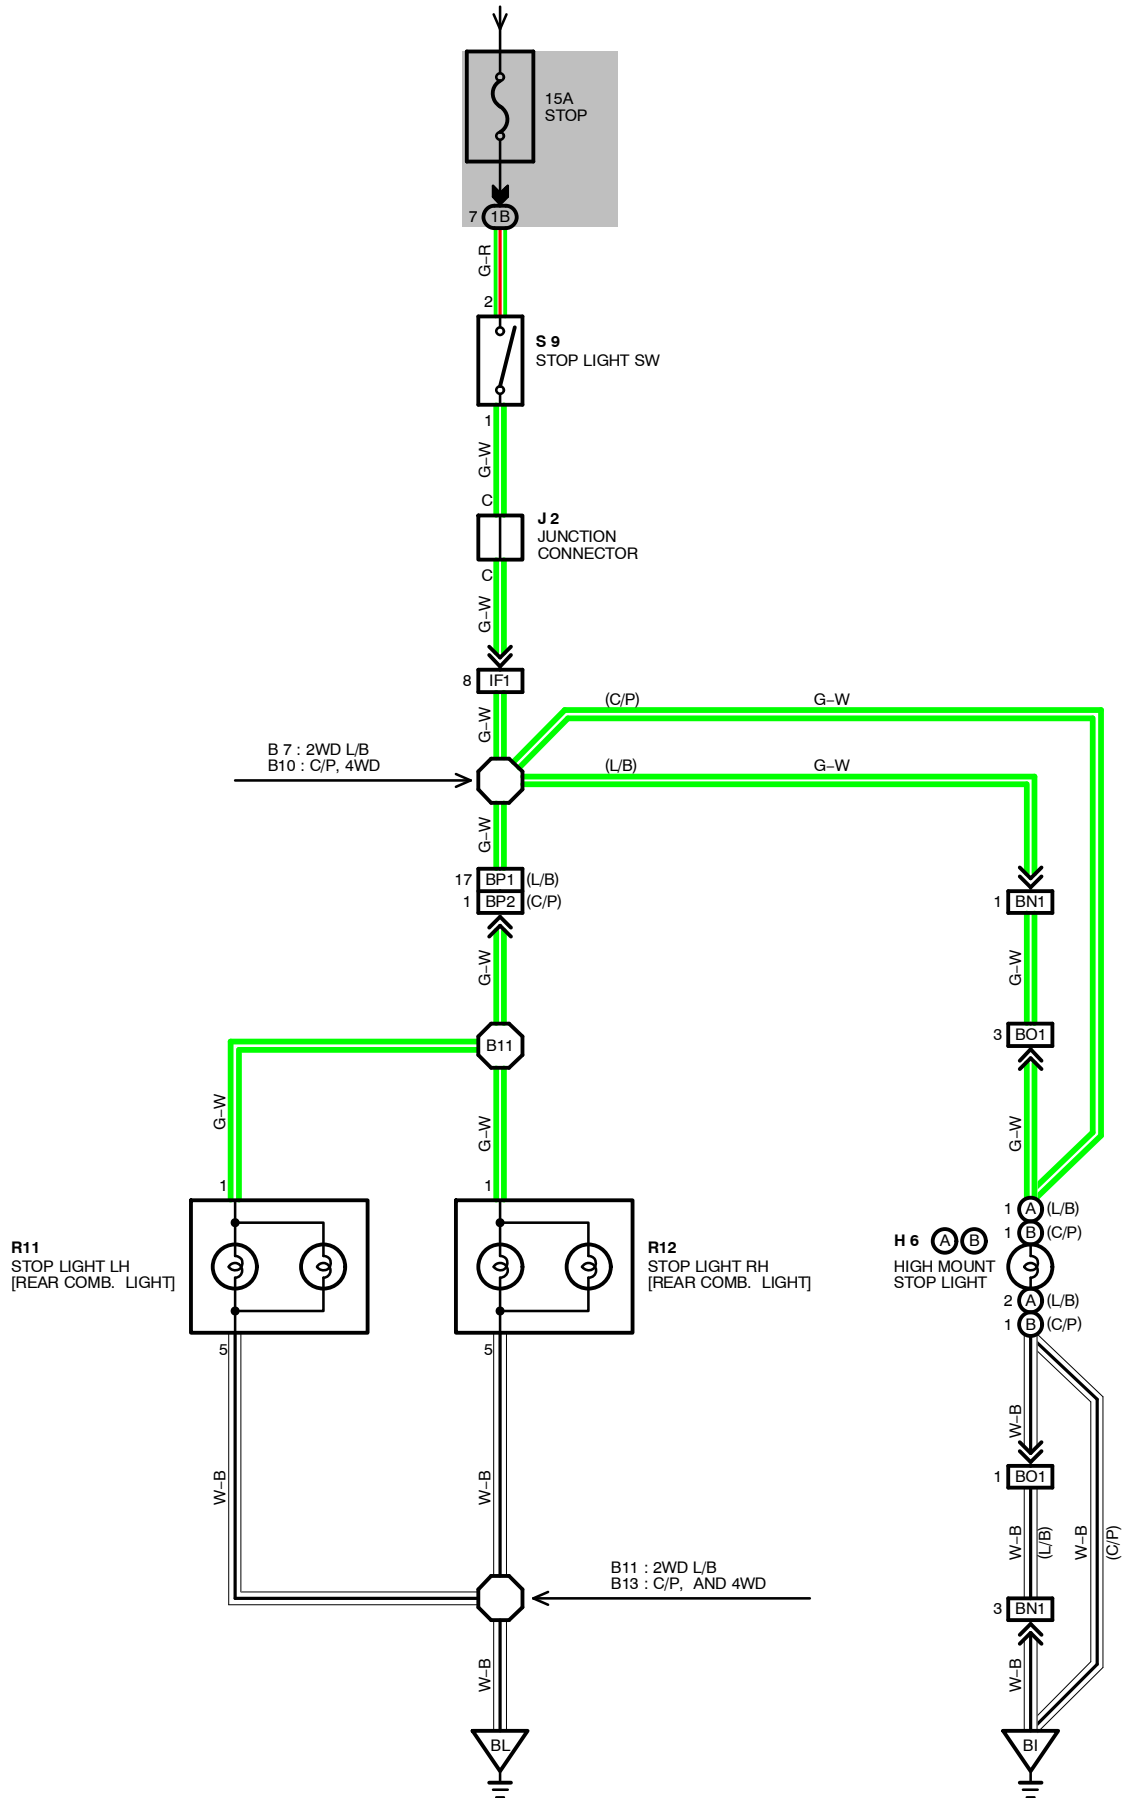

SERVICE HINTS

S 9 STOP LIGHT SW

1-2: CLOSED WITH BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
H 6	A	34 (L/B)	J 2	33	R12	34 (L/B), 35 (C/P)
	B	35 (C/P)	R11	34 (L/B), 35 (C/P)	S 9	33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	42	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
BN1	46 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	46 (L/B)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	48 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	46 (L/B)	UNDER THE LEFT CENTER PILLAR
	48 (C/P)	
BL	46 (L/B)	BACK PANEL CENTER
	48 (C/P)	

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 7	46 (L/B)	FLOOR WIRE	B13	46 (L/B)	LUGGAGE ROOM WIRE
B10	46 (L/B) 48 (C/P)			48 (C/P)	
B11	46 (L/B)	LUGGAGE ROOM WIRE			
	48 (C/P)				

