

SERVICE HINTS

HEADLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C14	28	H 1	26 (5S-FE), 27 (4A-FE)	R 3	26 (5S-FE), 27 (4A-FE)
C16 A	28	H 2	26 (5S-FE), 27 (4A-FE)	R 9	29
C17 B	28	J 6	29		
F10	26 (5S-FE), 27 (4A-FE)	R 2	26 (5S-FE), 27 (4A-FE)		

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
2A	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2B	20	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2D	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2E		
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS








CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	34 (5S-FE)	FRONT LEFT FENDER
	34 (4A-FE)	
ID	36	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	32 (5S-FE)	ENGINE ROOM MAIN WIRE	E 4	32 (5S-FE)	ENGINE ROOM MAIN WIRE
	34 (4A-FE)			34 (4A-FE)	
E 3	32 (5S-FE)		I 1	36	COWL WIRE
	34 (4A-FE)		I 2		

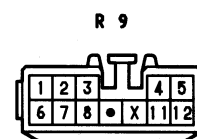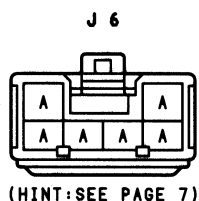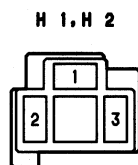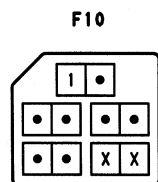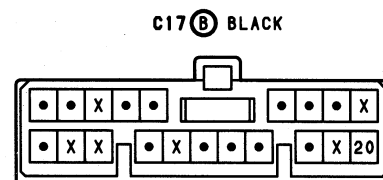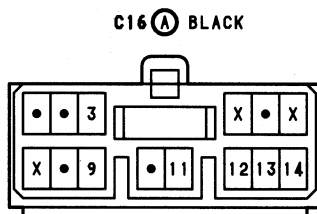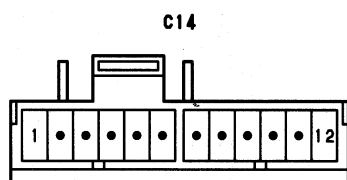

HEADLIGHT (USA)

△ W/ CRUISE CONTROL AND ABS
○ EX. W/ CRUISE CONTROL AND ABS

