


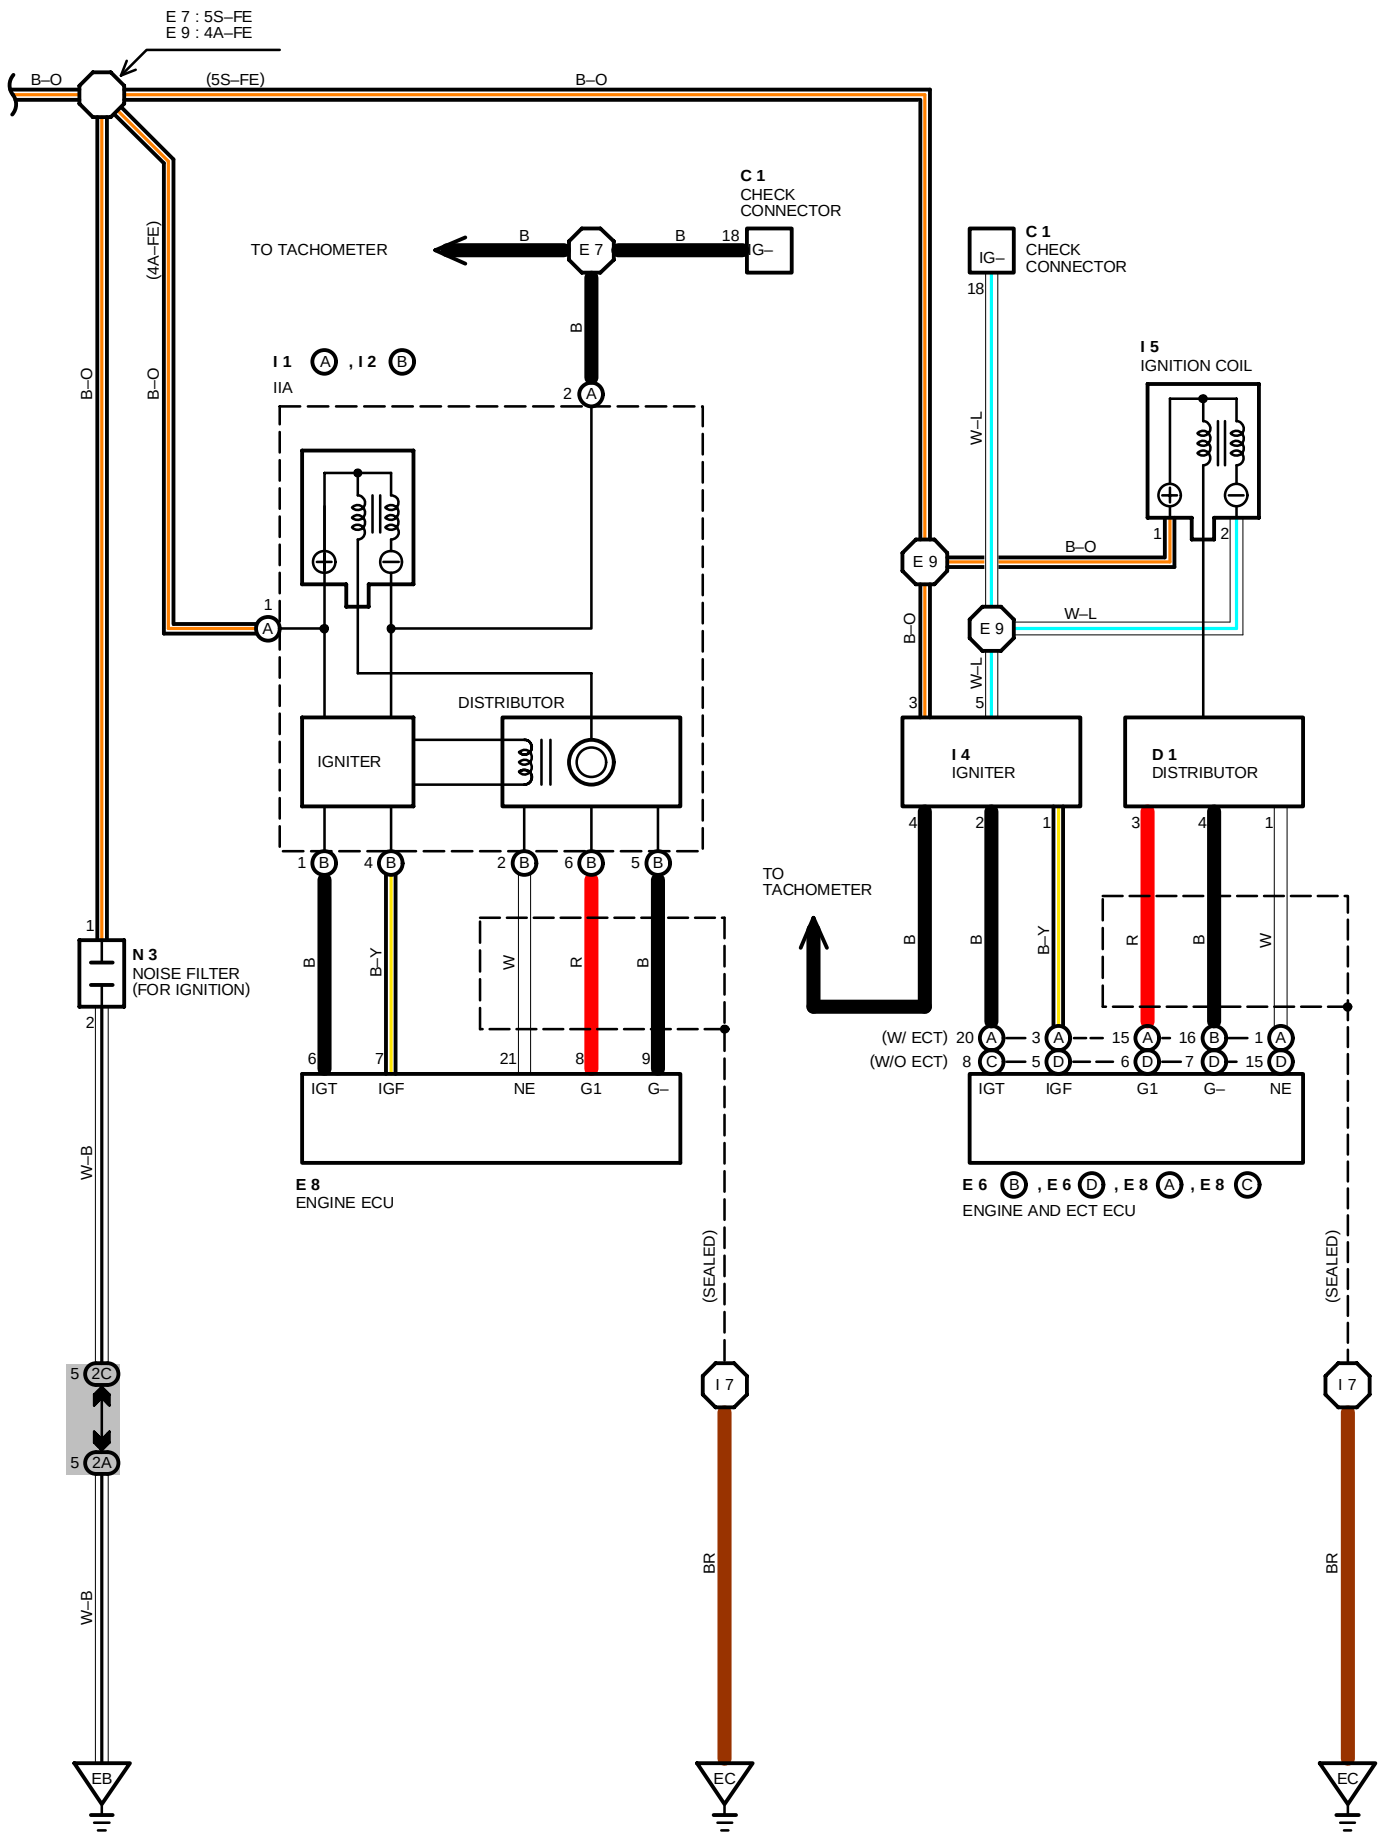



STARTING AND IGNITION

SERVICE HINTS

I12 IGNITION SW

- 4-7 : CLOSED WITH IGNITION SW AT **ST** POSITION
 9-10 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

C12 CLUTCH START SW

- 1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

STARTER RELAY

- (4) 2-(4) 4 : CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT **ST** POSITION

STARTER

- POINTS CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT **ST** POSITION

N 1, N 2 NEUTRAL START SW (A/T)

- 2-3 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION (W/ ECT)
 1-2 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION (W/O ECT)

C 4 COLD START INJECTOR

- 1-2 : APPROX. 12 VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING



: PARTS LOCATION

CODE		SEE PAGE		CODE		SEE PAGE		CODE		SEE PAGE	
C 1		26 (5S–FE), 27 (4A–FE)		E 8	A	29		I12		29	
C 4		26 (5S–FE), 27 (4A–FE)			C	29		N 1	B	26 (5S–FE), 27 (4A–FE)	
C12		28		F10		26 (5S–FE), 27 (4A–FE)		N 2	A	26 (5S–FE)	
D 1		26 (5S–FE), 27 (4A–FE)		I 1	A	27 (4A–FE)		N 3		26 (5S–FE), 27 (4A–FE)	
E 6	B	29		I 2	B	27 (4A–FE)		S 4		26 (5S–FE), 27 (4A–FE)	
	A	29		I 4		26 (5S–FE)		S 5	A	26 (5S–FE), 27 (4A–FE)	
E 8		29		I 5		26 (5S–FE)		S 6	B	26 (5S–FE), 27 (4A–FE)	



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
4	24	R/B NO. 4 (RIGHT KICK PANEL)



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
2A	20	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)
2B	20	ENGINE WIRE AND J/B NO.2 (NEAR THE BATTERY)
2C		
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	32 (5S-FE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
	34 (4A-FE)	
ES1	34 (4A-FE)	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE STARTER)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	32 (5S-FE)	FRONT LEFT FENDER
	34 (4A-FE)	
EC	32 (5S-FE)	INTAKE MANIFOLD
	34 (4A-FE)	
IG	36	R/B NO. 4 SET BOLT



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5	32 (5S-FE)	ENGINE WIRE	E 8	34 (4A-FE)	ENGINE WIRE
	34 (4A-FE)		E 9	32 (5S-FE)	
E 7	32 (5S-FE)			34 (4A-FE)	
	34 (4A-FE)		I 7	36	COWL WIRE
E 8	32 (5S-FE)		I 8	36	

