
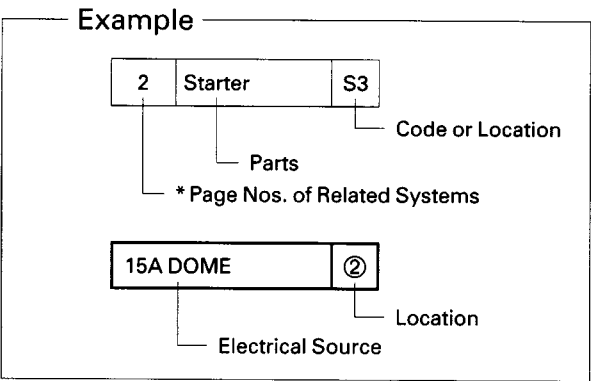


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

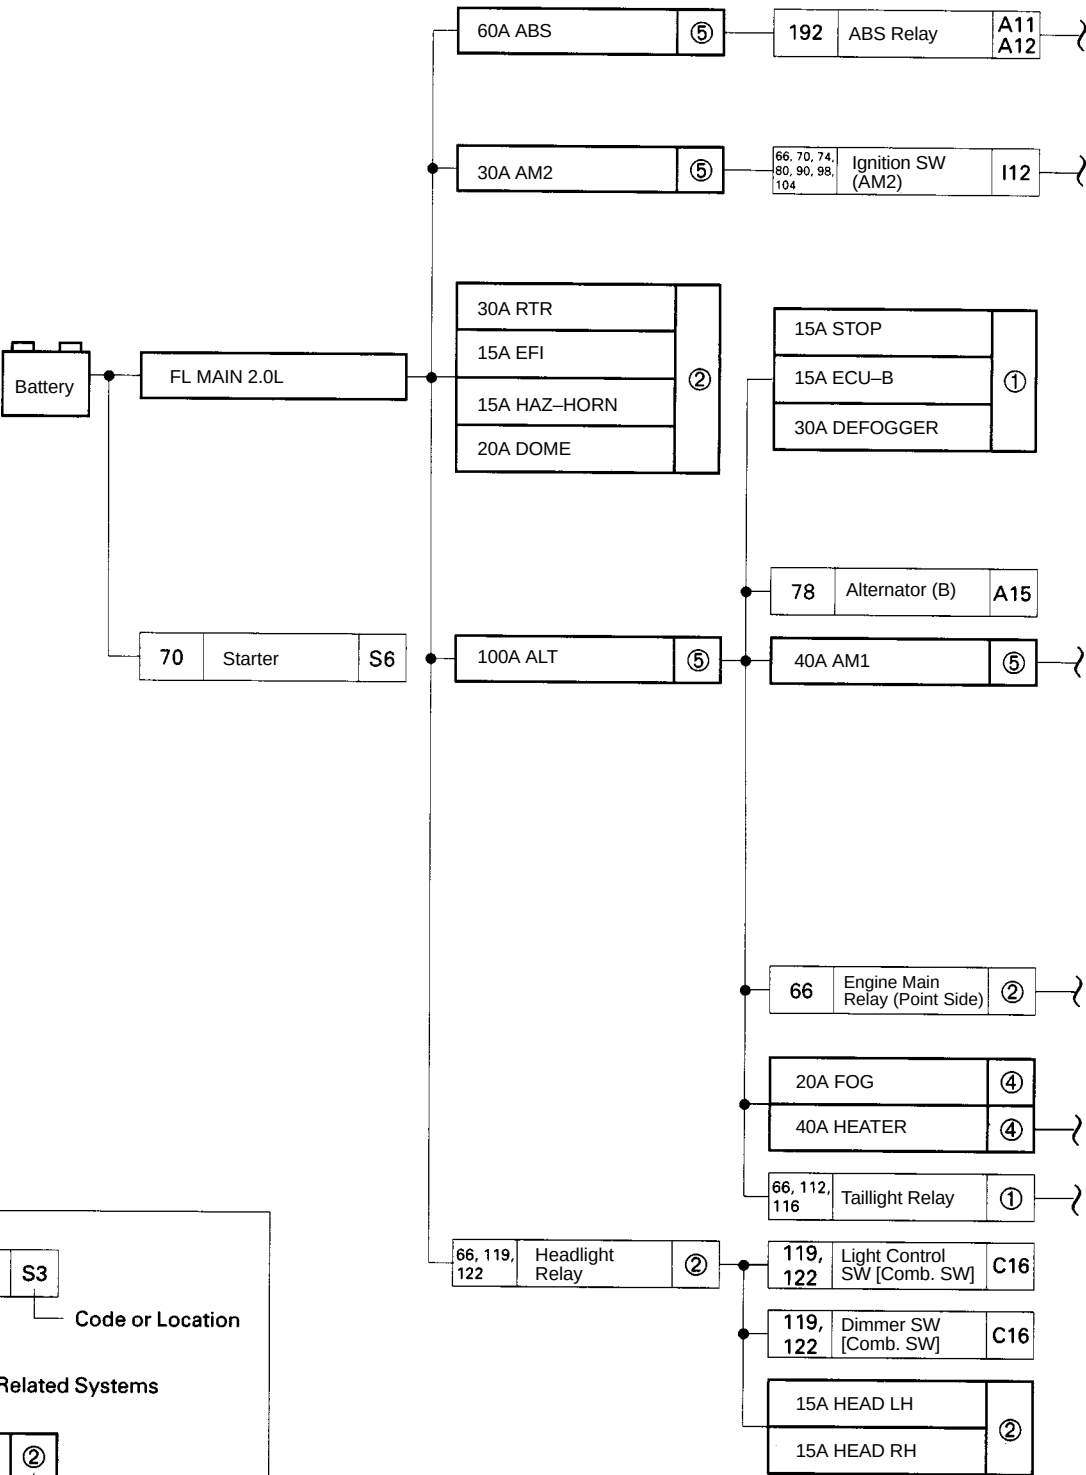

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)

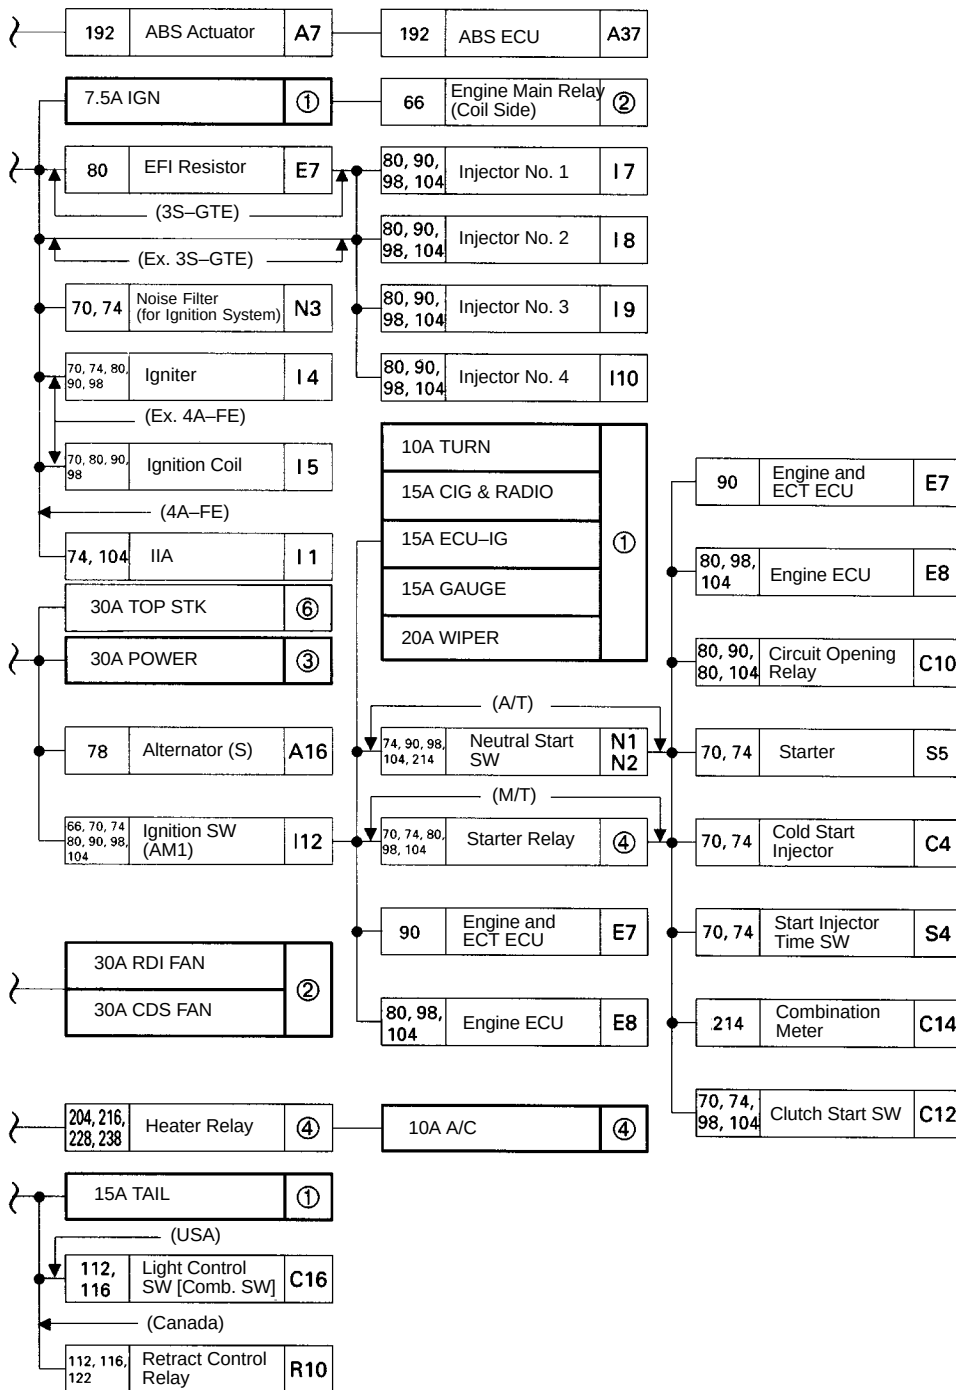

(4) : R/B No. 4 (See page 27) (2) : Fuse Box (F10 See on page 28) (3) : R/B No. 3 (See page 26)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		218 230				192	78	118 230	112 230	112 218	218 230	218	218	218 230	112	218	176	192	206	192																																
					Parts				Code or Location				CB or Fuse				A/C Condenser Fan Motor				A/C Idle-Up VSV																																		
			Parts		Code or Location		CB or Fuse		A/C Condenser Fan Motor				A/C Idle-Up VSV				A/C Magnetic Clutch				A/C Pressure SW																																		
									ABS Actuator				ABS Relay				Alternator				A/C Amplifier				A/C Control Assembly				A/C Power Transistor				A/C System Amplifier				Air Vent Mode Control Servo Motor				Ashtray Illumination				Auto A/C Amplifier				Auto Tilt Away ECU				ABS ECU		
			A2	A3	A4	A5	A7	A11	A16	A17	A18	A19	A20	A22	A25	A30	A31	A32	A34	A36	A37	A38	A41	A43																															
①	30A	DEFOGGER																																																					
	20A	WIPER																																																					
	15A	GAUGE		●	●	●	●	●		●		●	●		●	●		●	●	●	●	●																																	
	7.5A	IGN				●			●																																														
	15A	ECU-B																				●																																	
	10A	TURN																																																					
	15A	CIG & RADIO																●	●				●																																
	15A	TAIL									●	●						●																																					
	15A	ECU-IG								●													●	●	●																														
	15A	STOP																				●																																	
②	15A	HEAD LH																																																					
	15A	HEAD RH																																																					
	30A	RTR																																																					
	15A	EFI																																																					
	20A	DOME																	●				●																																
	15A	HAZ-HORN																																																					
	30A	RDI FAN																																																					
	30A	CDS FAN	●																																																				
③	30A	POWER																		●																																			
④	20A	FOG																																																					
	10A	A/C		●		●				●		●							●	●																																			
	40A	HEATER											●	●				●	●																																				

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

132	218 230	218 230	218 230	218 230	136	158	80 90 78 104 197	218 230	197	203	112	80 90 98 104	203	145 214	192	80 90 98 104	214	180 186	169	119 122	169 174	155	134	78 214	112 214	136	119 122 128																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					
Back-Up Light SW (M/T)		Blower Control Relay		Blower Motor		Blower Resistor		Back Door Control SW		Buckle SW LH (for Convertible)		Buckle SW RH (for Convertible)		Check Connector		Check Connector (for Fan Check)		Center Airbag Sensor Assembly		Cigarette Lighter		Cigarette Lighter Illumination		Circuit Opening Relay		Clock		Airbag Warning Light [Comb. Meter]		ABS Warning Light [Comb. Meter]		Check Engine Warning Light [Comb. Meter]		Combination Meter		Cruise Control Indicator Light [Comb. Meter]		ECT Indicator Light (PWR) [Comb. Meter]		High Beam Indicator Light [Comb. Meter]		O/D Off Indicator Light [Comb. Meter]		Seat Belt Warning Light [Comb. Meter]		Turn Signal Indicator Lights [Comb. Meter]		Charge Warning Light [Comb. Meter]		Combination Meter (Illumination)		Door Warning Light [Comb. Meter]		Dimmer SW [Comb. SW]																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										
B1	B3	B4	B5	B6	B7	B10	B11	C1	C2	C7	C8	C9	C10	C11	C13	C14										C15		C16																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																				

(4) : R/B No. 4 (See page 27)

The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

90	80 98	98 218 230	90 169	80 98 104	218	122 128	116	116 134	152	112 128	80 90 98 104 214	80	214	112	119 122 128	191	112 134	130	80 90 96 169	136										
Engine and ECT ECU		Engine ECU	Engine ECU	Engine and ECT ECU	Engine ECU	Extra High Speed Relay		Fog Light LH	Fog Light RH	Front Side Marker Light LH	Front Side Marker Light RH	Front Turn Signal Light and Clearance Light LH	Front Turn Signal Light and Clearance Light RH	Front Wiper Motor	Fog Light SW	Fuel Pump and Fuel Sender	Fuel Pump Resistor	Fuel Pump	Fuel Sender (All-Trac/4WD)	Glove Box Light	Glove Box Light SW	Headlight LH	Headlight RH	Horn LH	Horn RH	Hazard SW	High Mount Stop Light	ISC Valve	Ignition Key Cylinder Light	Interior Light
E6		E7	E8	E9	F1	F2	F5	F6	F7	F8	F9	F11	F16	F17	F18	F19	G1	G2	H1	H2	H3	H4	H5	H6	I3	I11	I13			

(4) : R/B No. 4 (See page 27)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		116		136		136		136		132		132 169		160		104		214		104		112 169 174		80		162			140				112		138		
											Licence Plate Light		Luggage Compartment Door Courtesy SW (C/P)		Luggage Compartment Light (C/P)		Luggage Compartment Light (L/B)		Back-Up Light SW (w/o ECT of A/T)		Neutral Start SW and Back-Up Light SW (w/ ECT of A/T)		Noise Filter (for Defogger System)		O/D Solenoid		Oil Pressure SW		Oxygen Sensor (for Ex. California)		O/D Main SW		Oxygen Sensor (All-Trac/4WD)		Power Seat Motor (for Lumber Support)		Power Seat Motor (for Side Support)		Power Seat SW		Power Window Master SW		Power Window Motor LH		Power Window Motor RH	
			L1		L2		L3		L4		N1		N2		N4		O1		O2		O6		O7		O8		P2		P3		P4		P5		P6		P7		P8		P9		Q1		Q2	
①	30A	DEFOGGER																																												
	20A	WIPER																																												
	15A	GAUGE																																												
	7.5A	IGN																																												
	15A	ECU-B																																												
	10A	TURN																																												
	15A	CIG & RADIO																																												
	15A	TAIL																																												
	15A	ECU-IG																																												
	15A	STOP																																												
②	15A	HEAD LH																																												
	15A	HEAD RH																																												
	30A	RTR																																												
	15A	EFI																																												
	20A	DOME																																												
	15A	HAZ-HORN																																												
	30A	RDI FAN																																												
	30A	CDS FAN																																												
③	30A	POWER																																												
④	20A	FOG																																												
	10A	A/C																																												
	40A	HEATER																																												

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (6) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		80	90	130	166	136	166	158	134	214	80	90	98	104	80	80	150	152	174	214	218	230	160	80	90	98	136	138	155	80	90	98	104	169	218	230	140	162	164
											Stop Light SW	Sun Roof Control Relay	Personal Light [Sunroof SW]	Sun Roof Motor	Seat Belt Solenoid (Driver's)	Seat Belt Solenoid (Passenger's)	Turn Signal Flasher	Turbo Charging Pressure Sensor	VSV (for EGR System)	VSV (for Electrical Idle-Up System)	VSV (for Turbo Charging Pressure)	VSV (for T-VIS)	Water Motor	Water Temp. SW (for O/D System)	Water Temp. Sender	Water Temp. SW (for Fans Control)	Defogger Relay	Diode	Integration Relay	EFI Main Relay	Radiator Fan Relay No. 1	Power Main Relay																
											S10	S11	S12	S14	S15	S16	T2	T3	V1	V2	V4	V5	W1	W2	W3	W4		①			②		③															
①	30A	DEFOGGER																																														
	20A	WIPER																																														
	15A	GAUGE																																														
	7.5A	IGN																																														
	15A	ECU-B																																														
	10A	TURN																																														
	15A	CIG & RADIO																																														
	15A	TAIL																																														
	15A	ECU-IG																																														
	15A	STOP																																														
②	15A	HEAD LH																																														
	15A	HEAD RH																																														
	30A	RTR																																														
	15A	EFI																																														
	20A	DOME																																														
	15A	HAZ-HORN																																														
	30A	RDI FAN																																														
	30A	CDS FAN																																														
③	30A	POWER																																														
④	20A	FOG																																														
	10A	A/C																																														
	40A	HEATER																																														

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)
(4) : R/B No. 4 (See page 27) (6) : R/B No. 3 (See page 26) (7) : R/B No. 5 (See page 27)

-Memo-

-Memo-