


## CHARGING

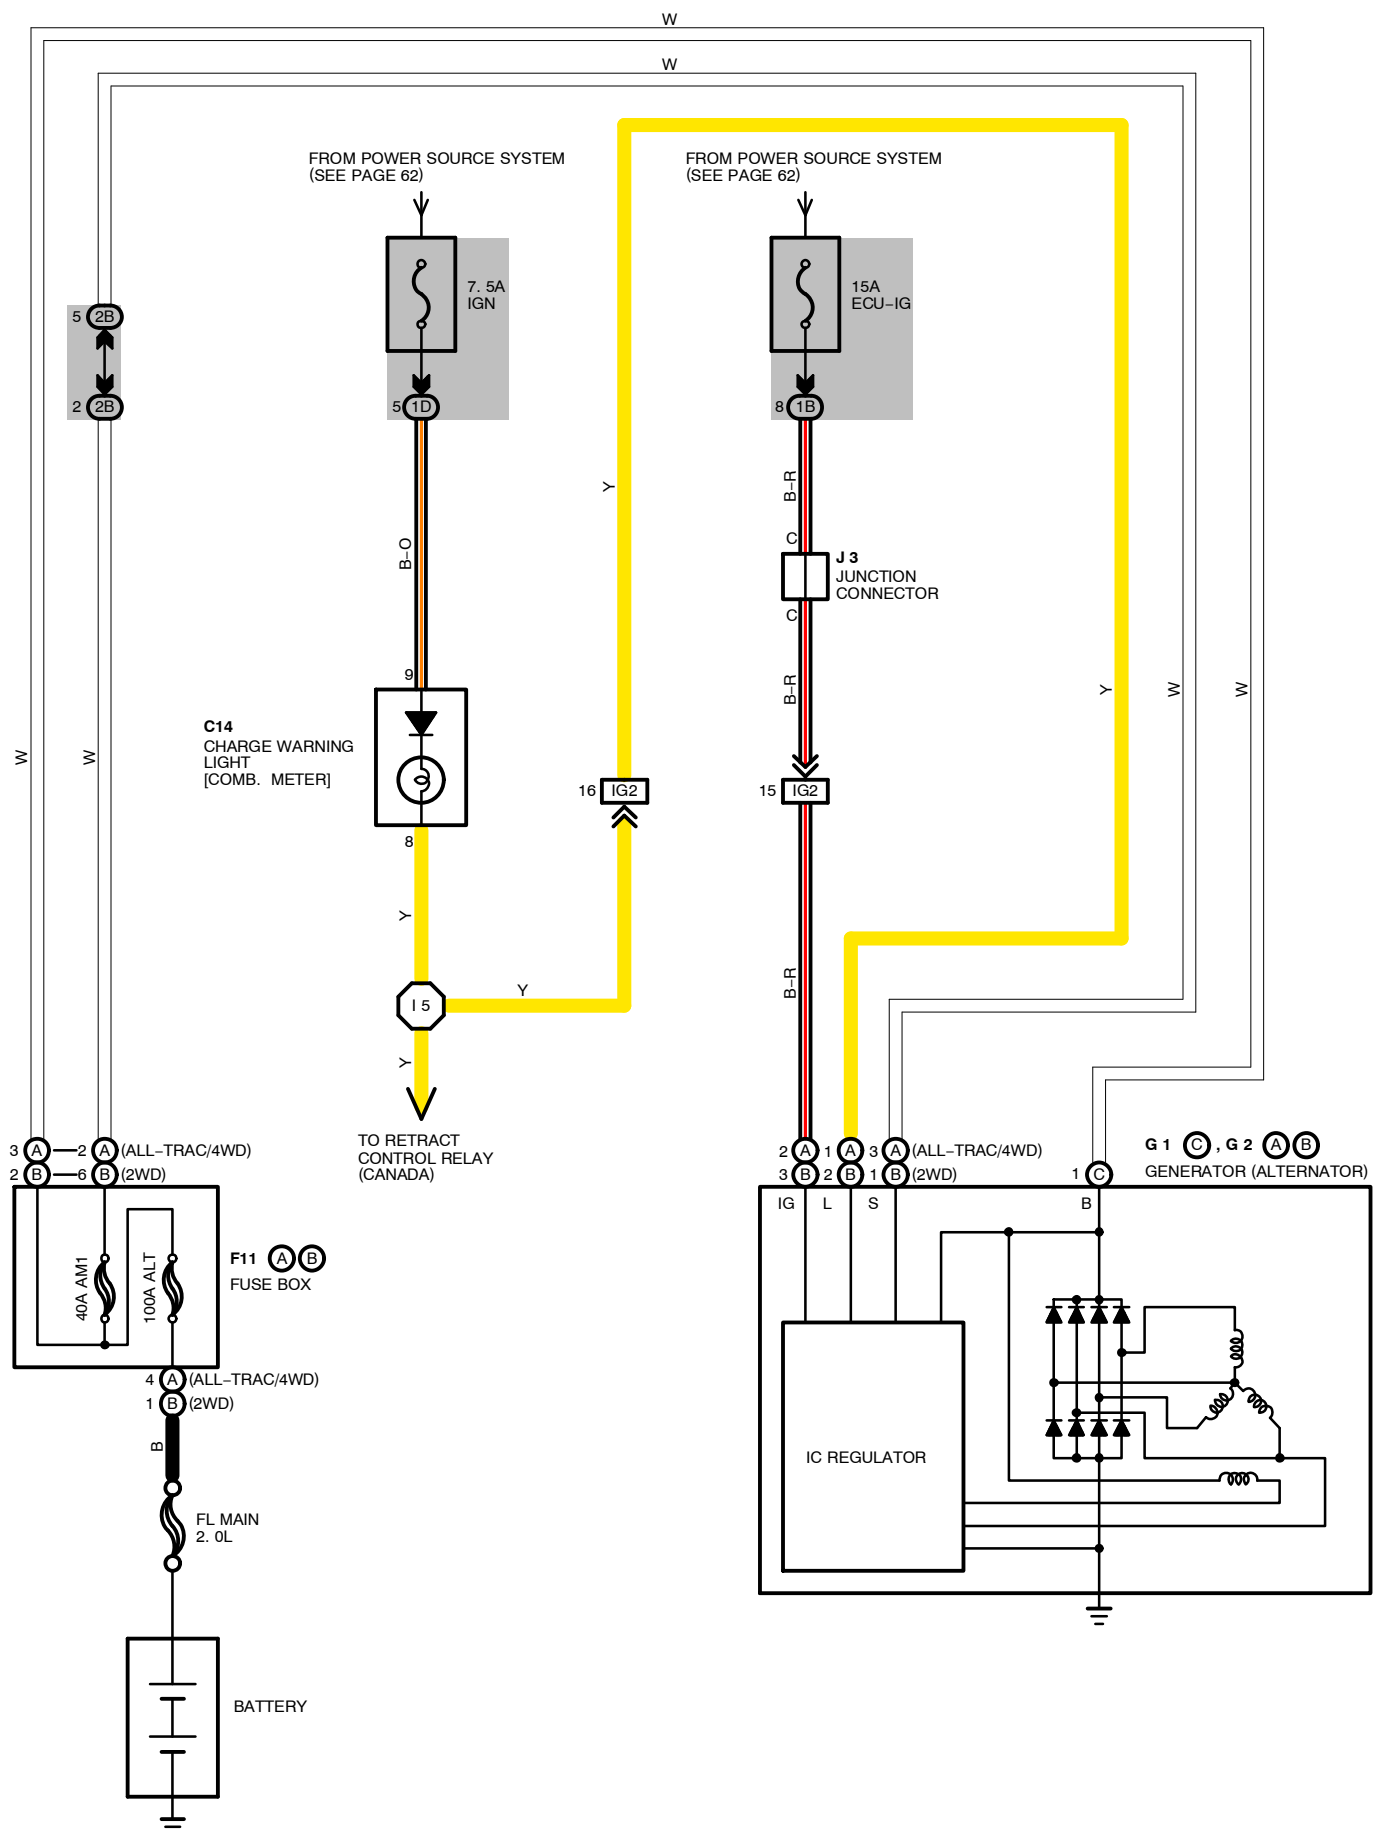

## SERVICE HINTS

### G 1(C), G 2(A) (B) GENERATOR (ALTERNATOR)

(C) 1-GROUND: 13.9–15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)  
13.5–14.3 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)

(A) 1, (B) 2 -GROUND : 0–4 VOLTS WITH IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

### ○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| C14  | 32       | G 1  | C        | G 2  | B        |
| F11  | A        |      |          | J 3  |          |
|      | B        | G 2  | A        |      |          |

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE                      | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|-------------------------------|------------------------------------------------------|
| 1B   | 20                            | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)            |
| 1D   |                               |                                                      |
| 2B   | 22 (2WD)<br>23 (ALL-TRAC/4WD) | ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)         |

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)                |
|------|----------|---------------------------------------------------------------------------|
| IG2  | 42       | ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE CONTROL MODULE) (ENGINE ECU)) |

### ○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I 5  | 44       | COWL WIRE                       |      |          |                                 |

