


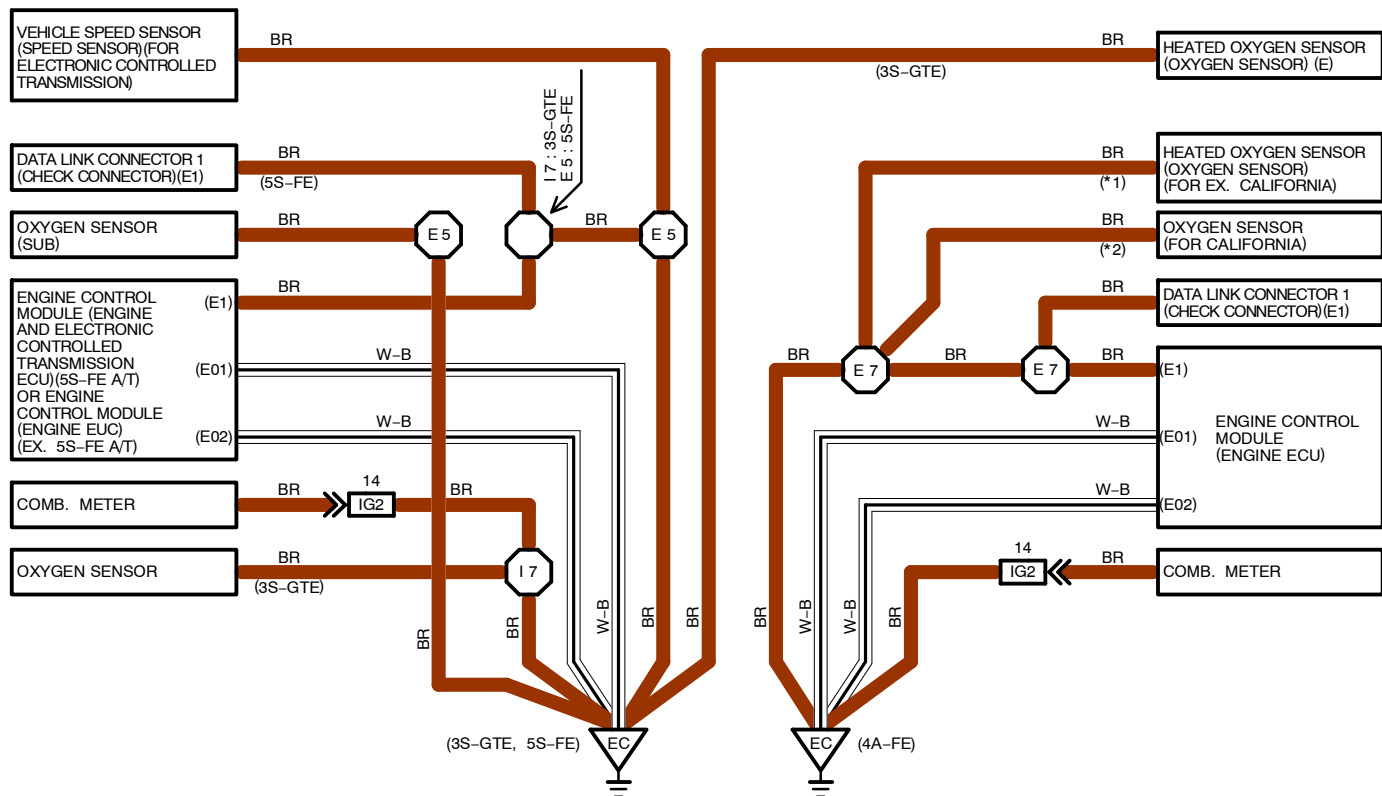
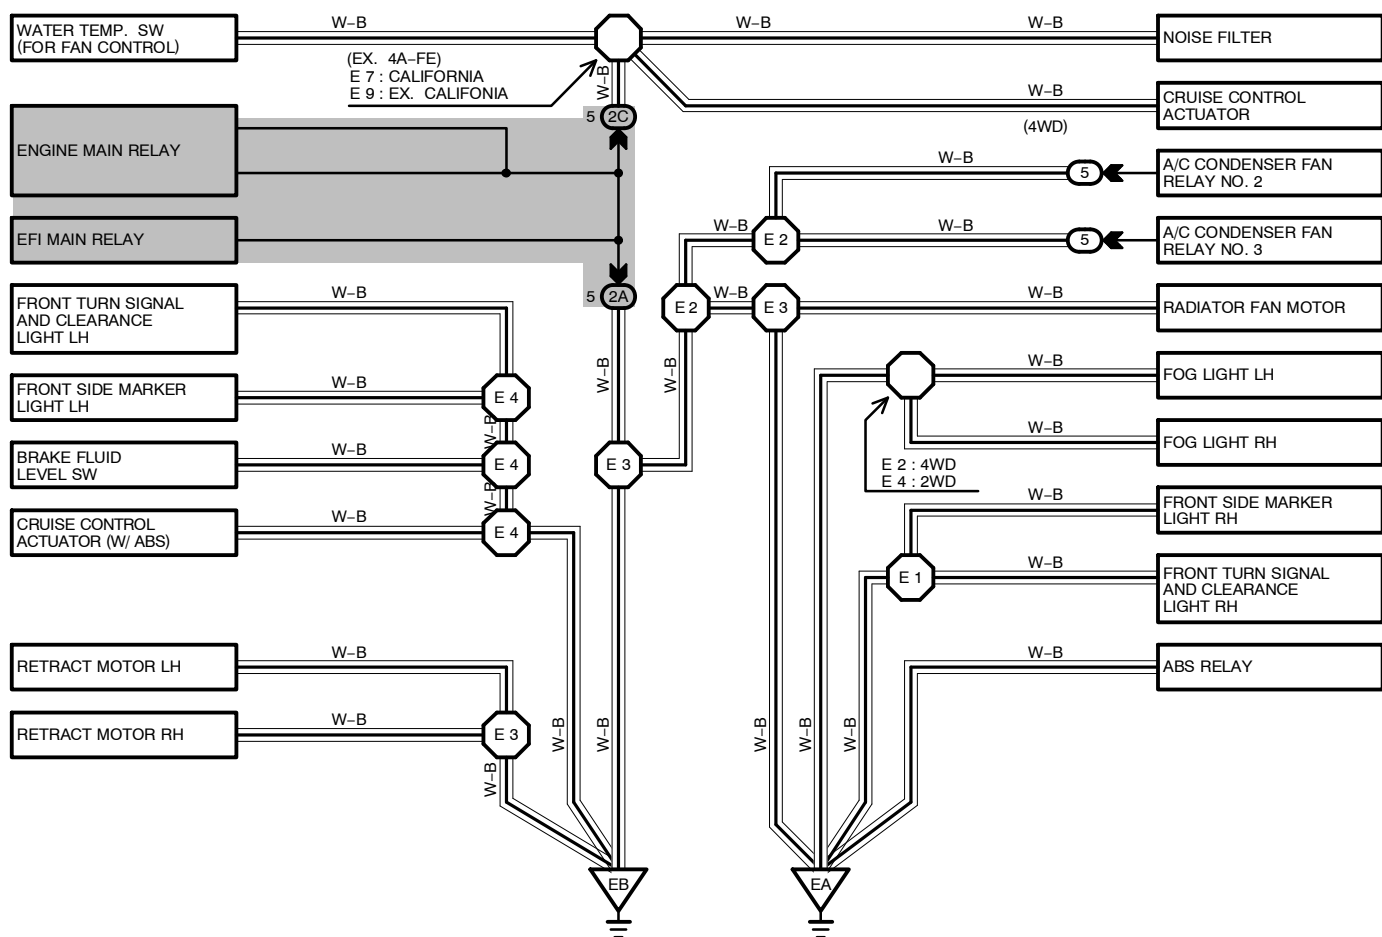
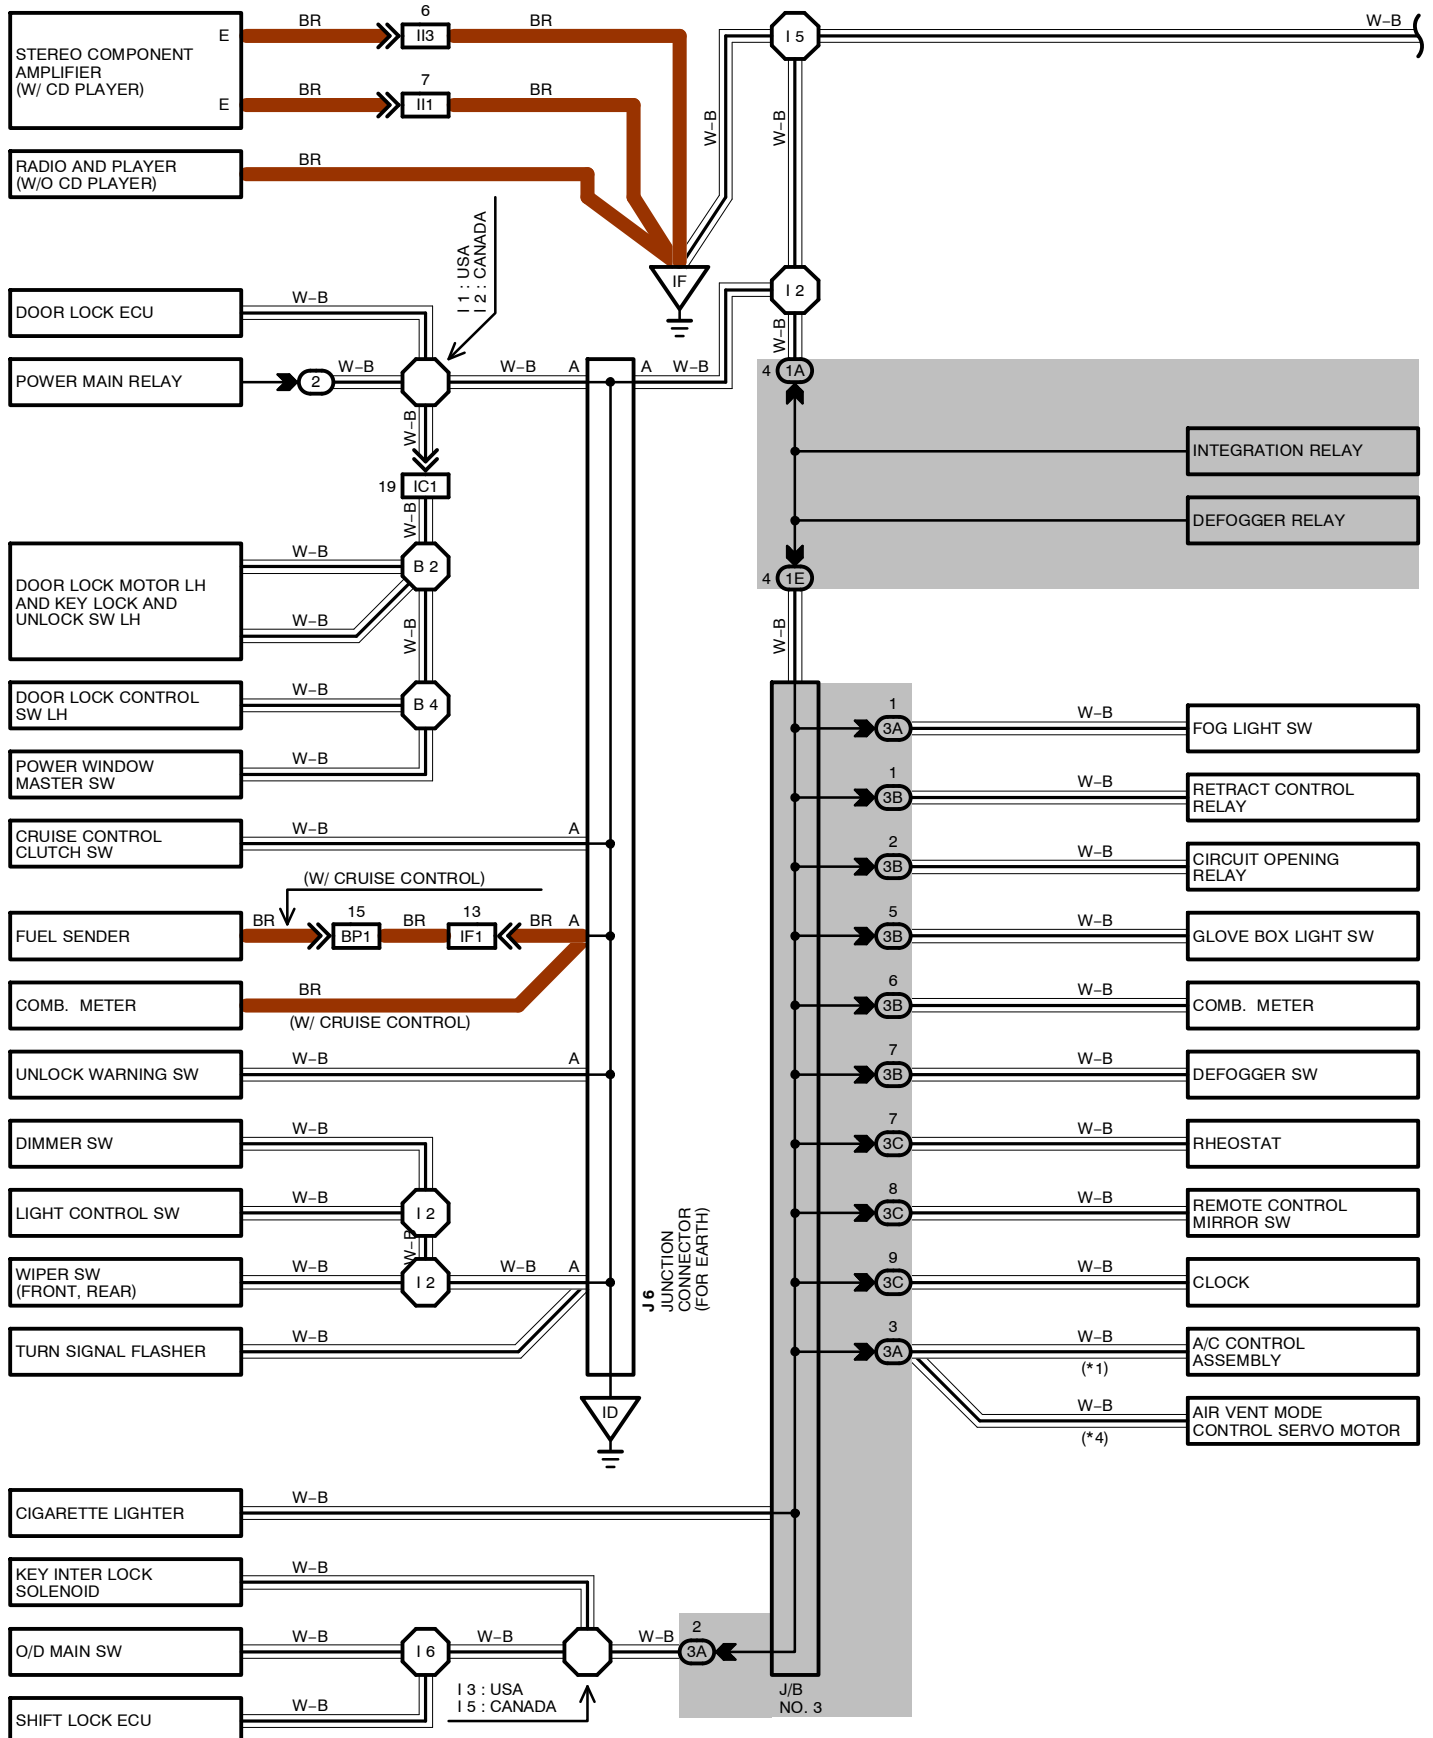


GROUND POINT

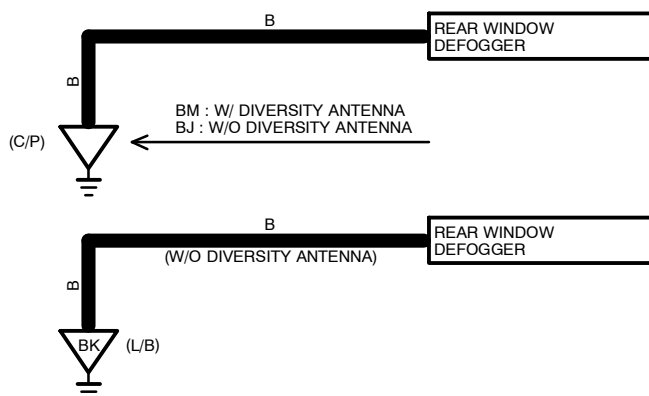

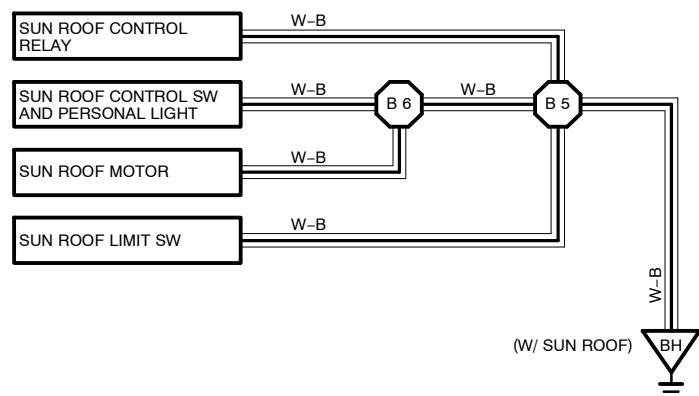



GROUND POINT

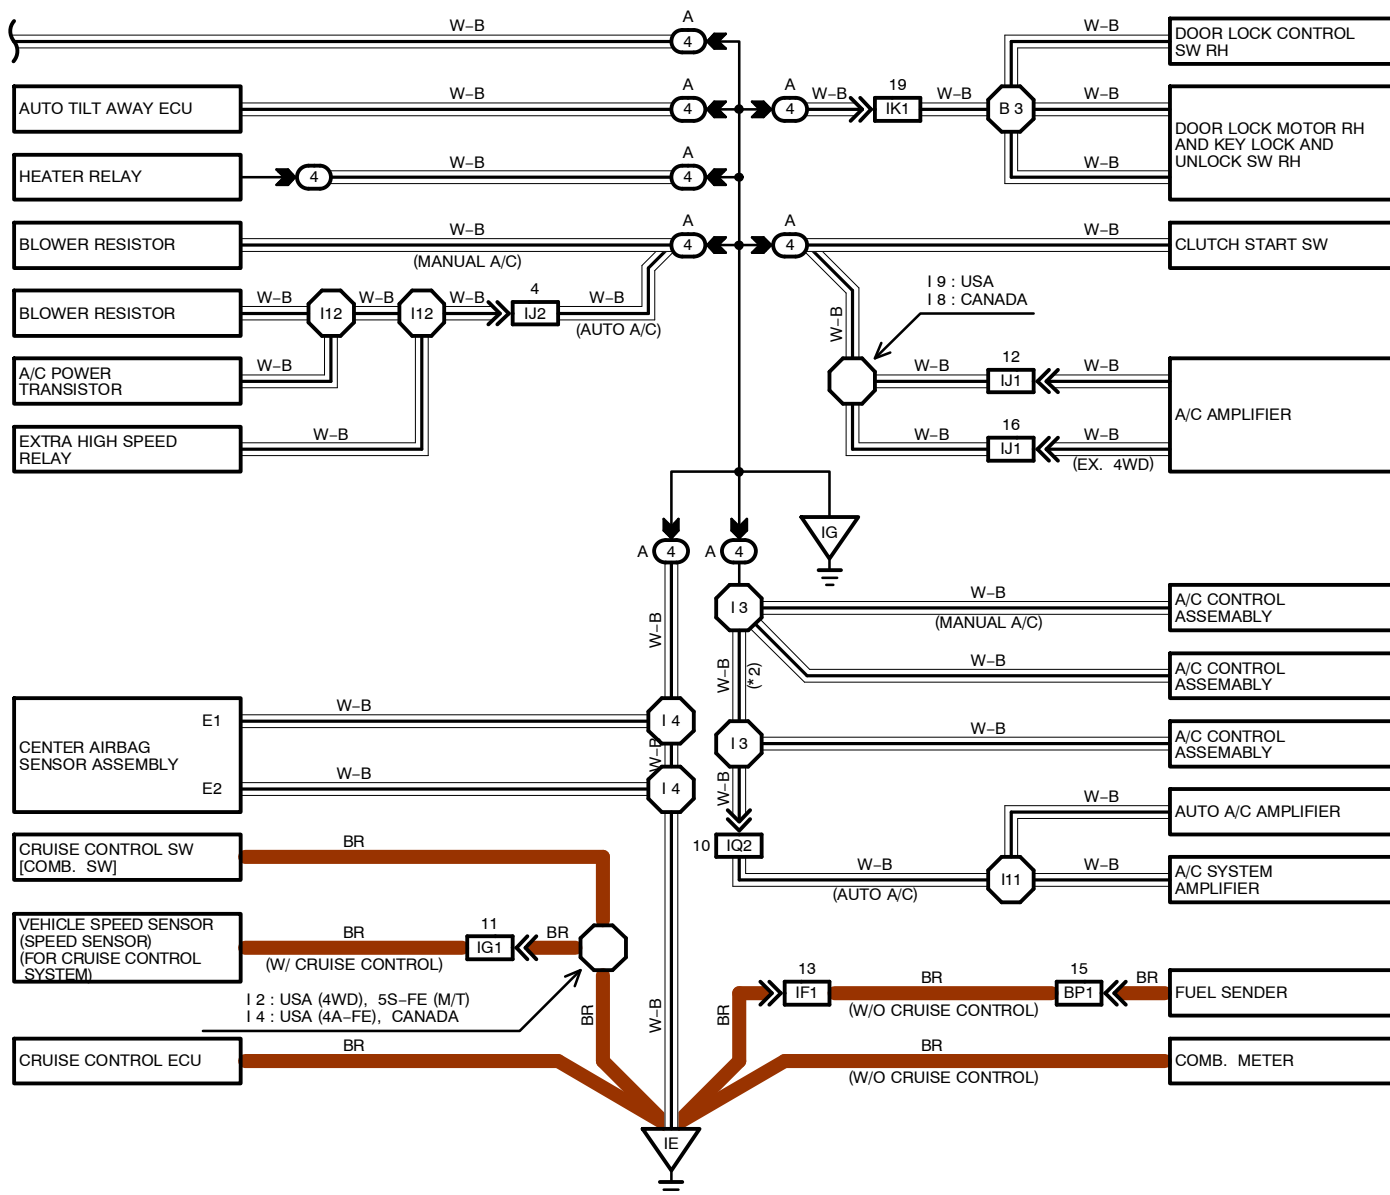

*1 : EX. AUTO A/C
*2 : AUTO A/C

*3 : PUSH TYPE OF BLOWER CONTROL SW
*4 : DIAL TYPE OF BLOWER CONTROL SW

*5 : ALL-TRAC/4WD
*6 : 2WD

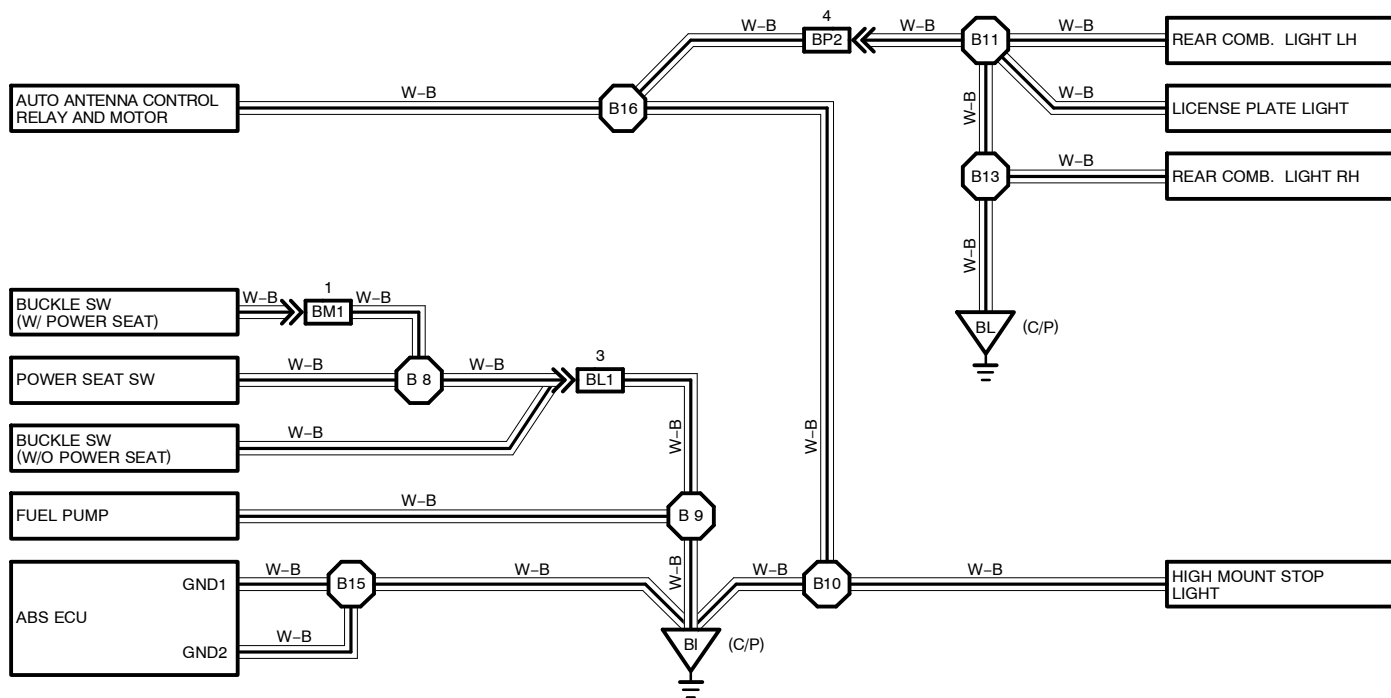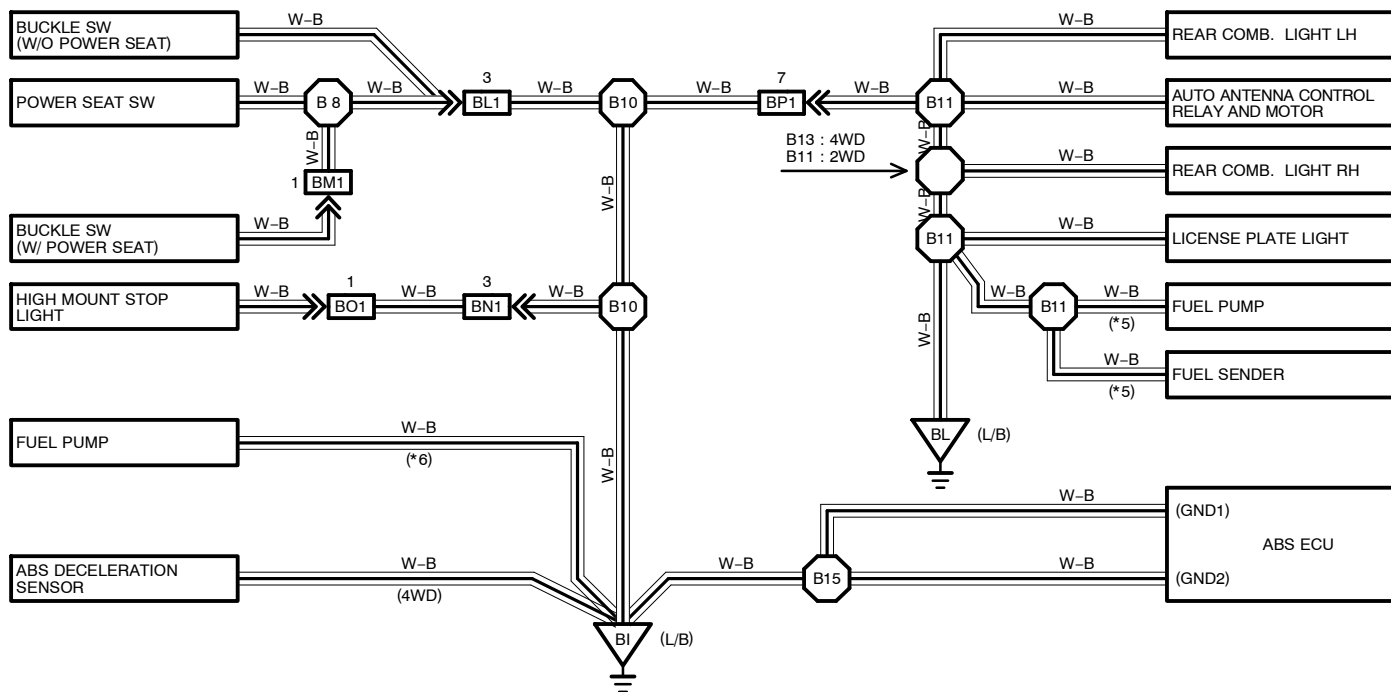

GROUND POINT

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 6	33				

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	R/B NO. 2 (LEFT KICK PANEL)
4	27	R/B NO. 4 (RIGHT KICK PANEL)
5	27	R/B NO. 5 (ENGINE COMPARTMENT FRONT RIGHT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
2A	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2C	22 (2WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3A	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	42	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	42	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	42	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE CONTROL MODULE (ENGINE ECU))
IG2		
II1	44	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II3	44	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF ALL-TRAC/4WD)
	44	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF 2WD)
IJ1	44	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ2		
IK1	44	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ2	44	COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)
BL1	46 (L/B)	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
	48 (C/P)	
BM1	46 (L/B)	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
	48 (C/P)	
BN1	46 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	46 (L/B)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	48 (C/P)	

: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
EA	36 (3S-GTE)	FRONT RIGHT FENDER
	38 (5S-FE)	
	40 (4A-FE)	
EB	36 (3S-GTE)	FRONT LEFT FENDER
	38 (5S-FE)	
	40 (4A-FE)	
EC	36 (3S-GTE)	INTAKE MANIFOLD
	38 (5S-FE)	
	40 (4A-FE)	
ID	42	LEFT KICK PANEL
IE	42	INSTRUMENT PANEL BRACE LH
IF	42	INSTRUMENT PANEL BRACE RH
IG	42	R/B NO. 4 SET BOLT
BH	46 (L/B)	ROOF LEFT
	48 (C/P)	
BI	46 (L/B)	UNDER THE LEFT CENTER PILLAR
	48 (C/P)	
BJ	48 (C/P)	RIGHT REAR PILLAR (C/P)
BK	46 (L/B)	BACK DOOR RIGHT (L/B)
BL	46 (L/B)	BACK PANEL CENTER
	48 (C/P)	
BM	48 (C/P)	LEFT REAR PILLAR (C/P)



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS			
E 1	36 (3S-GTE)	ENGINE ROOM MAIN WIRE	I 8	44	COWL WIRE			
	38 (5S-FE)		I 9					
	40 (4A-FE)		I11		A/C NO. 2 WIRE			
E 2	36 (4A-FE)		ENGINE ROOM MAIN WIRE	I12	44	A/C NO. 1 WIRE		
	38 (5S-FE)			B 2	46 (L/B)	FRONT DOOR LH WIRE		
	40 (4A-FE)				48 (C/P)			
E 3	36 (3S-GTE)			ENGINE ROOM MAIN WIRE	B 3	46 (L/B)	FRONT DOOR RH WIRE	
	38 (5S-FE)					48 (C/P)		
	40 (4A-FE)				B 4	46 (L/B)		
36 (3S-GTE)	48 (C/P)							
E 4	38 (5S-FE)				ENGINE ROOM MAIN WIRE	B 5	46 (L/B)	ROOF WIRE
	40 (4A-FE)						48 (C/P)	
	E 5	36 (3S-GTE)				B 6	46 (L/B)	
38 (5S-FE)		48 (C/P)						
40 (4A-FE)		B 8				46 (L/B)		
E 7	36 (3S-GTE)		ENGINE WIRE			48 (C/P)	FLOOR WIRE	
	38 (5S-FE)	B 9				46 (L/B)		
	40 (4A-FE)					48 (C/P)		
E 9	36 (3S-GTE)	ENGINE WIRE		B10		46 (L/B)		FLOOR WIRE
	38 (5S-FE)					48 (C/P)		
	40 (4A-FE)			B11		46 (L/B)		
I 1	44					COWL WIRE		
I 2				B13	46 (L/B)	FLOOR WIRE		
I 3					48 (C/P)			
I 4				B15	46 (L/B)			
I 5					48 (C/P)			
I 6				B16	46 (L/B)			
I 7	44		ENGINE WIRE		48 (C/P)			

J 6

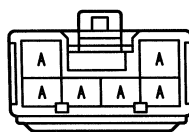

(HINT:SEE PAGE 7)