


REAR WINDOW DEFOGGER

*1 : W/ DIVERSITY ANTENNA
*2 : W/O DIVERSITY ANTENNA

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

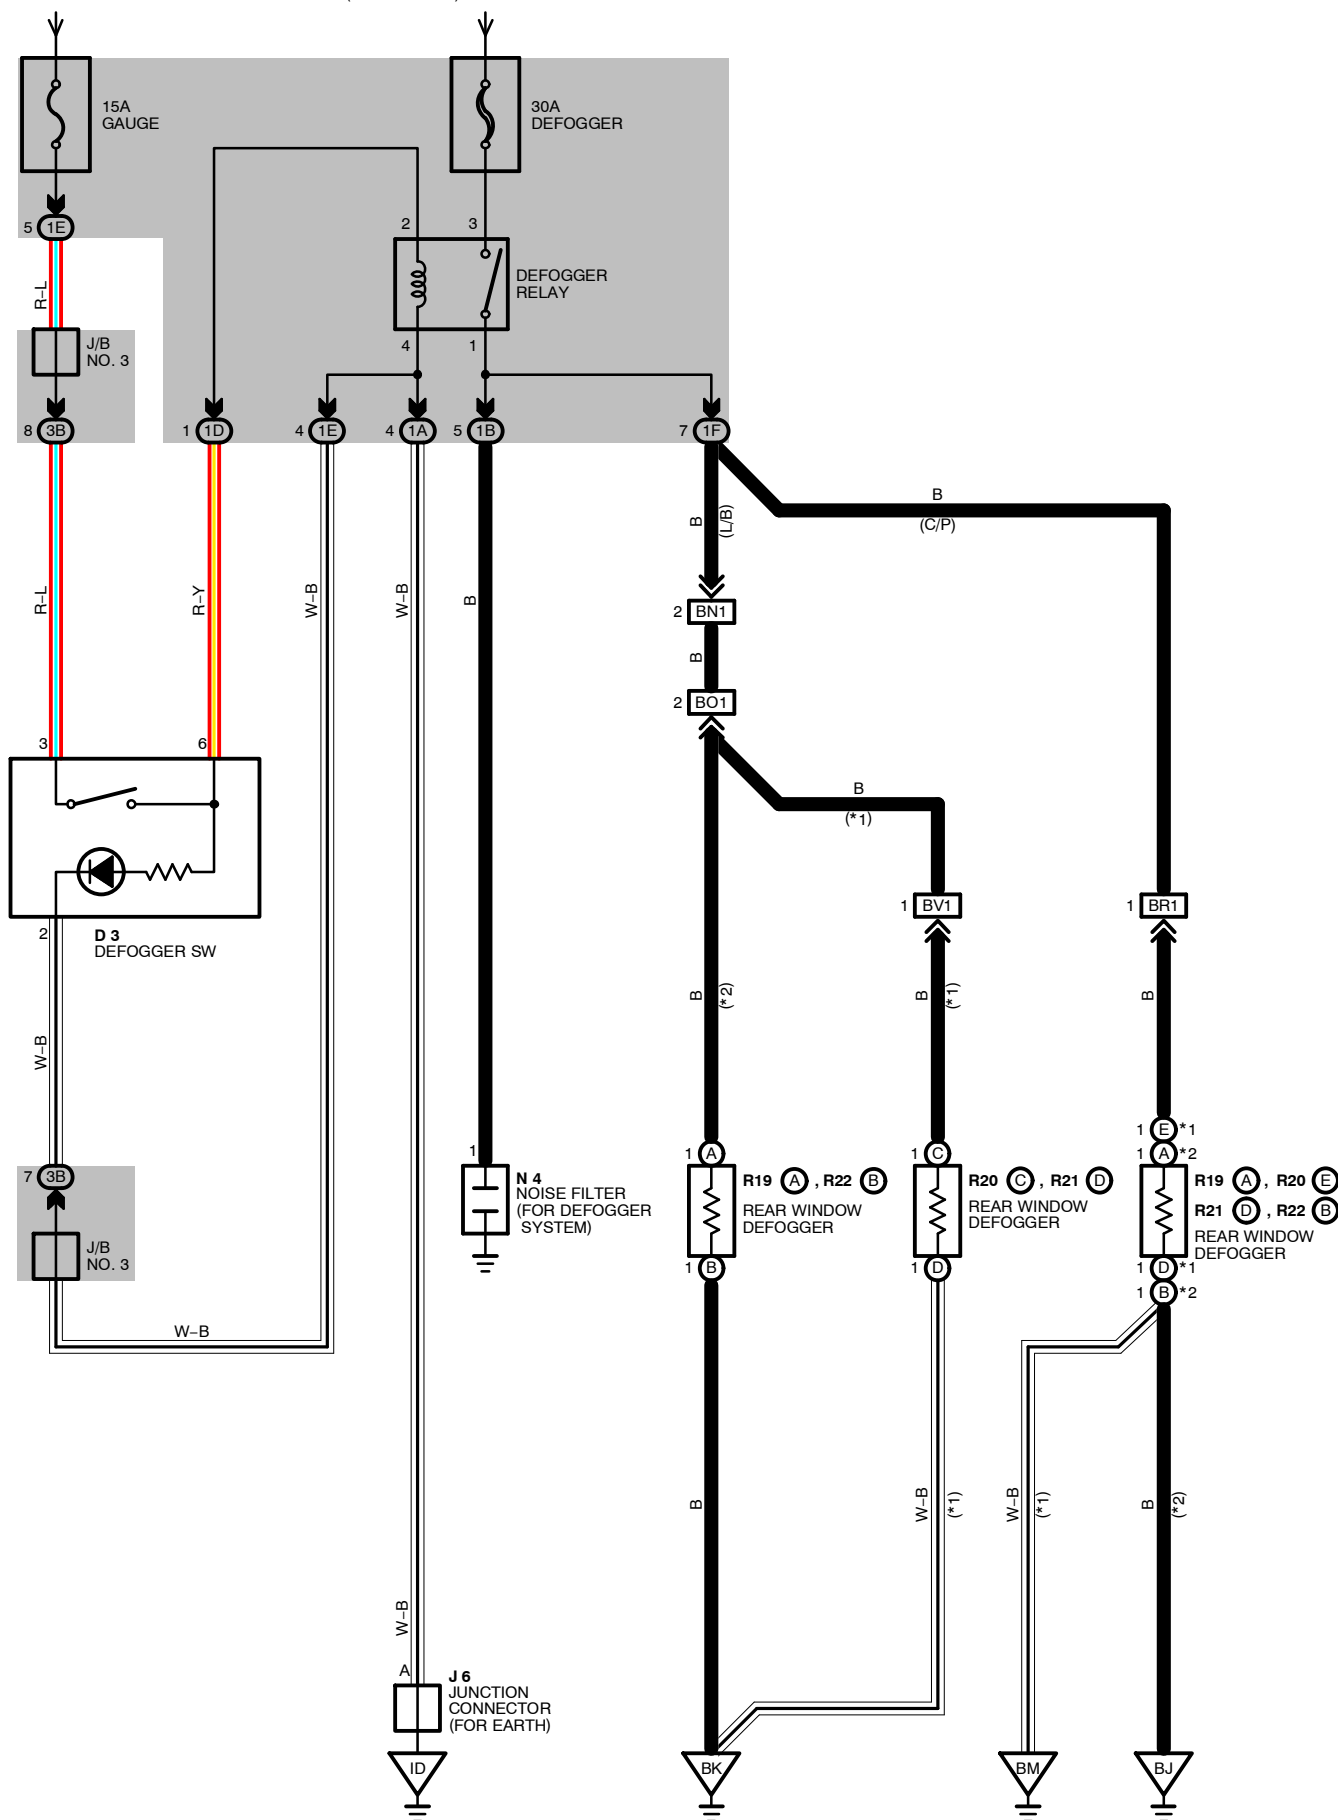

SERVICE HINTS

DEFOGGER RELAY

1-3 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

D3 DEFOGGER SW

3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 3	32	R19	A 34 (L/B), 35 (C/P)	R21	D 35 (C/P)
J 6	33	R20	C 34 (L/B)	R22	B 34 (L/B), 35 (C/P)
N 4	33	R20	E 35 (C/P)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	20	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BN1	46 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	46 (L/B)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BR1	48 (C/P)	FLOOR WIRE AND REAR WINDOW NO. 2 WIRE (LEFT REAR PILLAR)
BV1	48 (C/P)	FLOOR WIRE AND LUGGAGE ROOM NO. 4 WIRE


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	42	LEFT KICK PANEL
BJ	48 (C/P)	RIGHT REAR PILLAR (C/P)
BK	46 (L/B)	BACK DOOR RIGHT (L/B)
BM	48 (C/P)	LEFT REAR PILLAR (C/P)

D 3 BLACK



J 6

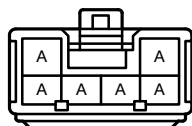

(HINT : SEE PAGE 7)

N 4



R19 (A), R20 (E) BLACK



R20 (C)



R21 (D), R22 (B) BLACK

