



## RELAY LOCATIONS

### [Engine Compartment]

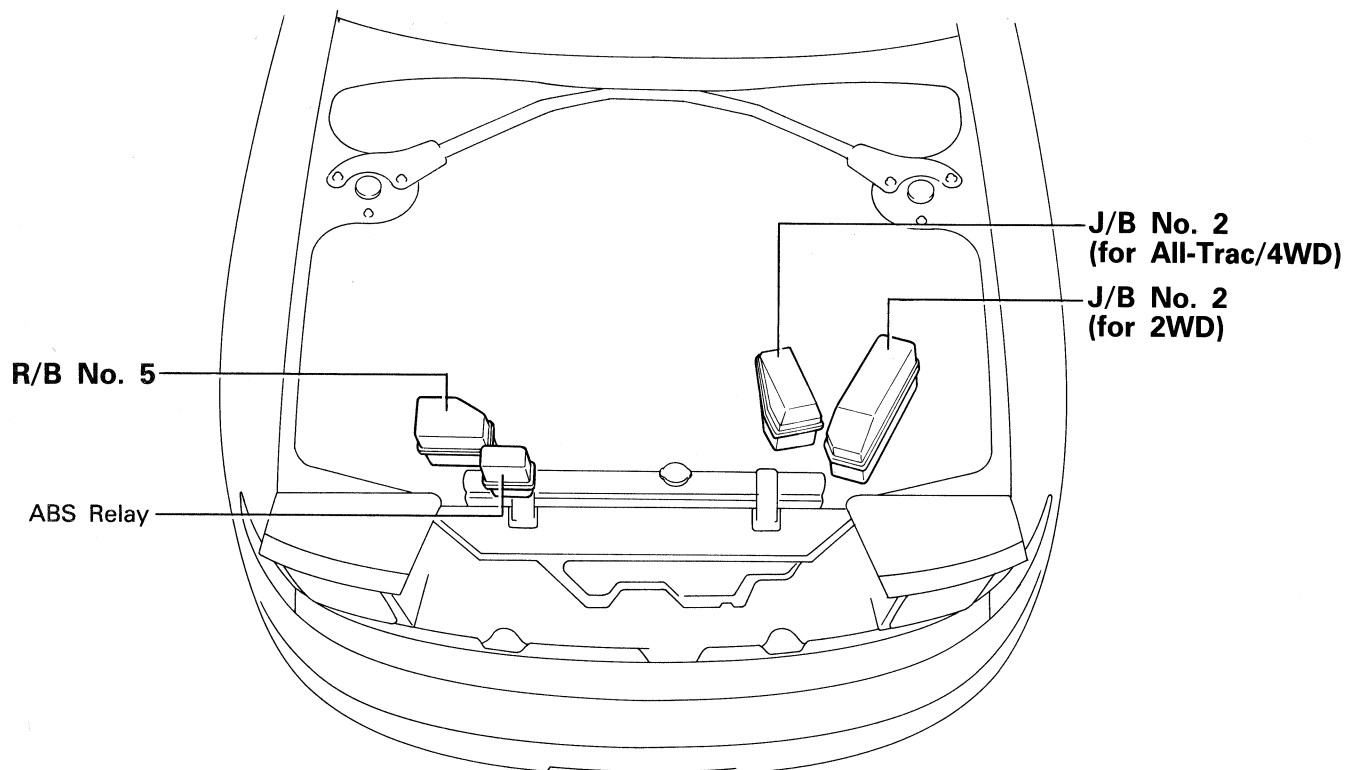


### [Instrument Panel]

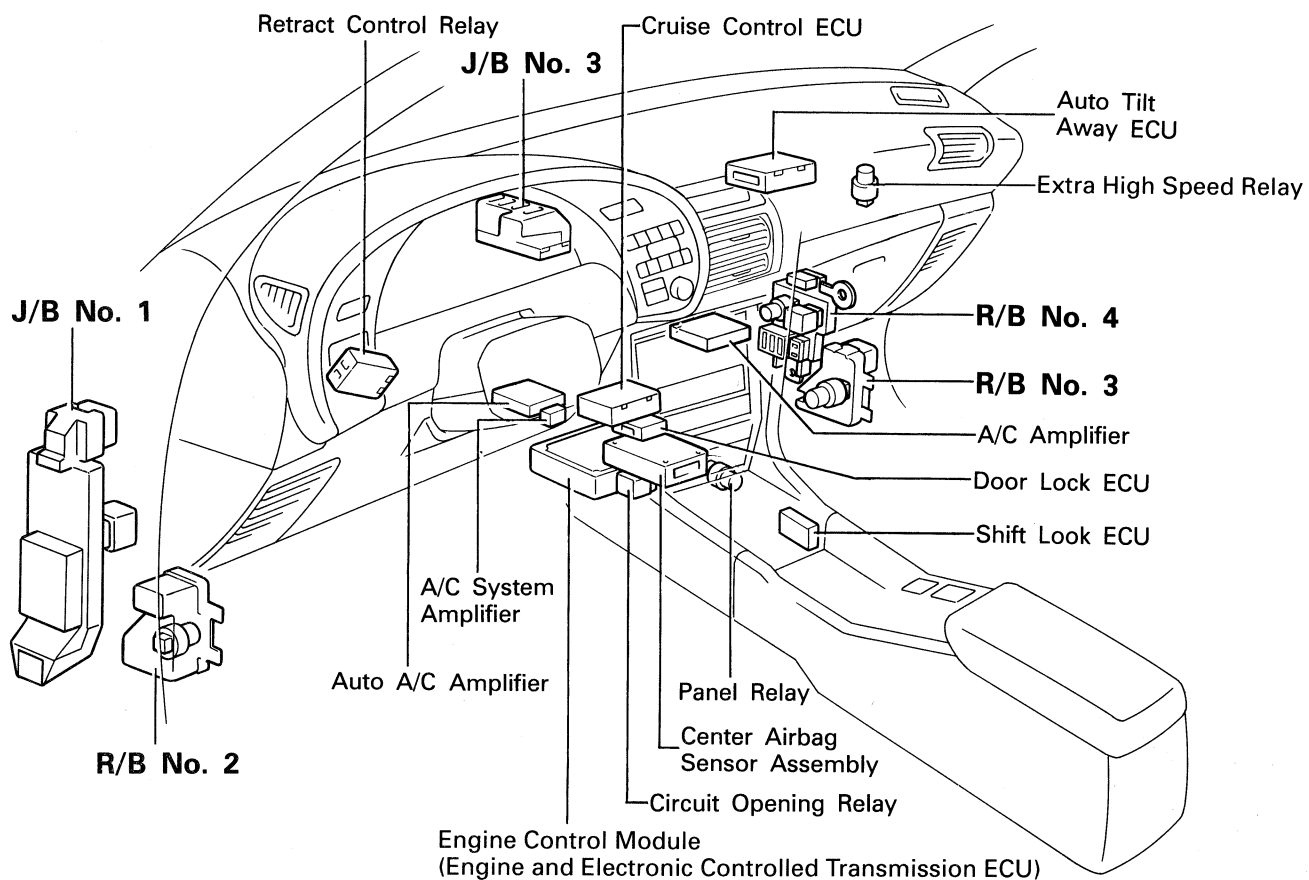


**[Body]**

**[Lift Back]**

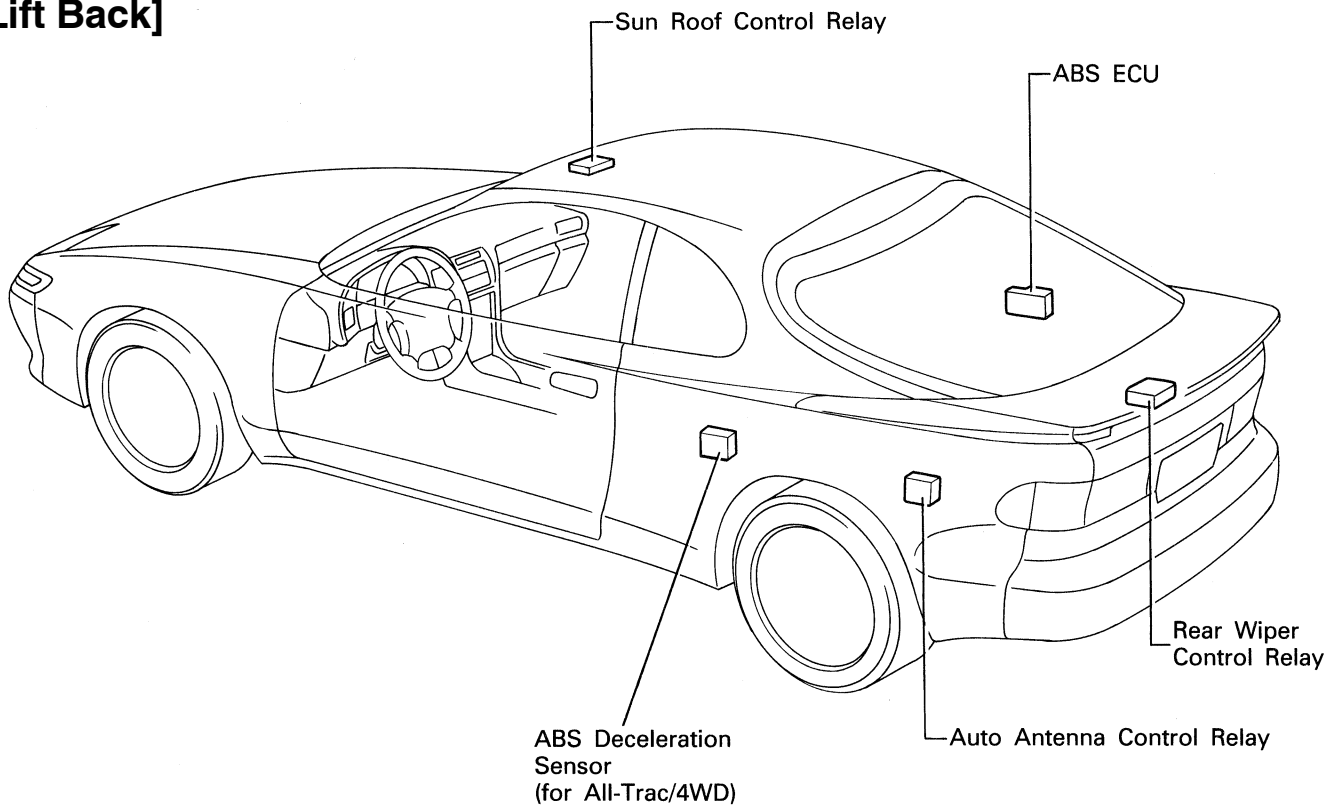

**[Body]**


**[Coupe]**

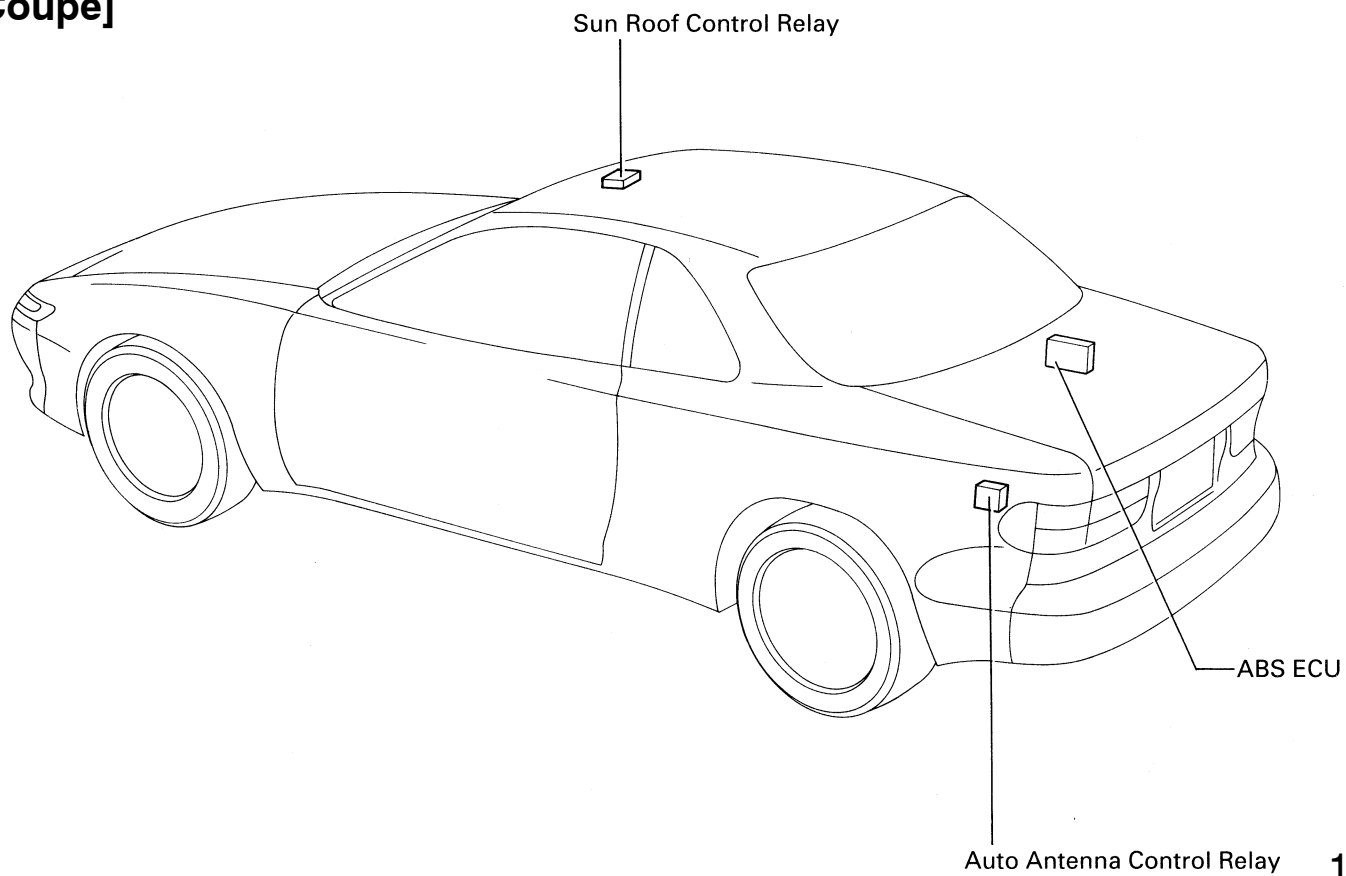


Auto Antenna Control Relay

# RELAY LOCATIONS

○ : J/B No. 1      **Left Kick Panel**      (See Page 18)

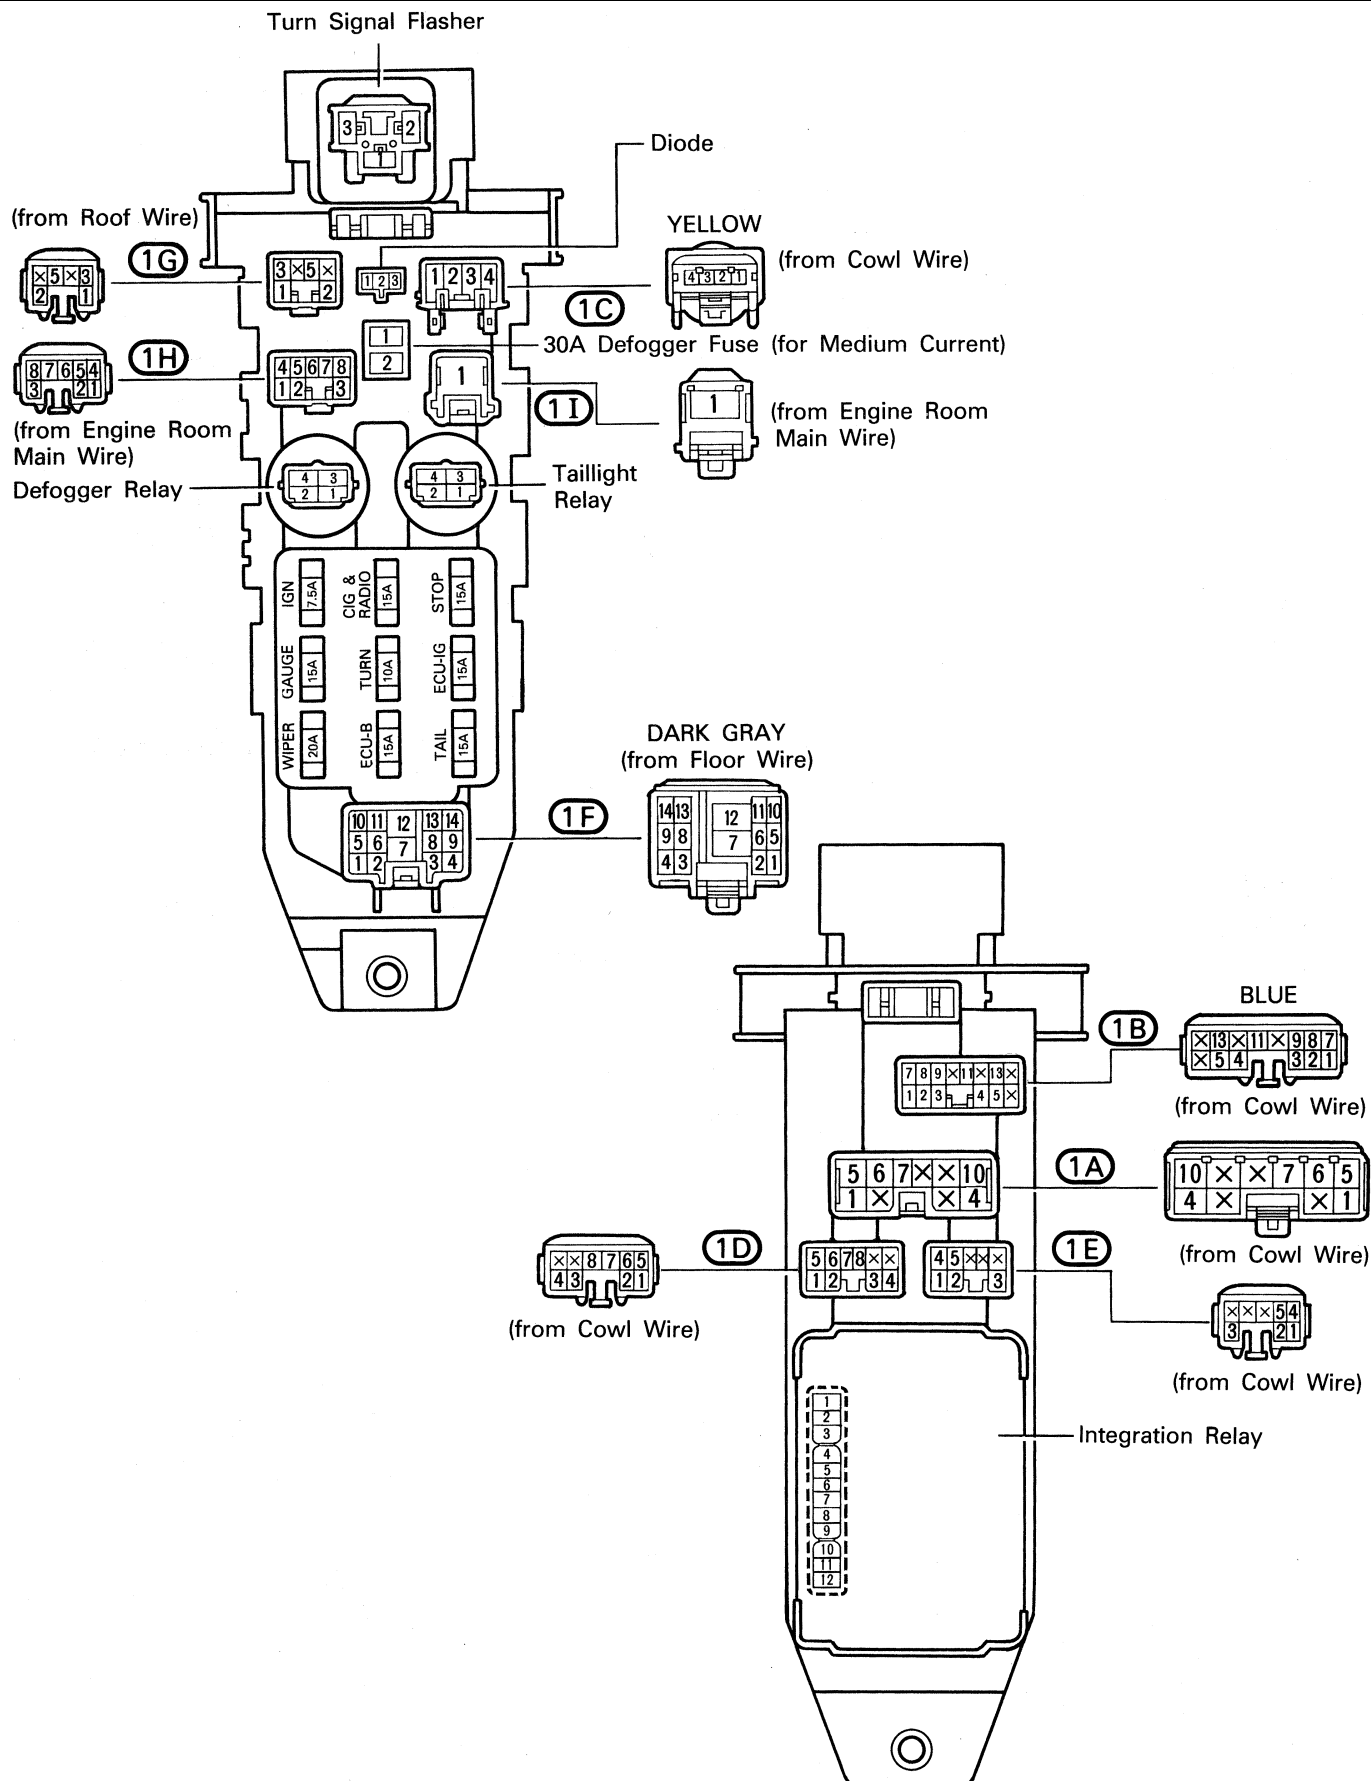

# [ J/B No. 1 Inner Circuit]

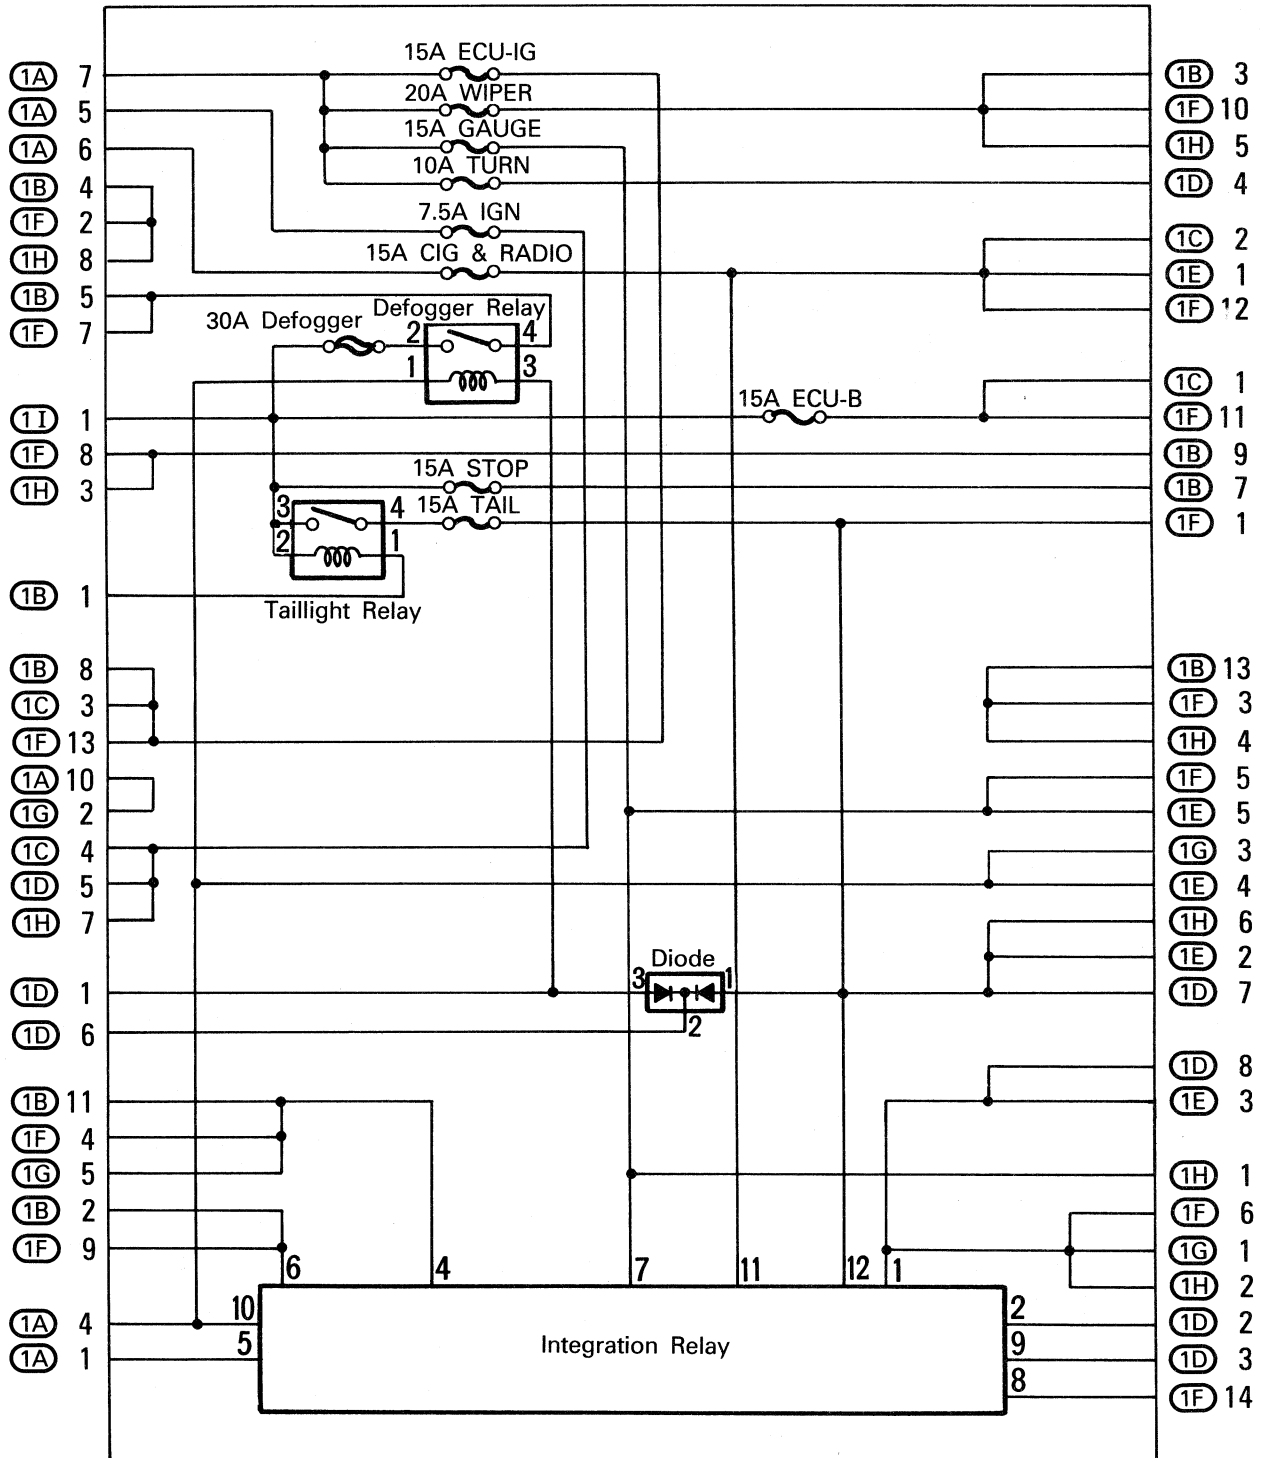



# RELAY LOCATIONS

○ : J/B No. 2



Near the Battery

(See Page 18)

[2WD]

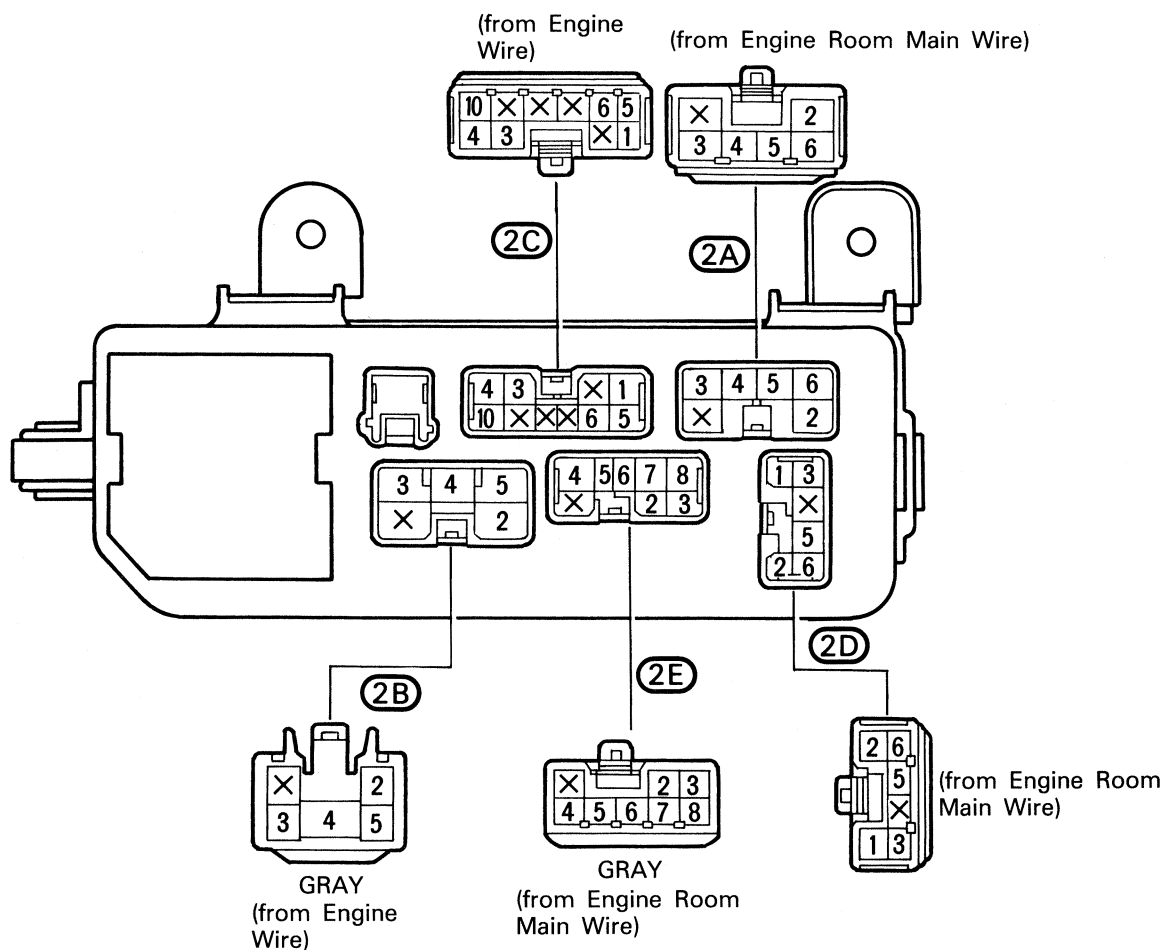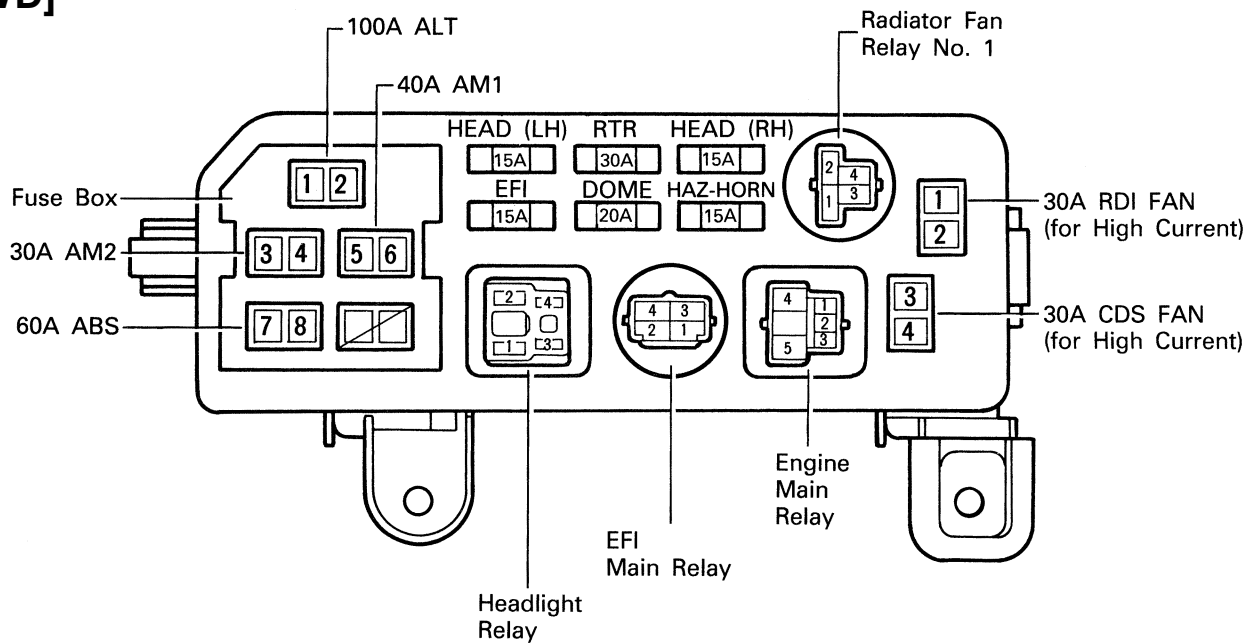



[All-Trac/4WD]

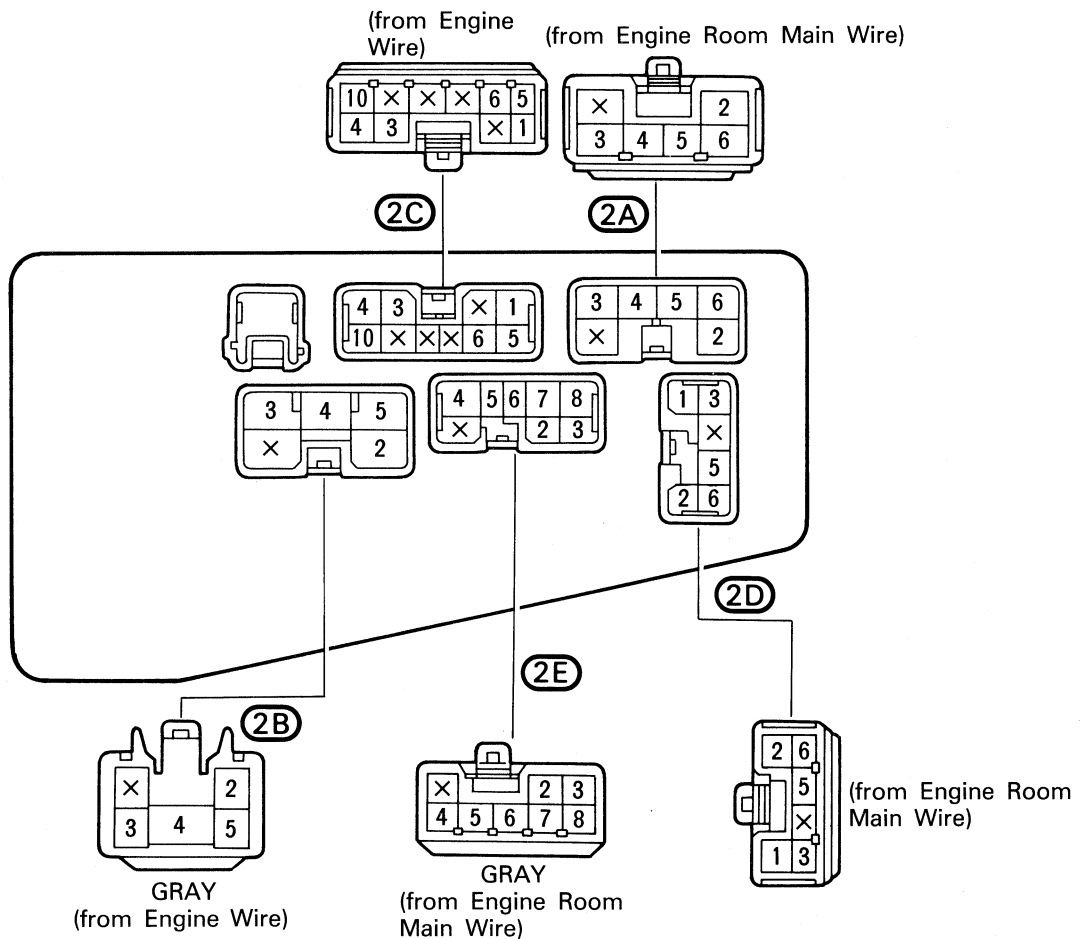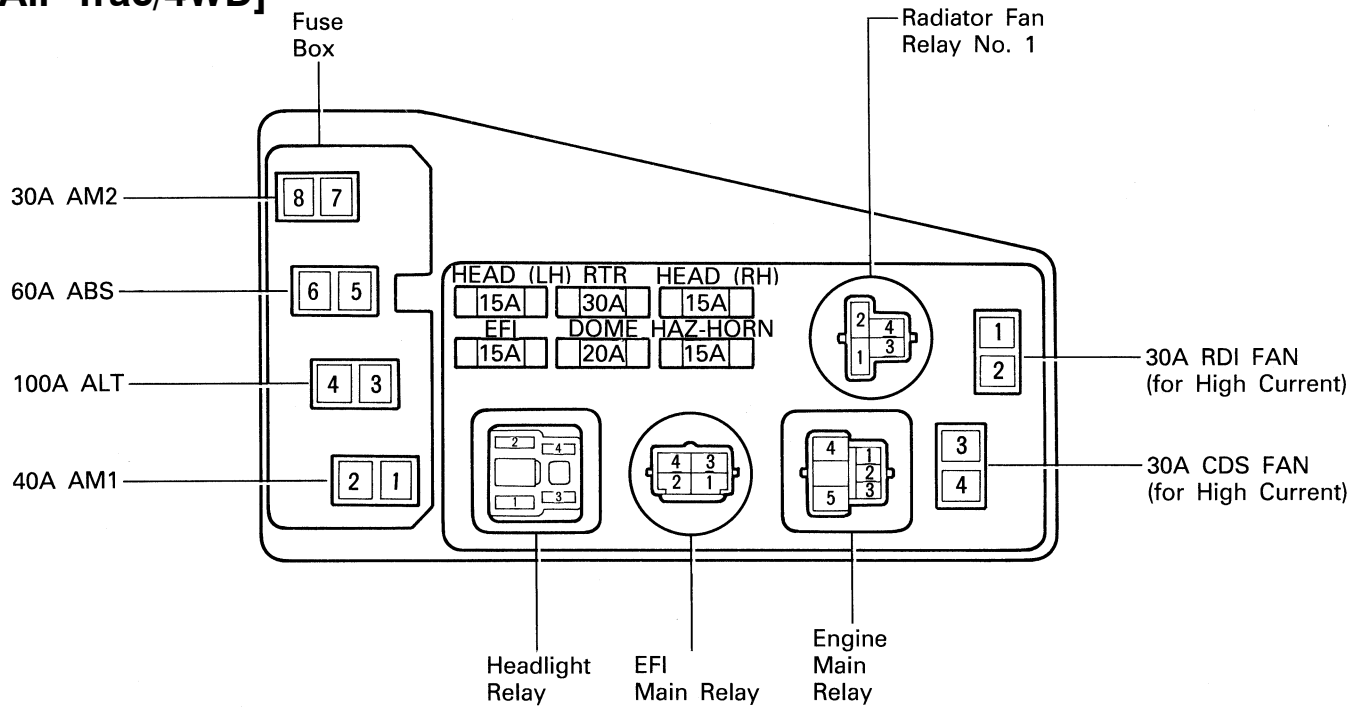


# RELAY LOCATIONS

## [J/B No. 2 Inner Circuit]

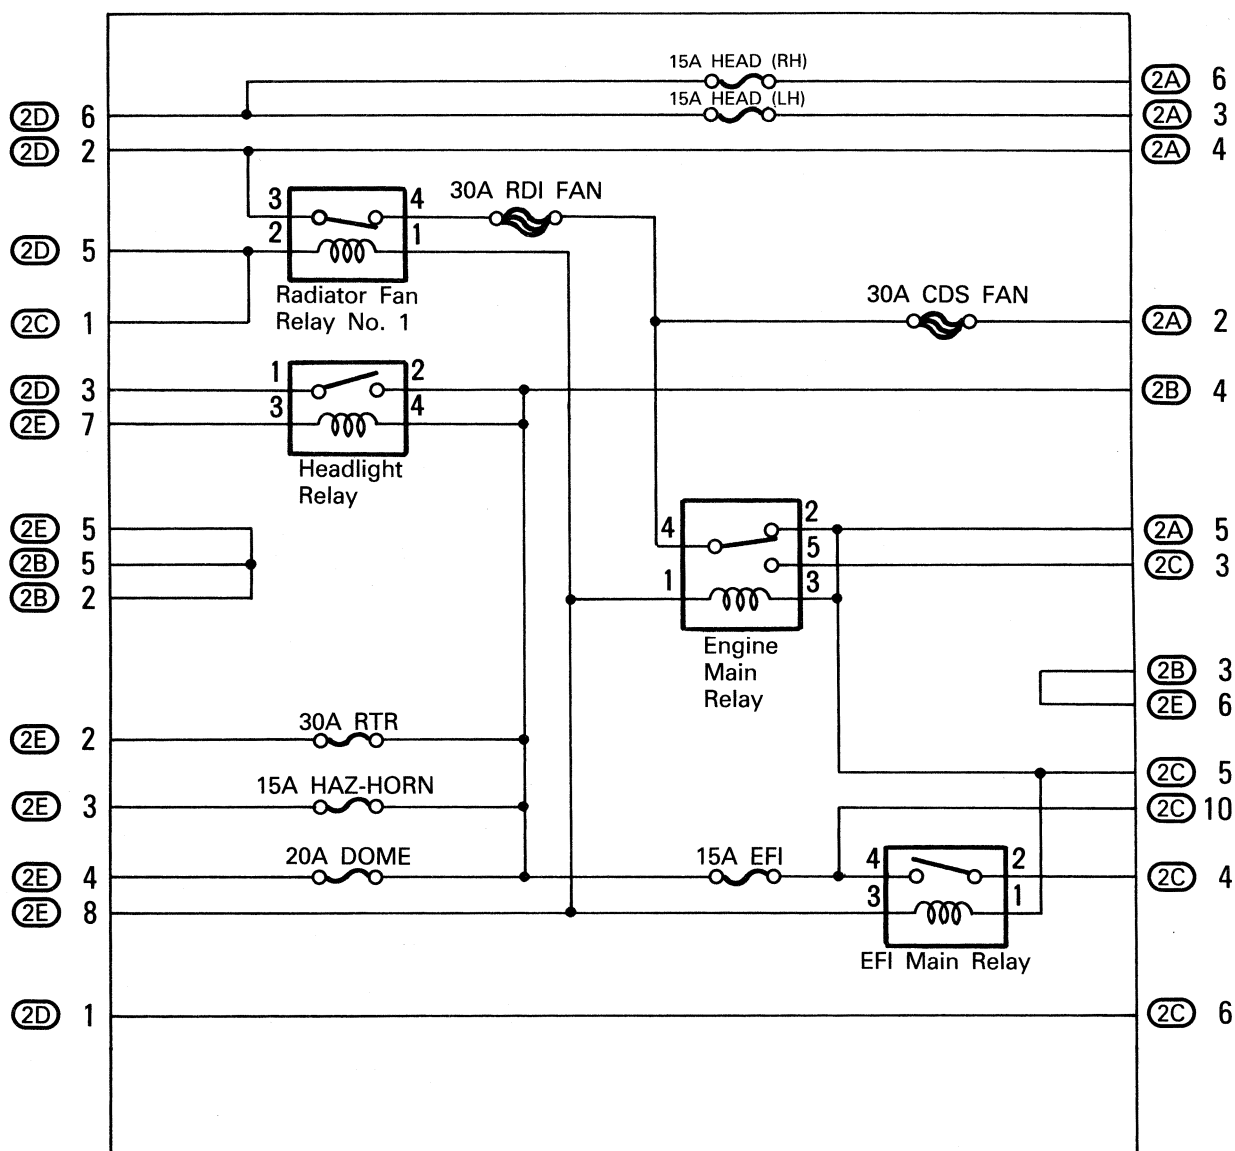

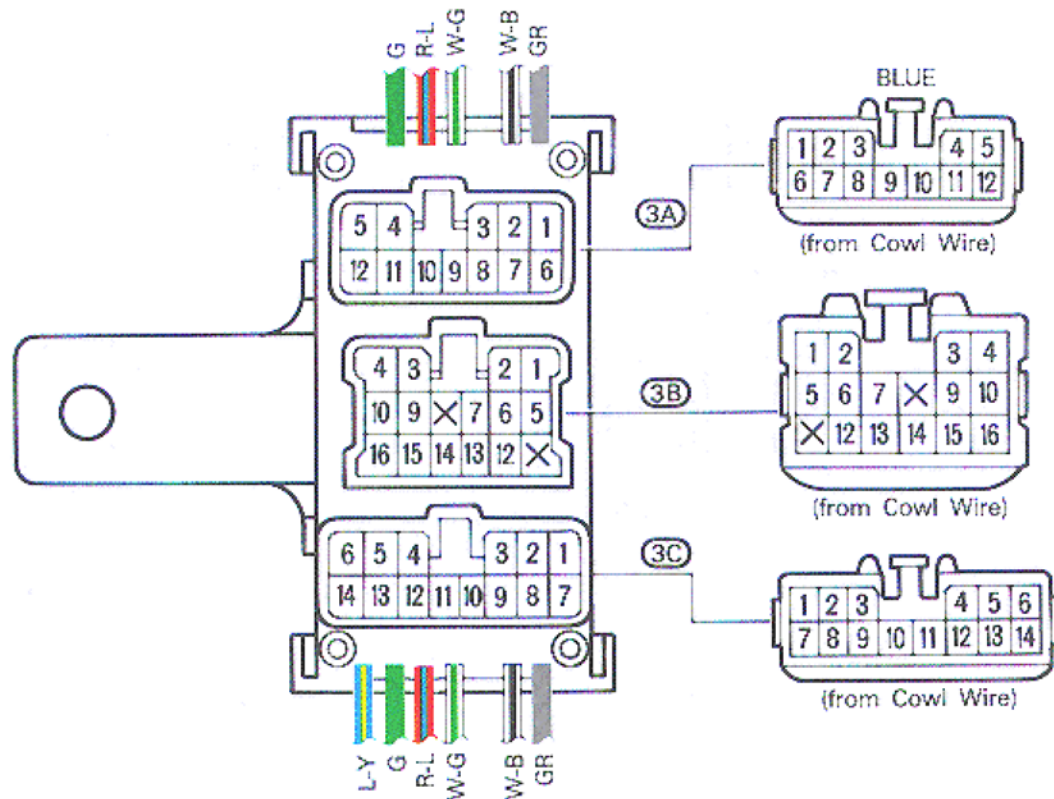


### [J/B No. 3 Inner Circuit]

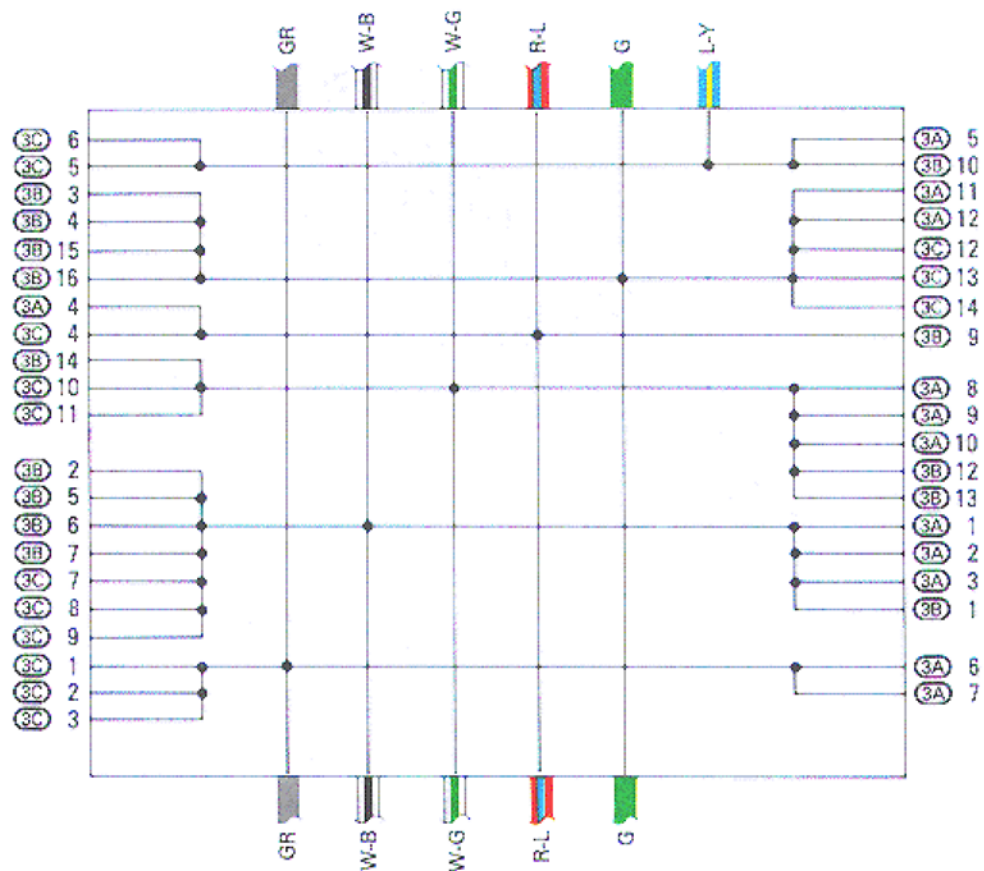


RELAY LOCATIONS

|               |                               |
|---------------|-------------------------------|
| ② : R/B No. 2 | Left Kick Panel (See Page 18) |
|---------------|-------------------------------|

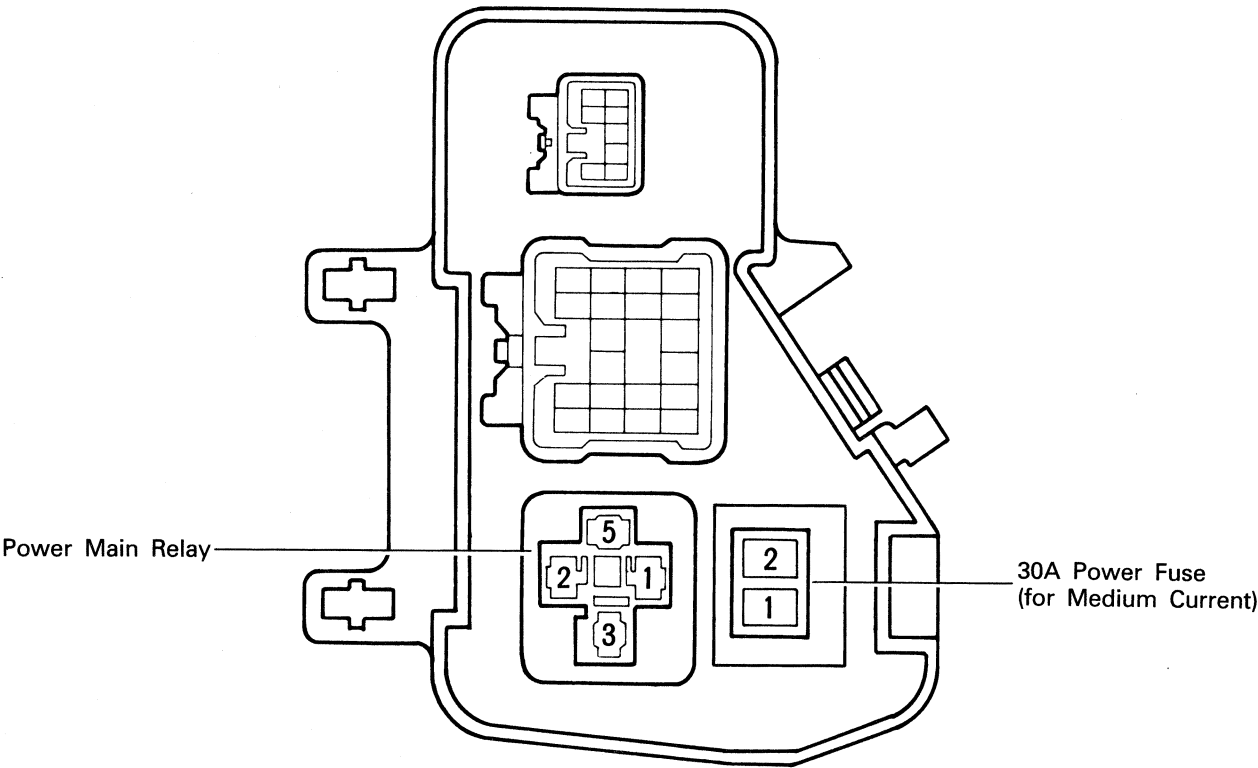


|               |                                |
|---------------|--------------------------------|
| ③ : R/B No. 3 | Right Kick Panel (See Page 18) |
|---------------|--------------------------------|

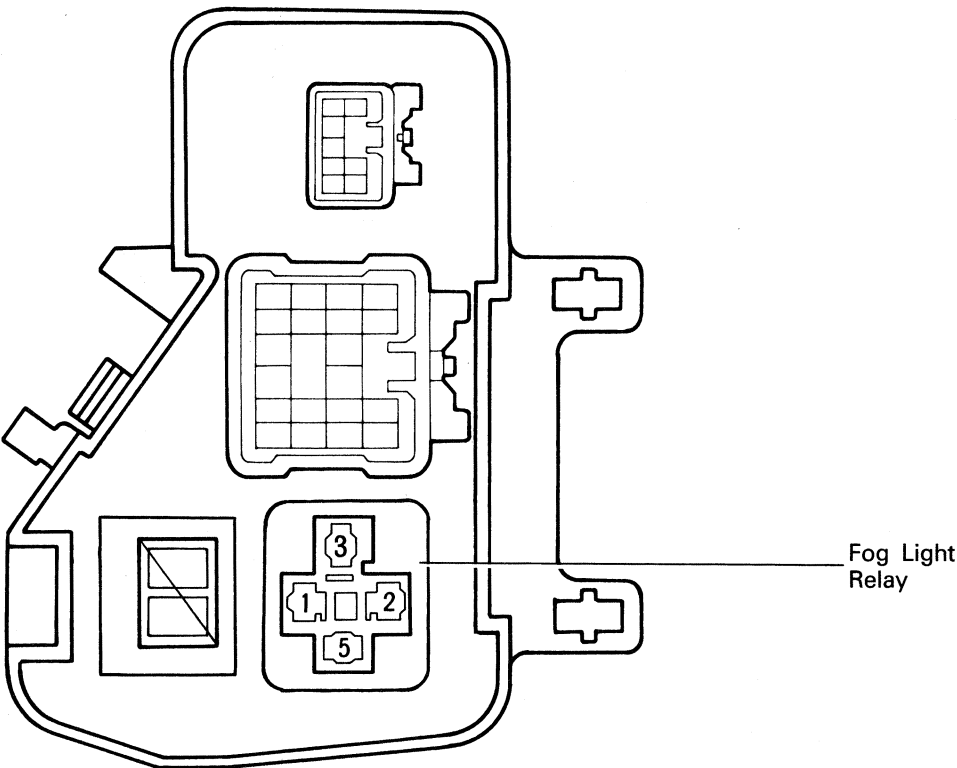

④ : R/B No. 4

## Right Kick Panel

(See Page 18)

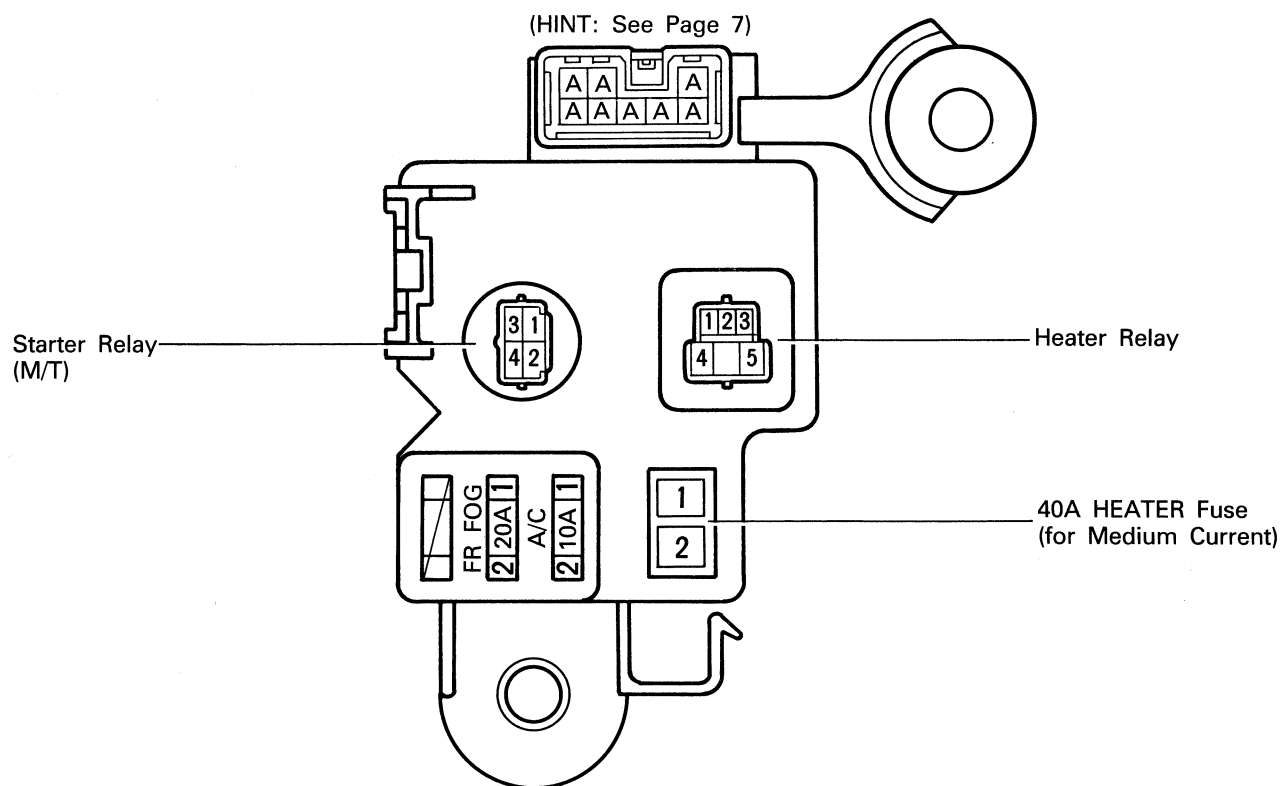

⑤ : R/B No. 5

## Engine Compartment Front Right

(See Page 18)

