


HEADLIGHT AND FOG LIGHT (FOR CANADA)

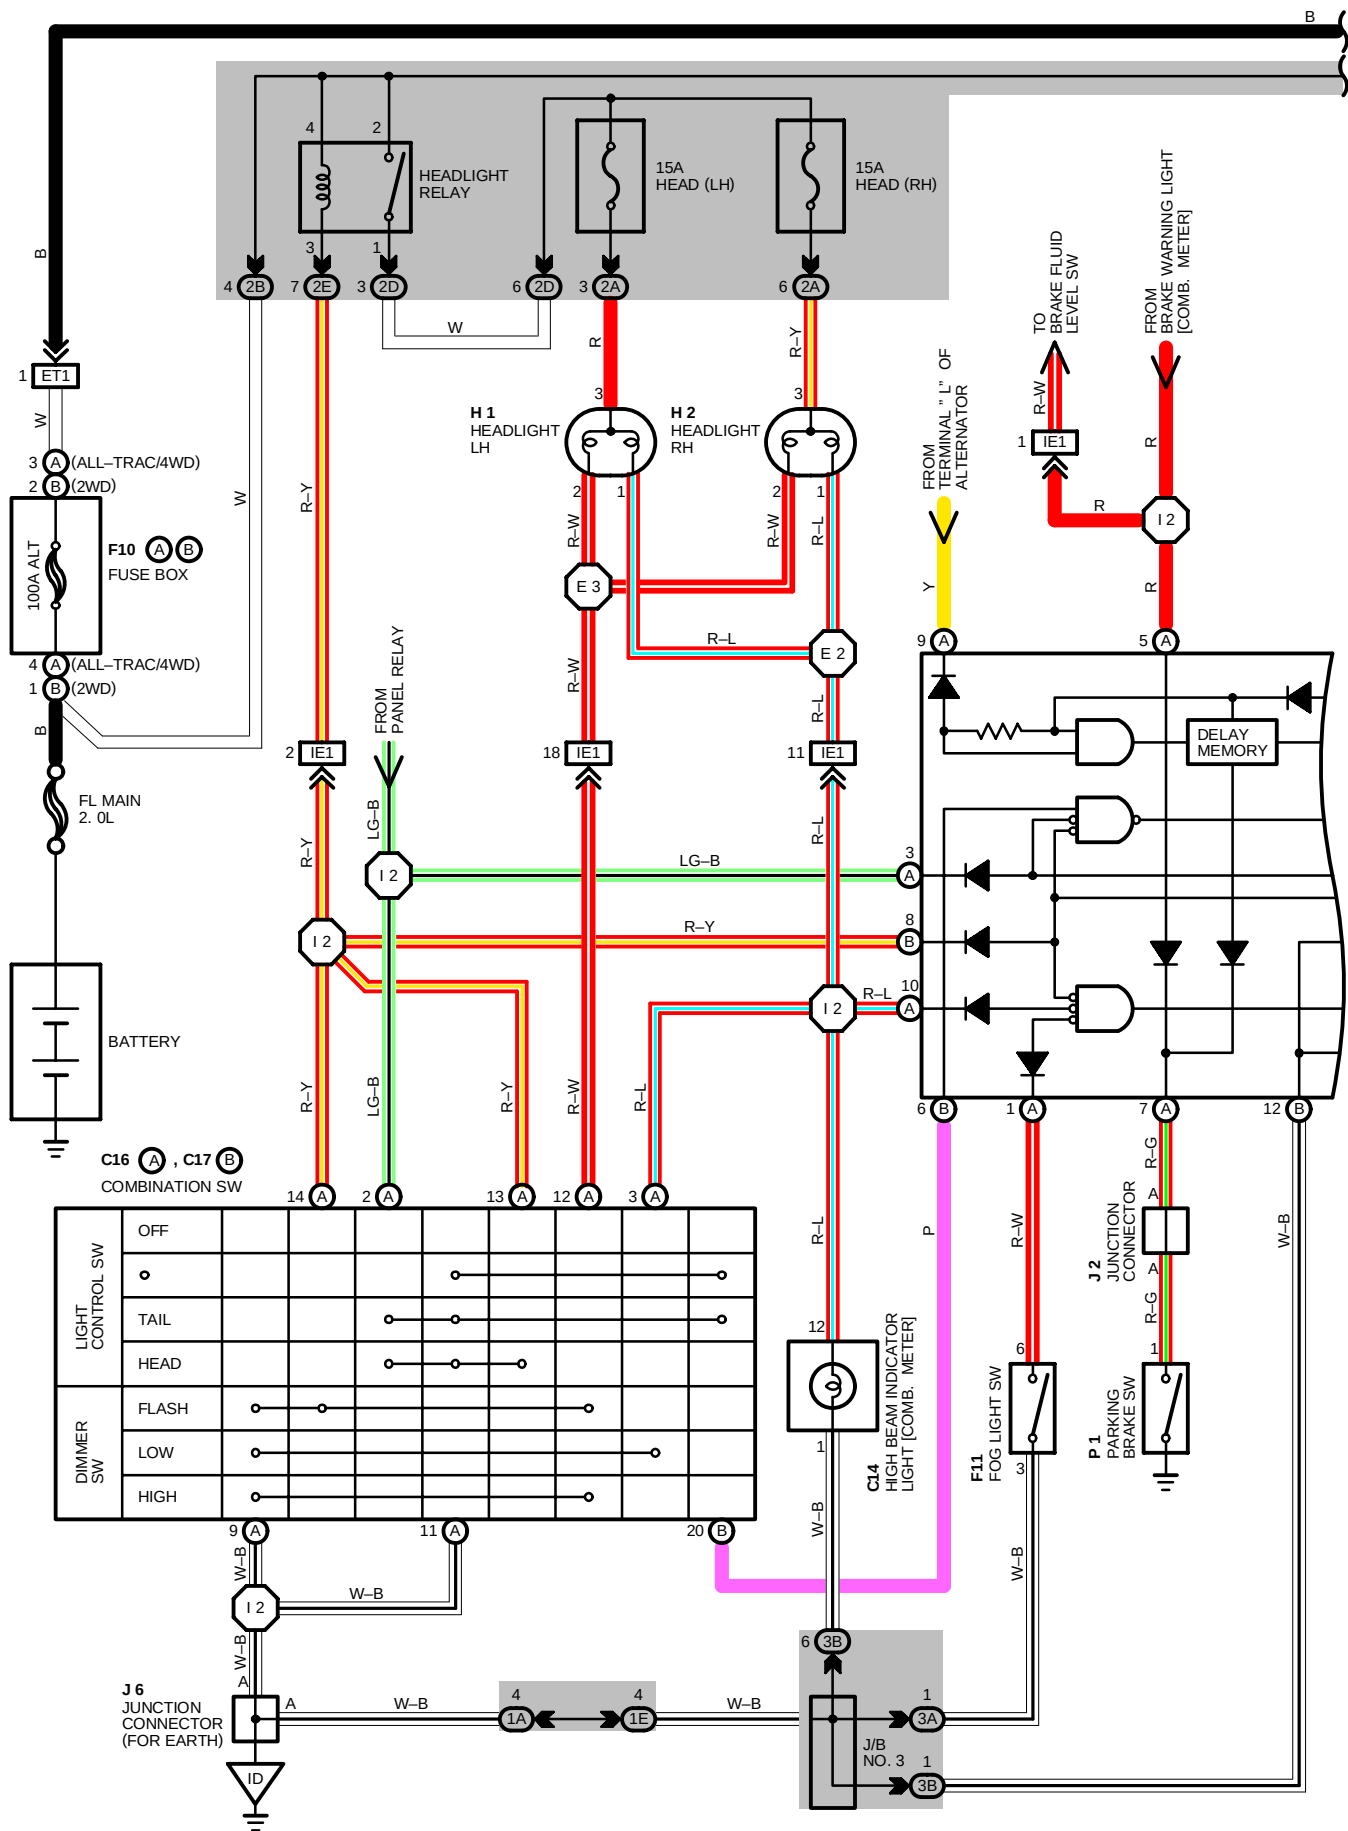

HEADLIGHT AND FOG LIGHT (FOR CANADA)

SYSTEM OUTLINE

CURRENT FROM THE BATTERY FLOWS CONTINUOUSLY FROM FL MAIN 2.0L → ALT FUSE → TAILLIGHT RELAY (COIL SIDE) → **TERMINAL (A) 2** OF RETRACT CONTROL RELAY, AND FL MAIN 2.0L → HEADLIGHT RELAY (COIL SIDE) → **TERMINAL (B) 8** OF RETRACT CONTROL RELAY.

WHEN THE IGNITION SW IS TURNED ON, THE CURRENT FLOWING THROUGH THE ECU-IG FUSE FLOWS TO **TERMINAL (A) 4** OF THE RETRACT CONTROL RELAY.

DAYTIME RUNNING LIGHT OPERATION

WHEN THE ENGINE IS STARTED, VOLTAGE IS GENERATED AT **TERMINAL L** OF THE ALTERNATOR AND VOLTAGE IS APPLIED TO **TERMINAL (A) 9** OF THE RETRACT CONTROL RELAY.

IF THE PARKING BRAKE LEVER IS PULLED UP (PARKING BRAKE SW ON) AT THIS TIME, THE RELAY IS NOT ENERGIZED, SO THE DAYTIME RUNNING LIGHTS SYSTEM DOSE NOT OPERATE.

IF THE PARKING BRAKE LEVER IS THEN RELEASED (PARKING BRAKE SW OFF), THE SIGNAL IS INPUT TO **TERMINAL (A) 7** OF THE RELAY.

THIS ACTIVATES THE RELAY AND CURRENT FROM ALT FUSE FLOWS TO TAILLIGHT RELAY (POINT SIDE) → TAIL FUSE → TAIL, LICENCE AND FRONT CLEARANCE (SIDEMARKER) LIGHTS → **GROUND**.

ALSO, CURRENT FROM ALT FUSE FLOWS TO FOG FUSE → FOG LIGHT RELAY (POINT SIDE) → FOG LIGHTS → **GROUND**, SO BOTH TAIL AND FOG LIGHTS LIGHT UP. THIS IS HOW THE DAYTIME RUNNING LIGHT SYSTEM OPERATES AND TAIL, FOG LIGHT HAVE LIGHTED UP. THE TAIL AND FOG LIGHT REMAIN ON EVEN IF THE PARKING BRAKE LEVER IS PULLED UP (PARKING BRAKE SW ON).

EVEN IF THE ENGINE STALLS WITH THE IGNITION SW ON AND THERE IS NO VOLTAGE FROM **TERMINAL “L”** OF ALTERNATOR, THE TAIL AND FOG LIGHTS REMAIN ON.

IF THE IGNITION SW IS THEN TURNED OFF, THE TAIL AND FOG LIGHTS ARE TURNED OFF.

IF THE ENGINE IS STARTED WHILE THE PARKING BRAKE IS RELEASED (PARKING BRAKE SW OFF), THE DAYTIME RUNNING LIGHT SYSTEM OPERATES AND THE TAIL AND FOG LIGHTS LIGHT UP AS THE ENGINE STARTS.

SERVICE HINTS

R 9(B), R10(A) RETRACT CONTROL RELAY

(A) 2, (B) 3, (B) 8—GROUND: ALWAYS APPROX. 12 VOLTS

(A) 4—GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

(B) 6—GROUND : NO CONTINUITY WITH LIGHT CONTROL SW AT **OFF** OR **HEAD** POSITION
CONTINUITY WITH LIGHT CONTROL SW AT **HOLD** OR **TAIL** POSITION

(A) 3—GROUND : NO CONTINUITY WITH LIGHT CONTROL SW AT **OFF** OR **HOLD** POSITION
CONTINUITY WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

(B) 8—GROUND : NO CONTINUITY WITH LIGHT CONTROL SW AT **OFF**, **HOLD** OR **TAIL** POSITION
CONTINUITY WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

(B)12—GROUND : ALWAYS CONTINUITY

(A) 5—GROUND : CONTINUITY WITH PARKING BRAKE LEVER PULLED UP (PARKING BRAKE SW ON)

(B) 2, (B) 5—(B)11 : NO CONTINUITY WITH RETRACT MOTOR AT **LOWERMOST** POSITION
CONTINUITY WITH RETRACT MOTOR AT ANY POSITION EXCEPT **LOWERMOST** POSITION

(B) 2, (B) 5—(B) 7 : NO CONTINUITY WITH RETRACT MOTOR AT **UPPERMOST** POSITION
CONTINUITY WITH RETRACT MOTOR AT ANY POSITION EXCEPT **UPPERMOST** POSITION

R 2, R 3 RETRACT MOTOR

2-3 : OPEN WITH RETRACT MOTOR AT **LOWERMOST** POSITION

2-1 : OPEN WITH RETRACT MOTOR AT **UPPERMOST** POSITION

C16 (A) DIMMER SW [COMB. SW]

9-12 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

FOG LIGHT RELAY

1-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND FOG LIGHT SW ON
CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED

⊙ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C14	32	F10 B	30 (5S-FE) , 31 (4A-FE)	J 6	33
C16 A	32	F11	33	P 1	33
C17 B	32	H 1	29 (3S-GTE) , 30 (5S-FE)	R 2	29 (3S-GTE) , 30 (5S-GTE)
F 1	28 (3S-GTE) , 30 (5S-FE)		31 (4A-FE)		31 (4A-FE)
	31 (4A-FE)	H 2	29 (3S-GTE) , 30 (5S-FE)	R 3	29 (3S-GTE) , 30 (5S-GTE)
F 2	28 (3S-GTE) , 30 (5S-FE)		31 (4A-FE)		31 (4A-FE)
	31 (4A-FE)	J 2	33	R 9 B	33
F10 A	28 (3S-GTE)	J 3	33	R10 A	33

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
3	26	R/B NO. 3 (RIGHT KICK PANEL)
4	27	R/B NO. 4 (RIGHT KICK PANEL)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1E		
1I	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2A	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
2B	22 (2WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
2D	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
	22 (2WD)	
2E	23 (ALL-TRAC/4WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	22 (2WD)	
3A	23 (ALL-TRAC/4WD)	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B	25	

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	38 (3S-GTE)	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
	40 (5S-FE)	
	42 (4A-FE)	
ET1	38 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
	40 (5S-FE)	
	42 (4A-FE)	
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)




 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	38 (3S-GTE)	FRONT RIGHT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
EB	38 (3S-GTE)	FRONT LEFT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
ID	44	LEFT KICK PANEL


 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	38 (3S-GTE)	ENGINE ROOM MAIN WIRE	E 3	40 (5S-FE)	ENGINE ROOM MAIN WIRE
	40 (5S-FE)			42 (4A-FE)	
	42 (4A-FE)		E13	38 (3S-GTE)	
E 2	38 (3S-GTE)			40 (5S-FE)	
	40 (5S-FE)			42 (4A-FE)	
	42 (4A-FE)		I 2	46	COWL WIRE
E 3	38 (3S-GTE)		I 8		


HEADLIGHT AND FOGLIGHT (FOR CANADA)

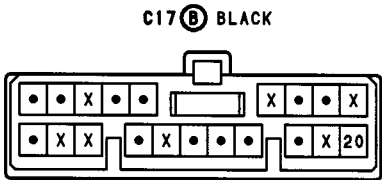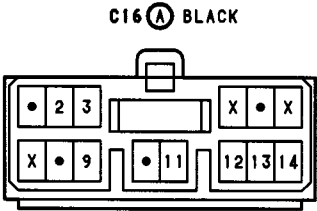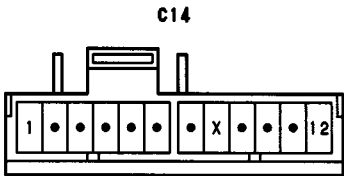

F 1, F 2 (ALL-TRAC/4WD) F10(A) BLACK

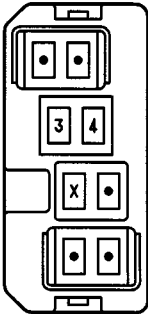


(2WD) F10(B) BLACK

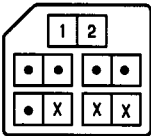


F11 BLACK



H 1, H 2 BROWN




J 2




(HINT:SEE PAGE 7)

J 3



(HINT:SEE PAGE 7)

J 6

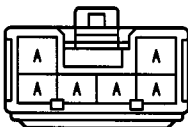

(HINT:SEE PAGE 7)


P 1 BLACK



R 2, R 3 BLACK



R 9(B)



R10(A)



-Memo-