


STARTING AND IGNITION (2WD)

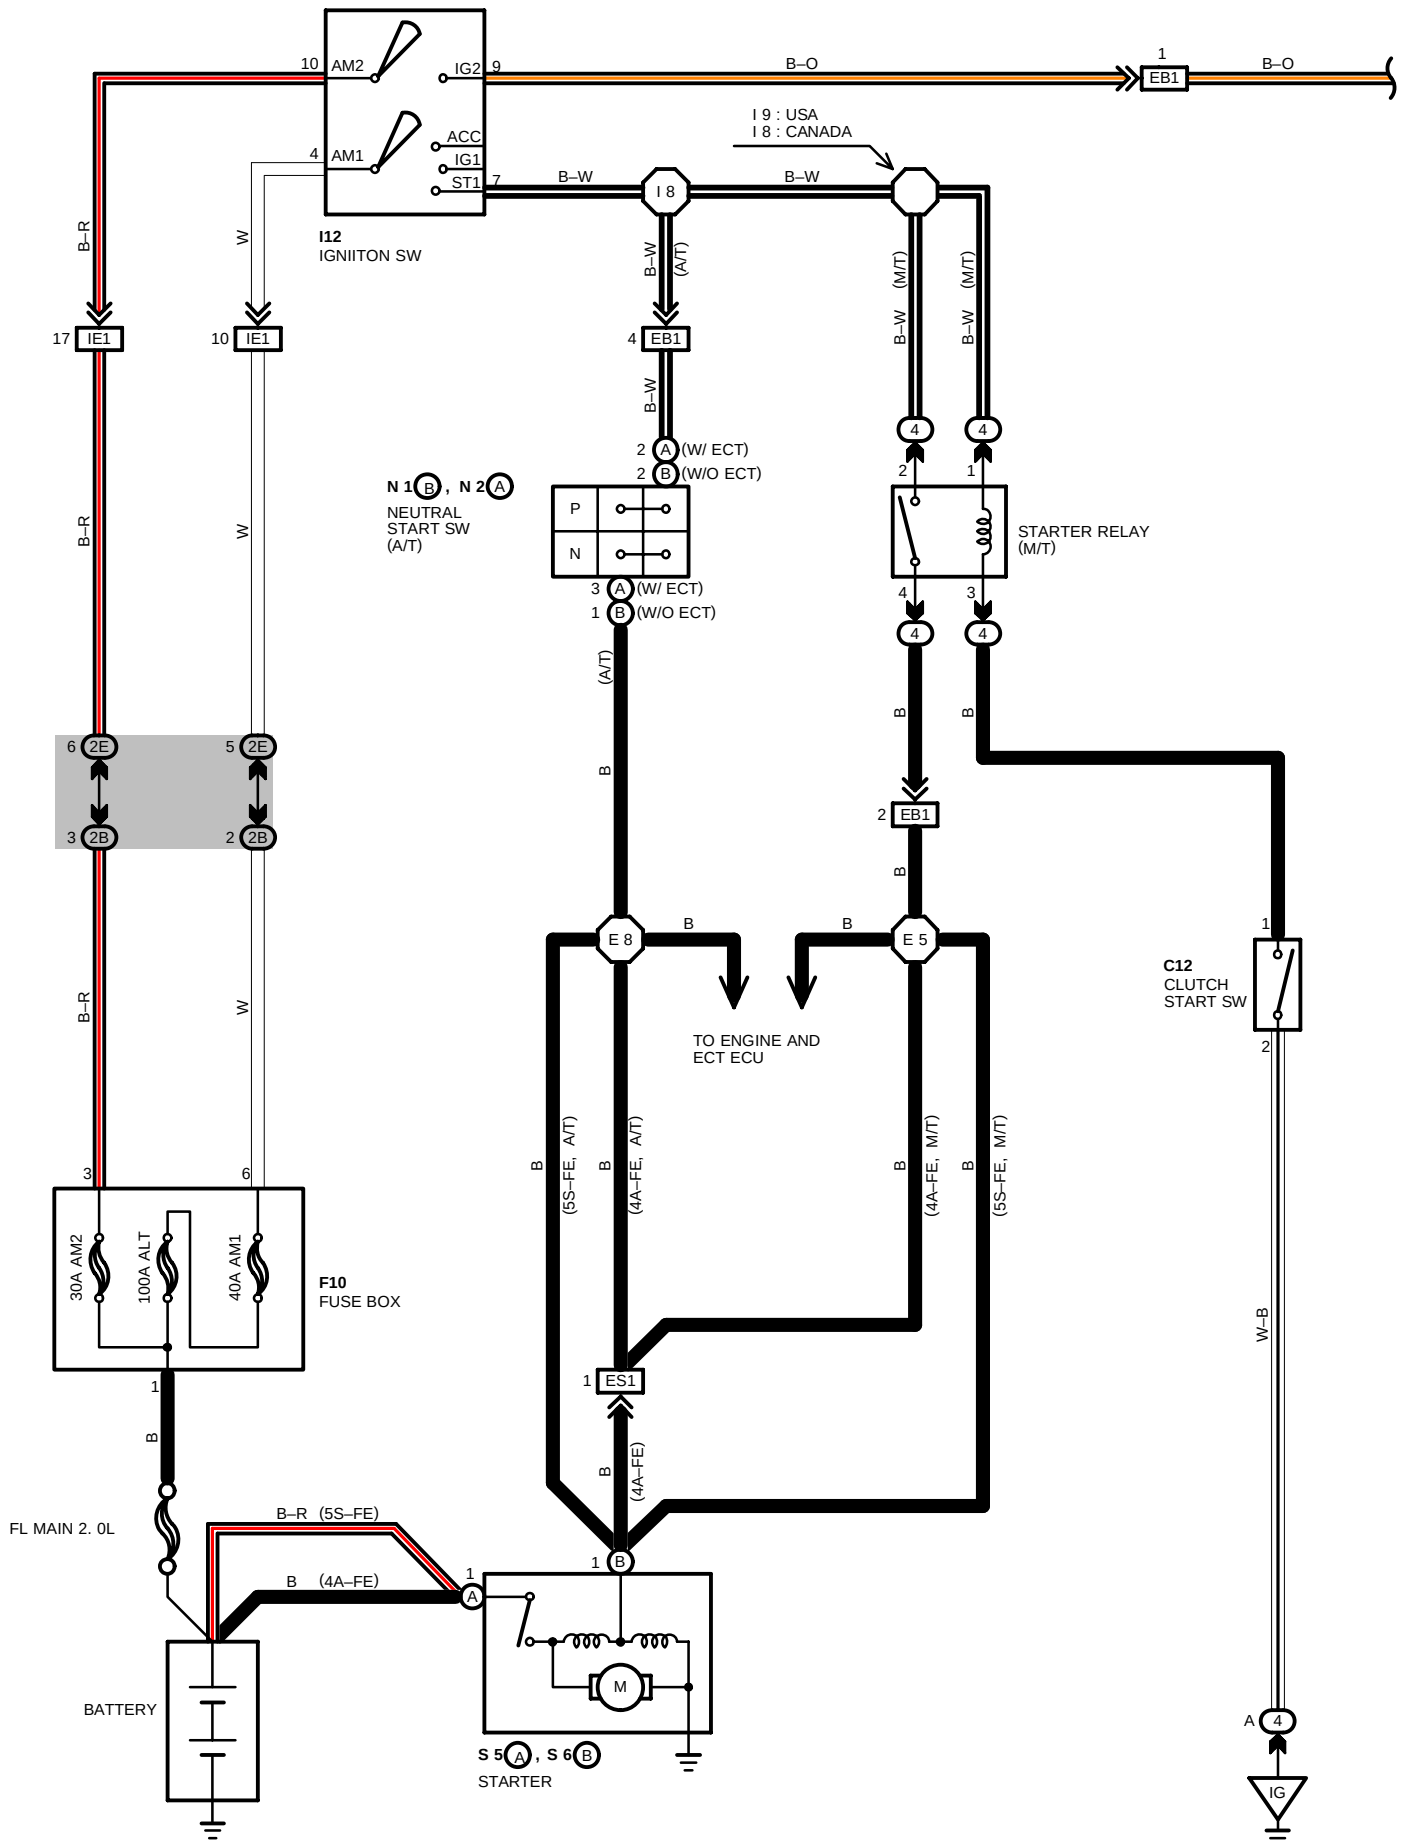

STARTING AND IGNITION (2WD)

SERVICE HINTS

I12 IGNITION SW

4-7 : CLOSED WITH IGNITION SW AT **ST** POSITION

9-10 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

C12 CLUTCH START SW

1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

STARTER RELAY

(4) 2-(4) 4 : CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT **ST** POSITION

STARTER

POINTS CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT **ST** POSITION

N 1, N 2 NEUTRAL START SW (A/T)

2-3 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION (W/ECT)

1-2 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION (W/O ECT)

C 4 COLD START INJECTOR

1-2 : APPROX. 12 VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	30 (5S-FE), 31 (4A-FE)	F10	30 (5S-FE), 31 (4A-FE)	N 2	A 30 (5S-FE)
C 4	30 (5S-FE), 31 (4A-FE)	I 1	A 31 (4A-FE)	N 3	30 (5S-FE), 31 (4A-FE)
C12	32	I 2	B 31 (4A-FE)	S 5	A 30 (5S-FE), 31 (4A-FE)
D 1	30 (5S-FE), 31 (4A-FE)	I 4	30 (5S-FE)	S 6	B 30 (5S-FE), 31 (4A-FE)
E 8	33	I 5	30 (5S-FE)		
E 8	A 33	I12	33		
	B 33	N 1	B 30 (5S-FE), 31 (4A-FE)		



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
4	27	R/B NO. 4 (RIGHT KICK PANEL)



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
2A	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)
2B	22 (2WD)	ENGINE WIRE AND J/B NO.2 (NEAR THE BATTERY)
2C		
2E	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	40 (5S-FE) 42 (4A-FE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
ES1	42 (4A-FE)	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE STARTER)
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)



: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
EB	40 (5S-FE) 42 (4A-FE)	FRONT LEFT FENDER
EC	40 (5S-FE) 42 (4A-FE)	INTAKE MANIFOLD
IG	44	R/B NO. 4 SET BOLT




: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5	40 (5S-FE) 42 (4A-FE)	ENGINE WIRE	E 9	40 (5S-FE)	ENGINE WIRE
			I 7	46	
E 7	40 (5S-FE) 42 (4A-FE)		I 8	46	COWL WIRE
			I 9	46	
E 8	40 (5S-FE) 42 (4A-FE)				


C 1 GRAY

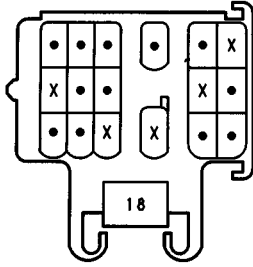


C12




D 1 BLACK




E 8 GRAY

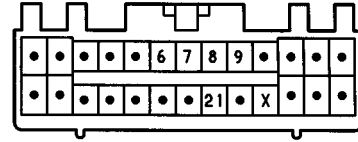


E 8(A) DARK GRAY

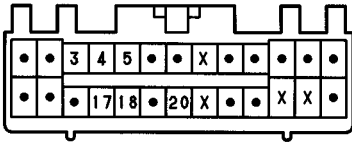

E 8(B) DARK GRAY

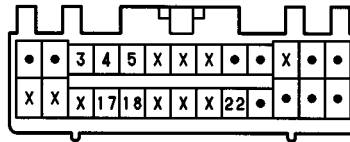

F10 BLACK

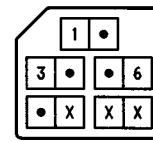

I 1(A) DARK GRAY



I 2(B) DARK GRAY




I 4 BLACK



I 5 BLACK



I12 BLACK

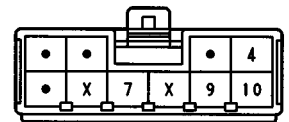

N 1(B) GRAY



N 2(A) GRAY



N 3 GRAY



S 5(A)



S 6(B) BLACK

