


## 1993 Toyota Celica

## COOLING FAN



## DEFOGGERS

# WIRING DIAGRAMS

## 1993 Toyota Celica

1993 WIRING DIAGRAMS  
Toyota Wiring Diagrams

Toyota; Celica

### IDENTIFICATION

### COMPONENT LOCATION MENU

#### COMPONENT LOCATIONS TABLE

| Component                                | Figure No. (Location) |
|------------------------------------------|-----------------------|
| A/C COMPRESSOR CLUTCH RELAY (AUTO A/C)   | 11 (D 41)             |
| A/C CONDENSER FAN MOTOR (AUTO A/C)       | 11 (E 40)             |
| A/C CONDENSER FAN RELAY #2 (AUTO A/C)    | 11 (D 40)             |
| A/C POWER TRANSISTOR (AUTO A/C)          | 11 (D 41)             |
| A/C SYSTEM (AUTO)                        | 9 (A-E 32-35)         |
| A/C SYSTEM (MANUAL)                      | 10 (A-E 36-39)        |
| AUTOMATIC TRANSMISSION                   |                       |
| INDICATOR SWITCH                         | 14 (E 53-54)          |
| ANTI-LOCK BRAKE SYSTEM (ABS)             | 13 (A-E 48-51)        |
| ALTERNATOR                               | 1 (B 3)               |
| AUTO ANTENNA                             | 14 (E 55)             |
| AUTO TILT AWAY ECU                       | 12 (E 47)             |
| BACK-UP LIGHT SWITCH                     | 16 (D 63)             |
| BATTERY                                  | 1 (A 2)               |
| BLOWER RESISTOR (AUTO A/C)               | 11 (D 43)             |
| CENTER AIRBAG SENSOR ASSEMBLY            | 12 (E 44)             |
| CHECK CONNECTOR (1.6L)                   | 3 (D 11)              |
| CHECK CONNECTOR (2.0L)                   | 4 (C-D 15)            |
| CHECK CONNECTOR (2.2L A/T)               | 5 (D-E 19)            |
| CHECK CONNECTOR (2.2L M/T)               | 6 (D-E 23)            |
| CIRCUIT OPENING RELAY (1.6L)             | 3 (A 10)              |
| CIRCUIT OPENING RELAY (2.0L)             | 4 (A 13)              |
| CIRCUIT OPENING RELAY (2.2L A/T)         | 5 (A 18)              |
| CIRCUIT OPENING RELAY (2.2L M/T)         | 6 (A 22)              |
| COLD START INJECTOR                      | 1 (B 2)               |
| COMBINATION SWITCH                       | 15 (C-E 59)           |
| CRUISE CONTROL SYSTEM                    | 12 (A-D 44-47)        |
| DEFOGGER SWITCH                          | 14 (A 52)             |
| DIRECTIONAL FLASHER                      | 8 (D 30)              |
| DOOR LOCK SYSTEM                         | 16 (D-E 60-62)        |
| ECM (1.6L)                               | 3 (B-D 8)             |
| ECM (2.0L)                               | 4 (A-E 12)            |
| ECM (2.2L A/T)                           | 5 (A-E 16)            |
| ECM (2.2L M/T)                           | 6 (B-E 20)            |
| ELECTRONICALLY CONTROLLED                |                       |
| TRANSMISSION (ECT) PATTERN SELECT SWITCH | 14 (C 52)             |
| EXTRA HIGH SPEED RELAY (AUTO A/C)        | 11 (D 41)             |
| FOG LIGHT SWITCH                         | 1 (C-D 2)             |
| FUEL SENDER                              | 15 (A-B 59)           |
| FUSIBLE LINK BOX                         | 2 (C 5-6)             |
| HAZARD SWITCH                            | 15 (E 56)             |
| HEATER RELAY (AUTO A/C)                  | 11 (D 41)             |
| HORNS                                    | 1 (C 1)               |
| IGNITER (1.6L)                           | 3 (E 9-10)            |
| IGNITER (2.0L)                           | 3 (D-E 15)            |
| IGNITER (2.2L A/T)                       | 5 (E 18)              |

|                                        |                  |
|----------------------------------------|------------------|
| IGNITION KEY CYLINDER LIGHT .....      | 11 (B 40)        |
| IGNITION NOISE FILTER (1.6L) .....     | 3 (D 10)         |
| IGNITION NOISE FILTER (2.0L) .....     | 4 (E 14)         |
| IGNITION NOISE FILTER (2.2L A/T) ..... | 5 (E 17)         |
| IGNITION NOISE FILTER (2.2L M/T) ..... | 6 (E 21)         |
| IGNITION SWITCH .....                  | 7 (A 24)         |
| J1 JUNCTION CONN .....                 | 11 (B-C 43)      |
| J2 JUNCTION CONN .....                 | 12 (B-C 44)      |
| J3 JUNCTION CONN .....                 | 7 (E 24)         |
| J4 JUNCTION CONN (AUTO A/C) .....      | 11 (C-D 43)      |
| J5 JUNCTION CONN (AUTO A/C) .....      | 11 (E 43)        |
| J6 JUNCTION CONN .....                 | 7 (A 27)         |
| JUNCTION BLOCK #1 (J/B #1) .....       | 7, 8 (B-D 25-30) |
| JUNCTION BLOCK #2 (J/B #2) .....       | 2 (B-E 5-6)      |
| JUNCTION BLOCK #3 (J/B #3) .....       | 14 (A-B 53-54)   |
| LEFT DOOR COURTESY SWITCH .....        | 11 (B 43)        |
| LUGGAGE COMPARTMENT LIGHT .....        | 11 (A 42)        |
| OVERDRIVE (O/D) MAIN SWITCH .....      | 14 (C-D 52)      |
| OVERDRIVE (O/D) SOLENOID .....         | 14 (D 55)        |
| POWER MIRROR SWITCH .....              | 16 (B 60)        |
| POWER SEAT SWITCH .....                | 16 (A 60)        |
| POWER WINDOW MASTER SWITCH .....       | 16 (C-D 62)      |
| RADIATOR FAN MOTOR (AUTO A/C) .....    | 11 (E 40)        |
| REAR WIPER MOTOR & RELAY .....         | 15 (C-D 57)      |
| RELAY BLOCK # 2 (R/B #2) .....         | 8 (A 28)         |
| RELAY BLOCK # 3 (R/B #3) .....         | 1 (C 3)          |
| RELAY BLOCK # 4 (R/B #4) .....         | 8 (A-B 29-31)    |
| RELAY BLOCK # 5 (R/B #5) .....         | 2 (A 5-6)        |
| RETRACT CONTROL RELAY .....            | 1 (D 3)          |
| RHEOSTAT .....                         | 14 (C 55)        |
| RIGHT DOOR COURTESY SWITCH .....       | 11 (A 43)        |
| SHIFT LOCK ECU .....                   | 14 (D-E 52)      |
| STARTER .....                          | 1 (A 3)          |
| STOP LIGHT SWITCH .....                | 12 (B 47, C 47)  |
| SUNROOF SYSTEM .....                   | 16 (A-B 61-62)   |
| TURBOCHARGING PRES SENSOR (2.0L) ..... | 4 (B 15)         |
| UNLOCK WARNING SWITCH .....            | 7 (A 24)         |
| WASHER MOTOR .....                     | 1 (E 2)          |
| WIPER MOTOR .....                      | 1 (E 3)          |

---

## WIRING DIAGRAMS

# COMPONENT LOCATOR:

|                                  |            |
|----------------------------------|------------|
| A/C COMPRESSOR CLUTCH            | D 41       |
| RELAY (AUTO A/C)                 | A-E 32-35  |
| A/C CONDENSER FAN                | E 40       |
| MOTOR (AUTO A/C)                 | E 40       |
| RELAY #2 (AUTO A/C)              | D 40       |
| A/C POWER TRANSISTOR             | D 41       |
| (AUTO A/C)                       | A-E 32-35  |
| A/C SYSTEM (AUTO)                | A-E 36-39  |
| A/T IND SW                       | E 53-54    |
| ABS SYSTEM                       | A-E 48-51  |
| ALTERNATOR                       | B-3        |
| AUTO ANTENNA                     | E 55       |
| AUTO TILT AWAY ECU               | E 47       |
| BACK-UP LT SW                    | E 83       |
| BATTERY                          | A 2        |
| BLOWER RESISTOR (AUTO A/C)       | D 43       |
| CENTER AIRBAG SENSOR ASSEMBLY    | E 44       |
| CHECK CONN (1.6L)                | D 11       |
| CHECK CONN (2.0L)                | C-D 15     |
| CHECK CONN (2.2L A/T)            | D-E 19     |
| CHECK CONN (2.2L M/T)            | D-E 23     |
| CIRCUIT OPENING RELAY (1.6L)     | A 10       |
| CIRCUIT OPENING RELAY (2.0L)     | A 13       |
| RELAY (2.2L A/T)                 | A 18       |
| CIRCUIT OPENING                  | A 22       |
| RELAY (2.2L M/T)                 | B 2        |
| COLD START INJECTOR              | C-E 59     |
| COMBINATION SW                   | A-D 44-47  |
| CRUISE CONTROL SYSTEM            | A 52       |
| DEFOG SW                         | D 30       |
| DIR FLASHER                      | D-E 60-62  |
| DOOR LOCK SYSTEM                 | B-D 8      |
| ECM (1.6L)                       | A-E 12     |
| ECM (2.0L)                       | A-E 16     |
| ECM (2.2L A/T)                   | A-E 16     |
| ECM (2.2L M/T)                   | C 52       |
| ECT PATTERN SELECT SW            | D 41       |
| EXTRA HIGH SPEED                 | C-D 2      |
| RELAY (AUTO A/C)                 | A 59, B 9  |
| FOG LT SW                        | C 5        |
| FUEL SENDER                      | E 9-10     |
| FUSE LINK BOX                    | D-E 15     |
| HAZARD SW                        | E 18       |
| HEATER RELAY (AUTO A/C)          | D 10       |
| HORN                             | E 14       |
| IGNITER (1.6L)                   | E 21       |
| IGNITER (2.0L)                   | A 24       |
| IGNITER (2.2L A/T)               | B-C 43     |
| IGNITION KEY CYLINDER LT         | B-C 44     |
| IGNITION NOISE FILTER (1.6L)     | E 24       |
| IGNITION NOISE FILTER (2.0L)     | C-D 43     |
| IGNITION NOISE FILTER (2.2L A/T) | E 43       |
| IGNITION NOISE FILTER (2.2L M/T) | E 43       |
| IGNITION SW                      | A 27       |
| J1 JUNCTION CONN                 | B-D 25-30  |
| J2 JUNCTION CONN                 | B-E 5-6    |
| J3 JUNCTION CONN                 | A-B 53-54  |
| J4 JUNCTION CONN (AUTO A/C)      | B 43       |
| J5 JUNCTION CONN (AUTO A/C)      | A 42       |
| J6 JUNCTION CONN                 | C-D 52     |
| JUNCTION BLOCK #1 (J/B #1)       | D 55       |
| JUNCTION BLOCK #2 (J/B #2)       | B 60       |
| JUNCTION BLOCK #3 (J/B #3)       | C-D 62     |
| LEFT DOOR COURTESY SW            | E 40       |
| LUGGAGE COMPARTMENT LT           | C-D 57     |
| O/D MAIN SW                      | A 3        |
| O/D SOLENOID                     | B 47, C 47 |
| POWER WINDOW MASTER SW           | A-R 61-62  |
| RADIATOR FAN MOTOR (AUTO A/C)    | B 15       |
| REAR WIPER MOTOR & RELAY         | A 24       |
| RELAY BLOCK #2 (R/B #2)          | E 2        |
| RELAY BLOCK #3 (R/B #3)          | E 3        |
| RELAY BLOCK #4 (R/B #4)          |            |
| RELAY BLOCK #5 (R/B #5)          |            |
| RETRACT CONTROL RELAY            |            |
| RHEOSTAT                         |            |
| RIGHT DOOR COURTESY SW           |            |
| SHIFT LOCK ECU                   |            |
| STARTER                          |            |
| STOP LT SW                       |            |
| SUNROOF SYSTEM                   |            |
| TURBOCHARGING PRES               |            |
| SENSOR (2.0L)                    |            |
| UNLOCK WARNING SW                |            |
| WASHER MOTOR                     |            |
| WIPER MOTOR                      |            |

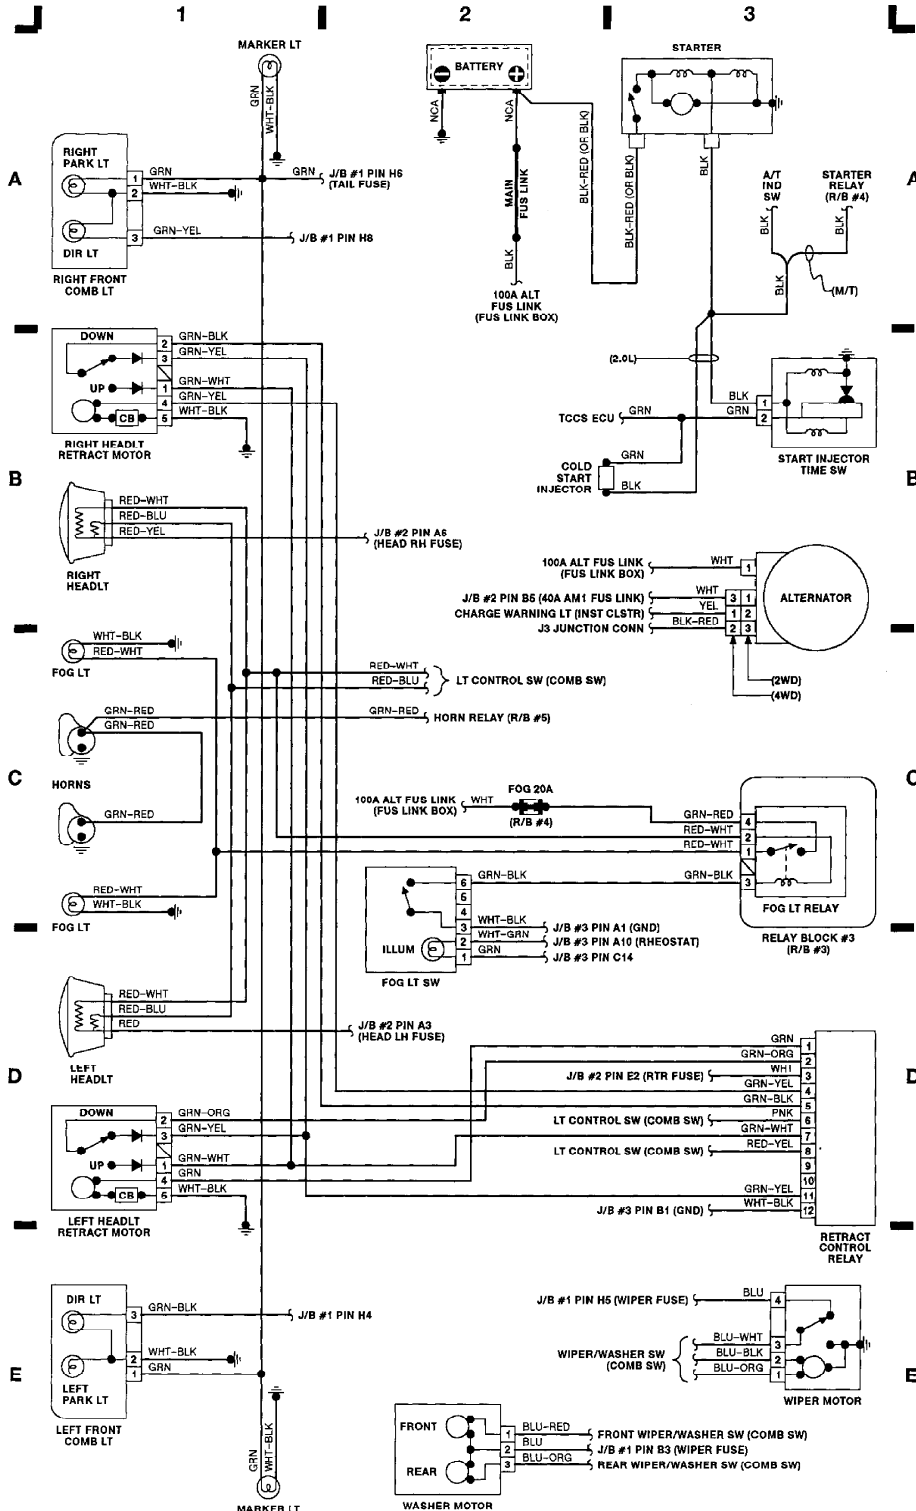


Fig. 1: Engine Compartment, Headlights, Starter (Grid 1-3)

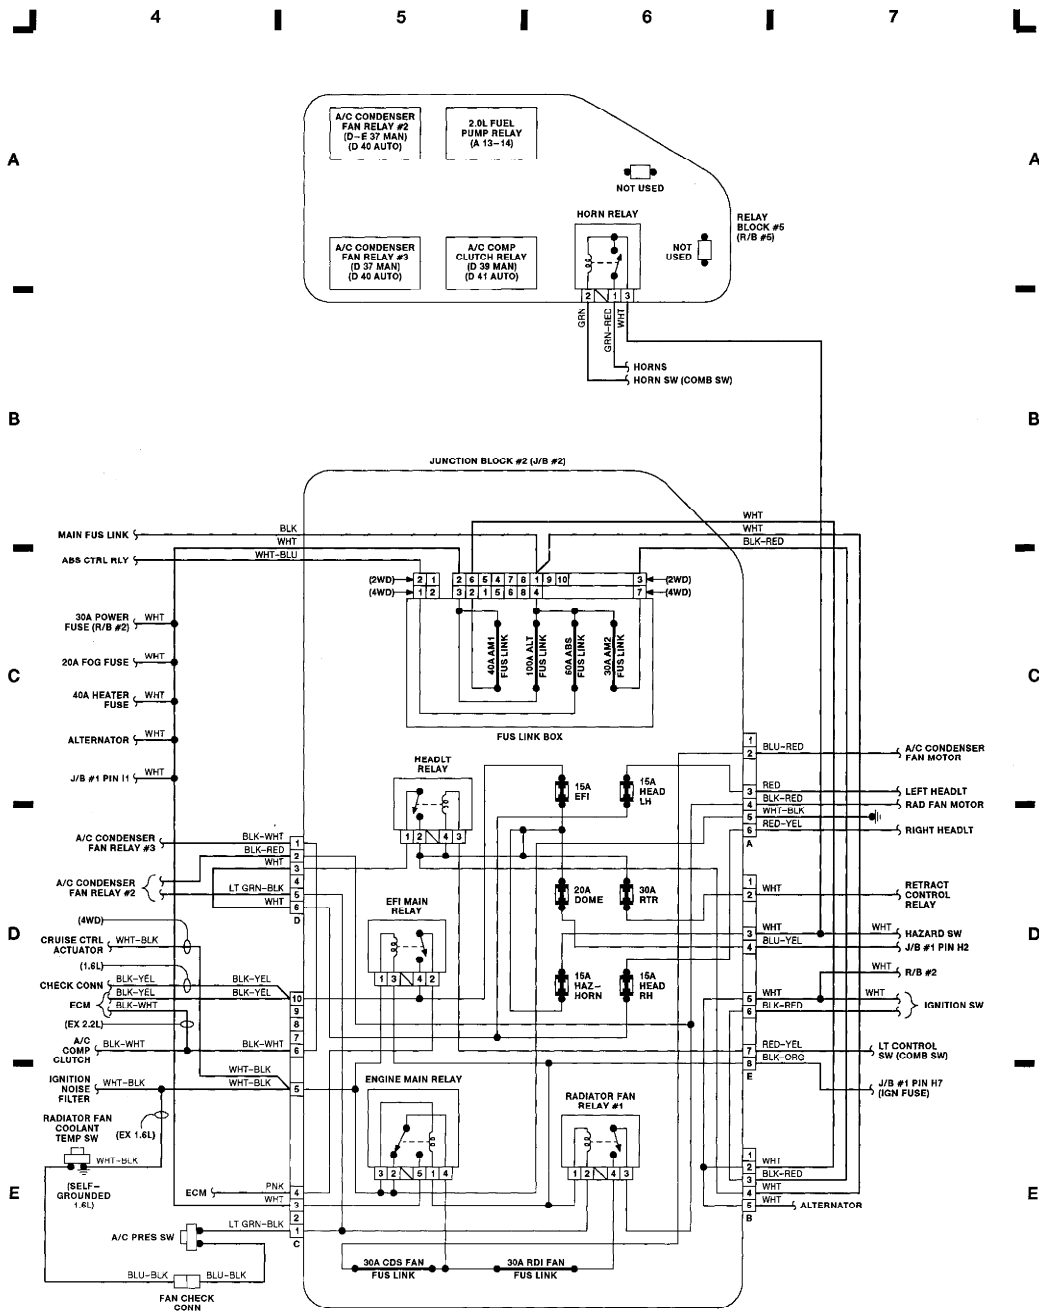


Fig. 2: Junction Block #2, Relay Block #5 (Grid 4-7)



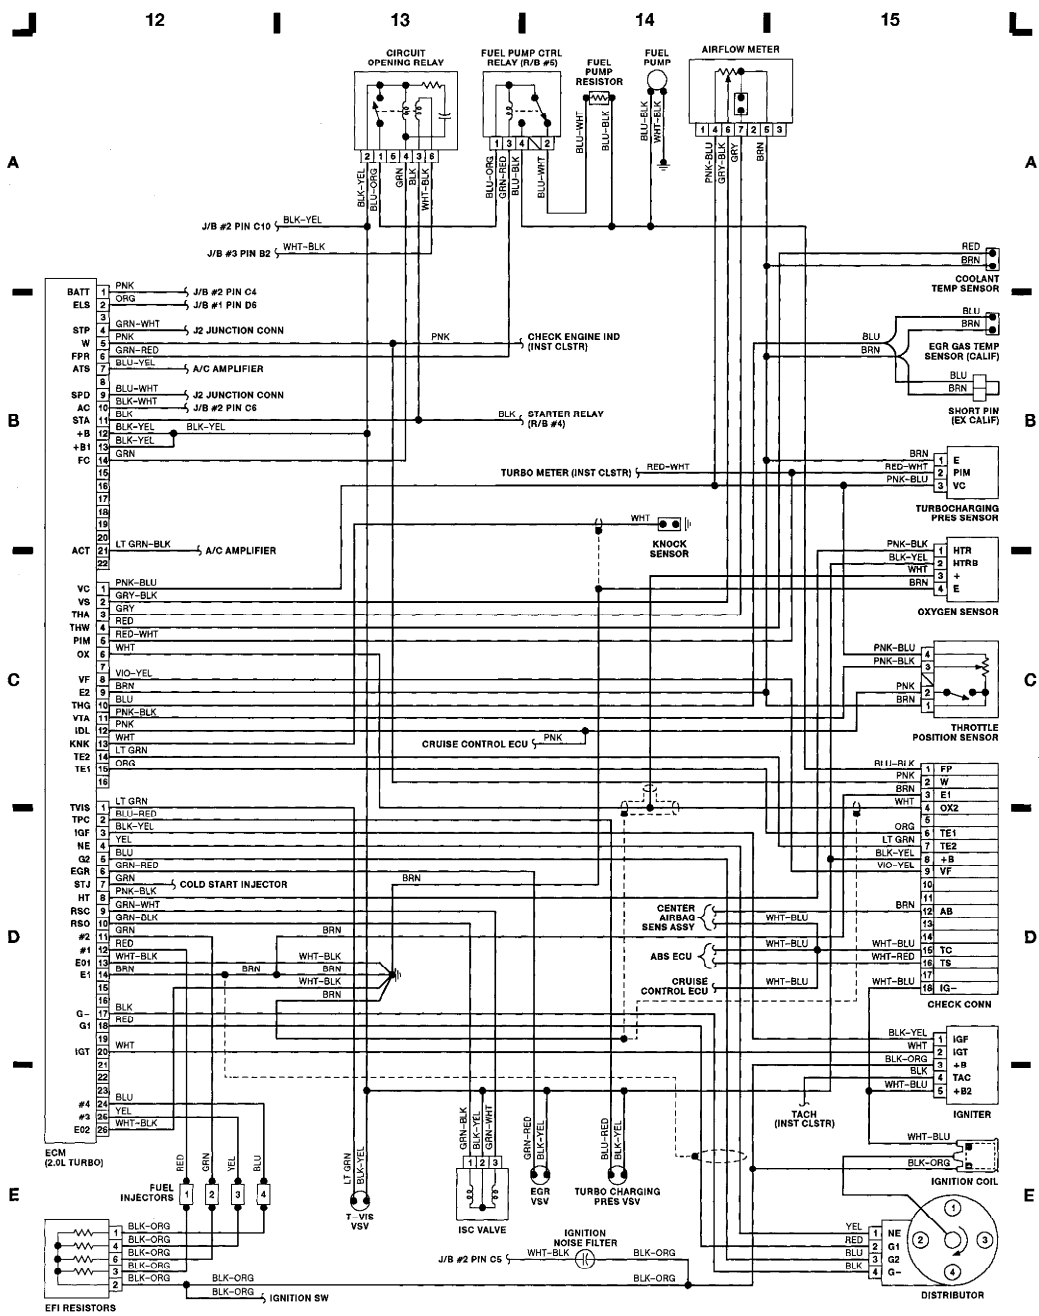


Fig. 4: ECM ECU & Engine Sensors (2.0L Turbo) (Grid 12-15)

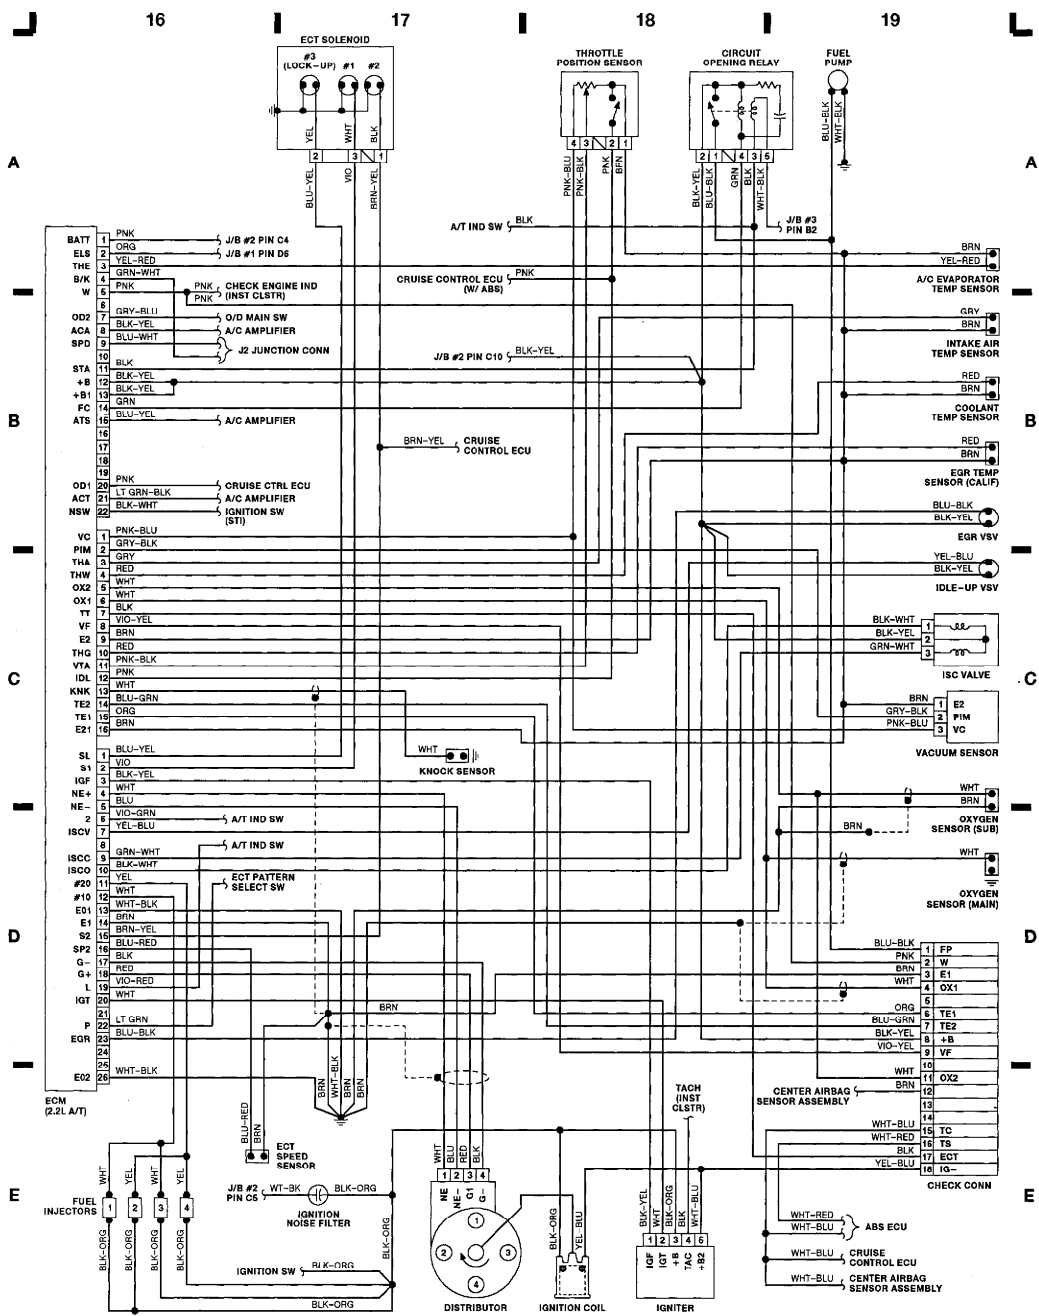


Fig. 5: ECM ECU & Engine Sensors (2.2L A/T) (Grid 16-19)

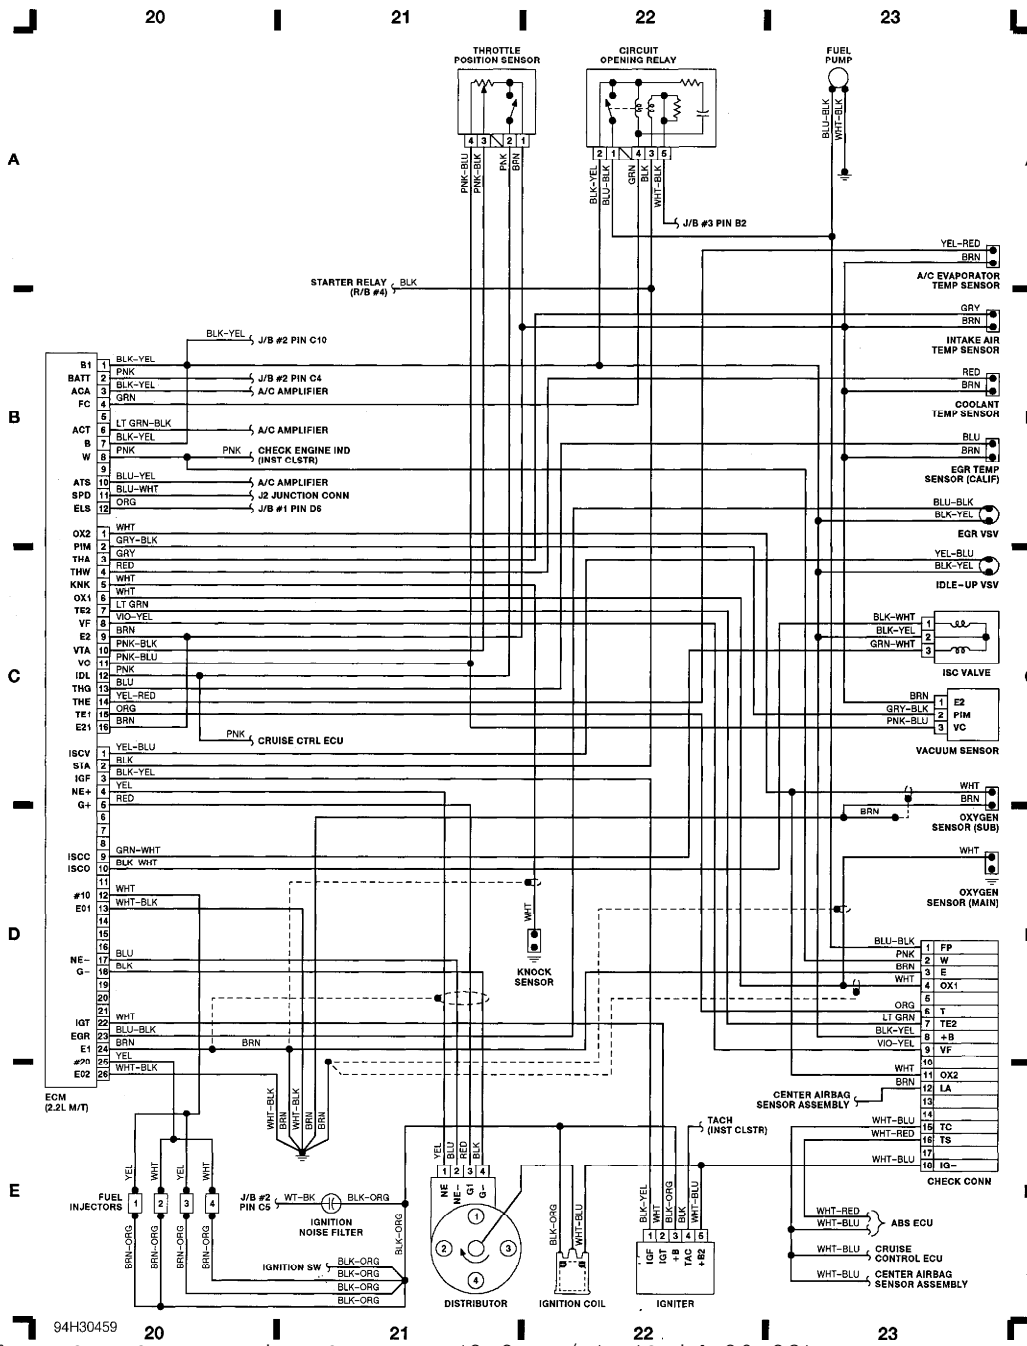


Fig. 6: ECM ECU & Engine Sensors (2.2L M/T) (Grid 20-23)



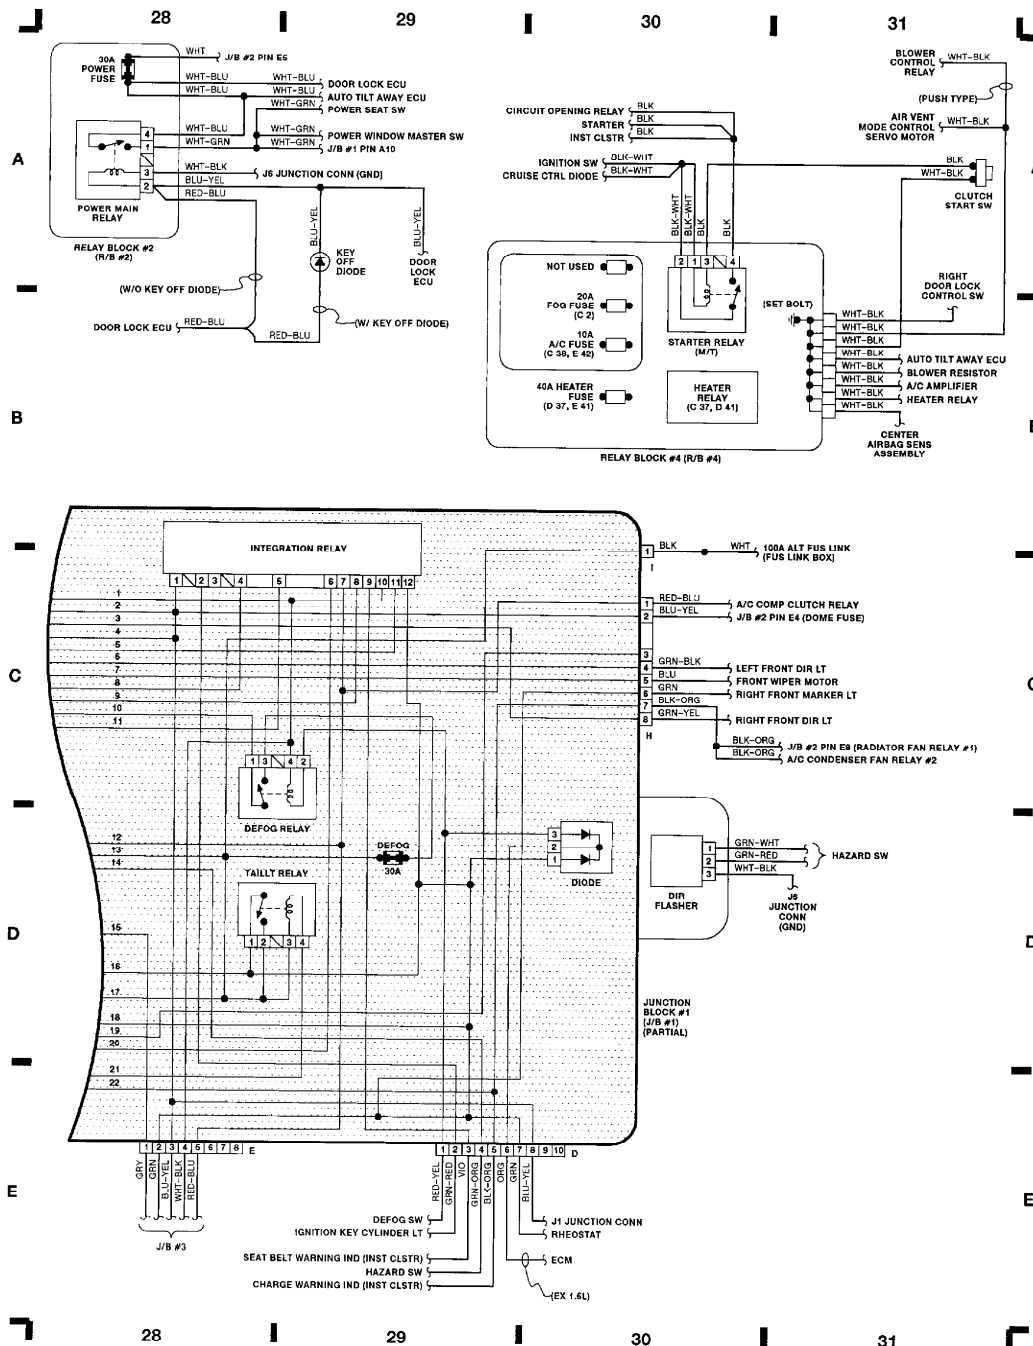


Fig. 8: Junction Block # 1 (Cont.), Relay Block #2 & #4 (Grid 28-31)

94B30461

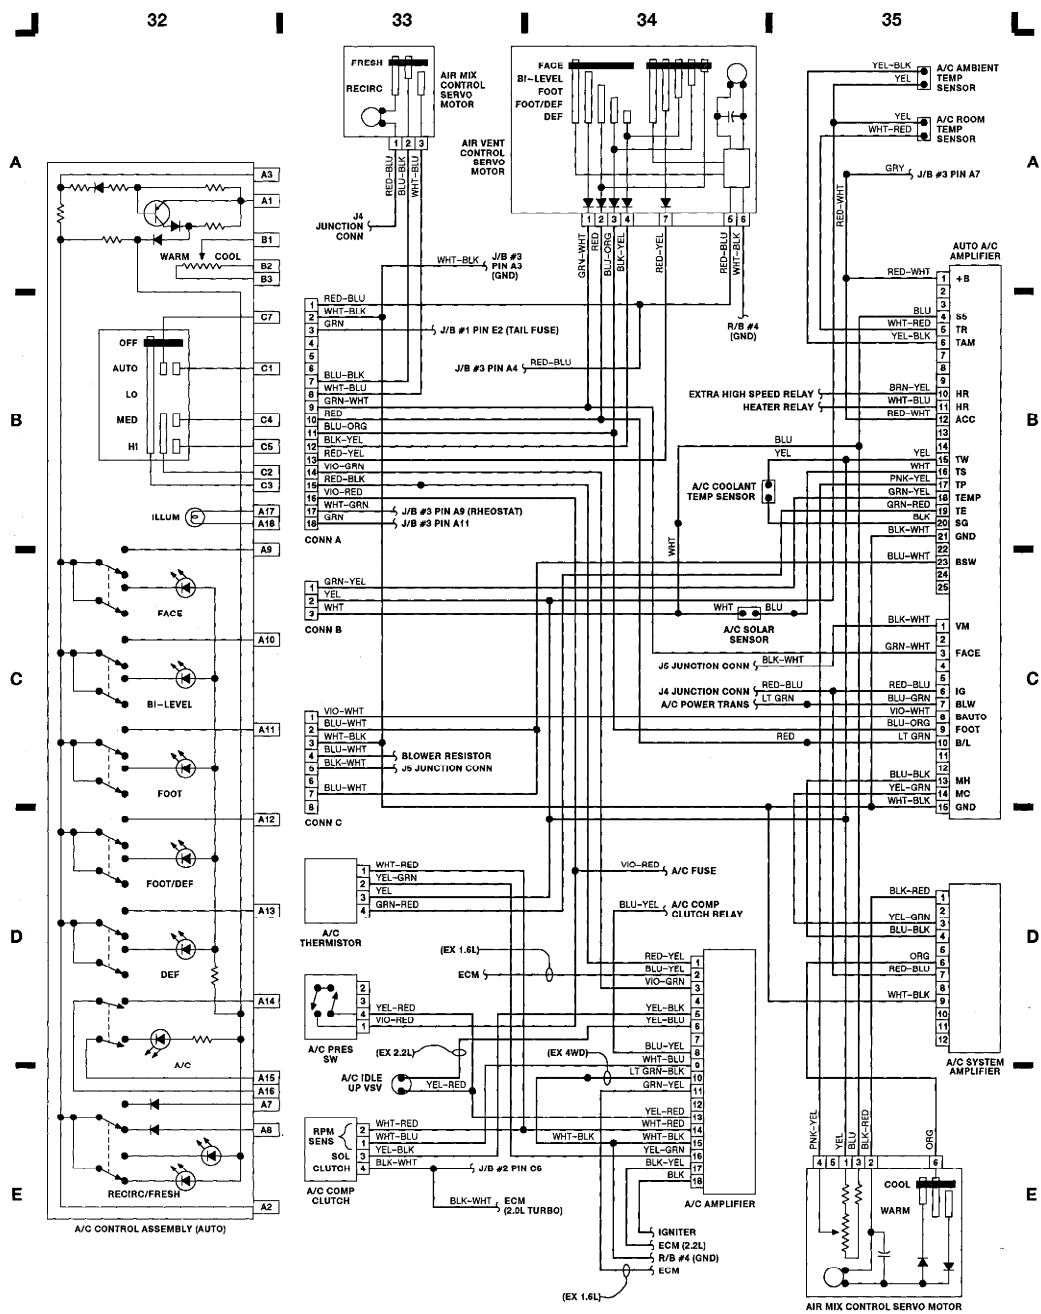


Fig. 9: Auto A/C & Heater System (Grid 32-35)



Fig. 10: Manual A/C & Heater System (Grid 36-39)

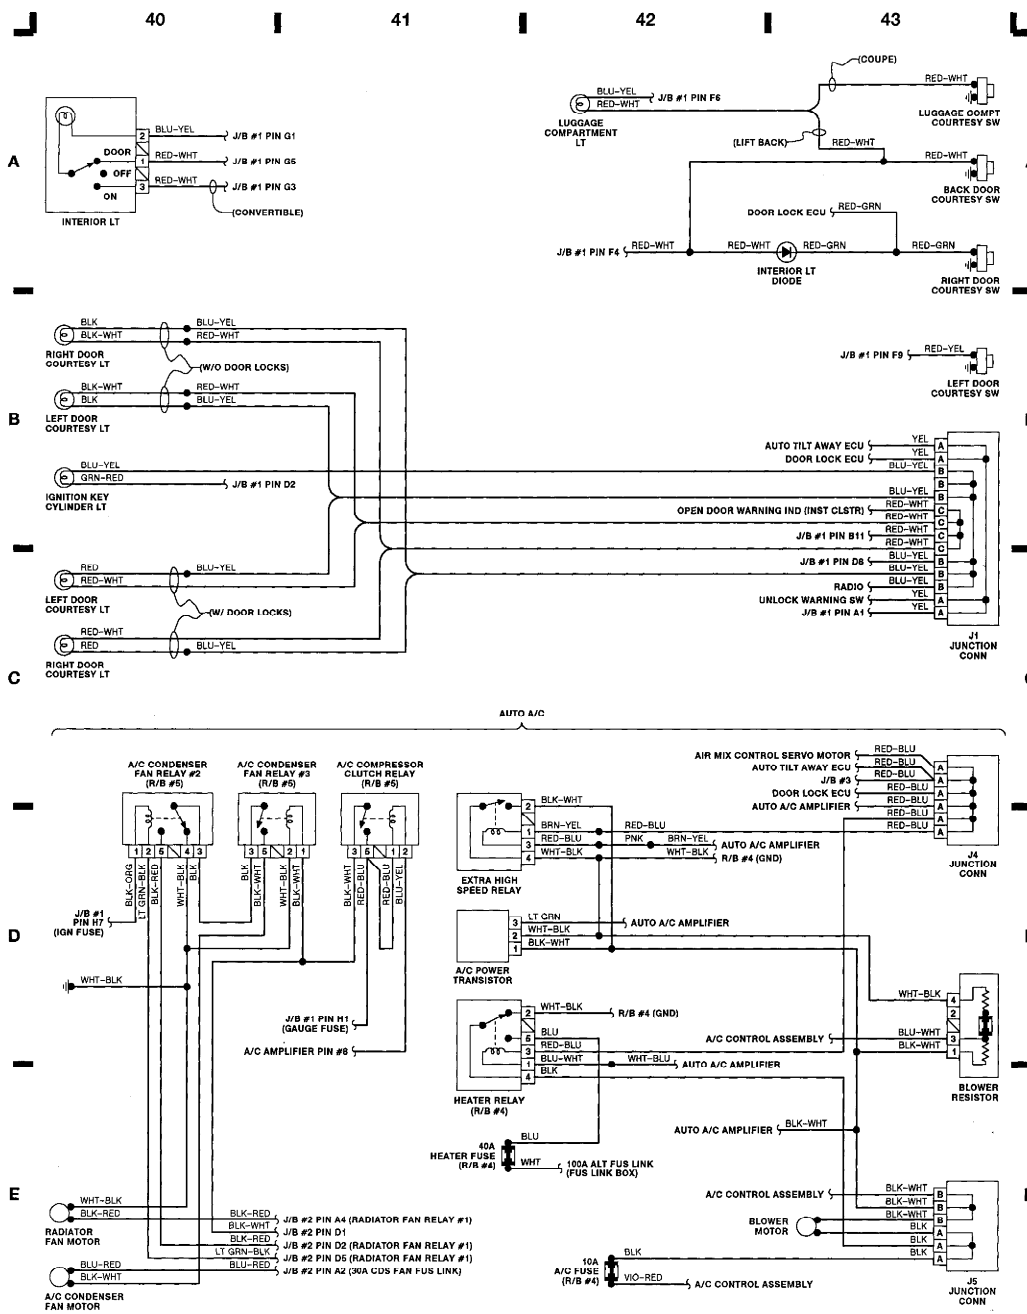


Fig. 11: Fan Relays, Courtesy Lights, Heater Relay (Grid 40-43)

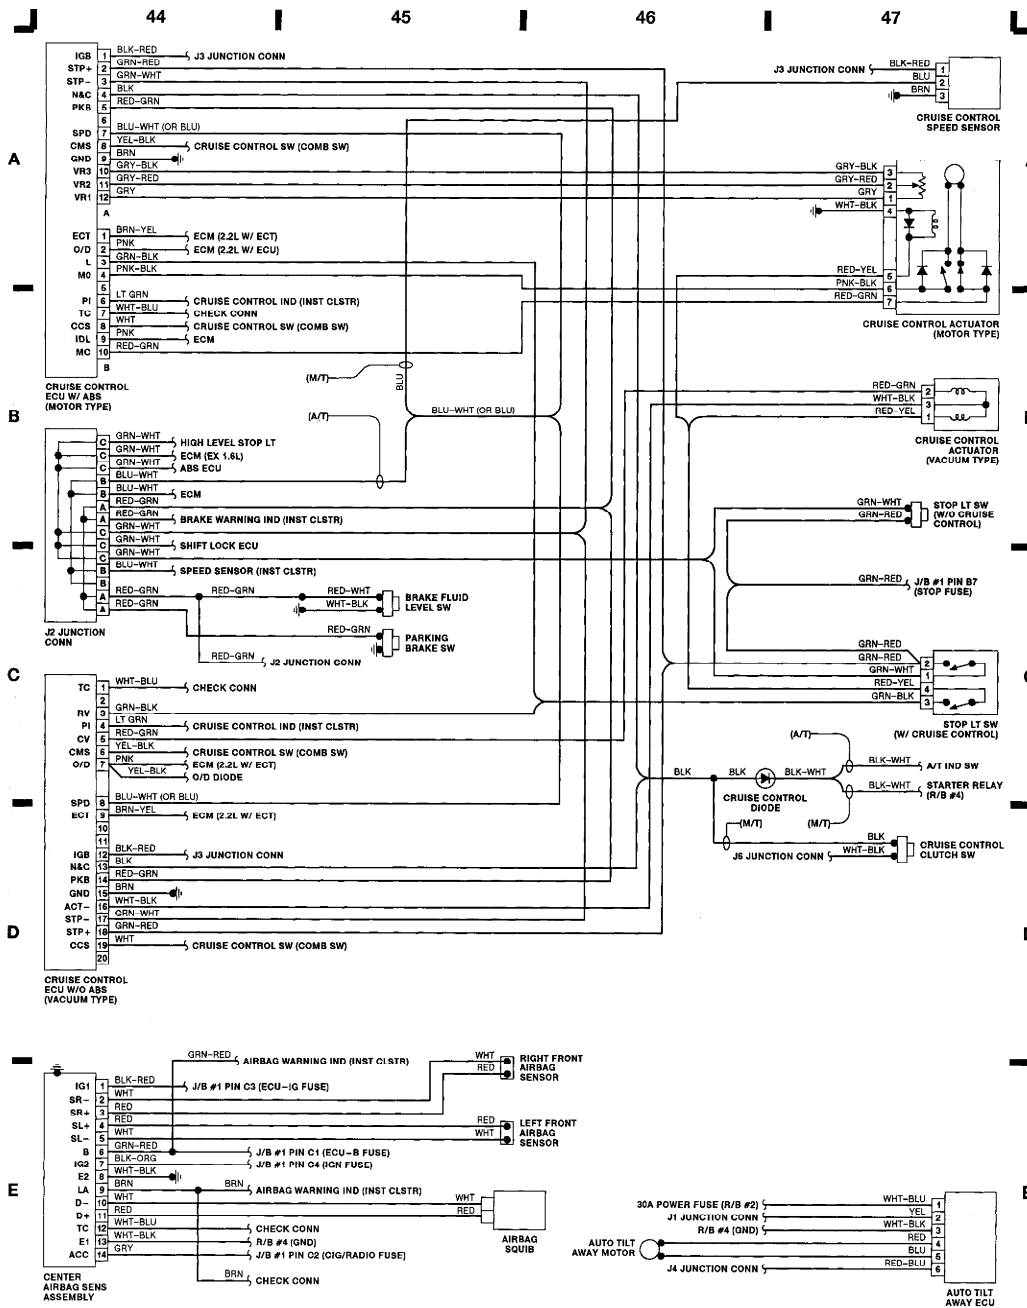


Fig. 12: Cruise Control System, Top Stack System (Grid 44-47)

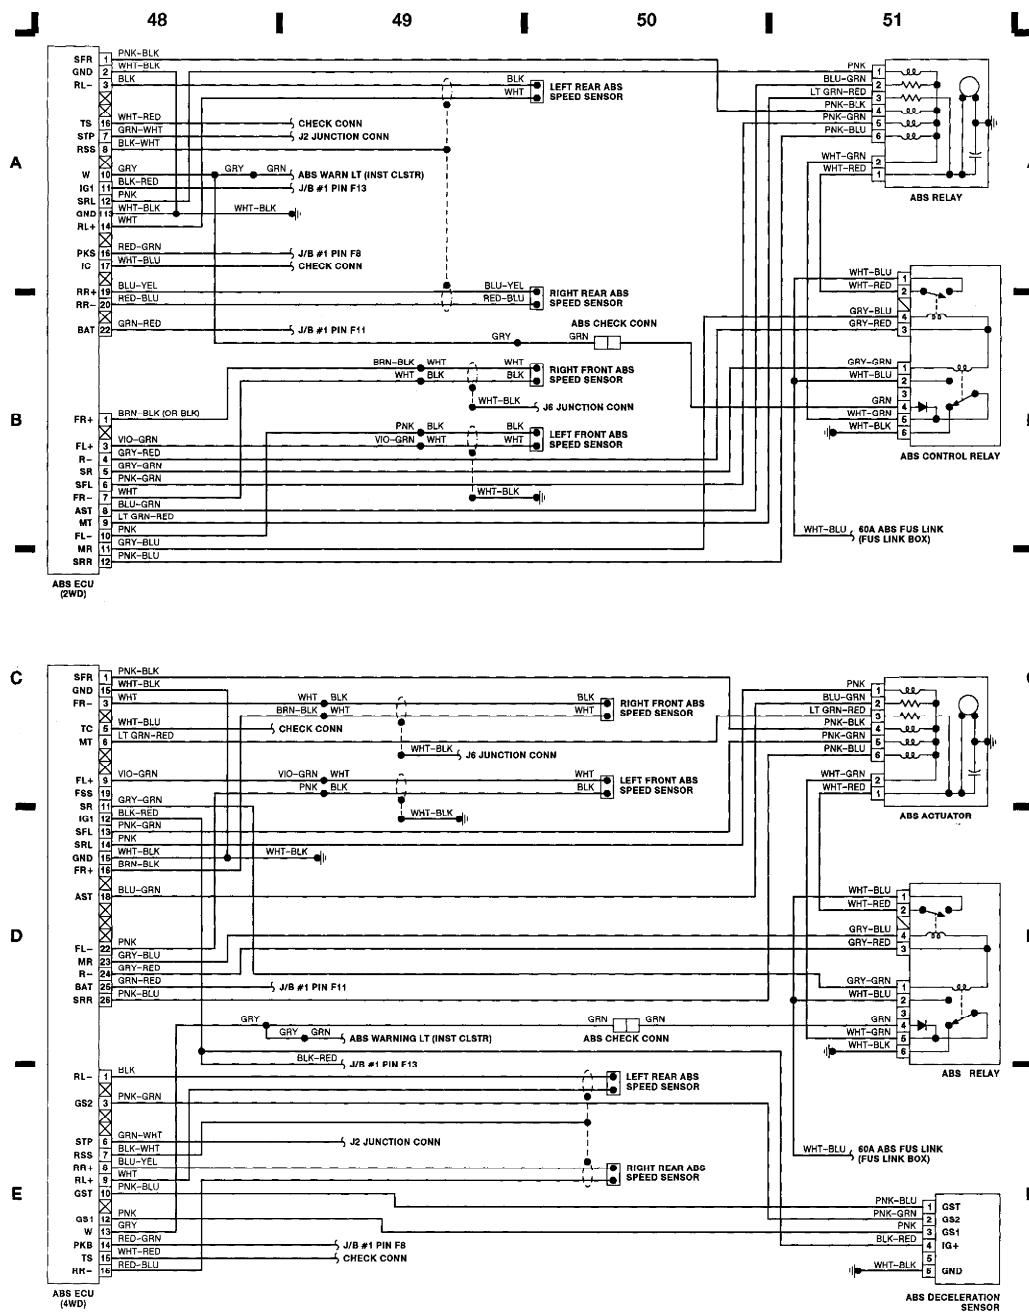


Fig. 13: ABS System (2WD, 4WD) (Grid 48-51)

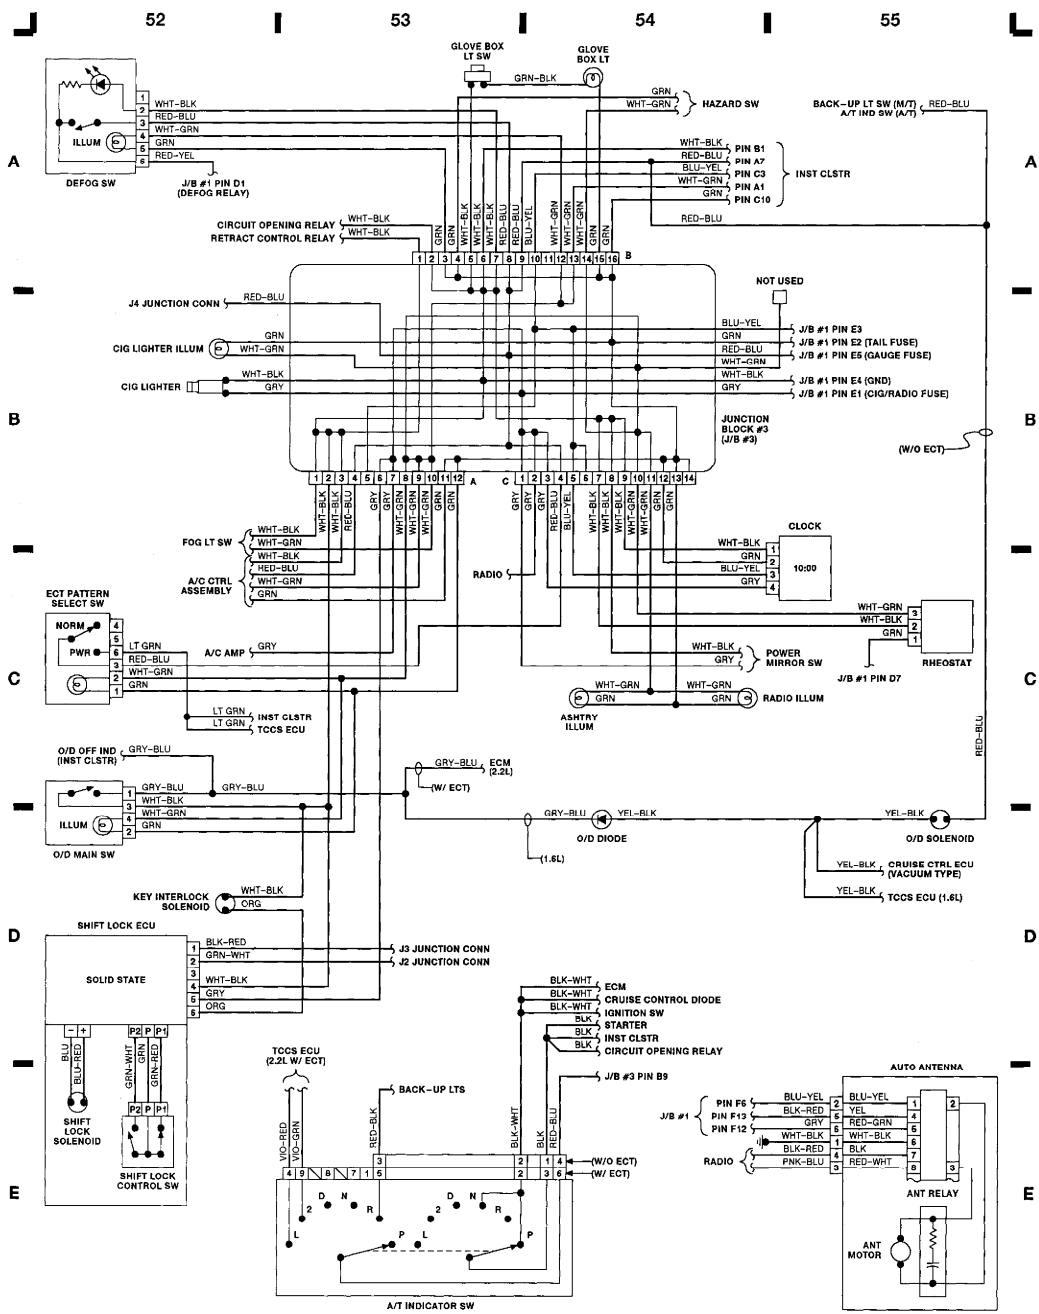


Fig. 14: Junction Block #3, A/T Control, Defogger (Grid 52-55)

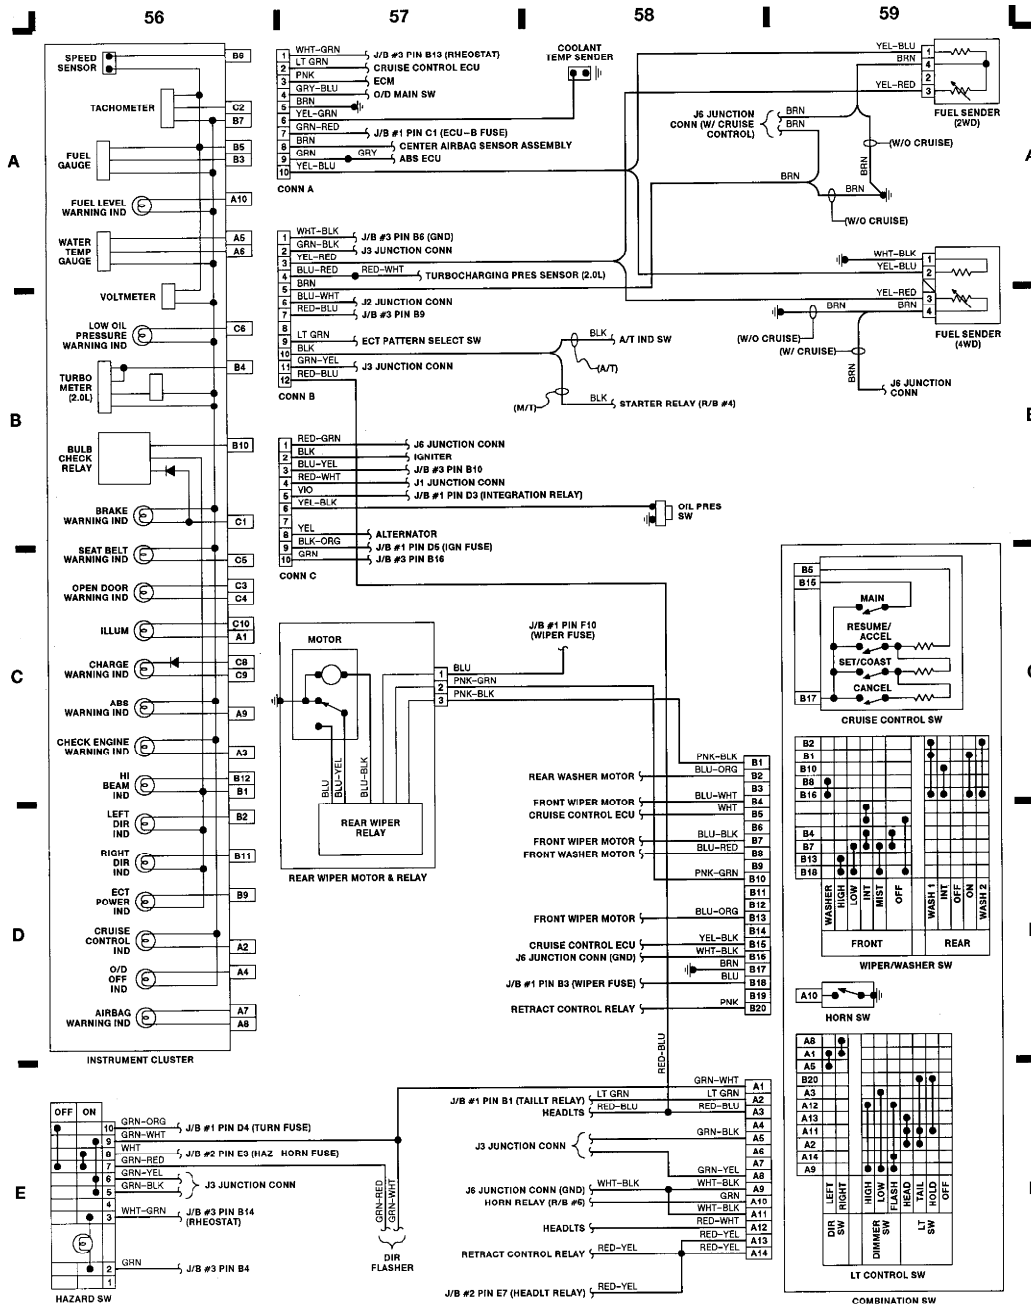


Fig. 15: Instrument Cluster, Combination Switch (Grid 56-59)

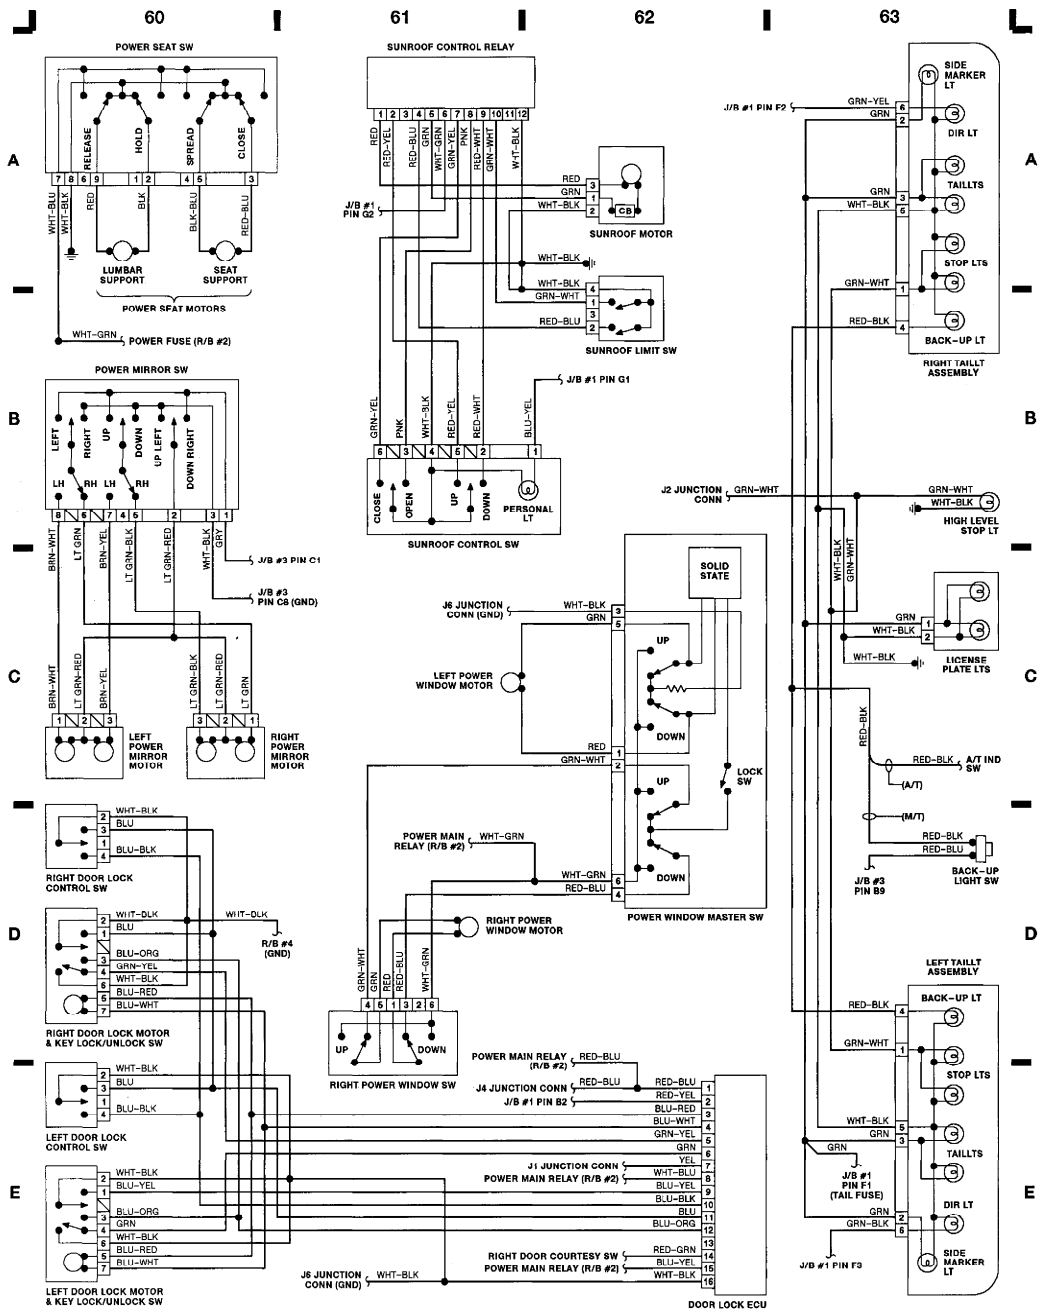


Fig. 16: Power Accessories, Taillights (Grid 60-63)