


# POWER SEAT

\*1 : W/ ABS CANADA M/T (3S-GTE, 5S-FE, 4A-FE)

\*2 : W/O ABS CANADA M/T (3S-GTE, 5S-FE, 4A-FE)

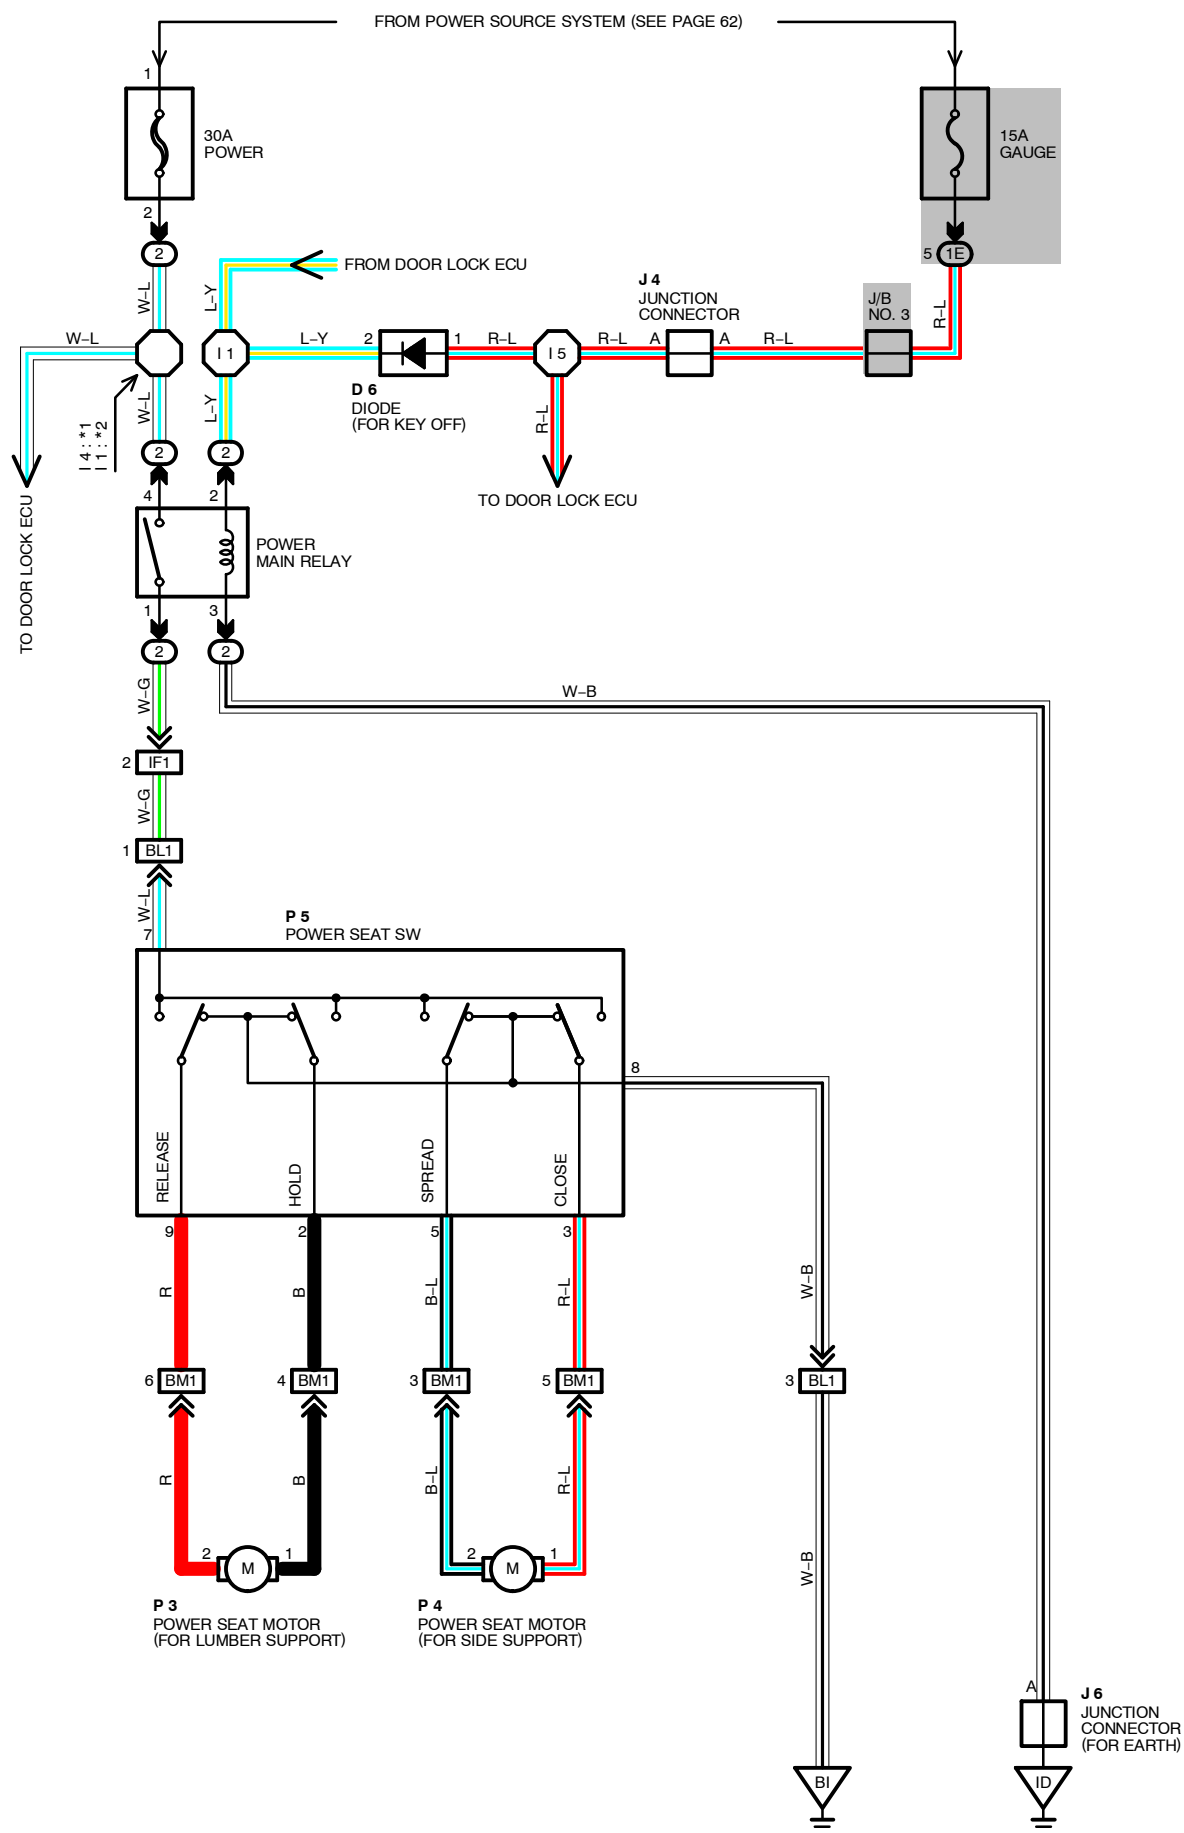

## SERVICE HINTS

### POWER MAIN RELAY

(2) 1-(2) 4 : CLOSED WITH IGNITION SW AT **ON** POSITION

### P 5 POWER SEAT SW

7- GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

8- GROUND : ALWAYS CONTINUITY

### ○ : PARTS LOCATION

| CODE       | SEE PAGE | CODE       | SEE PAGE           | CODE       | SEE PAGE           |
|------------|----------|------------|--------------------|------------|--------------------|
| <b>D 6</b> | 32       | <b>J 6</b> | 33                 | <b>P 4</b> | 34 (L/B), 35 (C/P) |
| <b>J 4</b> | 33       | <b>P 3</b> | 34 (L/B), 35 (C/P) | <b>P 5</b> | 34 (L/B), 35 (C/P) |

### ○ : RELAY BLOCKS

| CODE     | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION) |
|----------|----------|-------------------------------------|
| <b>2</b> | 26       | R/B NO. 2 (LEFT KICK PANEL)         |

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE      | SEE PAGE | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|-----------|----------|------------------------------------------------------|
| <b>1E</b> | 20       | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)            |

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE       | SEE PAGE             | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------------|----------------------|------------------------------------------------------------|
| <b>IF1</b> | 42                   | FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)                 |
| <b>BL1</b> | 46 (L/B)<br>48 (C/P) | FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL) |
| <b>BM1</b> | 46 (L/B)<br>48 (C/P) | FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)         |

### ▽ : GROUND POINTS

| CODE      | SEE PAGE             | GROUND POINTS LOCATION       |
|-----------|----------------------|------------------------------|
| <b>ID</b> | 42                   | LEFT KICK PANEL              |
| <b>BI</b> | 46 (L/B)<br>48 (C/P) | UNDER THE LEFT CENTER PILLAR |

### ○ : SPLICE POINTS

| CODE       | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE       | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------------|----------|---------------------------------|------------|----------|---------------------------------|
| <b>I 1</b> | 44       | COWL WIRE                       | <b>I 5</b> | 44       | COWL WIRE                       |
| <b>I 4</b> |          |                                 |            |          |                                 |

**D 6** BLACK




**J 4**



(HINT : SEE PAGE 7)

**J 6**

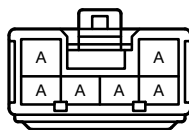

(HINT : SEE PAGE 7)

**P 3**



**P 4** BLUE



**P 5**

