



RADIO AND PLAYER (w/ CD PLAYER)

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

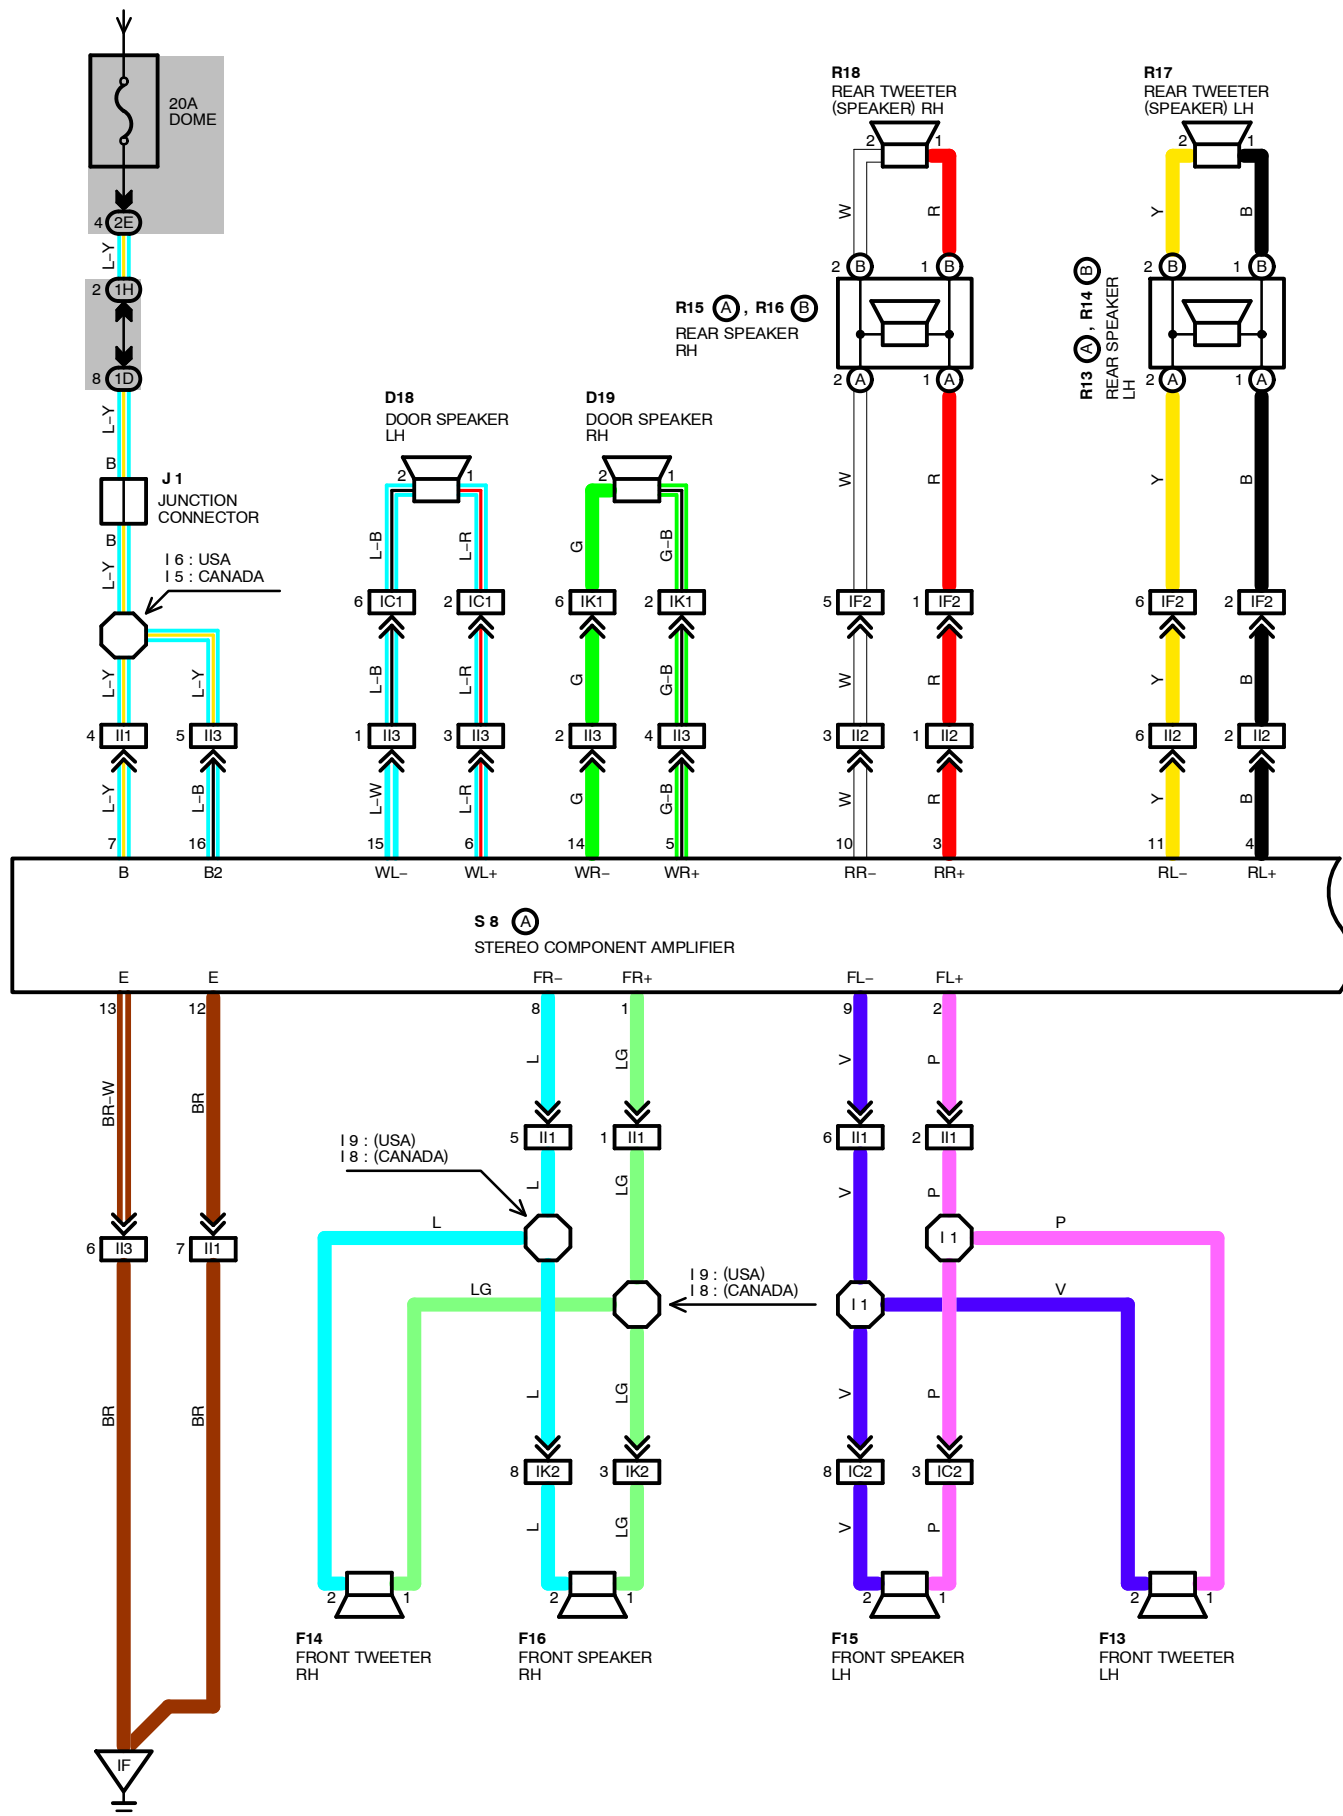

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

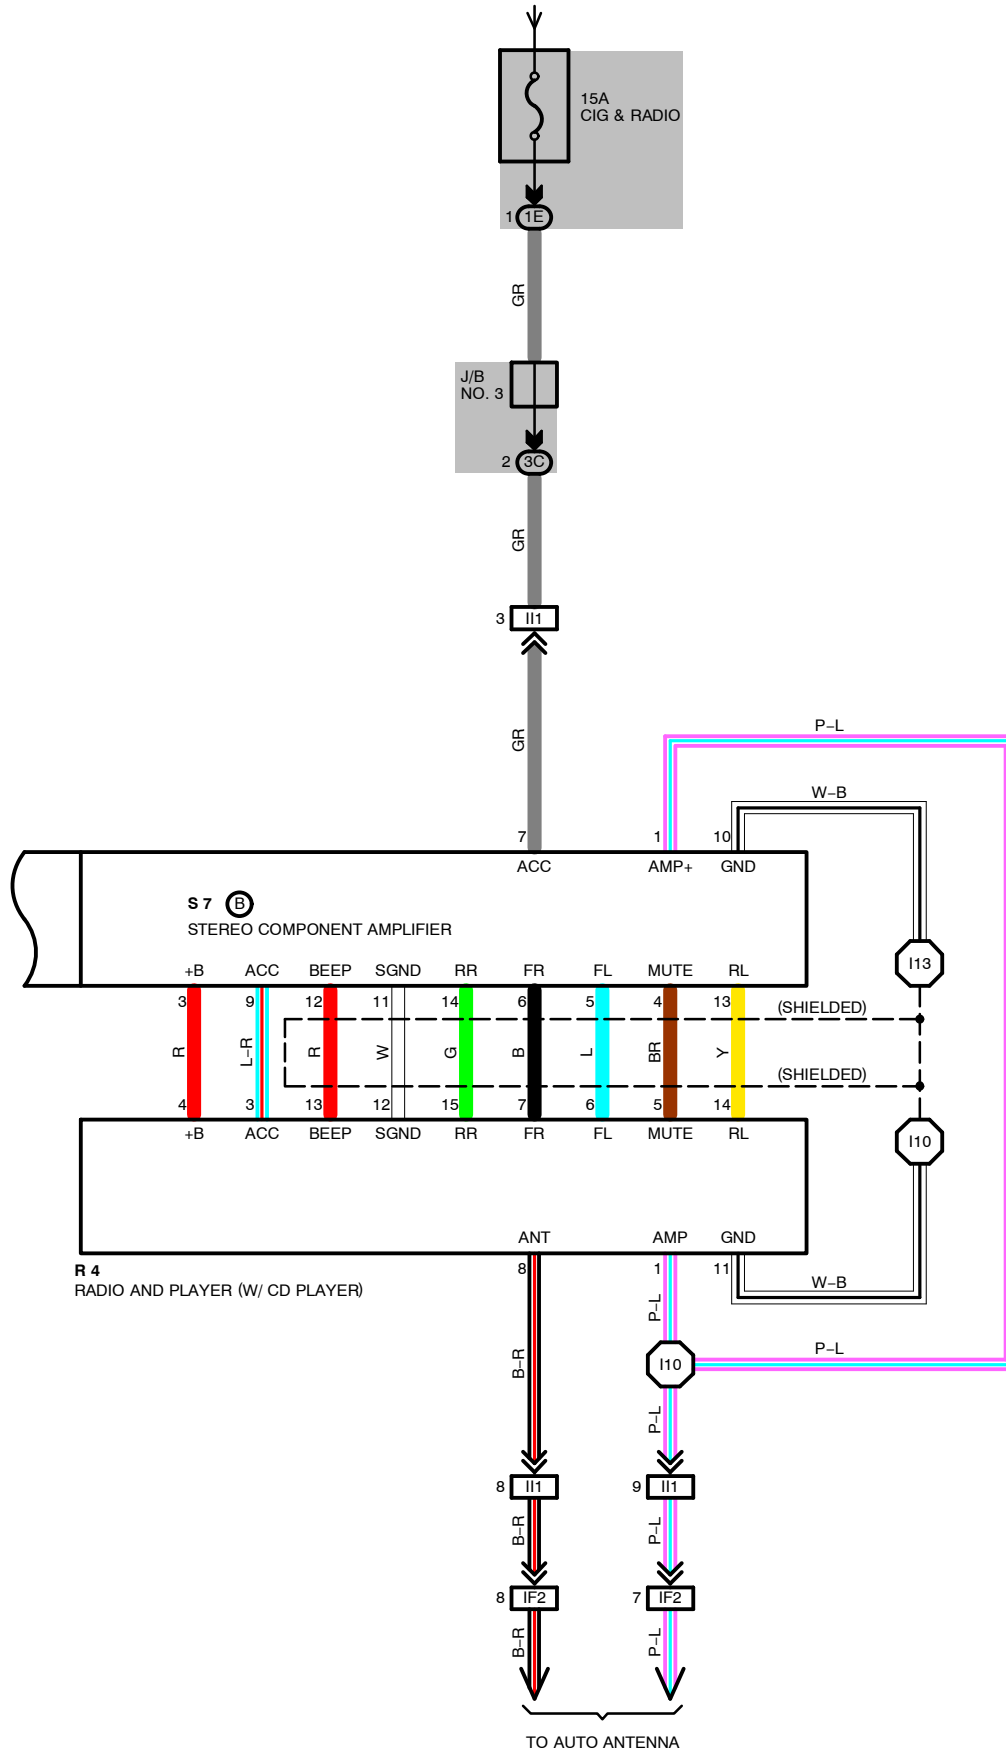

RADIO AND PLAYER (w/ CD PLAYER)

SERVICE HINTS

S 7 (B), S 8 (A) STEREO COMPONENT AMPLIFIER

(A) 7, (A)16-GROUND : ALWAYS APPROX. 12 VOLTS

(B) 7-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** OR **ACC** POSITION

(A)12, (A)13-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D18	34 (L/B), 35 (C/P)	J 1	33	R17	34 (L/B), 35 (C/P)
D19	34 (L/B), 35 (C/P)	R 4	33	R18	34 (L/B), 35 (C/P)
F13	33	R13 A	34 (L/B), 35 (C/P)	S 7 B	33
F14	33	R14 B	34 (L/B), 35 (C/P)	S 8 A	33
F15	34 (L/B), 35 (C/P)	R15 A	34 (L/B), 35 (C/P)		
F16	34 (L/B), 35 (C/P)	R16 B	34 (L/B), 35 (C/P)		

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
	22 (2WD)	
2E	23 (ALL-TRAC/4WD)	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)
3C	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	42	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IC2		
IF2	42	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
II1		
II2	44	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II3	44	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF ALL-TRAC/4WD)
	44	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF 2WD)
IK1		
IK2	44	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	42	INSTRUMENT PANEL BRACE RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 1			I 9	44	COWL WIRE
I 5	44	COWL WIRE	I10	44	CONSOLE BOX WIRE (2WD)
I 6			I13	44	CONSOLE BOX WIRE
I 8					

D18, D19 GRAY




F13, F14



F15, F16




J 1



(HINT: SEE PAGE 7)

R 4

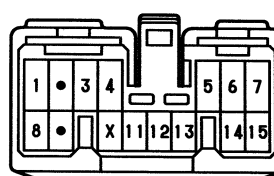

R13 (A), R15 (A)




R14 (B), R16 (B)



R17, R18



S 7 (B)

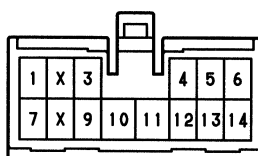

S 8 (A)

