


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[3S-GTE]

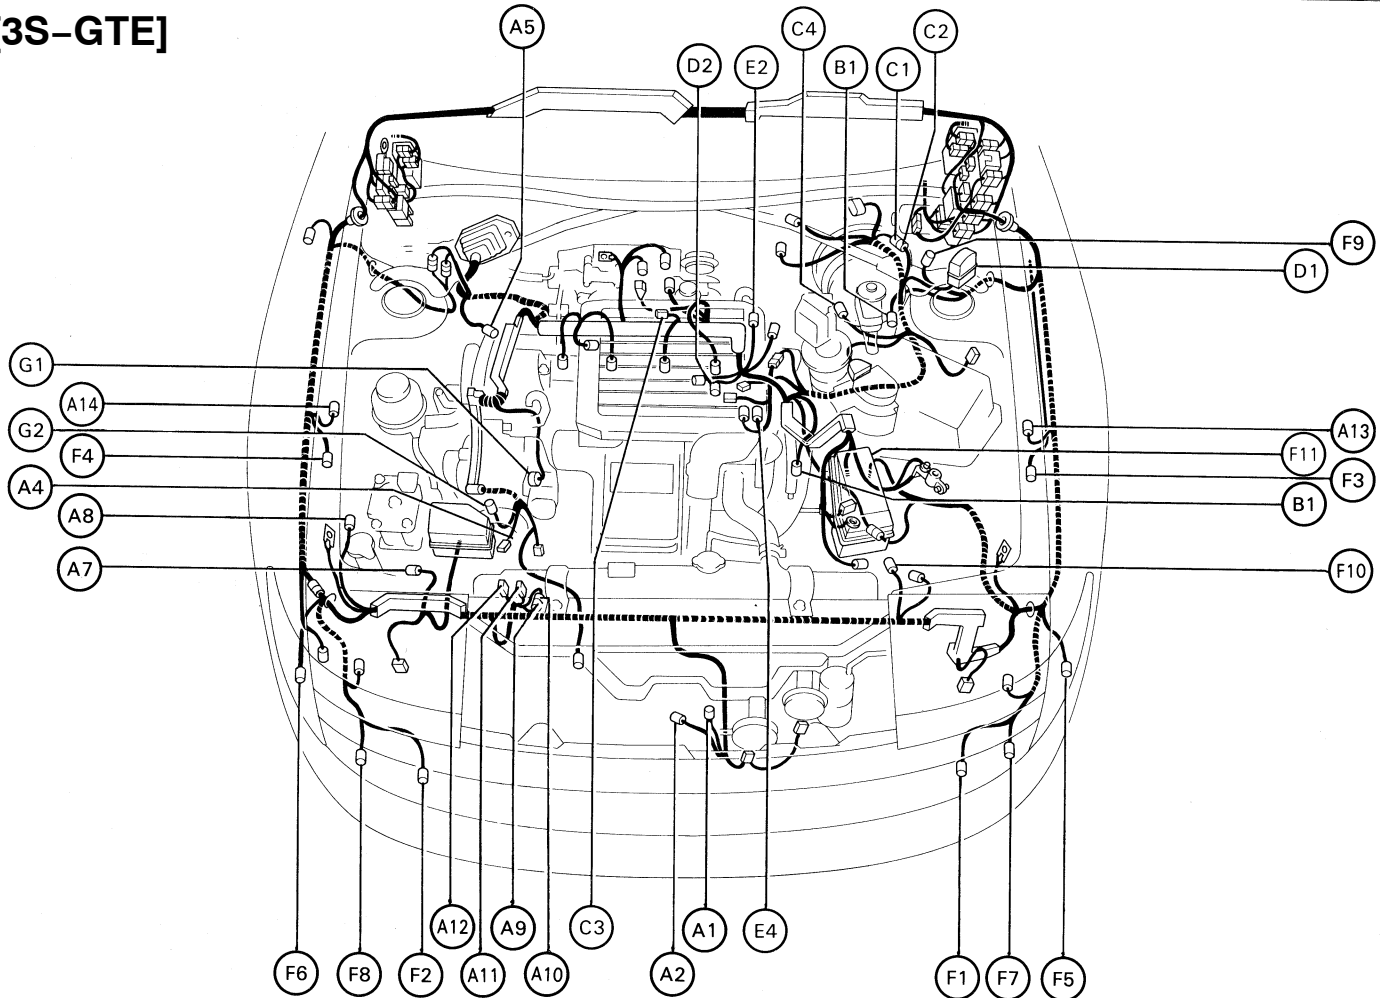

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Compressor Sensor
- A 5 A/C Pressure SW or Short Pin
- A 7 ABS Actuator
- A 8 ABS Actuator
- A 9 ABS Check Connector
- A 10 ABS Check Connector
- A 11 ABS Relay
- A 12 ABS Relay
- A 13 ABS Speed Sensor Front LH (3S-GTE)
- A 14 ABS Speed Sensor Front RH (3S-GTE)

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid Level SW

- C 1 Check Connector (for Fan Check)
- C 2 Check Connector (for Fan Check)
- C 3 Cold Start Injector
- C 4 Cruise Control Actuator


- D 1 Data Link Connector 1 (Check Connector)
- D 2 Distributor
- E 2 EGR Gas Temp. Sensor (for California) or Short Pin (for Ex. California)
- E 4 Engine Coolant Temperature Sensor (EFI Water Temp. Sensor)

- F 1 Fog Light LH
- F 2 Fog Light RH
- F 3 Front Airbag Sensor LH
- F 4 Front Airbag Sensor RH
- F 5 Front Side Marker Light LH
- F 6 Front Side Marker Light RH
- F 7 Front Turn Signal Light and Clearance Light LH
- F 8 Front Turn Signal Light and Clearance Light RH
- F 9 Front Wiper Motor
- F 10 Fuel Pump Resistor
- F 11 Fuse Box (All-Trac/4WD)

- G 1 Generator (Alternator)
- G 2 Generator (Alternator)

Position of Parts in Engine Compartment

[3S-GTE]

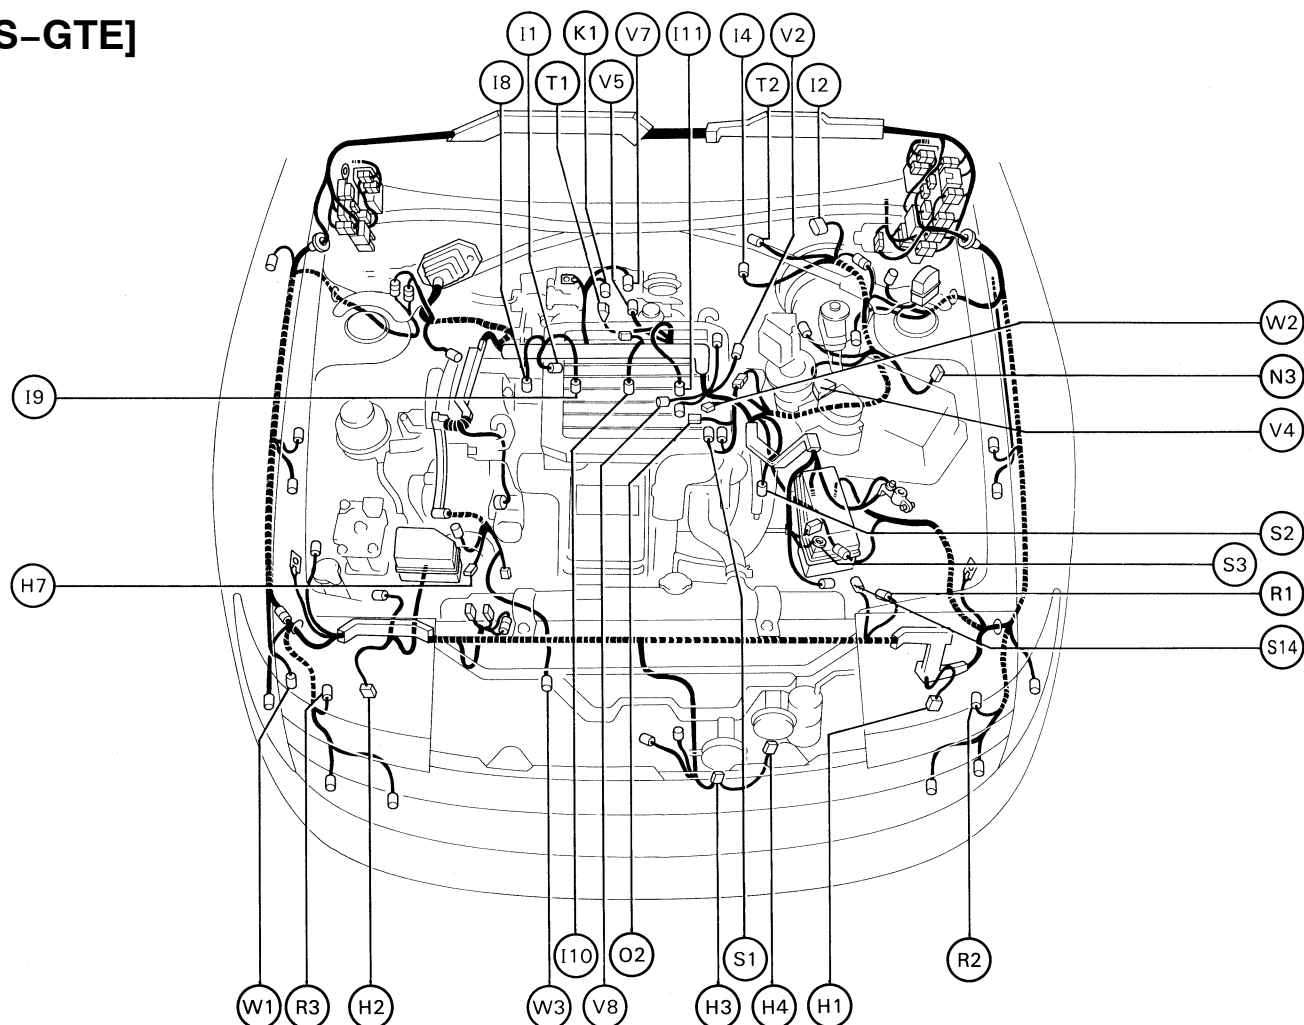

H 1 Headlight LH
 H 2 Headlight RH
 H 3 Horn LH
 H 4 Horn RH
 H 7 Heated Oxygen Sensor (Oxygen Sensor)

I 1 Idle Air Control Valve (ISC Valve)
 I 2 Igniter
 I 4 Ignition Coil
 I 8 Injector No. 1
 I 9 Injector No. 2
 I 10 Injector No. 3
 I 11 Injector No. 4

K 1 Knock Sensor

N 3 Noise Filter (for Ignition System)

O 2 Oil Pressure SW

R 1 Radiator Fan Motor
 R 2 Retract Motor LH
 R 3 Retract Motor RH

S 1 Start Injector Time SW
 S 2 Starter
 S 3 Starter
 S 14 SFI Resistor (EFI Resistor)

T 1 Throttle Position Sensor
 T 2 Turbo Charging Pressure Sensor


V 2 Vehicle Speed Sensor ((Speed Sensor)
 (for Cruise Control System)
 V 4 Volume Air Flow (Air Flow Meter)
 V 5 VSV (for EGR System)
 V 7 VSV (for T-VIS)
 V 8 VSV (for Turbo Charging Pressure)

W 1 Washer Motor
 W 2 Water Temp. Sender
 W 3 Water Temp. SW (for Fans Control)

ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[5S-FE]

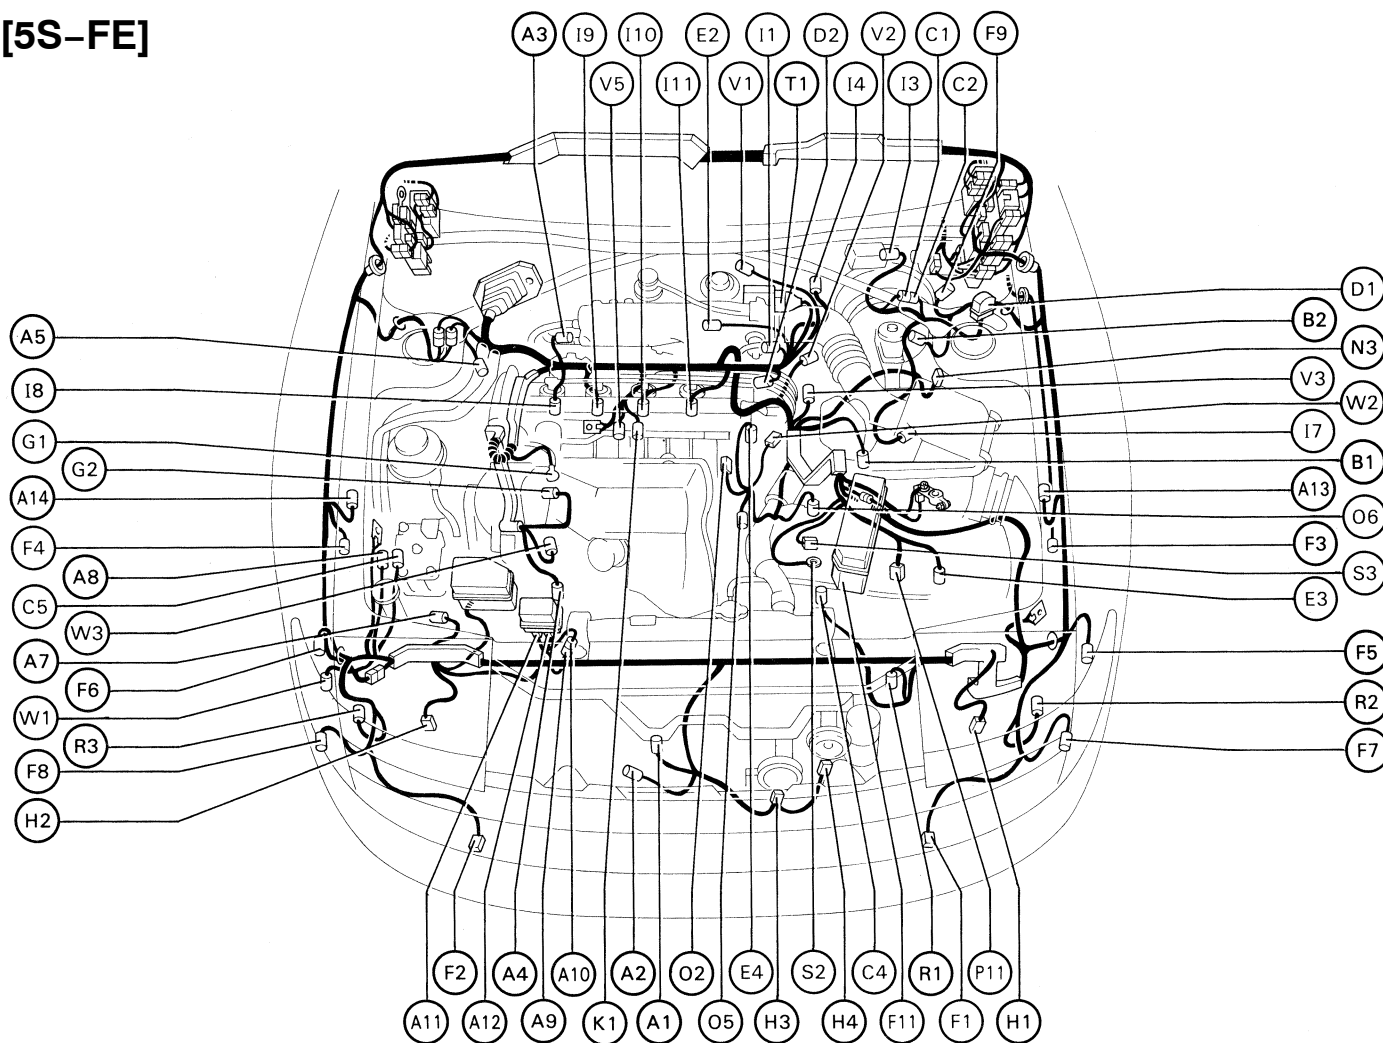

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Idle-Up VSV
- A 4 A/C Magnetic Clutch (4A-FE) or A/C Magnetic Clutch and Compressor Sensor (5S-FE)
- A 5 A/C Pressure SW or Short Pin
- A 7 ABS Actuator (5S-FE)
- A 8 ABS Actuator (5S-FE)
- A 9 ABS Check Connector (5S-FE)
- A 10 ABS Check Connector (5S-FE)
- A 11 ABS Relay (5S-FE)
- A 12 ABS Relay (5S-FE)
- A 13 ABS Speed Sensor Front LH (5S-FE)
- A 14 ABS Speed Sensor Front RH (5S-FE)

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid Level SW

- C 1 Check Connector (for Fan Check)
- C 2 Check Connector (for Fan Check)
- C 4 Cruise Control Actuator (w/ ABS of 5S-FE)
- C 5 Cruise Control Actuator (w/o ABS)

- D 1 Data Link Connector 1 (Check Connector)
- D 2 Distributor (5S-FE)

- E 2 EGR Gas Temp. Sensor (for California)
- E 3 Electronic Controlled Transmission Solenoid (5S-FE)
- E 4 Engine Coolant Temp. Sensor (EFI Water Temp. Sensor)


- F 1 Fog Light LH
- F 2 Fog Light RH
- F 3 Front Airbag Sensor LH
- F 4 Front Airbag Sensor RH
- F 5 Front Side Marker Light LH
- F 6 Front Side Marker Light RH
- F 7 Front Turn Signal Light and Clearance Light LH
- F 8 Front Turn Signal Light and Clearance Light RH
- F 9 Front Wiper Motor
- F 11 Fuse Box (2WD)

- G 1 Generator (Alternator)
- G 2 Generator (Alternator)

- H 1 Headlight LH
- H 2 Headlight RH
- H 3 Horn LH
- H 4 Horn RH
- H 8 Heated Oxygen Sensor (Oxygen Sensor (for Ex. California of 4A-FE))

Position of Parts in Engine Compartment


[4A-FE]

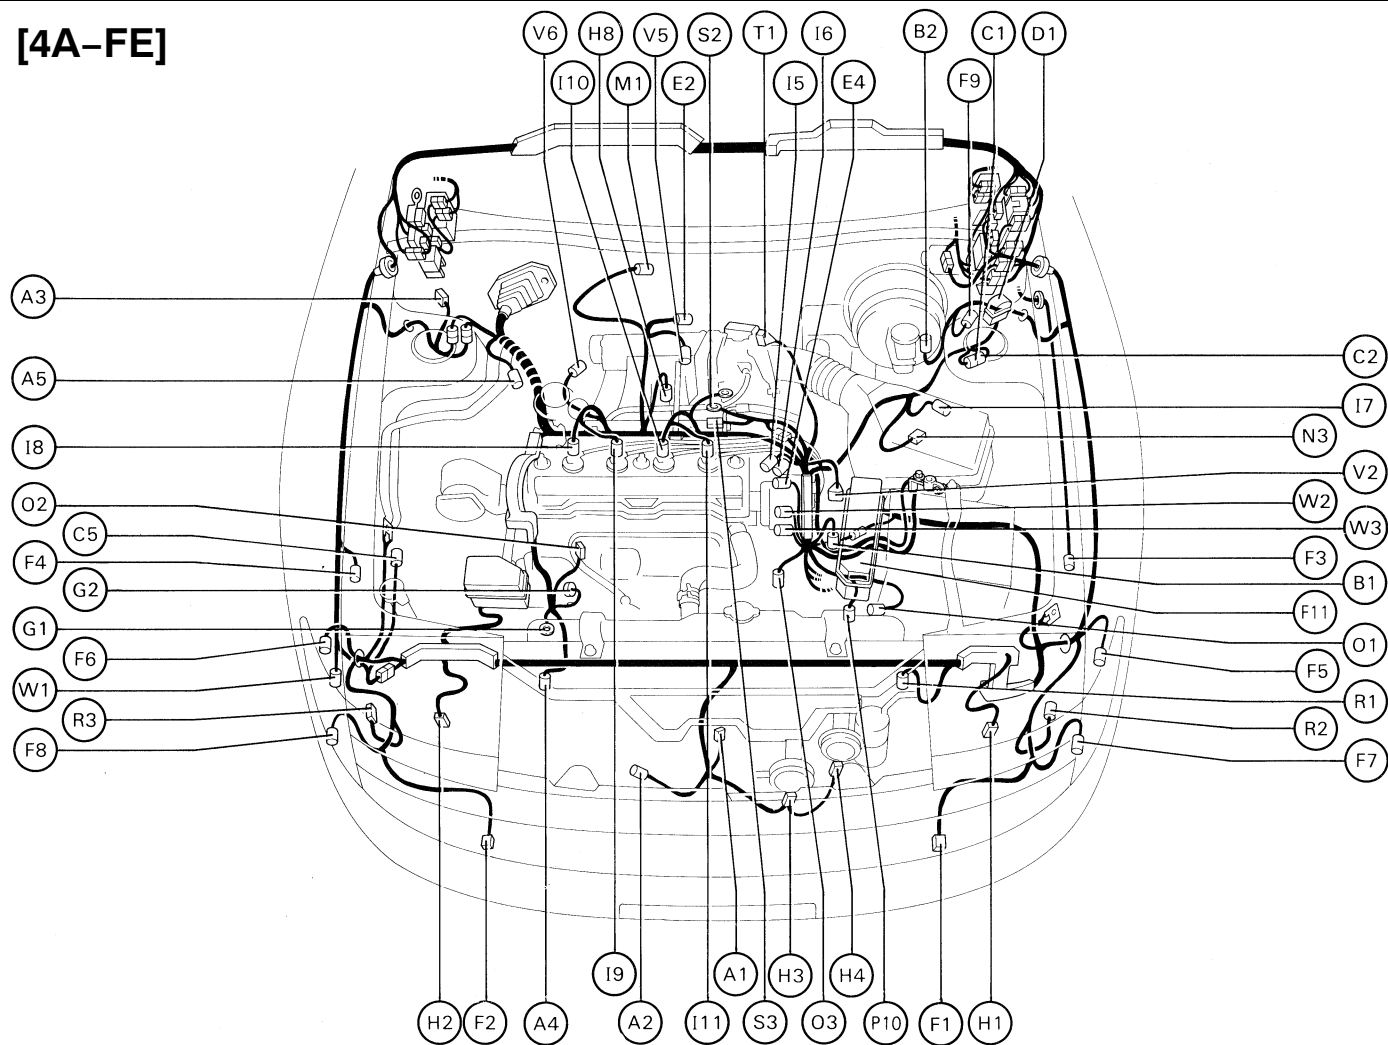

- | | |
|--|--|
| <p>I 1 Idle Air Control Valve (ISC Valve) (5S-FE)</p> <p>I 3 Igniter (5S-FE)</p> <p>I 4 Ignition Coil (5S-FE)</p> <p>I 5 IIA (4A-FE)</p> <p>I 6 IIA (4A-FE)</p> <p>I 7 Intake Air Temp. Sensor (In-Air Temp. Sensor)</p> <p>I 8 Injector No.1</p> <p>I 9 Injector No.2</p> <p>I 10 Injector No.3</p> <p>I 11 Injector No.4</p>
<p>K 1 Knock Sensor</p>
<p>M 1 Manifold Absolute Pressure Sensor (Vacuum Sensor)</p>
<p>N 3 Noise Filter (for Ignition System)</p>
<p>O 1 O/D Solenoid</p> <p>O 2 Oil Pressure SW</p> <p>O 3 Oxygen Sensor (for California of 4A-FE)</p> <p>O 5 Oxygen Sensor (Main, 5S-FE)</p> <p>O 6 Oxygen Sensor (Sub, 5S-FE)</p> | <p>P 10 Park/Neutral Position SW (Neutral Start SW) and Back-Up Light SW (A/T w/o Electronic Controlled Transmission)</p> <p>P 11 Park/Neutral Position SW (Neutral Start SW), Back-Up Light SW and A/T indicator (A/T w/ Electronic Controlled Transmission of 5S-FE)</p>
<p>R 1 Radiator Fan Motor</p> <p>R 2 Retract Motor LH</p> <p>R 3 Retract Motor RH</p>
<p>S 2 Starter</p> <p>S 3 Starter</p>
<p>T 1 Throttle Position Sensor</p>
<p>V 2 Vehicle Speed Sensor (Speed Sensor) (for Cruise Control System)</p> <p>V 3 Vehicle Speed Sensor (Speed Sensor) (for Electronic Controlled Transmission of 5S-FE)</p> <p>V 5 VSV (for EGR System)</p> <p>V 6 VSV (for Electrical Idle-Up System of 4A-FE)</p>
<p>W 1 Washer Motor</p> <p>W 2 Water Temp. Sender</p> <p>W 3 Water Temp. SW (for Fans Control)</p> |
|--|--|

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

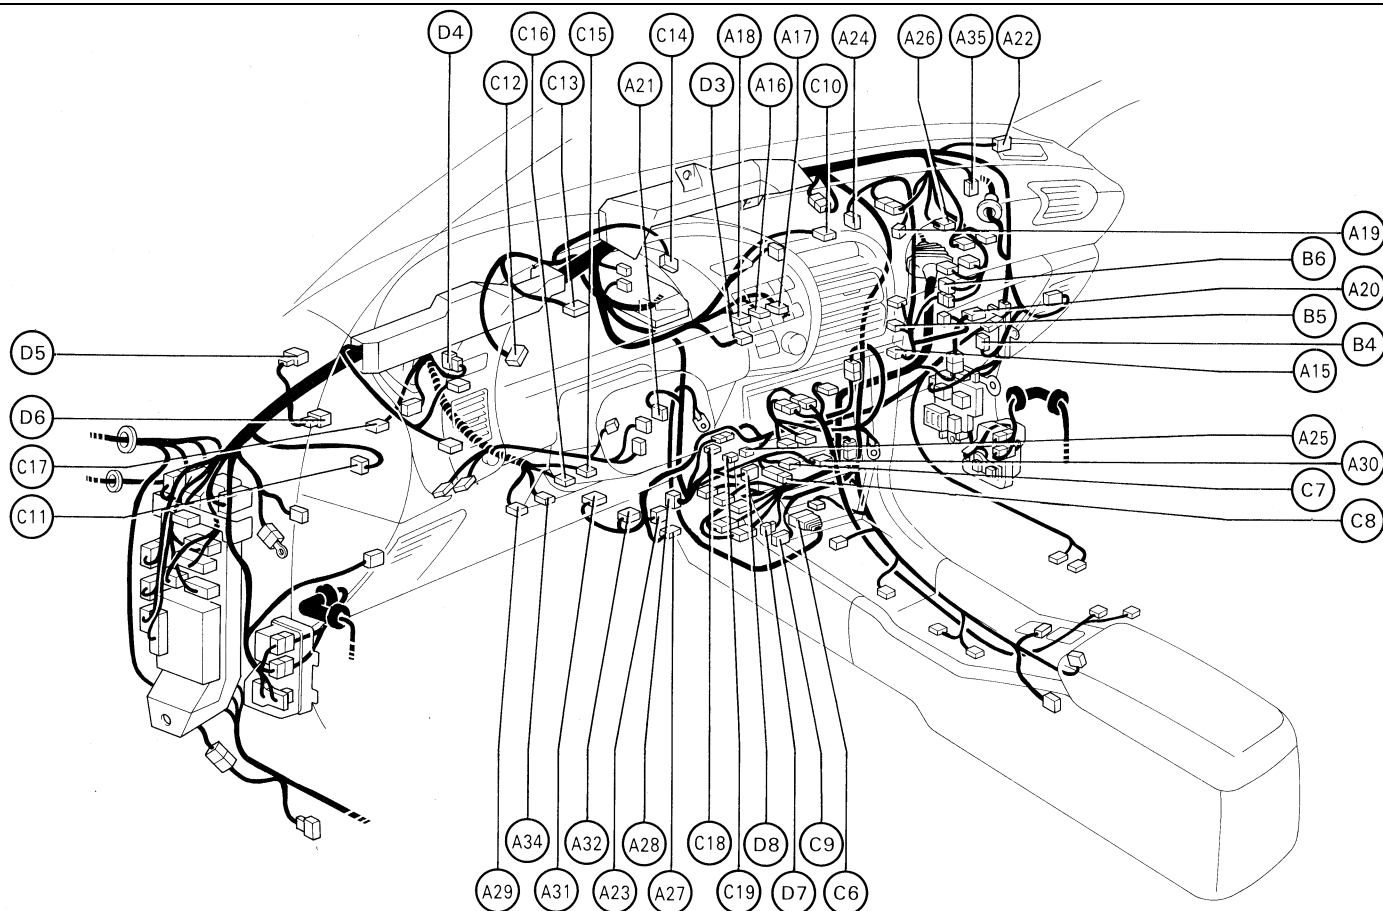


- A 15 A/C Amplifier
- A 16 A/C Control Assembly
- A 17 A/C Control Assembly
- A 18 A/C Control Assembly
- A 19 A/C Evaporator Temp. Sensor
- A 20 A/C Power Transistor
- A 21 A/C Room Temp. Sensor
- A 22 A/C Solar Sensor
- A 23 A/C System Amplifier
- A 24 A/C Thermistor
- A 25 A/C Water Temp. Sensor
- A 26 Air Inlet Control Servo Motor
- A 27 Air Mix Control Servo Motor
- A 28 Air Vent Mode Control Servo Motor
- A 29 Airbag Squib
- A 31 Ashtray Illumination
- A 31 Auto A/C Amplifier
- A 32 Auto A/C Amplifier
- A 34 Auto Tilt Away Actuator
- A 35 Auto Tilt Away ECU

- B 4 Blower Motor
- B 5 Blower Resistor
- B 6 Blower Resistor

- C 6 Center Airbag Sensor Assembly
- C 7 Cigarette Lighter
- C 8 Cigarette Lighter Illumination
- C 9 Circuit Opening Relay
- C 10 Clock
- C 11 Clutch Start SW
- C 12 Combination Meter
- C 13 Combination Meter
- C 14 Combination Meter
- C 15 Combination SW
- C 16 Combination SW
- C 17 Cruise Control Clutch SW
- C 18 Cruise Control ECU
- C 19 Cruise Control ECU

- D 3 Defogger SW
- D 4 Diode (for Cruise Control System)
- D 5 Diode (for Daytime Running Light System)
- D 6 Diode (for Key Off)
- D 7 Diode (for O/D System)
- D 8 Door Lock ECU

Position of Parts in Instrument Panel

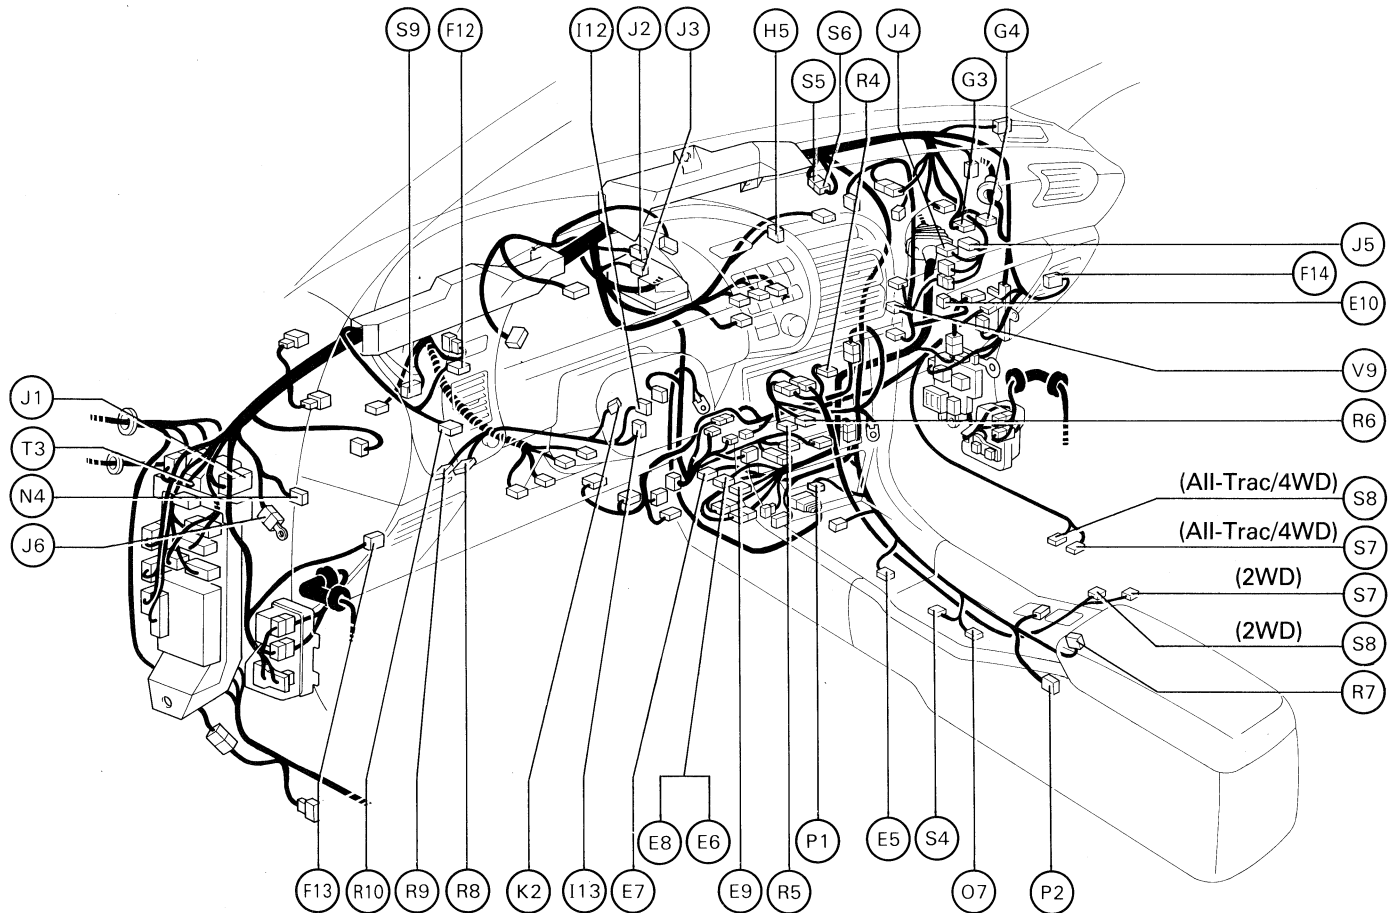


- | | |
|--|---|
| <p>E 5 Electronic Controlled Transmission Pattern Select SW</p> <p>E 6 Engine Control Module (Engine ECU) (4A-FE)</p> <p>E 7 Engine Control Module (Engine and Electronic Controlled Transmission ECU)</p> <p>E 8 Engine Control Module (Engine and Electronic Controlled Transmission ECU) (5S-FE, 3S-GTE)</p> <p>E 9 Engine Control Module (Engine and Electronic Controlled Transmission ECU) (5S-FE, 3S-GTE)</p> <p>E 10 Extra High Speed Relay</p> <p>F 12 Fog Light SW</p> <p>F 13 Front Speaker LH</p> <p>F 14 Front Speaker RH</p> <p>G 3 Glove Box Light</p> <p>G 4 Glove Box Light SW</p> <p>H 5 Hazard SW</p> <p>I 12 Ignition Key Cylinder Light</p> <p>I 13 Ignition SW and Unlock Warning SW</p> <p>J 1 Junction Connector</p> <p>J 2 Junction Connector</p> <p>J 3 Junction Connector</p> <p>J 4 Junction Connector</p> <p>J 5 Junction Connector</p> <p>J 6 Junction Connector (for Earth)</p> | <p>K 2 Key Interlock Solenoid</p> <p>N 4 Noise Filter (for Defogger System)</p> <p>O 7 O/D Main SW and A/T Indicator (Shift Lever)</p> <p>P 1 Panel Relay (for Daytime Running Light System)</p> <p>P 2 Parking Brake SW</p> <p>R 4 Radio and Player (w/ CD Player)</p> <p>R 5 Radio and Player (w/o CD Player)</p> <p>R 6 Radio and Player (w/o CD Player)</p> <p>R 7 Remote Control Mirror SW</p> <p>R 8 Retract Control Relay</p> <p>R 9 Retract Control Relay (for Canada)</p> <p>R 10 Rheostat</p> <p>S 4 Shift Lock ECU</p> <p>S 5 Short Pin (for Daytime Running Light System)</p> <p>S 6 Short Pin (for Daytime Running Light System)</p> <p>S 7 Stereo Component Amplifier (w/CD Player)</p> <p>S 8 Stereo Component Amplifier (w/CD Player)</p> <p>S 9 Stop Light SW (w/o Cruise Control System) or Stop Light and Cruise Control Stop SW</p> <p>T 3 Turn Signal Flasher</p> <p>V 9 VSV (for A/C Idle-Up)</p> |
|--|---|

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[L/B]

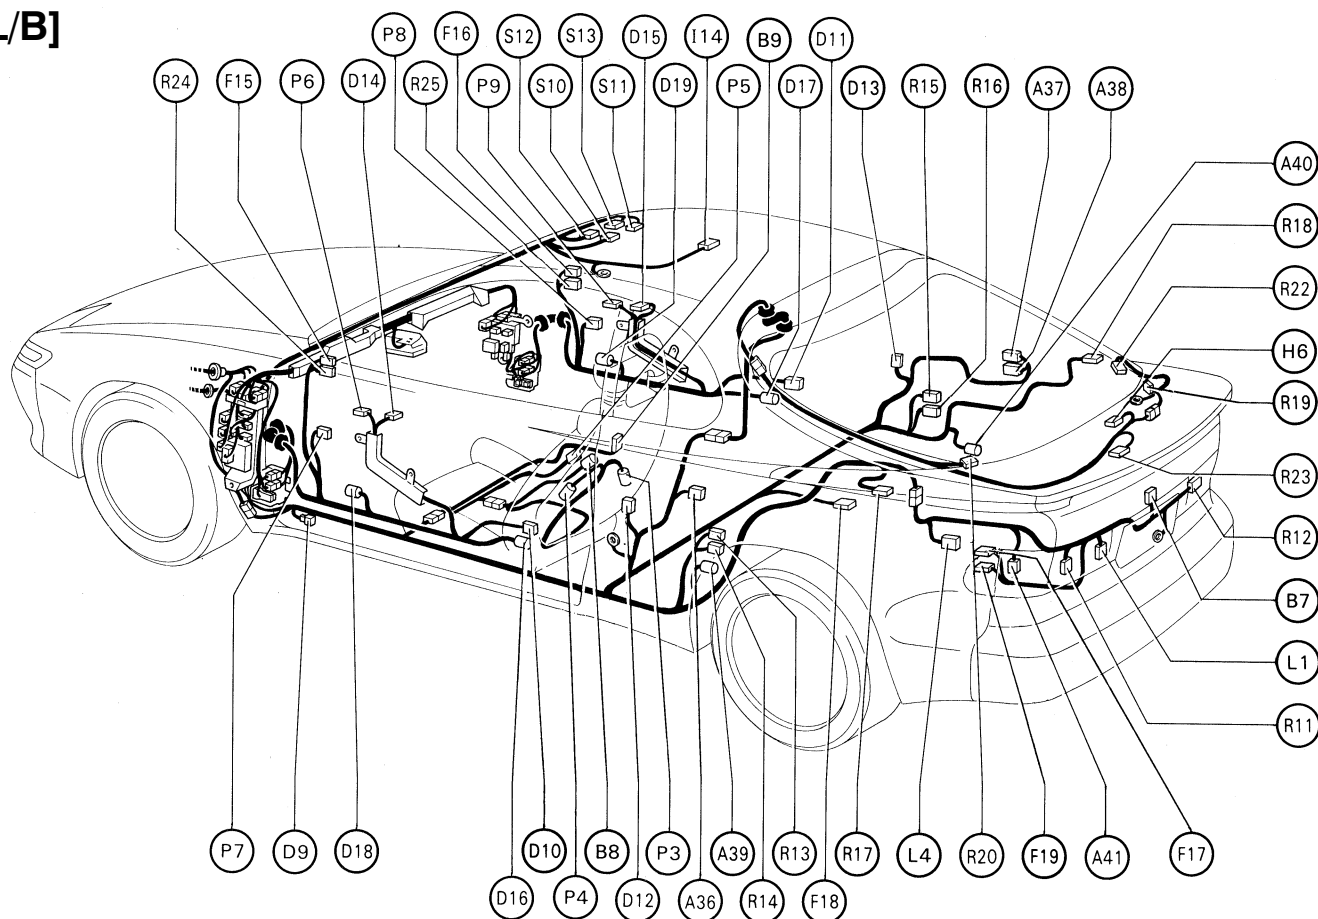

- A 36 ABS Deceleration Sensor (All-Trac/4WD)
- A 37 ABS ECU (L/B)
- A 38 ABS ECU (L/B)
- A 39 ABS Speed Sensor Rear LH (L/B)
- A 40 ABS Speed Sensor Rear RH (L/B)
- A 41 Auto Antenna Control Relay and Motor

- B 7 Back Door Control SW (L/B)
- B 8 Buckle SW (w Power Seat)
- B 9 Buckle SW (w/o Power Seat)

- D 9 Diode
- D 10 Door Courtesy Light LH
- D 11 Door Courtesy Light RH
- D 12 Door Courtesy SW LH
- D 13 Door Courtesy SW RH
- D 14 Door Lock Control SW LH
- D 15 Door Lock Control SW RH

- D 16 Door Lock Motor, Door Unlock Detection SW LH and Key Lock and Unlock SW LH
- D 17 Door Lock Motor, Door Unlock Detection SW RH and Key Lock and Unlock SW RH
- D 18 Door Speaker LH
- D 19 Door Speaker RH


- F 15 Front Tweeter (Speaker) LH
- F 16 Front Tweeter (Speaker) RH
- F 17 Fuel Pump (All-Trac/4WD)
- F 18 Fuel Pump and Fuel Sender (2WD)
- F 19 Fuel Sender (All-Trac/4WD)

- H 6 High Mount Stop Light

- I 14 Interior Light

Position of Parts in Body

[C/P]

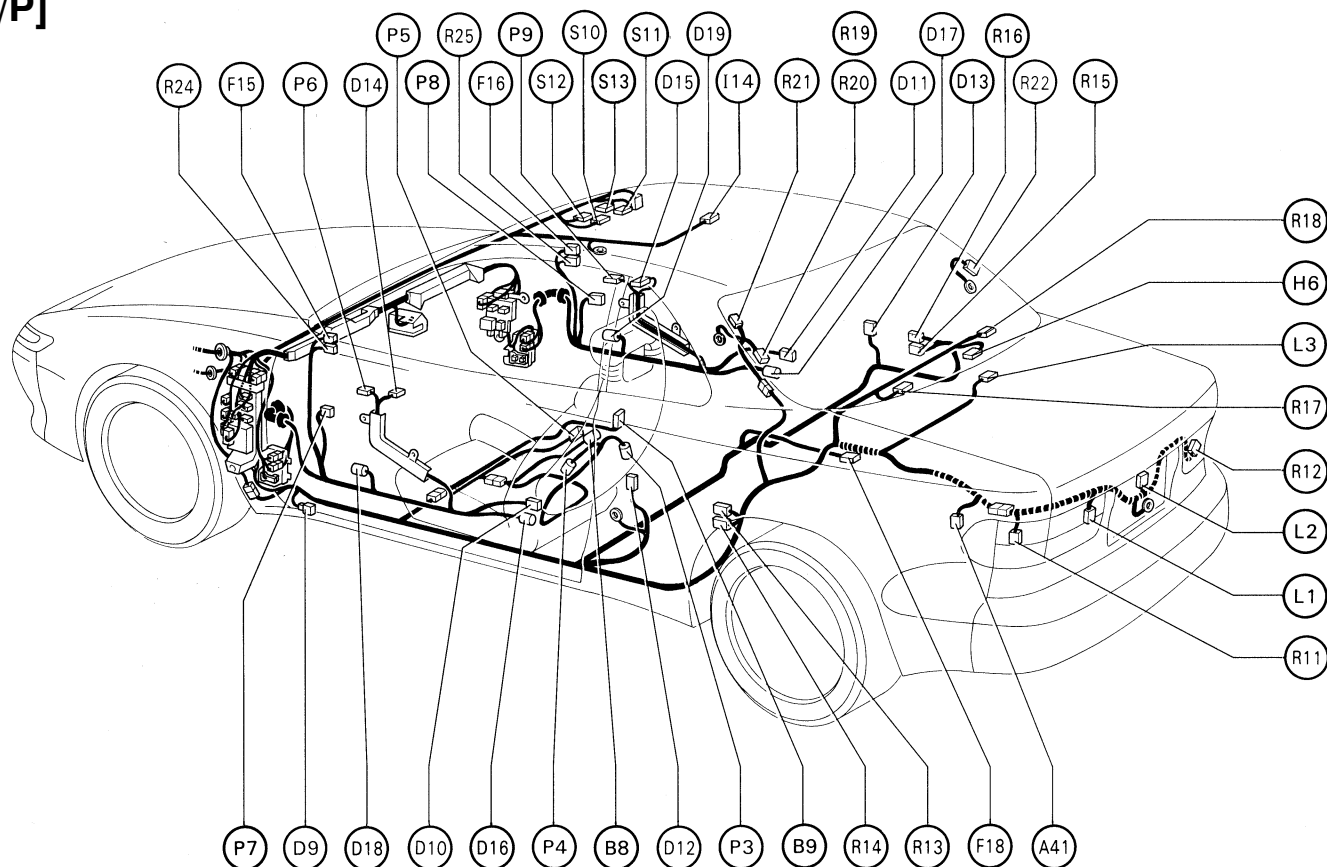

- L 1 License Plate Light
- L 2 Luggage Compartment Door Courtesy SW (C/P)
- L 3 Luggage Compartment Light (C/P)
- L 4 Luggage Compartment Light (L/B)

- P 3 Power Seat Motor (for Lumbar Support)
- P 4 Power Seat Motor (for Side Support)
- P 5 Power Seat SW
- P 6 Power Window Master SW
- P 7 Power Window Motor LH
- P 8 Power Window Motor RH
- P 9 Power Window SW RH

- R 11 Rear Combination Light LH
- R 12 Rear Combination Light RH
- R 13 Rear Speaker LH
- R 14 Rear Speaker LH
- R 15 Rear Speaker RH

- R 16 Rear Speaker RH
- R 17 Rear Tweeter (Speaker) LH
- R 18 Rear Tweeter (Speaker) RH
- R 19 Rear Window Defogger (+, w/ Diversity Antenna)
- R 20 Rear Window Defogger (+, w/o Diversity Antenna)
- R 21 Rear Window Defogger (-, C/P, w/ Diversity Antenna)
- R 22 Rear Window Defogger (-, w/o Diversity Antenna)
- R 23 Rear Wiper Motor and Relay (L/B)
- R 24 Remote Control Mirror LH
- R 25 Remote Control Mirror RH

- S 10 Sun Roof Control Relay
- S 11 Sun Roof Control SW and Personal Light
- S 12 Sun Roof Limit SW
- S 13 Sun Roof Motor