


POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

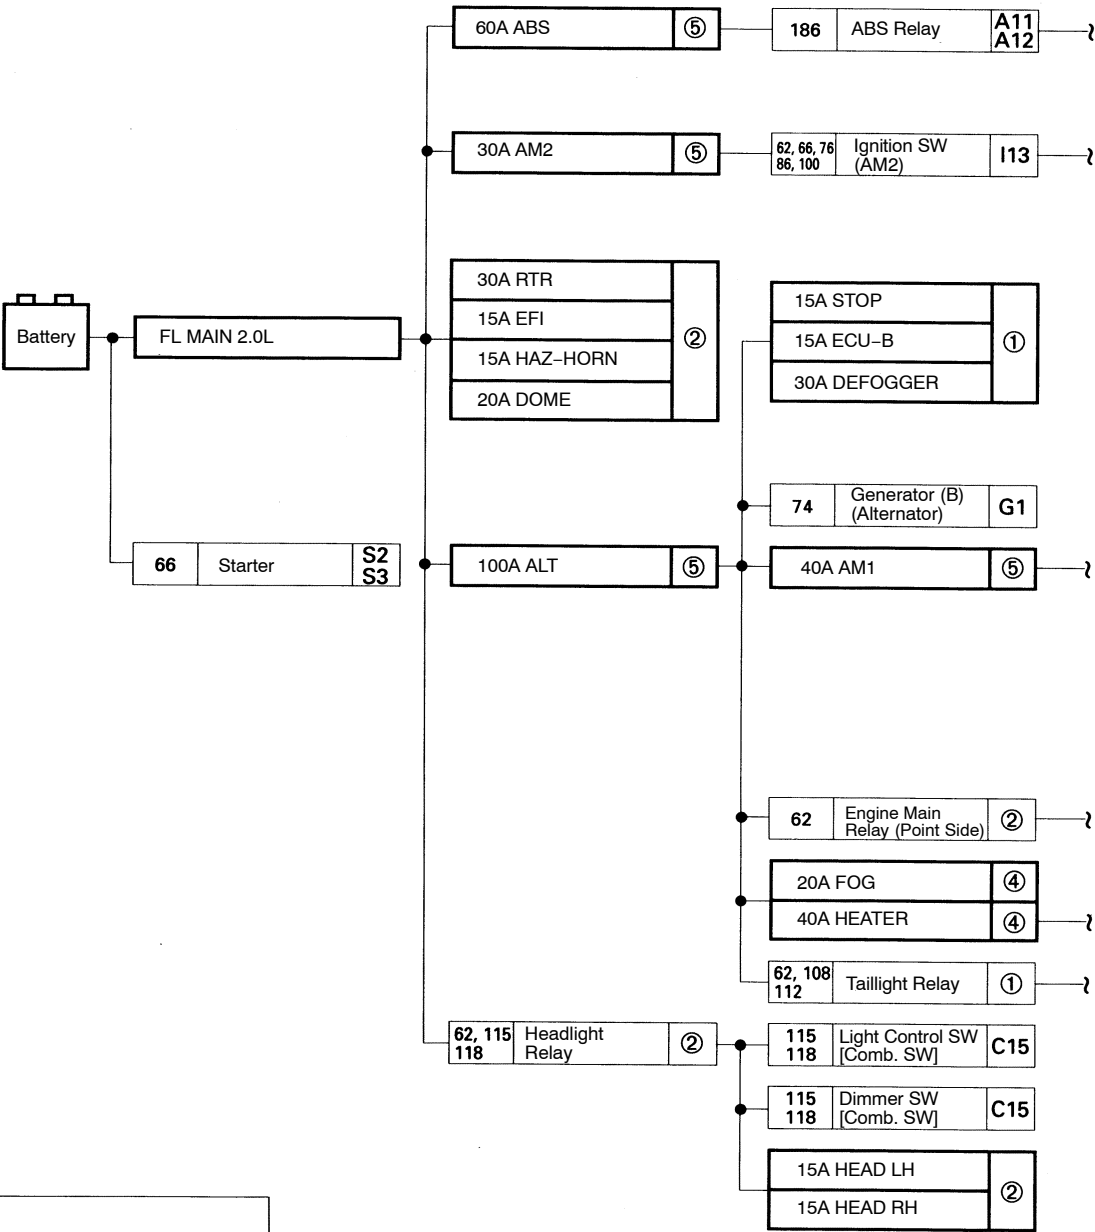

Example

2

Starter

S3

2

15A DOME

2

Code or Location

Parts


* Page Nos. of Related Systems

Location

Electrical Source

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)

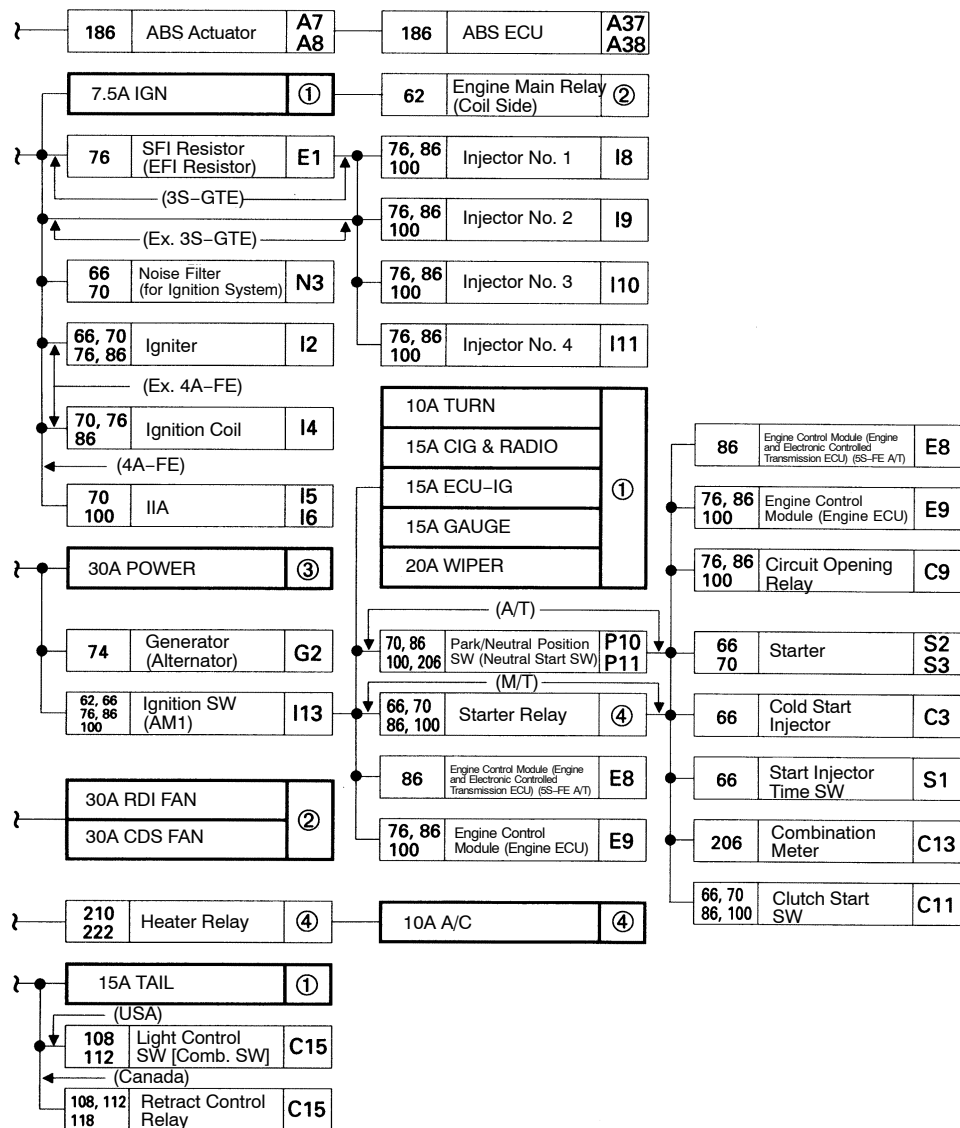

(1) : R/B No. 4 (See page 27) (2) : Fuse Box (F10 See on page 28) (3) : R/B No. 3 (See page 26)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		210 222	222	210 222	186			108 210 222	210 222	210	210 222	210	210	210 222	210 222	108	210	170	186	186	198																				
					Parts		Code or Location		CB or Fuse		A/C Condenser Fan Motor		A/C Idle-Up VSV		A/C Magnetic Clutch		A/C Pressure SW		ABS Actuator		ABS Relay		A/C Amplifier		A/C Control Assembly		A/C Power Transistor		A/C System Amplifier		Air Inlet Control Servo Motor		Air Vent Mode Control Servo Motor		Ashtray Illumination		Auto A/C Amplifier		Auto Tilt Away ECU		ABS Deceleration Sensor (All-Trac/4WD)		ABS ECU	
					A2	A3	A4	A5	A7	A11	A15	A16	A17	A18	A20	A23	A26	A28	A30	A31	A32	A35	A36	A37	A38	A41																		
①	30A	DEFOGGER																																										
	20A	WIPER																																										
	15A	GAUGE		●	●	●	●	●	●	●	●		●	●	●		●	●	●		●	●																						
	7.5A	IGN				●																																						
	15A	ECU-B																					●																					
	10A	TURN																																										
	15A	CIG & RADIO																●	●					●																				
	15A	TAIL								●	●						●							●																				
	15A	ECU-IG																			●		●	●																				
	15A	STOP																					●																					
②	15A	HEAD LH																																										
	15A	HEAD RH																																										
	30A	RTR																																										
	15A	EFI																																										
	20A	DOME																	●					●																				
	15A	HAZ-HORN																																										
	30A	RDI FAN																																										
	30A	CDS FAN	●																																									
③	30A	POWER																		●																								
④	20A	FOG																																										
	10A	A/C		●		●			●		●																																	
	40A	HEATER										●	●							●	●																							

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

(1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	146	146	174	180	174	76 86 100 191	108	108	136 156 160	168	136 141	132	132				141			108 163	100	86 163	76 94
			Parts	Front Wiper and Washer SW [Comb. SW]	Rear Wiper and Washer SW [Comb. SW]	Cruise Control ECU (Motor)	Cruise Control ECU (Vacuum)	Cruise Control ECU	Data Link Connector 1 (Check Connector)	Defogger SW	Diode (for Daytime Running Light System)	Diode (for Key Off)	Diode (for O/D System)	Door Lock ECU	Diode (for Interior System)	Door Courtesy Light LH	Door Courtesy Light RH	Door Courtesy SW LH	Door Courtesy SW RH	Door Lock Motor LH	Door Lock Motor RH	Electronic Controlled Transmission Pattern Select SW	Engine Control Module (Engine ECU)	Engine Control Module (Engine and Electronic Controlled Transmission ECU)	Engine Control Module (Engine ECU)	
			Code or Location																							
CB or Fuse			C16	C18			C19	D1	D3	D5	D6	D7	D8	D9	D10	D11	D12	D13	D16	D17	E5	E6	E7			
①	30A	DEFOGGER																								
	20A	WIPER	●	●																						
	15A	GAUGE				●	●	●	●		●	●	●								●	●				
	7.5A	IGN																								
	15A	ECU-B						●																		
	10A	TURN																								
	15A	CIG & RADIO																			●					
	15A	TAIL								●	●										●					
	15A	ECU-IG			●	●								●												
	15A	STOP			●	●																				
②	15A	HEAD LH																								
	15A	HEAD RH																								
	30A	RTR																								
	15A	EFI						●														●	●	●		
	20A	DOME												●	●	●	●	●								
	15A	HAZ-HORN																								
	30A	RDI FAN																								
	30A	CDS FAN																								
③	30A	POWER											●						●	●						
④	20A	FOG																								
	10A	A/C																								
	40A	HEATER																								

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems																					
			Parts																					
			Code or Location																					
			CB or Fuse																					
			Interior Light	License Plate Light	Luggage Compartment Door Courtesy SW (C/P)	Luggage Compartment Light (C/P)	Luggage Compartment Light (L/B)	Noise Filter (for Defogger System)	O/D Solenoid	Oil Pressure SW	O/D Main SW	Panel Relay (for Daytime Running Light System)	Power Seat Motor (for Lumber Support)	Power Seat Motor (for Side Support)	Power Seat SW	Power Window Master SW	Power Window Motor LH	Power Window Motor LH	Power Window SW RH	Back-Up Light SW (A/T w/o Electronic Controlled Transmission)	Park/Neutral Position SW (Neutral Start SW, Back-Up Light SW (A/T w/ Electronic Controlled Transmission)	Radiator Fan Motor	Retract Motor LH	Retract Motor RH
			I14	L1	L2	L3	L4	N4	O1	O2	O7	P1	P3	P4	P5	P6	P7	P8	P9	P10	P11	R1	R2	R3
①	30A	DEFOGGER						●																
	20A	WIPER																						
	15A	GAUGE							●	●	●									●	●			
	7.5A	IGN																						
	15A	ECU-B																						
	10A	TURN																						
	15A	CIG & RADIO																						
	15A	TAIL		●								●	●											
	15A	ECU-IG																						
	15A	STOP																						
②	15A	HEAD LH																						
	15A	HEAD RH																						
	30A	RTR																					●	●
	15A	EFI																						
	20A	DOME	●		●	●	●																	
	15A	HAZ-HORN																						
	30A	RDI FAN																				●		
	30A	CDS FAN																				●		
③	30A	POWER											●	●	●	●	●	●	●					
④	20A	FOG																						
	10A	A/C																						
	40A	HEATER																			●			

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (6) R/B No. 2 (See page 26)

	R4	R5	R6	R7	R8	R9	R10	R11	R12	R19	R22	R23	R24	R25	S4	S7	S8	S9	S10	S11	S13	T2
Radio and Player (w/ CD Player)	●									●	●											
Radio and Player (w/o CD Player)	●	●	●										●									
Remote Control Mirror SW				●								●										
Retract Control Relay													●	●								
Retract Control Relay (for Canada)						●								●	●	●						
Rheostat							●															
Back-Up Light LH [Rear Comb. Light LH]								●														
Rear Turn Signal Light LH [Rear Comb. Light LH]								●														
Stop Light LH [Rear Comb. Light LH]									●													
Tail and Rear Side Marker Light LH [Rear Comb. Light LH]																						
Back-Up Light RH [Rear Comb. Light RH]									●													
Rear Turn Signal Light RH [Rear Comb. Light RH]									●													
Stop Light RH [Rear Comb. Light RH]									●													
Tail and Rear Side Marker Light RH [Rear Comb. Light RH]																						
Rear Window Defogger										●	●											
Rear Wiper Motor and Relay												●										
Remote Control Mirror LH													●									
Remote Control Mirror RH														●								
Shift Lock ECU															●							
Stereo Component Amplifier (w/ CD Player)															●	●						
Stop Light SW																		●				
Sun Roof Control Relay																						
Personal Light [Sun Roof SW]																				●		
Sun Roof Motor																					●	
Turbo Charging Pressure Sensor																			●			

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

▼ **QUESTION** Which of the following is the best description of the relationship between the two variables?

