ST185 Pin Chart

88 connectors · 62 faces sourced · 26 still a numbered list

Red +12 V · Black ground · White signal · Blue sensor return · Orange sensor supply · Yellow switch signal · Green CAN

Grey shield drain · Dashed = spare cavity · Cavity colour is the wire's insulation colour. From MASTER-wirelist.csv.

Bussed plug = a Deutsch DT plug whose bussed cap ties every pin together: a splice you can unplug. Each sits where its name says.

Devices by harness

Each plug belongs to one harness (Dan 2026-11-01). Fuse boxes, relays, buses, studs and factory taps are hubs: several harnesses land on them.


HARNESS	DEVICES AND PLUGS
AB-cabin	+5 V sensor supply bus plug 1; +5 V sensor supply bus plug 2; A/C amplifier A15 (behind the glove box); A/C lock sensor resistor 4.7 k; Accelerator pedal sensor; Cam signal pull-up resistor 1.8 k to +8 V; ECU plug A; ECU plug C (CAN / comms); ECU wake diode (ignition feed); EFI main relay (K-EFI, POWER fuse box seat R2); Firewall bulkhead connector (cabin side); Front VR conditioner output plug; Fuel level pull-up resistor 470 ohm to +5 V; Fuel level sender; POWER box NEG bar, GND stud, ring 1 of 3; POWER box NEG bar, GND stud, ring 3 of 3; Rear VR conditioner output plug; Sensor ground bus plug, ECU plug A; Sensor ground bus plug, ECU plug B; Shield drain bus plug, ECU plug A
AB-engine	Boost control solenoid; CAN bus end terminating resistor 120 ohm (behind the CAN-Lambda plug); CAN-Lambda wideband controller; Cam sensor; Charge pipe air temp sensor; Coolant pressure sensor; Coolant temp sensor; Crank sensor; Electronic throttle body; Firewall bulkhead connector (engine side); Flex fuel sensor; Fuel pressure sensor; Gearbox speed sensor; Ignition coil 1; Ignition coil 2; Ignition coil 3; Ignition coil 4; Injector 1; Injector 2; Injector 3; Injector 4; Intake air temp sensor (manifold); Knock sensor; MAP sensor; Oil pressure sensor; Oil temp sensor; Power steering pump plug B; Power steering pump plug C; Reverse light switch; Starter solenoid trigger plug; Turbo speed sensor
CabinPower	DRL relay (K-DRL, LOGIC fuse box seat M8); DRL switch; High-beam relay (K-HR, LOGIC fuse box seat M2); Low-beam relay (K-HL, LOGIC fuse box seat M1); POWER box AMI IN-1 fuse, output stud; POWER box AMI OUT-2 fuse, output stud; POWER box AMI OUT-3 fuse, output stud; POWER box AMI OUT-4 fuse, output stud; POWER box AMI OUT-5 fuse, output stud; POWER box AMI OUT-6 fuse, output stud; Pop-up diode 1 (stalk side); Pop-up diode 2 (DRL switch side); Pop-up key-on relay (K-POD, LOGIC fuse box seat M10); Pop-up relay R8 (behind the LH dash); R-Y lead from cowl splice I2, cut near pop-up relay R8 (I2 side, behind the LH dash)
EngineRoom-C	A/C compressor A4; A/C pressure switch A5 (engine bay); Alternator plug; Ambient air temp sensor A1 (front, 6 in pigtail); Condenser fan ground plug; Condenser fan plug (+); Engine block ground stud, strap lug; Front wiper motor F9 (cowl, driver side); Ground stud EA, RH front fender; Ground stud EB, LH front fender; Ground stud EB, block strap lug; LH front turn / clearance lamp F7; LH headlamp H1; LH horn; LH pop-up motor R2; LH side marker lamp F5; Power steering pump plug A; RH front turn / clearance lamp F8; RH headlamp H2; RH horn; RH pop-up motor R3; RH side marker lamp F6; Radiator fan ground plug; Radiator fan plug (+); Washer motor W1 cowl lead (firewall, cabin side)
HeavyDC	Alternator B+ stud; Battery; Battery + post (trunk); Engine block ground stud, main lug; Firewall battery; Firewall battery; Firewall battery + connector (cabin side); Firewall battery + connector (engine side); Ground stud ID, LH kick panel; Jump start post; POWER box + bar, BAT+ IN stud; POWER box + bar, RADLOK+ stud; POWER box NEG bar, BAT- stud; POWER box NEG bar, GND ID stud; POWER box NEG bar, GND IG stud; POWER box NEG bar, RADLOK- stud; Starter B+ stud; Trunk relay block (fuel pump relay and fuse)
RearFuel	Fuel pump; Ground point BL, back panel centre

HARNESS	DEVICES AND PLUGS
Dash	8-channel opto board; Centre cluster +12 V input lead; Centre cluster CAN board leads; Centre cluster ground input lead; Centre cluster headlight sense input; Charge LED; Cluster plug C13 (B); Cluster plug C14 (C); Combination switch plug C16 (B), cruise switch; Cowl plug II1 (instrument panel centre); Cruise control clutch switch C17; Cruise switch ladder resistor; Dimmer rheostat R10 (left of the steering wheel); ECUMaster CAN switch board; High beam LED; Oil pressure LED; Park brake LED; RealDash Pi +12 V input lead; RealDash Pi CAN adapter leads; RealDash Pi ground input lead; RealDash Pi inline fuse 5 A; Stop lamp switch S9 (pedal); Turn LH LED; Turn RH LED
AntiTheft	Alarm +12 V point; Alarm door trigger point; Alarm ground point; Alarm ground ring terminal (chassis point at install); Alarm hood trigger point; Alarm ignition point; Alarm immobiliser output point; Alarm siren output point; Door switch line tap (J/B No.1 1B pin 11); Hood pin lead, front end (front centre); Shock sensor +12 V point; Siren + lead, engine-bay end; Siren ground lead, engine-bay end
WheelSpeed-Front	FL wheel speed sensor; FR wheel speed sensor; Front VR conditioner input plug
WheelSpeed-Rear	RL wheel speed sensor; RR wheel speed sensor; Rear VR conditioner input plug
Shared hubs	A/C clutch relay (K-ACC, LOGIC fuse box seat M5): AB-cabin, EngineRoom-C; Auto A/C amplifier A32: AB-cabin, EngineRoom-C; Battery kill switch (trunk): AB-cabin, EngineRoom-C, HeavyDC; Condenser fan relay (K-FAN2, POWER fuse box seat R5): AB-cabin, CabinPower, EngineRoom-C; Cowl plug IE1 (LH kick): CabinPower, EngineRoom-C; Cowl plug IG2 (under the ECU): AB-cabin, EngineRoom-C; DRL cut relay (glove box by the POWER box) (RLY-DRL): CabinPower, EngineRoom-C; ECU plug B: AB-cabin, AntiTheft; Fuel pump relay (K-FP, Trunk relay box seat K1): AB-cabin, RearFuel; Ground bolt IG, RH kick panel (R/B No.4 set bolt): AB-cabin, HeavyDC; Horn relay (K-HORN, LOGIC fuse box seat M3): CabinPower, EngineRoom-C; Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7): AB-cabin, CabinPower; J/B No.1 (LH kick panel): AB-cabin, CabinPower, EngineRoom-C; LOGIC fuse and relay box (glove box): AB-cabin, AntiTheft, CabinPower, Dash, EngineRoom-C; Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6): AB-cabin, CabinPower; Power steering pump relay (K-EPS, beside the POWER fuse box): AB-cabin, CabinPower, EngineRoom-C; R/B No.4 (RH kick): AB-cabin, CabinPower, EngineRoom-C; Radiator fan relay (K-FAN, POWER fuse box seat R4): AB-cabin, CabinPower, EngineRoom-C; Switched +12 V bus plug (glove box, by the LOGIC box): AB-cabin, CabinPower, RearFuel; Throttle body power relay (K-ETB, LOGIC fuse box seat M4): AB-cabin, CabinPower

AB-cabin

ECU plug A 4-1437290-1

FACE SOURCED

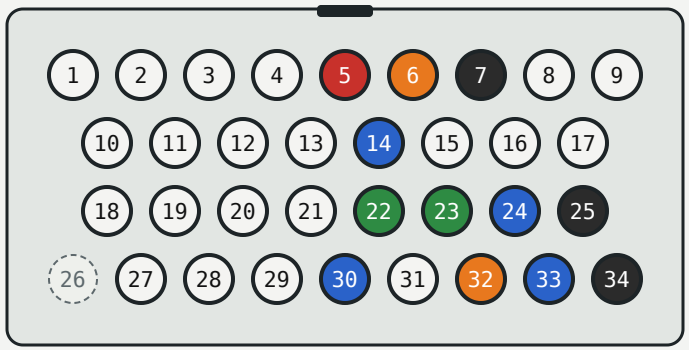

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Injector 4 drive (-)	Injector 4 drive (-)	Firewall bulkhead connector (cabin side) · pin 24	3-1447221-4
2	20 White	Injector 3 drive (-)	Injector 3 drive (-)	Firewall bulkhead connector (cabin side) · pin 23	3-1447221-4
3	20 White	Injector 2 drive (-)	Injector 2 drive (-)	Firewall bulkhead connector (cabin side) · pin 22	3-1447221-4
4	20 White	Injector 1 drive (-)	Injector 1 drive (-)	Firewall bulkhead connector (cabin side) · pin 21	3-1447221-4
5	18 Red	ECU main +12 V	Switched +12 V	Splice to: Switched +12 V bus plug (glove box, by the LOGIC box) · pin 2; Firewall bulkhead connector (cabin side) · pin 30; ECU wake diode (ignition feed) · pin 2	3-1447221-3
6	20 Orange	+8 V sensor supply	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; Firewall bulkhead connector (cabin side) · pin 63; Firewall bulkhead connector (cabin side) · pin 67	3-1447221-4
7	20 Black	Shield drains to ECU plug A pin 7	Shield drain A7	Shield drain bus plug, ECU plug A · pin 1	3-1447221-4
8	20 White	Crank sensor signal	Crank sensor signal	Firewall bulkhead connector (cabin side) · pin 74	3-1447221-4
9	20 White	Cam sensor signal	Cam sensor signal	Splice to: Firewall bulkhead connector (cabin side) · pin 64; Cam signal pull-up resistor 1.8 k to +8 V · pin 2	3-1447221-4
10	20 White	Coil 4 trigger (IGT)	Coil 4 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 12	3-1447221-4


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
11	20 White	`Coil 3 trigger (IGT)`	Coil 3 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 11	3-1447221-4
12	20 White	`Coil 2 trigger (IGT)`	Coil 2 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 10	3-1447221-4
13	20 White	`Coil 1 trigger (IGT)`	Coil 1 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 9	3-1447221-4
14	20 Blue	`Pedal 1 signal main`	Pedal 1 signal main	Accelerator pedal sensor · pin 6	3-1447221-4
15	20 White	`Coolant temp signal`	Coolant temp signal	Firewall bulkhead connector (cabin side) · pin 70	3-1447221-4
16	20 White	`Intake temp signal`	Intake temp signal	Firewall bulkhead connector (cabin side) · pin 33	3-1447221-4
17	20 White	`MAP sensor signal`	MAP sensor signal	Firewall bulkhead connector (cabin side) · pin 17	3-1447221-4
18	20 White	`A/C cancel (ACT)`	A/C cancel (ACT)	A/C amplifier A15 (behind the glove box)	3-1447221-4
19	18 White	`Fuel pump relay coil (-)`	Fuel pump relay (-)	Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 85	3-1447221-3
20	20 White	`ETB relay coil (-)`	ETB relay coil (-)	Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 85	3-1447221-4
21	20 White	`Boost solenoid drive (-)`	Boost solenoid (-)	Firewall bulkhead connector (cabin side) · pin 58	3-1447221-4
22	20 Green	`Throttle pos 1 main`	Throttle pos 1 main	Firewall bulkhead connector (cabin side) · pin 42	3-1447221-4
23	20 Green	`FL conditioned out`	FL conditioned out	Front VR conditioner output plug · pin 3	3-1447221-4
24	18 Blue	`Sensor ground from ECU pin A24`	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 1	3-1447221-3
25	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 34; ECU plug B · pin 25; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	3-1447221-3
26	*spare*				
27	20 White	`Power steering pump speed`	EHPS pump speed	Firewall bulkhead connector (cabin side) · pin 84	3-1447221-4
28	18 White	`EFI relay coil (-)`	EFI relay coil (-)	EFI main relay (K-EFI, POWER fuse box seat R2) · terminal 85	3-1447221-3

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
29	18 White	`Radiator fan relay coil (-)`	Rad fan relay (-)	Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 85	3-1447221-3
30	20 Blue	`Turbo speed signal`	Turbo speed signal	Firewall bulkhead connector (cabin side) · pin 53	3-1447221-4
31	20 White	`Flex fuel signal`	Flex fuel signal	Firewall bulkhead connector (cabin side) · pin 31	3-1447221-4
32	18 Orange	`+5 V sensor supply`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 1	3-1447221-3
33	20 Blue	`Throttle pos 2 sub`	Throttle pos 2 sub	Firewall bulkhead connector (cabin side) · pin 44	3-1447221-4
34	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 25; ECU plug B · pin 25; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	3-1447221-3

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin

Firewall bulkhead connector (cabin side) DRB12-102PAE-L018 + DRBF-1A

FACE SOURCED

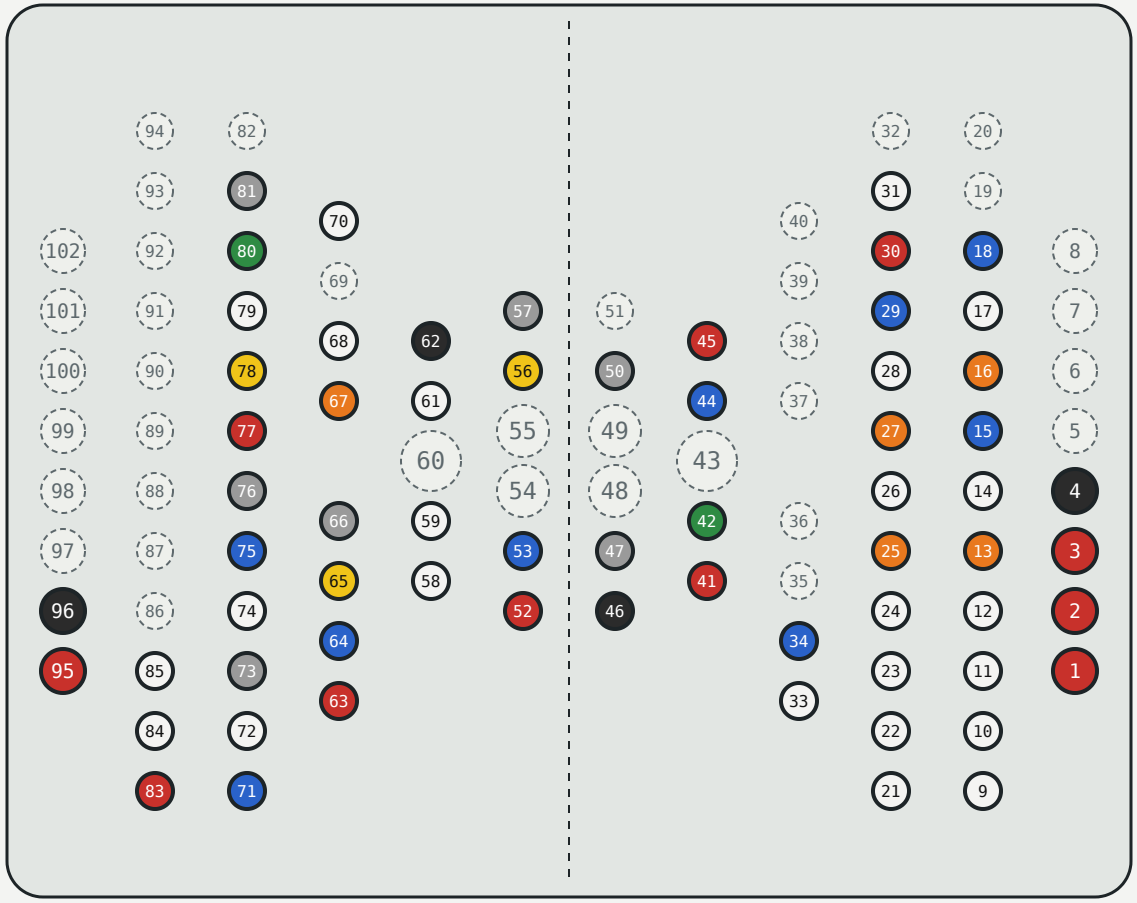

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Coil +12 V feed	Ignition coil +12 V	LOGIC fuse and relay box (glove box) · fuse BUS2-3	0460-220-1231
2	14 Red	Injector +12 V feed	Injector +12 V	LOGIC fuse and relay box (glove box) · fuse BUS2-4	0460-220-1231
3	12 Red	Starter solenoid S	Starter solenoid S	R/B No.4 (RH kick)	0460-220-1231

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
4	14 Black	Coil ground to the POWER box NEG bar	Ground	Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 1; Centre cluster ground input lead; RealDash Pi ground input lead; 8-channel opto board · pin COM1	0460-220-1231
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				
9	20 White	Coil 1 trigger (IGT)	Coil 1 trigger (IGT)	ECU plug A · pin 13	0460-202-1631
10	20 White	Coil 2 trigger (IGT)	Coil 2 trigger (IGT)	ECU plug A · pin 12	0460-202-1631
11	20 White	Coil 3 trigger (IGT)	Coil 3 trigger (IGT)	ECU plug A · pin 11	0460-202-1631
12	20 White	Coil 4 trigger (IGT)	Coil 4 trigger (IGT)	ECU plug A · pin 10	0460-202-1631
13	20 Orange	+5 V fuel pressure	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 6	0460-202-1631
14	20 White	Fuel pressure signal	Fuel pressure signal	ECU plug B · pin 16	0460-202-1631
15	20 Blue	Sensor ground trunk (fuel pressure, gearbox speed)	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 8	0460-202-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
16	20 Orange	`+5 V MAP sensor`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 3	`0460-202-1631`
17	20 White	`MAP sensor signal`	MAP sensor signal	ECU plug A · pin 17	`0460-202-1631`
18	20 Blue	`MAP sensor ground`	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 6	`0460-202-1631`
19	*spare*				
20	*spare*				
21	20 White	`Injector 1 drive (-)`	Injector 1 drive (-)	ECU plug A · pin 4	`0460-202-1631`
22	20 White	`Injector 2 drive (-)`	Injector 2 drive (-)	ECU plug A · pin 3	`0460-202-1631`
23	20 White	`Injector 3 drive (-)`	Injector 3 drive (-)	ECU plug A · pin 2	`0460-202-1631`
24	20 White	`Injector 4 drive (-)`	Injector 4 drive (-)	ECU plug A · pin 1	`0460-202-1631`
25	20 Orange	`+5 V coolant pressure`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 7	`0460-202-1631`
26	20 White	`Coolant pressure signal`	Coolant pressure signal	ECU plug B · pin 23	`0460-202-1631`
27	20 Orange	`+5 V oil pressure`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 5	`0460-202-1631`
28	20 White	`Oil pressure signal`	Oil pressure signal	ECU plug B · pin 15	`0460-202-1631`
29	20 Blue	`Sensor ground trunk (oil / coolant pressure, oil / charge temp)`	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 7	`0460-202-1631`

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	18 Red	+12 V boost + flex	Switched +12 V	Splice to: Switched +12 V bus plug (glove box, by the LOGIC box) · pin 2; ECU wake diode (ignition feed) · pin 2; ECU plug A · pin 5	0460-202-1631
31	20 White	Flex fuel signal	Flex fuel signal	ECU plug A · pin 31	0460-202-1631
32	*spare*				
33	20 White	Intake temp signal	Intake temp signal	ECU plug A · pin 16	0460-202-1631
34	20 Blue	Sensor ground trunk (intake temp, throttle, coolant temp)	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 2	0460-202-1631
35	*spare*				
36	*spare*				
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				
41	20 Red	+5 V throttle sensor	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 2	0460-202-1631
42	20 Green	Throttle pos 1 main	Throttle pos 1 main	ECU plug A · pin 22	0460-202-1631
43	*spare*				
44	20 Blue	Throttle pos 2 sub	Throttle pos 2 sub	ECU plug A · pin 33	0460-202-1631
45	18 Red	ETB motor +	ETB motor +	ECU plug B · pin 18	0460-202-1631
46	18 Black	ETB motor -	ETB motor -	ECU plug B · pin 26	0460-202-1631
47	Shield	Throttle shield	Shield drain A7	Shield drain bus plug, ECU plug A · pin 5	0460-202-1631
48	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
49	*spare*				
50	Shield	ETB motor shield	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 73; Rear VR conditioner output plug · pin 5; ECU plug B · pin 17	0460-202-1631
51	*spare*				
52	20 Red	+5 V turbo speed	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 4	0460-202-1631
53	20 Blue	Turbo speed signal	Turbo speed signal	ECU plug A · pin 30	0460-202-1631
54	*spare*				
55	*spare*				
56	20 Yellow	Turbo speed ground	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 5	0460-202-1631
57	Shield	Turbo speed shield	Shield drain A7	Shield drain bus plug, ECU plug A · pin 4	0460-202-1631
58	20 White	Boost solenoid drive (-)	Boost solenoid (-)	ECU plug A · pin 21	0460-202-1631
59	20 White	Charge temp signal	Charge temp signal	ECU plug B · pin 7	0460-202-1631
60	*spare*				
61	20 White	Oil temp signal	Oil temp signal	ECU plug B · pin 6	0460-202-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
62	20 Black	Flex fuel sensor return	Ground	Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 1; Centre cluster ground input lead; RealDash Pi ground input lead; 8-channel opto board · pin COM1	0460-202-1631
63	20 Red	+8 V to cam sensor	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; ECU plug A · pin 6; Firewall bulkhead connector (cabin side) · pin 67	0460-202-1631
64	20 Blue	Cam sensor signal	Cam sensor signal	Splice to: ECU plug A · pin 9; Cam signal pull-up resistor 1.8 k to +8 V · pin 2	0460-202-1631
65	20 Yellow	Cam sensor ground	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 4	0460-202-1631
66	Shield	Cam sensor shield	Shield drain A7	Shield drain bus plug, ECU plug A · pin 3	0460-202-1631
67	20 Orange	+8 V to gearbox speed sensor	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; ECU plug A · pin 6; Firewall bulkhead connector (cabin side) · pin 63	0460-202-1631
68	20 White	Gearbox speed signal	Gearbox speed signal	ECU plug B · pin 29	0460-202-1631
69	*spare*				
70	20 White	Coolant temp signal	Coolant temp signal	ECU plug A · pin 15	0460-202-1631
71	20 Blue	Knock sensor signal	Knock sensor signal	ECU plug B · pin 9	0460-202-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
72	20 White	Knock sensor (-)	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 6	0460-202-1631
73	Shield	Knock sensor shield	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 50; Rear VR conditioner output plug · pin 5; ECU plug B · pin 17	0460-202-1631
74	20 White	Crank sensor signal	Crank sensor signal	ECU plug A · pin 8	0460-202-1631
75	20 Blue	Crank sensor ground	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 3	0460-202-1631
76	Shield	Crank sensor shield	Shield drain A7	Shield drain bus plug, ECU plug A · pin 2	0460-202-1631
77	16 Red	+12 V to reverse switch	+12 V to reverse switch	Cowl plug IG2 (under the ECU)	0460-202-1631
78	16 Yellow	Switched +12 V from reverse switch	Reverse +12 V	Splice to: 8-channel opto board · pin IN2; Cowl plug IG2 (under the ECU)	0460-202-1631
79	20 White	CAN H to CAN-Lambda	CAN H	Splice to: RealDash Pi CAN adapter leads; Centre cluster CAN board leads; ECU plug C (CAN / comms) · pin 3; ECUMaster CAN switch board · pin 14	0460-202-1631
80	20 Green	CAN L to CAN-Lambda	CAN L	Splice to: RealDash Pi CAN adapter leads; Centre cluster CAN board leads; ECU plug C (CAN / comms) · pin 4; ECUMaster CAN switch board · pin 15	0460-202-1631
81	Shield	CAN-Lambda shield	CAN shield drain	Splice to: Shield, not connected at the device end; ECU plug C (CAN / comms) · pin 1	0460-202-1631
82	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
83	18 Red	Power steering pump enable +12 V	EHPS enable +12 V	Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 87	0460-202-1631
84	20 White	Power steering pump speed	EHPS pump speed	ECU plug A · pin 27	0460-202-1631
85	18 White	Power steering pump relay coil (-)	EHPS relay coil (-)	Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 85	0460-202-1631
86	*spare*				
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				
94	*spare*				
95	14 Red	CAN-Lambda +12 V	CAN-Lambda +12 V	Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) · terminal 87	0460-220-1231
96	14 Black	CAN-Lambda ground	Ground	Splice to: Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 1; Centre cluster ground input lead; RealDash Pi ground input lead; 8-channel opto board · pin COM1	0460-220-1231
97	*spare*				
98	*spare*				
99	*spare*				
100	*spare*				


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
101	*spare*				
102	*spare*				

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-cabin

+5 V sensor supply bus plug 1

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

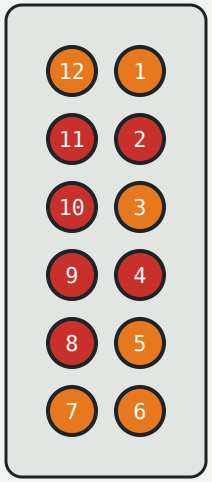

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Orange	+5 V sensor supply	+5 V sensor supply	ECU plug A · pin 32	0462-201-16141
2	20 Red	+5 V throttle sensor	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 41	0462-201-16141
3	20 Orange	+5 V MAP sensor	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 16	0462-201-16141
4	20 Red	+5 V turbo speed	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 52	0462-201-16141
5	20 Orange	+5 V oil pressure	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 27	0462-201-16141
6	20 Orange	+5 V fuel pressure	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 13	0462-201-16141
7	20 Orange	+5 V coolant pressure	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 25	0462-201-16141
8	20 Red	+5 V pedal sensor 1	+5 V sensor supply	Accelerator pedal sensor · pin 4	0462-201-16141
9	20 Red	+5 V pedal sensor 2	+5 V sensor supply	Accelerator pedal sensor · pin 1	0462-201-16141
10	20 Red	+5 V front VRC	+5 V sensor supply	Front VR conditioner output plug · pin 1	0462-201-16141
11	20 Red	+5 V rear VRC	+5 V sensor supply	Rear VR conditioner output plug · pin 1	0462-201-16141
12	20 Orange	+5 V to bus plug 2	+5 V sensor supply	+5 V sensor supply bus plug 2 · pin 1	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Sensor ground bus plug, ECU plug A

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

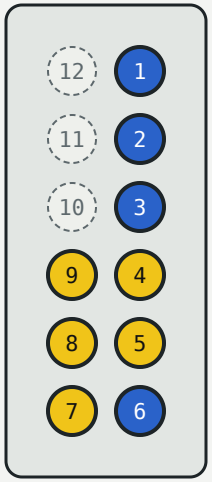

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	Sensor ground from ECU pin A24	Sensor ground A24 (ECU Gnd Out)	ECU plug A · pin 24	0462-201-16141
2	20 Blue	Sensor ground trunk (intake temp, throttle, coolant temp)	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 34	0462-201-16141
3	20 Blue	Crank sensor ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 75	0462-201-16141
4	20 Yellow	Cam sensor ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 65	0462-201-16141
5	20 Yellow	Turbo speed ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 56	0462-201-16141
6	20 Blue	MAP sensor ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 18	0462-201-16141
7	20 Yellow	Pedal 1 ground	Sensor ground A24 (ECU Gnd Out)	Accelerator pedal sensor · pin 5	0462-201-16141
8	20 Yellow	Pedal 2 ground	Sensor ground A24 (ECU Gnd Out)	Accelerator pedal sensor · pin 2	0462-201-16141
9	20 Yellow	Front VRC ground	Sensor ground A24 (ECU Gnd Out)	Front VR conditioner output plug · pin 2	0462-201-16141


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Switched +12 V bus plug (glove box, by the LOGIC box)

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

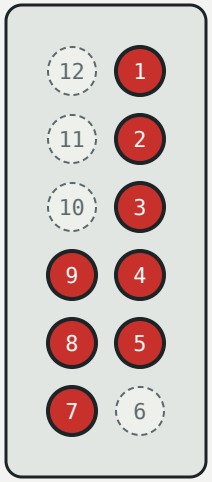

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	Switched +12 V feed	Switched +12 V	LOGIC fuse and relay box (glove box) · fuse BUS2-2	0462-201-16141
2	18 Red	Switched +12 V feed	Switched +12 V	Splice to: ECU wake diode (ignition feed) · pin 2; ECU plug A · pin 5; Firewall bulkhead connector (cabin side) · pin 30	0462-201-16141
3	18 Red	Fuel pump relay coil +	Switched +12 V	Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 86	0462-201-16141
4	18 Red	Radiator fan relay coil +	Switched +12 V	Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 86	0462-201-16141
5	20 Red	ETB relay coil +	Switched +12 V	Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 86	0462-201-16141
6	*spare*				
7	18 Red	Condenser fan relay coil +	Switched +12 V	Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 86	0462-201-16141
8	18 Red	Power steering pump relay coil +	Switched +12 V	Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 86	0462-201-16141

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
9	18 Red	Power steering enable relay coil +	Switched +12 V	Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 86	0462-201-16141
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, CabinPower, RearFuel

Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) 6-1419137-4

FACE SOURCED

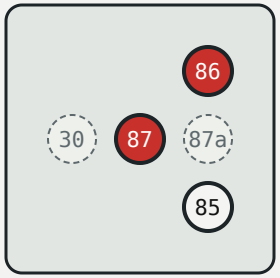


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
85	18 White	Power steering enable relay coil (-)	Coil (-)	ECU plug B · pin 12	280919-2
86	18 Red	Power steering enable relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 9	280919-2
87	18 Red	Power steering pump enable +12 V	+12 V out	Firewall bulkhead connector (cabin side) · pin 83	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

ECU plug B 4-1437290-0

FACE SOURCED

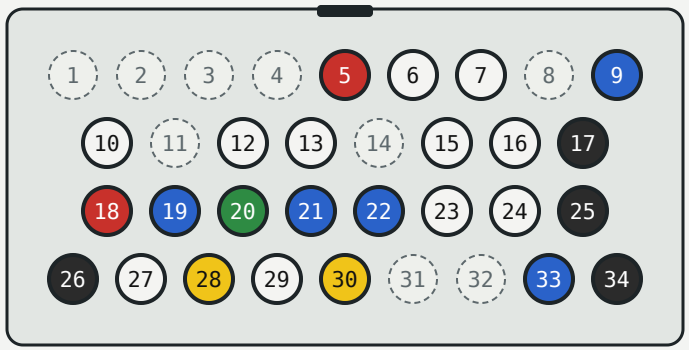

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	*spare*				
3	*spare*				
4	*spare*				
5	18 Red	Throttle motor +12 V to ECU	V Ethrottle (ETB H-bridge supply)	Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 87	3-1447221-3
6	20 White	Oil temp signal	Oil temp signal	Firewall bulkhead connector (cabin side) · pin 61	3-1447221-4
7	20 White	Charge temp signal	Charge temp signal	Firewall bulkhead connector (cabin side) · pin 59	3-1447221-4
8	*spare*				
9	20 Blue	Knock sensor signal	Knock sensor signal	Firewall bulkhead connector (cabin side) · pin 71	3-1447221-4
10	20 White	Engine speed (tacho)	Engine speed (tacho)	Splice to: A/C amplifier A15 (behind the glove box); A/C lock sensor resistor 4.7 k · pin 1	3-1447221-4
11	*spare*				
12	18 White	Power steering enable relay coil (-)	EPS enable relay (-)	Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 85	3-1447221-3
13	18 White	Condenser fan relay coil (-)	Cond fan relay (-)	Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 85	3-1447221-3

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
14	*spare*				
15	20 White	`Oil pressure signal`	Oil pressure signal	Firewall bulkhead connector (cabin side) · pin 28	`3-1447221-4`
16	20 White	`Fuel pressure signal`	Fuel pressure signal	Firewall bulkhead connector (cabin side) · pin 14	`3-1447221-4`
17	20 Black	`Shield drains to ECU plug B pin 17`	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 73; Firewall bulkhead connector (cabin side) · pin 50; Rear VR conditioner output plug · pin 5	`3-1447221-4`
18	18 Red	`ETB motor +`	ETB motor +	Firewall bulkhead connector (cabin side) · pin 45	`3-1447221-3`
19	20 Blue	`Rear right wheel speed`	Rear right wheel speed	Rear VR conditioner output plug · pin 4	`3-1447221-4`
20	20 Green	`Rear left wheel speed`	Rear left wheel speed	Rear VR conditioner output plug · pin 3	`3-1447221-4`
21	20 Blue	`FR conditioned out`	FR conditioned out	Front VR conditioner output plug · pin 4	`3-1447221-4`
22	18 Blue	`Sensor ground from ECU pin B22`	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 1	`3-1447221-3`
23	20 White	`Coolant pressure signal`	Coolant pressure signal	Firewall bulkhead connector (cabin side) · pin 26	`3-1447221-4`
24	20 White	`Fuel level signal`	Fuel level signal	Splice to: Fuel level sender · pin 1; Fuel level pull-up resistor 470 ohm to +5 V · pin 1	`3-1447221-4`
25	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 25; ECU plug A · pin 34; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	`3-1447221-3`
26	18 Black	`ETB motor -`	ETB motor -	Firewall bulkhead connector (cabin side) · pin 46	`3-1447221-3`
27	20 White	`Anti-theft input`	Anti-theft input	Alarm immobiliser output point	`3-1447221-4`
28	18 Yellow	`Ignition switch sense`	Ignition +12 V (IGN fuse)	J/B No.1 (LH kick panel)	`3-1447221-3`
29	20 White	`Gearbox speed signal`	Gearbox speed signal	Firewall bulkhead connector (cabin side) · pin 68	`3-1447221-4`
30	20 Yellow	`Start request`	Start request	LOGIC fuse and relay box (glove box) · fuse BUS2-13	`3-1447221-4`
31	*spare*				


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
32	*spare*				
33	20 Blue	`Pedal 2 signal sub`	Pedal 2 signal sub	Accelerator pedal sensor · pin 3	`3-1447221-4`
34	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 25; ECU plug A · pin 34; ECU plug B · pin 25; POWER box NEG bar, GND stud, ring 1 of 3	`3-1447221-3`

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, AntiTheft

Shield drain bus plug, ECU plug A

DT06-08SA + W8S; DT04-08PA-P021 (bussed receptacle)

FACE SOURCED

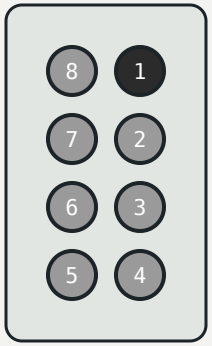


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Black	Shield drains to ECU plug A pin 7	Shield drain A7	ECU plug A · pin 7	0462-201-16141
2	Shield	Crank sensor shield	Shield drain A7	Firewall bulkhead connector (cabin side) · pin 76	0462-201-16141
3	Shield	Cam sensor shield	Shield drain A7	Firewall bulkhead connector (cabin side) · pin 66	0462-201-16141
4	Shield	Turbo speed shield	Shield drain A7	Firewall bulkhead connector (cabin side) · pin 57	0462-201-16141
5	Shield	Throttle shield	Shield drain A7	Firewall bulkhead connector (cabin side) · pin 47	0462-201-16141
6	Shield	Pedal 1 cable shield	Shield drain A7	Shield, not connected at the device end	0462-201-16141
7	Shield	Pedal 2 cable shield	Shield drain A7	Shield, not connected at the device end	0462-201-16141
8	Shield	Front wheel speed shield drain	Shield drain A7	Front VR conditioner output plug · pin 5	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Fuel pump relay (K-FP, Trunk relay box seat K1) V23132-A2001-B200

FACE SOURCED

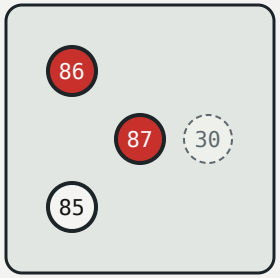


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
85	18 White	Fuel pump relay coil (-)	Coil (-)	ECU plug A · pin 19	282110-1
86	18 Red	Fuel pump relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 3	282110-1
87	10 Red	Fuel pump +12 V	+12 V out	Fuel pump · pin 1	TBD

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, RearFuel

Radiator fan relay (K-FAN, POWER fuse box seat R4) 1-1414147-0

FACE SOURCED

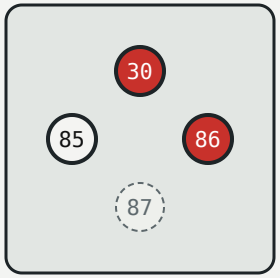


bottom (terminal side) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	Radiator fan +12 V	+12 V out	Radiator fan plug (+) · pin 1	280756-4
85	18 White	Radiator fan relay coil (-)	Coil (-)	ECU plug A · pin 29	42281-1
86	18 Red	Radiator fan relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 4	42281-1

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

Power steering pump relay (K-EPS, beside the POWER fuse box) V23132-A2001-B200 FACE SOURCED

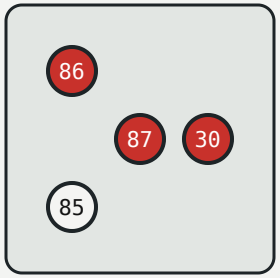


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	8 Red	Power steering pump relay feed	+12 V in	POWER box AMI OUT-6 fuse, output stud	TBD
85	18 White	Power steering pump relay coil (-)	Coil (-)	Firewall bulkhead connector (cabin side) · pin 85	282110-1
86	18 Red	Power steering pump relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 8	282110-1
87	8 Red	Power steering pump +12 V	+12 V out	Power steering pump plug A · pin 1	TBD
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

Accelerator pedal sensor TBD

FACE NOT SOURCED

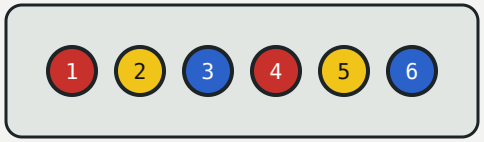


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+5 V pedal sensor 2`	+5 V (sensor 2)	+5 V sensor supply bus plug 1 · pin 9	TBD
2	20 Yellow	`Pedal 2 ground`	Ground (sensor 2)	Sensor ground bus plug, ECU plug A · pin 8	TBD
3	20 Blue	`Pedal 2 signal sub`	Signal 2 (sub)	ECU plug B · pin 33	TBD
4	20 Red	`+5 V pedal sensor 1`	+5 V (sensor 1)	+5 V sensor supply bus plug 1 · pin 8	TBD
5	20 Yellow	`Pedal 1 ground`	Ground (sensor 1)	Sensor ground bus plug, ECU plug A · pin 7	TBD
6	20 Blue	`Pedal 1 signal main`	Signal 1 (main)	ECU plug A · pin 14	TBD

Pin numbers: TBD · harness AB-cabin

Front VR conditioner output plug LP-16-J05PE-02-001

FACE SOURCED

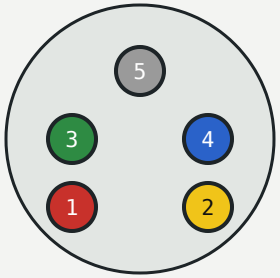

mating face view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	+5 V front VRC	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 10	solder cup (LP-16, S16)
2	20 Yellow	Front VRC ground	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 9	solder cup (LP-16, S16)
3	20 Green	FL conditioned out	FL conditioned out	ECU plug A · pin 23	solder cup (LP-16, S16)
4	20 Blue	FR conditioned out	FR conditioned out	ECU plug B · pin 21	solder cup (LP-16, S16)
5	Shield	Front wheel speed shield drain	Shield drain A7	Shield drain bus plug, ECU plug A · pin 8	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness AB-cabin

Sensor ground bus plug, ECU plug B

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

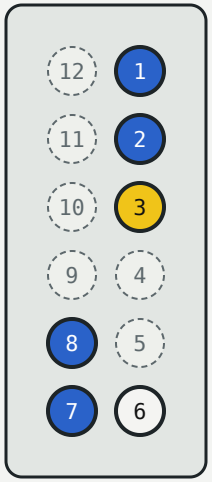

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	Sensor ground from ECU pin B22	Sensor ground B22 (ECU Gnd Out)	ECU plug B · pin 22	0462-201-16141
2	20 Blue	Fuel level ground	Sensor ground B22 (ECU Gnd Out)	Fuel level sender · pin 2	0462-201-16141
3	20 Yellow	Rear VRC ground	Sensor ground B22 (ECU Gnd Out)	Rear VR conditioner output plug · pin 2	0462-201-16141
4	*spare*				
5	*spare*				
6	20 White	Knock sensor (-)	Sensor ground B22 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 72	0462-201-16141
7	20 Blue	Sensor ground trunk (oil / coolant pressure, oil / charge temp)	Sensor ground B22 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 29	0462-201-16141

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
8	20 Blue	Sensor ground trunk (fuel pressure, gearbox speed)	Sensor ground B22 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 15	0462-201-16141
9	*spare*				
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

A/C clutch relay (K-ACC, LOGIC fuse box seat M5) 6-1419137-4

FACE SOURCED

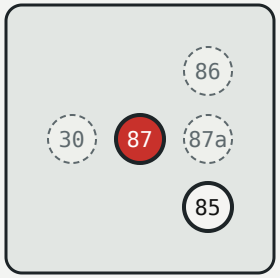


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
85	18 White	A/C clutch relay coil (-)	Coil (-)	A/C amplifier A15 (behind the glove box)	280919-2
87	16 Red	A/C clutch +12 V	+12 V out	A/C compressor A4	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

LOGIC fuse and relay box (glove box) ST185-FB-LOGIC rev 7

FACE NOT SOURCED

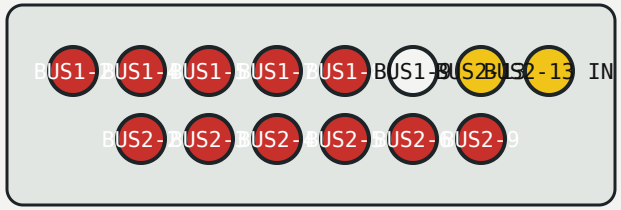

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
BUS1-2	14 Red	Low beam +12 V feed	Low-beam fuse +12 V	Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86; DRL cut relay (glove box by the POWER box) (RLY-DRL) · pin 86	1-968851-1
BUS1-4	14 Red	Hazard / horn +12 V feed	Hazard and horn fuse +12 V	Splice to: Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 30; Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 86	1-968851-1
BUS1-5	14 Red	Dome feed to J/B No.1	Dome feed to J/B No.1	J/B No.1 (LH kick panel)	1-968851-1
BUS1-7	20 Red	Alarm +12 V	Alarm +12 V	Alarm +12 V point	1-968849-1
BUS1-8	20 Red	Shock sensor +12 V	Shock sensor +12 V	Shock sensor +12 V point	1-968849-1
BUS1-9	20 White	Alternator battery sense (S)	Alternator battery sense (S)	Alternator plug · pin 1	1-968849-1
BUS2-13	20 Yellow	Start request	Start request	ECU plug B · pin 30	1-968849-1
BUS2-13 IN	20 Yellow	Start switch ST1 feed	Start switch ST1 feed	R/B No.4 (RH kick)	1-968849-1
BUS2-2	16 Red	Switched +12 V feed	Switched +12 V	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 1	1-968851-1
BUS2-3	14 Red	Coil +12 V feed	Ignition coil +12 V	Firewall bulkhead connector (cabin side) · pin 1	1-968851-1
BUS2-4	14 Red	Injector +12 V feed	Injector +12 V	Firewall bulkhead connector (cabin side) · pin 2	1-968851-1

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
BUS2-5	20 Red	Switch board +12 V (CSB 5 A)	CSB3 +12 V	ECUMaster CAN switch board · pin 2	1-968849-1
BUS2-6	16 Red	Cluster +12 V (DEV 5 A)	Cluster +12 V	Centre cluster +12 V input lead	1-968851-1
BUS2-9	20 Red	Alarm ignition +12 V	Alarm ignition +12 V	Alarm ignition point	1-968849-1

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness AB-cabin, CabinPower, EngineRoom-C, Dash, AntiTheft

Fuel level sender DT04-2P + W2P

FACE SOURCED




wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Fuel level signal	Fuel level signal	Splice to: ECU plug B · pin 24; Fuel level pull-up resistor 470 ohm to +5 V · pin 1	0460-202-1631
2	20 Blue	Fuel level ground	Fuel level ground	Sensor ground bus plug, ECU plug B · pin 2	0460-202-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Rear VR conditioner output plug LP-16-J05PE-02-001

FACE SOURCED

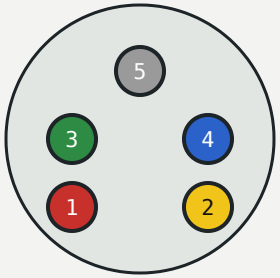


mating face view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	+5 V rear VRC	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 11	solder cup (LP-16, S16)
2	20 Yellow	Rear VRC ground	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 3	solder cup (LP-16, S16)
3	20 Green	Rear left wheel speed	Rear left wheel speed	ECU plug B · pin 20	solder cup (LP-16, S16)
4	20 Blue	Rear right wheel speed	Rear right wheel speed	ECU plug B · pin 19	solder cup (LP-16, S16)
5	Shield	Rear wheel speed shield drain	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 73; Firewall bulkhead connector (cabin side) · pin 50; ECU plug B · pin 17	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness AB-cabin

Condenser fan relay (K-FAN2, POWER fuse box seat R5) 1-1393304-0

FACE SOURCED

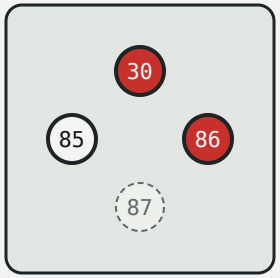

bottom (terminal side) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	Condenser fan +12 V	+12 V out	Condenser fan plug (+) · pin 1	280756-4
85	18 White	Condenser fan relay coil (-)	Coil (-)	ECU plug B · pin 13	42281-1
86	18 Red	Condenser fan relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 7	42281-1

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

+5 V sensor supply bus plug 2

DT06-08SA + W8S; DT04-08PA-P021 (bussed receptacle)

FACE SOURCED

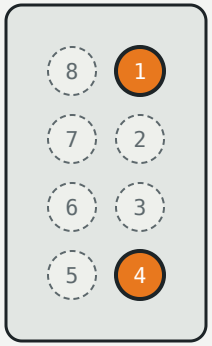


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	+5 V to bus plug 2	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 12	0462-201-16141
2	*spare*				
3	*spare*				
4	20 Orange	+5 V to fuel level pull-up	+5 V sensor supply	Fuel level pull-up resistor 470 ohm to +5 V · pin 2	0462-201-16141
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Throttle body power relay (K-ETB, LOGIC fuse box seat M4) 4-1904124-2

FACE SOURCED

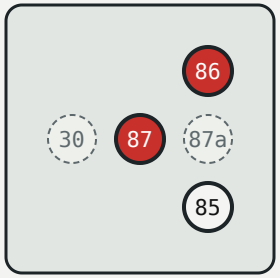


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
85	20 White	ETB relay coil (-)	Coil (-)	ECU plug A · pin 20	280919-2
86	20 Red	ETB relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 5	280919-2
87	18 Red	Throttle motor +12 V to ECU	+12 V out	ECU plug B · pin 5	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) 6-1419137-4 FACE SOURCED

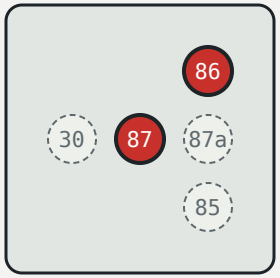


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
86	18 Red	Ignition-on relay coil + (IGN fuse)	Coil +	J/B No.1 (LH kick panel)	280919-2
87	14 Red	CAN-Lambda +12 V	+12 V out	Firewall bulkhead connector (cabin side) · pin 95	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

EFI main relay (K-EFI, POWER fuse box seat R2) 1-1414147-0

FACE SOURCED

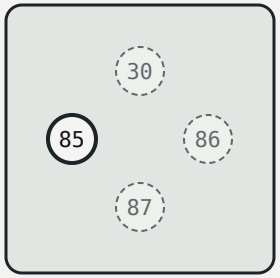


bottom (terminal side) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
85	☐ 18 White	EFI relay coil (-)	Coil (-)	ECU plug A · pin 28	42281-1

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin

ECU plug C (CAN / comms) none (generic round 6-pin plug, not bought)

FACE NOT SOURCED

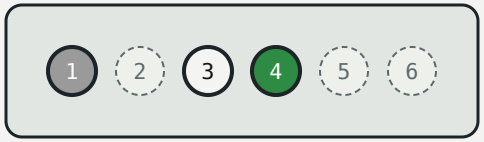

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	Shield	ECU CAN shield	CAN shield drain	Splice to: Shield, not connected at the device end; Firewall bulkhead connector (cabin side) · pin 81	none (contact comes with the plug)
2	*spare*				
3	20 White	CAN 1 high	CAN H	Splice to: ECUMaster CAN switch board · pin 14; Centre cluster CAN board leads; Firewall bulkhead connector (cabin side) · pin 79; RealDash Pi CAN adapter leads	none (contact comes with the plug)
4	20 Green	CAN 1 low	CAN L	Splice to: ECUMaster CAN switch board · pin 15; Centre cluster CAN board leads; Firewall bulkhead connector (cabin side) · pin 80; RealDash Pi CAN adapter leads	none (contact comes with the plug)
5	*spare*				
6	*spare*				

Pin numbers: PCLink help page Communications Port Pinout (G4X / Xtreme / Fury wire-in), looking into the ECU connector · harness AB-cabin

Battery kill switch (trunk) 52-45780

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
ALT1	16 Red	Alternator IG to the kill switch	Alternator IG to the kill switch	Cowl plug IG2 (under the ECU)	TBD
ALT2	16 Red	Alternator IG excite	Alt IG excite	Alternator plug · pin 3	TBD
MAIN1	1/0 Red	Battery + to the kill switch	battery +	Battery + post (trunk)	TBD
MAIN2	10 Red	Trunk relay block +12 V	Battery +	Trunk relay block (fuel pump relay and fuse) · battery + stud	TBD
MAIN2	1/0 Red	Battery + to the POWER box	Battery +	POWER box + bar, BAT+ IN stud	TBD

Pin numbers: TBD · harness AB-cabin, EngineRoom-C, HeavyDC

AB-engine

Firewall bulkhead connector (engine side) DRB16-102SAE-L018

FACE SOURCED

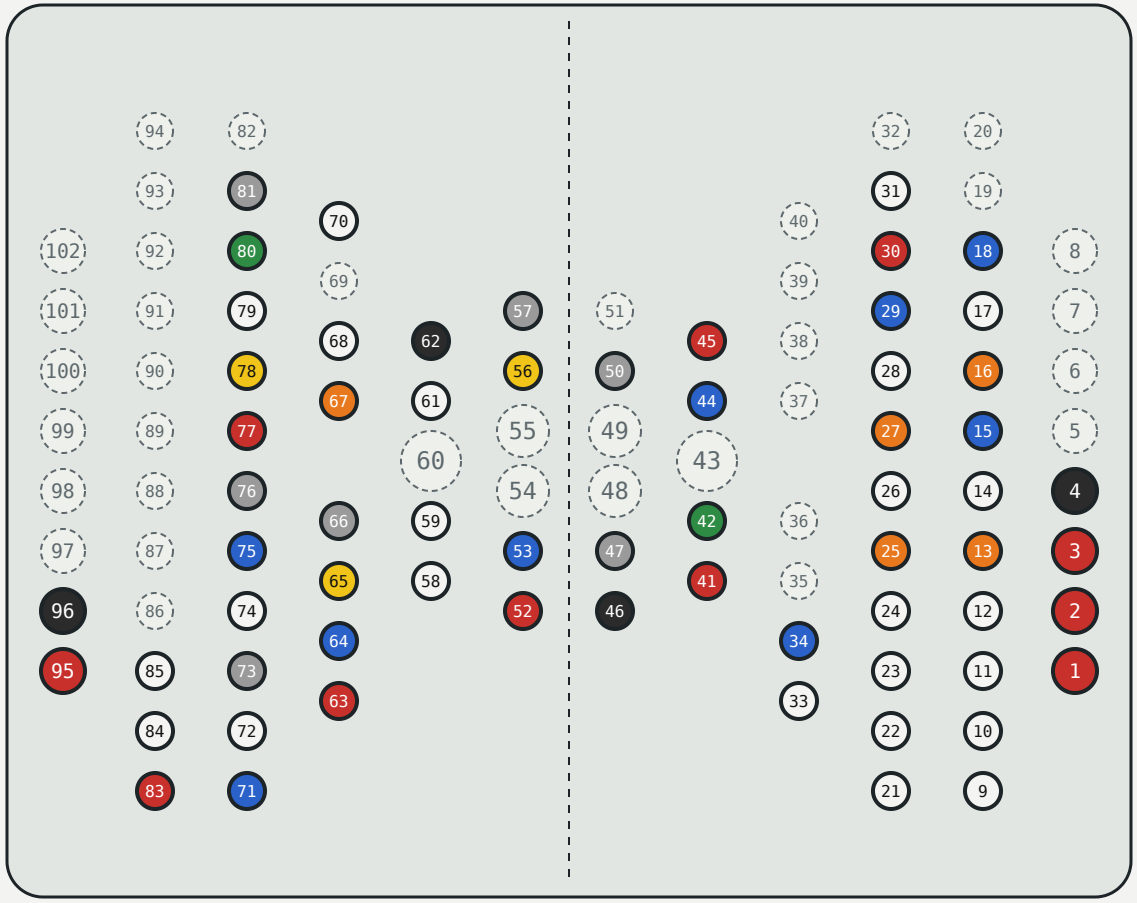

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Coil +12 V feed	Ignition coil +12 V	Splice to: Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1	0462-210-1231
2	14 Red	Injector +12 V feed	Injector +12 V	Splice to: Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	0462-210-1231

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
3	12 Red	Starter solenoid S	Starter solenoid S	Starter solenoid trigger plug · pin 1	0462-210-1231
4	14 Black	Coil ground to the POWER box NEG bar	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4	0462-210-1231
5	spare				
6	spare				
7	spare				
8	spare				
9	20 White	Coil 1 trigger (IGT)	Coil 1 trigger (IGT)	Ignition coil 1 · pin 3	0462-201-1631
10	20 White	Coil 2 trigger (IGT)	Coil 2 trigger (IGT)	Ignition coil 2 · pin 3	0462-201-1631
11	20 White	Coil 3 trigger (IGT)	Coil 3 trigger (IGT)	Ignition coil 3 · pin 3	0462-201-1631
12	20 White	Coil 4 trigger (IGT)	Coil 4 trigger (IGT)	Ignition coil 4 · pin 3	0462-201-1631
13	20 Orange	+5 V fuel pressure	+5 V sensor supply	Fuel pressure sensor · pin 2	0462-201-1631
14	20 White	Fuel pressure signal	Fuel pressure signal	Fuel pressure sensor · pin 3	0462-201-1631
15	20 Blue	Sensor ground trunk (fuel pressure, gearbox speed)	Sensor ground B22 (ECU Gnd Out)	Splice to: Fuel pressure sensor · pin 1; Gearbox speed sensor · pin 2	0462-201-1631
16	20 Orange	+5 V MAP sensor	+5 V sensor supply	MAP sensor · pin 2	0462-201-1631
17	20 White	MAP sensor signal	MAP sensor signal	MAP sensor · pin 3	0462-201-1631
18	20 Blue	MAP sensor ground	Sensor ground A24 (ECU Gnd Out)	MAP sensor · pin 1	0462-201-1631
19	spare				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
20	*spare*				
21	20 White	`Injector 1 drive (-)`	Injector 1 drive (-)	Injector 1 · pin 2	`0462-201-1631`
22	20 White	`Injector 2 drive (-)`	Injector 2 drive (-)	Injector 2 · pin 2	`0462-201-1631`
23	20 White	`Injector 3 drive (-)`	Injector 3 drive (-)	Injector 3 · pin 2	`0462-201-1631`
24	20 White	`Injector 4 drive (-)`	Injector 4 drive (-)	Injector 4 · pin 2	`0462-201-1631`
25	20 Orange	`+5 V coolant pressure`	+5 V sensor supply	Coolant pressure sensor · pin B	`0462-201-1631`
26	20 White	`Coolant pressure signal`	Coolant pressure signal	Coolant pressure sensor · pin C	`0462-201-1631`
27	20 Orange	`+5 V oil pressure`	+5 V sensor supply	Oil pressure sensor · pin 2	`0462-201-1631`
28	20 White	`Oil pressure signal`	Oil pressure signal	Oil pressure sensor · pin 3	`0462-201-1631`
29	20 Blue	`Sensor ground trunk (oil / coolant pressure, oil / charge temp)`	Sensor ground B22 (ECU Gnd Out)	Splice to: Coolant pressure sensor · pin A; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	`0462-201-1631`
30	18 Red	`+12 V boost + flex`	Switched +12 V	Splice to: Boost control solenoid · pin 1; Flex fuel sensor · pin A	`0462-201-1631`
31	20 White	`Flex fuel signal`	Flex fuel signal	Flex fuel sensor · pin C	`0462-201-1631`
32	*spare*				
33	20 White	`Intake temp signal`	Intake temp signal	Intake air temp sensor (manifold) · pin 1	`0462-201-1631`
34	20 Blue	`Sensor ground trunk (intake temp, throttle, coolant temp)`	Sensor ground A24 (ECU Gnd Out)	Splice to: Coolant temp sensor · pin 2; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2	`0462-201-1631`
35	*spare*				
36	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				
41	20 Red	`+5 V throttle sensor`	+5 V sensor supply	Electronic throttle body · pin 3	`0462-201-1631`
42	20 Green	`Throttle pos 1 main`	Throttle pos 1 main	Electronic throttle body · pin 6	`0462-201-1631`
43	*spare*				
44	20 Blue	`Throttle pos 2 sub`	Throttle pos 2 sub	Electronic throttle body · pin 5	`0462-201-1631`
45	18 Red	`ETB motor +`	ETB motor +	Electronic throttle body · pin 4	`0462-201-1631`
46	18 Black	`ETB motor -`	ETB motor -	Electronic throttle body · pin 1	`0462-201-1631`
47	Shield	`Throttle shield`	Shield drain A7	Shield, not connected at the device end	`0462-201-1631`
48	*spare*				
49	*spare*				
50	Shield	`ETB motor shield`	Shield drain B17	Shield, not connected at the device end	`0462-201-1631`
51	*spare*				
52	20 Red	`+5 V turbo speed`	+5 V sensor supply	Turbo speed sensor · pin A	`0462-201-1631`
53	20 Blue	`Turbo speed signal`	Turbo speed signal	Turbo speed sensor · pin B	`0462-201-1631`
54	*spare*				
55	*spare*				
56	20 Yellow	`Turbo speed ground`	Sensor ground A24 (ECU Gnd Out)	Turbo speed sensor · pin C	`0462-201-1631`

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
57	Shield	Turbo speed shield	Shield drain A7	Shield, not connected at the device end	0462-201-1631
58	20 White	Boost solenoid drive (-)	Boost solenoid (-)	Boost control solenoid · pin 2	0462-201-1631
59	20 White	Charge temp signal	Charge temp signal	Charge pipe air temp sensor · pin 1	0462-201-1631
60	*spare*				
61	20 White	Oil temp signal	Oil temp signal	Oil temp sensor · pin 1	0462-201-1631
62	20 Black	Flex fuel sensor return	Ground	Flex fuel sensor · pin B	0462-201-1631
63	20 Red	+8 V to cam sensor	+8 V sensor supply	Cam sensor · pin 1	0462-201-1631
64	20 Blue	Cam sensor signal	Cam sensor signal	Cam sensor · pin 2	0462-201-1631
65	20 Yellow	Cam sensor ground	Sensor ground A24 (ECU Gnd Out)	Cam sensor · pin 3	0462-201-1631
66	Shield	Cam sensor shield	Shield drain A7	Shield, not connected at the device end	0462-201-1631
67	20 Orange	+8 V to gearbox speed sensor	+8 V sensor supply	Gearbox speed sensor · pin 1	0462-201-1631
68	20 White	Gearbox speed signal	Gearbox speed signal	Gearbox speed sensor · pin 3	0462-201-1631
69	*spare*				
70	20 White	Coolant temp signal	Coolant temp signal	Coolant temp sensor · pin 1	0462-201-1631
71	20 Blue	Knock sensor signal	Knock sensor signal	Knock sensor · pin 1	0462-201-1631
72	20 White	Knock sensor (-)	Sensor ground B22 (ECU Gnd Out)	Knock sensor · pin 2	0462-201-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
73	Shield	Knock sensor shield	Shield drain B17	Shield, not connected at the device end	0462-201-1631
74	20 White	Crank sensor signal	Crank sensor signal	Crank sensor · pin 1	0462-201-1631
75	20 Blue	Crank sensor ground	Sensor ground A24 (ECU Gnd Out)	Crank sensor · pin 2	0462-201-1631
76	Shield	Crank sensor shield	Shield drain A7	Shield, not connected at the device end	0462-201-1631
77	16 Red	+12 V to reverse switch	+12 V to reverse switch	Reverse light switch · pin 2	0462-201-1631
78	16 Yellow	Switched +12 V from reverse switch	Reverse +12 V	Reverse light switch · pin 1	0462-201-1631
79	20 White	CAN H to CAN-Lambda	CAN H	Splice to: CAN bus end terminating resistor 120 ohm (behind the CAN-Lambda plug) · pin 1; CAN-Lambda wideband controller · pin 4	0462-201-1631
80	20 Green	CAN L to CAN-Lambda	CAN L	Splice to: CAN bus end terminating resistor 120 ohm (behind the CAN-Lambda plug) · pin 2; CAN-Lambda wideband controller · pin 3	0462-201-1631
81	Shield	CAN-Lambda shield	CAN shield drain	Shield, not connected at the device end	0462-201-1631
82	*spare*				
83	18 Red	Power steering pump enable +12 V	EHPS enable +12 V	Power steering pump plug C · pin 1	0462-201-1631
84	20 White	Power steering pump speed	EHPS pump speed	Power steering pump plug B · pin 2	0462-201-1631
85	18 White	Power steering pump relay coil (-)	EHPS relay coil (-)	Power steering pump plug B · pin 5	0462-201-1631
86	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				
94	*spare*				
95	14 Red	`CAN-Lambda +12 V`	CAN-Lambda +12 V	Splice to: CAN-Lambda wideband controller · pin 1	`0462-210-1231`
96	14 Black	`CAN-Lambda ground`	Ground	Splice to: CAN-Lambda wideband controller · pin 2	`0462-210-1231`
97	*spare*				
98	*spare*				
99	*spare*				
100	*spare*				
101	*spare*				
102	*spare*				

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-engine

Crank sensor 90980-10947

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Crank sensor signal	Signal	Firewall bulkhead connector (engine side) · pin 74	in kit CONN-75800
2	20 Blue	Crank sensor ground	Ground	Firewall bulkhead connector (engine side) · pin 75	in kit CONN-75800

Pin numbers: TBD · harness AB-engine

Cam sensor DT06-3S-CE05 + W3S

FACE SOURCED



latch top


wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+8 V to cam sensor`	+8 V	Firewall bulkhead connector (engine side) · pin 63	`0462-201-16141`
2	20 Blue	`Cam sensor signal`	Signal	Firewall bulkhead connector (engine side) · pin 64	`0462-201-16141`
3	20 Yellow	`Cam sensor ground`	Ground	Firewall bulkhead connector (engine side) · pin 65	`0462-201-16141`

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Turbo speed sensor DT06-3S-CE05 + W3S

FACE SOURCED

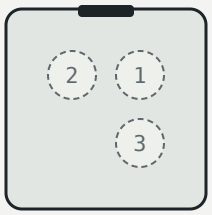


wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	`+5 V turbo speed`	+5 V	Firewall bulkhead connector (engine side) · pin 52	`0462-201-16141`
B	20 Blue	`Turbo speed signal`	Signal	Firewall bulkhead connector (engine side) · pin 53	`0462-201-16141`
C	20 Yellow	`Turbo speed ground`	Ground	Firewall bulkhead connector (engine side) · pin 56	`0462-201-16141`

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Flex fuel sensor 13519047

FACE NOT SOURCED

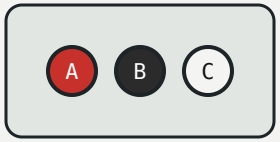


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	+12 V flex fuel	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 30; Boost control solenoid · pin 1	15326426
B	20 Black	Flex fuel sensor return	12 V sensor return	Firewall bulkhead connector (engine side) · pin 62	15326426
C	20 White	Flex fuel signal	Signal	Firewall bulkhead connector (engine side) · pin 31	15326426

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Flex fuel pin table) · harness AB-engine

Electronic throttle body D 261 205 358-01

FACE SOURCED

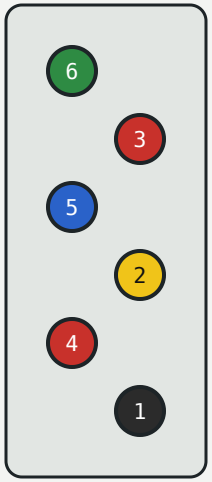


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Black	ETB motor -	Motor -	Firewall bulkhead connector (engine side) · pin 46	5-965906-1
2	20 Yellow	Throttle sensor ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 34; Coolant temp sensor · pin 2; Intake air temp sensor (manifold) · pin 2	in kit D 261 205 358-01
3	20 Red	+5 V throttle sensor	+5 V	Firewall bulkhead connector (engine side) · pin 41	in kit D 261 205 358-01
4	18 Red	ETB motor +	Motor +	Firewall bulkhead connector (engine side) · pin 45	5-965906-1
5	20 Blue	Throttle pos 2 sub	Position 2 (sub)	Firewall bulkhead connector (engine side) · pin 44	in kit D 261 205 358-01
6	20 Green	Throttle pos 1 main	Position 1 (main)	Firewall bulkhead connector (engine side) · pin 42	in kit D 261 205 358-01

Pin numbers: Bosch Motorsport ETB data sheet 51048715 (pins 1A-6F) · harness AB-engine

MAP sensor 354404

FACE NOT SOURCED

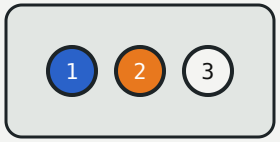


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	MAP sensor ground	Ground	Firewall bulkhead connector (engine side) · pin 18	in kit 354404
2	20 Orange	+5 V MAP sensor	+5 V	Firewall bulkhead connector (engine side) · pin 16	in kit 354404
3	20 White	MAP sensor signal	Signal	Firewall bulkhead connector (engine side) · pin 17	in kit 354404

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (MAP pin table) · harness AB-engine

Injector 1 CONN-76270

FACE NOT SOURCED

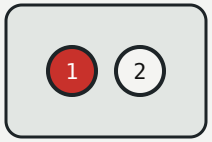


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	Injector 1 +12 V	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	Injector 1 drive (-)	Drive (-)	Firewall bulkhead connector (engine side) · pin 21	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 2 CONN-76270

FACE NOT SOURCED

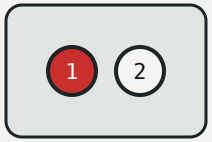


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	Injector 2 +12 V	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	Injector 2 drive (-)	Drive (-)	Firewall bulkhead connector (engine side) · pin 22	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 3 CONN-76270

FACE NOT SOURCED

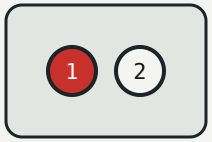


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	Injector 3 +12 V	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	Injector 3 drive (-)	Drive (-)	Firewall bulkhead connector (engine side) · pin 23	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 4 CONN-76270

FACE NOT SOURCED

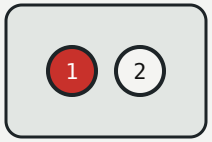

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	Injector 4 +12 V	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1	in kit CONN-76270
2	20 White	Injector 4 drive (-)	Drive (-)	Firewall bulkhead connector (engine side) · pin 24	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Ignition coil 1 90980-11885

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 1 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 1 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 9	TBD
4	16 Black	`Coil 1 ground`	Ground	Splice to: Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Ignition coil 2 90980-11885

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 2 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 2 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 10	TBD
4	16 Black	`Coil 2 ground`	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Ignition coil 3 90980-11885

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 3 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 4 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 3 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 11	TBD
4	16 Black	`Coil 3 ground`	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Ignition coil 4 90980-11885

FACE SOURCED



latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 4 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 4 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 12	TBD
4	16 Black	`Coil 4 ground`	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Boost control solenoid 12052641

FACE NOT SOURCED

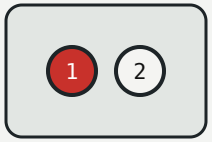

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+12 V boost solenoid`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 30; Flex fuel sensor · pin A	12084200
2	20 White	`Boost solenoid drive (-)`	Drive (-)	Firewall bulkhead connector (engine side) · pin 58	12084200

Pin numbers: TBD · harness AB-engine

Coolant temp sensor 90980-11062

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Coolant temp signal	Signal	Firewall bulkhead connector (engine side) · pin 70	8100-0461
2	20 Blue	Coolant temp ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 34; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

Intake air temp sensor (manifold) 90980-11062

FACE SOURCED



latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Intake temp signal	Signal	Firewall bulkhead connector (engine side) · pin 33	8100-0461
2	20 Blue	Intake temp ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 34; Coolant temp sensor · pin 2; Electronic throttle body · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

Oil pressure sensor 354404

FACE NOT SOURCED

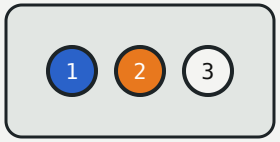


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	Oil pressure ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	in kit 354404
2	20 Orange	+5 V oil pressure	+5 V	Firewall bulkhead connector (engine side) · pin 27	in kit 354404
3	20 White	Oil pressure signal	Signal	Firewall bulkhead connector (engine side) · pin 28	in kit 354404

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Oil pressure pin table) · harness AB-engine

Fuel pressure sensor 354404

FACE NOT SOURCED

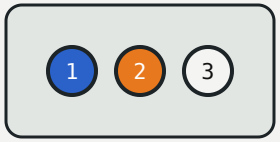

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	Fuel pressure ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 15; Gearbox speed sensor · pin 2	in kit 354404
2	20 Orange	+5 V fuel pressure	+5 V	Firewall bulkhead connector (engine side) · pin 13	in kit 354404
3	20 White	Fuel pressure signal	Signal	Firewall bulkhead connector (engine side) · pin 14	in kit 354404

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Fuel pressure pin table) · harness AB-engine

Coolant pressure sensor

pigtail supplied with the sensor (owned)

FACE NOT SOURCED

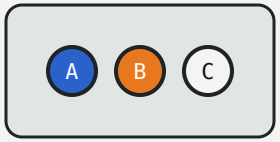

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
A	20 Blue	Coolant pressure ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 29; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	solder splice onto the pigtail black lead
B	20 Orange	+5 V coolant pressure	+5 V	Firewall bulkhead connector (engine side) · pin 25	solder splice onto the pigtail red lead
C	20 White	Coolant pressure signal	Signal	Firewall bulkhead connector (engine side) · pin 26	solder splice onto the pigtail green lead

Pin numbers: Dan's sensor sheet + seller connection guide (Dan 2026-10-30): A / plug 1 GND black, B / plug 2 supply red, C / plug 3 output green · harness AB-engine

Starter solenoid trigger plug 90980-11400

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	12 Red	Starter solenoid S	Solenoid S (start)	Firewall bulkhead connector (engine side) · pin 3	in kit CONN-76058 (Sumitomo TS187 4.8 mm sealed female, 12-10 AWG)

Pin numbers: single cavity (Toyota RM1022E housing list: 90980-11400 is 1-way, 4.8 mm tab, sealed) · harness AB-engine

Reverse light switch 90980-11250

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Yellow	Switched +12 V from reverse switch	Switched +12 V (NO)	Firewall bulkhead connector (engine side) · pin 78	8100-0461
2	16 Red	+12 V to reverse switch	+12 V (COM)	Firewall bulkhead connector (engine side) · pin 77	8100-0461

Pin numbers: TBD · harness AB-engine

Oil temp sensor 90980-11062

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Oil temp signal	Signal	Firewall bulkhead connector (engine side) · pin 61	8100-0461
2	20 Blue	Oil temp ground	Ground	Splice to: Charge pipe air temp sensor · pin 2; Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1	8100-0461

Pin numbers: TBD · harness AB-engine

Charge pipe air temp sensor 90980-11062

FACE SOURCED



latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Charge temp signal	Signal	Firewall bulkhead connector (engine side) · pin 59	8100-0461
2	20 Blue	Charge temp ground	Ground	Splice to: Oil temp sensor · pin 2; Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1	8100-0461

Pin numbers: TBD · harness AB-engine

Knock sensor 1 928 403 874

FACE NOT SOURCED

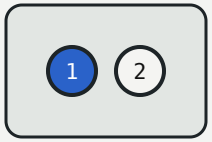

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	Knock sensor signal	Signal	Firewall bulkhead connector (engine side) · pin 71	BDK 2.8
2	20 White	Knock sensor (-)	Ground	Firewall bulkhead connector (engine side) · pin 72	BDK 2.8

Pin numbers: TBD · harness AB-engine

Gearbox speed sensor 90980-11143

FACE SOURCED




mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	+8 V to gearbox speed sensor	+8 V	Firewall bulkhead connector (engine side) · pin 67	8100-0461
2	20 Blue	Gearbox speed ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 15; Fuel pressure sensor · pin 1	8100-0461
3	20 White	Gearbox speed signal	Signal	Firewall bulkhead connector (engine side) · pin 68	8100-0461

Pin numbers: Toyota 3-wire speed sensor pinout (wilbo666 wiki; Daniel 2026-09-28) · harness AB-engine

CAN-Lambda wideband controller DTM06-4S + WM-4S

FACE SOURCED

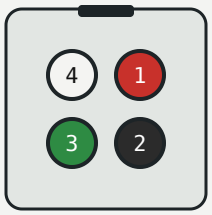

latch top


wire side (where the contacts go in) view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	CAN-Lambda +12 V	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 95	0462-005-2031
2	16 Black	CAN-Lambda ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 96	0462-005-2031
3	20 Green	CAN L to CAN-Lambda	CAN L	Splice to: Firewall bulkhead connector (engine side) · pin 80; CAN bus end terminating resistor 120 ohm (behind the CAN-Lambda plug) · pin 2	0462-201-2031
4	20 White	CAN H to CAN-Lambda	CAN H	Splice to: Firewall bulkhead connector (engine side) · pin 79; CAN bus end terminating resistor 120 ohm (behind the CAN-Lambda plug) · pin 1	0462-201-2031

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Power steering pump plug C 90980-10942

FACE SOURCED

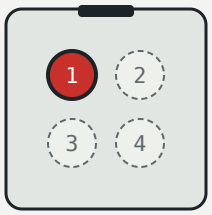


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	Power steering pump enable +12 V	+12 V (IG)	Firewall bulkhead connector (engine side) · pin 83	82998-12440
2	*spare*				
3	*spare*				
4	*spare*				

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine

Power steering pump plug B 90980-10897

FACE SOURCED

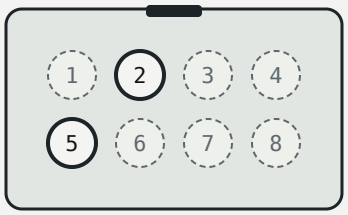

mating face view


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	☐ 20 White	`Power steering pump speed`	Speed signal	Firewall bulkhead connector (engine side) · pin 84	`82998-12440`
3	*spare*				
4	*spare*				
5	☐ 18 White	`Power steering pump relay coil (-)`	Relay coil drive (-)	Firewall bulkhead connector (engine side) · pin 85	`82998-12440`
6	*spare*				
7	*spare*				
8	*spare*				

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine

CabinPower

Low-beam relay (K-HL, LOGIC fuse box seat M1) 5-1393292-8

FACE SOURCED

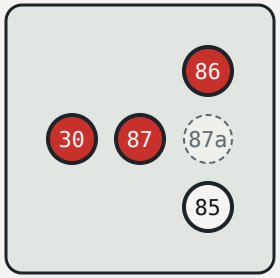


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	Low-beam relay feed	+12 V in	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86; DRL cut relay (glove box by the POWER box) (RLY-DRL) · pin 86	42281-1
85	18 White	Low-beam relay coil (-)	Coil (-)	Splice to: Cowl plug IE1 (LH kick); DRL cut relay (glove box by the POWER box) (RLY-DRL) · pin 85	280919-2
86	16 Red	Low-beam relay coil +	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; DRL cut relay (glove box by the POWER box) (RLY-DRL) · pin 86	280919-2
87	14 Red	Low beam +12 V out	+12 V out	Splice to: High-beam relay (K-HR, LOGIC fuse box seat M2) · terminal 86; LH headlamp H1; RH headlamp H2	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

Horn relay (K-HORN, LOGIC fuse box seat M3) 4-1904124-3

FACE SOURCED

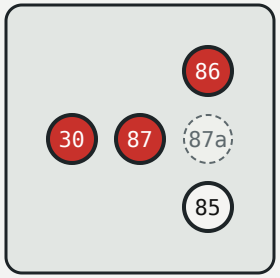


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	Horn relay feed	+12 V in	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-4; Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 86	42281-1
85	18 White	Horn relay coil (-)	Coil (-)	Cowl plug IE1 (LH kick)	280919-2
86	16 Red	Horn relay coil +	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-4; Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 30	280919-2
87	14 Red	Horn +12 V out	+12 V out	Splice to: LH horn · pin 1; RH horn · pin 1	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

High-beam relay (K-HR, LOGIC fuse box seat M2) 5-1393292-8

FACE SOURCED

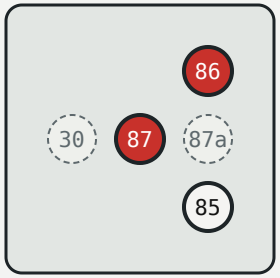


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
85	18 White	High-beam relay coil (-) to the dimmer	Coil (-)	Cowl plug IE1 (LH kick)	280919-2
86	16 Red	High-beam relay coil + (from the low beams)	Coil +	Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 87; LH headlamp H1; RH headlamp H2	280919-2
87	14 Red	High beam +12 V out	+12 V out	Splice to: RH headlamp H2; LH headlamp H1; High beam LED · pin 1	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL relay (K-DRL, LOGIC fuse box seat M8) 4-1904124-2

FACE SOURCED

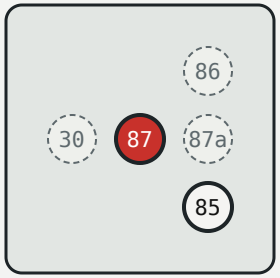


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
85	☐ 20 White	DRL relay coil (-) to the DRL switch	Coil (-)	Splice to: DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87	280919-2
87	■ 16 Red	DRL +12 V out	+12 V out	DRL cut relay (glove box by the POWER box) (RLY-DRL) · pin 30	42281-1

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL switch R13112AAAA

FACE NOT SOURCED

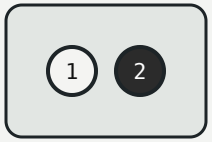


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	DRL on (to ground)	DRL relay coil and pop-up UP	Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87	280919-2
2	■ 20 Black	DRL switch ground (R8 ground lead)	Ground	Pop-up relay R8 (behind the LH dash)	280919-2

Pin numbers: Arcolectric R13 sheet: 2 × 4.8 mm QC tabs, not numbered; 1 / 2 as drawn · harness CabinPower

Pop-up diode 1 (stalk side) DT06-2S + W2S;DT04-2P-RT01

FACE SOURCED

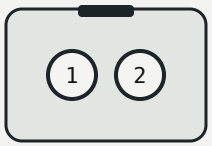


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	Pop-up UP input	D1 anode (R8 pin 8 side)	Splice to: Pop-up relay R8 (behind the LH dash); Pop-up diode 2 (DRL switch side) · pin 1	0462-201-1631
2	☐ 20 White	Pop-up UP from the stalk (R-Y)	D1 cathode (stalk side)	R-Y lead from cowl splice I2, cut near pop-up relay R8 (I2 side, behind the LH dash)	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

Pop-up diode 2 (DRL switch side) DT06-2S + W2S;DT04-2P-RT01

FACE SOURCED

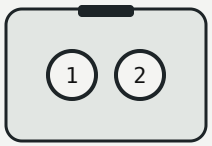


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	Pop-up UP input	D2 anode (R8 pin 8 side)	Splice to: Pop-up relay R8 (behind the LH dash); Pop-up diode 1 (stalk side) · pin 1	0462-201-1631
2	☐ 18 White	Pop-up UP from diode 2 to the key-on relay	D2 cathode (DRL switch side)	Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 30	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) 4-1904124-3

FACE SOURCED

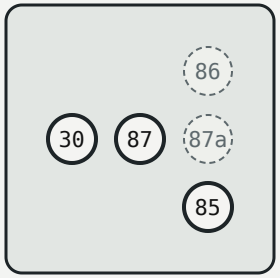

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	☐ 18 White	Pop-up UP from diode 2 to the key-on relay	Switch contact (UP command in)	Pop-up diode 2 (DRL switch side) · pin 2	42281-1
85	☐ 20 White	Pop-up relay coil (-) to the DRL switch	Coil (-)	Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87	280919-2
87	☐ 18 White	Pop-up UP command to the DRL switch (key on)	Switch contact (to the DRL switch)	Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL cut relay (glove box by the POWER box) (RLY-DRL)

FRH-A12 + FRH-A12-MB-B2;FRH-A12-T;301-1C-C-R1-U01-12VDC

FACE NOT SOURCED

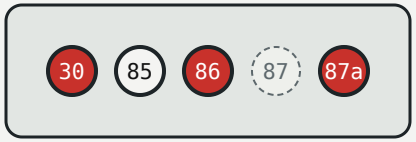

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	DRL +12 V out	+12 V in	DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 87	12129409-L
85	16 White	DRL cut relay coil (-)	Coil (-)	Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 85; Cowl plug IE1 (LH kick)	12129409-L
86	16 Red	DRL cut relay coil +	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86	12129409-L
87	*spare*				
87a	16 Red	DRL +12 V	+12 V out (NC)	Splice to: LH headlamp H1; RH headlamp H2	12129409-L

Pin numbers: ISO 7588 relay terminal numbers (Song Chuan 301 series data sheet) · harness CabinPower, EngineRoom-C

EngineRoom-C

Power steering pump plug A 90980-12068

FACE SOURCED



latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	8 Red	Power steering pump +12 V	EHPS pump +12 V	Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 87	82998-12500
2	8 Black	Power steering pump ground	Ground	Ground stud EA, RH front fender	82998-12500

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness EngineRoom-C

Alternator plug 90980-10341

FACE SOURCED

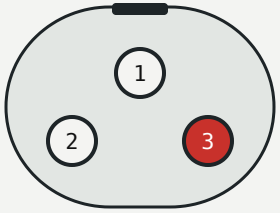

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Alternator battery sense (S)	S (battery sense)	LOGIC fuse and relay box (glove box) · fuse BUS1-9	TBD
2	20 White	Alternator charge lamp (L)	L (charge lamp)	Cowl plug IG2 (under the ECU)	TBD
3	16 Red	Alternator IG excite	Alt IG excite	Battery kill switch (trunk) · pin ALT2	TBD

Pin numbers: TBD · harness EngineRoom-C

Condenser fan ground plug DTHD06-1-8S

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	Condenser fan ground	Ground	Ground stud EA, RH front fender	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Radiator fan plug (+) DTHD06-1-8S

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	Radiator fan +12 V	+12 V	Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 30	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Condenser fan plug (+) DTHD06-1-8S

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	Condenser fan +12 V	+12 V	Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 30	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

LH horn DT06-2S-CE05 + W2S

FACE SOURCED



wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Horn LH +12 V	+12 V	Splice to: Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 87; RH horn · pin 1	0462-209-1631
2	14 Black	Horn LH ground	Ground	Splice to: Ground stud EA, RH front fender; RH horn · pin 2	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

RH horn DT06-2S-CE05 + W2S

FACE SOURCED



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Horn RH +12 V	+12 V	Splice to: Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 87; LH horn · pin 1	0462-209-1631
2	14 Black	Horn RH ground	Ground	Splice to: Ground stud EA, RH front fender; LH horn · pin 2	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Radiator fan ground plug DTHD06-1-8S

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	Radiator fan ground	Ground	Ground stud EA, RH front fender	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

HeavyDC

Trunk relay block (fuel pump relay and fuse) ST185-FB-BATT rev 7

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
BATT	10 Red	Trunk relay block +12 V	Battery relay box +	Battery kill switch (trunk) · pin MAIN2	TBD

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness HeavyDC

Firewall battery + connector (cabin side) RL00801-50RE

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	Battery + to the firewall connector	Battery +	POWER box + bar, RADLOK+ stud	INTEGRAL
1	1/0 Red	Battery + through the firewall	Battery +	Firewall battery + connector (engine side) · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery RL00801-50BK

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	Battery - to the firewall connector	Battery - (engine ground)	POWER box NEG bar, RADLOK- stud	INTEGRAL
1	1/0 Black	Battery - through the firewall	Battery - (engine ground)	Firewall battery · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery RL00801-50BK

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	Engine ground to the block	Battery - (engine ground)	Engine block ground stud, main lug	INTEGRAL
1	1/0 Black	Battery - through the firewall	Battery - (engine ground)	Firewall battery · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery + connector (engine side) RL00801-50RE

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	Battery + to the jump bus bar	Battery +	Splice to: Starter B+ stud; Jump start post · pin 1; Alternator B+ stud	INTEGRAL
1	1/0 Red	Battery + through the firewall	Battery +	Firewall battery + connector (cabin side) · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Jump start post TBD

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	2 Red	`Jump post feed`	Jump post feed	Splice to: Starter B+ stud; Firewall battery + connector (engine side) · pin 1; Alternator B+ stud	TBD

Pin numbers: TBD · harness HeavyDC

RearFuel

Fuel pump TBD

FACE NOT SOURCED

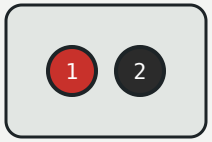

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	`Fuel pump +12 V`	Fuel pump +12 V	Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 87	TBD
2	10 Black	`Fuel pump ground`	Fuel pump ground	Ground point BL, back panel centre	TBD

Pin numbers: TBD · harness RearFuel

Dash

8-channel opto board TBD

FACE NOT SOURCED

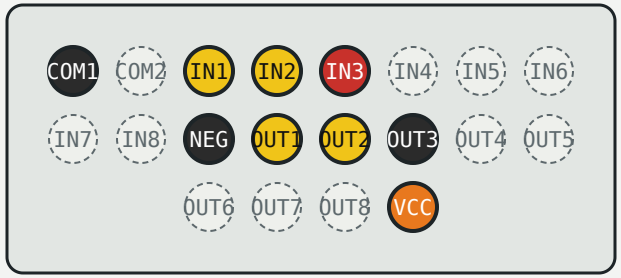

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
COM1	20 Black	Opto input return (brake / reverse / tail signals)	Opto input return	Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 1; Centre cluster ground input lead; RealDash Pi ground input lead	screw terminal (on the board)
COM2	*spare*				
IN1	16 Yellow	Brake on +12 V	Brake on +12 V	Stop lamp switch S9 (pedal)	screw terminal (on the board)
IN2	16 Yellow	Reverse to opto in 2	Reverse to opto in 2	Splice to: Firewall bulkhead connector (cabin side) · pin 78; Cowl plug IG2 (under the ECU)	screw terminal (on the board)
IN3	20 Red	Lights on +12 V	Lights on +12 V	Dimmer rheostat R10 (left of the steering wheel)	screw terminal (on the board)
IN4	*spare*				
IN5	*spare*				
IN6	*spare*				
IN7	*spare*				
IN8	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
NEG	20 Black	Opto board output ground (to the switch board)	Opto out ground	Splice to: ECUMaster CAN switch board · pin 4; Combination switch plug C16 (B), cruise switch	screw terminal (on the board)
OUT1	20 Yellow	Brake to CSB3 S7	Brake to CSB3 S7	ECUMaster CAN switch board · pin 16	screw terminal (on the board)
OUT2	20 Yellow	Reverse to CSB3 S8	Reverse to CSB3 S8	ECUMaster CAN switch board · pin 17	screw terminal (on the board)
OUT3	20 Black	Headlight sense to cluster	Headlight sense to cluster	Centre cluster headlight sense input	screw terminal (on the board)
OUT4	*spare*				
OUT5	*spare*				
OUT6	*spare*				
OUT7	*spare*				
OUT8	*spare*				
VCC	20 Orange	Opto +5 V	Opto +5 V	Splice to: ECUMaster CAN switch board · pin 3; Cruise switch ladder resistor · pin 1	screw terminal (on the board)

Pin numbers: terminal names printed on the board · harness Dash

ECUMaster CAN switch board HD36-24-33SE

FACE SOURCED

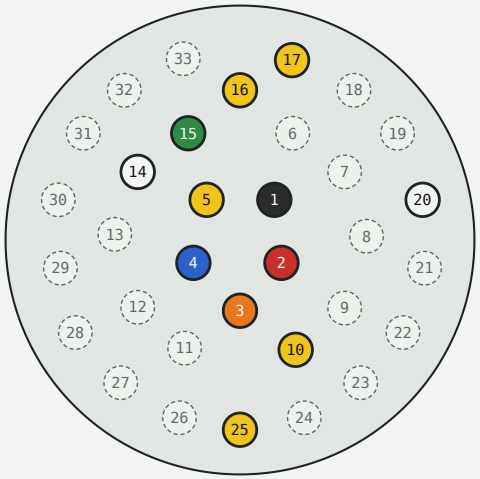

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Black	CSB3 ground	CSB3 ground	Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; Centre cluster ground input lead; RealDash Pi ground input lead; 8-channel opto board · pin COM1	0462-201-2031
2	20 Red	Switch board +12 V (CSB 5 A)	CSB3 +12 V	LOGIC fuse and relay box (glove box) · fuse BUS2-5	0462-201-2031
3	20 Orange	Switch board +5 V out	+5 V (switch board)	Splice to: 8-channel opto board · pin VCC; Cruise switch ladder resistor · pin 1	0462-201-2031
4	20 Blue	Switch board reference ground	Switch board reference ground	Splice to: 8-channel opto board · pin NEG; Combination switch plug C16 (B), cruise switch	0462-201-2031
5	20 Yellow	Clutch pedal switch	Clutch pedal switch	Cruise control clutch switch C17	0462-201-2031
6	*spare*				
7	*spare*				
8	*spare*				
9	*spare*				


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
10	20 Yellow	Cruise ladder	Cruise ladder	Splice to: Combination switch plug C16 (B), cruise switch; Cruise switch ladder resistor · pin 2	0462-201-2031
11	*spare*				
12	*spare*				
13	*spare*				
14	20 White	CAN H to CSB3	CAN H to CSB3	Splice to: ECU plug C (CAN / comms) · pin 3; Centre cluster CAN board leads; Firewall bulkhead connector (cabin side) · pin 79; RealDash Pi CAN adapter leads	0462-201-2031
15	20 Green	CAN L to CSB3	CAN L to CSB3	Splice to: ECU plug C (CAN / comms) · pin 4; Centre cluster CAN board leads; Firewall bulkhead connector (cabin side) · pin 80; RealDash Pi CAN adapter leads	0462-201-2031
16	20 Yellow	Brake to CSB3 S7	Brake to CSB3 S7	8-channel opto board · pin OUT1	0462-201-2031
17	20 Yellow	Reverse to CSB3 S8	Reverse to CSB3 S8	8-channel opto board · pin OUT2	0462-201-2031
18	*spare*				
19	*spare*				
20	20 White	Oil LED sink (CSB3)	Oil LED sink (CSB3)	Oil pressure LED · pin 2	0462-201-2031
21	*spare*				
22	*spare*				
23	*spare*				
24	*spare*				
25	20 Yellow	Cruise MAIN on	Cruise MAIN on	Combination switch plug C16 (B), cruise switch	0462-201-2031
26	*spare*				
27	*spare*				
28	*spare*				
29	*spare*				
30	*spare*				
31	*spare*				
32	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
33	*spare*				

Pin numbers: docs/enclosures/csb3-hd34-pinmap.csv cavity 14 (board CAN H) · harness Dash

RealDash Pi inline fuse 5 A `0FHM0003ZXJB + ATM-5`

FACE NOT SOURCED

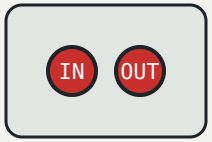

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
IN	16 Red	`RealDash Pi +12 V from the radio ACC feed`	Radio ACC +12 V (CIG & RADIO 15 A)	Cowl plug II1 (instrument panel centre)	`solder splice onto the holder lead`
OUT	20 Red	`RealDash Pi +12 V (fused 5 A)`	RealDash Pi +12 V (fused 5 A)	RealDash Pi +12 V input lead	`solder splice onto the holder lead`

Pin numbers: Littelfuse INLINE MINI Splashproof Fuse Holder datasheet: 0FHM0003ZXJB, 16 AWG GXL leads 93 mm each side, 20 A, 32 V DC, takes MINI blade fuses · harness Dash

WheelSpeed-Rear

RL wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED




wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	RL wheel speed +	RL wheel speed +	Rear VR conditioner input plug · pin 1	0462-201-16141
2	20 White	RL wheel speed -	RL wheel speed -	Rear VR conditioner input plug · pin 2	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

Rear VR conditioner input plug LP-16-J05PE-02-001

FACE SOURCED

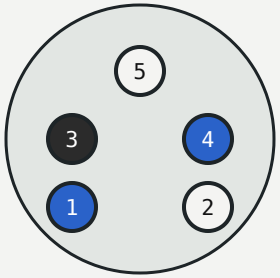

mating face view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	RL wheel speed +	RL wheel speed +	RL wheel speed sensor · pin 1	solder cup (LP-16, S16)
2	20 White	RL wheel speed -	RL wheel speed -	RL wheel speed sensor · pin 2	solder cup (LP-16, S16)
3	20 Black	Rear wheel speed sensor cable shield drains	Shield drain	Splice to: Shield, not connected at the device end	solder cup (LP-16, S16)
4	20 Blue	RR wheel speed +	RR wheel speed +	RR wheel speed sensor · pin 1	solder cup (LP-16, S16)
5	20 White	RR wheel speed -	RR wheel speed -	RR wheel speed sensor · pin 2	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness WheelSpeed-Rear

RR wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED



wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	RR wheel speed +	RR wheel speed +	Rear VR conditioner input plug · pin 4	0462-201-16141
2	20 White	RR wheel speed -	RR wheel speed -	Rear VR conditioner input plug · pin 5	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

WheelSpeed-Front

FL wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED




wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	FL wheel speed +	FL wheel speed +	Front VR conditioner input plug · pin 1	0462-201-16141
2	20 White	FL wheel speed -	FL wheel speed -	Front VR conditioner input plug · pin 2	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

Front VR conditioner input plug LP-16-J05PE-02-001

FACE SOURCED

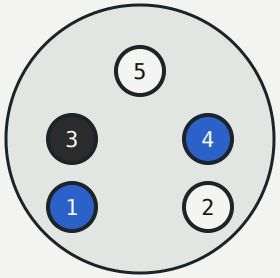

mating face view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	FL wheel speed +	FL wheel speed +	FL wheel speed sensor · pin 1	solder cup (LP-16, S16)
2	20 White	FL wheel speed -	FL wheel speed -	FL wheel speed sensor · pin 2	solder cup (LP-16, S16)
3	20 Black	Front wheel speed sensor cable shield drains	Shield drain	Splice to: Shield, not connected at the device end	solder cup (LP-16, S16)
4	20 Blue	FR wheel speed +	FR wheel speed +	FR wheel speed sensor · pin 1	solder cup (LP-16, S16)
5	20 White	FR wheel speed -	FR wheel speed -	FR wheel speed sensor · pin 2	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness WheelSpeed-Front

FR wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED



wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	FR wheel speed +	FR wheel speed +	Front VR conditioner input plug · pin 4	0462-201-16141
2	20 White	FR wheel speed -	FR wheel speed -	Front VR conditioner input plug · pin 5	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front