SCHEMATIC - every wire of the set, grouped by job; neat, not to scale

Tables are pinouts (pin | signal) of the pins each panel uses; the PINOUT TABLES sheet has every pin. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

WIRE COURS (R209): 🟥 RED ⬛ BLK 🟧 ORN 🟦 BLU ⬜ WHT 🟩 GRN 🟨 YEL **IDENT BANDS (R87):** 🟦 Blue 🟨 Yellow ☐ White - - - - built with another harness

THROUGH THE BULKHEAD - every wire that lands on the DRB102 (signals, sensor rails, feeds)

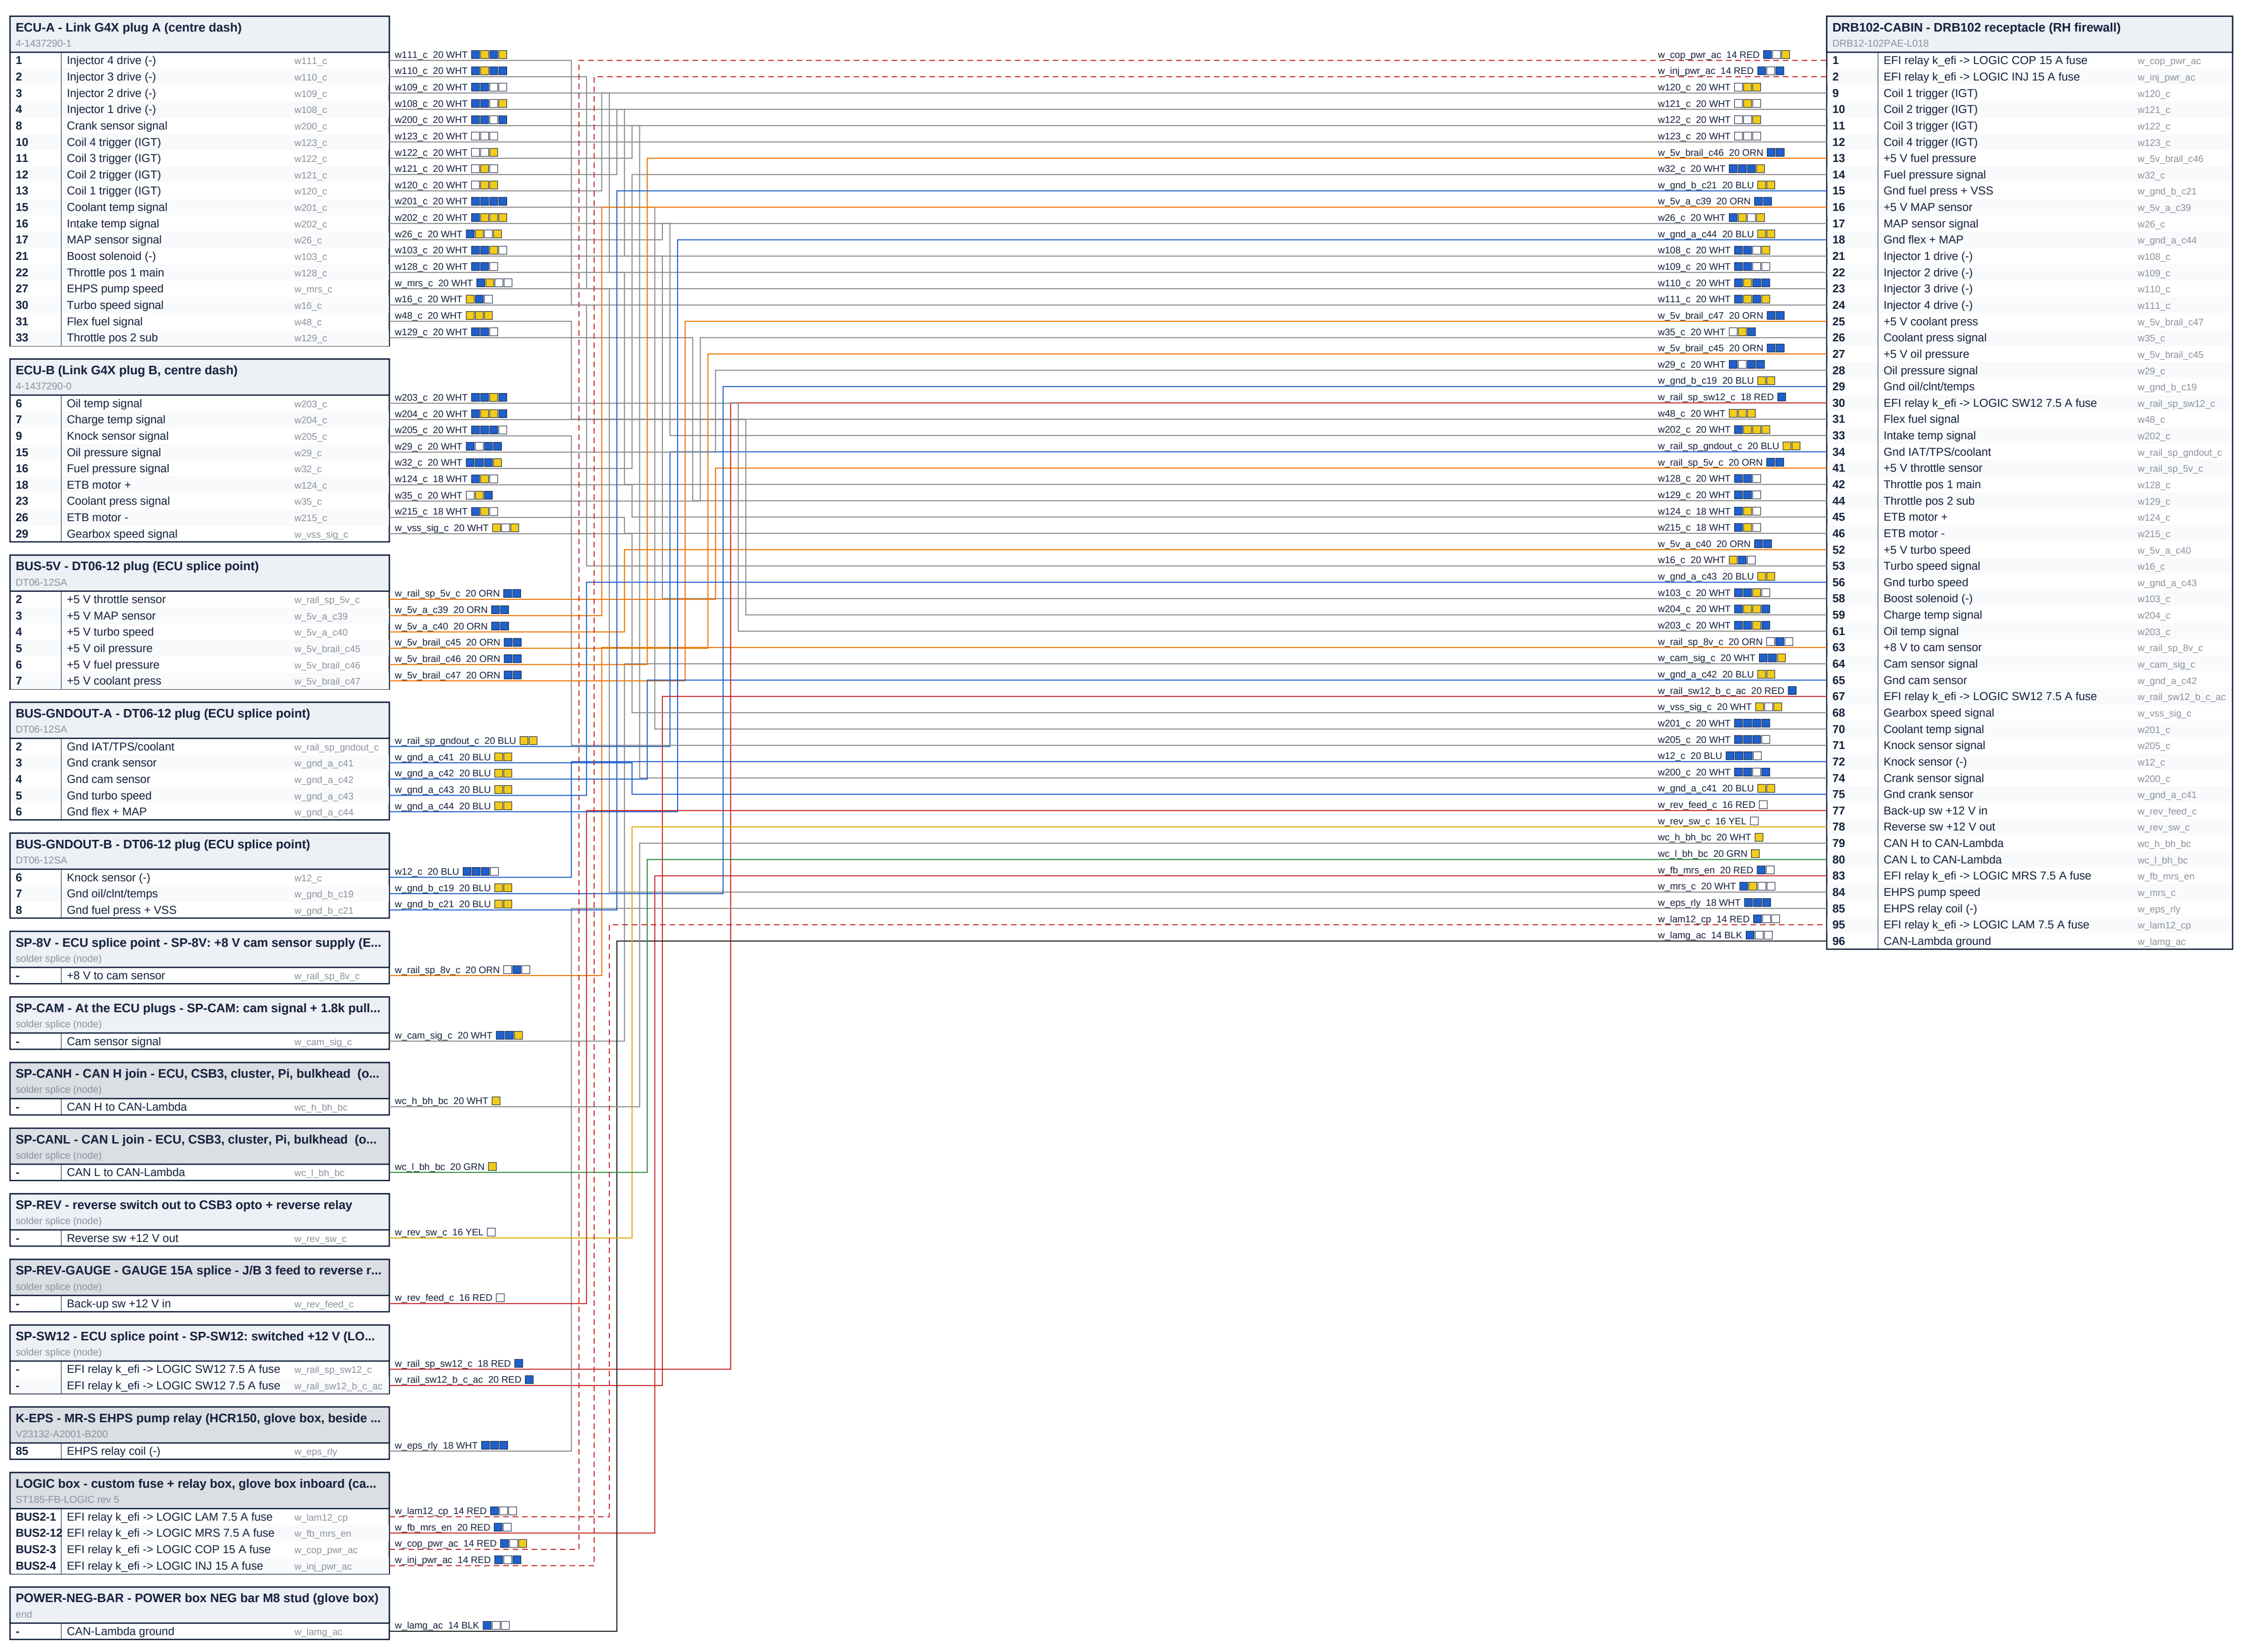
ECU-A - Link G4X plug A (centre dash)
ECU-B (Link G4X plug B, centre dash)
BUS-5V - DT06-12 plug (ECU splice point)
BUS-GNDOUT-A - DT06-12 plug (ECU splice point)
BUS-GNDOUT-B - DT06-12 plug (ECU splice point)
SP-8V - ECU splice point - SP-8V: +8 V cam sensor supply
SP-CAM - At the ECU plugs - SP-CAM: cam signal + 1.8k pull...
SP-CANH - CAN H join - ECU, CSB3, cluster, Pi, bulkhead
SP-CANL - CAN L join - ECU, CSB3, cluster, Pi, bulkhead
SP-REV - reverse switch out to CSB3 opto + reverse relay
SP-REV-GAUGE - GAUGE 15A splice - J/B 3 feed to reverse r...
SP-SW12 - ECU splice point - SP-SW12: switched +12 V (LO...
K-EPS - MR-S EHPS pump relay (HCR150, glove box, beside ...
LOGIC box - custom fuse + relay box, glove box inboard (ca...
POWER-NEG-BAR - POWER box NEG bar M8 stud (glove box)
DRB102-CABIN - DRB102 receptacle (RH firewall)

CABIN BRANCHES - pedal, wheel-speed inlines, fuel level, A/C, IG2 / start taps, relay coils, other harnesses

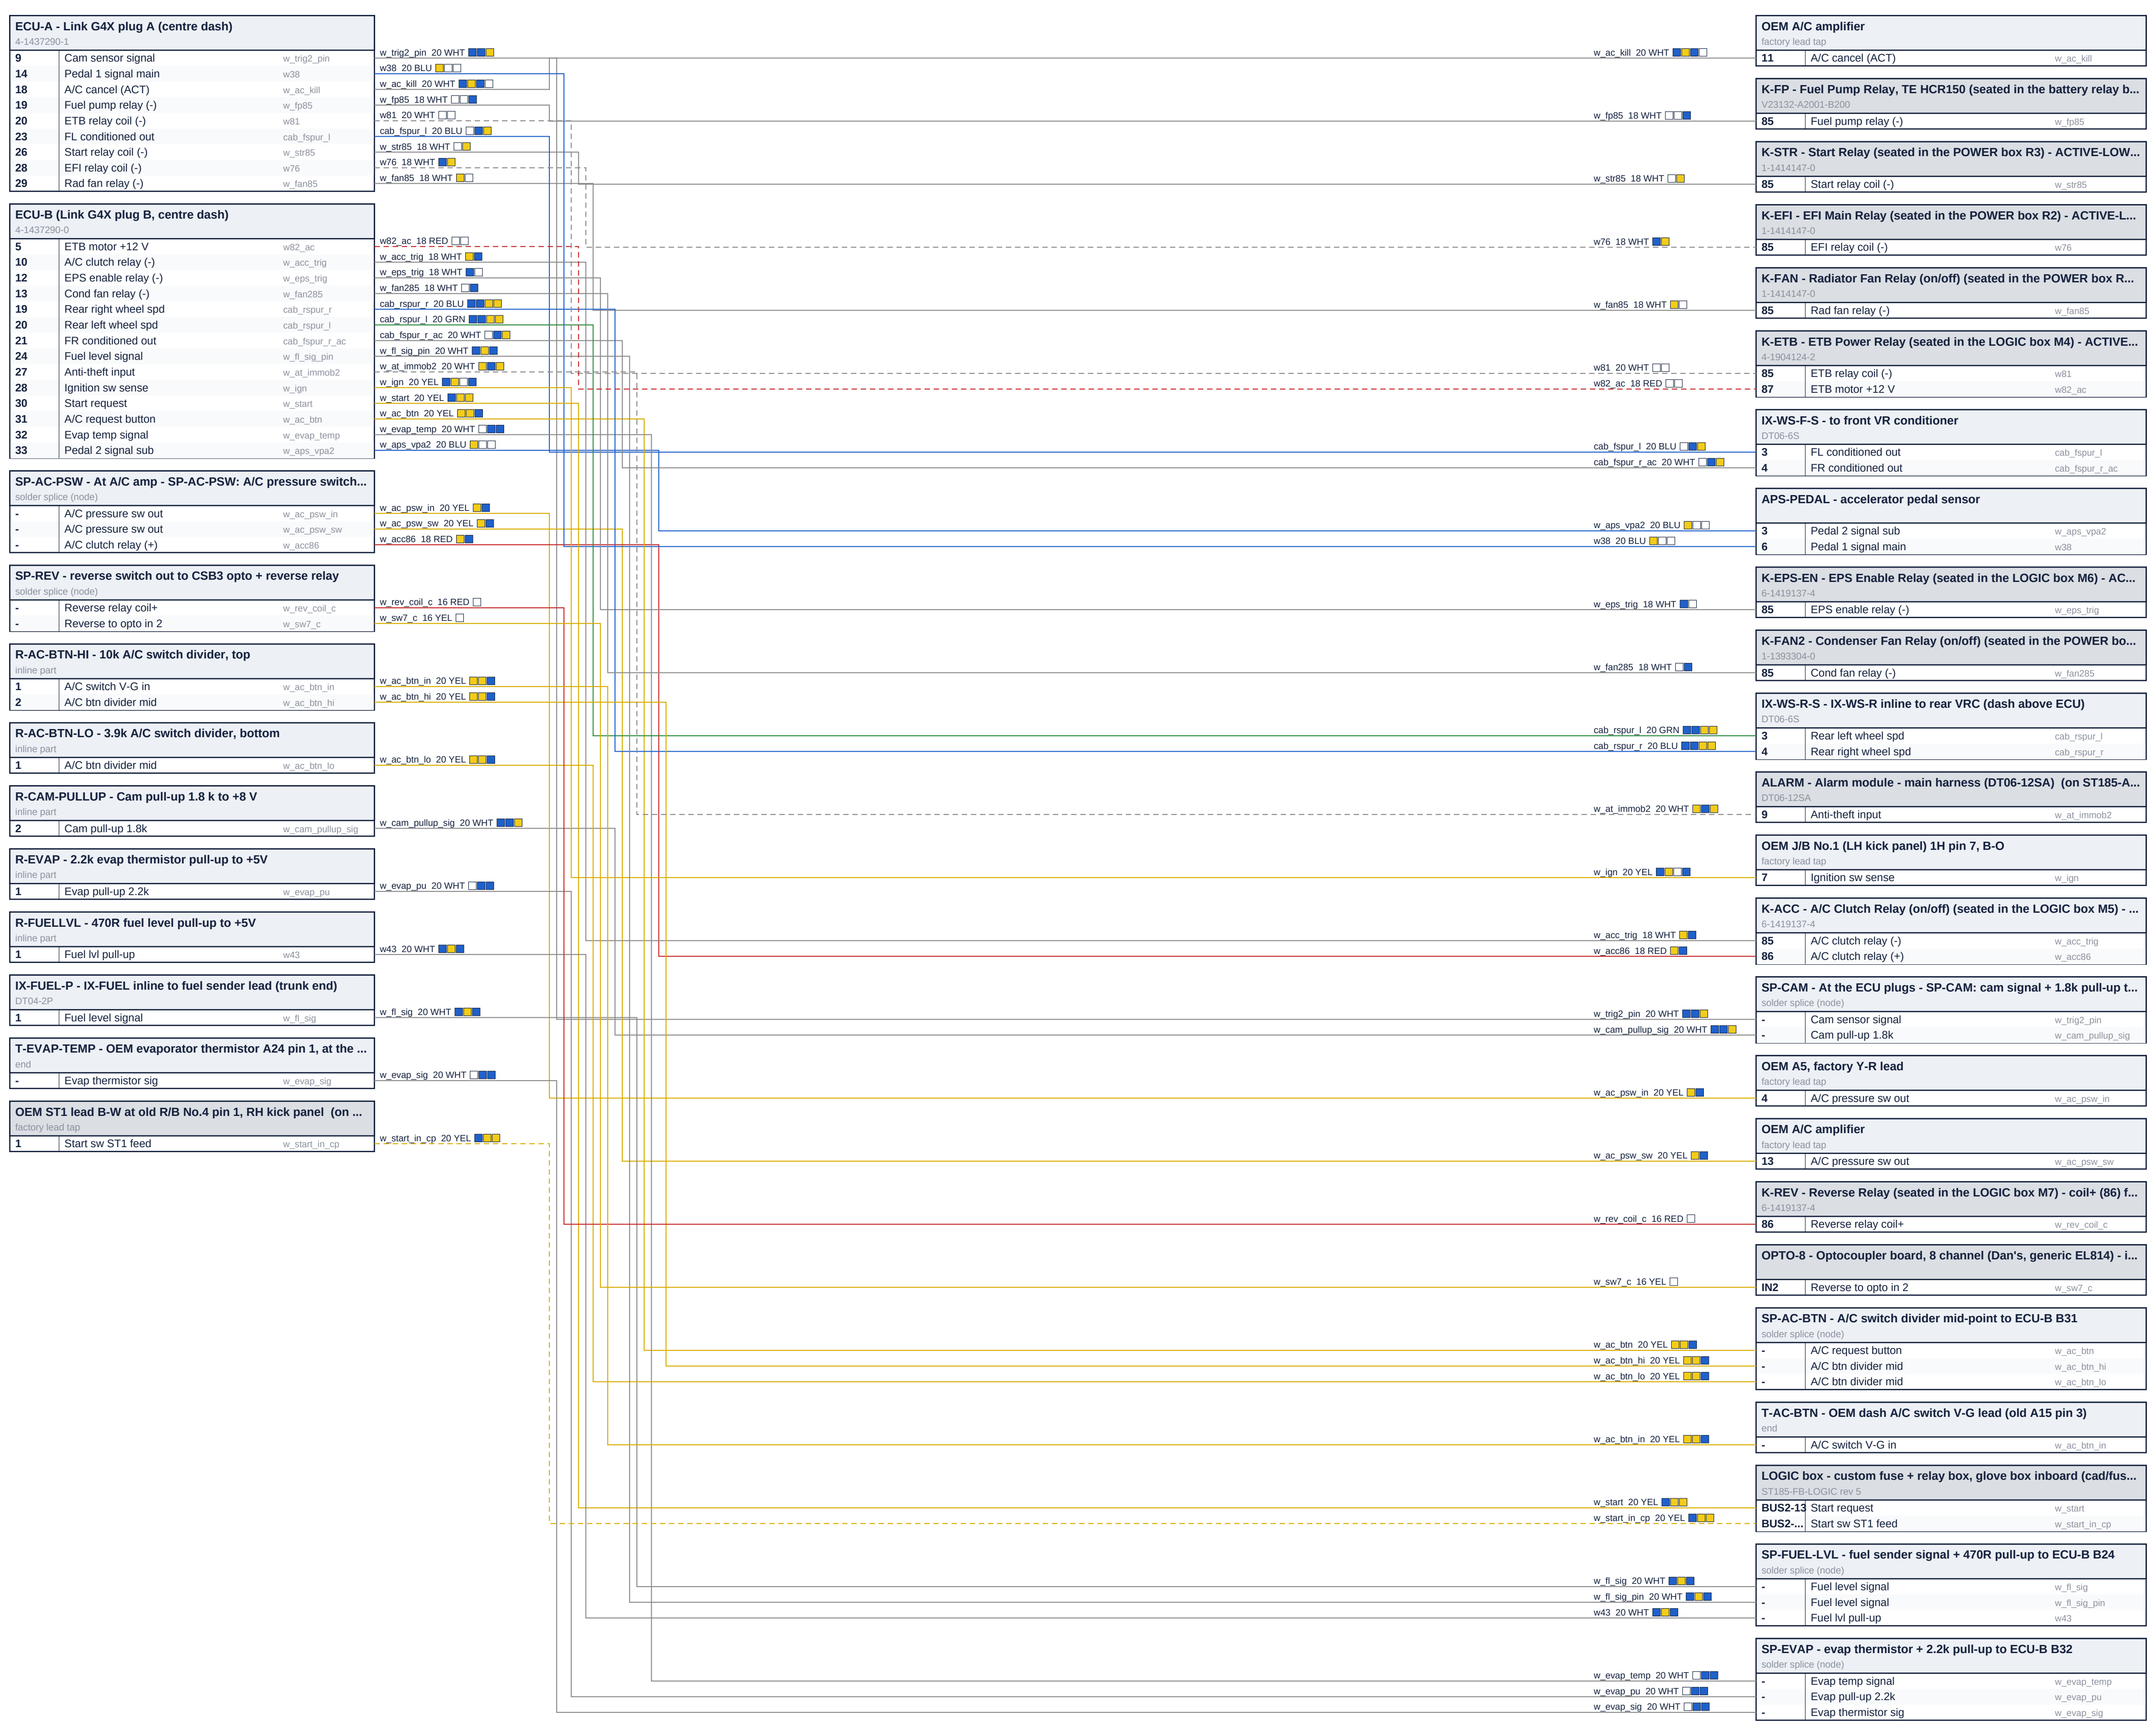
ECU-A - Link G4X plug A (centre dash)
ECU-B (Link G4X plug B, centre dash)
SP-AC-PSW - At A/C amp - SP-AC-PSW: A/C pressure switch...
SP-REV - reverse switch out to CSB3 opto + reverse relay
R-AC-BTN-HI - 10k A/C switch divider, top
R-AC-BTN-LO - 3.9k A/C switch divider, bottom
R-CAM-PULLUP - Cam pull-up 1.8 k to +8 V
R-EVAP - 2.2k evap thermistor pull-up to +5V
R-FUELLVL - 470R fuel level pull-up to +5V
IX-FUEL-P - IX-FUEL inline to fuel sender lead (trunk end)
T-EVAP-TEMP - OEM evaporator thermistor A24 pin 1, at the ...
OEM ST1 lead B-W at old R/B No.4 pin 1, RH kick panel (on ...
OEM A/C amplifier
K-FP - Fuel Pump Relay, TE HCR150 (seated in the battery relay b...
K-STR - Start Relay (seated in the POWER box R3) - ACTIVE-LOW...
K-EFI - EFI Main Relay (seated in the POWER box R2) - ACTIVE-L...
K-FAN - Radiator Fan Relay (on/off) (seated in the POWER box R...
K-ETB - ETB Power Relay (seated in the LOGIC box M4) - ACTIVE...
IX-WS-F-S - to front VR conditioner
APS-PEDAL - accelerator pedal sensor
K-EPS-EN - EPS Enable Relay (seated in the LOGIC box M6) - AC...
K-FAN2 - Condenser Fan Relay (on/off) (seated in the POWER bo...
IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)
ALARM - Alarm module - main harness (DT06-12SA) (on ST185-A...
OEM J/B No.1 (LH kick panel) 1H pin 7, B-O
K-ACC - A/C Clutch Relay (on/off) (seated in the LOGIC box M5) -
SP-CAM - At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up t...
OEM A5, factory Y-R lead
OEM A/C amplifier
K-REV - Reverse Relay (seated in the LOGIC box M7) - coil+ (86) f...
OPTO-8 - Optocoupler board, 8 channel (Dan's, generic EL814) - i...
SP-AC-BTN - A/C switch divider mid-point to ECU-B B31
T-AC-BTN - OEM dash A/C switch V-G lead (old A15 pin 3)
LOGIC box - custom fuse + relay box, glove box inboard (cad/fus...
SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24
SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32

ECU SPLICE POINT - power, grounds and sensor rails (bussed DT plugs, soldered splices, NEG bar)

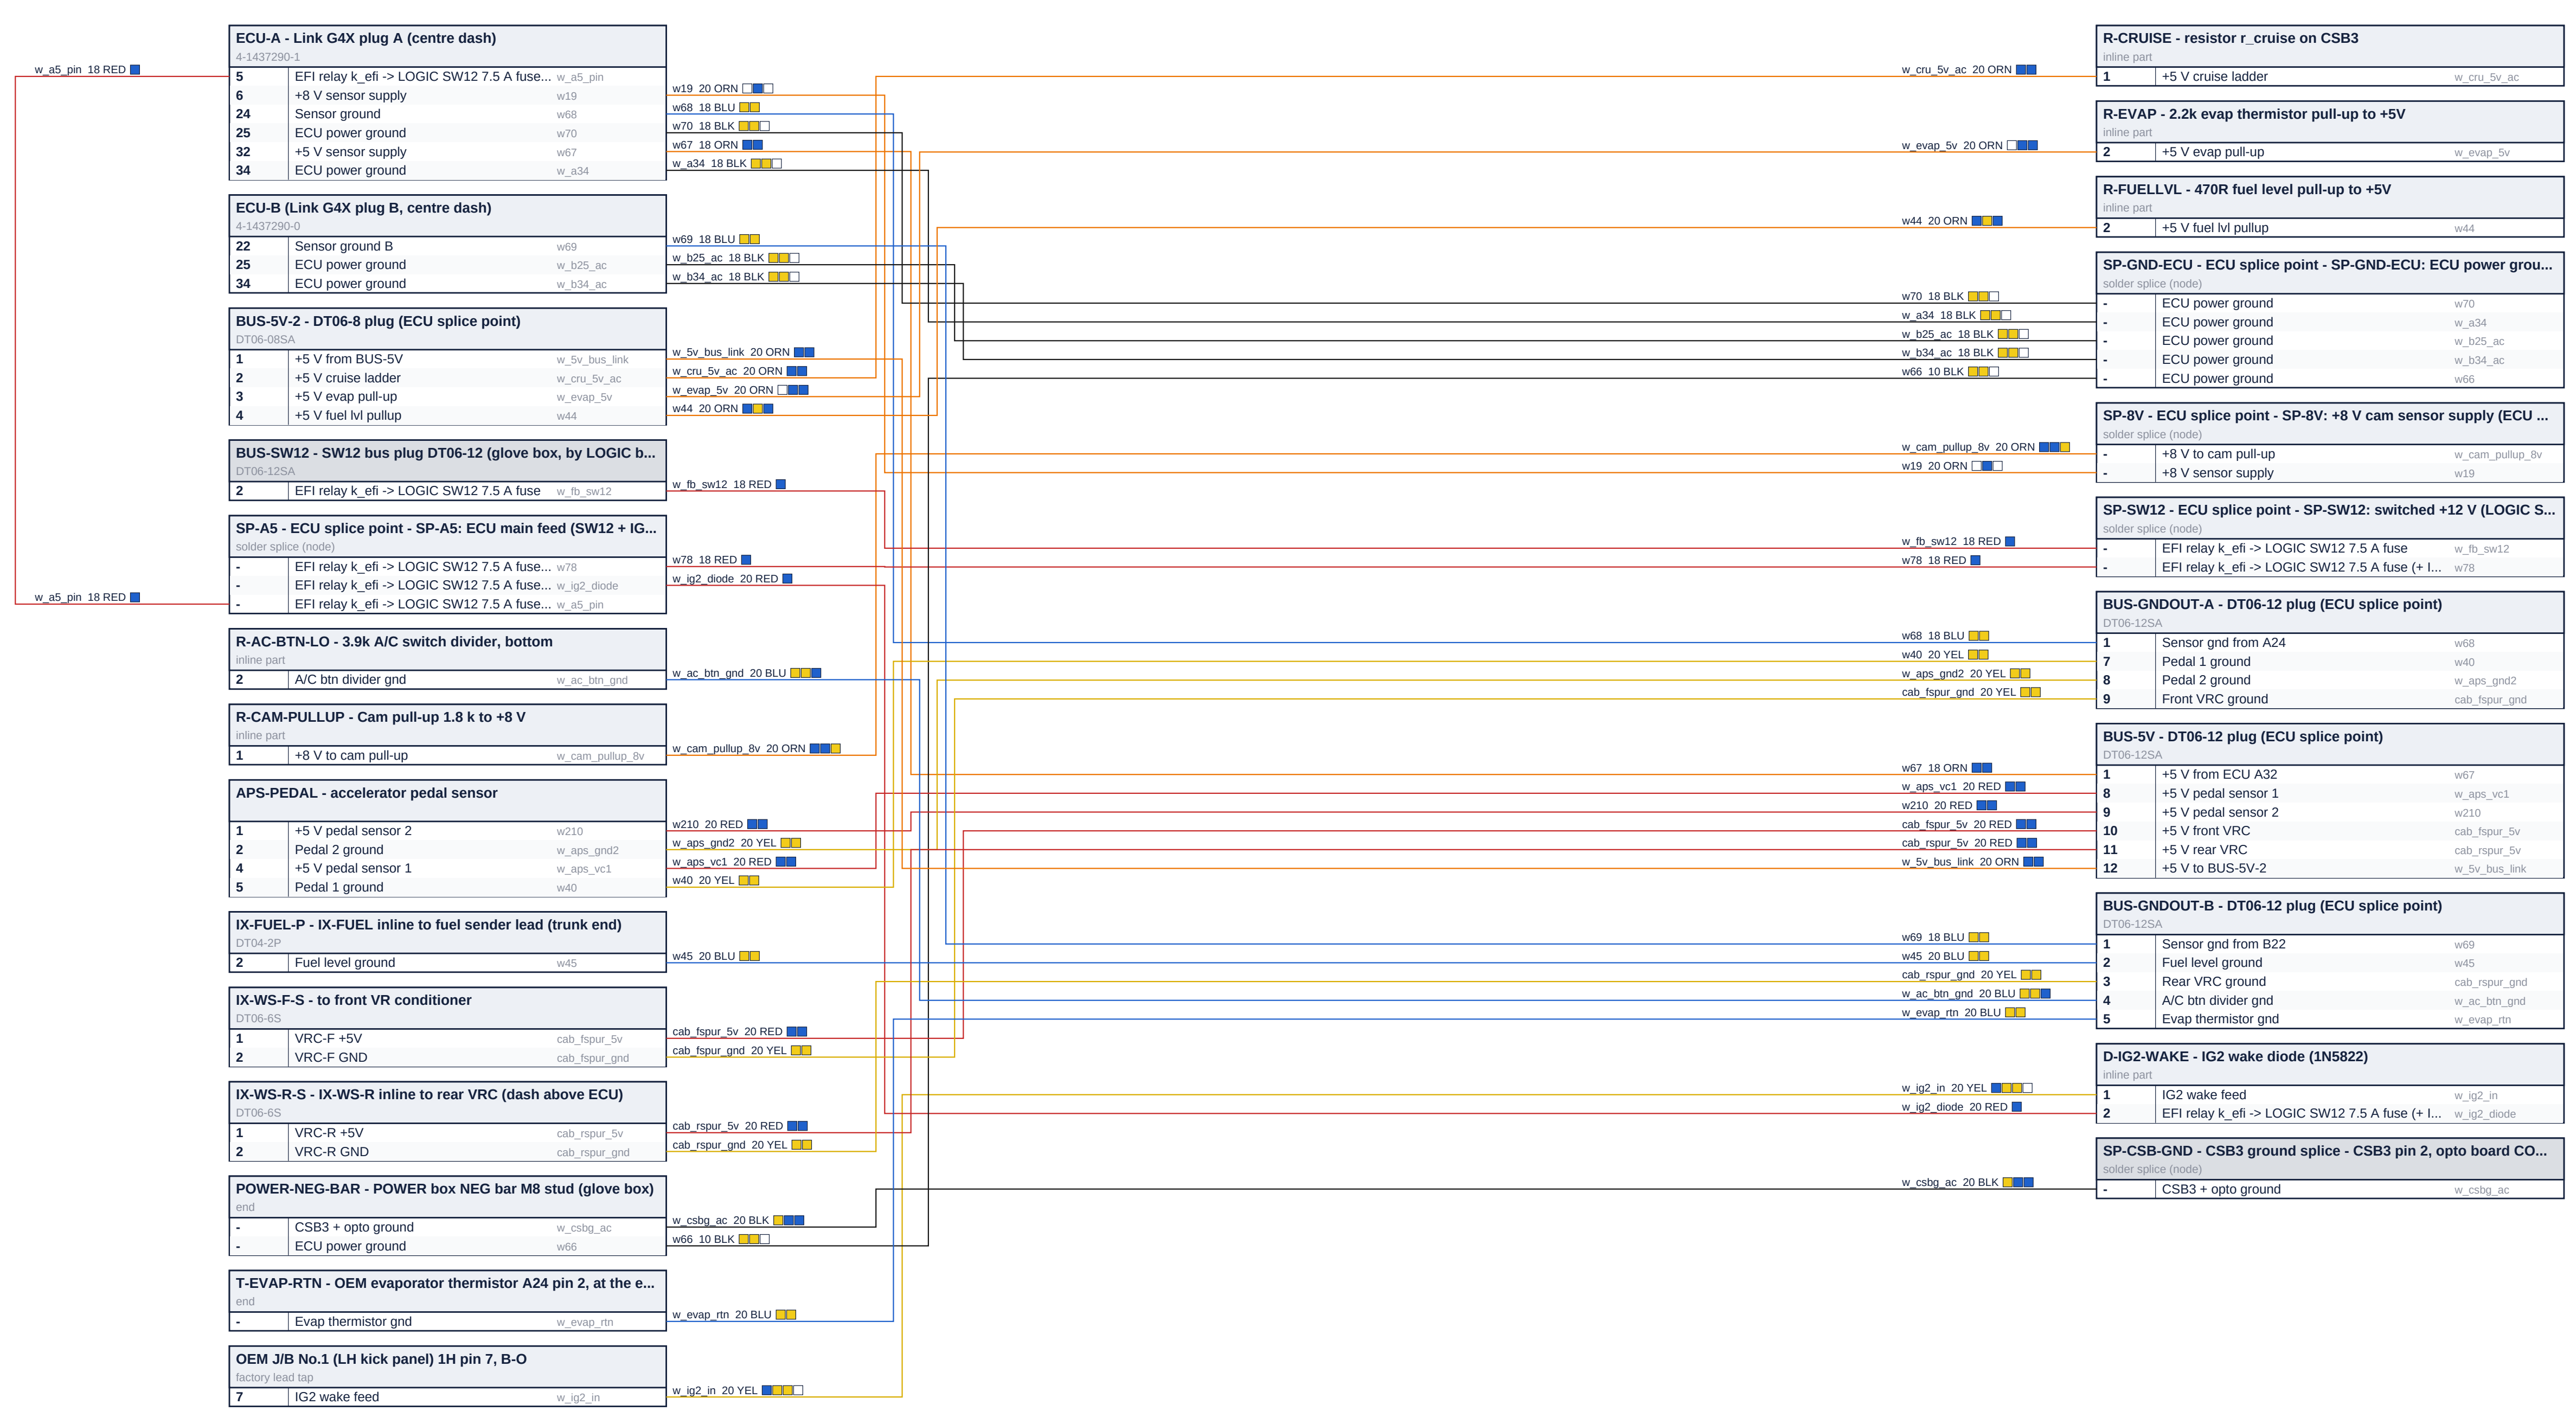
ECU-A - Link G4X plug A (centre dash)
ECU-B (Link G4X plug B, centre dash)
BUS-5V-2 - DT06-8 plug (ECU splice point)
BUS-SW12 - SW12 bus plug DT06-12 (glove box, by LOGIC b...
SP-A5 - ECU splice point - SP-A5: ECU main feed (SW12 + IG...
R-AC-BTN-LO - 3.9k A/C switch divider, bottom
R-CAM-PULLUP - Cam pull-up 1.8 k to +8 V
APS-PEDAL - accelerator pedal sensor
IX-FUEL-P - IX-FUEL inline to fuel sender lead (trunk end)
IX-WS-F-S - to front VR conditioner
IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)
POWER-NEG-BAR - POWER box NEG bar M8 stud (glove box)
T-EVAP-RTN - OEM evaporator thermistor A24 pin 2, at the e...
OEM J/B No.1 (LH kick panel) 1H pin 7, B-O
R-CRUISE - resistor r_cruise on CSB3
R-EVAP - 2.2k evap thermistor pull-up to +5V
R-FUELLVL - 470R fuel level pull-up to +5V
SP-GND-ECU - ECU splice point - SP-GND-ECU: ECU power grou...
SP-8V - ECU splice point - SP-8V: +8 V cam sensor supply (ECU ...
SP-SW12 - ECU splice point - SP-SW12: switched +12 V (LOGIC S...
BUS-GNDOUT-A - DT06-12 plug (ECU splice point)
BUS-5V - DT06-12 plug (ECU splice point)
BUS-GNDOUT-B - DT06-12 plug (ECU splice point)
D-IG2-WAKE - IG2 wake diode (1N5822)
SP-CSB-GND - CSB3 ground splice - CSB3 pin 2, opto board CO...

SHIELD DRAINS - screens to A7 / B17 (R207), CAN screen to the CAN trunk

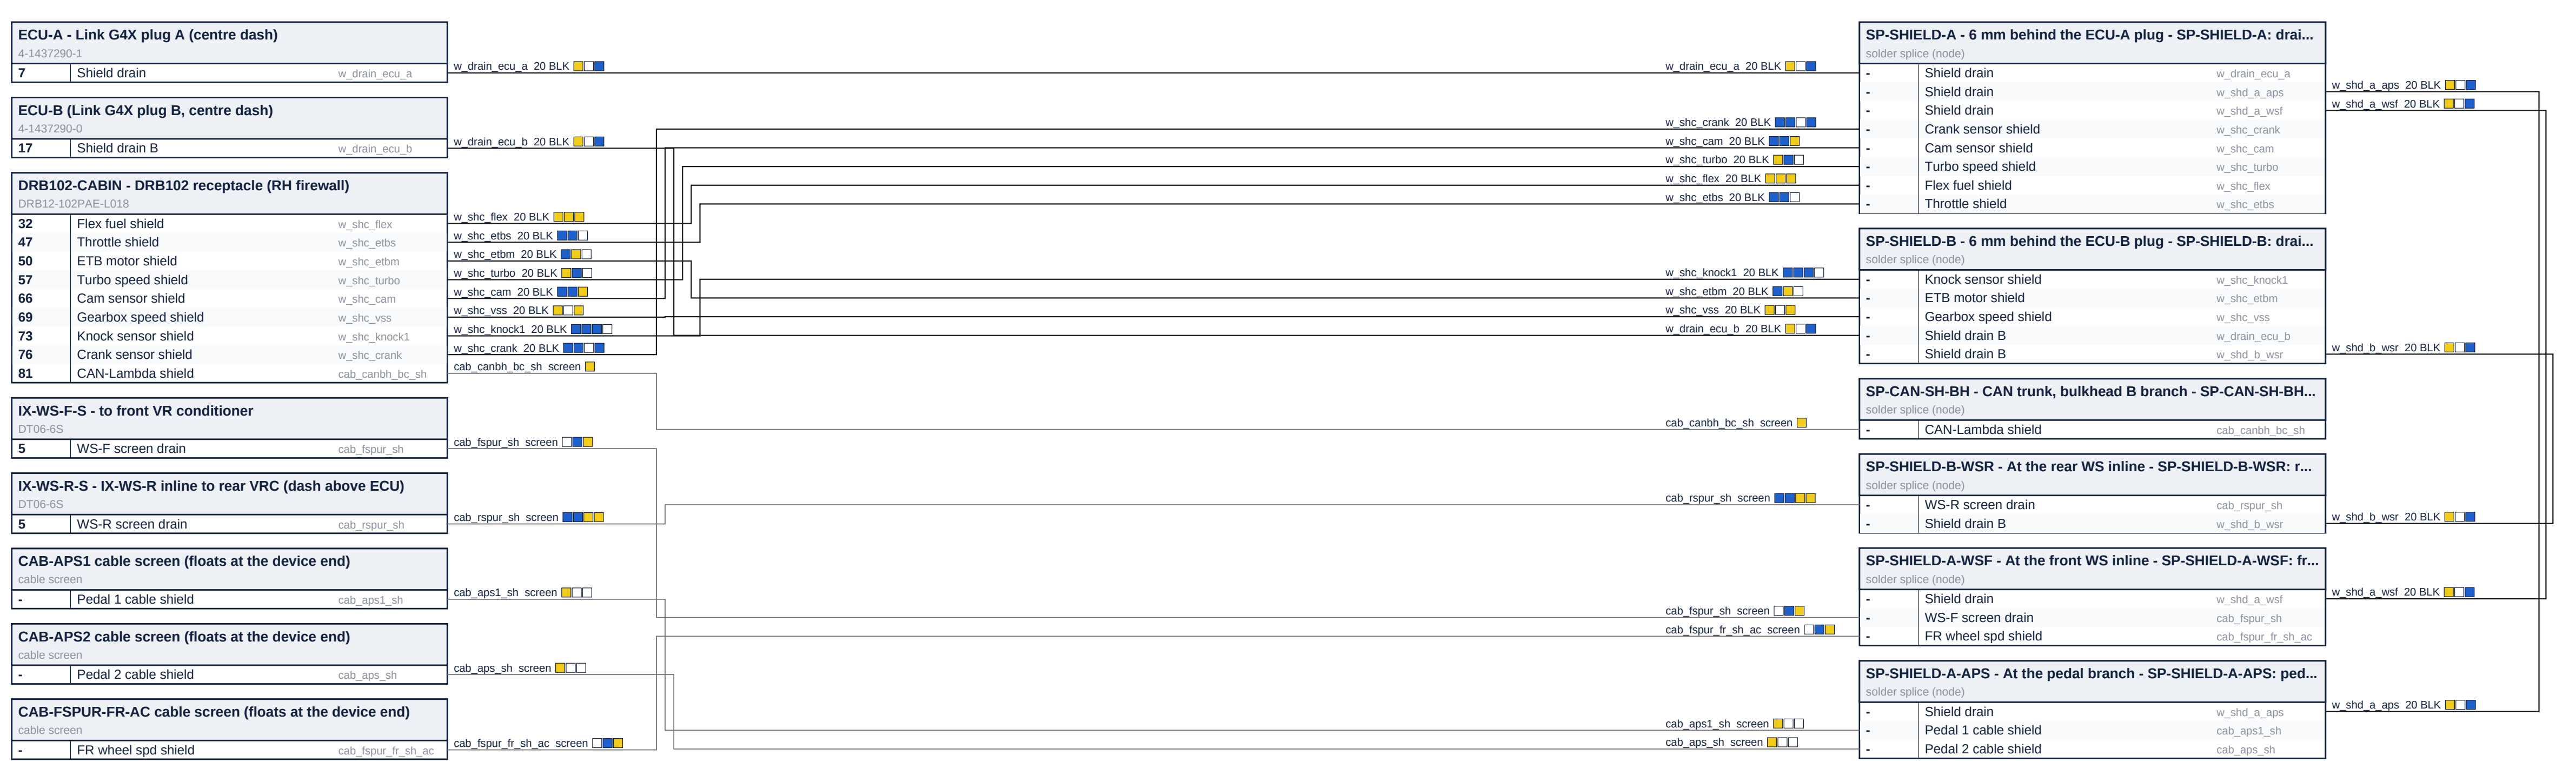
ECU-A - Link G4X plug A (centre dash)
ECU-B (Link G4X plug B, centre dash)
DRB102-CABIN - DRB102 receptacle (RH firewall)
IX-WS-F-S - to front VR conditioner
IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)
CAB-APS1 cable screen (floats at the device end)
CAB-APS2 cable screen (floats at the device end)
CAB-FSPUR-FR-AC cable screen (floats at the device end)
SP-SHIELD-A - 6 mm behind the ECU-A plug - SP-SHIELD-A: drai...
SP-SHIELD-B - 6 mm behind the ECU-B plug - SP-SHIELD-B: drai...
SP-CAN-SH-BH - CAN trunk, bulkhead B branch - SP-CAN-SH-BH...
SP-SHIELD-B-WSR - At the rear WS inline - SP-SHIELD-B-WSR: r...
SP-SHIELD-A-WSF - At the front WS inline - SP-SHIELD-A-WSF: fr...
SP-SHIELD-A-APS - At the pedal branch - SP-SHIELD-A-APS: ped...

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Schematic - every wire, grouped by job

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	1 OF 3	889 x 686 mm	DG	2026-10-19

ST185 Celica (living-relation) - generated by docs/harness/tools/build_drawings.py from docs/harness/MASTER-wirelist.csv; not to scale

LAYOUT - top view, front of the car to the RIGHT, driver side UP (R140 / R153). Not to scale; lengths in mm (estimates until measured at the car).

Each segment: length | wires in it | DR-25 heat-shrink size for its bundle (est. from the wire ODs). Lengths per wire (path + 100 mm at each end) are in the pinout table.

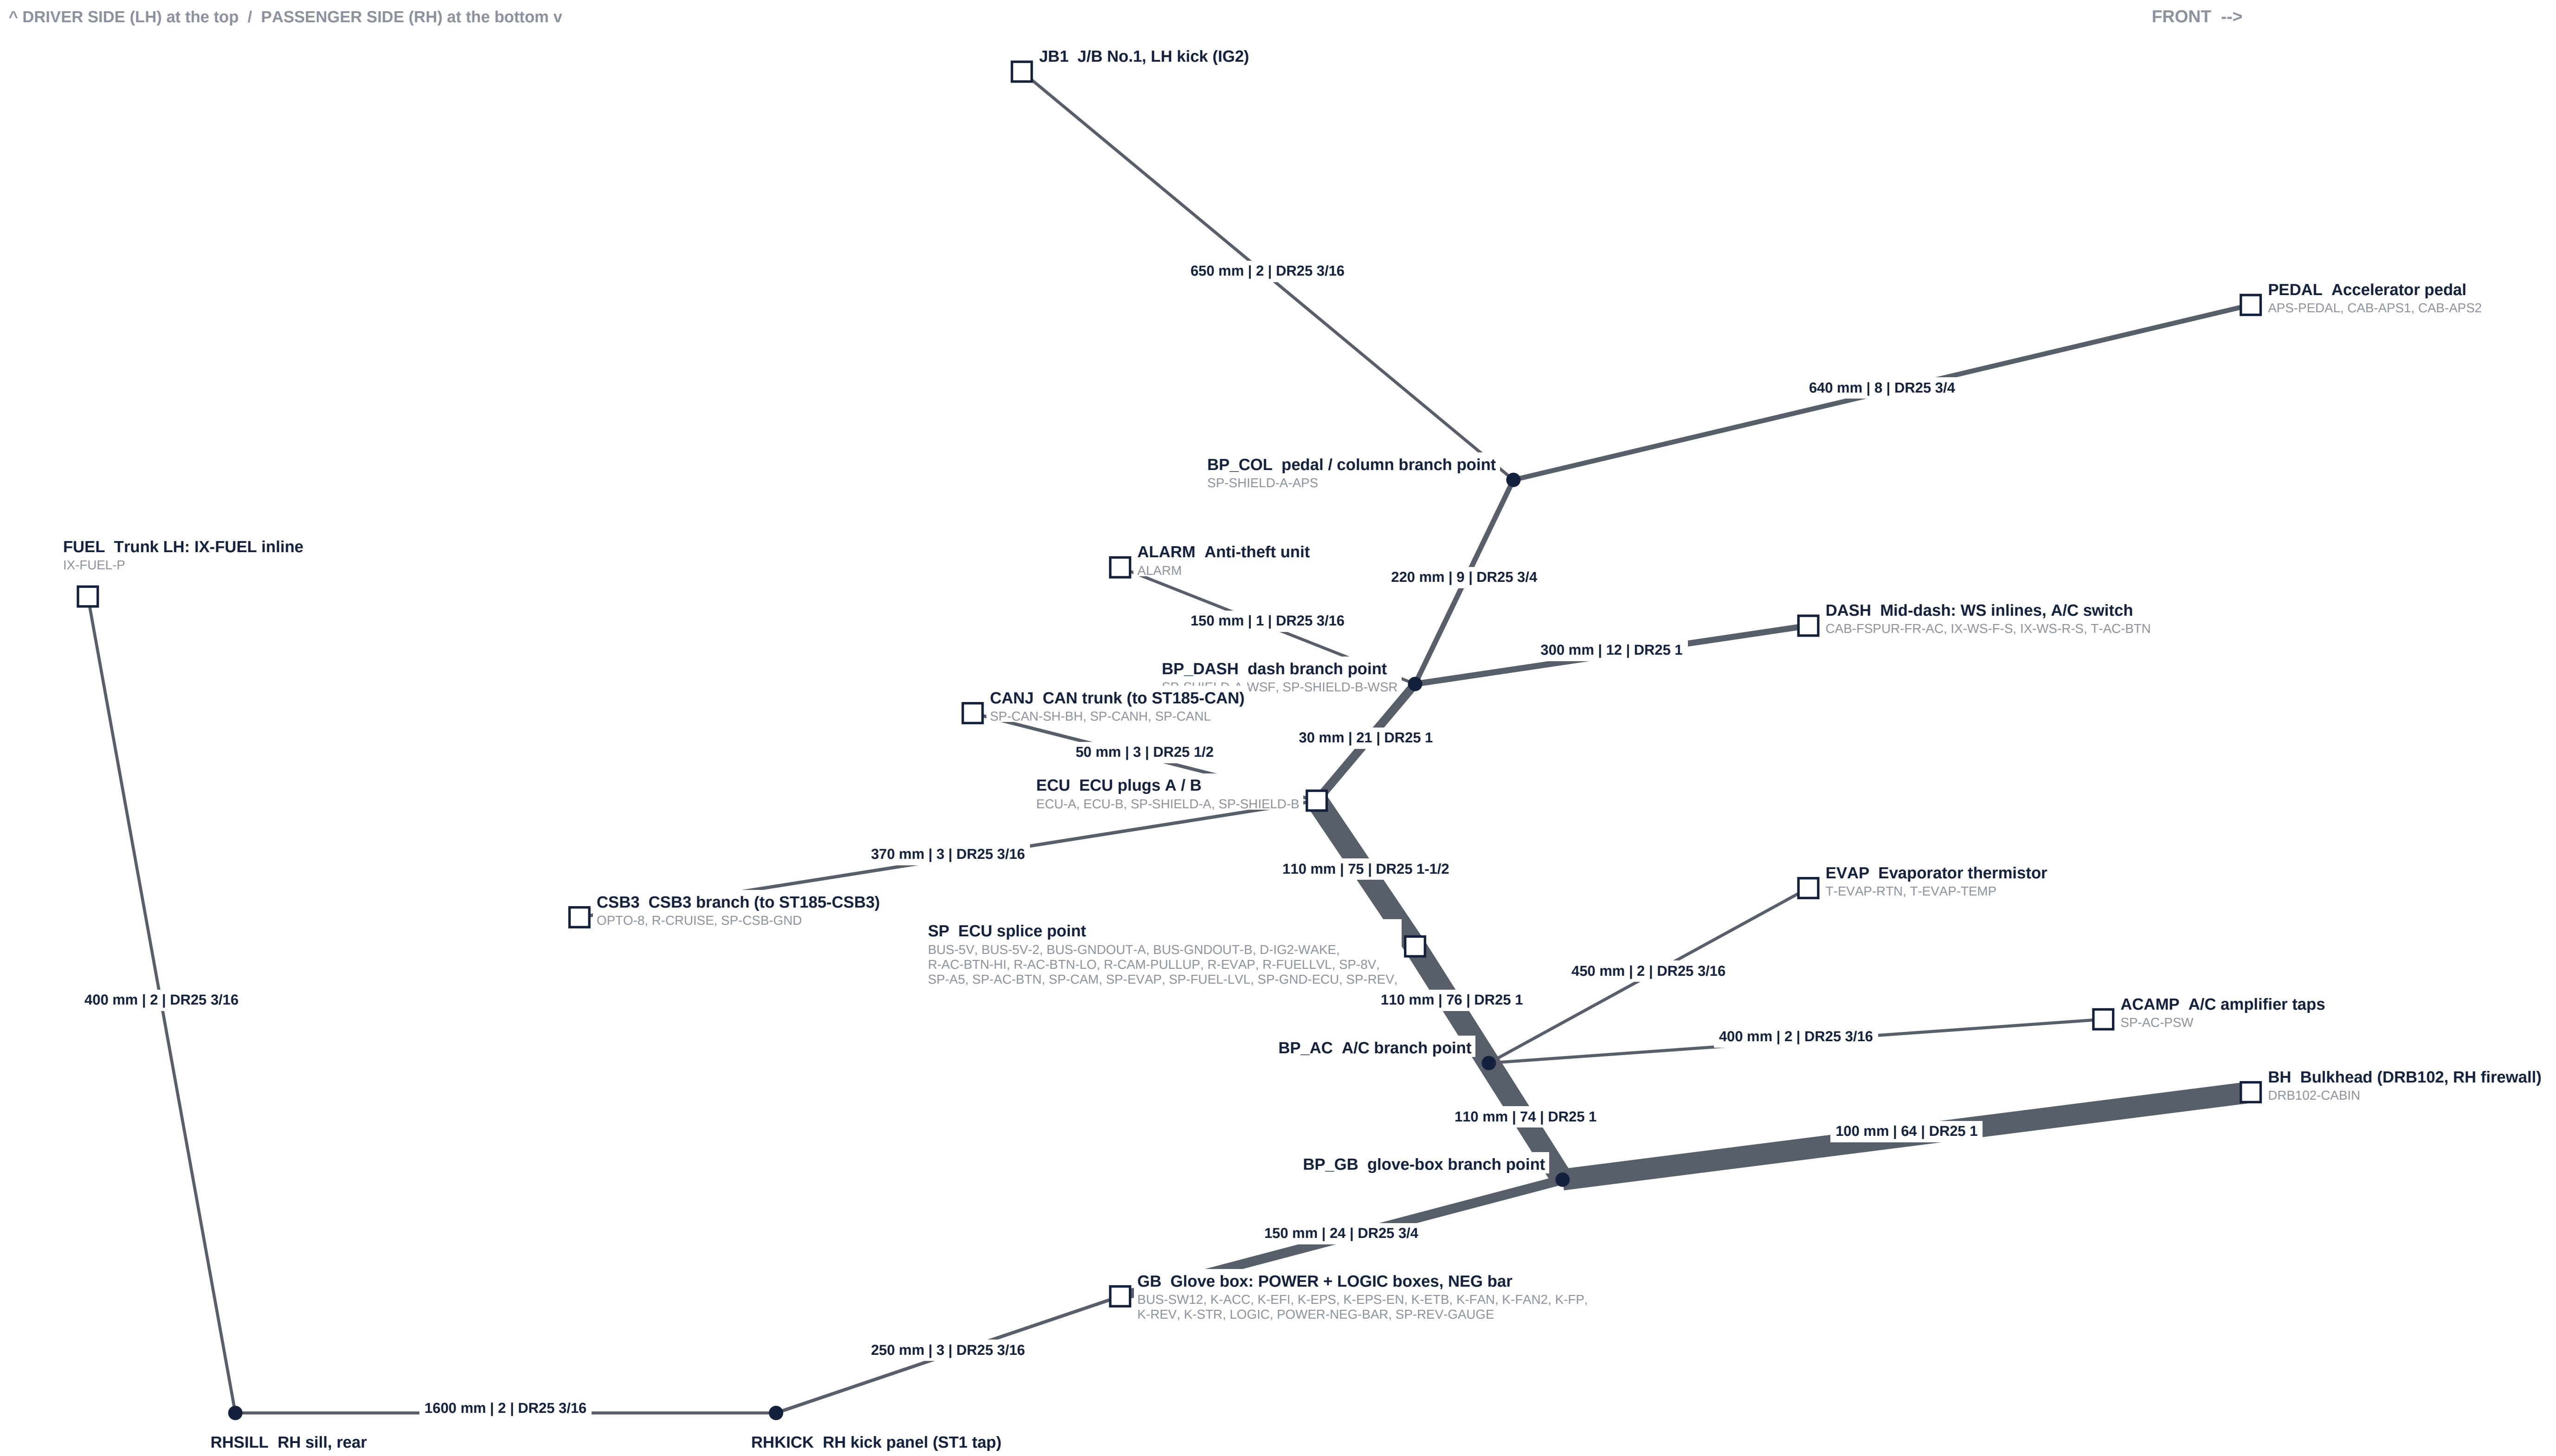
^ DRIVER SIDE (LH) at the top / PASSENGER SIDE (RH) at the bottom v
FRONT -->
JB1 J/B No.1, LH kick (IG2)
650 mm | 2 | DR25 3/16
PEDAL Accelerator pedal
APS-PEDAL, CAB-APS1, CAB-APS2
640 mm | 8 | DR25 3/4
BP_COL pedal / column branch point
SP-SHIELD-A-APS
FUEL Trunk LH: IX-FUEL inline
IX-FUEL-P
ALARM Anti-theft unit
ALARM
220 mm | 9 | DR25 3/4
150 mm | 1 | DR25 3/16
DASH Mid-dash: WS inlines, A/C switch
CAB-FSPUR-FR-AC, IX-WS-F-S, IX-WS-R-S, T-AC-BTN
300 mm | 12 | DR25 1
BP_DASH dash branch point
SP-SHIELD-A-WSF, SP-SHIELD-B-WSR
CANJ CAN trunk (to ST185-CAN)
SP-CAN-SH-BH, SP-CANH, SP-CANL
30 mm | 21 | DR25 1
50 mm | 3 | DR25 1/2
ECU ECU plugs A / B
ECU-A, ECU-B, SP-SHIELD-A, SP-SHIELD-B
370 mm | 3 | DR25 3/16
110 mm | 75 | DR25 1-1/2
CSB3 CSB3 branch (to ST185-CSB3)
OPTO-8, R-CRUISE, SP-CSB-GND
EVAP Evaporator thermistor
T-EVAP-RTN, T-EVAP-TEMP
SP ECU splice point
BUS-5V, BUS-5V-2, BUS-GNDOUT-A, BUS-GNDOUT-B, D-IG2-WAKE,
R-AC-BTN-HI, R-AC-BTN-LO, R-CAM-PULLUP, R-EVAP, R-FUELLVL, SP-8V,
SP-A5, SP-AC-BTN, SP-CAM, SP-EVAP, SP-FUEL-LVL, SP-GND-ECU, SP-REV,
450 mm | 2 | DR25 3/16
400 mm | 2 | DR25 3/16
110 mm | 76 | DR25 1
ACAMP A/C amplifier taps
SP-AC-PSW
400 mm | 2 | DR25 3/16
BP_AC A/C branch point
BH Bulkhead (DRB102, RH firewall)
DRB102-CABIN
110 mm | 74 | DR25 1
100 mm | 64 | DR25 1
BP_GB glove-box branch point
150 mm | 24 | DR25 3/4
GB Glove box: POWER + LOGIC boxes, NEG bar
BUS-SW12, K-ACC, K-EFI, K-EPS, K-EPS-EN, K-ETB, K-FAN, K-FAN2, K-FP,
K-REV, K-STR, LOGIC, POWER-NEG-BAR, SP-REV-GAUGE
250 mm | 3 | DR25 3/16
1600 mm | 2 | DR25 3/16
RHSILL RH sill, rear
RHKICK RH kick panel (ST1 tap)

SEGMENTS

FROM	TO	MM	WIRES	BUNDLE	DR-25
ECU	SP	110	75	24.0	DR-25-1-1/2-0
SP	BP_AC	110	76	19.7	DR-25-1-0
BP_AC	BP_GB	110	74	19.5	DR-25-1-0
BP_GB	BH	100	64	18.3	DR-25-1-0
BP_GB	GB	150	24	11.9	DR-25-3/4-0
GB	RHKICK	250	3	3.3	DR-25-3/16-0
RHKICK	RHSILL	1600	2	2.7	DR-25-3/16-0
RHSILL	FUEL	400	2	2.7	DR-25-3/16-0
BP_AC	ACAMP	400	2	2.9	DR-25-3/16-0
BP_AC	EVAP	450	2	2.7	DR-25-3/16-0
ECU	BP_DASH	30	21	20.8	DR-25-1-0
BP_DASH	DASH	300	12	18.0	DR-25-1-0
BP_DASH	BP_COL	220	9	13.6	DR-25-3/4-0
BP_COL	PEDAL	640	8	15.3	DR-25-3/4-0
BP_COL	JB1	650	2	2.7	DR-25-3/16-0
BP_DASH	ALARM	150	1	1.9	DR-25-3/16-0
ECU	CSB3	370	3	3.7	DR-25-3/16-0
ECU	CANJ	50	3	9.4	DR-25-1/2-0

NODES

ECU	ECU plugs A / B (centre dash, factory ECM spot)
SP	ECU splice point (bussed DT plugs + soldered splices)
BP_AC	A/C branch
BP_GB	glove-box branch
BH	DRB102 bulkhead, cabin half (RH firewall)
GB	Glove box: POWER + LOGIC boxes, NEG bar, EHPS relay
RHKICK	RH kick panel (old R/B No.4 spot, ST1 tap)
RHSILL	RH sill, rear end (the run turns across the trunk)
FUEL	Trunk LH: IX-FUEL inline to the fuel sender
ACAMP	A/C amplifier (A18) taps
EVAP	Evaporator case: thermistor A24 leads
BP_DASH	dash branch
DASH	Mid-dash above the ECU: front + rear WS inlines, A/C switch lead
BP_COL	pedal / column branch
PEDAL	Accelerator pedal (driver footwell)
JB1	J/B No.1, LH kick panel (IG2 taps)
ALARM	Anti-theft unit (centre dash, left of the ECU)
CSB3	CSB3 branch (centre console) - continues on ST185-CSB3
CANJ	CAN trunk at the ECU - continues on ST185-CAN

The ECU splice point (SP) is ONE place by the ECU plugs (Dan 2026-10-19): +5 V on BUS-5V + BUS-5V-2, Gnd Out A24 on BUS-GNDOUT-A, B22 on BUS-GNDOUT-B (bussed DEUTSCH DT, DECISIONS R169 parts), +8 V, switched 12 V, the A5 feed and the ECU power ground soldered there. The ECU ground runs alone to the POWER box NEG bar (R216).

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Layout - top view, segment lengths, wire counts, DR-25 sizes

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	2 OF 3	512 x 246 mm	DG	2026-10-19

ST185 Celica (living-relation) - generated by docs/harness/tools/build_drawings.py from docs/harness/MASTER-wirelist.csv; not to scale

PINOUT TABLES - one table per connector, bus plug, splice and end of the set; every pin, the wire on it and where its other end lands

Length = layout path + end allowance (estimate until measured). Built with = the harness that builds that wire (a wire passing through is built with its owner). A pin with no wire takes a sealing plug.

ECU-A - Link G4X plug A (centre dash)

housing 4-1437290-1 | contacts 3-1447221-4 | pins per Link G4X XtremeX QSG p.5 pin numbering (1-34)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w111_c	20	White	🟦🟨🟦🟨	Injector 4 drive (-)	DRB102 receptacle (RH firewall) pin 24	630	ST185-AB-cabin	INJ4
2	w110_c	20	White	🟦🟨🟦🟦	Injector 3 drive (-)	DRB102 receptacle (RH firewall) pin 23	630	ST185-AB-cabin	INJ3
3	w109_c	20	White	🟦🟦⬜⬜	Injector 2 drive (-)	DRB102 receptacle (RH firewall) pin 22	630	ST185-AB-cabin	INJ2
4	w108_c	20	White	🟦🟦⬜🟨	Injector 1 drive (-)	DRB102 receptacle (RH firewall) pin 21	630	ST185-AB-cabin	INJ1
5	w_a5_pin	18	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-A5: ECU main feed (SW12 + IG2 diode)	310	ST185-AB-cabin	SW12
6	w19	20	Orange	⬜🟦⬜	+8 V sensor supply	ECU splice point - SP-8V: +8 V cam sensor supply (ECU A6)	310	ST185-AB-cabin	8V
7	w_drain_ecu_a	20	Black	🟨⬜🟦	Shield drain	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	200	ST185-AB-cabin	SHLD
8	w200_c	20	White	🟦🟦⬜🟦	Crank sensor signal	DRB102 receptacle (RH firewall) pin 74	630	ST185-AB-cabin	CRANKC
9	w_trig2_pin	20	White	🟦🟦🟨	Cam sensor signal	At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up to +8V	310	ST185-AB-cabin	CAM
10	w123_c	20	White	⬜⬜⬜	Coil 4 trigger (IGT)	DRB102 receptacle (RH firewall) pin 12	630	ST185-AB-cabin	COP4
11	w122_c	20	White	⬜⬜🟨	Coil 3 trigger (IGT)	DRB102 receptacle (RH firewall) pin 11	630	ST185-AB-cabin	COP3
12	w121_c	20	White	⬜🟨⬜	Coil 2 trigger (IGT)	DRB102 receptacle (RH firewall) pin 10	630	ST185-AB-cabin	COP2
13	w120_c	20	White	⬜🟨🟨	Coil 1 trigger (IGT)	DRB102 receptacle (RH firewall) pin 9	630	ST185-AB-cabin	COP1
14	w38	20	Blue	🟨⬜⬜	Pedal 1 signal main	accelerator pedal sensor pin 6	1090	ST185-AB-cabin	APS
15	w201_c	20	White	🟦🟦🟦🟦	Coolant temp signal	DRB102 receptacle (RH firewall) pin 70	630	ST185-AB-cabin	ECT
16	w202_c	20	White	🟦🟨🟨🟨	Intake temp signal	DRB102 receptacle (RH firewall) pin 33	630	ST185-AB-cabin	IATC
17	w26_c	20	White	🟦🟨⬜🟨	MAP sensor signal	DRB102 receptacle (RH firewall) pin 17	630	ST185-AB-cabin	MAPC
18	w_ac_kill	20	White	🟦🟨🟦⬜	A/C cancel (ACT)	OEM A/C amplifier pin 11	820	ST185-AB-cabin	ACKILL
19	w_fp85	18	White	⬜⬜🟦	Fuel pump relay (-)	Fuel Pump Relay, TE HCR150 (seated in the battery relay block K1) - ACTIVE-LOW - ECU si...	680	ST185-AB-cabin	FP
20	w81	18	White	⬜⬜	ETB relay coil (-)	ETB Power Relay (seated in the LOGIC box M4) - ACTIVE-LOW - ECU sinks coil- (85); coil+ ...	680	ST185-CabinPower	ETB
21	w103_c	20	White	🟦🟦🟨⬜	Boost solenoid (-)	DRB102 receptacle (RH firewall) pin 58	630	ST185-AB-cabin	BOOST
22	w128_c	20	White	🟦🟦⬜	Throttle pos 1 main	DRB102 receptacle (RH firewall) pin 42	630	ST185-AB-cabin	ETBS
23	cab_fspur_l	20	Blue	⬜🟦🟨	FL conditioned out	to front VR conditioner pin 3	530	ST185-AB-cabin	WSSF
24	w68	18	Blue	🟨🟨	Sensor ground	DT06-12 plug (ECU splice point) pin 1	310	ST185-AB-cabin	SGND
25	w70	18	Black	🟨🟨⬜	ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND
26	w_str85	18	White	⬜🟨	Start relay coil (-)	Start Relay (seated in the POWER box R3) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) s...	680	ST185-AB-cabin	STR
27	w_mrs_c	20	White	🟦🟨⬜⬜	EHPS pump speed	DRB102 receptacle (RH firewall) pin 84	630	ST185-AB-cabin	MRSSPD
28	w76	18	White	🟦🟨	EFI relay coil (-)	EFI Main Relay (seated in the POWER box R2) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (...	680	ST185-CabinPower	EFI
29	w_fan85	18	White	🟨⬜	Rad fan relay (-)	Radiator Fan Relay (on/off) (seated in the POWER box R4) - ACTIVE-LOW - ECU sinks coil- ...	680	ST185-AB-cabin	FAN
30	w16_c	20	White	🟨🟦⬜	Turbo speed signal	DRB102 receptacle (RH firewall) pin 53	630	ST185-AB-cabin	TURBO
31	w48_c	20	White	🟨🟨🟨	Flex fuel signal	DRB102 receptacle (RH firewall) pin 31	630	ST185-AB-cabin	FLEX
32	w67	18	Orange	🟦🟦	+5 V sensor supply	DT06-12 plug (ECU splice point) pin 1	310	ST185-AB-cabin	5V
33	w129_c	20	White	🟦🟦⬜	Throttle pos 2 sub	DRB102 receptacle (RH firewall) pin 44	630	ST185-AB-cabin	ETBS
34	w_a34	18	Black	🟨🟨⬜	ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND

ECU-B (Link G4X plug B, centre dash)

housing 4-1437290-0 | contacts TBD | pins per Link G4X XtremeX QSG p.5 pin numbering (1-34)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1					spare, not used				
2					spare, not used				
3					spare, not used				
4					spare, not used				
5	w82_ac	18	Red	⬜⬜	ETB motor +12 V	ETB Power Relay (seated in the LOGIC box M4) - ACTIVE-LOW - ECU sinks coil- (85); coil+ ...	680	ST185-CabinPower	ETB
6	w203_c	20	White	🟦🟦🟨🟦	Oil temp signal	DRB102 receptacle (RH firewall) pin 61	630	ST185-AB-cabin	OILT
7	w204_c	20	White	🟦🟨🟨🟦	Charge temp signal	DRB102 receptacle (RH firewall) pin 59	630	ST185-AB-cabin	CIAT
8					spare, not used				
9	w205_c	20	White	🟦🟦🟦⬜	Knock sensor signal	DRB102 receptacle (RH firewall) pin 71	630	ST185-AB-cabin	KNOCK
10	w_acc_trig	18	White	🟨🟦	A/C clutch relay (-)	A/C Clutch Relay (on/off) (seated in the LOGIC box M5) - ACTIVE-LOW - ECU sinks coil- (85)...	680	ST185-AB-cabin	ACC
11					spare, not used				
12	w_eps_trig	18	White	🟦⬜	EPS enable relay (-)	EPS Enable Relay (seated in the LOGIC box M6) - ACTIVE-LOW - ECU sinks coil- (85); coil+...	680	ST185-AB-cabin	EPSEN
13	w_fan285	18	White	⬜🟦	Cond fan relay (-)	Condenser Fan Relay (on/off) (seated in the POWER box R5) - ACTIVE-LOW - ECU sinks coi...	680	ST185-AB-cabin	FAN2
14					spare, not used				
15	w29_c	20	White	🟦⬜🟦🟦	Oil pressure signal	DRB102 receptacle (RH firewall) pin 28	630	ST185-AB-cabin	OILPC
16	w32_c	20	White	🟦🟦🟦🟨	Fuel pressure signal	DRB102 receptacle (RH firewall) pin 14	630	ST185-AB-cabin	FUELP
17	w_drain_ecu_b	20	Black	🟨⬜🟦	Shield drain B	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	200	ST185-AB-cabin	SHLD
18	w124_c	18	White	🟦🟨⬜	ETB motor +	DRB102 receptacle (RH firewall) pin 45	630	ST185-AB-cabin	ETBM
19	cab_rspur_r	20	Blue	🟦🟦🟨🟨	Rear right wheel spd	IX-WS-R inline to rear VRC (dash above ECU) pin 4	530	ST185-AB-cabin	WSSR
20	cab_rspur_l	20	Green	🟦🟦🟨🟨	Rear left wheel spd	IX-WS-R inline to rear VRC (dash above ECU) pin 3	530	ST185-AB-cabin	WSSR
21	cab_fspur_r_ac	20	White	⬜🟦🟨	FR conditioned out	to front VR conditioner pin 4	530	ST185-AB-cabin	WSSF
22	w69	18	Blue	🟨🟨	Sensor ground B	DT06-12 plug (ECU splice point) pin 1	310	ST185-AB-cabin	SGND
23	w35_c	20	White	⬜🟨🟦	Coolant press signal	DRB102 receptacle (RH firewall) pin 26	630	ST185-AB-cabin	CLNTP
24	w_fl_sig_pin	20	White	🟦🟨🟦	Fuel level signal	SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24	310	ST185-AB-cabin	FLVL
25	w_b25_ac	18	Black	🟨🟨⬜	ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND
26	w215_c	18	White	🟦🟨⬜	ETB motor -	DRB102 receptacle (RH firewall) pin 46	630	ST185-AB-cabin	ETBM
27	w_at_immob2	20	White	🟨🟦🟨	Anti-theft input	Alarm module - main harness (DT06-12SA) pin 9	380	ST185-AntiTheft	IMMOB
28	w_ign	20	Yellow	🟦🟨⬜🟦	Ignition sw sense	OEM J/B No.1 (LH kick panel) 1H pin 7, B-O pin 7	1100	ST185-AB-cabin	IGNSW
29	w_vss_sig_c	20	White	🟨⬜🟨	Gearbox speed signal	DRB102 receptacle (RH firewall) pin 68	630	ST185-AB-cabin	VSS
30	w_start	20	Yellow	🟦🟨🟨	Start request	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	680	ST185-AB-cabin	B30
31	w_ac_btn	20	Yellow	🟨🟨🟦	A/C request button	SP-AC-BTN - A/C switch divider mid-point to ECU-B B31	310	ST185-AB-cabin	ACBTN
32	w_evap_temp	20	White	⬜🟦🟦	Evap temp signal	SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32	310	ST185-AB-cabin	EVAP
33	w_aps_vpa2	20	Blue	🟨⬜⬜	Pedal 2 signal sub	accelerator pedal sensor pin 3	1090	ST185-AB-cabin	APS
34	w_b34_ac	18	Black	🟨🟨⬜	ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND

BUS-5V - DT06-12 plug (ECU splice point)

housing DT06-12SA + W12S; DT04-12PA-P021 (bussed cap) | contacts 0462-201-16141 | pins per Deutsch DT / DTM cavity numbers (moulded on the housing)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w67	18	Orange	🟦🟦	+5 V from ECU A32	Link G4X plug A (centre dash) pin 32	310	ST185-AB-cabin	5V
2	w_rail_sp_5v_c	20	Orange	🟦🟦	+5 V throttle sensor	DRB102 receptacle (RH firewall) pin 41	520	ST185-AB-cabin	5V
3	w_5v_a_c39	20	Orange	🟦🟦	+5 V MAP sensor	DRB102 receptacle (RH firewall) pin 16	520	ST185-AB-cabin	5V
4	w_5v_a_c40	20	Orange	🟦🟦	+5 V turbo speed	DRB102 receptacle (RH firewall) pin 52	520	ST185-AB-cabin	5V
5	w_5v_brail_c45	20	Orange	🟦🟦	+5 V oil pressure	DRB102 receptacle (RH firewall) pin 27	520	ST185-AB-cabin	5V
6	w_5v_brail_c46	20	Orange	🟦🟦	+5 V fuel pressure	DRB102 receptacle (RH firewall) pin 13	520	ST185-AB-cabin	5V
7	w_5v_brail_c47	20	Orange	🟦🟦	+5 V coolant press	DRB102 receptacle (RH firewall) pin 25	520	ST185-AB-cabin	5V
8	w_aps_vc1	20	Red	🟦🟦	+5 V pedal sensor 1	accelerator pedal sensor pin 4	1200	ST185-AB-cabin	5V
9	w210	20	Red	🟦🟦	+5 V pedal sensor 2	accelerator pedal sensor pin 1	1200	ST185-AB-cabin	5V
10	cab_fspur_5v	20	Red	🟦🟦	+5 V front VRC	to front VR conditioner pin 1	640	ST185-AB-cabin	5V
11	cab_rspur_5v	20	Red	🟦🟦	+5 V rear VRC	IX-WS-R inline to rear VRC (dash above ECU) pin 1	640	ST185-AB-cabin	5V
12	w_5v_bus_link	20	Orange	🟦🟦	+5 V to BUS-5V-2	DT06-8 plug (ECU splice point) pin 1	200	ST185-AB-cabin	5V

BUS-5V-2 - DT06-8 plug (ECU splice point)

housing DT06-08SA + W8S; DT04-08PA-P021 (bussed cap) | contacts 0462-201-16141 | pins per Deutsch DT / DTM cavity numbers (moulded on the housing)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_5v_bus_link	20	Orange	🟦🟦	+5 V from BUS-5V	DT06-12 plug (ECU splice point) pin 12	200	ST185-AB-cabin	5V
2	w_cru_5v_ac	20	Orange	🟦🟦	+5 V cruise ladder	resistor r_cruise on CSB3 pin 1	680	ST185-AB-cabin	5V
3	w_evap_5v	20	Orange	⬜🟦🟦	+5 V evap pull-up	2.2k evap thermistor pull-up to +5V pin 2	200	ST185-AB-cabin	EVAP
4	w44	20	Orange	🟦🟨🟦	+5 V fuel lvl pullup	470R fuel level pull-up to +5V pin 2	200	ST185-AB-cabin	FLVL
5					spare, sealing plug				
6					spare, sealing plug				
7					spare, sealing plug				
8					spare, sealing plug				

BUS-GNDOUT-A - DT06-12 plug (ECU splice point)

housing DT06-12SA + W12S; DT04-12PA-P021 (bussed cap) | contacts 0462-201-16141 | pins per Deutsch DT / DTM cavity numbers (moulded on the housing)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w68	18	Blue	🟨🟨	Sensor gnd from A24	Link G4X plug A (centre dash) pin 24	310	ST185-AB-cabin	SGND
2	w_rail_sp_gndout_c	20	Blue	🟨🟨	Gnd IAT/TPS/coolant	DRB102 receptacle (RH firewall) pin 34	520	ST185-AB-cabin	SGND
3	w_gnd_a_c41	20	Blue	🟨🟨	Gnd crank sensor	DRB102 receptacle (RH firewall) pin 75	520	ST185-AB-cabin	SGND
4	w_gnd_a_c42	20	Blue	🟨🟨	Gnd cam sensor	DRB102 receptacle (RH firewall) pin 65	520	ST185-AB-cabin	SGND
5	w_gnd_a_c43	20	Blue	🟨🟨	Gnd turbo speed	DRB102 receptacle (RH firewall) pin 56	520	ST185-AB-cabin	SGND
6	w_gnd_a_c44	20	Blue	🟨🟨	Gnd flex + MAP	DRB102 receptacle (RH firewall) pin 18	520	ST185-AB-cabin	SGND
7	w40	20	Yellow	🟨🟨	Pedal 1 ground	accelerator pedal sensor pin 5	1200	ST185-AB-cabin	SGND
8	w_aps_gnd2	20	Yellow	🟨🟨	Pedal 2 ground	accelerator pedal sensor pin 2	1200	ST185-AB-cabin	SGND
9	cab_fspur_gnd	20	Yellow	🟨🟨	Front VRC ground	to front VR conditioner pin 2	640	ST185-AB-cabin	SGND
10					spare, sealing plug				
11					spare, sealing plug				
12					spare, sealing plug				

BUS-GNDOUT-B - DT06-12 plug (ECU splice point)

housing DT06-12SA + W12S; DT04-12PA-P021 (bussed cap) | contacts 0462-201-16141 | pins per Deutsch DT / DTM cavity numbers (moulded on the housing)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w69	18	Blue	🟨🟨	Sensor gnd from B22	ECU-B (Link G4X plug B, centre dash) pin 22	310	ST185-AB-cabin	SGND
2	w45	20	Blue	🟨🟨	Fuel level ground	IX-FUEL inline to fuel sender lead (trunk end) pin 2	2820	ST185-AB-cabin	SGND
3	cab_rspur_gnd	20	Yellow	🟨🟨	Rear VRC ground	IX-WS-R inline to rear VRC (dash above ECU) pin 2	640	ST185-AB-cabin	SGND
4	w_ac_btn_gnd	20	Blue	🟨🟨🟦	A/C btn divider gnd	3.9k A/C switch divider, bottom pin 2	200	ST185-AB-cabin	ACBTN
5	w_evap_rtn	20	Blue	🟨🟨	Evap thermistor gnd	OEM evaporator thermistor A24 pin 2, at the evap case	760	ST185-AB-cabin	SGND
6	w12_c	20	Blue	🟦🟦🟦⬜	Knock sensor (-)	DRB102 receptacle (RH firewall) pin 72	520	ST185-AB-cabin	KNOCK
7	w_gnd_b_c19	20	Blue	🟨🟨	Gnd oil/clnt/temps	DRB102 receptacle (RH firewall) pin 29	520	ST185-AB-cabin	SGND
8	w_gnd_b_c21	20	Blue	🟨🟨	Gnd fuel press + VSS	DRB102 receptacle (RH firewall) pin 15	520	ST185-AB-cabin	SGND
9					spare, sealing plug				
10					spare, sealing plug				
11					spare, sealing plug				
12					spare, sealing plug				

SP-8V - ECU splice point - SP-8V: +8 V cam sensor supply (ECU A6)

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_cam_pullup_8v	20	Orange	🟦🟦🟨	+8 V to cam pull-up	Cam pull-up 1.8 k to +8 V pin 1	200	ST185-AB-cabin	CAM
	w19	20	Orange	⬜🟦⬜	+8 V sensor supply	Link G4X plug A (centre dash) pin 6	310	ST185-AB-cabin	8V
	w_rail_sp_8v_c	20	Orange	⬜🟦⬜	+8 V to cam sensor	DRB102 receptacle (RH firewall) pin 63	520	ST185-AB-cabin	8V

SP-A5 - ECU splice point - SP-A5: ECU main feed (SW12 + IG2 diode)

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w78	18	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-SW12: switched +12 V (LOGIC SW12)	200	ST185-AB-cabin	SW12
	w_ig2_diode	20	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	IG2 wake diode (1N5822) pin 2	200	ST185-AB-cabin	SW12
	w_a5_pin	18	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	Link G4X plug A (centre dash) pin 5	310	ST185-AB-cabin	SW12

SP-AC-BTN - A/C switch divider mid-point to ECU-B B31

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_ac_btn	20	Yellow	🟨🟨🟦	A/C request button	ECU-B (Link G4X plug B, centre dash) pin 31	310	ST185-AB-cabin	ACBTN
	w_ac_btn_hi	20	Yellow	🟨🟨🟦	A/C btn divider mid	10k A/C switch divider, top pin 2	200	ST185-AB-cabin	ACBTN
	w_ac_btn_lo	20	Yellow	🟨🟨🟦	A/C btn divider mid	3.9k A/C switch divider, bottom pin 1	200	ST185-AB-cabin	ACBTN

SP-AC-PSW - At A/C amp - SP-AC-PSW: A/C pressure switch output

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_ac_psw_in	20	Yellow	🟨🟦	A/C pressure sw out	OEM A5, factory Y-R lead pin 4	200	ST185-AB-cabin	ACC
	w_ac_psw_sw	20	Yellow	🟨🟦	A/C pressure sw out	OEM A/C amplifier pin 13	200	ST185-AB-cabin	ACC
	w_acc86	18	Red	🟨🟦	A/C clutch relay (+)	A/C Clutch Relay (on/off) (seated in the LOGIC box M5) - ACTIVE-LOW - ECU sinks coil- (85)...	860	ST185-AB-cabin	ACC

SP-CAM - At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up to +8V

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_trig2_pin	20	White	🟦🟦🟨	Cam sensor signal	Link G4X plug A (centre dash) pin 9	310	ST185-AB-cabin	CAM
	w_cam_sig_c	20	White	🟦🟦🟨	Cam sensor signal	DRB102 receptacle (RH firewall) pin 64	520	ST185-AB-cabin	CAM
	w_cam_pullup_sig	20	White	🟦🟦🟨	Cam pull-up 1.8k	Cam pull-up 1.8 k to +8 V pin 2	200	ST185-AB-cabin	CAM

SP-CAN-SH-BH - CAN trunk, bulkhead B branch - SP-CAN-SH-BH: CAN screen to CAN-Lambda

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	cab_canbh_bc_sh		Shield	🟨	CAN-Lambda shield	DRB102 receptacle (RH firewall) pin 81	680	ST185-AB-cabin	CAN

SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_evap_temp	20	White	⬜🟦🟦	Evap temp signal	ECU-B (Link G4X plug B, centre dash) pin 32	310	ST185-AB-cabin	EVAP
	w_evap_pu	20	White	⬜🟦🟦	Evap pull-up 2.2k	2.2k evap thermistor pull-up to +5V pin 1	200	ST185-AB-cabin	EVAP
	w_evap_sig	20	White	⬜🟦🟦	Evap thermistor sig	OEM evaporator thermistor A24 pin 1, at the evap case	760	ST185-AB-cabin	EVAP

SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_fl_sig	20	White	🟦🟨🟦	Fuel level signal	IX-FUEL inline to fuel sender lead (trunk end) pin 1	2820	ST185-AB-cabin	FLVL
	w_fl_sig_pin	20	White	🟦🟨🟦	Fuel level signal	ECU-B (Link G4X plug B, centre dash) pin 24	310	ST185-AB-cabin	FLVL
	w43	20	White	🟦🟨🟦	Fuel lvl pull-up	470R fuel level pull-up to +5V pin 1	200	ST185-AB-cabin	FLVL

SP-GND-ECU - ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w70	18	Black	🟨🟨⬜	ECU power ground	Link G4X plug A (centre dash) pin 25	310	ST185-AB-cabin	GND
	w_a34	18	Black	🟨🟨⬜	ECU power ground	Link G4X plug A (centre dash) pin 34	310	ST185-AB-cabin	GND
	w_b25_ac	18	Black	🟨🟨⬜	ECU power ground	ECU-B (Link G4X plug B, centre dash) pin 25	310	ST185-AB-cabin	GND
	w_b34_ac	18	Black	🟨🟨⬜	ECU power ground	ECU-B (Link G4X plug B, centre dash) pin 34	310	ST185-AB-cabin	GND
	w66	10	Black	🟨🟨⬜	ECU power ground	POWER box NEG bar M8 stud (glove box)	570	ST185-AB-cabin	GND

SP-REV - reverse switch out to CSB3 opto + reverse relay

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_rev_sw_c	16	Yellow	⬜	Reverse sw +12 V out	DRB102 receptacle (RH firewall) pin 78	520	ST185-AB-cabin	REV
	w_rev_coil_c	16	Red	⬜	Reverse relay coil+	Reverse Relay (seated in the LOGIC box M7) - coil+ (86) from the back-up switch B1 pin 1 (+...	570	ST185-AB-cabin	REV
	w_sw7_c	16	Yellow	⬜	Reverse to opto in 2	Optocoupler board, 8 channel (Dan's, generic EL814) - inline at the CSB3 pin IN2	680	ST185-AB-cabin	REV

SP-SHIELD-A - 6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_drain_ecu_a	20	Black	🟨⬜🟦	Shield drain	Link G4X plug A (centre dash) pin 7	200	ST185-AB-cabin	SHLD
	w_shd_a_aps	20	Black	🟨⬜🟦	Shield drain	At the pedal branch - SP-SHIELD-A-APS: pedal drains	450	ST185-AB-cabin	SHLD
	w_shd_a_wsf	20	Black	🟨⬜🟦	Shield drain	At the front WS inline - SP-SHIELD-A-WSF: front wheel-speed drains	230	ST185-AB-cabin	SHLD
	w_shc_crank	20	Black	🟦🟦⬜🟦	Crank sensor shield	DRB102 receptacle (RH firewall) pin 76	630	ST185-AB-cabin	CRANKC
	w_shc_cam	20	Black	🟦🟦🟨	Cam sensor shield	DRB102 receptacle (RH firewall) pin 66	630	ST185-AB-cabin	CAM
	w_shc_turbo	20	Black	🟨🟦⬜	Turbo speed shield	DRB102 receptacle (RH firewall) pin 57	630	ST185-AB-cabin	TURBO
	w_shc_flex	20	Black	🟨🟨🟨	Flex fuel shield	DRB102 receptacle (RH firewall) pin 32	630	ST185-AB-cabin	FLEX
	w_shc_etbs	20	Black	🟦🟦⬜	Throttle shield	DRB102 receptacle (RH firewall) pin 47	630	ST185-AB-cabin	ETBS

SP-SHIELD-A-APS - At the pedal branch - SP-SHIELD-A-APS: pedal drains

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_shd_a_aps	20	Black	🟨⬜🟦	Shield drain	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	450	ST185-AB-cabin	SHLD
	cab_aps1_sh		Shield	🟨⬜⬜	Pedal 1 cable shield	cab_aps1 screen (floats at the device end)	840	ST185-AB-cabin	APS
	cab_aps_sh		Shield	🟨⬜⬜	Pedal 2 cable shield	cab_aps2 screen (floats at the device end)	840	ST185-AB-cabin	APS

SP-SHIELD-A-WSF - At the front WS inline - SP-SHIELD-A-WSF: front wheel-speed drains

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_shd_a_wsf	20	Black	🟨⬜🟦	Shield drain	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	230	ST185-AB-cabin	SHLD
	cab_fspur_sh		Shield	⬜🟦🟨	WS-F screen drain	to front VR conditioner pin 5	500	ST185-AB-cabin	WSSF
	cab_fspur_fr_sh_ac		Shield	⬜🟦🟨	FR wheel spd shield	cab_fspur_fr_ac screen (floats at the device end)	500	ST185-AB-cabin	WSSF

SP-SHIELD-B - 6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_shc_knock1	20	Black	🟦🟦🟦⬜	Knock sensor shield	DRB102 receptacle (RH firewall) pin 73	630	ST185-AB-cabin	KNOCK
	w_shc_etbm	20	Black	🟦🟨⬜	ETB motor shield	DRB102 receptacle (RH firewall) pin 50	630	ST185-AB-cabin	ETBM
	w_shc_vss	20	Black	🟨⬜🟨	Gearbox speed shield	DRB102 receptacle (RH firewall) pin 69	630	ST185-AB-cabin	VSS
	w_drain_ecu_b	20	Black	🟨⬜🟦	Shield drain B	ECU-B (Link G4X plug B, centre dash) pin 17	200	ST185-AB-cabin	SHLD
	w_shd_b_wsr	20	Black	🟨⬜🟦	Shield drain B	At the rear WS inline - SP-SHIELD-B-WSR: rear wheel-speed drains	230	ST185-AB-cabin	SHLD

SP-SHIELD-B-WSR - At the rear WS inline - SP-SHIELD-B-WSR: rear wheel-speed drains

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	cab_rspur_sh		Shield	🟦🟦🟨🟨	WS-R screen drain	IX-WS-R inline to rear VRC (dash above ECU) pin 5	500	ST185-AB-cabin	WSSR
	w_shd_b_wsr	20	Black	🟨⬜🟦	Shield drain B	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	230	ST185-AB-cabin	SHLD

SP-SW12 - ECU splice point - SP-SW12: switched +12 V (LOGIC SW12)

splice: solder splice

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_fb_sw12	18	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	SW12 bus plug DT06-12 (glove box, by LOGIC box) pin 2	570	ST185-AB-cabin	SW12
	w78	18	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-A5: ECU main feed (SW12 + IG2 diode)	200	ST185-AB-cabin	SW12
	w_rail_sp_sw12_c	18	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	DRB102 receptacle (RH firewall) pin 30	520	ST185-AB-cabin	SW12
	w_rail_sw12_b_c_ac	20	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	DRB102 receptacle (RH firewall) pin 67	520	ST185-AB-cabin	SW12

D-IG2-WAKE - IG2 wake diode (1N5822)

inline diode 1N5822

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_ig2_in	20	Yellow	🟦🟨🟨⬜	IG2 wake feed	OEM J/B No.1 (LH kick panel) 1H pin 7, B-O pin 7	1210	ST185-AB-cabin	IG2WAKE
2	w_ig2_diode	20	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-A5: ECU main feed (SW12 + IG2 diode)	200	ST185-AB-cabin	SW12

R-AC-BTN-HI - 10k A/C switch divider, top

inline resistor 10k 1/4W

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_ac_btn_in	20	Yellow	🟨🟨🟦	A/C switch V-G in	OEM dash A/C switch V-G lead (old A15 pin 3)	640	ST185-AB-cabin	ACBTN
2	w_ac_btn_hi	20	Yellow	🟨🟨🟦	A/C btn divider mid	SP-AC-BTN - A/C switch divider mid-point to ECU-B B31	200	ST185-AB-cabin	ACBTN

R-AC-BTN-LO - 3.9k A/C switch divider, bottom

inline resistor 3.9k 1/4W

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_ac_btn_lo	20	Yellow	🟨🟨🟦	A/C btn divider mid	SP-AC-BTN - A/C switch divider mid-point to ECU-B B31	200	ST185-AB-cabin	ACBTN
2	w_ac_btn_gnd	20	Blue	🟨🟨🟦	A/C btn divider gnd	DT06-12 plug (ECU splice point) pin 4	200	ST185-AB-cabin	ACBTN

R-CAM-PULLUP - Cam pull-up 1.8 k to +8 V

inline resistor 1.8k 1/4W

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_cam_pullup_8v	20	Orange	🟦🟦🟨	+8 V to cam pull-up	ECU splice point - SP-8V: +8 V cam sensor supply (ECU A6)	200	ST185-AB-cabin	CAM
2	w_cam_pullup_sig	20	White	🟦🟦🟨	Cam pull-up 1.8k	At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up to +8V	200	ST185-AB-cabin	CAM

R-CRUISE - resistor r_cruise on CSB3

inline resistor 1k 1/4W

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_cru_5v_ac	20	Orange	🟦🟦	+5 V cruise ladder	DT06-8 plug (ECU splice point) pin 2	680	ST185-AB-cabin	5V

R-EVAP - 2.2k evap thermistor pull-up to +5V

inline resistor 2.2k 1/4W 1%

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_evap_pu	20	White	⬜🟦🟦	Evap pull-up 2.2k	SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32	200	ST185-AB-cabin	EVAP
2	w_evap_5v	20	Orange	⬜🟦🟦	+5 V evap pull-up	DT06-8 plug (ECU splice point) pin 3	200	ST185-AB-cabin	EVAP

R-FUELLVL - 470R fuel level pull-up to +5V

inline resistor 470R 1/4W

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w43	20	White	🟦🟨🟦	Fuel lvl pull-up	SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24	200	ST185-AB-cabin	FLVL
2	w44	20	Orange	🟦🟨🟦	+5 V fuel lvl pullup	DT06-8 plug (ECU splice point) pin 4	200	ST185-AB-cabin	FLVL

DRB102-CABIN - DRB102 receptacle (RH firewall)

housing DRB12-102PAE-L018 + DRBF-1A | contacts 0460-220-1231 | pins per TE drawing DRB12-102PXE-L018 rev C3

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_cop_pwr_ac	14	Red	🟦⬜🟨	EFI relay k_efi -> LOGIC COP 15 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-CabinPower	COP
2	w_inj_pwr_ac	14	Red	🟦⬜🟦	EFI relay k_efi -> LOGIC INJ 15 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-CabinPower	INJ
3					spare, sealing plug				
4					spare, sealing plug				
5					spare, sealing plug				
6					spare, sealing plug				
7					spare, sealing plug				
8					spare, sealing plug				
9	w120_c	20	White	⬜🟨🟨	Coil 1 trigger (IGT)	Link G4X plug A (centre dash) pin 13	630	ST185-AB-cabin	COP1
10	w121_c	20	White	⬜🟨⬜	Coil 2 trigger (IGT)	Link G4X plug A (centre dash) pin 12	630	ST185-AB-cabin	COP2
11	w122_c	20	White	⬜⬜🟨	Coil 3 trigger (IGT)	Link G4X plug A (centre dash) pin 11	630	ST185-AB-cabin	COP3
12	w123_c	20	White	⬜⬜⬜	Coil 4 trigger (IGT)	Link G4X plug A (centre dash) pin 10	630	ST185-AB-cabin	COP4
13	w_5v_brail_c46	20	Orange	🟦🟦	+5 V fuel pressure	DT06-12 plug (ECU splice point) pin 6	520	ST185-AB-cabin	5V
14	w32_c	20	White	🟦🟦🟦🟨	Fuel pressure signal	ECU-B (Link G4X plug B, centre dash) pin 16	630	ST185-AB-cabin	FUELP
15	w_gnd_b_c21	20	Blue	🟨🟨	Gnd fuel press + VSS	DT06-12 plug (ECU splice point) pin 8	520	ST185-AB-cabin	SGND
16	w_5v_a_c39	20	Orange	🟦🟦	+5 V MAP sensor	DT06-12 plug (ECU splice point) pin 3	520	ST185-AB-cabin	5V
17	w26_c	20	White	🟦🟨⬜🟨	MAP sensor signal	Link G4X plug A (centre dash) pin 17	630	ST185-AB-cabin	MAPC
18	w_gnd_a_c44	20	Blue	🟨🟨	Gnd flex + MAP	DT06-12 plug (ECU splice point) pin 6	520	ST185-AB-cabin	SGND
19					spare, sealing plug				
20					spare, sealing plug				
21	w108_c	20	White	🟦🟦⬜🟨	Injector 1 drive (-)	Link G4X plug A (centre dash) pin 4	630	ST185-AB-cabin	INJ1
22	w109_c	20	White	🟦🟦⬜⬜	Injector 2 drive (-)	Link G4X plug A (centre dash) pin 3	630	ST185-AB-cabin	INJ2
23	w110_c	20	White	🟦🟨🟦🟦	Injector 3 drive (-)	Link G4X plug A (centre dash) pin 2	630	ST185-AB-cabin	INJ3
24	w111_c	20	White	🟦🟨🟦🟨	Injector 4 drive (-)	Link G4X plug A (centre dash) pin 1	630	ST185-AB-cabin	INJ4
25	w_5v_brail_c47	20	Orange	🟦🟦	+5 V coolant press	DT06-12 plug (ECU splice point) pin 7	520	ST185-AB-cabin	5V
26	w35_c	20	White	⬜🟨🟦	Coolant press signal	ECU-B (Link G4X plug B, centre dash) pin 23	630	ST185-AB-cabin	CLNTP
27	w_5v_brail_c45	20	Orange	🟦🟦	+5 V oil pressure	DT06-12 plug (ECU splice point) pin 5	520	ST185-AB-cabin	5V
28	w29_c	20	White	🟦⬜🟦🟦	Oil pressure signal	ECU-B (Link G4X plug B, centre dash) pin 15	630	ST185-AB-cabin	OILPC
29	w_gnd_b_c19	20	Blue	🟨🟨	Gnd oil/clnt/temps	DT06-12 plug (ECU splice point) pin 7	520	ST185-AB-cabin	SGND
30	w_rail_sp_sw12_c	18	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	ECU splice point - SP-SW12: switched +12 V (LOGIC SW12)	520	ST185-AB-cabin	SW12
31	w48_c	20	White	🟨🟨🟨	Flex fuel signal	Link G4X plug A (centre dash) pin 31	630	ST185-AB-cabin	FLEX
32	w_shc_flex	20	Black	🟨🟨🟨	Flex fuel shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	FLEX
33	w202_c	20	White	🟦🟨🟨🟨	Intake temp signal	Link G4X plug A (centre dash) pin 16	630	ST185-AB-cabin	IATC
34	w_rail_sp_gndout_c	20	Blue	🟨🟨	Gnd IAT/TPS/coolant	DT06-12 plug (ECU splice point) pin 2	520	ST185-AB-cabin	SGND
35					spare, sealing plug				
36					spare, sealing plug				
37					spare, sealing plug				
38					spare, sealing plug				
39					spare, sealing plug				
40					spare, sealing plug				
41	w_rail_sp_5v_c	20	Orange	🟦🟦	+5 V throttle sensor	DT06-12 plug (ECU splice point) pin 2	520	ST185-AB-cabin	5V
42	w128_c	20	White	🟦🟦⬜	Throttle pos 1 main	Link G4X plug A (centre dash) pin 22	630	ST185-AB-cabin	ETBS
43					spare, sealing plug				
44	w129_c	20	White	🟦🟦⬜	Throttle pos 2 sub	Link G4X plug A (centre dash) pin 33	630	ST185-AB-cabin	ETBS
45	w124_c	18	White	🟦🟨⬜	ETB motor +	ECU-B (Link G4X plug B, centre dash) pin 18	630	ST185-AB-cabin	ETBM
46	w215_c	18	White	🟦🟨⬜	ETB motor -	ECU-B (Link G4X plug B, centre dash) pin 26	630	ST185-AB-cabin	ETBM
47	w_shc_etbs	20	Black	🟦🟦⬜	Throttle shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	ETBS
48					spare, sealing plug				
49					spare, sealing plug				
50	w_shc_etbm	20	Black	🟦🟨⬜	ETB motor shield	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	630	ST185-AB-cabin	ETBM
51					spare, sealing plug				
52	w_5v_a_c40	20	Orange	🟦🟦	+5 V turbo speed	DT06-12 plug (ECU splice point) pin 4	520	ST185-AB-cabin	5V
53	w16_c	20	White	🟨🟦⬜	Turbo speed signal	Link G4X plug A (centre dash) pin 30	630	ST185-AB-cabin	TURBO
54					spare, sealing plug				
55					spare, sealing plug				
56	w_gnd_a_c43	20	Blue	🟨🟨	Gnd turbo speed	DT06-12 plug (ECU splice point) pin 5	520	ST185-AB-cabin	SGND
57	w_shc_turbo	20	Black	🟨🟦⬜	Turbo speed shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	TURBO
58	w103_c	20	White	🟦🟦🟨⬜	Boost solenoid (-)	Link G4X plug A (centre dash) pin 21	630	ST185-AB-cabin	BOOST
59	w204_c	20	White	🟦🟨🟨🟦	Charge temp signal	ECU-B (Link G4X plug B, centre dash) pin 7	630	ST185-AB-cabin	CIAT
60					spare, sealing plug				
61	w203_c	20	White	🟦🟦🟨🟦	Oil temp signal	ECU-B (Link G4X plug B, centre dash) pin 6	630	ST185-AB-cabin	OILT
62					spare, sealing plug				
63	w_rail_sp_8v_c	20	Orange	⬜🟦⬜	+8 V to cam sensor	ECU splice point - SP-8V: +8 V cam sensor supply (ECU A6)	520	ST185-AB-cabin	8V
64	w_cam_sig_c	20	White	🟦🟦🟨	Cam sensor signal	At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up to +8V	520	ST185-AB-cabin	CAM
65	w_gnd_a_c42	20	Blue	🟨🟨	Gnd cam sensor	DT06-12 plug (ECU splice point) pin 4	520	ST185-AB-cabin	SGND
66	w_shc_cam	20	Black	🟦🟦🟨	Cam sensor shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	CAM
67	w_rail_sw12_b_c_ac	20	Red	🟦	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	ECU splice point - SP-SW12: switched +12 V (LOGIC SW12)	520	ST185-AB-cabin	SW12
68	w_vss_sig_c	20	White	🟨⬜🟨	Gearbox speed signal	ECU-B (Link G4X plug B, centre dash) pin 29	630	ST185-AB-cabin	VSS
69	w_shc_vss	20	Black	🟨⬜🟨	Gearbox speed shield	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	630	ST185-AB-cabin	VSS
70	w201_c	20	White	🟦🟦🟦🟦	Coolant temp signal	Link G4X plug A (centre dash) pin 15	630	ST185-AB-cabin	ECT
71	w205_c	20	White	🟦🟦🟦⬜	Knock sensor signal	ECU-B (Link G4X plug B, centre dash) pin 9	630	ST185-AB-cabin	KNOCK
72	w12_c	20	Blue	🟦🟦🟦⬜	Knock sensor (-)	DT06-12 plug (ECU splice point) pin 6	520	ST185-AB-cabin	KNOCK
73	w_shc_knock1	20	Black	🟦🟦🟦⬜	Knock sensor shield	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	630	ST185-AB-cabin	KNOCK
74	w200_c	20	White	🟦🟦⬜🟦	Crank sensor signal	Link G4X plug A (centre dash) pin 8	630	ST185-AB-cabin	CRANKC
75	w_gnd_a_c41	20	Blue	🟨🟨	Gnd crank sensor	DT06-12 plug (ECU splice point) pin 3	520	ST185-AB-cabin	SGND
76	w_shc_crank	20	Black	🟦🟦⬜🟦	Crank sensor shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	CRANKC
77	w_rev_feed_c	16	Red	⬜	Back-up sw +12 V in	GAUGE 15A splice - J/B 3 feed to reverse relay pin 30 and the back-up switch	450	ST185-AB-cabin	REV
78	w_rev_sw_c	16	Yellow	⬜	Reverse sw +12 V out	SP-REV - reverse switch out to CSB3 opto + reverse relay	520	ST185-AB-cabin	REV
79	wc_h_bh_bc	20	White	🟨	CAN H to CAN-Lambda	CAN H join - ECU, CSB3, cluster, Pi, bulkhead	680	ST185-AB-cabin	CAN
80	wc_l_bh_bc	20	Green	🟨	CAN L to CAN-Lambda	CAN L join - ECU, CSB3, cluster, Pi, bulkhead	680	ST185-AB-cabin	CAN
81	cab_canbh_bc_sh		Shield	🟨	CAN-Lambda shield	CAN trunk, bulkhead B branch - SP-CAN-SH-BH: CAN screen to CAN-Lambda	680	ST185-AB-cabin	CAN
82					spare, sealing plug				
83	w_fb_mrs_en	20	Red	🟦⬜	EFI relay k_efi -> LOGIC MRS 7.5 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-AB-cabin	EPSEN
84	w_mrs_c	20	White	🟦🟨⬜⬜	EHPS pump speed	Link G4X plug A (centre dash) pin 27	630	ST185-AB-cabin	MRSSPD
85	w_eps_rly	18	White	🟦🟦🟦	EHPS relay coil (-)	MR-S EHPS pump relay (HCR150, glove box, beside the POWER box) - coil- (85) switched to...	450	ST185-AB-cabin	EPS
86					spare, sealing plug				
87					spare, sealing plug				
88					spare, sealing plug				
89					spare, sealing plug				
90					spare, sealing plug				
91					spare, sealing plug				
92					spare, sealing plug				
93					spare, sealing plug				
94					spare, sealing plug				
95	w_lam12_cp	14	Red	🟦⬜⬜	EFI relay k_efi -> LOGIC LAM 7.5 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-CabinPower	LAM
96	w_lamg_ac	14	Black	🟦⬜⬜	CAN-Lambda ground	POWER box NEG bar M8 stud (glove box)	450	ST185-AB-cabin	LAM
97					spare, sealing plug				
98					spare, sealing plug				
99					spare, sealing plug				
100					spare, sealing plug				
101					spare, sealing plug				
102					spare, sealing plug				

APS-PEDAL - accelerator pedal sensor

housing TBD | contacts TBD | pins per TBD

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w210	20	Red	🟦🟦	+5 V pedal sensor 2	DT06-12 plug (ECU splice point) pin 9	1200	ST185-AB-cabin	5V
2	w_aps_gnd2	20	Yellow	🟨🟨	Pedal 2 ground	DT06-12 plug (ECU splice point) pin 8	1200	ST185-AB-cabin	SGND
3	w_aps_vpa2	20	Blue	🟨⬜⬜	Pedal 2 signal sub	ECU-B (Link G4X plug B, centre dash) pin 33	1090	ST185-AB-cabin	APS
4	w_aps_vc1	20	Red	🟦🟦	+5 V pedal sensor 1	DT06-12 plug (ECU splice point) pin 8	1200	ST185-AB-cabin	5V
5	w40	20	Yellow	🟨🟨	Pedal 1 ground	DT06-12 plug (ECU splice point) pin 7	1200	ST185-AB-cabin	SGND
6	w38	20	Blue	🟨⬜⬜	Pedal 1 signal main	Link G4X plug A (centre dash) pin 14	1090	ST185-AB-cabin	APS

IX-FUEL-P - IX-FUEL inline to fuel sender lead (trunk end)

housing DT04-2P + W2P | contacts 0460-202-1631 | pins per Deutsch DT / DTM cavity numbers (moulded on the housing)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	w_fl_sig	20	White	🟦🟨🟦	Fuel level signal	SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24	2820	ST185-AB-cabin	FLVL
2	w45	20	Blue	🟨🟨	Fuel level ground	DT06-12 plug (ECU splice point) pin 2	2820	ST185-AB-cabin	SGND

IX-WS-F-S - to front VR conditioner

housing DT06-6S + W6S | contacts 0462-201-1631 | pins per Deutsch DT / DTM cavity numbers (moulded on the housing)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	cab_fspur_5v	20	Red	🟦🟦	VRC-F +5V	DT06-12 plug (ECU splice point) pin 10	640	ST185-AB-cabin	5V
2	cab_fspur_gnd	20	Yellow	🟨🟨	VRC-F GND	DT06-12 plug (ECU splice point) pin 9	640	ST185-AB-cabin	SGND
3	cab_fspur_l	20	Blue	⬜🟦🟨	FL conditioned out	Link G4X plug A (centre dash) pin 23	530	ST185-AB-cabin	WSSF
4	cab_fspur_r_ac	20	White	⬜🟦🟨	FR conditioned out	ECU-B (Link G4X plug B, centre dash) pin 21	530	ST185-AB-cabin	WSSF
5	cab_fspur_sh		Shield	⬜🟦🟨	WS-F screen drain	At the front WS inline - SP-SHIELD-A-WSF: front wheel-speed drains	500	ST185-AB-cabin	WSSF
6					spare, sealing plug				

IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)

housing DT06-6S + W6S | contacts 0462-201-1631 | pins per Deutsch DT / DTM cavity numbers (moulded on the housing)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
1	cab_rspur_5v	20	Red	🟦🟦	VRC-R +5V	DT06-12 plug (ECU splice point) pin 11	640	ST185-AB-cabin	5V
2	cab_rspur_gnd	20	Yellow	🟨🟨	VRC-R GND	DT06-12 plug (ECU splice point) pin 3	640	ST185-AB-cabin	SGND
3	cab_rspur_l	20	Green	🟦🟦🟨🟨	Rear left wheel spd	ECU-B (Link G4X plug B, centre dash) pin 20	530	ST185-AB-cabin	WSSR
4	cab_rspur_r	20	Blue	🟦🟦🟨🟨	Rear right wheel spd	ECU-B (Link G4X plug B, centre dash) pin 19	530	ST185-AB-cabin	WSSR
5	cab_rspur_sh		Shield	🟦🟦🟨🟨	WS-R screen drain	At the rear WS inline - SP-SHIELD-B-WSR: rear wheel-speed drains	500	ST185-AB-cabin	WSSR
6					spare, sealing plug				

K-ACC - A/C Clutch Relay (on/off) (seated in the LOGIC box M5) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) gated through the A5 dual pressure switch, not raw switched 12V

housing 6-1419137-4 | contacts 280919-2 | pins per ISO 7588 relay terminal numbers

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
85	w_acc_trig	18	White	🟨🟦	A/C clutch relay (-)	ECU-B (Link G4X plug B, centre dash) pin 10	680	ST185-AB-cabin	ACC
86	w_acc86	18	Red	🟨🟦	A/C clutch relay (+)	At A/C amp - SP-AC-PSW: A/C pressure switch output	860	ST185-AB-cabin	ACC

POWER-NEG-BAR - POWER box NEG bar M8 stud (glove box)

terminal 320575

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_lamg_ac	14	Black	🟦⬜⬜	CAN-Lambda ground	DRB102 receptacle (RH firewall) pin 96	450	ST185-AB-cabin	LAM
	w_csbg_ac	20	Black	🟨🟦🟦	CSB3 + opto ground	CSB3 ground splice - CSB3 pin 2, opto board COM and stalk ground	1050	ST185-AB-cabin	CSB
	w66	10	Black	🟨🟨⬜	ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	570	ST185-AB-cabin	GND

T-AC-BTN - OEM dash A/C switch V-G lead (old A15 pin 3)

terminal TBD

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_ac_btn_in	20	Yellow	🟨🟨🟦	A/C switch V-G in	10k A/C switch divider, top pin 1	640	ST185-AB-cabin	ACBTN

T-EVAP-RTN - OEM evaporator thermistor A24 pin 2, at the evap case

terminal TBD

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_evap_rtn	20	Blue	🟨🟨	Evap thermistor gnd	DT06-12 plug (ECU splice point) pin 5	760	ST185-AB-cabin	SGND

T-EVAP-TEMP - OEM evaporator thermistor A24 pin 1, at the evap case

terminal TBD

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	w_evap_sig	20	White	⬜🟦🟦	Evap thermistor sig	SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32	760	ST185-AB-cabin	EVAP

OEM A/C amplifier

factory lead tap (EWD locator in the signal)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
11	w_ac_kill	20	White	🟦🟨🟦⬜	A/C cancel (ACT)	Link G4X plug A (centre dash) pin 18	820	ST185-AB-cabin	ACKILL
13	w_ac_psw_sw	20	Yellow	🟨🟦	A/C pressure sw out	At A/C amp - SP-AC-PSW: A/C pressure switch output	200	ST185-AB-cabin	ACC

OEM A5, factory Y-R lead

factory lead tap (EWD locator in the signal)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
4	w_ac_psw_in	20	Yellow	🟨🟦	A/C pressure sw out	At A/C amp - SP-AC-PSW: A/C pressure switch output	200	ST185-AB-cabin	ACC

OEM J/B No.1 (LH kick panel) 1H pin 7, B-O

factory lead tap (EWD locator in the signal)

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
7	w_ig2_in	20	Yellow	🟦🟨🟨⬜	IG2 wake feed	IG2 wake diode (1N5822) pin 1	1210	ST185-AB-cabin	IG2WAKE
7	w_ign	20	Yellow	🟦🟨⬜🟦	Ignition sw sense	ECU-B (Link G4X plug B, centre dash) pin 28	1100	ST185-AB-cabin	IGNSW

CAB-APS1 cable screen (floats at the device end)

cable screen

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	cab_aps1_sh		Shield	🟨⬜⬜	Pedal 1 cable shield	At the pedal branch - SP-SHIELD-A-APS: pedal drains	840	ST185-AB-cabin	APS

CAB-APS2 cable screen (floats at the device end)

cable screen

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	cab_aps_sh		Shield	🟨⬜⬜	Pedal 2 cable shield	At the pedal branch - SP-SHIELD-A-APS: pedal drains	840	ST185-AB-cabin	APS

CAB-FSPUR-FR-AC cable screen (floats at the device end)

cable screen

PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
	cab_fspur_fr_sh_ac		Shield	⬜🟦🟨	FR wheel spd shield	At the front WS inline - SP-SHIELD-A-WSF: front wheel-speed drains	500	ST185-AB-cabin	WSSF

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Pinout tables - every pin of every connector, bus, splice and end

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	3 OF 3	861 x 730 mm	DG	2026-10-19

ST185 Celica (living-relation) - generated by docs/harness/tools/build_drawings.py from docs/harness/MASTER-wirelist.csv; not to scale