# ST185 Pin Chart

92 connectors · 67 faces sourced · 25 still a numbered list

Red +12 V · Black ground · White signal · Blue sensor return · Orange sensor supply · Yellow switch in · Green CAN

Grey shield drain · Dashed = spare cavity · Cavity colour is the wire's insulation colour. From MASTER-wirelist.csv.


**Bussed plug** = a Deutsch DT plug whose bussed cap ties every pin together: a splice you can unplug. Each sits where its name says.

## AB-cabin

# Link G4X plug A ECU-A · 4-1437290-1

FACE SOURCED

Link G4X plug A (centre dash)

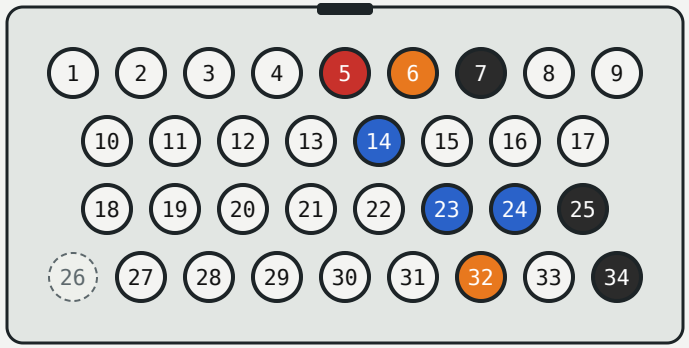


latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w111_c | Injector 4 drive (-) | DRB102 bulkhead, cabin side · pin 24 | 3-1447221-4 |
| 2 | 20 White | w110_c | Injector 3 drive (-) | DRB102 bulkhead, cabin side · pin 23 | 3-1447221-4 |
| 3 | 20 White | w109_c | Injector 2 drive (-) | DRB102 bulkhead, cabin side · pin 22 | 3-1447221-4 |
| 4 | 20 White | w108_c | Injector 1 drive (-) | DRB102 bulkhead, cabin side · pin 21 | 3-1447221-4 |
| 5 | 18 Red | w_a5_pin | EFI relay k_efi → LOGIC SW12 5 A fuse (+ IG2 wake diode) | Splice to: Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 2; DRB102 bulkhead, cabin side · pin 30; DRB102 bulkhead, cabin side · pin 67; IG2 wake diode (1N5822) · pin 2 | 3-1447221-3 |
| 6 | 20 Orange | w19 | +8 V sensor supply | Splice to: Cam pull-up 1.8 k to +8 V · pin 1; DRB102 bulkhead, cabin side · pin 63 | 3-1447221-4 |
| 7 | 20 Black | w_drain_ecu_a | Shield drain | Splice to: Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47 | 3-1447221-4 |
| 8 | 20 White | w200_c | Crank sensor signal | DRB102 bulkhead, cabin side · pin 74 | 3-1447221-4 |
| 9 | 20 White | w_trig2_pin | Cam sensor signal | Splice to: DRB102 bulkhead, cabin side · pin 64; Cam pull-up 1.8 k to +8 V · pin 2 | 3-1447221-4 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 10 | 20 White | w123_c | Coil 4 trigger (IGT) | DRB102 bulkhead, cabin side · pin 12 | 3-1447221-4 |
| 11 | 20 White | w122_c | Coil 3 trigger (IGT) | DRB102 bulkhead, cabin side · pin 11 | 3-1447221-4 |
| 12 | 20 White | w121_c | Coil 2 trigger (IGT) | DRB102 bulkhead, cabin side · pin 10 | 3-1447221-4 |
| 13 | 20 White | w120_c | Coil 1 trigger (IGT) | DRB102 bulkhead, cabin side · pin 9 | 3-1447221-4 |
| 14 | 20 Blue | w38 | Pedal 1 signal main | accelerator pedal sensor · pin 6 | 3-1447221-4 |
| 15 | 20 White | w201_c | Coolant temp signal | DRB102 bulkhead, cabin side · pin 70 | 3-1447221-4 |
| 16 | 20 White | w202_c | Intake temp signal | DRB102 bulkhead, cabin side · pin 33 | 3-1447221-4 |
| 17 | 20 White | w26_c | MAP sensor signal | DRB102 bulkhead, cabin side · pin 17 | 3-1447221-4 |
| 18 | 20 White | w_ac_kill | A/C cancel (ACT) | OEM A/C amplifier | 3-1447221-4 |
| 19 | 18 White | w_fp85 | Fuel pump relay (-) | Trunk relay box relay K1 (fuel pump) · terminal 85 | 3-1447221-3 |
| 20 | 20 White | w81 | ETB relay coil (-) | LOGIC fuse box relay M4 (ETB power) · terminal 85 | 3-1447221-4 |
| 21 | 20 White | w103_c | Boost solenoid (-) | DRB102 bulkhead, cabin side · pin 58 | 3-1447221-4 |
| 22 | 20 White | w128_c | Throttle pos 1 main | DRB102 bulkhead, cabin side · pin 42 | 3-1447221-4 |
| 23 | 20 Blue | cab_fspur_l | FL conditioned out | Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 3 | 3-1447221-4 |
| 24 | 18 Blue | w68 | Sensor ground | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 1 | 3-1447221-3 |
| 25 | 18 Black | w70 | ECU power ground | Splice to: Link G4X plug A · pin 34; Link G4X plug B · pin 25; Link G4X plug B · pin 34; POWER box NEG bar M8 stud (glove box) | 3-1447221-3 |
| *26* | *spare* | | | | |
| 27 | 20 White | w_mrs_c | EHPS pump speed | DRB102 bulkhead, cabin side · pin 84 | 3-1447221-4 |


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 28 | 18 White | w76 | EFI relay coil (-) | POWER fuse box relay R2 (EFI main) · terminal 85 | 3-1447221-3 |
| 29 | 18 White | w_fan85 | Rad fan relay (-) | POWER fuse box relay R4 (radiator fan) · terminal 85 | 3-1447221-3 |
| 30 | 20 White | w16_c | Turbo speed signal | DRB102 bulkhead, cabin side · pin 53 | 3-1447221-4 |
| 31 | 20 White | w48_c | Flex fuel signal | DRB102 bulkhead, cabin side · pin 31 | 3-1447221-4 |
| 32 | 18 Orange | w67 | +5 V sensor supply | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 1 | 3-1447221-3 |
| 33 | 20 White | w129_c | Throttle pos 2 sub | DRB102 bulkhead, cabin side · pin 44 | 3-1447221-4 |
| 34 | 18 Black | w_a34 | ECU power ground | Splice to: Link G4X plug A · pin 25; Link G4X plug B · pin 25; Link G4X plug B · pin 34; POWER box NEG bar M8 stud (glove box) | 3-1447221-3 |

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, CabinPower

# DRB102 bulkhead, cabin side DRB102-CABIN · DRB12-102PAE-L018 + DRBF-1A

FACE SOURCED

DRB102 receptacle (RH firewall)

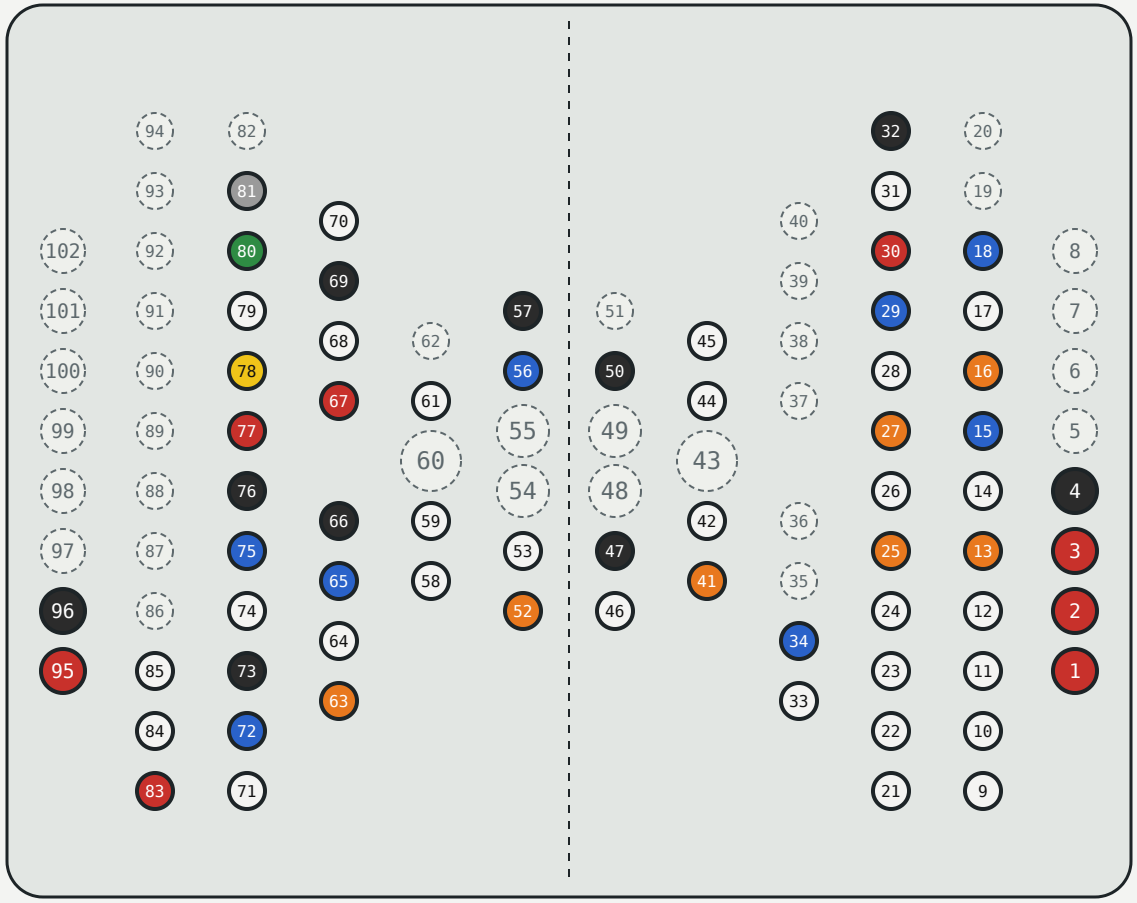


TE drawing view, numbers moulded on the insert

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | w_cop_pwr_ac | EFI relay k_efi → LOGIC COP 10 A fuse | LOGIC fuse box · fuse BUS2-3 (COP 10 A) | 0460-220-1231 |
| 2 | 14 Red | w_inj_pwr_ac | EFI relay k_efi → LOGIC INJ 7.5 A fuse | LOGIC fuse box · fuse BUS2-4 (INJ 7.5 A) | 0460-220-1231 |
| 3 | 12 Red | w_strl_c | Starter solenoid S | OEM R/B No.4 starter relay pin 4 (RH kick), starter out | 0460-220-1231 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 4 | 14 Black | w_cop_gnd_ac | Coil ground to the POWER box NEG bar | POWER box NEG bar M8 stud (glove box) | 0460-220-1231 |
| *5* | *spare* | | | | |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |
| 9 | 20 White | w120_c | Coil 1 trigger (IGT) | Link G4X plug A · pin 13 | 0460-202-1631 |
| 10 | 20 White | w121_c | Coil 2 trigger (IGT) | Link G4X plug A · pin 12 | 0460-202-1631 |
| 11 | 20 White | w122_c | Coil 3 trigger (IGT) | Link G4X plug A · pin 11 | 0460-202-1631 |
| 12 | 20 White | w123_c | Coil 4 trigger (IGT) | Link G4X plug A · pin 10 | 0460-202-1631 |
| 13 | 20 Orange | w_5v_brail_c46 | +5 V fuel pressure | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 6 | 0460-202-1631 |
| 14 | 20 White | w32_c | Fuel pressure signal | Link G4X plug B · pin 16 | 0460-202-1631 |
| 15 | 20 Blue | w_gnd_b_c21 | Gnd fuel press + VSS | Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 8 | 0460-202-1631 |
| 16 | 20 Orange | w_5v_a_c39 | +5 V MAP sensor | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 3 | 0460-202-1631 |
| 17 | 20 White | w26_c | MAP sensor signal | Link G4X plug A · pin 17 | 0460-202-1631 |
| 18 | 20 Blue | w_gnd_a_c44 | Gnd flex + MAP | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 6 | 0460-202-1631 |
| *19* | *spare* | | | | |
| *20* | *spare* | | | | |
| 21 | 20 White | w108_c | Injector 1 drive (-) | Link G4X plug A · pin 4 | 0460-202-1631 |
| 22 | 20 White | w109_c | Injector 2 drive (-) | Link G4X plug A · pin 3 | 0460-202-1631 |
| 23 | 20 White | w110_c | Injector 3 drive (-) | Link G4X plug A · pin 2 | 0460-202-1631 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 24 | 20 White | w111_c | Injector 4 drive (-) | Link G4X plug A · pin 1 | 0460-202-1631 |
| 25 | 20 Orange | w_5v_brail_c47 | +5 V coolant press | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 7 | 0460-202-1631 |
| 26 | 20 White | w35_c | Coolant press signal | Link G4X plug B · pin 23 | 0460-202-1631 |
| 27 | 20 Orange | w_5v_brail_c45 | +5 V oil pressure | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 5 | 0460-202-1631 |
| 28 | 20 White | w29_c | Oil pressure signal | Link G4X plug B · pin 15 | 0460-202-1631 |
| 29 | 20 Blue | w_gnd_b_c19 | Gnd oil/clnt/temps | Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 7 | 0460-202-1631 |
| 30 | 18 Red | w_rail_sp_sw12_c | EFI relay k_efi → LOGIC SW12 5 A fuse | Splice to: Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 2; IG2 wake diode (1N5822) · pin 2; Link G4X plug A · pin 5; DRB102 bulkhead, cabin side · pin 67 | 0460-202-1631 |
| 31 | 20 White | w48_c | Flex fuel signal | Link G4X plug A · pin 31 | 0460-202-1631 |
| 32 | 20 Black | w_shc_flex | Flex fuel shield | Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 47 | 0460-202-1631 |
| 33 | 20 White | w202_c | Intake temp signal | Link G4X plug A · pin 16 | 0460-202-1631 |
| 34 | 20 Blue | w_rail_sp_gndout_c | Gnd IAT/TPS/coolant | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 2 | 0460-202-1631 |
| *35* | *spare* | | | | |
| *36* | *spare* | | | | |
| *37* | *spare* | | | | |
| *38* | *spare* | | | | |
| *39* | *spare* | | | | |
| *40* | *spare* | | | | |
| 41 | 20 Orange | w_rail_sp_5v_c | +5 V throttle sensor | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 2 | 0460-202-1631 |
| 42 | 20 White | w128_c | Throttle pos 1 main | Link G4X plug A · pin 22 | 0460-202-1631 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *43* | *spare* | | | | |
| 44 | 20 White | `w129_c` | Throttle pos 2 sub | Link G4X plug A · pin 33 | `0460-202-1631` |
| 45 | 18 White | `w124_c` | ETB motor + | Link G4X plug B · pin 18 | `0460-202-1631` |
| 46 | 18 White | `w215_c` | ETB motor - | Link G4X plug B · pin 26 | `0460-202-1631` |
| 47 | 20 Black | `w_shc_etbs` | Throttle shield | Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32 | `0460-202-1631` |
| *48* | *spare* | | | | |
| *49* | *spare* | | | | |
| 50 | 20 Black | `w_shc_etbm` | ETB motor shield | Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 69; Link G4X plug B · pin 17; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5 | `0460-202-1631` |
| *51* | *spare* | | | | |
| 52 | 20 Orange | `w_5v_a_c40` | +5 V turbo speed | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 4 | `0460-202-1631` |
| 53 | 20 White | `w16_c` | Turbo speed signal | Link G4X plug A · pin 30 | `0460-202-1631` |
| *54* | *spare* | | | | |
| *55* | *spare* | | | | |
| 56 | 20 Blue | `w_gnd_a_c43` | Gnd turbo speed | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 5 | `0460-202-1631` |
| 57 | 20 Black | `w_shc_turbo` | Turbo speed shield | Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47 | `0460-202-1631` |
| 58 | 20 White | `w103_c` | Boost solenoid (-) | Link G4X plug A · pin 21 | `0460-202-1631` |
| 59 | 20 White | `w204_c` | Charge temp signal | Link G4X plug B · pin 7 | `0460-202-1631` |
| *60* | *spare* | | | | |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 61 | 20 White | w203_c | Oil temp signal | Link G4X plug B · pin 6 | 0460-202-1631 |
| *62* | *spare* | | | | |
| 63 | 20 Orange | w_rail_sp_8v_c | +8 V to cam sensor | Splice to: Cam pull-up 1.8 k to +8 V · pin 1; Link G4X plug A · pin 6 | 0460-202-1631 |
| 64 | 20 White | w_cam_sig_c | Cam sensor signal | Splice to: Link G4X plug A · pin 9; Cam pull-up 1.8 k to +8 V · pin 2 | 0460-202-1631 |
| 65 | 20 Blue | w_gnd_a_c42 | Gnd cam sensor | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 4 | 0460-202-1631 |
| 66 | 20 Black | w_shc_cam | Cam sensor shield | Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47 | 0460-202-1631 |
| 67 | 20 Red | w_rail_sw12_b_c_ac | EFI relay k_efi → LOGIC SW12 5 A fuse | Splice to: Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 2; IG2 wake diode (1N5822) · pin 2; Link G4X plug A · pin 5; DRB102 bulkhead, cabin side · pin 30 | 0460-202-1631 |
| 68 | 20 White | w_vss_sig_c | Gearbox speed signal | Link G4X plug B · pin 29 | 0460-202-1631 |
| 69 | 20 Black | w_shc_vss | Gearbox speed shield | Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 50; Link G4X plug B · pin 17; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5 | 0460-202-1631 |
| 70 | 20 White | w201_c | Coolant temp signal | Link G4X plug A · pin 15 | 0460-202-1631 |
| 71 | 20 White | w205_c | Knock sensor signal | Link G4X plug B · pin 9 | 0460-202-1631 |
| 72 | 20 Blue | w12_c | Knock sensor (-) | Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 6 | 0460-202-1631 |
| 73 | 20 Black | w_shc_knock1 | Knock sensor shield | Splice to: DRB102 bulkhead, cabin side · pin 50; DRB102 bulkhead, cabin side · pin 69; Link G4X plug B · pin 17; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5 | 0460-202-1631 |
| 74 | 20 White | w200_c | Crank sensor signal | Link G4X plug A · pin 8 | 0460-202-1631 |
| 75 | 20 Blue | w_gnd_a_c41 | Gnd crank sensor | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 3 | 0460-202-1631 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 76 | 20 Black | w_shc_crank | Crank sensor shield | Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47 | 0460-202-1631 |
| 77 | 16 Red | w_rev_feed_c | Back-up sw +12 V in | OEM IG2 pin 4 (under the ECU, cowl side) | 0460-202-1631 |
| 78 | 16 Yellow | w_rev_sw_c | Reverse sw +12 V out | Splice to: Optocoupler board, 8 channel (Dan's, generic EL814) · pin IN2; OEM IG2 pin 13 (under the ECU, cowl side) | 0460-202-1631 |
| 79 | 20 White | wc_h_bh_bc | CAN H to CAN-Lambda | Splice to: ECU Comms/Tuning Port · pin 3; 120 ohm CAN end resistor, ECU end · pin 1; ECUMaster CSB3 · pin 5; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash) | 0460-202-1631 |
| 80 | 20 Green | wc_l_bh_bc | CAN L to CAN-Lambda | Splice to: ECU Comms/Tuning Port · pin 4; 120 ohm CAN end resistor, ECU end · pin 2; ECUMaster CSB3 · pin 6; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash) | 0460-202-1631 |
| 81 | Shield | cab_canbh_bc_sh | CAN-Lambda shield | Splice to: ECU Comms/Tuning Port · pin 1; Shield, not connected at the device end | 0460-202-1631 |
| *82* | *spare* | | | | |
| 83 | 20 Red | w_fb_mrs_en | EFI relay k_efi → LOGIC MRS 5 A fuse | LOGIC fuse box · fuse BUS2-12 (MRS 5 A) | 0460-202-1631 |
| 84 | 20 White | w_mrs_c | EHPS pump speed | Link G4X plug A · pin 27 | 0460-202-1631 |
| 85 | 18 White | w_eps_rly | EHPS relay coil (-) | EPS pump relay (beside the POWER fuse box) · terminal 85 | 0460-202-1631 |
| *86* | *spare* | | | | |
| *87* | *spare* | | | | |
| *88* | *spare* | | | | |
| *89* | *spare* | | | | |
| *90* | *spare* | | | | |
| *91* | *spare* | | | | |
| *92* | *spare* | | | | |
| *93* | *spare* | | | | |
| *94* | *spare* | | | | |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 95 | 14 Red | w_lam12_cp | EFI relay k_efi → LOGIC LAM 7.5 A fuse | LOGIC fuse box · fuse BUS2-1 (LAM 7.5 A) | 0460-220-1231 |
| 96 | 14 Black | w_lamg_ac | CAN-Lambda ground | POWER box NEG bar M8 stud (glove box) | 0460-220-1231 |
| *97* | *spare* | | | | |
| *98* | *spare* | | | | |
| *99* | *spare* | | | | |
| *100* | *spare* | | | | |
| *101* | *spare* | | | | |
| *102* | *spare* | | | | |


Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-cabin, CabinPower

# +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V)

BUS-5V · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)

FACE SOURCED

DT06-12 plug (ECU splice point)

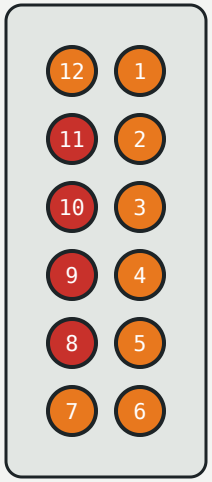


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Orange | w67 | +5 V from ECU A32 | Link G4X plug A · pin 32 | 0462-201-16141 |
| 2 | 20 Orange | w_rail_sp_5v_c | +5 V throttle sensor | DRB102 bulkhead, cabin side · pin 41 | 0462-201-16141 |
| 3 | 20 Orange | w_5v_a_c39 | +5 V MAP sensor | DRB102 bulkhead, cabin side · pin 16 | 0462-201-16141 |
| 4 | 20 Orange | w_5v_a_c40 | +5 V turbo speed | DRB102 bulkhead, cabin side · pin 52 | 0462-201-16141 |
| 5 | 20 Orange | w_5v_brail_c45 | +5 V oil pressure | DRB102 bulkhead, cabin side · pin 27 | 0462-201-16141 |
| 6 | 20 Orange | w_5v_brail_c46 | +5 V fuel pressure | DRB102 bulkhead, cabin side · pin 13 | 0462-201-16141 |
| 7 | 20 Orange | w_5v_brail_c47 | +5 V coolant press | DRB102 bulkhead, cabin side · pin 25 | 0462-201-16141 |
| 8 | 20 Red | w_aps_vc1 | +5 V pedal sensor 1 | accelerator pedal sensor · pin 4 | 0462-201-16141 |
| 9 | 20 Red | w210 | +5 V pedal sensor 2 | accelerator pedal sensor · pin 1 | 0462-201-16141 |
| 10 | 20 Red | cab_fspur_5v | +5 V front VRC | Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 1 | 0462-201-16141 |
| 11 | 20 Red | cab_rspur_5v | +5 V rear VRC | Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 1 | 0462-201-16141 |
| 12 | 20 Orange | w_5v_bus_link | +5 V to BUS-5V-2 | +5 V bussed plug 2 at the ECU, fed from BUS-5V pin 12 (BUS-5V-2) · pin 1 | 0462-201-16141 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# +5 V bussed plug 2 at the ECU, fed from BUS-5V pin 12 (BUS-5V-2)

`BUS-5V-2 · DT06-08SA + W8S; DT04-08PA-P021 (bussed cap)`

FACE SOURCED

DT06-8 plug (ECU splice point)

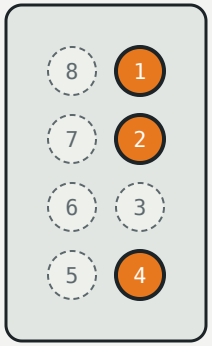


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Orange | `w_5v_bus_link` | +5 V from BUS-5V | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 12 | `0462-201-16141` |
| 2 | 20 Orange | `w_cru_5v_ac` | +5 V cruise ladder | Cruise resistor on the CSB3 · pin 1 | `0462-201-16141` |
| 4 | 20 Orange | `w44` | +5 V fuel lvl pullup | 470R fuel level pull-up to +5V · pin 2 | `0462-201-16141` |
| *5* | *spare* | | | | |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A)

BUS-GNDOUT-A · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)

FACE SOURCED

DT06-12 plug (ECU splice point)

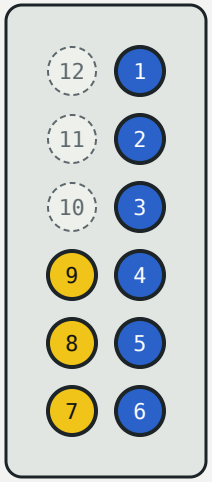


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Blue | w68 | Sensor gnd from A24 | Link G4X plug A · pin 24 | 0462-201-16141 |
| 2 | 20 Blue | w_rail_sp_gndout_c | Gnd IAT/TPS/coolant | DRB102 bulkhead, cabin side · pin 34 | 0462-201-16141 |
| 3 | 20 Blue | w_gnd_a_c41 | Gnd crank sensor | DRB102 bulkhead, cabin side · pin 75 | 0462-201-16141 |
| 4 | 20 Blue | w_gnd_a_c42 | Gnd cam sensor | DRB102 bulkhead, cabin side · pin 65 | 0462-201-16141 |
| 5 | 20 Blue | w_gnd_a_c43 | Gnd turbo speed | DRB102 bulkhead, cabin side · pin 56 | 0462-201-16141 |
| 6 | 20 Blue | w_gnd_a_c44 | Gnd flex + MAP | DRB102 bulkhead, cabin side · pin 18 | 0462-201-16141 |
| 7 | 20 Yellow | w40 | Pedal 1 ground | accelerator pedal sensor · pin 5 | 0462-201-16141 |
| 8 | 20 Yellow | w_aps_gnd2 | Pedal 2 ground | accelerator pedal sensor · pin 2 | 0462-201-16141 |
| 9 | 20 Yellow | cab_fspur_gnd | Front VRC ground | Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 2 | 0462-201-16141 |
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12)

`BUS-SW12 · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)`

FACE SOURCED

SW12 bus plug DT06-12 (glove box, by LOGIC box)

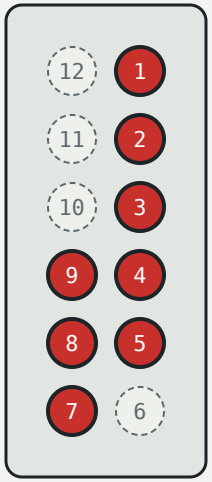


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | w_cp_sw12_in | EFI relay k_efi → LOGIC SW12 5 A fuse | LOGIC fuse box · fuse BUS2-2 (SW12 5 A) | 0462-201-16141 |
| 2 | 18 Red | w_fb_sw12 | EFI relay k_efi → LOGIC SW12 5 A fuse | Splice to: IG2 wake diode (1N5822) · pin 2; Link G4X plug A · pin 5; DRB102 bulkhead, cabin side · pin 30; DRB102 bulkhead, cabin side · pin 67 | 0462-201-16141 |
| 3 | 18 Red | w_k_fp_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | Trunk relay box relay K1 (fuel pump) · terminal 86 | 0462-201-16141 |
| 4 | 18 Red | w_k_fan_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | POWER fuse box relay R4 (radiator fan) · terminal 86 | 0462-201-16141 |
| 5 | 20 Red | w_k_etb_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | LOGIC fuse box relay M4 (ETB power) · terminal 86 | 0462-201-16141 |
| 7 | 18 Red | w_k_fan2_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | POWER fuse box relay R5 (condenser fan) · terminal 86 | 0462-201-16141 |
| 8 | 18 Red | w_k_eps_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | EPS pump relay (beside the POWER fuse box) · terminal 86 | 0462-201-16141 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 9 | 18 Red | w_k_eps_en_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | LOGIC fuse box relay M6 (EPS enable) · terminal 86 | 0462-201-16141 |
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, CabinPower

# LOGIC fuse box

LOGIC · ST185-FB-LOGIC rev 5

FACE NOT SOURCED

B2 LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R75): Bus 1 (permanent) and Bus 2 (switched, k_efi 30) mini fuse strips, micro relays M1-M10

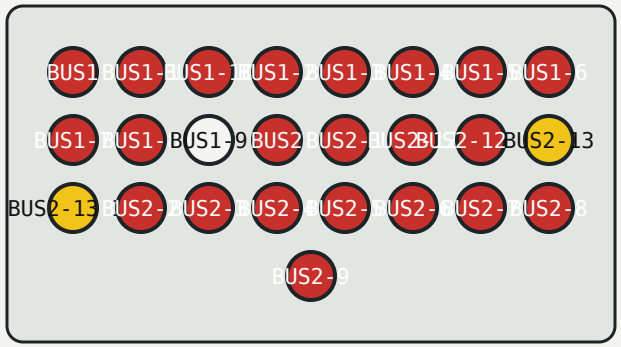


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| BUS1 | 8 Red | w_hc_fb | AMI BUS1 50 A fuse | POWER fuse box · fuse AMI OUT-1 (BUS1 50 A) | 2R5 |
| BUS1-1 | 18 Red | w_k_efi_86_cp | AMI BUS1 50 A fuse → LOGIC EFI86 5 A fuse | POWER fuse box relay R2 (EFI main) · terminal 86 | 1-968849-1 |
| BUS1-10 | 16 Red | w_fb_k_etb_30_cp | AMI BUS1 50 A fuse → LOGIC ETB 7.5 A fuse | LOGIC fuse box relay M4 (ETB power) · terminal 30 | 1-968851-1 |
| BUS1-2 | 14 Red | w_hl_cp | AMI BUS1 50 A fuse → LOGIC HL 15 A fuse | Splice to: LOGIC fuse box relay M1 (headlight LH) · terminal 30; LOGIC fuse box relay M1 (headlight LH) · terminal 86 | 1-968851-1 |
| BUS1-3 | 14 Red | w_hr_cp | AMI BUS1 50 A fuse → LOGIC HR 15 A fuse | Splice to: LOGIC fuse box relay M2 (headlight RH) · terminal 30; LOGIC fuse box relay M2 (headlight RH) · terminal 86 | 1-968851-1 |
| BUS1-4 | 14 Red | w_hz_cp | AMI BUS1 50 A fuse → LOGIC HZ 15 A fuse | Splice to: OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 30; LOGIC fuse box relay M3 (horn) · terminal 86 | 1-968851-1 |
| BUS1-5 | 14 Red | w_pmu_dome | AMI BUS1 50 A fuse → LOGIC DM 20 A fuse | OEM J/B No.1 1H pin 2 (left kick) | 1-968851-1 |
| BUS1-6 | 14 Red | w_rb2_wl | AMI BUS1 50 A fuse → LOGIC WL 15 A fuse | OEM W-L lead at old R/B2 pin 2 (left kick) | 1-968851-1 |
| BUS1-7 | 20 Red | w_at_12v_tie_cp | AMI BUS1 50 A fuse → LOGIC ALM 5 A fuse | Splice to: Alarm module · pin 1 | 1-968849-1 |
| BUS1-8 | 20 Red | w_at_12v_shk_tie_cp | AMI BUS1 50 A fuse → LOGIC ALMS 2 A fuse | Splice to: Shock / tilt sensor * · pin A | 1-968849-1 |


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| BUS1-9 | 20 White | w_alt_s_c | Alt S battery sense | Alternator G2 · pin 1 | 1-968849-1 |
| BUS2 | 10 Red | w77_cp | EFI relay k_efi (LOGIC Bus 2 feed) | POWER fuse box relay R2 (EFI main) · terminal 30 | 2R5 |
| BUS2-1 | 14 Red | w_lam12_cp | EFI relay k_efi → LOGIC LAM 7.5 A fuse | DRB102 bulkhead, cabin side · pin 95 | 1-968851-1 |
| BUS2-12 | 20 Red | w_fb_mrs_en | EFI relay k_efi → LOGIC MRS 5 A fuse | DRB102 bulkhead, cabin side · pin 83 | 1-968849-1 |
| BUS2-12 IN | 18 Red | w_k_eps_en_87_cp | LOGIC EPSEN 7.5 A fuse → EPS enable relay k_eps_en | LOGIC fuse box relay M6 (EPS enable) · terminal 87 | 1-968849-1 |
| BUS2-13 | 20 Yellow | w_start | Start request | Link G4X plug B · pin 30 | 1-968849-1 |
| BUS2-13 IN | 20 Yellow | w_start_in_cp | Start sw ST1 feed | OEM ST1 lead B-W at old R/B No.4 pin 1, RH kick panel | 1-968849-1 |
| BUS2-2 | 16 Red | w_cp_sw12_in | EFI relay k_efi → LOGIC SW12 5 A fuse | Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 1 | 1-968851-1 |
| BUS2-3 | 14 Red | w_cop_pwr_ac | EFI relay k_efi → LOGIC COP 10 A fuse | DRB102 bulkhead, cabin side · pin 1 | 1-968851-1 |
| BUS2-4 | 14 Red | w_inj_pwr_ac | EFI relay k_efi → LOGIC INJ 7.5 A fuse | DRB102 bulkhead, cabin side · pin 2 | 1-968851-1 |
| BUS2-5 | 20 Red | w_csb12 | EFI relay k_efi → LOGIC CSB 5 A fuse | ECUMaster CSB3 · pin 1 | 1-968849-1 |
| BUS2-6 | 16 Red | w_dev_cp | EFI relay k_efi → LOGIC DEV 15 A fuse | Splice to: Cluster buck converter IN+ pin (old meter spot); Pi 12-to-5 V supply IN+ pin (center dash) | 1-968851-1 |
| BUS2-7 | 18 Red | w_fb_k_eps_en_30_cp | EFI relay k_efi → LOGIC EPSEN 7.5 A fuse | LOGIC fuse box relay M6 (EPS enable) · terminal 30 | 1-968849-1 |
| BUS2-8 | 16 Red | w_acc_fuse | EFI relay k_efi → LOGIC ACC 10 A fuse | Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 86; LOGIC fuse box relay M5 (A/C clutch) · terminal 30 | 1-968851-1 |
| BUS2-9 | 20 Red | w_at_ig_tie_cp | EFI relay k_efi → LOGIC ALMIG 2 A fuse | Splice to: Alarm module · pin 3 | 1-968849-1 |

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness AB-cabin, CabinPower, EngineRoom-C, CSB3

# Link G4X plug B ECU-B · 4-1437290-0

FACE SOURCED

ECU-B (Link G4X plug B, centre dash)

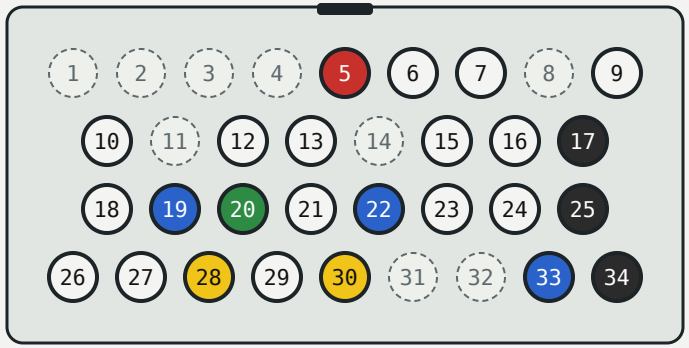


latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *1* | *spare* | | | | |
| *2* | *spare* | | | | |
| *3* | *spare* | | | | |
| *4* | *spare* | | | | |
| 5 | 18 Red | w82_ac | ETB motor +12 V | LOGIC fuse box relay M4 (ETB power) · terminal 87 | 3-1447221-3 |
| 6 | 20 White | w203_c | Oil temp signal | DRB102 bulkhead, cabin side · pin 61 | 3-1447221-4 |
| 7 | 20 White | w204_c | Charge temp signal | DRB102 bulkhead, cabin side · pin 59 | 3-1447221-4 |
| *8* | *spare* | | | | |
| 9 | 20 White | w205_c | Knock sensor signal | DRB102 bulkhead, cabin side · pin 71 | 3-1447221-4 |
| 10 | 20 White | w_tach | Engine speed (tacho) | Splice to: OEM A/C amplifier A18 (1993 book: A15); Lock-sensor tap 4.7 k from tacho · pin 1 | 3-1447221-4 |
| *11* | *spare* | | | | |
| 12 | 18 White | w_eps_trig | EPS enable relay (-) | LOGIC fuse box relay M6 (EPS enable) · terminal 85 | 3-1447221-3 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 13 | 18 White | w_fan285 | Cond fan relay (-) | POWER fuse box relay R5 (condenser fan) · terminal 85 | 3-1447221-3 |
| *14* | *spare* | | | | |
| 15 | 20 White | w29_c | Oil pressure signal | DRB102 bulkhead, cabin side · pin 28 | 3-1447221-4 |
| 16 | 20 White | w32_c | Fuel pressure signal | DRB102 bulkhead, cabin side · pin 14 | 3-1447221-4 |
| 17 | 20 Black | w_drain_ecu_b | Shield drain B | Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 50; DRB102 bulkhead, cabin side · pin 69; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5 | 3-1447221-4 |
| 18 | 18 White | w124_c | ETB motor + | DRB102 bulkhead, cabin side · pin 45 | 3-1447221-3 |
| 19 | 20 Blue | cab_rspur_r | Rear right wheel spd | Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 4 | 3-1447221-4 |
| 20 | 20 Green | cab_rspur_l | Rear left wheel spd | Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 3 | 3-1447221-4 |
| 21 | 20 White | cab_fspur_r_ac | FR conditioned out | Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 4 | 3-1447221-4 |
| 22 | 18 Blue | w69 | Sensor ground B | Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 1 | 3-1447221-3 |
| 23 | 20 White | w35_c | Coolant press signal | DRB102 bulkhead, cabin side · pin 26 | 3-1447221-4 |
| 24 | 20 White | w_fl_sig_pin | Fuel level signal | Splice to: Fuel sender inline plug, harness side, trunk (IX-FUEL) · pin 1; 470R fuel level pull-up to +5V · pin 1 | 3-1447221-4 |
| 25 | 18 Black | w_b25_ac | ECU power ground | Splice to: Link G4X plug A · pin 25; Link G4X plug A · pin 34; Link G4X plug B · pin 34; POWER box NEG bar M8 stud (glove box) | 3-1447221-3 |
| 26 | 18 White | w215_c | ETB motor - | DRB102 bulkhead, cabin side · pin 46 | 3-1447221-3 |
| 27 | 20 White | w_at_immob2 | Anti-theft input | Alarm module · pin 9 | 3-1447221-4 |
| 28 | 20 Yellow | w_ign | Ignition sw sense | OEM J/B No.1 (LH kick panel) 1H pin 7, B-O | 3-1447221-4 |
| 29 | 20 White | w_vss_sig_c | Gearbox speed signal | DRB102 bulkhead, cabin side · pin 68 | 3-1447221-4 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 20 Yellow | w_start | Start request | LOGIC fuse box · fuse BUS2-13 | 3-1447221-4 |
| *31* | *spare* | | | | |
| *32* | *spare* | | | | |
| 33 | 20 Blue | w_aps_vpa2 | Pedal 2 signal sub | accelerator pedal sensor · pin 3 | 3-1447221-4 |
| 34 | 18 Black | w_b34_ac | ECU power ground | Splice to: Link G4X plug A · pin 25; Link G4X plug A · pin 34; Link G4X plug B · pin 25; POWER box NEG bar M8 stud (glove box) | 3-1447221-3 |


Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, CabinPower, AntiTheft

# Trunk relay box relay K1 (fuel pump)

K-FP · V23132-A2001-B200

FACE SOURCED

B3-K1 Fuel Pump Relay, TE HCR150 (seated in the battery relay block K1) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) switched 12 V - HCR 150 coil is a 2-pole Superseal plug (TE terminals 1/2, not marked 85/86), resistor-suppressed so polarity-free

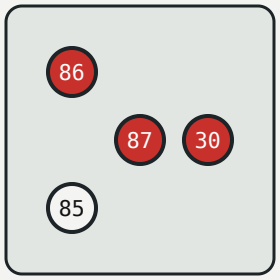


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | w_fp_30 | FP 40 A fuse (battery relay block) | Trunk relay box · FP fuse (40 A) | TBD |
| 85 | 18 White | w_fp85 | Fuel pump relay (-) | Link G4X plug A · pin 19 | 282110-1 |
| 86 | 18 Red | w_k_fp_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 3 | 282110-1 |
| 87 | 10 Red | w_fpump_r | Fuel pump +12 V | Fuel Pump · pin 1 | TBD |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, HeavyDC, RearFuel

# POWER fuse box relay R4 (radiator fan) K-FAN · 1-1414147-0

FACE SOURCED

B1-R4 Radiator fan relay (seated in the POWER box R4)

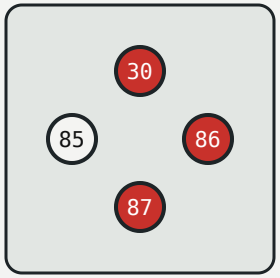


bottom (terminal side) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | w_fan_pwr | AMI FAN 30 A fuse → rad fan relay k_fan | Uprated radiator fan (+) · pin 1 | 280756-4 |
| 85 | 18 White | w_fan85 | Rad fan relay (-) | Link G4X plug A · pin 29 | 42281-1 |
| 86 | 18 Red | w_k_fan_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 4 | 42281-1 |
| 87 | 10 Red | w_fb_k_fan_87_cp | AMI FAN 30 A fuse | POWER fuse box · fuse AMI IN-4 (FAN 30 A) | 280756-4 |


Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

# EPS pump relay (beside the POWER fuse box)

K-EPS · V23132-A2001-B200

FACE SOURCED

B4 EPS pump relay (HCR150, glove box, beside the POWER box) - coil- (85) switched to ground by the MR-S pump pin B5 (R22); coil+ (86) switched 12 V - HCR 150 coil is a 2-pole plug (TE terminals 1/2, not marked 85/86), resistor-suppressed so polarity-free

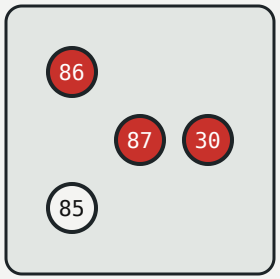


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 8 Red | w_fb_k_eps_30_ac | AMI EPS 50 A fuse | POWER fuse box · fuse AMI OUT-6 (EPS 50 A) | TBD |
| 85 | 18 White | w_eps_rly | EHPS relay coil (-) | DRB102 bulkhead, cabin side · pin 85 | 282110-1 |
| 86 | 18 Red | w_k_eps_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 8 | 282110-1 |
| 87 | 8 Red | w_eps_pwr_bc | AMI EPS 50 A fuse → EHPS relay k_eps | MR-S EHPS pump plug A · pin 1 | TBD |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

# LOGIC fuse box relay M5 (A/C clutch) K-ACC · 6-1419137-4

FACE SOURCED

B2-M5 A/C clutch relay (k_acc) - amp A15 pin 8 sinks coil- (85); coil+ (86) fused +12 V from B2-BUS2-8

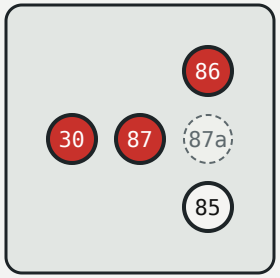


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 16 Red | w_fb_k_acc_30_cp | A/C clutch +12 V in | Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 86; LOGIC fuse box · fuse BUS2-8 (ACC 10 A) | 42281-1 |
| 85 | 18 White | w_acc_trig | A/C clutch relay coil (-) | OEM A/C amplifier A18 (1993 book: A15) | 280919-2 |
| 86 | 18 Red | w_acc86 | A/C clutch relay coil+ | Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 30; LOGIC fuse box · fuse BUS2-8 (ACC 10 A) | 280919-2 |
| 87 | 16 Red | w_acc_clutch | A/C clutch +12 V | A/C compressor A4 pin 4 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

# accelerator pedal sensor APS-PEDAL · TBD

FACE NOT SOURCED

accelerator pedal sensor

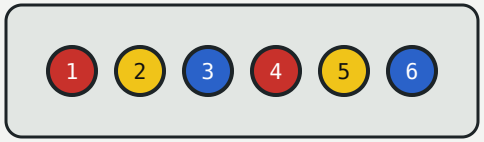


layout not sourced: numbered list only, match the moulded numbers


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w210 | +5 V pedal sensor 2 | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 9 | TBD |
| 2 | 20 Yellow | w_aps_gnd2 | Pedal 2 ground | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 8 | TBD |
| 3 | 20 Blue | w_aps_vpa2 | Pedal 2 signal sub | Link G4X plug B · pin 33 | TBD |
| 4 | 20 Red | w_aps_vc1 | +5 V pedal sensor 1 | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 8 | TBD |
| 5 | 20 Yellow | w40 | Pedal 1 ground | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 7 | TBD |
| 6 | 20 Blue | w38 | Pedal 1 signal main | Link G4X plug A · pin 14 | TBD |

Pin numbers: TBD · harness AB-cabin

# Front wheel-speed inline plug, VRC side (IX-WS-F) IX-WS-F-S · DT06-6S + W6S

FACE SOURCED

to front VR conditioner

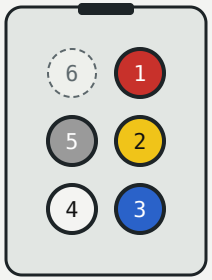


latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | cab_fspur_5v | VRC-F +5V | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 10 | 0462-201-1631 |
| 2 | 20 Yellow | cab_fspur_gnd | VRC-F GND | Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 9 | 0462-201-1631 |
| 3 | 20 Blue | cab_fspur_l | FL conditioned out | Link G4X plug A · pin 23 | 0462-201-1631 |
| 4 | 20 White | cab_fspur_r_ac | FR conditioned out | Link G4X plug B · pin 21 | 0462-201-1631 |
| 5 | Shield | cab_fspur_sh | WS-F screen drain | Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47 | 0462-201-1631 |
| *6* | *spare* | | | | |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B)

`BUS-GNDOUT-B · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)`

FACE SOURCED

DT06-12 plug (ECU splice point)

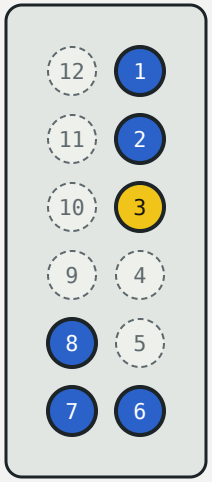


wire side (where the contacts go in) view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Blue | w69 | Sensor gnd from B22 | Link G4X plug B · pin 22 | 0462-201-16141 |
| 2 | 20 Blue | w45 | Fuel level ground | Fuel sender inline plug, harness side, trunk (IX-FUEL) · pin 2 | 0462-201-16141 |
| 3 | 20 Yellow | cab_rspur_gnd | Rear VRC ground | Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 2 | 0462-201-16141 |
| 6 | 20 Blue | w12_c | Knock sensor (-) | DRB102 bulkhead, cabin side · pin 72 | 0462-201-16141 |
| 7 | 20 Blue | w_gnd_b_c19 | Gnd oil/clnt/temps | DRB102 bulkhead, cabin side · pin 29 | 0462-201-16141 |
| 8 | 20 Blue | w_gnd_b_c21 | Gnd fuel press + VSS | DRB102 bulkhead, cabin side · pin 15 | 0462-201-16141 |
| *9* | *spare* | | | | |
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# LOGIC fuse box relay M6 (EPS enable) K-EPS-EN · 6-1419137-4

FACE SOURCED

B2-M6 EPS Enable Relay (seated in the LOGIC box M6) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) switched 12 V

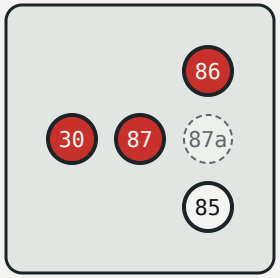


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 18 Red | w_fb_k_eps_en_30_cp | EFI relay k_efi → LOGIC EPSEN 7.5 A fuse | LOGIC fuse box · fuse BUS2-7 (EPSEN 7.5 A) | 42281-1 |
| 85 | 18 White | w_eps_trig | EPS enable relay (-) | Link G4X plug B · pin 12 | 280919-2 |
| 86 | 18 Red | w_k_eps_en_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 9 | 280919-2 |
| 87 | 18 Red | w_k_eps_en_87_cp | LOGIC EPSEN 7.5 A fuse → EPS enable relay k_eps_en | LOGIC fuse box · fuse BUS2-12 (MRS 5 A) input | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

# Fuel sender inline plug, harness side, trunk (IX-FUEL)

IX-FUEL-P · DT04-2P + W2P

FACE SOURCED

IX-FUEL inline to fuel sender lead (trunk end)




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w_fl_sig | Fuel level signal | Splice to: Link G4X plug B · pin 24; 470R fuel level pull-up to +5V · pin 1 | 0460-202-1631 |
| 2 | 20 Blue | w45 | Fuel level ground | Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 2 | 0460-202-1631 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R)

IX-WS-R-S · DT06-6S + W6S

FACE SOURCED

IX-WS-R inline to rear VRC (dash above ECU)

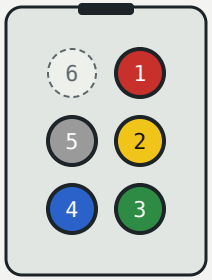


latch top

wire side (where the contacts go in) view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | cab_rspur_5v | VRC-R +5V | +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 11 | 0462-201-1631 |
| 2 | 20 Yellow | cab_rspur_gnd | VRC-R GND | Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 3 | 0462-201-1631 |
| 3 | 20 Green | cab_rspur_l | Rear left wheel spd | Link G4X plug B · pin 20 | 0462-201-1631 |
| 4 | 20 Blue | cab_rspur_r | Rear right wheel spd | Link G4X plug B · pin 19 | 0462-201-1631 |
| 5 | Shield | cab_rspur_sh | WS-R screen drain | Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 50; DRB102 bulkhead, cabin side · pin 69; Link G4X plug B · pin 17 | 0462-201-1631 |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# POWER fuse box relay R5 (condenser fan) K-FAN2 · 1-1393304-0

FACE SOURCED

B1-R5 Condenser fan relay (seated in the POWER box R5)

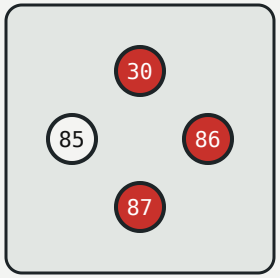


bottom (terminal side) view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | w_fan2_pwr | Cond fan +12 V | Uprated condenser fan (+) · pin 1 | 280756-4 |
| 85 | 18 White | w_fan285 | Cond fan relay (-) | Link G4X plug B · pin 13 | 42281-1 |
| 86 | 18 Red | w_k_fan2_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 7 | 42281-1 |
| 87 | 10 Red | w_fb_k_fan2_87_ac | AMI FAN2 30 A fuse | POWER fuse box · fuse AMI IN-5 (FAN2 30 A) | 280756-4 |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

# Optocoupler board, 8 channel (Dan's, generic EL814) OPTO-8 · TBD

FACE NOT SOURCED

Optocoupler board, 8 channel (Dan's, generic EL814) - inline at the CSB3

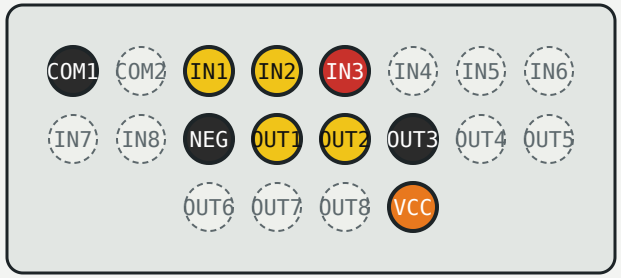


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| COM1 | 20 Black | w_opto_inc | Opto COM ground | Splice to: POWER box NEG bar M8 stud (glove box); ECUMaster CSB3 · pin 2; OEM cruise stalk switch C14 pin 17, BR wire | screw terminal (on the board) |
| *COM2* | *spare* | | | | |
| IN1 | 16 Yellow | w_sw6 | Brake on +12 V | OEM stop lamp switch S9 pin 1 (pedal), G-W wire | screw terminal (on the board) |
| IN2 | 16 Yellow | w_sw7_c | Reverse to opto in 2 | Splice to: DRB102 bulkhead, cabin side · pin 78; OEM IG2 pin 13 (under the ECU, cowl side) | screw terminal (on the board) |
| IN3 | 20 Red | w_hl_sense_in | Lights on +12 V | OEM dimmer rheostat R10 pin 1 (left of the steering wheel), green TAIL | screw terminal (on the board) |
| *IN4* | *spare* | | | | |
| *IN5* | *spare* | | | | |
| *IN6* | *spare* | | | | |
| *IN7* | *spare* | | | | |
| *IN8* | *spare* | | | | |
| NEG | 20 Black | w_opto_outc | Opto out ground | ECUMaster CSB3 · pin 4 | screw terminal (on the board) |
| OUT1 | 20 Yellow | w_opto_out1 | Brake to CSB3 S7 | ECUMaster CSB3 · pin 21 | screw terminal (on the board) |
| OUT2 | 20 Yellow | w_opto_out2 | Reverse to CSB3 S8 | ECUMaster CSB3 · pin 22 | screw terminal (on the board) |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| OUT3 | 20 Black | w_hl_sense_out | Headlight sense to cluster | Centre cluster headlight-sense input (J8 pin 15, GPIO28, active-low) | screw terminal (on the board) |
| *OUT4* | *spare* | | | | |
| *OUT5* | *spare* | | | | |
| *OUT6* | *spare* | | | | |
| *OUT7* | *spare* | | | | |
| *OUT8* | *spare* | | | | |
| VCC | 20 Orange | w_opto_vcc | Opto +5 V | ECUMaster CSB3 · pin 3 | screw terminal (on the board) |


Pin numbers: terminal names printed on the board · harness AB-cabin, CSB3

## AB-engine

# DRB102 bulkhead, engine side DRB102-ENGINE · DRB16-102SAE-L018

FACE SOURCED

BULKHEAD

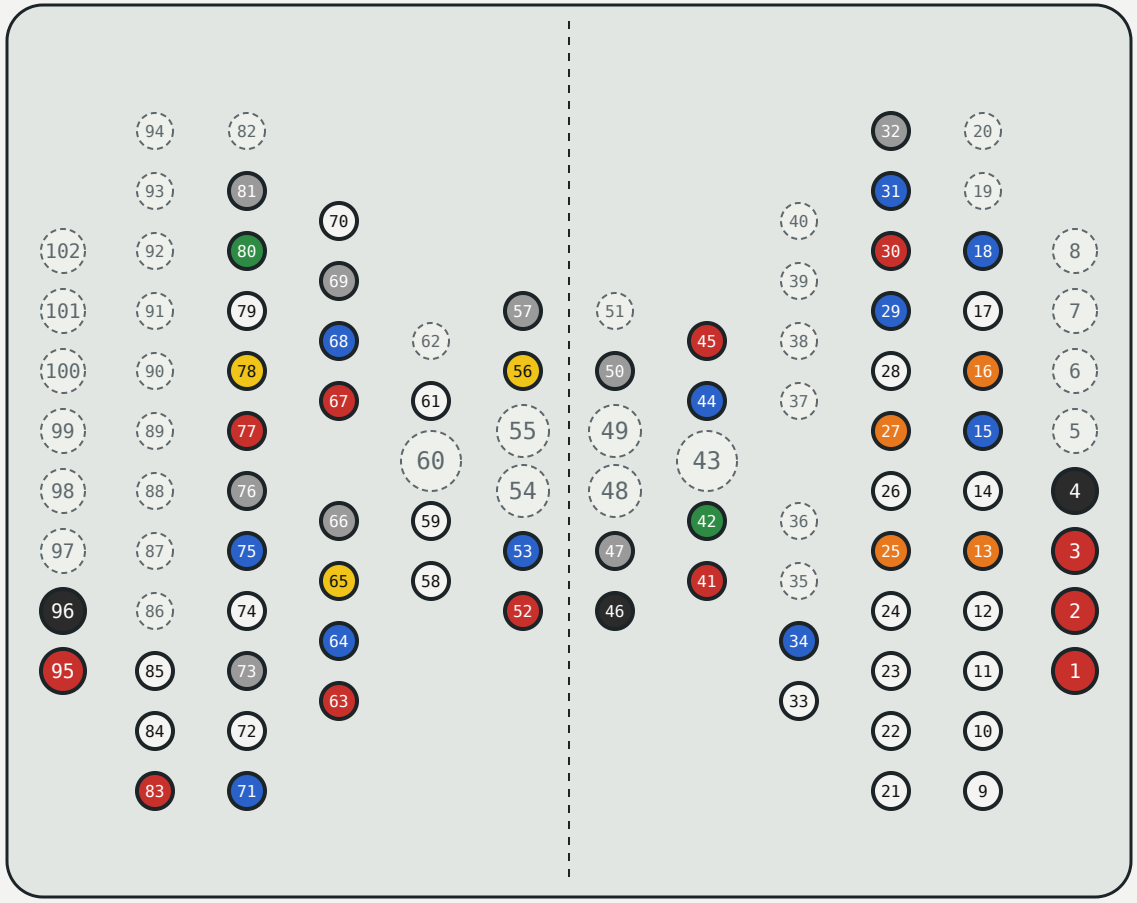


TE drawing view, numbers moulded on the insert

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | w_cop_pwr_e_ae | EFI relay k_efi → LOGIC COP 10 A fuse | Splice to: Coil 1 · pin 1; Coil 2 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1 | 0462-210-1231 |
| 2 | 14 Red | w_inj_pwr_e_ae | EFI relay k_efi → LOGIC INJ 7.5 A fuse | Splice to: Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1 | 0462-210-1231 |
| 3 | 12 Red | w_strl_e | Starter solenoid S | Starter solenoid S (50) terminal, 1-way plug · pin 1 | 0462-210-1231 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 4 | 14 Black | w_cop_gnd_e_ae | Coil ground to the POWER box NEG bar | Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4 | 0462-210-1231 |
| *5* | *spare* | | | | |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |
| 9 | 20 White | w120_e | Coil 1 trigger (IGT) | Coil 1 · pin 3 | 0462-201-1631 |
| 10 | 20 White | w121_e | Coil 2 trigger (IGT) | Coil 2 · pin 3 | 0462-201-1631 |
| 11 | 20 White | w122_e | Coil 3 trigger (IGT) | Coil 3 · pin 3 | 0462-201-1631 |
| 12 | 20 White | w123_e | Coil 4 trigger (IGT) | Coil 4 · pin 3 | 0462-201-1631 |
| 13 | 20 Orange | w_5v_brail_e_c46 | +5 V fuel pressure | Fuel Pressure Sensor · pin 2 | 0462-201-1631 |
| 14 | 20 White | w32_e | Fuel pressure signal | Fuel Pressure Sensor · pin 3 | 0462-201-1631 |
| 15 | 20 Blue | w_gnd_b_e_c21 | Gnd fuel press + VSS | Splice to: Fuel Pressure Sensor · pin 1; Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 2 | 0462-201-1631 |
| 16 | 20 Orange | w206 | +5 V MAP sensor | MAP Sensor · pin 2 | 0462-201-1631 |
| 17 | 20 White | w26_e | MAP sensor signal | MAP Sensor · pin 3 | 0462-201-1631 |
| 18 | 20 Blue | w_gnd_a_e_c44 | Gnd flex + MAP | Splice to: Flex Fuel Sensor · pin B; MAP Sensor · pin 1 | 0462-201-1631 |
| *19* | *spare* | | | | |
| *20* | *spare* | | | | |
| 21 | 20 White | w108_e | Injector 1 drive (-) | Injector 1 · pin 2 | 0462-201-1631 |
| 22 | 20 White | w109_e | Injector 2 drive (-) | Injector 2 · pin 2 | 0462-201-1631 |
| 23 | 20 White | w110_e | Injector 3 drive (-) | Injector 3 · pin 2 | 0462-201-1631 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 24 | 20 White | w111_e | Injector 4 drive (-) | Injector 4 · pin 2 | 0462-201-1631 |
| 25 | 20 Orange | w_5v_brail_e_c47 | +5 V coolant press | Coolant Pressure Sensor · pin B | 0462-201-1631 |
| 26 | 20 White | w35_e | Coolant press signal | Coolant Pressure Sensor · pin C | 0462-201-1631 |
| 27 | 20 Orange | w_5v_brail_e_c45 | +5 V oil pressure | Oil Pressure Sensor · pin 2 | 0462-201-1631 |
| 28 | 20 White | w29_e | Oil pressure signal | Oil Pressure Sensor · pin 3 | 0462-201-1631 |
| 29 | 20 Blue | w_gnd_b_e_c19 | Gnd oil/clnt/temps | Splice to: Coolant Pressure Sensor · pin A; Oil Pressure Sensor · pin 1; Charge-Pipe IAT Sensor · pin 2; Oil Temp Sensor · pin 2 | 0462-201-1631 |
| 30 | 18 Red | w_rail_sp_sw12_e | EFI relay k_efi → LOGIC SW12 5 A fuse | Splice to: Boost Control Solenoid · pin 1; Flex Fuel Sensor · pin A | 0462-201-1631 |
| 31 | 20 Blue | w48_e | Flex fuel signal | Flex Fuel Sensor · pin C | 0462-201-1631 |
| 32 | Shield | cab_flex_sh | Flex fuel shield | Shield, not connected at the device end | 0462-201-1631 |
| 33 | 20 White | w202_e | Intake temp signal | IAT Sensor (Manifold) · pin 1 | 0462-201-1631 |
| 34 | 20 Blue | w_rail_sp_gndout_e | Gnd IAT/TPS/coolant | Splice to: ECT Sensor · pin 2; Bosch 74.5mm ETB · pin 2; IAT Sensor (Manifold) · pin 2 | 0462-201-1631 |
| *35* | *spare* | | | | |
| *36* | *spare* | | | | |
| *37* | *spare* | | | | |
| *38* | *spare* | | | | |
| *39* | *spare* | | | | |
| *40* | *spare* | | | | |
| 41 | 20 Red | w126 | +5 V throttle sensor | Bosch 74.5mm ETB · pin 3 | 0462-201-1631 |
| 42 | 20 Green | w128_e | Throttle pos 1 main | Bosch 74.5mm ETB · pin 6 | 0462-201-1631 |
| *43* | *spare* | | | | |
| 44 | 20 Blue | w129_e | Throttle pos 2 sub | Bosch 74.5mm ETB · pin 5 | 0462-201-1631 |
| 45 | 18 Red | w124_e_ae | ETB motor + | Bosch 74.5mm ETB · pin 4 | 0462-201-1631 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 46 | 18 Black | w215_e_ae | ETB motor - | Bosch 74.5mm ETB · pin 1 | 0462-201-1631 |
| 47 | Shield | cab_etbs_sh | Throttle shield | Shield, not connected at the device end | 0462-201-1631 |
| *48* | *spare* | | | | |
| *49* | *spare* | | | | |
| 50 | Shield | cab_etbm_ae_sh | ETB motor shield | Shield, not connected at the device end | 0462-201-1631 |
| *51* | *spare* | | | | |
| 52 | 20 Red | w218 | +5 V turbo speed | Turbo Speed Sensor · pin A | 0462-201-1631 |
| 53 | 20 Blue | w16_e | Turbo speed signal | Turbo Speed Sensor · pin B | 0462-201-1631 |
| *54* | *spare* | | | | |
| *55* | *spare* | | | | |
| 56 | 20 Yellow | w17 | Gnd turbo speed | Turbo Speed Sensor · pin C | 0462-201-1631 |
| 57 | Shield | cab_turbo_sh | Turbo speed shield | Shield, not connected at the device end | 0462-201-1631 |
| 58 | 20 White | w103_e | Boost solenoid (-) | Boost Control Solenoid · pin 2 | 0462-201-1631 |
| 59 | 20 White | w204_e | Charge temp signal | Charge-Pipe IAT Sensor · pin 1 | 0462-201-1631 |
| *60* | *spare* | | | | |
| 61 | 20 White | w203_e | Oil temp signal | Oil Temp Sensor · pin 1 | 0462-201-1631 |
| *62* | *spare* | | | | |
| 63 | 20 Red | w_rail_sp_8v_e | +8 V to cam sensor | Cam Hall Sensor (RacerX) · pin 1 | 0462-201-1631 |
| 64 | 20 Blue | cab_cam_c2 | Cam sensor signal | Cam Hall Sensor (RacerX) · pin 2 | 0462-201-1631 |
| 65 | 20 Yellow | w24 | Gnd cam sensor | Cam Hall Sensor (RacerX) · pin 3 | 0462-201-1631 |
| 66 | Shield | cab_cam_sh | Cam sensor shield | Shield, not connected at the device end | 0462-201-1631 |
| 67 | 20 Red | w_vss_12v | EFI relay k_efi → LOGIC SW12 5 A fuse | Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 1 | 0462-201-1631 |
| 68 | 20 Blue | w_vss_sig_e | Gearbox speed signal | Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 3 | 0462-201-1631 |
| 69 | Shield | cab_vss_sh | Gearbox speed shield | Shield, not connected at the device end | 0462-201-1631 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 70 | 20 White | w201_e | Coolant temp signal | ECT Sensor · pin 1 | 0462-201-1631 |
| 71 | 20 Blue | cab_knock1_c1 | Knock sensor signal | Knock Sensor 1 · pin 1 | 0462-201-1631 |
| 72 | 20 White | cab_knock1_c2 | Knock sensor (-) | Knock Sensor 1 · pin 2 | 0462-201-1631 |
| 73 | Shield | cab_knock1_sh | Knock sensor shield | Shield, not connected at the device end | 0462-201-1631 |
| 74 | 20 White | cab_crank_c1 | Crank sensor signal | Crank VR Sensor (36-2) · pin 1 | 0462-201-1631 |
| 75 | 20 Blue | w2 | Gnd crank sensor | Crank VR Sensor (36-2) · pin 2 | 0462-201-1631 |
| 76 | Shield | cab_crank_sh | Crank sensor shield | Shield, not connected at the device end | 0462-201-1631 |
| 77 | 16 Red | w_rev_feed_e | Back-up sw +12 V in | Back-up SW B1 · pin 2 | 0462-201-1631 |
| 78 | 16 Yellow | w_sw7_e | Reverse sw +12 V out | Back-up SW B1 · pin 1 | 0462-201-1631 |
| 79 | 20 White | wc_h_lam_be | CAN H to CAN-Lambda | Splice to: 120 ohm CAN end resistor, Lambda end · pin 1; Link CAN-Lambda · pin 4 | 0462-201-1631 |
| 80 | 20 Green | wc_l_lam_be | CAN L to CAN-Lambda | Splice to: 120 ohm CAN end resistor, Lambda end · pin 2; Link CAN-Lambda · pin 3 | 0462-201-1631 |
| 81 | Shield | cab_lamcan_be_sh | CAN-Lambda shield | Shield, not connected at the device end | 0462-201-1631 |
| *82* | *spare* | | | | |
| 83 | 20 Red | w_hv_mrs_en_e | EFI relay k_efi → LOGIC MRS 5 A fuse | MR-S EHPS pump plug C · pin 1 | 0462-201-1631 |
| 84 | 20 White | w_mrs_e | EHPS pump speed | MR-S EHPS pump plug B · pin 2 | 0462-201-1631 |
| 85 | 18 White | w_eps_rly_e | EHPS relay coil (-) | MR-S EHPS pump plug B · pin 5 | 0462-201-1631 |
| *86* | *spare* | | | | |
| *87* | *spare* | | | | |
| *88* | *spare* | | | | |
| *89* | *spare* | | | | |
| *90* | *spare* | | | | |
| *91* | *spare* | | | | |
| *92* | *spare* | | | | |
| *93* | *spare* | | | | |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *94* | *spare* | | | | |
| 95 | 12 Red | `w_lam12_be14` | EFI relay k_efi → LOGIC LAM 7.5 A fuse | Splice to: Link CAN-Lambda · pin 1 | `0462-210-1231` |
| 96 | 12 Black | `w_lamg_be14` | CAN-Lambda ground | Splice to: Link CAN-Lambda · pin 2 | `0462-210-1231` |
| *97* | *spare* | | | | |
| *98* | *spare* | | | | |
| *99* | *spare* | | | | |
| *100* | *spare* | | | | |
| *101* | *spare* | | | | |
| *102* | *spare* | | | | |

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-engine

# Crank VR Sensor (36-2) CRANK · 90980-10947

FACE SOURCED

Crank VR Sensor (36-2)




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | cab_crank_c1 | Crank sensor signal | DRB102 bulkhead, engine side · pin 74 | in kit CONN-75800 |
| 2 | 20 Blue | w2 | Gnd crank sensor | DRB102 bulkhead, engine side · pin 75 | in kit CONN-75800 |

Pin numbers: TBD · harness AB-engine

# Cam Hall Sensor (RacerX) CAM · DT06-3S-CE05 + W3S

FACE SOURCED

Cam Hall Sensor (RacerX)




latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w_rail_sp_8v_e | +8 V to cam sensor | DRB102 bulkhead, engine side · pin 63 | 0462-201-16141 |
| 2 | 20 Blue | cab_cam_c2 | Cam sensor signal | DRB102 bulkhead, engine side · pin 64 | 0462-201-16141 |
| 3 | 20 Yellow | w24 | Gnd cam sensor | DRB102 bulkhead, engine side · pin 65 | 0462-201-16141 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

# Turbo Speed Sensor

TURBO-SPD · DT06-3S-CE05 + W3S

FACE SOURCED

Turbo Speed Sensor

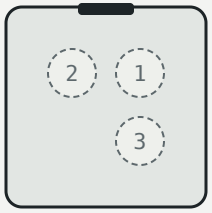


latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| A | 20 Red | w218 | +5 V turbo speed | DRB102 bulkhead, engine side · pin 52 | 0462-201-16141 |
| B | 20 Blue | w16_e | Turbo speed signal | DRB102 bulkhead, engine side · pin 53 | 0462-201-16141 |
| C | 20 Yellow | w17 | Gnd turbo speed | DRB102 bulkhead, engine side · pin 56 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

# Flex Fuel Sensor FLEX · 13519047

FACE NOT SOURCED

Flex Fuel Sensor

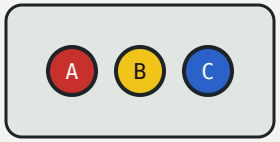


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| A | 20 Red | w217 | EFI relay k_efi → LOGIC SW12 5 A fuse | Splice to: DRB102 bulkhead, engine side · pin 30; Boost Control Solenoid · pin 1 | 15326426 |
| B | 20 Yellow | w47 | Gnd flex fuel | Splice to: DRB102 bulkhead, engine side · pin 18; MAP Sensor · pin 1 | 15326426 |
| C | 20 Blue | w48_e | Flex fuel signal | DRB102 bulkhead, engine side · pin 31 | 15326426 |


Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Flex fuel pin table) · harness AB-engine

# Bosch 74.5mm ETB

ETB · D 261 205 358-01

FACE SOURCED

Bosch 74.5mm ETB

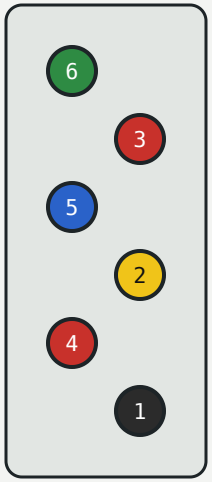


wire side (where the contacts go in) view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Black | w215_e_ae | ETB motor - | DRB102 bulkhead, engine side · pin 46 | 5-965906-1 |
| 2 | 20 Yellow | w127 | Gnd throttle sensor | Splice to: DRB102 bulkhead, engine side · pin 34; ECT Sensor · pin 2; IAT Sensor (Manifold) · pin 2 | in kit D 261 205 358-01 |
| 3 | 20 Red | w126 | +5 V throttle sensor | DRB102 bulkhead, engine side · pin 41 | in kit D 261 205 358-01 |
| 4 | 18 Red | w124_e_ae | ETB motor + | DRB102 bulkhead, engine side · pin 45 | 5-965906-1 |
| 5 | 20 Blue | w129_e | Throttle pos 2 sub | DRB102 bulkhead, engine side · pin 44 | in kit D 261 205 358-01 |
| 6 | 20 Green | w128_e | Throttle pos 1 main | DRB102 bulkhead, engine side · pin 42 | in kit D 261 205 358-01 |

Pin numbers: Bosch Motorsport ETB data sheet 51048715 (pins 1A-6F) · harness AB-engine

# MAP Sensor MAP · 354404

FACE NOT SOURCED

MAP Sensor

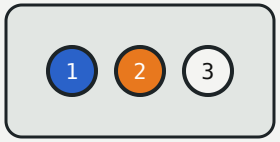


layout not sourced: numbered list only, match the moulded numbers


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | w27 | Gnd MAP sensor | Splice to: DRB102 bulkhead, engine side · pin 18; Flex Fuel Sensor · pin B | in kit 354404 |
| 2 | 20 Orange | w206 | +5 V MAP sensor | DRB102 bulkhead, engine side · pin 16 | in kit 354404 |
| 3 | 20 White | w26_e | MAP sensor signal | DRB102 bulkhead, engine side · pin 17 | in kit 354404 |

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (MAP pin table) · harness AB-engine

# Injector 1 INJ-1 · CONN-76270

FACE NOT SOURCED

Injector 1

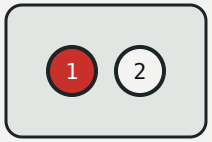


layout not sourced: numbered list only, match the moulded numbers


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | w211 | EFI relay k_efi → LOGIC INJ 7.5 A fuse | Splice to: DRB102 bulkhead, engine side · pin 2; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1 | in kit CONN-76270 |
| 2 | 20 White | w108_e | Injector 1 drive (-) | DRB102 bulkhead, engine side · pin 21 | in kit CONN-76270 |

Pin numbers: TBD · harness AB-engine

# Injector 2 INJ-2 · CONN-76270

FACE NOT SOURCED

Injector 2

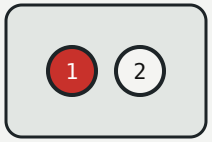


layout not sourced: numbered list only, match the moulded numbers


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | w212 | EFI relay k_efi → LOGIC INJ 7.5 A fuse | Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1 | in kit CONN-76270 |
| 2 | 20 White | w109_e | Injector 2 drive (-) | DRB102 bulkhead, engine side · pin 22 | in kit CONN-76270 |

Pin numbers: TBD · harness AB-engine

# Injector 3 INJ-3 · CONN-76270

FACE NOT SOURCED

Injector 3

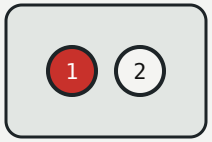


layout not sourced: numbered list only, match the moulded numbers


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | w213 | EFI relay k_efi → LOGIC INJ 7.5 A fuse | Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 4 · pin 1 | in kit CONN-76270 |
| 2 | 20 White | w110_e | Injector 3 drive (-) | DRB102 bulkhead, engine side · pin 23 | in kit CONN-76270 |

Pin numbers: TBD · harness AB-engine

# Injector 4 INJ-4 · CONN-76270

FACE NOT SOURCED

Injector 4

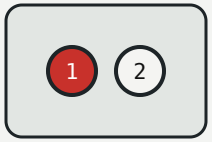


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | w214 | EFI relay k_efi → LOGIC INJ 7.5 A fuse | Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1 | in kit CONN-76270 |
| 2 | 20 White | w111_e | Injector 4 drive (-) | DRB102 bulkhead, engine side · pin 24 | in kit CONN-76270 |

Pin numbers: TBD · harness AB-engine

# Coil 1 COIL-1 · 90980-11885

FACE SOURCED

COP 1 (1ZZ)




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | w112 | EFI relay k_efi → LOGIC COP 10 A fuse | Splice to: DRB102 bulkhead, engine side · pin 1; Coil 2 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | w120_e | Coil 1 trigger (IGT) | DRB102 bulkhead, engine side · pin 9 | TBD |
| 4 | 16 Black | w_cop1g | Coil 1 ground | Splice to: Coil 2 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Coil 2 COIL-2 · 90980-11885

FACE SOURCED

COP 2 (1ZZ)




latch top

mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | w113 | EFI relay k_efi → LOGIC COP 10 A fuse | Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | w121_e | Coil 2 trigger (IGT) | DRB102 bulkhead, engine side · pin 10 | TBD |
| 4 | 16 Black | w_cop2g | Coil 2 ground | Splice to: Coil 1 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Coil 3 COIL-3 · 90980-11885

FACE SOURCED

COP 3 (1ZZ)




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | w114 | EFI relay k_efi → LOGIC COP 10 A fuse | Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 2 · pin 1; Coil 4 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | w122_e | Coil 3 trigger (IGT) | DRB102 bulkhead, engine side · pin 11 | TBD |
| 4 | 16 Black | w_cop3g | Coil 3 ground | Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Coil 4 COIL-4 · 90980-11885

FACE SOURCED

COP 4 (1ZZ)




mating face view


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | w115 | EFI relay k_efi → LOGIC COP 10 A fuse | Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 2 · pin 1; Coil 3 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | w123_e | Coil 4 trigger (IGT) | DRB102 bulkhead, engine side · pin 12 | TBD |
| 4 | 16 Black | w_cop4g | Coil 4 ground | Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 3 · pin 4; DRB102 bulkhead, engine side · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Boost Control Solenoid BOOST-SOL · 12052641

FACE NOT SOURCED

Boost Control Solenoid

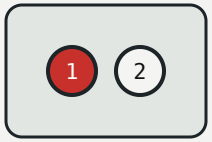


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w219 | EFI relay k_efi → LOGIC SW12 5 A fuse | Splice to: DRB102 bulkhead, engine side · pin 30; Flex Fuel Sensor · pin A | 12084200 |
| 2 | 20 White | w103_e | Boost solenoid (-) | DRB102 bulkhead, engine side · pin 58 | 12084200 |

Pin numbers: TBD · harness AB-engine

# ECT Sensor

ECT · 90980-11062

FACE SOURCED

ECT Sensor




latch top

mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w201_e | Coolant temp signal | DRB102 bulkhead, engine side · pin 70 | 8100-0461 |
| 2 | 20 Blue | w4 | Gnd coolant temp | Splice to: DRB102 bulkhead, engine side · pin 34; Bosch 74.5mm ETB · pin 2; IAT Sensor (Manifold) · pin 2 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# IAT Sensor (Manifold) IAT · 90980-11062

FACE SOURCED

IAT Sensor (Manifold)




latch top

mating face view


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w202_e | Intake temp signal | DRB102 bulkhead, engine side · pin 33 | 8100-0461 |
| 2 | 20 Blue | w6 | Gnd intake temp | Splice to: DRB102 bulkhead, engine side · pin 34; ECT Sensor · pin 2; Bosch 74.5mm ETB · pin 2 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Oil Pressure Sensor OIL-P · 354404

FACE NOT SOURCED

Oil Pressure Sensor

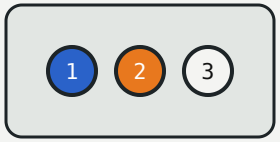


layout not sourced: numbered list only, match the moulded numbers


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | w30 | Gnd oil pressure | Splice to: DRB102 bulkhead, engine side · pin 29; Coolant Pressure Sensor · pin A; Charge-Pipe IAT Sensor · pin 2; Oil Temp Sensor · pin 2 | in kit 354404 |
| 2 | 20 Orange | w_5v_brail_e_c45 | +5 V oil pressure | DRB102 bulkhead, engine side · pin 27 | in kit 354404 |
| 3 | 20 White | w29_e | Oil pressure signal | DRB102 bulkhead, engine side · pin 28 | in kit 354404 |

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Oil pressure pin table) · harness AB-engine

# Fuel Pressure Sensor FUEL-P · 354404

FACE NOT SOURCED

Fuel Pressure Sensor

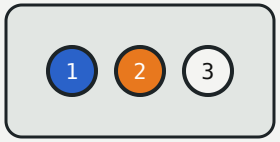


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | w33 | Gnd fuel pressure | Splice to: DRB102 bulkhead, engine side · pin 15; Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 2 | in kit 354404 |
| 2 | 20 Orange | w_5v_brail_e_c46 | +5 V fuel pressure | DRB102 bulkhead, engine side · pin 13 | in kit 354404 |
| 3 | 20 White | w32_e | Fuel pressure signal | DRB102 bulkhead, engine side · pin 14 | in kit 354404 |


Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Fuel pressure pin table) · harness AB-engine

# Coolant Pressure Sensor

`CLNT-P · pigtail supplied with the sensor (owned)`

FACE NOT SOURCED

Coolant Pressure Sensor

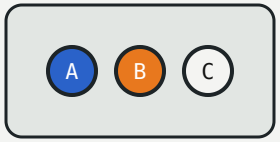


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| A | 20 Blue | w36 | Gnd coolant press | Splice to: DRB102 bulkhead, engine side · pin 29; Oil Pressure Sensor · pin 1; Charge-Pipe IAT Sensor · pin 2; Oil Temp Sensor · pin 2 | solder splice onto the pigtail black lead |
| B | 20 Orange | w_5v_brail_e_c47 | +5 V coolant press | DRB102 bulkhead, engine side · pin 25 | solder splice onto the pigtail red lead |
| C | 20 White | w35_e | Coolant press signal | DRB102 bulkhead, engine side · pin 26 | solder splice onto the pigtail green lead |

Pin numbers: Dan's sensor sheet + seller connection guide (Dan 2026-10-30): A / plug 1 GND black, B / plug 2 supply red, C / plug 3 output green · harness AB-engine

# Starter solenoid S (50) terminal, 1-way plug

STARTER-TRIGGER · 90980-11400

FACE SOURCED

Starter solenoid S (50) terminal, 1-way plug




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 12 Red | w_strl_e | Starter solenoid S | DRB102 bulkhead, engine side · pin 3 | in kit CONN-76058 (Sumitomo TS187 4.8 mm sealed female, 12-10 AWG) |

Pin numbers: single cavity (Toyota RM1022E housing list: 90980-11400 is 1-way, 4.8 mm tab, sealed) · harness AB-engine

# Back-up SW B1 REV-SW · 90980-11250

FACE SOURCED

Back-up SW B1




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Yellow | w_sw7_e | Reverse sw +12 V out | DRB102 bulkhead, engine side · pin 78 | 8100-0461 |
| 2 | 16 Red | w_rev_feed_e | Back-up sw +12 V in | DRB102 bulkhead, engine side · pin 77 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Oil Temp Sensor OIL-T · 90980-11062

FACE SOURCED

Oil Temp Sensor




latch top

mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w203_e | Oil temp signal | DRB102 bulkhead, engine side · pin 61 | 8100-0461 |
| 2 | 20 Blue | w8 | Gnd oil temp | Splice to: Charge-Pipe IAT Sensor · pin 2; DRB102 bulkhead, engine side · pin 29; Coolant Pressure Sensor · pin A; Oil Pressure Sensor · pin 1 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Charge-Pipe IAT Sensor

CHARGE-IAT · 90980-11062

FACE SOURCED

Charge-Pipe IAT Sensor




latch top

mating face view


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | w204_e | Charge temp signal | DRB102 bulkhead, engine side · pin 59 | 8100-0461 |
| 2 | ■ 20 Blue | w10 | Gnd charge temp | Splice to: Oil Temp Sensor · pin 2; DRB102 bulkhead, engine side · pin 29; Coolant Pressure Sensor · pin A; Oil Pressure Sensor · pin 1 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Knock Sensor 1 KNOCK-1 · 1 928 403 874

FACE NOT SOURCED

Knock Sensor 1

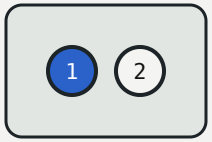


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | cab_knock1_c1 | Knock sensor signal | DRB102 bulkhead, engine side · pin 71 | BDK 2.8 |
| 2 | 20 White | cab_knock1_c2 | Knock sensor (-) | DRB102 bulkhead, engine side · pin 72 | BDK 2.8 |

Pin numbers: TBD · harness AB-engine

# Gearbox VSS (Toyota 83181-20040, 3-wire) VSS · 90980-11143

FACE SOURCED

Gearbox VSS (Toyota 83181-20040, 3-wire) - actual road speed, plug 90980-11143




latch top

mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w_vss_12v | EFI relay k_efi → LOGIC SW12 5 A fuse | DRB102 bulkhead, engine side · pin 67 | 8100-0461 |
| 2 | 20 Yellow | w_vss_gnd | Gnd gearbox speed | Splice to: DRB102 bulkhead, engine side · pin 15; Fuel Pressure Sensor · pin 1 | 8100-0461 |
| 3 | 20 Blue | w_vss_sig_e | Gearbox speed signal | DRB102 bulkhead, engine side · pin 68 | 8100-0461 |


Pin numbers: Toyota 3-wire speed sensor pinout (wilbo666 wiki; Daniel 2026-09-28) · harness AB-engine

# Link CAN-Lambda

CAN-LAMBDA · DTM06-4S + WM-4S

FACE SOURCED

Link CAN-Lambda

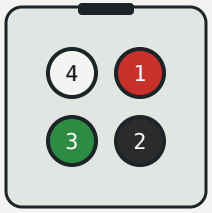


latch top

wire side (where the contacts go in) view


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | w_lam12_be | EFI relay k_efi → LOGIC LAM 7.5 A fuse | Splice to: DRB102 bulkhead, engine side · pin 95 | 0462-005-2031 |
| 2 | 16 Black | w_lamg_be | CAN-Lambda ground | Splice to: DRB102 bulkhead, engine side · pin 96 | 0462-005-2031 |
| 3 | 20 Green | wc_l_lam_pin | CAN L to CAN-Lambda | Splice to: DRB102 bulkhead, engine side · pin 80; 120 ohm CAN end resistor, Lambda end · pin 2 | 0462-201-2031 |
| 4 | 20 White | wc_h_lam_pin | CAN H to CAN-Lambda | Splice to: DRB102 bulkhead, engine side · pin 79; 120 ohm CAN end resistor, Lambda end · pin 1 | 0462-201-2031 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

# MR-S EHPS pump plug C `MRS-C · 90980-10942`

FACE SOURCED

MR-S EHPS pump plug C

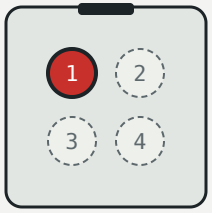


mating face view


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `w_hv_mrs_en_e` | EFI relay k_efi → LOGIC MRS 5 A fuse | DRB102 bulkhead, engine side · pin 83 | `82998-12440` |
| *2* | *spare* | | | | |
| *3* | *spare* | | | | |
| *4* | *spare* | | | | |

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine, EngineRoom-C

## MR-S EHPS pump plug B MRS-B · 90980-10897

FACE SOURCED

MR-S EHPS pump plug B

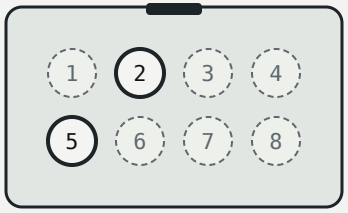


mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *1* | *spare* | | | | |
| 2 | ☐ 20 White | w_mrs_e | EHPS pump speed | DRB102 bulkhead, engine side · pin 84 | 82998-12440 |
| *3* | *spare* | | | | |
| *4* | *spare* | | | | |
| 5 | ☐ 18 White | w_eps_rly_e | EHPS relay coil (-) | DRB102 bulkhead, engine side · pin 85 | 82998-12440 |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |


Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine, EngineRoom-C

# CabinPower

# LOGIC fuse box relay M4 (ETB power) K-ETB · 4-1904124-2

FACE SOURCED

B2-M4 ETB Power Relay (seated in the LOGIC box M4) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) switched 12 V

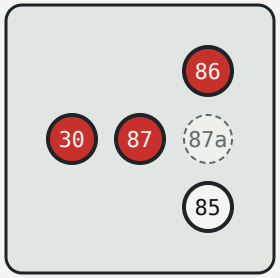


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 16 Red | w_fb_k_etb_30_cp | AMI BUS1 50 A fuse → LOGIC ETB 7.5 A fuse | LOGIC fuse box · fuse BUS1-10 (ETB 7.5 A) | 42281-1 |
| 85 | 20 White | w81 | ETB relay coil (-) | Link G4X plug A · pin 20 | 280919-2 |
| 86 | 20 Red | w_k_etb_86_cp | EFI relay k_efi → LOGIC SW12 5 A fuse | Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 5 | 280919-2 |
| 87 | 18 Red | w82_ac | ETB motor +12 V | Link G4X plug B · pin 5 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

# POWER fuse box relay R2 (EFI main) K-EFI · 1-1414147-0

FACE SOURCED

B1-R2 EFI Main Relay (seated in the POWER box R2) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) permanent 12 V (LOGIC EFI86 5 A)

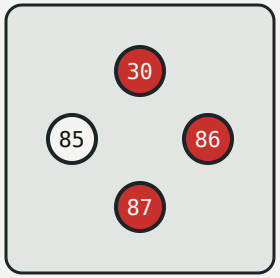


bottom (terminal side) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | w77_cp | EFI relay k_efi (LOGIC Bus 2 feed) | LOGIC fuse box · Bus 2 feed | 280756-4 |
| 85 | 18 White | w76 | EFI relay coil (-) | Link G4X plug A · pin 28 | 42281-1 |
| 86 | 18 Red | w_k_efi_86_cp | AMI BUS1 50 A fuse → LOGIC EFI86 5 A fuse | LOGIC fuse box · fuse BUS1-1 (EFI86 5 A) | 42281-1 |
| 87 | 12 Red | w_fb_k_efi_87_cp | AMI EFI 30 A fuse | POWER fuse box · fuse AMI IN-2 (EFI 30 A) | 280756-4 |


Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

# POWER fuse box

POWER · ST185-FB-POWER rev 7

FACE NOT SOURCED

B1 POWER box with the bus bar in it - custom fuse + relay box, glove box outboard (cad/fusebox rev 7, DECISIONS R75, R91): the tinned copper + bar IS the AMI bar (7 AMI IN relay feeds, 7 AMI OUT; no 1/0 link cable), NEG bar in the rear bus zone, Mini ISO relays R1-R6, ACPS mini fuse

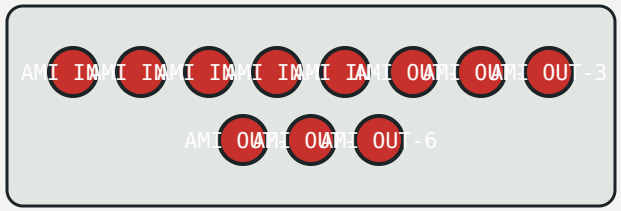

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| AMI IN-1 | 8 Red | w_rb4_feed | AMI HTR 40 A fuse | OEM R/B No.4 40 A HEATER fuse pin 1 (RH kick) | 2R5 |
| AMI IN-2 | 12 Red | w_fb_k_efi_87_cp | AMI EFI 30 A fuse | POWER fuse box relay R2 (EFI main) · terminal 87 | 36161 |
| AMI IN-4 | 10 Red | w_fb_k_fan_87_cp | AMI FAN 30 A fuse | POWER fuse box relay R4 (radiator fan) · terminal 87 | 36161 |
| AMI IN-5 | 10 Red | w_fb_k_fan2_87_ac | AMI FAN2 30 A fuse | POWER fuse box relay R5 (condenser fan) · terminal 87 | 36161 |
| AMI IN-6 | 10 Red | w_rb2_feed | AMI PWR 30 A fuse | OEM R/B No.2 30 A POWER fuse pin 1 (LH kick) | 2R5 |
| AMI OUT-1 | 8 Red | w_hc_fb | AMI BUS1 50 A fuse | LOGIC fuse box · Bus 1 feed | 2R5 |
| AMI OUT-2 | 10 Red | w_pmu_rtr | AMI RTR 30 A fuse | OEM IE1 pin 3 (left kick, cowl side) | 2R5 |
| AMI OUT-3 | 8 Red | w_pdb_am1 | AMI AM1 40 A fuse | OEM IE1 pin 10 (left kick, cowl side) | 2R5 |
| AMI OUT-4 | 10 Red | w_pdb_am2 | AMI AM2 30 A fuse | OEM IE1 pin 17 (left kick, cowl side) | 2R5 |
| AMI OUT-5 | 6 Red | w_pdb_jb1 | AMI JB1 60 A fuse | OEM J/B No.1 1I pin 1 (left kick) | 3R5 |
| AMI OUT-6 | 8 Red | w_fb_k_eps_30_ac | AMI EPS 50 A fuse | EPS pump relay (beside the POWER fuse box) · terminal 30 | 2R5 |


Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness CabinPower, EngineRoom-C

# MR-S EHPS pump plug A

`MRS-A · 90980-12068`

FACE SOURCED

MR-S EHPS pump plug A

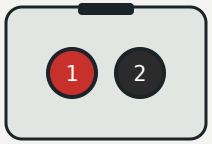


latch top

mating face view


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 8 Red | `w_eps_pwr_bc` | AMI EPS 50 A fuse → EHPS relay k_eps | EPS pump relay (beside the POWER fuse box) · terminal 87 | `82998-12500` |
| 2 | 8 Black | `w_eps_gnd` | EHPS pump ground | Engine block ground stud, lug 3 (Route 1 point 5) | `82998-12500` |

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness CabinPower, EngineRoom-C

# LOGIC fuse box relay M1 (headlight LH) K-HL · 5-1393292-8

FACE SOURCED

B2-M1 Headlight LH relay (seated in the LOGIC box M1)

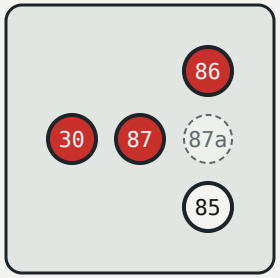


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 14 Red | w_hl_30_cp | AMI BUS1 50 A fuse → LOGIC HL 15 A fuse | Splice to: LOGIC fuse box · fuse BUS1-2 (HL 15 A); LOGIC fuse box relay M1 (headlight LH) · terminal 86 | 42281-1 |
| 85 | 18 White | w_hl_85_cp | Head LH coil (-) | Splice to: LOGIC fuse box relay M2 (headlight RH) · terminal 85; OEM cowl plug IE1 pin 2 (LH kick), R-Y wire | 280919-2 |
| 86 | 16 Red | w_hl_86_cp | AMI BUS1 50 A fuse → LOGIC HL 15 A fuse | Splice to: LOGIC fuse box · fuse BUS1-2 (HL 15 A); LOGIC fuse box relay M1 (headlight LH) · terminal 30 | 280919-2 |
| 87 | 14 Red | w_pmu_hl | LOGIC HL 15 A fuse → HEAD LH relay k_hl | LH headlamp H1 pin 3 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

# LOGIC fuse box relay M3 (horn) K-HORN · 4-1904124-3

FACE SOURCED

B2-M3 Horn relay (seated in the LOGIC box M3)

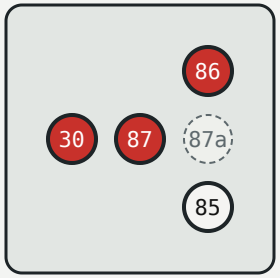


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 14 Red | w_horn_30_cp | AMI BUS1 50 A fuse → LOGIC HZ 15 A fuse | Splice to: LOGIC fuse box · fuse BUS1-4 (HZ 15 A); OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 86 | 42281-1 |
| 85 | 18 White | w_horn_85_cp | Horn relay coil (-) | OEM cowl plug IE1 pin 19 (LH kick), G wire | 280919-2 |
| 86 | 16 Red | w_horn_86_cp | AMI BUS1 50 A fuse → LOGIC HZ 15 A fuse | Splice to: LOGIC fuse box · fuse BUS1-4 (HZ 15 A); OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 30 | 280919-2 |
| 87 | 14 Red | w_pmu_horn_cp | LOGIC HZ 15 A fuse → horn relay k_horn | Splice to: Horn LH (EWD H3) · pin 1; Horn RH (EWD H4) · pin 1 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

## LOGIC fuse box relay M2 (headlight RH) K-HR · 5-1393292-8

FACE SOURCED

B2-M2 Headlight RH relay (seated in the LOGIC box M2)

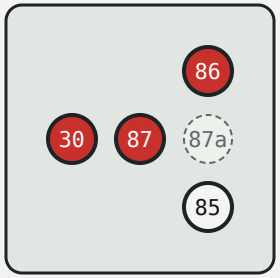


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 14 Red | w_hr_30_cp | AMI BUS1 50 A fuse → LOGIC HR 15 A fuse | Splice to: LOGIC fuse box · fuse BUS1-3 (HR 15 A); LOGIC fuse box relay M2 (headlight RH) · terminal 86 | 42281-1 |
| 85 | 18 White | w_hr_85_cp | Head RH coil (-) | Splice to: LOGIC fuse box relay M1 (headlight LH) · terminal 85; OEM cowl plug IE1 pin 2 (LH kick), R-Y wire | 280919-2 |
| 86 | 16 Red | w_hr_86_cp | AMI BUS1 50 A fuse → LOGIC HR 15 A fuse | Splice to: LOGIC fuse box · fuse BUS1-3 (HR 15 A); LOGIC fuse box relay M2 (headlight RH) · terminal 30 | 280919-2 |
| 87 | 14 Red | w_pmu_hr | LOGIC HR 15 A fuse → HEAD RH relay k_hr | RH headlamp H2 pin 3 | 42281-1 |
| *87a* | *spare* | | | | |


Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

# EngineRoom-C

# Alternator G2 ALT-PLUG · 90980-10341

FACE SOURCED

Alternator G2 - round 3-pin plug (Toyota 90980-10341; 1993 EWD p.74-75 G2 (B) pinout)

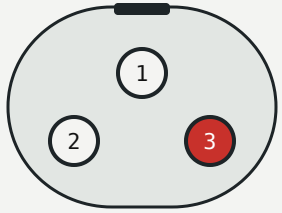


mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w_alt_s_c | Alt S battery sense | LOGIC fuse box · fuse BUS1-9 | TBD |
| 2 | 20 White | w_alt_l_c | Alt L charge lamp | OEM IG2 pin 16 (under the ECU, cowl side) | TBD |
| 3 | 16 Red | w_ig_ks_out | Alt IG excite | Kill switch · pin ALT2 | TBD |

Pin numbers: TBD · harness EngineRoom-C, HeavyDC

# Uprated condenser fan (GND) FAN-COND-GND · DTHD06-1-8S

FACE SOURCED

Uprated condenser fan (GND)




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Black | w_fan2_gnd | Cond fan ground | Ground stud EA, RH front fender (EWD ground point EA) | 0462-203-08141 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# Horn LH (EWD H3)

HORN-LH · DT06-2S-CE05 + W2S

FACE SOURCED

Horn LH (EWD H3) - custom DT 2-way

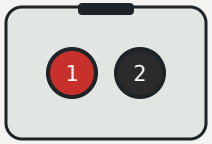


latch top

wire side (where the contacts go in) view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | w_horn_lh | LOGIC HZ 15 A fuse → horn relay k_horn | Splice to: LOGIC fuse box relay M3 (horn) · terminal 87; Horn RH (EWD H4) · pin 1 | 0462-209-1631 |
| 2 | 14 Black | w_horn_lh_g | Horn LH ground | Ground stud EA, RH front fender (EWD ground point EA) | 0462-209-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# Horn RH (EWD H4) HORN-RH · DT06-2S-CE05 + W2S

FACE SOURCED

Horn RH (EWD H4) - custom DT 2-way

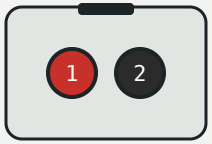


latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | w_horn_rh | LOGIC HZ 15 A fuse → horn relay k_horn | Splice to: LOGIC fuse box relay M3 (horn) · terminal 87; Horn LH (EWD H3) · pin 1 | 0462-209-1631 |
| 2 | 14 Black | w_horn_rh_g | Horn RH ground | Ground stud EA, RH front fender (EWD ground point EA) | 0462-209-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# Uprated radiator fan (+) FAN-RAD · DTHD06-1-8S

FACE SOURCED

Uprated radiator fan (+)




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Red | w_fan_pwr | AMI FAN 30 A fuse → rad fan relay k_fan | POWER fuse box relay R4 (radiator fan) · terminal 30 | 0462-203-08141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# Uprated condenser fan (+) FAN-COND · DTHD06-1-8S

FACE SOURCED

Uprated condenser fan (+)




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Red | w_fan2_pwr | Cond fan +12 V | POWER fuse box relay R5 (condenser fan) · terminal 30 | 0462-203-08141 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# POWER fuse box

POWER-STUDS · ST185-FB-POWER rev 7 BUS ZONE

FACE NOT SOURCED

POWER box bus zone (rev 7, glove box)

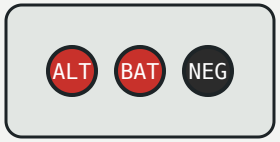


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| ALT | 1/0 Red | w_h3_radlok_pos | Starter feed (H3) | RADLOK + firewall · pin 1 | TBD |
| BAT | 1/0 Red | w_ks_h1 | battery + | Kill switch · pin MAIN2 | TBD |
| NEG | 1/0 Black | w_gnd_id | POWER box gnd to ID | Ground stud ID, left kick panel (EWD ground point ID) | TBD |
| NEG | 1/0 Black | w_gnd_ig | POWER box gnd to IG | Ground bolt IG, right kick (EWD ground point IG) | TBD |
| NEG | 1/0 Black | w_h6a_radlok_neg | Engine ground (H6a) | RADLOK · pin 1 | TBD |
| NEG | 1/0 Black | w_trunk_neg | Battery - main | Battery negative terminal post, trunk RH rear (Route 1 point 1) | TBD |

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness EngineRoom-C, HeavyDC

## Uprated radiator fan (GND) FAN-RAD-GND · DTHD06-1-8S

FACE SOURCED

Uprated radiator fan (GND)




mating face view

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Black | w_fan_gnd | Rad fan ground | Ground stud EA, RH front fender (EWD ground point EA) | 0462-203-08141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C


## HeavyDC

# Trunk relay box

BATT-RELAY-BLOCK · ST185-FB-BATT rev 5

FACE NOT SOURCED

Battery relay block - fuel pump relay + its fuse, trunk, passenger side between the rear wall and the battery (cad/fusebox rev 5, DECISIONS R75, Z4)

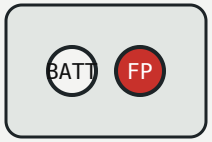


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| BATT | 10 White | w_fp_feed | Battery relay box + | Kill switch · pin MAIN2 | TBD |
| FP | 10 Red | w_fp_30 | FP 40 A fuse (battery relay block) | Trunk relay box relay K1 (fuel pump) · terminal 30 | 36161 |

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness HeavyDC

# Kill switch KILL-SW · 52-45780

FACE NOT SOURCED

Kill switch - Longacre 52-45780, 4 terminal (trunk, passenger rear corner, Route 1)




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| ALT1 | 16 Red | w_ig_ks_in | Alt IG to kill sw | OEM IG2 pin 15 (under the ECU, cowl side) | TBD |
| ALT2 | 16 Red | w_ig_ks_out | Alt IG excite | Alternator G2 · pin 3 | TBD |
| MAIN1 | 1/0 Red | w_trunk_pos | battery + | Battery positive terminal post, trunk RH rear (Route 1 point 1) | TBD |
| MAIN2 | 10 White | w_fp_feed | Battery relay box + | Trunk relay box · battery + stud | TBD |
| MAIN2 | 1/0 Red | w_ks_h1 | battery + | POWER fuse box · BAT stud | TBD |

Pin numbers: TBD · harness HeavyDC

# RADLOK + firewall

RADLOK-POS-CAB · RL00801-50RE

FACE NOT SOURCED

RADLOK + firewall




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Red | w_h3_radlok_pos | Starter feed (H3) | POWER fuse box · ALT stud | INTEGRAL |
| 1 | 1/0 Red | w_rl_pos | Starter feed (H3) | RADLOK + engine · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

# RADLOK RADLOK-NEG-CAB · RL00801-50BK

FACE NOT SOURCED

RADLOK - firewall




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Black | w_h6a_radlok_neg | Engine ground (H6a) | POWER fuse box · NEG stud | INTEGRAL |
| 1 | 1/0 Black | w_rln | Engine ground (H6a) | RADLOK · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

# RADLOK RADLOK-NEG-ENG · RL00801-50BK

FACE NOT SOURCED

RADLOK - engine




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Black | w_rln_blk | Engine ground (H6a) | Engine block ground stud, lug 1 (Route 1 point 5) | INTEGRAL |
| 1 | 1/0 Black | w_rln | Engine ground (H6a) | RADLOK · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

# RADLOK + engine

RADLOK-POS-ENG · RL00801-50RE

FACE NOT SOURCED

RADLOK + engine




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Red | w_rlp_str | Starter feed (H3) | Starter B+ stud, lug 1 (Route 1 point 2) | INTEGRAL |
| 1 | 1/0 Red | w_rl_pos | Starter feed (H3) | RADLOK + firewall · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

## Engine-bay jump post JUMP-POST · TBD

FACE NOT SOURCED

Engine-bay jump post




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 2 Red | w_jump | Jump post feed | Starter B+ stud, lug 3 (Route 1 point 2) | TBD |


Pin numbers: TBD · harness HeavyDC

# RearFuel

# Fuel Pump FUEL-PUMP · TBD

FACE NOT SOURCED

Fuel Pump

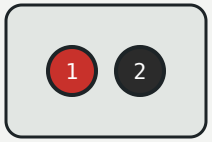


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Red | w_fpump_r | Fuel pump +12 V | Trunk relay box relay K1 (fuel pump) · terminal 87 | TBD |
| 2 | 10 Black | w_fpg | Fuel pump ground | Ground stud, trunk LH side (EWD ID TBD, M6 assumed) | TBD |

Pin numbers: TBD · harness RearFuel

# Fuel sender inline plug, sender side, trunk (IX-FUEL)

IX-FUEL-S · DT06-2S + W2S

FACE SOURCED

IX-FUEL inline to fuel sender (trunk LH)




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w_fl_sig_r | Fuel level signal | Fuel Level Sender · pin 1 | 0462-201-16141 |
| 2 | 20 Blue | w45_r | Fuel level ground | Fuel Level Sender · pin 2 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

## Fuel Level Sender `FUEL-LEVEL · DT04-2P + W2P`

FACE SOURCED

Fuel Level Sender - DT 2-way (Dan rev 2, 2026-10-10 - no OEM connector)




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | w_fl_sig_r | Fuel level signal | Fuel sender inline plug, sender side, trunk (IX-FUEL) · pin 1 | 0460-202-1631 |
| 2 | 20 Blue | w45_r | Fuel level ground | Fuel sender inline plug, sender side, trunk (IX-FUEL) · pin 2 | 0460-202-1631 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

## CSB3

# ECUMaster CSB3 CSB3 · HD36-24-33SE

FACE SOURCED

ECUMaster CSB3 - Power/CAN/Switch I/O

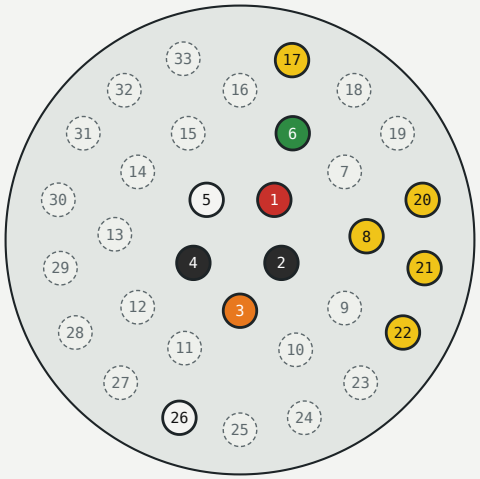


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w_csb12 | EFI relay k_efi → LOGIC CSB 5 A fuse | LOGIC fuse box · fuse BUS2-5 (CSB 5 A) | 0462-201-2031 |
| 2 | 20 Black | w_csbg | CSB3 ground | Splice to: POWER box NEG bar M8 stud (glove box); OEM cruise stalk switch C14 pin 17, BR wire; Optocoupler board, 8 channel (Dan's, generic EL814) · pin COM1 | 0462-201-2031 |
| 3 | 20 Orange | w_opto_vcc | Opto +5 V | Optocoupler board, 8 channel (Dan's, generic EL814) · pin VCC | 0462-201-2031 |
| 4 | 20 Black | w_opto_outc | Opto out ground | Optocoupler board, 8 channel (Dan's, generic EL814) · pin NEG | 0462-201-2031 |
| 5 | 20 White | wc_h_csb | CAN H to CSB3 | Splice to: DRB102 bulkhead, cabin side · pin 79; ECU Comms/Tuning Port · pin 3; 120 ohm CAN end resistor, ECU end · pin 1; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash) | 0462-201-2031 |
| 6 | 20 Green | wc_l_csb | CAN L to CSB3 | Splice to: DRB102 bulkhead, cabin side · pin 80; ECU Comms/Tuning Port · pin 4; 120 ohm CAN end resistor, ECU end · pin 2; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash) | 0462-201-2031 |
| *7* | *spare* | | | | |
| 8 | 20 Yellow | w_cru_ladder_out | Cruise ladder | Splice to: OEM cruise stalk switch C14 pin 5, W wire; Cruise resistor on the CSB3 · pin 2 | 0462-201-2031 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *9* | *spare* | | | | |
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |
| *13* | *spare* | | | | |
| *14* | *spare* | | | | |
| *15* | *spare* | | | | |
| *16* | *spare* | | | | |
| 17 | 20 Yellow | `w_sw2` | Cruise MAIN on | OEM cruise stalk switch C14 pin 15, Y-B wire | `0462-201-2031` |
| *18* | *spare* | | | | |
| *19* | *spare* | | | | |
| 20 | 20 Yellow | `w_sw5` | Clutch pedal sw | OEM cruise control clutch switch C17 pin 2, B wire | `0462-201-2031` |
| 21 | 20 Yellow | `w_opto_out1` | Brake to CSB3 S7 | Optocoupler board, 8 channel (Dan's, generic EL814) · pin OUT1 | `0462-201-2031` |
| 22 | 20 Yellow | `w_opto_out2` | Reverse to CSB3 S8 | Optocoupler board, 8 channel (Dan's, generic EL814) · pin OUT2 | `0462-201-2031` |
| *23* | *spare* | | | | |
| *24* | *spare* | | | | |
| *25* | *spare* | | | | |
| 26 | 20 White | `w_oil_k` | Oil LED sink (CSB3) | Oil pressure LED · pin 2 | `0462-201-2031` |
| *27* | *spare* | | | | |
| *28* | *spare* | | | | |
| *29* | *spare* | | | | |
| *30* | *spare* | | | | |
| *31* | *spare* | | | | |
| *32* | *spare* | | | | |
| *33* | *spare* | | | | |

Pin numbers: TBD · harness CSB3, ClusterLED, CAN


# AntiTheft

# Alarm module

ALARM · DT06-12SA + W12S

FACE SOURCED

Alarm module - main harness (DT06-12SA)

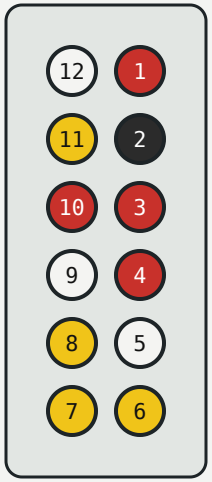


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w_at_12v | AMI BUS1 50 A fuse → LOGIC ALM 5 A fuse | Splice to: LOGIC fuse box · fuse BUS1-7 (ALM 5 A) | 0462-201-1631 |
| 2 | 20 Black | w_at_gnd_a1 | Alarm ground | Cabin ground stud near the alarm (spot and EWD ID TBD, M6) | 0462-201-1631 |
| 3 | 20 Red | w_at_ig | EFI relay k_efi → LOGIC ALMIG 2 A fuse | Splice to: LOGIC fuse box · fuse BUS2-9 (ALMIG 2 A) | 0462-201-1631 |
| 4 | 20 Red | w_at_siren | Siren + | Siren (engine bay, center firewall behind the engine) · pin 1 | 0462-201-1631 |
| 5 | 20 White | w_at_park | Park lamp flash | Splice to: Park lamp flash relay lead (cabin relay, part and spot TBD) | 0462-201-1631 |
| 6 | 20 Yellow | w_at_door | Door trigger | Splice to: OEM door courtesy switch line (R-W) at J/B No.1 connector 1B pin 11 (left kick panel); 0 V with any door open | 0462-201-1631 |
| 7 | 20 Yellow | w_at_hood | Hood trigger | Splice to: Hood pin switch lead (new switch, RH front via loom C, spot TBD) | 0462-201-1631 |
| 8 | 20 Yellow | w_at_trunk | Trunk trigger | Splice to: Trunk pin switch lead (new switch, spot TBD) | 0462-201-1631 |
| 9 | 20 White | w_at_immob2 | Anti-theft input | Link G4X plug B · pin 27 | 0462-201-1631 |

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 10 | 20 Red | w_at_led | Status LED + | Status LED (dash) · pin 1 | 0462-201-1631 |
| 11 | 20 Yellow | w_at_valet | Valet switch | Valet / program switch (hidden) · pin 1 | 0462-201-1631 |
| 12 | 20 White | w_at_shk_sig | Shock trigger | Shock / tilt sensor * · pin C | 0462-201-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

# Siren (engine bay, center firewall behind the engine)

SIREN · DT06-2S-CE05 + W2S

FACE SOURCED

Siren (engine bay, center firewall behind the engine) - leads cross via harness C's own RH fender grommet, decided 2026-10-10, not the FR wheel-speed grommet




latch top

wire side (where the contacts go in) view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w_at_siren | Siren + | Alarm module · pin 4 | 0462-201-1631 |
| 2 | 20 Black | w_at_gnd_a2 | Siren ground | Cabin ground stud near the alarm (spot and EWD ID TBD, M6) | 0462-201-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

# Status LED (dash) STATUS-LED · DT06-2S + W2S

FACE SOURCED

Status LED (dash)

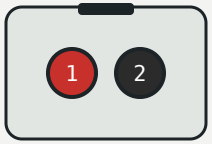


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | w_at_led | Status LED + | Alarm module · pin 10 | 0462-201-1631 |
| 2 | 20 Black | w_at_gnd_b2 | Status LED gnd | Cabin ground stud near the alarm (spot and EWD ID TBD, M6) | 0462-201-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

# Valet / program switch (hidden)

VALET-SW · DT06-2S + W2S

FACE SOURCED

Valet / program switch (hidden)




latch top

wire side (where the contacts go in) view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Yellow | w_at_valet | Valet switch | Alarm module · pin 11 | 0462-201-1631 |
| 2 | 20 Black | w_at_gnd_c1 | Valet switch ground | Cabin ground stud near the alarm (spot and EWD ID TBD, M6) | 0462-201-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

## Shock / tilt sensor * SHOCK-SENSOR · DT06-3S + W3S

FACE SOURCED

Shock / tilt sensor *

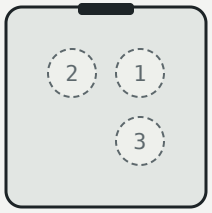


latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| A | 20 Red | w_at_12v_shk | AMI BUS1 50 A fuse → LOGIC ALMS 2 A fuse | Splice to: LOGIC fuse box · fuse BUS1-8 (ALMS 2 A) | 0462-201-1631 |
| B | 20 Black | w_at_gnd_b1 | Shock sensor ground | Cabin ground stud near the alarm (spot and EWD ID TBD, M6) | 0462-201-1631 |
| C | 20 White | w_at_shk_sig | Shock trigger | Alarm module · pin 12 | 0462-201-1631 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

## CAN

## ECU Comms/Tuning Port `ECU-C · DTM06-6S + WM-6S`

FACE NOT SOURCED

ECU Comms/Tuning Port

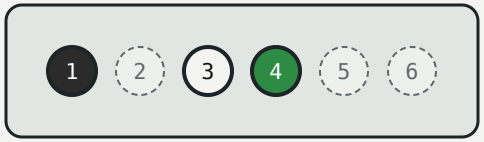


layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Black | `w_shd_can_trunk` | CAN screen trunk | Splice to: Shield, not connected at the device end; DRB102 bulkhead, cabin side · pin 81 | `0462-201-2031` |
| *2* | *spare* | | | | |
| 3 | 20 White | `wc_h_ecu` | CAN 1 high | Splice to: DRB102 bulkhead, cabin side · pin 79; 120 ohm CAN end resistor, ECU end · pin 1; ECUMaster CSB3 · pin 5; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash) | `0462-201-2031` |
| 4 | 20 Green | `wc_l_ecu` | CAN 1 low | Splice to: DRB102 bulkhead, cabin side · pin 80; 120 ohm CAN end resistor, ECU end · pin 2; ECUMaster CSB3 · pin 6; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash) | `0462-201-2031` |
| *5* | *spare* | | | | |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness CAN


## WheelSpeed-Rear

# VRC rear OUT plug

`VRC-R-OUT · LP-16-J05PE-02-001`

FACE SOURCED

VRC rear OUT plug

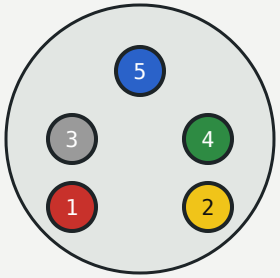


mating face view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `cab_rout_5v` | VRC-R +5V | Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 1 | `solder cup (LP-16, S16)` |
| 2 | 20 Yellow | `cab_rout_gnd` | VRC-R GND | Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 2 | `solder cup (LP-16, S16)` |
| 3 | Shield | `cab_rout_sh` | WS-R screen drain | Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 5 | `solder cup (LP-16, S16)` |
| 4 | 20 Green | `cab_rout_l` | Rear left wheel spd | Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 3 | `solder cup (LP-16, S16)` |
| 5 | 20 Blue | `cab_rout_r` | Rear right wheel spd | Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 4 | `solder cup (LP-16, S16)` |


Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

# Rear wheel-speed inline plug, sensor side (IX-WS-R)

IX-WS-R-P · DT04-6P + W6P

FACE SOURCED

IX-WS-R

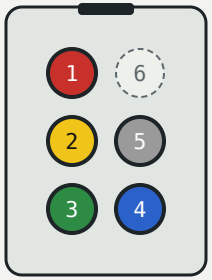


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | cab_rout_5v | VRC-R +5V | VRC rear OUT plug · pin 1 | 0460-202-1631 |
| 2 | 20 Yellow | cab_rout_gnd | VRC-R GND | VRC rear OUT plug · pin 2 | 0460-202-1631 |
| 3 | 20 Green | cab_rout_l | Rear left wheel spd | VRC rear OUT plug · pin 4 | 0460-202-1631 |
| 4 | 20 Blue | cab_rout_r | Rear right wheel spd | VRC rear OUT plug · pin 5 | 0460-202-1631 |
| 5 | Shield | cab_rout_sh | WS-R screen drain | VRC rear OUT plug · pin 3 | 0460-202-1631 |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

# ABS Wheel Speed RL

`WSS-RL · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed RL




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | cab_rl_p | RL wheel speed + | VRC rear IN plug · pin 1 | 0462-201-16141 |
| 2 | 20 White | cab_rl_n | RL wheel speed - | VRC rear IN plug · pin 2 | 0462-201-16141 |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

# VRC rear IN plug

VRC-R-IN · LP-16-J05PE-02-001

FACE SOURCED

VRC rear IN plug

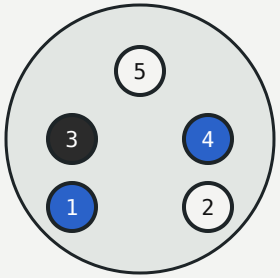


mating face view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | cab_rl_p | RL wheel speed + | ABS Wheel Speed RL · pin 1 | solder cup (LP-16, S16) |
| 2 | 20 White | cab_rl_n | RL wheel speed - | ABS Wheel Speed RL · pin 2 | solder cup (LP-16, S16) |
| 3 | 20 Black | w_ws_r_shield | Rear sensor shields | Splice to: Shield, not connected at the device end | solder cup (LP-16, S16) |
| 4 | 20 Blue | cab_rr_p | RR wheel speed + | ABS Wheel Speed RR · pin 1 | solder cup (LP-16, S16) |
| 5 | 20 White | cab_rr_n | RR wheel speed - | ABS Wheel Speed RR · pin 2 | solder cup (LP-16, S16) |

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

## ABS Wheel Speed RR `WSS-RR · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed RR




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | cab_rr_p | RR wheel speed + | VRC rear IN plug · pin 4 | 0462-201-16141 |
| 2 | 20 White | cab_rr_n | RR wheel speed - | VRC rear IN plug · pin 5 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear


# WheelSpeed-Front

# VRC front OUT plug

VRC-F-OUT · LP-16-J05PE-02-001

FACE SOURCED

VRC front OUT plug

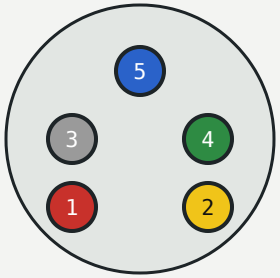


mating face view · source


| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | cab_fout_5v | VRC-F +5V | Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 1 | solder cup (LP-16, S16) |
| 2 | 20 Yellow | cab_fout_gnd | VRC-F GND | Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 2 | solder cup (LP-16, S16) |
| 3 | Shield | cab_fout_sh | WS-F screen drain | Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 5 | solder cup (LP-16, S16) |
| 4 | 20 Green | cab_fout_l | FL conditioned out | Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 3 | solder cup (LP-16, S16) |
| 5 | 20 Blue | cab_fout_r | FR conditioned out | Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 4 | solder cup (LP-16, S16) |

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

# Front wheel-speed inline plug, sensor side (IX-WS-F) IX-WS-F-P · DT04-6P + W6P

FACE SOURCED

IX-WS-F

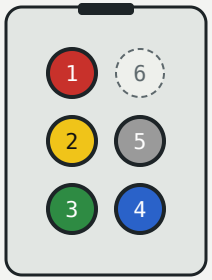


wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | cab_fout_5v | VRC-F +5V | VRC front OUT plug · pin 1 | 0460-202-1631 |
| 2 | 20 Yellow | cab_fout_gnd | VRC-F GND | VRC front OUT plug · pin 2 | 0460-202-1631 |
| 3 | 20 Green | cab_fout_l | FL conditioned out | VRC front OUT plug · pin 4 | 0460-202-1631 |
| 4 | 20 Blue | cab_fout_r | FR conditioned out | VRC front OUT plug · pin 5 | 0460-202-1631 |
| 5 | Shield | cab_fout_sh | WS-F screen drain | VRC front OUT plug · pin 3 | 0460-202-1631 |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

# ABS Wheel Speed FL

`WSS-FL · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed FL




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | `cab_fl_p` | FL wheel speed + | VRC front IN plug · pin 1 | `0462-201-16141` |
| 2 | 20 White | `cab_fl_n` | FL wheel speed - | VRC front IN plug · pin 2 | `0462-201-16141` |


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

# VRC front IN plug

`VRC-F-IN · LP-16-J05PE-02-001`

FACE SOURCED

VRC front IN plug

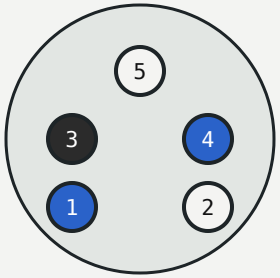


mating face view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | `cab_fl_p` | FL wheel speed + | ABS Wheel Speed FL · pin 1 | `solder cup (LP-16, S16)` |
| 2 | 20 White | `cab_fl_n` | FL wheel speed - | ABS Wheel Speed FL · pin 2 | `solder cup (LP-16, S16)` |
| 3 | 20 Black | `w_ws_f_shield` | Front sensor shields | Splice to: Shield, not connected at the device end | `solder cup (LP-16, S16)` |
| 4 | 20 Blue | `cab_fr_p` | FR wheel speed + | ABS Wheel Speed FR · pin 1 | `solder cup (LP-16, S16)` |
| 5 | 20 White | `cab_fr_n` | FR wheel speed - | ABS Wheel Speed FR · pin 2 | `solder cup (LP-16, S16)` |

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

# ABS Wheel Speed FR

`WSS-FR · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed FR




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE ID | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | `cab_fr_p` | FR wheel speed + | VRC front IN plug · pin 4 | `0462-201-16141` |
| 2 | 20 White | `cab_fr_n` | FR wheel speed - | VRC front IN plug · pin 5 | `0462-201-16141` |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front