ST185 Pin Chart

94 connectors · 67 faces sourced · 27 still a numbered list

Red +12 V · Black ground · White signal · Blue sensor return · Orange sensor supply · Yellow switch signal · Green CAN · Grey shield drain

Dashed = spare cavity Cavity colour is the wire's insulation colour. From MASTER-wirelist.csv.

Bussed plug = a Deutsch DT plug whose bussed cap ties every pin together: a splice you can unplug. Each sits where its name says.

Devices by harness

Each plug belongs to one harness (Dan 2026-11-01). Fuse boxes, relays, buses, studs and factory taps are hubs: several harnesses land on them.


HARNESS	DEVICES AND PLUGS
AB-cabin	+5 V sensor supply bus plug 1; A/C amplifier A15 (behind the glove box); A/C lock sensor resistor 4.7 k; Accelerator pedal sensor; Ambient air temp sensor A1 (front, 6 in pigtail); Auto A/C amplifier A32; Cam signal pull-up resistor 1.8 k to +8 V; ECU plug A; ECU plug C (CAN / comms); ECU wake diode (ignition feed); Firewall bulkhead connector (cabin side); Fuel level pull-up resistor 470 ohm to +5 V; Inline connector for front wheel speed (cabin side); Inline connector for fuel level sender (cabin side); Inline connector for rear wheel speed (cabin side); POWER box NEG bar, GND stud, ring 1 of 3; POWER box NEG bar, GND stud, ring 3 of 3; Sensor ground bus plug, ECU plug A; Sensor ground bus plug, ECU plug B
AB-engine	Boost control solenoid; CAN bus end terminator plug (120 ohm); CAN-Lambda wideband controller; Cam sensor; Charge pipe air temp sensor; Coolant pressure sensor; Coolant temp sensor; Crank sensor; Electronic throttle body; Firewall bulkhead connector (engine side); Flex fuel sensor; Fuel pressure sensor; Gearbox speed sensor; Ignition coil 1; Ignition coil 2; Ignition coil 3; Ignition coil 4; Injector 1; Injector 2; Injector 3; Injector 4; Intake air temp sensor (manifold); Knock sensor; MAP sensor; Oil pressure sensor; Oil temp sensor; Power steering pump plug B; Power steering pump plug C; Reverse light switch; Starter solenoid trigger plug; Turbo speed sensor
CabinPower	DRL relay (K-DRL, LOGIC fuse box seat M8); DRL switch; Dash high-beam LED feed resistor 220 ohm; High-beam relay (K-HR, LOGIC fuse box seat M2); LOGIC box Bus 1, feed stud; LOGIC box Bus 2, feed stud; Low-beam relay (K-HL, LOGIC fuse box seat M1); POWER box AMI IN-1 fuse, output stud; POWER box AMI IN-2 fuse, output stud; POWER box AMI IN-4 fuse, output stud; POWER box AMI IN-5 fuse, output stud; POWER box AMI OUT-1 fuse, output stud; POWER box AMI OUT-2 fuse, output stud; POWER box AMI OUT-3 fuse, output stud; POWER box AMI OUT-4 fuse, output stud; POWER box AMI OUT-5 fuse, output stud; POWER box AMI OUT-6 fuse, output stud; POWER box NEG bar, GND stud, ring 2 of 3; Pop-up diode 1 (stalk side); Pop-up diode 2 (DRL switch side); Pop-up key-on relay (K-POD, LOGIC fuse box seat M10); Pop-up relay R8 (behind the LH dash); R-Y lead from cowl splice I2, cut near pop-up relay R8 (I2 side, behind the LH dash)
EngineRoom-C	A/C compressor A4; Alternator plug; Condenser fan ground plug; Condenser fan plug (+); Engine block ground stud, strap lug; Factory Y-R lead (A5 pin 4), cabin side; Front wiper motor F9 (cowl, driver side); Ground stud EA, RH front fender; Ground stud EB, LH front fender; Ground stud EB, block strap lug; LH front turn / clearance lamp F7; LH headlamp H1; LH horn; LH pop-up motor R2; LH side marker lamp F5; Power steering pump plug A; RH front turn / clearance lamp F8; RH headlamp H2; RH horn; RH pop-up motor R3; RH side marker lamp F6; Radiator fan ground plug; Radiator fan plug (+); Washer motor W1 (RH front corner, low)
HeavyDC	Alternator B+ stud; Battery; Battery + post (trunk); Engine block ground stud, main lug; Firewall battery; Firewall battery; Firewall battery + connector (cabin side); Firewall battery + connector (engine side); Ground bolt IG, RH kick panel; Jump start post; POWER box + bar, BAT+ IN stud; POWER box + bar, RADLOK+ stud; POWER box NEG bar, BAT- stud; POWER box NEG bar, GND ID stud; POWER box NEG bar, GND IG stud; POWER box NEG bar, RADLOK- stud; Starter B+ stud; Trunk relay block (fuel pump relay and fuse)
RearFuel	Fuel level sender; Fuel pump; Ground point BL, back panel centre; Inline connector for fuel level sender (sender side)

HARNESS	DEVICES AND PLUGS
Dash	8-channel opto board; Centre cluster +12 V input lead; Centre cluster CAN board leads; Centre cluster ground input lead; Centre cluster headlight sense input; Charge LED; Cluster plug C13 (B); Cluster plug C14 (C); Combination switch plug C16 (B), cruise switch; Cowl plug II1 (instrument panel centre); Cruise control clutch switch C17; Cruise switch ladder resistor; Dimmer rheostat R10 (left of the steering wheel); ECUMaster CAN switch board; High beam LED; Oil pressure LED; Park brake LED; RealDash Pi +12 V input lead; RealDash Pi CAN adapter leads; RealDash Pi ground input lead; RealDash Pi inline fuse 5 A; Stop lamp switch S9 (pedal); Turn LH LED; Turn RH LED
AntiTheft	Alarm +12 V point; Alarm door trigger point; Alarm ground point; Alarm ground ring terminal (chassis point at install); Alarm hood trigger point; Alarm ignition point; Alarm immobiliser output point; Alarm siren output point; Door switch line tap (J/B No.1 1B pin 11); Hood pin lead, front end (RH front corner); Shock sensor +12 V point; Siren + lead, engine-bay end; Siren ground lead, engine-bay end
WheelSpeed-Front	FL wheel speed sensor; FR wheel speed sensor; Front VR conditioner input plug; Front VR conditioner output plug; Inline connector for front wheel speed (sensor side)
WheelSpeed-Rear	Inline connector for rear wheel speed (sensor side); RL wheel speed sensor; RR wheel speed sensor; Rear VR conditioner input plug; Rear VR conditioner output plug
Shared hubs	+5 V sensor supply bus plug 2: AB-cabin, Dash; A/C clutch relay (K-ACC, LOGIC fuse box seat M5): AB-cabin, CabinPower, EngineRoom-C; Battery kill switch (trunk): AB-cabin, EngineRoom-C, HeavyDC; Condenser fan relay (K-FAN2, POWER fuse box seat R5): AB-cabin, CabinPower, EngineRoom-C; Cowl plug IE1 (LH kick): CabinPower, EngineRoom-C; Cowl plug IG2 (under the ECU): AB-cabin, EngineRoom-C; DRL cut relay (beside the LOGIC box) (RLY-DRL): CabinPower, EngineRoom-C; ECU plug B: AB-cabin, AntiTheft; EFI main relay (K-EFI, POWER fuse box seat R2): AB-cabin, CabinPower; Fuel pump relay (K-FP, Trunk relay box seat K1): AB-cabin, HeavyDC, RearFuel; Ground stud ID, LH kick panel: Dash, HeavyDC; Horn relay (K-HORN, LOGIC fuse box seat M3): CabinPower, EngineRoom-C; Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7): AB-cabin, CabinPower; J/B No.1 (LH kick panel): AB-cabin, CabinPower, EngineRoom-C; LOGIC fuse and relay box (glove box): AB-cabin, CabinPower, Dash, EngineRoom-C; Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6): AB-cabin, CabinPower; Power steering pump relay (K-EPS, beside the POWER fuse box): AB-cabin, CabinPower, EngineRoom-C; R/B No.4 (RH kick): AB-cabin, CabinPower, EngineRoom-C; Radiator fan relay (K-FAN, POWER fuse box seat R4): AB-cabin, CabinPower, EngineRoom-C; Switched +12 V bus plug (glove box, by the LOGIC box): AB-cabin, CabinPower, RearFuel; Throttle body power relay (K-ETB, LOGIC fuse box seat M4): AB-cabin, CabinPower

AB-cabin

ECU plug A 4-1437290-1

FACE SOURCED

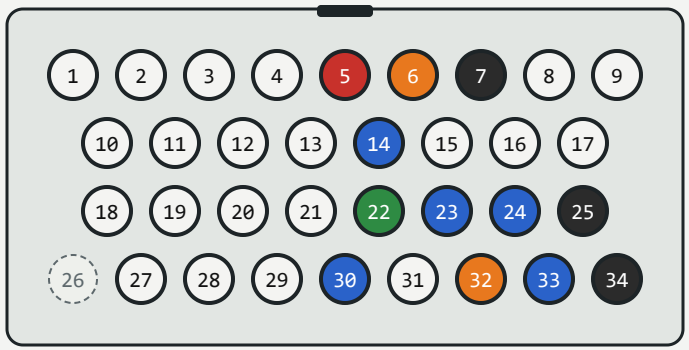

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Injector 4 drive (-)	Injector 4 drive (-)	Firewall bulkhead connector (cabin side) · pin 24	3-1447221-4
2	20 White	Injector 3 drive (-)	Injector 3 drive (-)	Firewall bulkhead connector (cabin side) · pin 23	3-1447221-4
3	20 White	Injector 2 drive (-)	Injector 2 drive (-)	Firewall bulkhead connector (cabin side) · pin 22	3-1447221-4
4	20 White	Injector 1 drive (-)	Injector 1 drive (-)	Firewall bulkhead connector (cabin side) · pin 21	3-1447221-4
5	18 Red	ECU main +12 V	Switched +12 V	Splice to: Switched +12 V bus plug (glove box, by the LOGIC box) · pin 2; Firewall bulkhead connector (cabin side) · pin 30; ECU wake diode (ignition feed) · pin 2	3-1447221-3
6	20 Orange	+8 V sensor supply	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; Firewall bulkhead connector (cabin side) · pin 63; Firewall bulkhead connector (cabin side) · pin 67	3-1447221-4
7	20 Black	Shield drains to ECU plug A pin 7	Shield drain A7	Splice to: Shield, not connected at the device end; Inline connector for front wheel speed (cabin side) · pin 5; Firewall bulkhead connector (cabin side) · pin 76; Firewall bulkhead connector (cabin side) · pin 66; Firewall bulkhead connector (cabin side) · pin 57; Firewall bulkhead connector (cabin side) · pin 47	3-1447221-4
8	20 White	Crank sensor signal	Crank sensor signal	Firewall bulkhead connector (cabin side) · pin 74	3-1447221-4
9	20 White	Cam sensor signal	Cam sensor signal	Splice to: Firewall bulkhead connector (cabin side) · pin 64; Cam signal pull-up resistor 1.8 k to +8 V · pin 2	3-1447221-4
10	20 White	Coil 4 trigger (IGT)	Coil 4 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 12	3-1447221-4


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
11	20 White	`Coil 3 trigger (IGT)`	Coil 3 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 11	3-1447221-4
12	20 White	`Coil 2 trigger (IGT)`	Coil 2 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 10	3-1447221-4
13	20 White	`Coil 1 trigger (IGT)`	Coil 1 trigger (IGT)	Firewall bulkhead connector (cabin side) · pin 9	3-1447221-4
14	20 Blue	`Pedal 1 signal main`	Pedal 1 signal main	Accelerator pedal sensor · pin 6	3-1447221-4
15	20 White	`Coolant temp signal`	Coolant temp signal	Firewall bulkhead connector (cabin side) · pin 70	3-1447221-4
16	20 White	`Intake temp signal`	Intake temp signal	Firewall bulkhead connector (cabin side) · pin 33	3-1447221-4
17	20 White	`MAP sensor signal`	MAP sensor signal	Firewall bulkhead connector (cabin side) · pin 17	3-1447221-4
18	20 White	`A/C cancel (ACT)`	A/C cancel (ACT)	A/C amplifier A15 (behind the glove box)	3-1447221-4
19	18 White	`Fuel pump relay coil (-)`	Fuel pump relay (-)	Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 85	3-1447221-3
20	20 White	`ETB relay coil (-)`	ETB relay coil (-)	Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 85	3-1447221-4
21	20 White	`Boost solenoid drive (-)`	Boost solenoid (-)	Firewall bulkhead connector (cabin side) · pin 58	3-1447221-4
22	20 Green	`Throttle pos 1 main`	Throttle pos 1 main	Firewall bulkhead connector (cabin side) · pin 42	3-1447221-4
23	20 Blue	`FL conditioned out`	FL conditioned out	Inline connector for front wheel speed (cabin side) · pin 3	3-1447221-4
24	18 Blue	`Sensor ground from ECU pin A24`	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 1	3-1447221-3
25	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 34; ECU plug B · pin 25; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	3-1447221-3
26	*spare*				
27	20 White	`Power steering pump speed`	EHPS pump speed	Firewall bulkhead connector (cabin side) · pin 84	3-1447221-4

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
28	18 White	`EFI relay coil (-)`	EFI relay coil (-)	EFI main relay (K-EFI, POWER fuse box seat R2) · terminal 85	`3-1447221-3`
29	18 White	`Radiator fan relay coil (-)`	Rad fan relay (-)	Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 85	`3-1447221-3`
30	20 Blue	`Turbo speed signal`	Turbo speed signal	Firewall bulkhead connector (cabin side) · pin 53	`3-1447221-4`
31	20 White	`Flex fuel signal`	Flex fuel signal	Firewall bulkhead connector (cabin side) · pin 31	`3-1447221-4`
32	18 Orange	`+5 V sensor supply`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 1	`3-1447221-3`
33	20 Blue	`Throttle pos 2 sub`	Throttle pos 2 sub	Firewall bulkhead connector (cabin side) · pin 44	`3-1447221-4`
34	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 25; ECU plug B · pin 25; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	`3-1447221-3`

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin

Firewall bulkhead connector (cabin side) DRB12-102PAE-L018 + DRBF-1A

FACE SOURCED

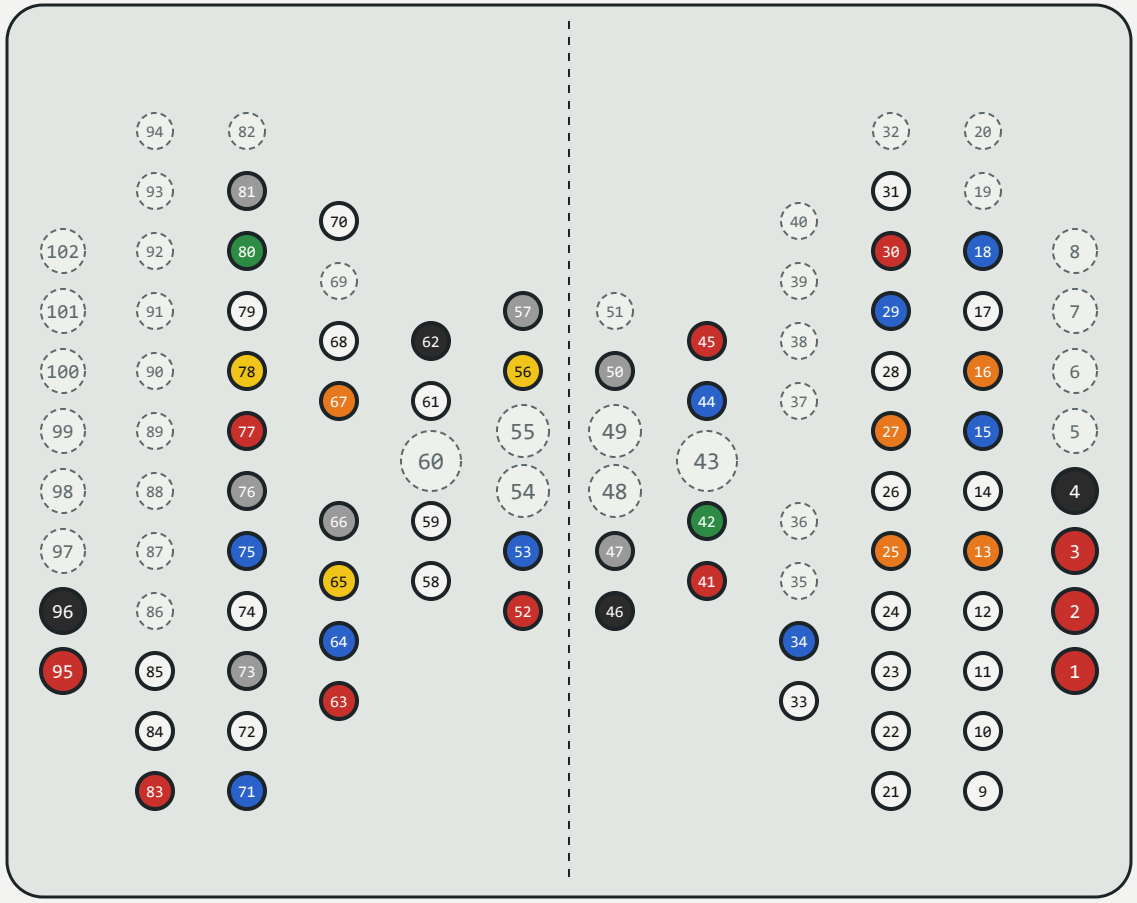

52-102 (left half) 1-51 (right half)

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Coil +12 V feed	Ignition coil +12 V	LOGIC fuse and relay box (glove box) · fuse BUS2-3	0460-220-1231
2	14 Red	Injector +12 V feed	Injector +12 V	LOGIC fuse and relay box (glove box) · fuse BUS2-4	0460-220-1231
3	12 Red	Starter solenoid S	Starter solenoid S	R/B No.4 (RH kick)	0460-220-1231

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
4	■ 14 Black	`Coil ground to the POWER box NEG bar`	Ground	Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 2; Combination switch plug C16 (B), cruise switch; 8-channel opto board · pin COM1; Centre cluster ground input lead; RealDash Pi ground input lead; A/C amplifier A15 (behind the glove box)	`0460-220-1231`
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				
9	☐ 20 White	`Coil 1 trigger (IGT)`	Coil 1 trigger (IGT)	ECU plug A · pin 13	`0460-202-1631`
10	☐ 20 White	`Coil 2 trigger (IGT)`	Coil 2 trigger (IGT)	ECU plug A · pin 12	`0460-202-1631`
11	☐ 20 White	`Coil 3 trigger (IGT)`	Coil 3 trigger (IGT)	ECU plug A · pin 11	`0460-202-1631`
12	☐ 20 White	`Coil 4 trigger (IGT)`	Coil 4 trigger (IGT)	ECU plug A · pin 10	`0460-202-1631`
13	■ 20 Orange	`+5 V fuel pressure`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 6	`0460-202-1631`
14	☐ 20 White	`Fuel pressure signal`	Fuel pressure signal	ECU plug B · pin 16	`0460-202-1631`
15	■ 20 Blue	`Sensor ground trunk (fuel pressure, gearbox speed)`	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 8	`0460-202-1631`

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
16	20 Orange	`+5 V MAP sensor`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 3	`0460-202-1631`
17	20 White	`MAP sensor signal`	MAP sensor signal	ECU plug A · pin 17	`0460-202-1631`
18	20 Blue	`MAP sensor ground`	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 6	`0460-202-1631`
19	*spare*				
20	*spare*				
21	20 White	`Injector 1 drive (-)`	Injector 1 drive (-)	ECU plug A · pin 4	`0460-202-1631`
22	20 White	`Injector 2 drive (-)`	Injector 2 drive (-)	ECU plug A · pin 3	`0460-202-1631`
23	20 White	`Injector 3 drive (-)`	Injector 3 drive (-)	ECU plug A · pin 2	`0460-202-1631`
24	20 White	`Injector 4 drive (-)`	Injector 4 drive (-)	ECU plug A · pin 1	`0460-202-1631`
25	20 Orange	`+5 V coolant pressure`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 7	`0460-202-1631`
26	20 White	`Coolant pressure signal`	Coolant pressure signal	ECU plug B · pin 23	`0460-202-1631`
27	20 Orange	`+5 V oil pressure`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 5	`0460-202-1631`
28	20 White	`Oil pressure signal`	Oil pressure signal	ECU plug B · pin 15	`0460-202-1631`
29	20 Blue	`Sensor ground trunk (oil / coolant pressure, oil / charge temp)`	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 7	`0460-202-1631`

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	18 Red	+12 V boost + flex	Switched +12 V	Splice to: Switched +12 V bus plug (glove box, by the LOGIC box) · pin 2; ECU wake diode (ignition feed) · pin 2; ECU plug A · pin 5	0460-202-1631
31	20 White	Flex fuel signal	Flex fuel signal	ECU plug A · pin 31	0460-202-1631
32	*spare*				
33	20 White	Intake temp signal	Intake temp signal	ECU plug A · pin 16	0460-202-1631
34	20 Blue	Sensor ground trunk (intake temp, throttle, coolant temp)	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 2	0460-202-1631
35	*spare*				
36	*spare*				
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				
41	20 Red	+5 V throttle sensor	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 2	0460-202-1631
42	20 Green	Throttle pos 1 main	Throttle pos 1 main	ECU plug A · pin 22	0460-202-1631
43	*spare*				
44	20 Blue	Throttle pos 2 sub	Throttle pos 2 sub	ECU plug A · pin 33	0460-202-1631
45	18 Red	ETB motor +	ETB motor +	ECU plug B · pin 18	0460-202-1631
46	18 Black	ETB motor -	ETB motor -	ECU plug B · pin 26	0460-202-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
47	Shield	`Throttle shield`	Shield drain A7	Splice to: ECU plug A · pin 7; Shield, not connected at the device end; Inline connector for front wheel speed (cabin side) · pin 5; Firewall bulkhead connector (cabin side) · pin 76; Firewall bulkhead connector (cabin side) · pin 66; Firewall bulkhead connector (cabin side) · pin 57	`0460-202-1631`
48	*spare*				
49	*spare*				
50	Shield	`ETB motor shield`	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 73; ECU plug B · pin 17; Inline connector for rear wheel speed (cabin side) · pin 5	`0460-202-1631`
51	*spare*				
52	20 Red	`+5 V turbo speed`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 4	`0460-202-1631`
53	20 Blue	`Turbo speed signal`	Turbo speed signal	ECU plug A · pin 30	`0460-202-1631`
54	*spare*				
55	*spare*				
56	20 Yellow	`Turbo speed ground`	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 5	`0460-202-1631`
57	Shield	`Turbo speed shield`	Shield drain A7	Splice to: ECU plug A · pin 7; Shield, not connected at the device end; Inline connector for front wheel speed (cabin side) · pin 5; Firewall bulkhead connector (cabin side) · pin 76; Firewall bulkhead connector (cabin side) · pin 66; Firewall bulkhead connector (cabin side) · pin 47	`0460-202-1631`
58	20 White	`Boost solenoid drive (-)`	Boost solenoid (-)	ECU plug A · pin 21	`0460-202-1631`
59	20 White	`Charge temp signal`	Charge temp signal	ECU plug B · pin 7	`0460-202-1631`
60	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
61	20 White	`Oil temp signal`	Oil temp signal	ECU plug B · pin 6	`0460-202-1631`
62	20 Black	`Flex fuel sensor return`	Ground	Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 2; Combination switch plug C16 (B), cruise switch; 8-channel opto board · pin COM1; Centre cluster ground input lead; RealDash Pi ground input lead; A/C amplifier A15 (behind the glove box)	`0460-202-1631`
63	20 Red	`+8 V to cam sensor`	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; ECU plug A · pin 6; Firewall bulkhead connector (cabin side) · pin 67	`0460-202-1631`
64	20 Blue	`Cam sensor signal`	Cam sensor signal	Splice to: ECU plug A · pin 9; Cam signal pull-up resistor 1.8 k to +8 V · pin 2	`0460-202-1631`
65	20 Yellow	`Cam sensor ground`	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 4	`0460-202-1631`
66	Shield	`Cam sensor shield`	Shield drain A7	Splice to: ECU plug A · pin 7; Shield, not connected at the device end; Inline connector for front wheel speed (cabin side) · pin 5; Firewall bulkhead connector (cabin side) · pin 76; Firewall bulkhead connector (cabin side) · pin 57; Firewall bulkhead connector (cabin side) · pin 47	`0460-202-1631`
67	20 Orange	`+8 V to gearbox speed sensor`	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; ECU plug A · pin 6; Firewall bulkhead connector (cabin side) · pin 63	`0460-202-1631`
68	20 White	`Gearbox speed signal`	Gearbox speed signal	ECU plug B · pin 29	`0460-202-1631`
69	*spare*				
70	20 White	`Coolant temp signal`	Coolant temp signal	ECU plug A · pin 15	`0460-202-1631`

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
71	20 Blue	Knock sensor signal	Knock sensor signal	ECU plug B · pin 9	0460-202-1631
72	20 White	Knock sensor (-)	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 6	0460-202-1631
73	Shield	Knock sensor shield	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 50; ECU plug B · pin 17; Inline connector for rear wheel speed (cabin side) · pin 5	0460-202-1631
74	20 White	Crank sensor signal	Crank sensor signal	ECU plug A · pin 8	0460-202-1631
75	20 Blue	Crank sensor ground	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 3	0460-202-1631
76	Shield	Crank sensor shield	Shield drain A7	Splice to: ECU plug A · pin 7; Shield, not connected at the device end; Inline connector for front wheel speed (cabin side) · pin 5; Firewall bulkhead connector (cabin side) · pin 66; Firewall bulkhead connector (cabin side) · pin 57; Firewall bulkhead connector (cabin side) · pin 47	0460-202-1631
77	16 Red	+12 V to reverse switch	+12 V to reverse switch	Cowl plug IG2 (under the ECU)	0460-202-1631
78	16 Yellow	Switched +12 V from reverse switch	Reverse +12 V	Splice to: 8-channel opto board · pin IN2; Cowl plug IG2 (under the ECU)	0460-202-1631
79	20 White	CAN H to CAN-Lambda	CAN H	Splice to: ECU plug C (CAN / comms) · pin 3; ECUMaster CAN switch board · pin 5; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	0460-202-1631
80	20 Green	CAN L to CAN-Lambda	CAN L	Splice to: ECU plug C (CAN / comms) · pin 4; ECUMaster CAN switch board · pin 6; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	0460-202-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
81	Shield	`CAN-Lambda shield`	CAN shield drain	Splice to: ECU plug C (CAN / comms) · pin 1; Shield, not connected at the device end	`0460-202-1631`
82	*spare*				
83	18 Red	`Power steering pump enable +12 V`	EHPS enable +12 V	Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 87	`0460-202-1631`
84	20 White	`Power steering pump speed`	EHPS pump speed	ECU plug A · pin 27	`0460-202-1631`
85	18 White	`Power steering pump relay coil (-)`	EHPS relay coil (-)	Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 85	`0460-202-1631`
86	*spare*				
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				
94	*spare*				
95	14 Red	`CAN-Lambda +12 V`	CAN-Lambda +12 V	Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) · terminal 87	`0460-220-1231`
96	14 Black	`CAN-Lambda ground`	Ground	Splice to: Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 2; Combination switch plug C16 (B), cruise switch; 8-channel opto board · pin COM1; Centre cluster ground input lead; RealDash Pi ground input lead; A/C amplifier A15 (behind the glove box)	`0460-220-1231`
97	*spare*				
98	*spare*				
99	*spare*				


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
100	*spare*				
101	*spare*				
102	*spare*				

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-cabin

+5 V sensor supply bus plug 1

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

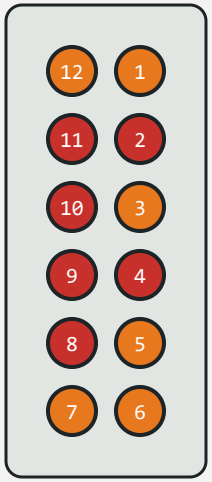


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Orange	+5 V sensor supply	+5 V sensor supply	ECU plug A · pin 32	0462-201-16141
2	20 Red	+5 V throttle sensor	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 41	0462-201-16141
3	20 Orange	+5 V MAP sensor	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 16	0462-201-16141
4	20 Red	+5 V turbo speed	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 52	0462-201-16141
5	20 Orange	+5 V oil pressure	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 27	0462-201-16141
6	20 Orange	+5 V fuel pressure	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 13	0462-201-16141
7	20 Orange	+5 V coolant pressure	+5 V sensor supply	Firewall bulkhead connector (cabin side) · pin 25	0462-201-16141
8	20 Red	+5 V pedal sensor 1	+5 V sensor supply	Accelerator pedal sensor · pin 4	0462-201-16141
9	20 Red	+5 V pedal sensor 2	+5 V sensor supply	Accelerator pedal sensor · pin 1	0462-201-16141
10	20 Red	+5 V front VRC	+5 V sensor supply	Inline connector for front wheel speed (cabin side) · pin 1	0462-201-16141
11	20 Red	+5 V rear VRC	+5 V sensor supply	Inline connector for rear wheel speed (cabin side) · pin 1	0462-201-16141
12	20 Orange	+5 V to bus plug 2	+5 V sensor supply	+5 V sensor supply bus plug 2 · pin 1	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

+5 V sensor supply bus plug 2 DT06-08SA + W8S; DT04-08PA-P021 (bussed receptacle)

FACE SOURCED

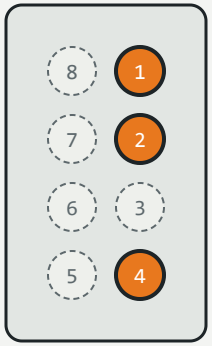

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	+5 V to bus plug 2	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 12	0462-201-16141
2	20 Orange	+5 V cruise ladder	+5 V sensor supply	Cruise switch ladder resistor · pin 1	0462-201-16141
4	20 Orange	+5 V to fuel level pull-up	+5 V sensor supply	Fuel level pull-up resistor 470 ohm to +5 V · pin 2	0462-201-16141
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, Dash

Sensor ground bus plug, ECU plug A

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

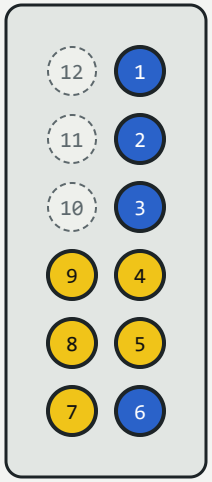

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	Sensor ground from ECU pin A24	Sensor ground A24 (ECU Gnd Out)	ECU plug A · pin 24	0462-201-16141
2	20 Blue	Sensor ground trunk (intake temp, throttle, coolant temp)	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 34	0462-201-16141
3	20 Blue	Crank sensor ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 75	0462-201-16141
4	20 Yellow	Cam sensor ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 65	0462-201-16141
5	20 Yellow	Turbo speed ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 56	0462-201-16141
6	20 Blue	MAP sensor ground	Sensor ground A24 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 18	0462-201-16141
7	20 Yellow	Pedal 1 ground	Sensor ground A24 (ECU Gnd Out)	Accelerator pedal sensor · pin 5	0462-201-16141
8	20 Yellow	Pedal 2 ground	Sensor ground A24 (ECU Gnd Out)	Accelerator pedal sensor · pin 2	0462-201-16141
9	20 Yellow	Front VRC ground	Sensor ground A24 (ECU Gnd Out)	Inline connector for front wheel speed (cabin side) · pin 2	0462-201-16141

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Switched +12 V bus plug (glove box, by the LOGIC box) DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

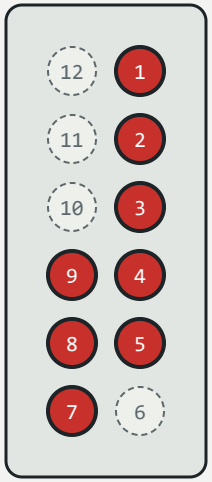

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	Switched +12 V feed	Switched +12 V	LOGIC fuse and relay box (glove box) · fuse BUS2-2	0462-201-16141
2	18 Red	Switched +12 V feed	Switched +12 V	Splice to: ECU wake diode (ignition feed) · pin 2; ECU plug A · pin 5; Firewall bulkhead connector (cabin side) · pin 30	0462-201-16141
3	18 Red	Fuel pump relay coil +	Switched +12 V	Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 86	0462-201-16141
4	18 Red	Radiator fan relay coil +	Switched +12 V	Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 86	0462-201-16141
5	20 Red	ETB relay coil +	Switched +12 V	Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 86	0462-201-16141
7	18 Red	Condenser fan relay coil +	Switched +12 V	Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 86	0462-201-16141
8	18 Red	Power steering pump relay coil +	Switched +12 V	Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 86	0462-201-16141
9	18 Red	Power steering enable relay coil +	Switched +12 V	Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 86	0462-201-16141

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, CabinPower, RearFuel

Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) 6-1419137-4

FACE SOURCED

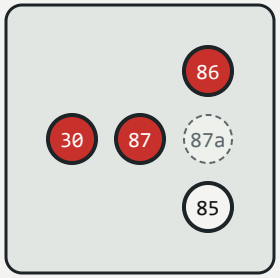


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	18 Red	Power steering enable relay +12 V in	+12 V in	LOGIC fuse and relay box (glove box) · fuse BUS2-7	42281-1
85	18 White	Power steering enable relay coil (-)	Coil (-)	ECU plug B · pin 12	280919-2
86	18 Red	Power steering enable relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 9	280919-2
87	18 Red	Power steering pump enable +12 V	+12 V out	Firewall bulkhead connector (cabin side) · pin 83	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

ECU plug B 4-1437290-0

FACE SOURCED

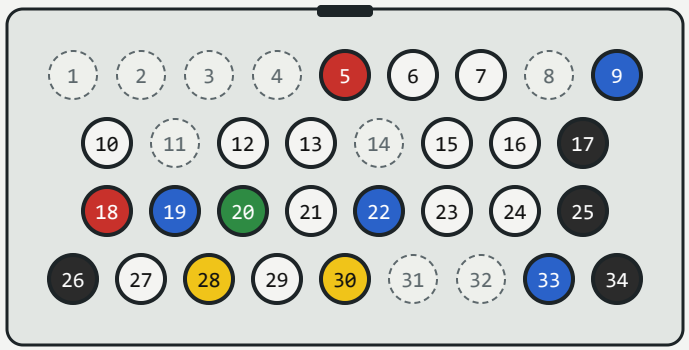

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	*spare*				
3	*spare*				
4	*spare*				
5	18 Red	Throttle motor +12 V to ECU	V Ethrottle (ETB H-bridge supply)	Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 87	3-1447221-3
6	20 White	Oil temp signal	Oil temp signal	Firewall bulkhead connector (cabin side) · pin 61	3-1447221-4
7	20 White	Charge temp signal	Charge temp signal	Firewall bulkhead connector (cabin side) · pin 59	3-1447221-4
8	*spare*				
9	20 Blue	Knock sensor signal	Knock sensor signal	Firewall bulkhead connector (cabin side) · pin 71	3-1447221-4
10	20 White	Engine speed (tacho)	Engine speed (tacho)	Splice to: A/C amplifier A15 (behind the glove box); A/C lock sensor resistor 4.7 k · pin 1	3-1447221-4
11	*spare*				
12	18 White	Power steering enable relay coil (-)	EPS enable relay (-)	Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 85	3-1447221-3
13	18 White	Condenser fan relay coil (-)	Cond fan relay (-)	Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 85	3-1447221-3


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
14	*spare*				
15	20 White	`Oil pressure signal`	Oil pressure signal	Firewall bulkhead connector (cabin side) · pin 28	3-1447221-4
16	20 White	`Fuel pressure signal`	Fuel pressure signal	Firewall bulkhead connector (cabin side) · pin 14	3-1447221-4
17	20 Black	`Shield drains to ECU plug B pin 17`	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 73; Firewall bulkhead connector (cabin side) · pin 50; Inline connector for rear wheel speed (cabin side) · pin 5	3-1447221-4
18	18 Red	`ETB motor +`	ETB motor +	Firewall bulkhead connector (cabin side) · pin 45	3-1447221-3
19	20 Blue	`Rear right wheel speed`	Rear right wheel speed	Inline connector for rear wheel speed (cabin side) · pin 4	3-1447221-4
20	20 Green	`Rear left wheel speed`	Rear left wheel speed	Inline connector for rear wheel speed (cabin side) · pin 3	3-1447221-4
21	20 White	`FR conditioned out`	FR conditioned out	Inline connector for front wheel speed (cabin side) · pin 4	3-1447221-4
22	18 Blue	`Sensor ground from ECU pin B22`	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 1	3-1447221-3
23	20 White	`Coolant pressure signal`	Coolant pressure signal	Firewall bulkhead connector (cabin side) · pin 26	3-1447221-4
24	20 White	`Fuel level signal`	Fuel level signal	Splice to: Inline connector for fuel level sender (cabin side) · pin 1; Fuel level pull-up resistor 470 ohm to +5 V · pin 1	3-1447221-4
25	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 25; ECU plug A · pin 34; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	3-1447221-3
26	18 Black	`ETB motor -`	ETB motor -	Firewall bulkhead connector (cabin side) · pin 46	3-1447221-3
27	20 White	`Anti-theft input`	Anti-theft input	Alarm immobiliser output point	3-1447221-4
28	18 Yellow	`Ignition switch sense`	Ignition +12 V (IGN fuse)	J/B No.1 (LH kick panel)	3-1447221-3
29	20 White	`Gearbox speed signal`	Gearbox speed signal	Firewall bulkhead connector (cabin side) · pin 68	3-1447221-4
30	20 Yellow	`Start request`	Start request	LOGIC fuse and relay box (glove box) · fuse BUS2-13	3-1447221-4
31	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
32	*spare*				
33	20 Blue	`Pedal 2 signal sub`	Pedal 2 signal sub	Accelerator pedal sensor · pin 3	`3-1447221-4`
34	18 Black	`ECU power ground`	ECU power ground	Splice to: ECU plug A · pin 25; ECU plug A · pin 34; ECU plug B · pin 25; POWER box NEG bar, GND stud, ring 1 of 3	`3-1447221-3`

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, AntiTheft

Fuel pump relay (K-FP, Trunk relay box seat K1) V23132-A2001-B200

FACE SOURCED

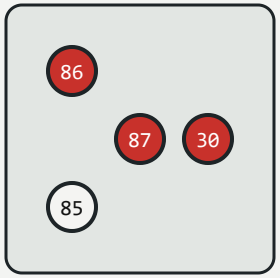


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	Fuel pump relay feed	+12 V in	Trunk relay block (fuel pump relay and fuse) · FP fuse (40 A)	TBD
85	18 White	Fuel pump relay coil (-)	Coil (-)	ECU plug A · pin 19	282110-1
86	18 Red	Fuel pump relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 3	282110-1
87	10 Red	Fuel pump +12 V	+12 V out	Fuel pump · pin 1	TBD
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, HeavyDC, RearFuel

Radiator fan relay (K-FAN, POWER fuse box seat R4) `1-1414147-0`

FACE SOURCED

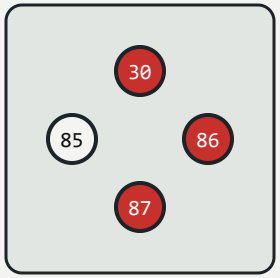


bottom (terminal side) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	`Radiator fan +12 V`	+12 V out	Radiator fan plug (+) · pin 1	280756-4
85	18 White	`Radiator fan relay coil (-)`	Coil (-)	ECU plug A · pin 29	42281-1
86	18 Red	`Radiator fan relay coil +`	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 4	42281-1
87	10 Red	`Radiator fan relay feed`	+12 V in	POWER box AMI IN-4 fuse, output stud	280756-4

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

Power steering pump relay (K-EPS, beside the POWER fuse box) V23132-A2001-B200

FACE SOURCED

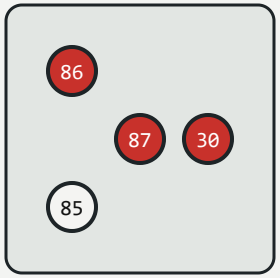


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	8 Red	Power steering pump relay feed	+12 V in	POWER box AMI OUT-6 fuse, output stud	TBD
85	18 White	Power steering pump relay coil (-)	Coil (-)	Firewall bulkhead connector (cabin side) · pin 85	282110-1
86	18 Red	Power steering pump relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 8	282110-1
87	8 Red	Power steering pump +12 V	+12 V out	Power steering pump plug A · pin 1	TBD
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

A/C clutch relay (K-ACC, LOGIC fuse box seat M5) 6-1419137-4

FACE SOURCED

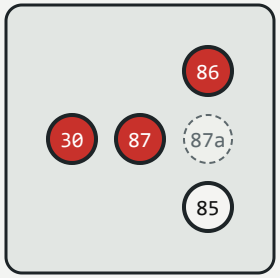


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	+12 V to A/C clutch relay	+12 V in	Splice to: A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 86; LOGIC fuse and relay box (glove box) · fuse BUS2-8	42281-1
85	18 White	A/C clutch relay coil (-)	Coil (-)	A/C amplifier A15 (behind the glove box)	280919-2
86	18 Red	A/C clutch relay coil+	Coil +	Splice to: A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 30; LOGIC fuse and relay box (glove box) · fuse BUS2-8	280919-2
87	16 Red	A/C clutch +12 V	+12 V out	A/C compressor A4	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

Accelerator pedal sensor TBD

FACE NOT SOURCED

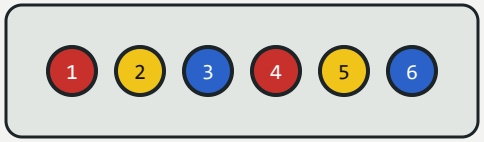


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+5 V pedal sensor 2`	+5 V (sensor 2)	+5 V sensor supply bus plug 1 · pin 9	TBD
2	20 Yellow	`Pedal 2 ground`	Ground (sensor 2)	Sensor ground bus plug, ECU plug A · pin 8	TBD
3	20 Blue	`Pedal 2 signal sub`	Signal 2 (sub)	ECU plug B · pin 33	TBD
4	20 Red	`+5 V pedal sensor 1`	+5 V (sensor 1)	+5 V sensor supply bus plug 1 · pin 8	TBD
5	20 Yellow	`Pedal 1 ground`	Ground (sensor 1)	Sensor ground bus plug, ECU plug A · pin 7	TBD
6	20 Blue	`Pedal 1 signal main`	Signal 1 (main)	ECU plug A · pin 14	TBD

Pin numbers: TBD · harness AB-cabin

Inline connector for front wheel speed (cabin side) DT06-6S + W6S

FACE SOURCED

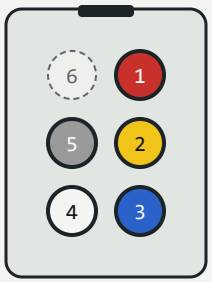

latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+5 V front VRC`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 10	0462-201-1631
2	20 Yellow	`Front VRC ground`	Sensor ground A24 (ECU Gnd Out)	Sensor ground bus plug, ECU plug A · pin 9	0462-201-1631
3	20 Blue	`FL conditioned out`	FL conditioned out	ECU plug A · pin 23	0462-201-1631
4	20 White	`FR conditioned out`	FR conditioned out	ECU plug B · pin 21	0462-201-1631
5	Shield	`Front wheel speed shield drain`	Shield drain A7	Splice to: ECU plug A · pin 7; Shield, not connected at the device end; Firewall bulkhead connector (cabin side) · pin 76; Firewall bulkhead connector (cabin side) · pin 66; Firewall bulkhead connector (cabin side) · pin 57; Firewall bulkhead connector (cabin side) · pin 47	0462-201-1631
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Sensor ground bus plug, ECU plug B

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED

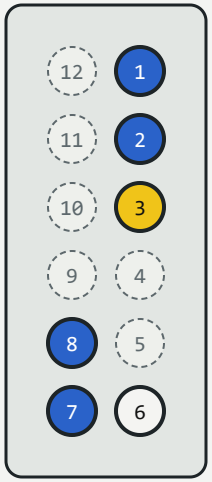


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	Sensor ground from ECU pin B22	Sensor ground B22 (ECU Gnd Out)	ECU plug B · pin 22	0462-201-16141
2	20 Blue	Fuel level ground	Sensor ground B22 (ECU Gnd Out)	Inline connector for fuel level sender (cabin side) · pin 2	0462-201-16141
3	20 Yellow	Rear VRC ground	Sensor ground B22 (ECU Gnd Out)	Inline connector for rear wheel speed (cabin side) · pin 2	0462-201-16141
6	20 White	Knock sensor (-)	Sensor ground B22 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 72	0462-201-16141
7	20 Blue	Sensor ground trunk (oil / coolant pressure, oil / charge temp)	Sensor ground B22 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 29	0462-201-16141
8	20 Blue	Sensor ground trunk (fuel pressure, gearbox speed)	Sensor ground B22 (ECU Gnd Out)	Firewall bulkhead connector (cabin side) · pin 15	0462-201-16141
9	*spare*				
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

LOGIC fuse and relay box (glove box) ST185-FB-LOGIC rev 7

FACE NOT SOURCED

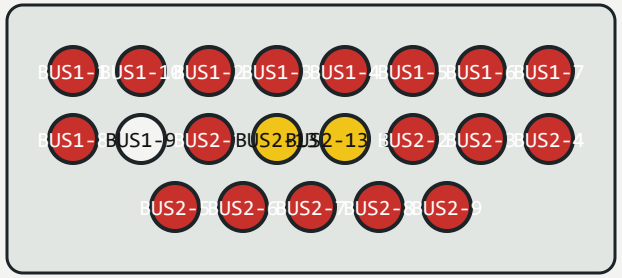

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
BUS1-1	18 Red	EFI relay coil +	EFI relay coil +	EFI main relay (K-EFI, POWER fuse box seat R2) · terminal 86	1-968849-1
BUS1-10	16 Red	ETB relay +12 V in	ETB relay +12 V in	Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 30	1-968851-1
BUS1-2	14 Red	Low beam +12 V feed	Low-beam fuse +12 V	Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86; DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 86	1-968851-1
BUS1-3	14 Red	High beam +12 V feed	High-beam fuse +12 V	Splice to: High-beam relay (K-HR, LOGIC fuse box seat M2) · terminal 30	1-968851-1
BUS1-4	14 Red	Hazard / horn +12 V feed	Hazard and horn fuse +12 V	Splice to: Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 30; Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 86	1-968851-1
BUS1-5	14 Red	Dome feed to J/B No.1	Dome feed to J/B No.1	J/B No.1 (LH kick panel)	1-968851-1
BUS1-6	14 Red	Ignition-on relay +12 V in	ON relay +12 V in	Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) · terminal 30	1-968851-1
BUS1-7	20 Red	Alarm +12 V	Alarm +12 V	Splice to: Alarm +12 V point	1-968849-1
BUS1-8	20 Red	Shock sensor +12 V	Shock sensor +12 V	Splice to: Shock sensor +12 V point	1-968849-1
BUS1-9	20 White	Alternator battery sense (S)	Alternator battery sense (S)	Alternator plug · pin 1	1-968849-1

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
BUS2-1	14 Red	DRL +12 V feed	DRL fuse +12 V	Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 30; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 86; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 86	1-968851-1
BUS2-13	20 Yellow	Start request	Start request	ECU plug B · pin 30	1-968849-1
BUS2-13 IN	20 Yellow	Start switch ST1 feed	Start switch ST1 feed	R/B No.4 (RH kick)	1-968849-1
BUS2-2	16 Red	Switched +12 V feed	Switched +12 V	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 1	1-968851-1
BUS2-3	14 Red	Coil +12 V feed	Ignition coil +12 V	Firewall bulkhead connector (cabin side) · pin 1	1-968851-1
BUS2-4	14 Red	Injector +12 V feed	Injector +12 V	Firewall bulkhead connector (cabin side) · pin 2	1-968851-1
BUS2-5	20 Red	CSB3 +12 V	CSB3 +12 V	Splice to: ECUMaster CAN switch board · pin 1	1-968849-1
BUS2-6	16 Red	Cluster +12 V	Cluster +12 V	Splice to: Centre cluster +12 V input lead	1-968851-1
BUS2-7	18 Red	Power steering enable relay +12 V in	EPS enable +12 V in	Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 30	1-968849-1
BUS2-8	16 Red	A/C clutch relay feed (ACC fuse)	A/C clutch relay +12 V (ACC fuse)	Splice to: A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 86; A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 30	1-968851-1
BUS2-9	20 Red	Alarm ignition +12 V	Alarm ignition +12 V	Splice to: Alarm ignition point	1-968849-1

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness AB-cabin, CabinPower, EngineRoom-C, Dash

Inline connector for fuel level sender (cabin side) DT04-2P + W2P

FACE SOURCED



latch top


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	`Fuel level signal`	Fuel level signal	Splice to: ECU plug B · pin 24; Fuel level pull-up resistor 470 ohm to +5 V · pin 1	`0460-202-1631`
2	20 Blue	`Fuel level ground`	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 2	`0460-202-1631`

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Inline connector for rear wheel speed (cabin side) DT06-6S + W6S

FACE SOURCED

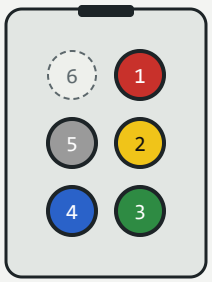


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+5 V rear VRC`	+5 V sensor supply	+5 V sensor supply bus plug 1 · pin 11	0462-201-1631
2	20 Yellow	`Rear VRC ground`	Sensor ground B22 (ECU Gnd Out)	Sensor ground bus plug, ECU plug B · pin 3	0462-201-1631
3	20 Green	`Rear left wheel speed`	Rear left wheel speed	ECU plug B · pin 20	0462-201-1631
4	20 Blue	`Rear right wheel speed`	Rear right wheel speed	ECU plug B · pin 19	0462-201-1631
5	Shield	`Rear wheel speed shield drain`	Shield drain B17	Splice to: Firewall bulkhead connector (cabin side) · pin 73; Firewall bulkhead connector (cabin side) · pin 50; ECU plug B · pin 17	0462-201-1631
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Condenser fan relay (K-FAN2, POWER fuse box seat R5) 1-1393304-0

FACE SOURCED

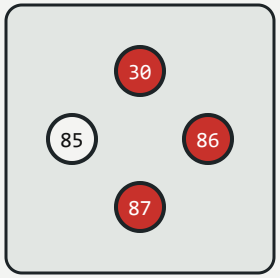


bottom (terminal side) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	Condenser fan +12 V	+12 V out	Condenser fan plug (+) · pin 1	280756-4
85	18 White	Condenser fan relay coil (-)	Coil (-)	ECU plug B · pin 13	42281-1
86	18 Red	Condenser fan relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 7	42281-1
87	10 Red	Condenser fan relay feed	+12 V in	POWER box AMI IN-5 fuse, output stud	280756-4

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

Throttle body power relay (K-ETB, LOGIC fuse box seat M4) 4-1904124-2

FACE SOURCED

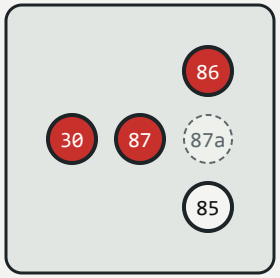


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	ETB relay +12 V in	+12 V in	LOGIC fuse and relay box (glove box) · fuse BUS1-10	42281-1
85	20 White	ETB relay coil (-)	Coil (-)	ECU plug A · pin 20	280919-2
86	20 Red	ETB relay coil +	Coil +	Switched +12 V bus plug (glove box, by the LOGIC box) · pin 5	280919-2
87	18 Red	Throttle motor +12 V to ECU	+12 V out	ECU plug B · pin 5	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

EFI main relay (K-EFI, POWER fuse box seat R2) 1-1414147-0

FACE SOURCED

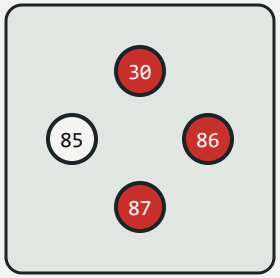


bottom (terminal side) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	LOGIC Bus 2 feed from the EFI relay	+12 V out	LOGIC box Bus 2, feed stud	280756-4
85	18 White	EFI relay coil (-)	Coil (-)	ECU plug A · pin 28	42281-1
86	18 Red	EFI relay coil +	Coil +	LOGIC fuse and relay box (glove box) · fuse BUS1-1	42281-1
87	12 Red	EFI relay feed	+12 V in	POWER box AMI IN-2 fuse, output stud	280756-4

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) 6-1419137-4

FACE SOURCED

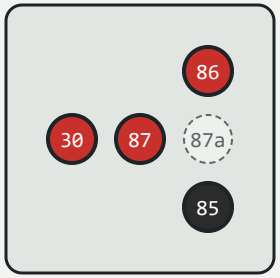


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	Ignition-on relay +12 V in	+12 V in	LOGIC fuse and relay box (glove box) · fuse BUS1-6	42281-1
85	20 Black	Ignition-on relay coil (-)	Coil (-)	POWER box NEG bar, GND stud, ring 2 of 3	280919-2
86	18 Red	Ignition-on relay coil + (IGN fuse)	Coil +	J/B No.1 (LH kick panel)	280919-2
87	14 Red	CAN-Lambda +12 V	+12 V out	Firewall bulkhead connector (cabin side) · pin 95	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

ECU plug C (CAN / comms) none (generic round 6-pin plug, not bought)

FACE NOT SOURCED

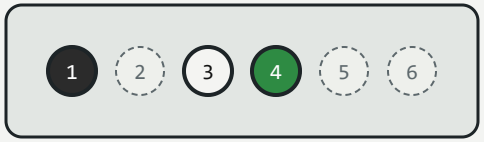

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	■ 20 Black	CAN cable shield (trunk)	CAN shield drain	Splice to: Shield, not connected at the device end; Firewall bulkhead connector (cabin side) · pin 81	none (contact comes with the plug)
2	*spare*				
3	□ 20 White	CAN 1 high	CAN H	Splice to: Firewall bulkhead connector (cabin side) · pin 79; ECUMaster CAN switch board · pin 5; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	none (contact comes with the plug)
4	■ 20 Green	CAN 1 low	CAN L	Splice to: Firewall bulkhead connector (cabin side) · pin 80; ECUMaster CAN switch board · pin 6; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	none (contact comes with the plug)
5	*spare*				
6	*spare*				

Pin numbers: PCLink help page Communications Port Pinout (G4X / Xtreme / Fury wire-in), looking into the ECU connector · harness AB-cabin

Battery kill switch (trunk) 52-45780

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
ALT1	16 Red	Alternator IG to the kill switch	Alternator IG to the kill switch	Cowl plug IG2 (under the ECU)	TBD
ALT2	16 Red	Alternator IG excite	Alt IG excite	Alternator plug · pin 3	TBD
MAIN1	1/0 Red	Battery + to the kill switch	battery +	Battery + post (trunk)	TBD
MAIN2	10 Red	Trunk relay block +12 V	Battery +	Trunk relay block (fuel pump relay and fuse) · battery + stud	TBD
MAIN2	1/0 Red	Battery + to the POWER box	Battery +	POWER box + bar, BAT+ IN stud	TBD

Pin numbers: TBD · harness AB-cabin, EngineRoom-C, HeavyDC

AB-engine

Firewall bulkhead connector (engine side) DRB16-102SAE-L018

FACE SOURCED

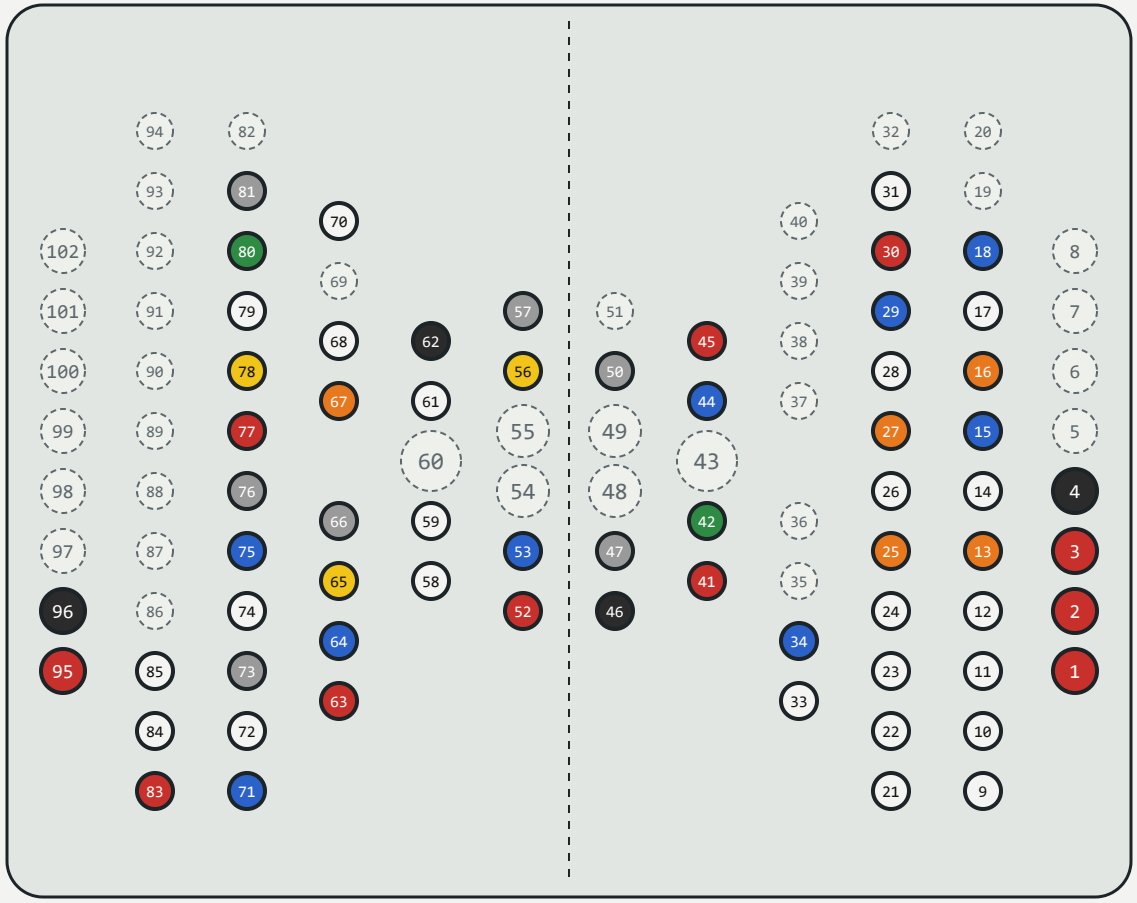

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Coil +12 V feed	Ignition coil +12 V	Splice to: Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1	0462-210-1231
2	14 Red	Injector +12 V feed	Injector +12 V	Splice to: Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	0462-210-1231
3	12 Red	Starter solenoid S	Starter solenoid S	Starter solenoid trigger plug · pin 1	0462-210-1231

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
4	14 Black	Coil ground to the POWER box NEG bar	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4	0462-210-1231
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				
9	20 White	Coil 1 trigger (IGT)	Coil 1 trigger (IGT)	Ignition coil 1 · pin 3	0462-201-1631
10	20 White	Coil 2 trigger (IGT)	Coil 2 trigger (IGT)	Ignition coil 2 · pin 3	0462-201-1631
11	20 White	Coil 3 trigger (IGT)	Coil 3 trigger (IGT)	Ignition coil 3 · pin 3	0462-201-1631
12	20 White	Coil 4 trigger (IGT)	Coil 4 trigger (IGT)	Ignition coil 4 · pin 3	0462-201-1631
13	20 Orange	+5 V fuel pressure	+5 V sensor supply	Fuel pressure sensor · pin 2	0462-201-1631
14	20 White	Fuel pressure signal	Fuel pressure signal	Fuel pressure sensor · pin 3	0462-201-1631
15	20 Blue	Sensor ground trunk (fuel pressure, gearbox speed)	Sensor ground B22 (ECU Gnd Out)	Splice to: Fuel pressure sensor · pin 1; Gearbox speed sensor · pin 2	0462-201-1631
16	20 Orange	+5 V MAP sensor	+5 V sensor supply	MAP sensor · pin 2	0462-201-1631
17	20 White	MAP sensor signal	MAP sensor signal	MAP sensor · pin 3	0462-201-1631
18	20 Blue	MAP sensor ground	Sensor ground A24 (ECU Gnd Out)	MAP sensor · pin 1	0462-201-1631
19	*spare*				
20	*spare*				
21	20 White	Injector 1 drive (-)	Injector 1 drive (-)	Injector 1 · pin 2	0462-201-1631
22	20 White	Injector 2 drive (-)	Injector 2 drive (-)	Injector 2 · pin 2	0462-201-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
23	20 White	`Injector 3 drive (-)`	Injector 3 drive (-)	Injector 3 · pin 2	0462-201-1631
24	20 White	`Injector 4 drive (-)`	Injector 4 drive (-)	Injector 4 · pin 2	0462-201-1631
25	20 Orange	`+5 V coolant pressure`	+5 V sensor supply	Coolant pressure sensor · pin B	0462-201-1631
26	20 White	`Coolant pressure signal`	Coolant pressure signal	Coolant pressure sensor · pin C	0462-201-1631
27	20 Orange	`+5 V oil pressure`	+5 V sensor supply	Oil pressure sensor · pin 2	0462-201-1631
28	20 White	`Oil pressure signal`	Oil pressure signal	Oil pressure sensor · pin 3	0462-201-1631
29	20 Blue	`Sensor ground trunk (oil / coolant pressure, oil / charge temp)`	Sensor ground B22 (ECU Gnd Out)	Splice to: Coolant pressure sensor · pin A; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	0462-201-1631
30	18 Red	`+12 V boost + flex`	Switched +12 V	Splice to: Boost control solenoid · pin 1; Flex fuel sensor · pin A	0462-201-1631
31	20 White	`Flex fuel signal`	Flex fuel signal	Flex fuel sensor · pin C	0462-201-1631
32	*spare*				
33	20 White	`Intake temp signal`	Intake temp signal	Intake air temp sensor (manifold) · pin 1	0462-201-1631
34	20 Blue	`Sensor ground trunk (intake temp, throttle, coolant temp)`	Sensor ground A24 (ECU Gnd Out)	Splice to: Coolant temp sensor · pin 2; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2	0462-201-1631
35	*spare*				
36	*spare*				
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				
41	20 Red	`+5 V throttle sensor`	+5 V sensor supply	Electronic throttle body · pin 3	0462-201-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
42	20 Green	`Throttle pos 1 main`	Throttle pos 1 main	Electronic throttle body · pin 6	`0462-201-1631`
43	*spare*				
44	20 Blue	`Throttle pos 2 sub`	Throttle pos 2 sub	Electronic throttle body · pin 5	`0462-201-1631`
45	18 Red	`ETB motor +`	ETB motor +	Electronic throttle body · pin 4	`0462-201-1631`
46	18 Black	`ETB motor -`	ETB motor -	Electronic throttle body · pin 1	`0462-201-1631`
47	Shield	`Throttle shield`	Shield drain A7	Shield, not connected at the device end	`0462-201-1631`
48	*spare*				
49	*spare*				
50	Shield	`ETB motor shield`	Shield drain B17	Shield, not connected at the device end	`0462-201-1631`
51	*spare*				
52	20 Red	`+5 V turbo speed`	+5 V sensor supply	Turbo speed sensor · pin A	`0462-201-1631`
53	20 Blue	`Turbo speed signal`	Turbo speed signal	Turbo speed sensor · pin B	`0462-201-1631`
54	*spare*				
55	*spare*				
56	20 Yellow	`Turbo speed ground`	Sensor ground A24 (ECU Gnd Out)	Turbo speed sensor · pin C	`0462-201-1631`
57	Shield	`Turbo speed shield`	Shield drain A7	Shield, not connected at the device end	`0462-201-1631`
58	20 White	`Boost solenoid drive (-)`	Boost solenoid (-)	Boost control solenoid · pin 2	`0462-201-1631`
59	20 White	`Charge temp signal`	Charge temp signal	Charge pipe air temp sensor · pin 1	`0462-201-1631`
60	*spare*				
61	20 White	`Oil temp signal`	Oil temp signal	Oil temp sensor · pin 1	`0462-201-1631`

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
62	20 Black	`Flex fuel sensor return`	Ground	Flex fuel sensor · pin B	0462-201-1631
63	20 Red	`+8 V to cam sensor`	+8 V sensor supply	Cam sensor · pin 1	0462-201-1631
64	20 Blue	`Cam sensor signal`	Cam sensor signal	Cam sensor · pin 2	0462-201-1631
65	20 Yellow	`Cam sensor ground`	Sensor ground A24 (ECU Gnd Out)	Cam sensor · pin 3	0462-201-1631
66	Shield	`Cam sensor shield`	Shield drain A7	Shield, not connected at the device end	0462-201-1631
67	20 Orange	`+8 V to gearbox speed sensor`	+8 V sensor supply	Gearbox speed sensor · pin 1	0462-201-1631
68	20 White	`Gearbox speed signal`	Gearbox speed signal	Gearbox speed sensor · pin 3	0462-201-1631
69	*spare*				
70	20 White	`Coolant temp signal`	Coolant temp signal	Coolant temp sensor · pin 1	0462-201-1631
71	20 Blue	`Knock sensor signal`	Knock sensor signal	Knock sensor · pin 1	0462-201-1631
72	20 White	`Knock sensor (-)`	Sensor ground B22 (ECU Gnd Out)	Knock sensor · pin 2	0462-201-1631
73	Shield	`Knock sensor shield`	Shield drain B17	Shield, not connected at the device end	0462-201-1631
74	20 White	`Crank sensor signal`	Crank sensor signal	Crank sensor · pin 1	0462-201-1631
75	20 Blue	`Crank sensor ground`	Sensor ground A24 (ECU Gnd Out)	Crank sensor · pin 2	0462-201-1631
76	Shield	`Crank sensor shield`	Shield drain A7	Shield, not connected at the device end	0462-201-1631
77	16 Red	`+12 V to reverse switch`	+12 V to reverse switch	Reverse light switch · pin 2	0462-201-1631

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
78	16 Yellow	`Switched +12 V from reverse switch`	Reverse +12 V	Reverse light switch · pin 1	`0462-201-1631`
79	20 White	`CAN H to CAN-Lambda`	CAN H	Splice to: CAN bus end terminator plug (120 ohm) · pin 1; CAN-Lambda wideband controller · pin 4	`0462-201-1631`
80	20 Green	`CAN L to CAN-Lambda`	CAN L	Splice to: CAN bus end terminator plug (120 ohm) · pin 2; CAN-Lambda wideband controller · pin 3	`0462-201-1631`
81	Shield	`CAN-Lambda shield`	CAN shield drain	Shield, not connected at the device end	`0462-201-1631`
82	*spare*				
83	18 Red	`Power steering pump enable +12 V`	EHPS enable +12 V	Power steering pump plug C · pin 1	`0462-201-1631`
84	20 White	`Power steering pump speed`	EHPS pump speed	Power steering pump plug B · pin 2	`0462-201-1631`
85	18 White	`Power steering pump relay coil (-)`	EHPS relay coil (-)	Power steering pump plug B · pin 5	`0462-201-1631`
86	*spare*				
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				
94	*spare*				
95	14 Red	`CAN-Lambda +12 V`	CAN-Lambda +12 V	Splice to: CAN-Lambda wideband controller · pin 1	`0462-210-1231`
96	14 Black	`CAN-Lambda ground`	Ground	Splice to: CAN-Lambda wideband controller · pin 2	`0462-210-1231`
97	*spare*				
98	*spare*				
99	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
100	*spare*				
101	*spare*				
102	*spare*				

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-engine

Crank sensor 90980-10947

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Crank sensor signal	Signal	Firewall bulkhead connector (engine side) · pin 74	in kit CONN-75800
2	20 Blue	Crank sensor ground	Ground	Firewall bulkhead connector (engine side) · pin 75	in kit CONN-75800

Pin numbers: TBD · harness AB-engine

Cam sensor DT06-3S-CE05 + W3S

FACE SOURCED



latch top


wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	+8 V to cam sensor	+8 V	Firewall bulkhead connector (engine side) · pin 63	0462-201-16141
2	20 Blue	Cam sensor signal	Signal	Firewall bulkhead connector (engine side) · pin 64	0462-201-16141
3	20 Yellow	Cam sensor ground	Ground	Firewall bulkhead connector (engine side) · pin 65	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Turbo speed sensor DT06-3S-CE05 + W3S

FACE SOURCED

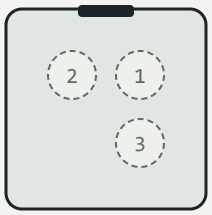


wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	`+5 V turbo speed`	+5 V	Firewall bulkhead connector (engine side) · pin 52	`0462-201-16141`
B	20 Blue	`Turbo speed signal`	Signal	Firewall bulkhead connector (engine side) · pin 53	`0462-201-16141`
C	20 Yellow	`Turbo speed ground`	Ground	Firewall bulkhead connector (engine side) · pin 56	`0462-201-16141`

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Flex fuel sensor 13519047

FACE NOT SOURCED

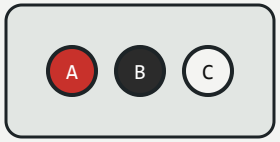


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	`+12 V flex fuel`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 30; Boost control solenoid · pin 1	15326426
B	20 Black	`Flex fuel sensor return`	12 V sensor return	Firewall bulkhead connector (engine side) · pin 62	15326426
C	20 White	`Flex fuel signal`	Signal	Firewall bulkhead connector (engine side) · pin 31	15326426

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Flex fuel pin table) · harness AB-engine

Electronic throttle body `D 261 205 358-01`

FACE SOURCED

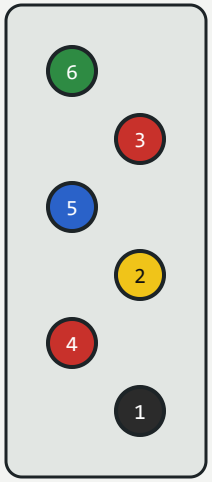


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Black	`ETB motor -`	Motor -	Firewall bulkhead connector (engine side) · pin 46	`5-965906-1`
2	20 Yellow	`Throttle sensor ground`	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 34; Coolant temp sensor · pin 2; Intake air temp sensor (manifold) · pin 2	`in kit D 261 205 358-01`
3	20 Red	`+5 V throttle sensor`	+5 V	Firewall bulkhead connector (engine side) · pin 41	`in kit D 261 205 358-01`
4	18 Red	`ETB motor +`	Motor +	Firewall bulkhead connector (engine side) · pin 45	`5-965906-1`
5	20 Blue	`Throttle pos 2 sub`	Position 2 (sub)	Firewall bulkhead connector (engine side) · pin 44	`in kit D 261 205 358-01`
6	20 Green	`Throttle pos 1 main`	Position 1 (main)	Firewall bulkhead connector (engine side) · pin 42	`in kit D 261 205 358-01`

Pin numbers: Bosch Motorsport ETB data sheet 51048715 (pins 1A-6F) · harness AB-engine

MAP sensor 354404

FACE NOT SOURCED

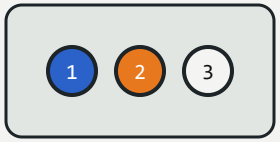


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`MAP sensor ground`	Ground	Firewall bulkhead connector (engine side) · pin 18	`in kit 354404`
2	20 Orange	`+5 V MAP sensor`	+5 V	Firewall bulkhead connector (engine side) · pin 16	`in kit 354404`
3	20 White	`MAP sensor signal`	Signal	Firewall bulkhead connector (engine side) · pin 17	`in kit 354404`

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (MAP pin table) · harness AB-engine

Injector 1 CONN-76270

FACE NOT SOURCED

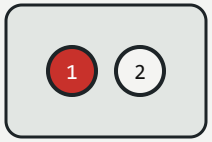


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	`Injector 1 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	`in kit CONN-76270`
2	20 White	`Injector 1 drive (-)`	Drive (-)	Firewall bulkhead connector (engine side) · pin 21	`in kit CONN-76270`

Pin numbers: TBD · harness AB-engine

Injector 2 CONN-76270

FACE NOT SOURCED

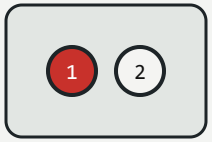


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	`Injector 2 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	`Injector 2 drive (-)`	Drive (-)	Firewall bulkhead connector (engine side) · pin 22	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 3 CONN-76270

FACE NOT SOURCED

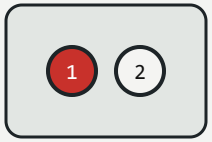


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	`Injector 3 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 4 · pin 1	`in kit CONN-76270`
2	20 White	`Injector 3 drive (-)`	Drive (-)	Firewall bulkhead connector (engine side) · pin 23	`in kit CONN-76270`

Pin numbers: TBD · harness AB-engine

Injector 4 CONN-76270

FACE NOT SOURCED

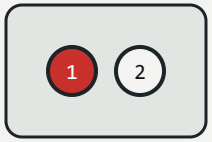


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	`Injector 4 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1	`in kit CONN-76270`
2	20 White	`Injector 4 drive (-)`	Drive (-)	Firewall bulkhead connector (engine side) · pin 24	`in kit CONN-76270`

Pin numbers: TBD · harness AB-engine

Ignition coil 1 90980-11885

FACE SOURCED

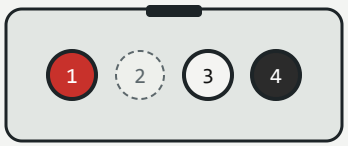


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 1 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 1 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 9	TBD
4	16 Black	`Coil 1 ground`	Ground	Splice to: Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Ignition coil 2 90980-11885

FACE SOURCED

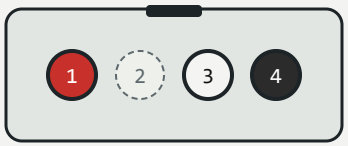

latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 2 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 2 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 10	TBD
4	16 Black	`Coil 2 ground`	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Ignition coil 3 90980-11885

FACE SOURCED

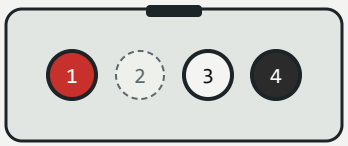


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 3 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 4 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 3 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 11	TBD
4	16 Black	`Coil 3 ground`	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Ignition coil 4 90980-11885

FACE SOURCED

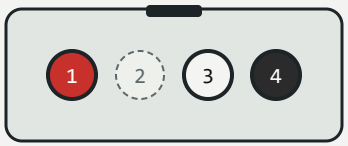

latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`Coil 4 +12 V`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1	TBD
2	*spare*				
3	20 White	`Coil 4 trigger (IGT)`	Trigger (IGT)	Firewall bulkhead connector (engine side) · pin 12	TBD
4	16 Black	`Coil 4 ground`	Ground	Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Firewall bulkhead connector (engine side) · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Boost control solenoid 12052641

FACE NOT SOURCED

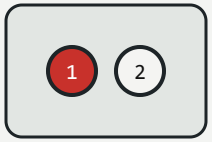

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+12 V boost solenoid`	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 30; Flex fuel sensor · pin A	12084200
2	20 White	`Boost solenoid drive (-)`	Drive (-)	Firewall bulkhead connector (engine side) · pin 58	12084200

Pin numbers: TBD · harness AB-engine

Coolant temp sensor 90980-11062

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Coolant temp signal	Signal	Firewall bulkhead connector (engine side) · pin 70	8100-0461
2	20 Blue	Coolant temp ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 34; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

Intake air temp sensor (manifold) 90980-11062

FACE SOURCED



latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Intake temp signal	Signal	Firewall bulkhead connector (engine side) · pin 33	8100-0461
2	20 Blue	Intake temp ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 34; Coolant temp sensor · pin 2; Electronic throttle body · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

Oil pressure sensor 354404

FACE NOT SOURCED

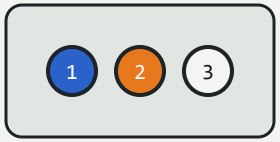


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`Oil pressure ground`	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	`in kit 354404`
2	20 Orange	`+5 V oil pressure`	+5 V	Firewall bulkhead connector (engine side) · pin 27	`in kit 354404`
3	20 White	`Oil pressure signal`	Signal	Firewall bulkhead connector (engine side) · pin 28	`in kit 354404`

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Oil pressure pin table) · harness AB-engine

Fuel pressure sensor 354404

FACE NOT SOURCED

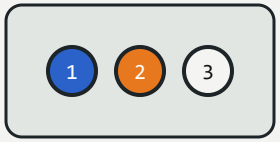


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`Fuel pressure ground`	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 15; Gearbox speed sensor · pin 2	`in kit 354404`
2	20 Orange	`+5 V fuel pressure`	+5 V	Firewall bulkhead connector (engine side) · pin 13	`in kit 354404`
3	20 White	`Fuel pressure signal`	Signal	Firewall bulkhead connector (engine side) · pin 14	`in kit 354404`

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Fuel pressure pin table) · harness AB-engine

Coolant pressure sensor `pigtail supplied with the sensor (owned)`

FACE NOT SOURCED

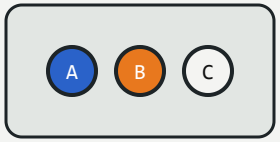

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
A	20 Blue	`Coolant pressure ground`	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 29; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	`solder splice onto the pigtail black lead`
B	20 Orange	`+5 V coolant pressure`	+5 V	Firewall bulkhead connector (engine side) · pin 25	`solder splice onto the pigtail red lead`
C	20 White	`Coolant pressure signal`	Signal	Firewall bulkhead connector (engine side) · pin 26	`solder splice onto the pigtail green lead`

Pin numbers: Dan's sensor sheet + seller connection guide (Dan 2026-10-30): A / plug 1 GND black, B / plug 2 supply red, C / plug 3 output green · harness AB-engine

Starter solenoid trigger plug `90980-11400`

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	12 Red	`Starter solenoid S`	Solenoid S (start)	Firewall bulkhead connector (engine side) · pin 3	`in kit CONN-76058 (Sumitomo TS187 4.8 mm sealed female, 12-10 AWG)`

Pin numbers: single cavity (Toyota RM1022E housing list: 90980-11400 is 1-way, 4.8 mm tab, sealed) · harness AB-engine

Reverse light switch 90980-11250

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Yellow	Switched +12 V from reverse switch	Switched +12 V (NO)	Firewall bulkhead connector (engine side) · pin 78	8100-0461
2	16 Red	+12 V to reverse switch	+12 V (COM)	Firewall bulkhead connector (engine side) · pin 77	8100-0461

Pin numbers: TBD · harness AB-engine

Oil temp sensor 90980-11062

FACE SOURCED



latch top

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Oil temp signal	Signal	Firewall bulkhead connector (engine side) · pin 61	8100-0461
2	20 Blue	Oil temp ground	Ground	Splice to: Charge pipe air temp sensor · pin 2; Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1	8100-0461

Pin numbers: TBD · harness AB-engine

Charge pipe air temp sensor 90980-11062

FACE SOURCED



latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Charge temp signal	Signal	Firewall bulkhead connector (engine side) · pin 59	8100-0461
2	20 Blue	Charge temp ground	Ground	Splice to: Oil temp sensor · pin 2; Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1	8100-0461

Pin numbers: TBD · harness AB-engine

Knock sensor 1 928 403 874

FACE NOT SOURCED

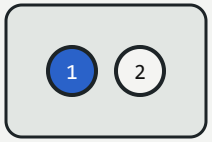

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	Knock sensor signal	Signal	Firewall bulkhead connector (engine side) · pin 71	BDK 2.8
2	20 White	Knock sensor (-)	Ground	Firewall bulkhead connector (engine side) · pin 72	BDK 2.8

Pin numbers: TBD · harness AB-engine

Gearbox speed sensor 90980-11143

FACE SOURCED




mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	+8 V to gearbox speed sensor	+8 V	Firewall bulkhead connector (engine side) · pin 67	8100-0461
2	20 Blue	Gearbox speed ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 15; Fuel pressure sensor · pin 1	8100-0461
3	20 White	Gearbox speed signal	Signal	Firewall bulkhead connector (engine side) · pin 68	8100-0461

Pin numbers: Toyota 3-wire speed sensor pinout (wilbo666 wiki; Daniel 2026-09-28) · harness AB-engine

CAN-Lambda wideband controller DTM06-4S + WM-4S

FACE SOURCED

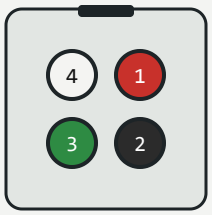

latch top


wire side (where the contacts go in) view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	CAN-Lambda +12 V	+12 V	Splice to: Firewall bulkhead connector (engine side) · pin 95	0462-005-2031
2	16 Black	CAN-Lambda ground	Ground	Splice to: Firewall bulkhead connector (engine side) · pin 96	0462-005-2031
3	20 Green	CAN L to CAN-Lambda	CAN L	Splice to: Firewall bulkhead connector (engine side) · pin 80; CAN bus end terminator plug (120 ohm) · pin 2	0462-201-2031
4	20 White	CAN H to CAN-Lambda	CAN H	Splice to: Firewall bulkhead connector (engine side) · pin 79; CAN bus end terminator plug (120 ohm) · pin 1	0462-201-2031

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

CAN bus end terminator plug (120 ohm) AT06-2S-RD01 + AW2S

FACE NOT SOURCED

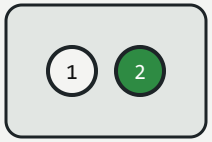


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	CAN H to the 120 ohm terminator plug	CAN H	Splice to: Firewall bulkhead connector (engine side) · pin 79; CAN-Lambda wideband controller · pin 4	AT62-201-1631
2	20 Green	CAN L to the 120 ohm terminator plug	CAN L	Splice to: Firewall bulkhead connector (engine side) · pin 80; CAN-Lambda wideband controller · pin 3	AT62-201-1631

Pin numbers: TBD · harness AB-engine

Power steering pump plug C 90980-10942

FACE SOURCED

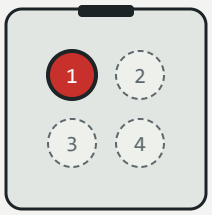

latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	Power steering pump enable +12 V	+12 V (IG)	Firewall bulkhead connector (engine side) · pin 83	82998-12440
2	*spare*				
3	*spare*				
4	*spare*				

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine

Power steering pump plug B 90980-10897

FACE SOURCED

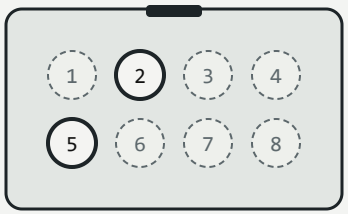

latch top

mating face view


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	☐ 20 White	`Power steering pump speed`	Speed signal	Firewall bulkhead connector (engine side) · pin 84	82998-12440
3	*spare*				
4	*spare*				
5	☐ 18 White	`Power steering pump relay coil (-)`	Relay coil drive (-)	Firewall bulkhead connector (engine side) · pin 85	82998-12440
6	*spare*				
7	*spare*				
8	*spare*				

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine

CabinPower

Low-beam relay (K-HL, LOGIC fuse box seat M1) 5-1393292-8

FACE SOURCED

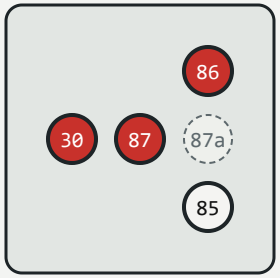


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	Low-beam relay feed	+12 V in	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86; DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 86	42281-1
85	18 White	Low-beam relay coil (-)	Coil (-)	Splice to: Cowl plug IE1 (LH kick); DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 85	280919-2
86	16 Red	Low-beam relay coil +	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 86	280919-2
87	14 Red	Low beam +12 V out	+12 V out	Splice to: High-beam relay (K-HR, LOGIC fuse box seat M2) · terminal 86; LH headlamp H1; RH headlamp H2	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

Horn relay (K-HORN, LOGIC fuse box seat M3) 4-1904124-3

FACE SOURCED

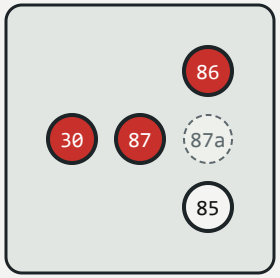


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	Horn relay feed	+12 V in	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-4; Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 86	42281-1
85	18 White	Horn relay coil (-)	Coil (-)	Cowl plug IE1 (LH kick)	280919-2
86	16 Red	Horn relay coil +	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-4; Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 30	280919-2
87	14 Red	Horn +12 V out	+12 V out	Splice to: LH horn · pin 1; RH horn · pin 1	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

High-beam relay (K-HR, LOGIC fuse box seat M2) 5-1393292-8

FACE SOURCED

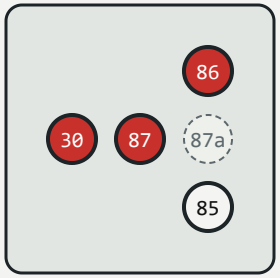


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	High-beam relay feed	+12 V in	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-3	42281-1
85	18 White	High-beam relay coil (-) to the dimmer	Coil (-)	Cowl plug IE1 (LH kick)	280919-2
86	16 Red	High-beam relay coil + (from the low beams)	Coil +	Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 87; LH headlamp H1; RH headlamp H2	280919-2
87	14 Red	High beam +12 V out	+12 V out	Splice to: Dash high-beam LED feed resistor 220 ohm · pin 1; RH headlamp H2; LH headlamp H1	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL relay (K-DRL, LOGIC fuse box seat M8) 4-1904124-2

FACE SOURCED

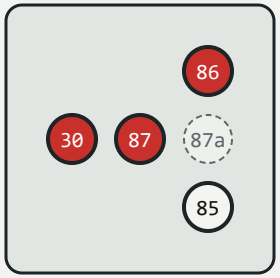


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	18 Red	DRL relay feed	+12 V in	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-1; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 86; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 86	42281-1
85	20 White	DRL relay coil (-) to the DRL switch	Coil (-)	Splice to: DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87	280919-2
86	18 Red	DRL relay coil +	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-1; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 30; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 86	280919-2
87	16 Red	DRL +12 V out	+12 V out	DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 30	42281-1

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL switch TBD

FACE NOT SOURCED

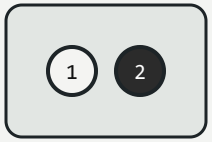


layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	`DRL on (to ground)`	DRL relay coil and pop-up UP	Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87	TBD
2	■ 20 Black	`DRL switch ground (R8 ground lead)`	Ground	Pop-up relay R8 (behind the LH dash)	TBD

Pin numbers: switch terminals 1 / 2 (as drawn) · harness CabinPower

Pop-up diode 1 (stalk side) DT06-2S + W2S;DT04-2P-RT01

FACE SOURCED

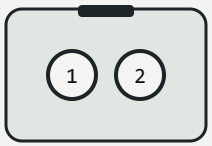


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	Pop-up UP input	D1 anode (R8 pin 8 side)	Splice to: Pop-up relay R8 (behind the LH dash); Pop-up diode 2 (DRL switch side) · pin 1	0462-201-1631
2	☐ 20 White	Pop-up UP from the stalk (R-Y)	D1 cathode (stalk side)	R-Y lead from cowl splice I2, cut near pop-up relay R8 (I2 side, behind the LH dash)	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

Pop-up diode 2 (DRL switch side) DT06-2S + W2S;DT04-2P-RT01

FACE SOURCED

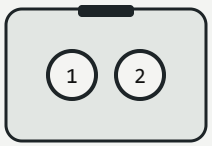


wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	Pop-up UP input	D2 anode (R8 pin 8 side)	Splice to: Pop-up relay R8 (behind the LH dash); Pop-up diode 1 (stalk side) · pin 1	0462-201-1631
2	☐ 18 White	Pop-up UP from diode 2 to the key-on relay	D2 cathode (DRL switch side)	Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 30	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) 4-1904124-3

FACE SOURCED

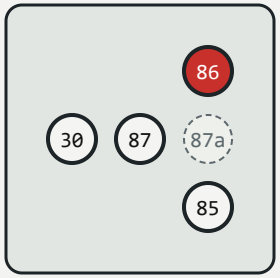


mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	☐ 18 White	Pop-up UP from diode 2 to the key-on relay	Switch contact (UP command in)	Pop-up diode 2 (DRL switch side) · pin 2	42281-1
85	☐ 20 White	Pop-up relay coil (-) to the DRL switch	Coil (-)	Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87	280919-2
86	■ 18 Red	Pop-up relay coil + (key on)	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-1; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 30; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 86	280919-2
87	☐ 18 White	Pop-up UP command to the DRL switch (key on)	Switch contact (to the DRL switch)	Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL cut relay (beside the LOGIC box) (RLY-DRL) `12110539 + 12110540;301-1C-C-R1-U01-12VDC`

FACE NOT SOURCED

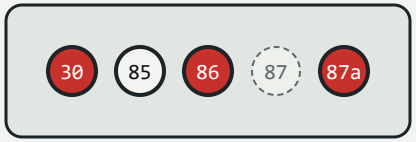

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	`DRL +12 V out`	+12 V in	DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 87	`12129409-L`
85	16 White	`DRL cut relay coil (-)`	Coil (-)	Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 85; Cowl plug IE1 (LH kick)	`12129409-L`
86	16 Red	`DRL cut relay coil +`	Coil +	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86	`12129409-L`
87	*spare*				
87a	16 Red	`DRL +12 V`	+12 V out (NC)	Splice to: LH headlamp H1; RH headlamp H2	`12129409-L`

Pin numbers: ISO 7588 relay terminal numbers (Song Chuan 301 series data sheet) · harness CabinPower, EngineRoom-C

EngineRoom-C

Power steering pump plug A 90980-12068

FACE SOURCED



latch top


mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	8 Red	Power steering pump +12 V	EHPS pump +12 V	Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 87	82998-12500
2	8 Black	Power steering pump ground	Ground	Ground stud EA, RH front fender	82998-12500

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness EngineRoom-C

Alternator plug 90980-10341

FACE SOURCED

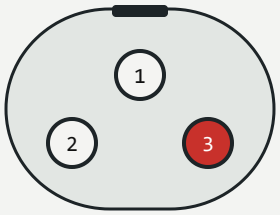

mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	`Alternator battery sense (S)`	S (battery sense)	LOGIC fuse and relay box (glove box) · fuse BUS1-9	TBD
2	20 White	`Alternator charge lamp (L)`	L (charge lamp)	Cowl plug IG2 (under the ECU)	TBD
3	16 Red	`Alternator IG excite`	Alt IG excite	Battery kill switch (trunk) · pin ALT2	TBD

Pin numbers: TBD · harness EngineRoom-C

Condenser fan ground plug DTHD06-1-8S

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	Condenser fan ground	Ground	Ground stud EA, RH front fender	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Radiator fan plug (+) DTHD06-1-8S

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	Radiator fan +12 V	+12 V	Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 30	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Condenser fan plug (+) DTHD06-1-8S

FACE SOURCED



mating face view

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	Condenser fan +12 V	+12 V	Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 30	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

LH horn DT06-2S-CE05 + W2S

FACE SOURCED



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Horn LH +12 V	+12 V	Splice to: Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 87; RH horn · pin 1	0462-209-1631
2	14 Black	Horn LH ground	Ground	Splice to: Ground stud EA, RH front fender; RH horn · pin 2	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

RH horn DT06-2S-CE05 + W2S

FACE SOURCED



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	Horn RH +12 V	+12 V	Splice to: Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 87; LH horn · pin 1	0462-209-1631
2	14 Black	Horn RH ground	Ground	Splice to: Ground stud EA, RH front fender; LH horn · pin 2	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Radiator fan ground plug DTHD06-1-8S

FACE SOURCED



mating face view


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	Radiator fan ground	Ground	Ground stud EA, RH front fender	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

HeavyDC

Trunk relay block (fuel pump relay and fuse) ST185-FB-BATT rev 7

FACE NOT SOURCED

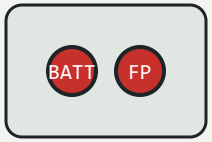

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
BATT	10 Red	Trunk relay block +12 V	Battery relay box +	Battery kill switch (trunk) · pin MAIN2	TBD
FP	10 Red	Fuel pump relay feed	Fuel pump relay feed	Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 30	36161

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness HeavyDC

Firewall battery + connector (cabin side) RL00801-50RE

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	`Battery + to the firewall connector`	Battery +	POWER box + bar, RADLOK+ stud	INTEGRAL
1	1/0 Red	`Battery + through the firewall`	Battery +	Firewall battery + connector (engine side) · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery RL00801-50BK

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	Battery - to the firewall connector	Battery - (engine ground)	POWER box NEG bar, RADLOK- stud	INTEGRAL
1	1/0 Black	Battery - through the firewall	Battery - (engine ground)	Firewall battery · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery RL00801-50BK

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	Engine ground to the block	Battery - (engine ground)	Engine block ground stud, main lug	INTEGRAL
1	1/0 Black	Battery - through the firewall	Battery - (engine ground)	Firewall battery · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery + connector (engine side) RL00801-50RE

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	`Battery + to the jump bus bar`	Battery +	Splice to: Starter B+ stud; Jump start post · pin 1; Alternator B+ stud	INTEGRAL
1	1/0 Red	`Battery + through the firewall`	Battery +	Firewall battery + connector (cabin side) · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Jump start post TBD

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	2 Red	`Jump post feed`	Jump post feed	Splice to: Starter B+ stud; Firewall battery + connector (engine side) · pin 1; Alternator B+ stud	TBD

Pin numbers: TBD · harness HeavyDC

RearFuel

Fuel pump TBD

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	`Fuel pump +12 V`	Fuel pump +12 V	Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 87	TBD
2	10 Black	`Fuel pump ground`	Fuel pump ground	Ground point BL, back panel centre	TBD

Pin numbers: TBD · harness RearFuel

Inline connector for fuel level sender (sender side) DT06-2S + W2S

FACE SOURCED



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	`Fuel level signal`	Fuel level signal	Fuel level sender · pin 1	`0462-201-16141`
2	20 Blue	`Fuel level ground`	Sensor ground B22 (ECU Gnd Out)	Fuel level sender · pin 2	`0462-201-16141`

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

Fuel level sender DT04-2P + W2P

FACE SOURCED



latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 White	Fuel level signal	Fuel level signal	Inline connector for fuel level sender (sender side) · pin 1	0460-202-1631
2	20 Blue	Fuel level ground	Fuel level ground	Inline connector for fuel level sender (sender side) · pin 2	0460-202-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

Dash

8-channel opto board TBD

FACE NOT SOURCED

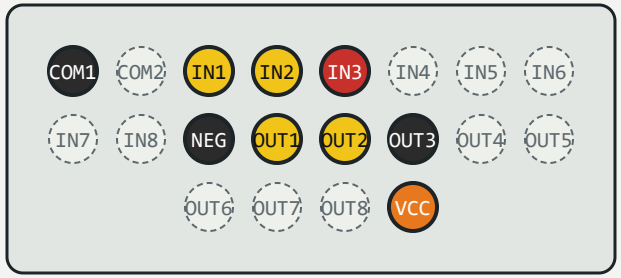

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
COM1	20 Black	Opto input return (brake / reverse / tail signals)	Opto COM ground	Splice to: Centre cluster ground input lead; RealDash Pi ground input lead; Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; A/C amplifier A15 (behind the glove box); ECUMaster CAN switch board · pin 2; Combination switch plug C16 (B), cruise switch	screw terminal (on the board)
COM2	*spare*				
IN1	16 Yellow	Brake on +12 V	Brake on +12 V	Stop lamp switch S9 (pedal)	screw terminal (on the board)
IN2	16 Yellow	Reverse to opto in 2	Reverse to opto in 2	Splice to: Firewall bulkhead connector (cabin side) · pin 78; Cowl plug IG2 (under the ECU)	screw terminal (on the board)
IN3	20 Red	Lights on +12 V	Lights on +12 V	Dimmer rheostat R10 (left of the steering wheel)	screw terminal (on the board)
IN4	*spare*				
IN5	*spare*				
IN6	*spare*				
IN7	*spare*				
IN8	*spare*				
NEG	20 Black	Opto board output ground (to the switch board)	Opto out ground	ECUMaster CAN switch board · pin 4	screw terminal (on the board)

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
OUT1	20 Yellow	Brake to CSB3 S7	Brake to CSB3 S7	ECUMaster CAN switch board · pin 21	screw terminal (on the board)
OUT2	20 Yellow	Reverse to CSB3 S8	Reverse to CSB3 S8	ECUMaster CAN switch board · pin 22	screw terminal (on the board)
OUT3	20 Black	Headlight sense to cluster	Headlight sense to cluster	Centre cluster headlight sense input	screw terminal (on the board)
OUT4	*spare*				
OUT5	*spare*				
OUT6	*spare*				
OUT7	*spare*				
OUT8	*spare*				
VCC	20 Orange	Opto +5 V	Opto +5 V	ECUMaster CAN switch board · pin 3	screw terminal (on the board)

Pin numbers: terminal names printed on the board · harness Dash

ECUMaster CAN switch board HD36-24-33SE

FACE SOURCED

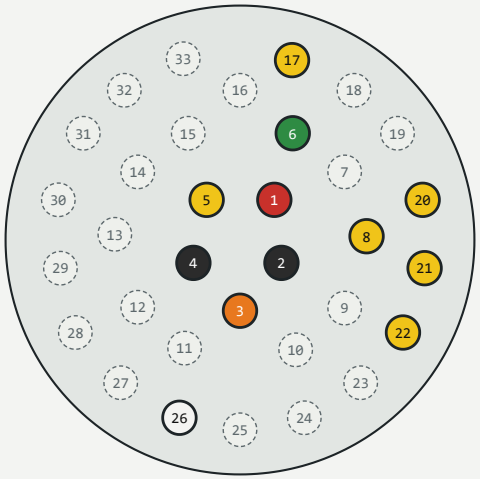

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`CSB3 +12 V`	CSB3 +12 V	Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-5	`0462-201-2031`
2	20 Black	`CSB3 ground`	CSB3 ground	Splice to: Centre cluster ground input lead; RealDash Pi ground input lead; Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; A/C amplifier A15 (behind the glove box); Combination switch plug C16 (B), cruise switch; 8-channel opto board · pin COM1	`0462-201-2031`
3	20 Orange	`Opto +5 V`	Opto +5 V	8-channel opto board · pin VCC	`0462-201-2031`
4	20 Black	`Opto board output ground (to the switch board)`	Opto out ground	8-channel opto board · pin NEG	`0462-201-2031`
5	20 Yellow	`CAN H to CSB3`	CAN H to CSB3	Splice to: Firewall bulkhead connector (cabin side) · pin 79; ECU plug C (CAN / comms) · pin 3; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	`0462-201-2031`
6	20 Green	`CAN L to CSB3`	CAN L to CSB3	Splice to: Firewall bulkhead connector (cabin side) · pin 80; ECU plug C (CAN / comms) · pin 4; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	`0462-201-2031`
7	*spare*				


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
8	20 Yellow	`Cruise ladder`	Cruise ladder	Splice to: Combination switch plug C16 (B), cruise switch; Cruise switch ladder resistor · pin 2	`0462-201-2031`
9	*spare*				
10	*spare*				
11	*spare*				
12	*spare*				
13	*spare*				
14	*spare*				
15	*spare*				
16	*spare*				
17	20 Yellow	`Cruise MAIN on`	Cruise MAIN on	Combination switch plug C16 (B), cruise switch	`0462-201-2031`
18	*spare*				
19	*spare*				
20	20 Yellow	`Clutch pedal switch`	Clutch pedal switch	Cruise control clutch switch C17	`0462-201-2031`
21	20 Yellow	`Brake to CSB3 S7`	Brake to CSB3 S7	8-channel opto board · pin OUT1	`0462-201-2031`
22	20 Yellow	`Reverse to CSB3 S8`	Reverse to CSB3 S8	8-channel opto board · pin OUT2	`0462-201-2031`
23	*spare*				
24	*spare*				
25	*spare*				
26	20 White	`Oil LED sink (CSB3)`	Oil LED sink (CSB3)	Oil pressure LED · pin 2	`0462-201-2031`
27	*spare*				
28	*spare*				
29	*spare*				
30	*spare*				

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
31	*spare*				
32	*spare*				
33	*spare*				

Pin numbers: TBD · harness Dash

RealDash Pi inline fuse 5 A `0FHM0003ZXJB + ATM-5`

FACE NOT SOURCED

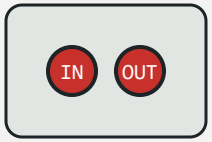

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
IN	16 Red	RealDash Pi +12 V from the radio ACC feed	Radio ACC +12 V (CIG & RADIO 15 A)	Cowl plug II1 (instrument panel centre)	solder splice onto the holder lead
OUT	20 Red	RealDash Pi +12 V (fused 5 A)	RealDash Pi +12 V (fused 5 A)	RealDash Pi +12 V input lead	solder splice onto the holder lead

Pin numbers: Littelfuse INLINE MINI Splashproof Fuse Holder datasheet: 0FHM0003ZXJB, 16 AWG GXL leads 93 mm each side, 20 A, 32 V DC, takes MINI blade fuses · harness Dash

WheelSpeed-Rear

Rear VR conditioner output plug LP-16-J05PE-02-001

FACE SOURCED

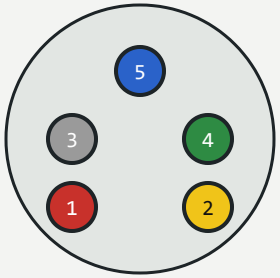


mating face view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+5 V to rear VR conditioner`	+5 V	Inline connector for rear wheel speed (sensor side) · pin 1	`solder cup (LP-16, S16)`
2	20 Yellow	`Rear VR conditioner ground`	Ground	Inline connector for rear wheel speed (sensor side) · pin 2	`solder cup (LP-16, S16)`
3	Shield	`Rear wheel speed shield drain`	Shield drain	Inline connector for rear wheel speed (sensor side) · pin 5	`solder cup (LP-16, S16)`
4	20 Green	`Rear left wheel speed`	Rear left wheel speed	Inline connector for rear wheel speed (sensor side) · pin 3	`solder cup (LP-16, S16)`
5	20 Blue	`Rear right wheel speed`	Rear right wheel speed	Inline connector for rear wheel speed (sensor side) · pin 4	`solder cup (LP-16, S16)`

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

Inline connector for rear wheel speed (sensor side) DT04-6P + W6P

FACE SOURCED

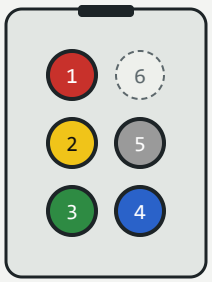

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+5 V to rear VR conditioner`	+5 V sensor supply	Rear VR conditioner output plug · pin 1	`0460-202-1631`
2	20 Yellow	`Rear VR conditioner ground`	Sensor ground B22 (ECU Gnd Out)	Rear VR conditioner output plug · pin 2	`0460-202-1631`
3	20 Green	`Rear left wheel speed`	Rear left wheel speed	Rear VR conditioner output plug · pin 4	`0460-202-1631`
4	20 Blue	`Rear right wheel speed`	Rear right wheel speed	Rear VR conditioner output plug · pin 5	`0460-202-1631`
5	Shield	`Rear wheel speed shield drain`	Shield drain B17	Rear VR conditioner output plug · pin 3	`0460-202-1631`
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

RL wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED




wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	RL wheel speed +	RL wheel speed +	Rear VR conditioner input plug · pin 1	0462-201-16141
2	20 White	RL wheel speed -	RL wheel speed -	Rear VR conditioner input plug · pin 2	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

Rear VR conditioner input plug LP-16-J05PE-02-001

FACE SOURCED

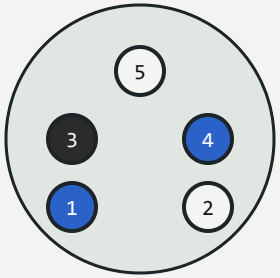

mating face view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	RL wheel speed +	RL wheel speed +	RL wheel speed sensor · pin 1	solder cup (LP-16, S16)
2	20 White	RL wheel speed -	RL wheel speed -	RL wheel speed sensor · pin 2	solder cup (LP-16, S16)
3	20 Black	Rear wheel speed sensor cable shield drains	Shield drain	Splice to: Shield, not connected at the device end	solder cup (LP-16, S16)
4	20 Blue	RR wheel speed +	RR wheel speed +	RR wheel speed sensor · pin 1	solder cup (LP-16, S16)
5	20 White	RR wheel speed -	RR wheel speed -	RR wheel speed sensor · pin 2	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

RR wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED



wire side (where the contacts go in) view · source


PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	RR wheel speed +	RR wheel speed +	Rear VR conditioner input plug · pin 4	0462-201-16141
2	20 White	RR wheel speed -	RR wheel speed -	Rear VR conditioner input plug · pin 5	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

WheelSpeed-Front

Front VR conditioner output plug LP-16-J05PE-02-001

FACE SOURCED

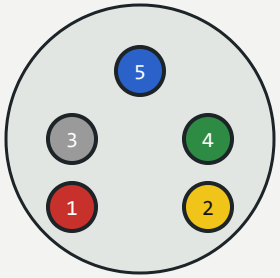


mating face view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	+5 V to front VR conditioner	+5 V	Inline connector for front wheel speed (sensor side) · pin 1	solder cup (LP-16, S16)
2	20 Yellow	Front VR conditioner ground	Ground	Inline connector for front wheel speed (sensor side) · pin 2	solder cup (LP-16, S16)
3	Shield	Front wheel speed shield drain	Shield drain	Inline connector for front wheel speed (sensor side) · pin 5	solder cup (LP-16, S16)
4	20 Green	FL conditioned out	FL conditioned out	Inline connector for front wheel speed (sensor side) · pin 3	solder cup (LP-16, S16)
5	20 Blue	FR conditioned out	FR conditioned out	Inline connector for front wheel speed (sensor side) · pin 4	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

Inline connector for front wheel speed (sensor side) DT04-6P + W6P

FACE SOURCED

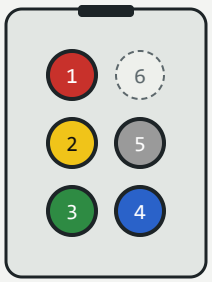

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`+5 V to front VR conditioner`	+5 V sensor supply	Front VR conditioner output plug · pin 1	`0460-202-1631`
2	20 Yellow	`Front VR conditioner ground`	Sensor ground A24 (ECU Gnd Out)	Front VR conditioner output plug · pin 2	`0460-202-1631`
3	20 Green	`FL conditioned out`	FL conditioned out	Front VR conditioner output plug · pin 4	`0460-202-1631`
4	20 Blue	`FR conditioned out`	FR conditioned out	Front VR conditioner output plug · pin 5	`0460-202-1631`
5	Shield	`Front wheel speed shield drain`	Shield drain A7	Front VR conditioner output plug · pin 3	`0460-202-1631`
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

FL wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED




wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	FL wheel speed +	FL wheel speed +	Front VR conditioner input plug · pin 1	0462-201-16141
2	20 White	FL wheel speed -	FL wheel speed -	Front VR conditioner input plug · pin 2	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

Front VR conditioner input plug LP-16-J05PE-02-001

FACE SOURCED

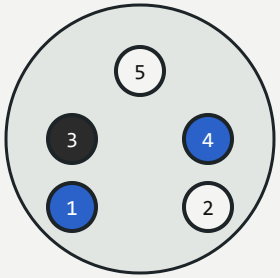

mating face view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	FL wheel speed +	FL wheel speed +	FL wheel speed sensor · pin 1	solder cup (LP-16, S16)
2	20 White	FL wheel speed -	FL wheel speed -	FL wheel speed sensor · pin 2	solder cup (LP-16, S16)
3	20 Black	Front wheel speed sensor cable shield drains	Shield drain	Splice to: Shield, not connected at the device end	solder cup (LP-16, S16)
4	20 Blue	FR wheel speed +	FR wheel speed +	FR wheel speed sensor · pin 1	solder cup (LP-16, S16)
5	20 White	FR wheel speed -	FR wheel speed -	FR wheel speed sensor · pin 2	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

FR wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED



wire side (where the contacts go in) view · source

PIN	WIRE	WIRE LABEL	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	FR wheel speed +	FR wheel speed +	Front VR conditioner input plug · pin 4	0462-201-16141
2	20 White	FR wheel speed -	FR wheel speed -	Front VR conditioner input plug · pin 5	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front