# ST185 Pin Chart

95 connectors · 68 faces sourced · 27 still a numbered list

Red +12 V  Black ground  White signal  Blue sensor return  Orange sensor supply  Yellow switch signal  Green CAN  Grey shield drain

Dashed = spare cavity  Cavity colour is the wire's insulation colour. From MASTER-wirelist.csv.

**Bussed plug** = a Deutsch DT plug whose bussed cap ties every pin together: a splice you can unplug. Each sits where its name says.

## Devices by harness

Each plug belongs to one harness (Dan 2026-11-01). Fuse boxes, relays, buses, studs and factory taps are hubs: several harnesses land on them.

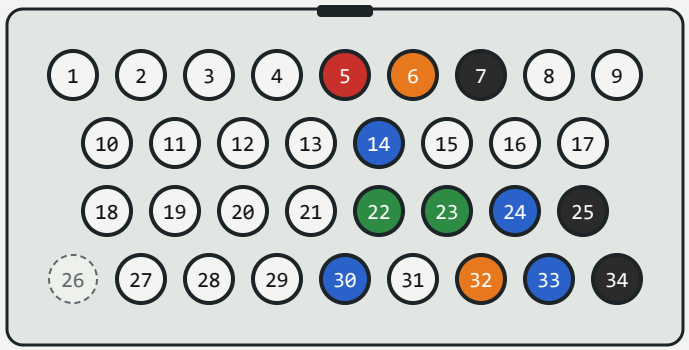
| HARNESS | DEVICES AND PLUGS |
|---|---|
| **AB-cabin** | +5 V sensor supply bus plug 1; +5 V sensor supply bus plug 2; A/C amplifier A15 (behind the glove box); A/C lock sensor resistor 4.7 k; Accelerator pedal sensor; Ambient air temp sensor A1 (front, 6 in pigtail); Auto A/C amplifier A32; Cam signal pull-up resistor 1.8 k to +8 V; ECU plug A; ECU plug C (CAN / comms); ECU wake diode (ignition feed); Firewall bulkhead connector (cabin side); Fuel level pull-up resistor 470 ohm to +5 V; Inline connector for front wheel speed (cabin side); Inline connector for fuel level sender (cabin side); Inline connector for rear wheel speed (cabin side); POWER box NEG bar, GND stud, ring 1 of 3; POWER box NEG bar, GND stud, ring 3 of 3; Sensor ground bus plug, ECU plug A; Sensor ground bus plug, ECU plug B; Shield drain bus plug, ECU plug A |
| **AB-engine** | Boost control solenoid; CAN bus end terminator plug (120 ohm); CAN-Lambda wideband controller; Cam sensor; Charge pipe air temp sensor; Coolant pressure sensor; Coolant temp sensor; Crank sensor; Electronic throttle body; Firewall bulkhead connector (engine side); Flex fuel sensor; Fuel pressure sensor; Gearbox speed sensor; Ignition coil 1; Ignition coil 2; Ignition coil 3; Ignition coil 4; Injector 1; Injector 2; Injector 3; Injector 4; Intake air temp sensor (manifold); Knock sensor; MAP sensor; Oil pressure sensor; Oil temp sensor; Power steering pump plug B; Power steering pump plug C; Reverse light switch; Starter solenoid trigger plug; Turbo speed sensor |
| **CabinPower** | DRL relay (K-DRL, LOGIC fuse box seat M8); DRL switch; Dash high-beam LED feed resistor 220 ohm; High-beam relay (K-HR, LOGIC fuse box seat M2); LOGIC box Bus 1, feed stud; LOGIC box Bus 2, feed stud; Low-beam relay (K-HL, LOGIC fuse box seat M1); POWER box AMI IN-1 fuse, output stud; POWER box AMI IN-2 fuse, output stud; POWER box AMI IN-4 fuse, output stud; POWER box AMI IN-5 fuse, output stud; POWER box AMI OUT-1 fuse, output stud; POWER box AMI OUT-2 fuse, output stud; POWER box AMI OUT-3 fuse, output stud; POWER box AMI OUT-4 fuse, output stud; POWER box AMI OUT-5 fuse, output stud; POWER box AMI OUT-6 fuse, output stud; POWER box NEG bar, GND stud, ring 2 of 3; Pop-up diode 1 (stalk side); Pop-up diode 2 (DRL switch side); Pop-up key-on relay (K-POD, LOGIC fuse box seat M10); Pop-up relay R8 (behind the LH dash); R-Y lead from cowl splice I2, cut near pop-up relay R8 (I2 side, behind the LH dash) |
| **EngineRoom-C** | A/C compressor A4; Alternator plug; Condenser fan ground plug; Condenser fan plug (+); Engine block ground stud, strap lug; Factory Y-R lead (A5 pin 4), cabin side; Front wiper motor F9 (cowl, driver side); Ground stud EA, RH front fender; Ground stud EB, LH front fender; Ground stud EB, block strap lug; LH front turn / clearance lamp F7; LH headlamp H1; LH horn; LH pop-up motor R2; LH side marker lamp F5; Power steering pump plug A; RH front turn / clearance lamp F8; RH headlamp H2; RH horn; RH pop-up motor R3; RH side marker lamp F6; Radiator fan ground plug; Radiator fan plug (+); Washer motor W1 (RH front corner, low) |
| **HeavyDC** | Alternator B+ stud; Battery; Battery + post (trunk); Engine block ground stud, main lug; Firewall battery; Firewall battery; Firewall battery + connector (cabin side); Firewall battery + connector (engine side); Ground stud ID, LH kick panel; Jump start post; POWER box + bar, BAT+ IN stud; POWER box + bar, RADLOK+ stud; POWER box NEG bar, BAT- stud; POWER box NEG bar, GND ID stud; POWER box NEG bar, GND IG stud; POWER box NEG bar, RADLOK- stud; Starter B+ stud; Trunk relay block (fuel pump relay and fuse) |
| **RearFuel** | Fuel level sender; Fuel pump; Ground point BL, back panel centre; Inline connector for fuel level sender (sender side) |

| HARNESS | DEVICES AND PLUGS |
|---|---|
| **Dash** | 8-channel opto board; Centre cluster +12 V input lead; Centre cluster CAN board leads; Centre cluster ground input lead; Centre cluster headlight sense input; Charge LED; Cluster plug C13 (B); Cluster plug C14 (C); Combination switch plug C16 (B), cruise switch; Cowl plug II1 (instrument panel centre); Cruise control clutch switch C17; Cruise switch ladder resistor; Dimmer rheostat R10 (left of the steering wheel); ECUMaster CAN switch board; High beam LED; Oil pressure LED; Park brake LED; RealDash Pi +12 V input lead; RealDash Pi CAN adapter leads; RealDash Pi ground input lead; RealDash Pi inline fuse 5 A; Stop lamp switch S9 (pedal); Turn LH LED; Turn RH LED |
| **AntiTheft** | Alarm +12 V point; Alarm door trigger point; Alarm ground point; Alarm ground ring terminal (chassis point at install); Alarm hood trigger point; Alarm ignition point; Alarm immobiliser output point; Alarm siren output point; Door switch line tap (J/B No.1 1B pin 11); Hood pin lead, front end (RH front corner); Shock sensor +12 V point; Siren + lead, engine-bay end; Siren ground lead, engine-bay end |
| **WheelSpeed-Front** | FL wheel speed sensor; FR wheel speed sensor; Front VR conditioner input plug; Front VR conditioner output plug; Inline connector for front wheel speed (sensor side) |
| **WheelSpeed-Rear** | Inline connector for rear wheel speed (sensor side); RL wheel speed sensor; RR wheel speed sensor; Rear VR conditioner input plug; Rear VR conditioner output plug |
| **Shared hubs** | A/C clutch relay (K-ACC, LOGIC fuse box seat M5): AB-cabin, CabinPower, EngineRoom-C; Battery kill switch (trunk): AB-cabin, EngineRoom-C, HeavyDC; Condenser fan relay (K-FAN2, POWER fuse box seat R5): AB-cabin, CabinPower, EngineRoom-C; Cowl plug IE1 (LH kick): CabinPower, EngineRoom-C; Cowl plug IG2 (under the ECU): AB-cabin, EngineRoom-C; DRL cut relay (beside the LOGIC box) (RLY-DRL): CabinPower, EngineRoom-C; ECU plug B: AB-cabin, AntiTheft; EFI main relay (K-EFI, POWER fuse box seat R2): AB-cabin, CabinPower; Fuel pump relay (K-FP, Trunk relay box seat K1): AB-cabin, HeavyDC, RearFuel; Ground bolt IG, RH kick panel: AB-cabin, HeavyDC; Horn relay (K-HORN, LOGIC fuse box seat M3): CabinPower, EngineRoom-C; Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7): AB-cabin, CabinPower; J/B No.1 (LH kick panel): AB-cabin, CabinPower, EngineRoom-C; LOGIC fuse and relay box (glove box): AB-cabin, CabinPower, Dash, EngineRoom-C; Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6): AB-cabin, CabinPower; Power steering pump relay (K-EPS, beside the POWER fuse box): AB-cabin, CabinPower, EngineRoom-C; R/B No.4 (RH kick): AB-cabin, CabinPower, EngineRoom-C; Radiator fan relay (K-FAN, POWER fuse box seat R4): AB-cabin, CabinPower, EngineRoom-C; Switched +12 V bus plug (glove box, by the LOGIC box): AB-cabin, CabinPower, RearFuel; Throttle body power relay (K-ETB, LOGIC fuse box seat M4): AB-cabin, CabinPower |

# AB-cabin

# ECU plug A 4-1437290-1

FACE SOURCED




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | `Injector 4 drive (-)` | Injector 4 drive (-) | Firewall bulkhead connector (cabin side) · pin 24 | 3-1447221-4 |
| 2 | 20 White | `Injector 3 drive (-)` | Injector 3 drive (-) | Firewall bulkhead connector (cabin side) · pin 23 | 3-1447221-4 |
| 3 | 20 White | `Injector 2 drive (-)` | Injector 2 drive (-) | Firewall bulkhead connector (cabin side) · pin 22 | 3-1447221-4 |
| 4 | 20 White | `Injector 1 drive (-)` | Injector 1 drive (-) | Firewall bulkhead connector (cabin side) · pin 21 | 3-1447221-4 |
| 5 | 18 Red | `ECU main +12 V` | Switched +12 V | Splice to: Switched +12 V bus plug (glove box, by the LOGIC box) · pin 2; Firewall bulkhead connector (cabin side) · pin 30; ECU wake diode (ignition feed) · pin 2 | 3-1447221-3 |
| 6 | 20 Orange | `+8 V sensor supply` | +8 V sensor supply | Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; Firewall bulkhead connector (cabin side) · pin 63; Firewall bulkhead connector (cabin side) · pin 67 | 3-1447221-4 |
| 7 | 20 Black | `Shield drains to ECU plug A pin 7` | Shield drain A7 | Shield drain bus plug, ECU plug A · pin 1 | 3-1447221-4 |
| 8 | 20 White | `Crank sensor signal` | Crank sensor signal | Firewall bulkhead connector (cabin side) · pin 74 | 3-1447221-4 |
| 9 | 20 White | `Cam sensor signal` | Cam sensor signal | Splice to: Firewall bulkhead connector (cabin side) · pin 64; Cam signal pull-up resistor 1.8 k to +8 V · pin 2 | 3-1447221-4 |
| 10 | 20 White | `Coil 4 trigger (IGT)` | Coil 4 trigger (IGT) | Firewall bulkhead connector (cabin side) · pin 12 | 3-1447221-4 |

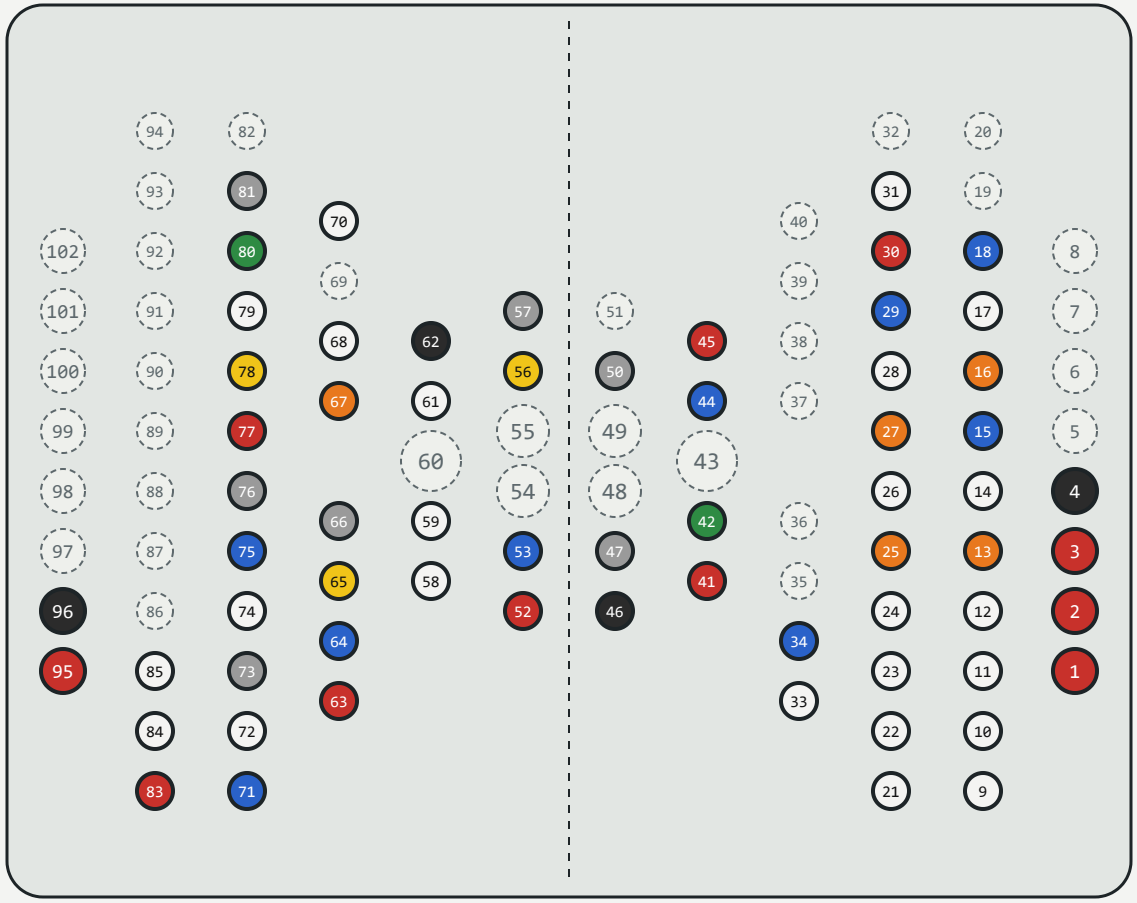
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 11 | 20 White | `Coil 3 trigger (IGT)` | Coil 3 trigger (IGT) | Firewall bulkhead connector (cabin side) · pin 11 | `3-1447221-4` |
| 12 | 20 White | `Coil 2 trigger (IGT)` | Coil 2 trigger (IGT) | Firewall bulkhead connector (cabin side) · pin 10 | `3-1447221-4` |
| 13 | 20 White | `Coil 1 trigger (IGT)` | Coil 1 trigger (IGT) | Firewall bulkhead connector (cabin side) · pin 9 | `3-1447221-4` |
| 14 | 20 Blue | `Pedal 1 signal main` | Pedal 1 signal main | Accelerator pedal sensor · pin 6 | `3-1447221-4` |
| 15 | 20 White | `Coolant temp signal` | Coolant temp signal | Firewall bulkhead connector (cabin side) · pin 70 | `3-1447221-4` |
| 16 | 20 White | `Intake temp signal` | Intake temp signal | Firewall bulkhead connector (cabin side) · pin 33 | `3-1447221-4` |
| 17 | 20 White | `MAP sensor signal` | MAP sensor signal | Firewall bulkhead connector (cabin side) · pin 17 | `3-1447221-4` |
| 18 | 20 White | `A/C cancel (ACT)` | A/C cancel (ACT) | A/C amplifier A15 (behind the glove box) | `3-1447221-4` |
| 19 | 18 White | `Fuel pump relay coil (-)` | Fuel pump relay (-) | Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 85 | `3-1447221-3` |
| 20 | 20 White | `ETB relay coil (-)` | ETB relay coil (-) | Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 85 | `3-1447221-4` |
| 21 | 20 White | `Boost solenoid drive (-)` | Boost solenoid (-) | Firewall bulkhead connector (cabin side) · pin 58 | `3-1447221-4` |
| 22 | 20 Green | `Throttle pos 1 main` | Throttle pos 1 main | Firewall bulkhead connector (cabin side) · pin 42 | `3-1447221-4` |
| 23 | 20 Green | `FL conditioned out` | FL conditioned out | Inline connector for front wheel speed (cabin side) · pin 3 | `3-1447221-4` |
| 24 | 18 Blue | `Sensor ground from ECU pin A24` | Sensor ground A24 (ECU Gnd Out) | Sensor ground bus plug, ECU plug A · pin 1 | `3-1447221-3` |
| 25 | 18 Black | `ECU power ground` | ECU power ground | Splice to: ECU plug A · pin 34; ECU plug B · pin 25; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3 | `3-1447221-3` |
| *26* | *spare* | | | | |
| 27 | 20 White | `Power steering pump speed` | EHPS pump speed | Firewall bulkhead connector (cabin side) · pin 84 | `3-1447221-4` |
| 28 | 18 White | `EFI relay coil (-)` | EFI relay coil (-) | EFI main relay (K-EFI, POWER fuse box seat R2) · terminal 85 | `3-1447221-3` |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 29 | 18 White | `Radiator fan relay coil (-)` | Rad fan relay (-) | Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 85 | `3-1447221-3` |
| 30 | 20 Blue | `Turbo speed signal` | Turbo speed signal | Firewall bulkhead connector (cabin side) · pin 53 | `3-1447221-4` |
| 31 | 20 White | `Flex fuel signal` | Flex fuel signal | Firewall bulkhead connector (cabin side) · pin 31 | `3-1447221-4` |
| 32 | 18 Orange | `+5 V sensor supply` | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 1 | `3-1447221-3` |
| 33 | 20 Blue | `Throttle pos 2 sub` | Throttle pos 2 sub | Firewall bulkhead connector (cabin side) · pin 44 | `3-1447221-4` |
| 34 | 18 Black | `ECU power ground` | ECU power ground | Splice to: ECU plug A · pin 25; ECU plug B · pin 25; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3 | `3-1447221-3` |

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin

# Firewall bulkhead connector (cabin side) DRB12-102PAE-L018 + DRBF-1A

FACE SOURCED




TE drawing view, numbers moulded on the insert

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | Coil +12 V feed | Ignition coil +12 V | LOGIC fuse and relay box (glove box) · fuse BUS2-3 | 0460-220-1231 |
| 2 | 14 Red | Injector +12 V feed | Injector +12 V | LOGIC fuse and relay box (glove box) · fuse BUS2-4 | 0460-220-1231 |
| 3 | 12 Red | Starter solenoid S | Starter solenoid S | R/B No.4 (RH kick) | 0460-220-1231 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 4 | 14 Black | Coil ground to the POWER box NEG bar | Ground | Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 2; Centre cluster ground input lead; RealDash Pi ground input lead; 8-channel opto board · pin COM1 | 0460-220-1231 |
| *5* | *spare* | | | | |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |
| 9 | 20 White | Coil 1 trigger (IGT) | Coil 1 trigger (IGT) | ECU plug A · pin 13 | 0460-202-1631 |
| 10 | 20 White | Coil 2 trigger (IGT) | Coil 2 trigger (IGT) | ECU plug A · pin 12 | 0460-202-1631 |
| 11 | 20 White | Coil 3 trigger (IGT) | Coil 3 trigger (IGT) | ECU plug A · pin 11 | 0460-202-1631 |
| 12 | 20 White | Coil 4 trigger (IGT) | Coil 4 trigger (IGT) | ECU plug A · pin 10 | 0460-202-1631 |
| 13 | 20 Orange | +5 V fuel pressure | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 6 | 0460-202-1631 |
| 14 | 20 White | Fuel pressure signal | Fuel pressure signal | ECU plug B · pin 16 | 0460-202-1631 |
| 15 | 20 Blue | Sensor ground trunk (fuel pressure, gearbox speed) | Sensor ground B22 (ECU Gnd Out) | Sensor ground bus plug, ECU plug B · pin 8 | 0460-202-1631 |
| 16 | 20 Orange | +5 V MAP sensor | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 3 | 0460-202-1631 |
| 17 | 20 White | MAP sensor signal | MAP sensor signal | ECU plug A · pin 17 | 0460-202-1631 |
| 18 | 20 Blue | MAP sensor ground | Sensor ground A24 (ECU Gnd Out) | Sensor ground bus plug, ECU plug A · pin 6 | 0460-202-1631 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *19* | *spare* | | | | |
| *20* | *spare* | | | | |
| 21 | 20 White | `Injector 1 drive (-)` | Injector 1 drive (-) | ECU plug A · pin 4 | `0460-202-1631` |
| 22 | 20 White | `Injector 2 drive (-)` | Injector 2 drive (-) | ECU plug A · pin 3 | `0460-202-1631` |
| 23 | 20 White | `Injector 3 drive (-)` | Injector 3 drive (-) | ECU plug A · pin 2 | `0460-202-1631` |
| 24 | 20 White | `Injector 4 drive (-)` | Injector 4 drive (-) | ECU plug A · pin 1 | `0460-202-1631` |
| 25 | 20 Orange | `+5 V coolant pressure` | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 7 | `0460-202-1631` |
| 26 | 20 White | `Coolant pressure signal` | Coolant pressure signal | ECU plug B · pin 23 | `0460-202-1631` |
| 27 | 20 Orange | `+5 V oil pressure` | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 5 | `0460-202-1631` |
| 28 | 20 White | `Oil pressure signal` | Oil pressure signal | ECU plug B · pin 15 | `0460-202-1631` |
| 29 | 20 Blue | `Sensor ground trunk (oil / coolant pressure, oil / charge temp)` | Sensor ground B22 (ECU Gnd Out) | Sensor ground bus plug, ECU plug B · pin 7 | `0460-202-1631` |
| 30 | 18 Red | `+12 V boost + flex` | Switched +12 V | Splice to: Switched +12 V bus plug (glove box, by the LOGIC box) · pin 2; ECU wake diode (ignition feed) · pin 2; ECU plug A · pin 5 | `0460-202-1631` |
| 31 | 20 White | `Flex fuel signal` | Flex fuel signal | ECU plug A · pin 31 | `0460-202-1631` |
| *32* | *spare* | | | | |
| 33 | 20 White | `Intake temp signal` | Intake temp signal | ECU plug A · pin 16 | `0460-202-1631` |
| 34 | 20 Blue | `Sensor ground trunk (intake temp, throttle, coolant temp)` | Sensor ground A24 (ECU Gnd Out) | Sensor ground bus plug, ECU plug A · pin 2 | `0460-202-1631` |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *35* | *spare* | | | | |
| *36* | *spare* | | | | |
| *37* | *spare* | | | | |
| *38* | *spare* | | | | |
| *39* | *spare* | | | | |
| *40* | *spare* | | | | |
| 41 | 20 Red | `+5 V throttle sensor` | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 2 | `0460-202-1631` |
| 42 | 20 Green | `Throttle pos 1 main` | Throttle pos 1 main | ECU plug A · pin 22 | `0460-202-1631` |
| *43* | *spare* | | | | |
| 44 | 20 Blue | `Throttle pos 2 sub` | Throttle pos 2 sub | ECU plug A · pin 33 | `0460-202-1631` |
| 45 | 18 Red | `ETB motor +` | ETB motor + | ECU plug B · pin 18 | `0460-202-1631` |
| 46 | 18 Black | `ETB motor -` | ETB motor - | ECU plug B · pin 26 | `0460-202-1631` |
| 47 | Shield | `Throttle shield` | Shield drain A7 | Shield drain bus plug, ECU plug A · pin 5 | `0460-202-1631` |
| *48* | *spare* | | | | |
| *49* | *spare* | | | | |
| 50 | Shield | `ETB motor shield` | Shield drain B17 | Splice to: Firewall bulkhead connector (cabin side) · pin 73; Inline connector for rear wheel speed (cabin side) · pin 5; ECU plug B · pin 17 | `0460-202-1631` |
| *51* | *spare* | | | | |
| 52 | 20 Red | `+5 V turbo speed` | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 4 | `0460-202-1631` |
| 53 | 20 Blue | `Turbo speed signal` | Turbo speed signal | ECU plug A · pin 30 | `0460-202-1631` |
| *54* | *spare* | | | | |
| *55* | *spare* | | | | |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 56 | 20 Yellow | `Turbo speed ground` | Sensor ground A24 (ECU Gnd Out) | Sensor ground bus plug, ECU plug A · pin 5 | `0460-202-1631` |
| 57 | Shield | `Turbo speed shield` | Shield drain A7 | Shield drain bus plug, ECU plug A · pin 4 | `0460-202-1631` |
| 58 | 20 White | `Boost solenoid drive (-)` | Boost solenoid (-) | ECU plug A · pin 21 | `0460-202-1631` |
| 59 | 20 White | `Charge temp signal` | Charge temp signal | ECU plug B · pin 7 | `0460-202-1631` |
| *60* | *spare* | | | | |
| 61 | 20 White | `Oil temp signal` | Oil temp signal | ECU plug B · pin 6 | `0460-202-1631` |
| 62 | 20 Black | `Flex fuel sensor return` | Ground | Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 2; Centre cluster ground input lead; RealDash Pi ground input lead; 8-channel opto board · pin COM1 | `0460-202-1631` |
| 63 | 20 Red | `+8 V to cam sensor` | +8 V sensor supply | Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; ECU plug A · pin 6; Firewall bulkhead connector (cabin side) · pin 67 | `0460-202-1631` |
| 64 | 20 Blue | `Cam sensor signal` | Cam sensor signal | Splice to: ECU plug A · pin 9; Cam signal pull-up resistor 1.8 k to +8 V · pin 2 | `0460-202-1631` |
| 65 | 20 Yellow | `Cam sensor ground` | Sensor ground A24 (ECU Gnd Out) | Sensor ground bus plug, ECU plug A · pin 4 | `0460-202-1631` |
| 66 | Shield | `Cam sensor shield` | Shield drain A7 | Shield drain bus plug, ECU plug A · pin 3 | `0460-202-1631` |
| 67 | 20 Orange | `+8 V to gearbox speed sensor` | +8 V sensor supply | Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; ECU plug A · pin 6; Firewall bulkhead connector (cabin side) · pin 63 | `0460-202-1631` |
| 68 | 20 White | `Gearbox speed signal` | Gearbox speed signal | ECU plug B · pin 29 | `0460-202-1631` |
| *69* | *spare* | | | | |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 70 | 20 White | Coolant temp signal | Coolant temp signal | ECU plug A · pin 15 | 0460-202-1631 |
| 71 | 20 Blue | Knock sensor signal | Knock sensor signal | ECU plug B · pin 9 | 0460-202-1631 |
| 72 | 20 White | Knock sensor (-) | Sensor ground B22 (ECU Gnd Out) | Sensor ground bus plug, ECU plug B · pin 6 | 0460-202-1631 |
| 73 | Shield | Knock sensor shield | Shield drain B17 | Splice to: Firewall bulkhead connector (cabin side) · pin 50; Inline connector for rear wheel speed (cabin side) · pin 5; ECU plug B · pin 17 | 0460-202-1631 |
| 74 | 20 White | Crank sensor signal | Crank sensor signal | ECU plug A · pin 8 | 0460-202-1631 |
| 75 | 20 Blue | Crank sensor ground | Sensor ground A24 (ECU Gnd Out) | Sensor ground bus plug, ECU plug A · pin 3 | 0460-202-1631 |
| 76 | Shield | Crank sensor shield | Shield drain A7 | Shield drain bus plug, ECU plug A · pin 2 | 0460-202-1631 |
| 77 | 16 Red | +12 V to reverse switch | +12 V to reverse switch | Cowl plug IG2 (under the ECU) | 0460-202-1631 |
| 78 | 16 Yellow | Switched +12 V from reverse switch | Reverse +12 V | Splice to: 8-channel opto board · pin IN2; Cowl plug IG2 (under the ECU) | 0460-202-1631 |
| 79 | 20 White | CAN H to CAN-Lambda | CAN H | Splice to: ECU plug C (CAN / comms) · pin 3; ECUMaster CAN switch board · pin 5; Centre cluster CAN board leads; RealDash Pi CAN adapter leads | 0460-202-1631 |
| 80 | 20 Green | CAN L to CAN-Lambda | CAN L | Splice to: ECU plug C (CAN / comms) · pin 4; ECUMaster CAN switch board · pin 6; Centre cluster CAN board leads; RealDash Pi CAN adapter leads | 0460-202-1631 |
| 81 | Shield | CAN-Lambda shield | CAN shield drain | Splice to: ECU plug C (CAN / comms) · pin 1; Shield, not connected at the device end | 0460-202-1631 |

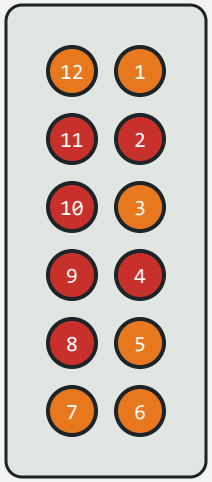
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *82* | *spare* | | | | |
| 83 | 18 Red | `Power steering pump enable +12 V` | EHPS enable +12 V | Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 87 | `0460-202-1631` |
| 84 | 20 White | `Power steering pump speed` | EHPS pump speed | ECU plug A · pin 27 | `0460-202-1631` |
| 85 | 18 White | `Power steering pump relay coil (-)` | EHPS relay coil (-) | Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 85 | `0460-202-1631` |
| *86* | *spare* | | | | |
| *87* | *spare* | | | | |
| *88* | *spare* | | | | |
| *89* | *spare* | | | | |
| *90* | *spare* | | | | |
| *91* | *spare* | | | | |
| *92* | *spare* | | | | |
| *93* | *spare* | | | | |
| *94* | *spare* | | | | |
| 95 | 14 Red | `CAN-Lambda +12 V` | CAN-Lambda +12 V | Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) · terminal 87 | `0460-220-1231` |
| 96 | 14 Black | `CAN-Lambda ground` | Ground | Splice to: Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 2; Centre cluster ground input lead; RealDash Pi ground input lead; 8-channel opto board · pin COM1 | `0460-220-1231` |
| *97* | *spare* | | | | |
| *98* | *spare* | | | | |
| *99* | *spare* | | | | |
| *100* | *spare* | | | | |
| *101* | *spare* | | | | |
| *102* | *spare* | | | | |

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-cabin

# +5 V sensor supply bus plug 1

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED




wire side (where the contacts go in) view · source

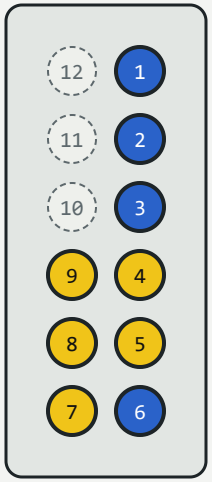
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Orange | +5 V sensor supply | +5 V sensor supply | ECU plug A · pin 32 | 0462-201-16141 |
| 2 | 20 Red | +5 V throttle sensor | +5 V sensor supply | Firewall bulkhead connector (cabin side) · pin 41 | 0462-201-16141 |
| 3 | 20 Orange | +5 V MAP sensor | +5 V sensor supply | Firewall bulkhead connector (cabin side) · pin 16 | 0462-201-16141 |
| 4 | 20 Red | +5 V turbo speed | +5 V sensor supply | Firewall bulkhead connector (cabin side) · pin 52 | 0462-201-16141 |
| 5 | 20 Orange | +5 V oil pressure | +5 V sensor supply | Firewall bulkhead connector (cabin side) · pin 27 | 0462-201-16141 |
| 6 | 20 Orange | +5 V fuel pressure | +5 V sensor supply | Firewall bulkhead connector (cabin side) · pin 13 | 0462-201-16141 |
| 7 | 20 Orange | +5 V coolant pressure | +5 V sensor supply | Firewall bulkhead connector (cabin side) · pin 25 | 0462-201-16141 |
| 8 | 20 Red | +5 V pedal sensor 1 | +5 V sensor supply | Accelerator pedal sensor · pin 4 | 0462-201-16141 |
| 9 | 20 Red | +5 V pedal sensor 2 | +5 V sensor supply | Accelerator pedal sensor · pin 1 | 0462-201-16141 |
| 10 | 20 Red | +5 V front VRC | +5 V sensor supply | Inline connector for front wheel speed (cabin side) · pin 1 | 0462-201-16141 |
| 11 | 20 Red | +5 V rear VRC | +5 V sensor supply | Inline connector for rear wheel speed (cabin side) · pin 1 | 0462-201-16141 |
| 12 | 20 Orange | +5 V to bus plug 2 | +5 V sensor supply | +5 V sensor supply bus plug 2 · pin 1 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Sensor ground bus plug, ECU plug A

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED




wire side (where the contacts go in) view · source

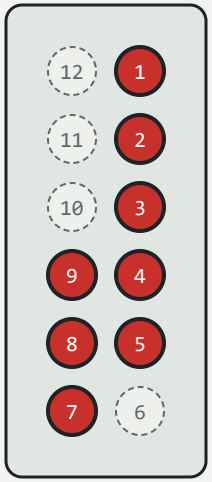
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Blue | Sensor ground from ECU pin A24 | Sensor ground A24 (ECU Gnd Out) | ECU plug A · pin 24 | 0462-201-16141 |
| 2 | 20 Blue | Sensor ground trunk (intake temp, throttle, coolant temp) | Sensor ground A24 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 34 | 0462-201-16141 |
| 3 | 20 Blue | Crank sensor ground | Sensor ground A24 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 75 | 0462-201-16141 |
| 4 | 20 Yellow | Cam sensor ground | Sensor ground A24 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 65 | 0462-201-16141 |
| 5 | 20 Yellow | Turbo speed ground | Sensor ground A24 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 56 | 0462-201-16141 |
| 6 | 20 Blue | MAP sensor ground | Sensor ground A24 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 18 | 0462-201-16141 |
| 7 | 20 Yellow | Pedal 1 ground | Sensor ground A24 (ECU Gnd Out) | Accelerator pedal sensor · pin 5 | 0462-201-16141 |
| 8 | 20 Yellow | Pedal 2 ground | Sensor ground A24 (ECU Gnd Out) | Accelerator pedal sensor · pin 2 | 0462-201-16141 |
| 9 | 20 Yellow | Front VRC ground | Sensor ground A24 (ECU Gnd Out) | Inline connector for front wheel speed (cabin side) · pin 2 | 0462-201-16141 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

## Switched +12 V bus plug (glove box, by the LOGIC box) DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED




wire side (where the contacts go in) view · source

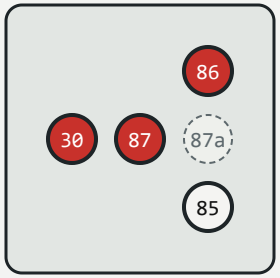
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | Switched +12 V feed | Switched +12 V | LOGIC fuse and relay box (glove box) · fuse BUS2-2 | 0462-201-16141 |
| 2 | 18 Red | Switched +12 V feed | Switched +12 V | Splice to: ECU wake diode (ignition feed) · pin 2; ECU plug A · pin 5; Firewall bulkhead connector (cabin side) · pin 30 | 0462-201-16141 |
| 3 | 18 Red | Fuel pump relay coil + | Switched +12 V | Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 86 | 0462-201-16141 |
| 4 | 18 Red | Radiator fan relay coil + | Switched +12 V | Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 86 | 0462-201-16141 |
| 5 | 20 Red | ETB relay coil + | Switched +12 V | Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 86 | 0462-201-16141 |
| 7 | 18 Red | Condenser fan relay coil + | Switched +12 V | Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 86 | 0462-201-16141 |
| 8 | 18 Red | Power steering pump relay coil + | Switched +12 V | Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 86 | 0462-201-16141 |
| 9 | 18 Red | Power steering enable relay coil + | Switched +12 V | Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 86 | 0462-201-16141 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, CabinPower, RearFuel

# Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) 6-1419137-4

FACE SOURCED



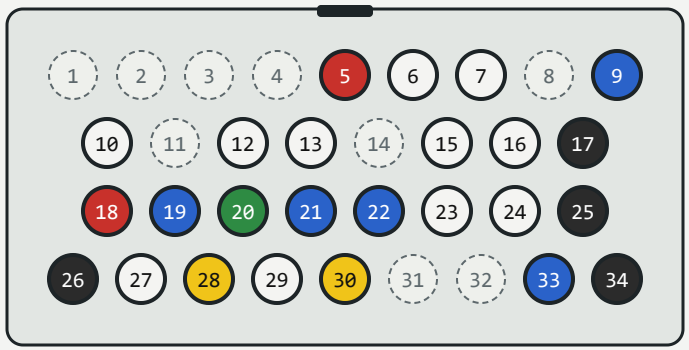

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 18 Red | Power steering enable relay +12 V in | +12 V in | LOGIC fuse and relay box (glove box) · fuse BUS2-7 | 42281-1 |
| 85 | 18 White | Power steering enable relay coil (-) | Coil (-) | ECU plug B · pin 12 | 280919-2 |
| 86 | 18 Red | Power steering enable relay coil + | Coil + | Switched +12 V bus plug (glove box, by the LOGIC box) · pin 9 | 280919-2 |
| 87 | 18 Red | Power steering pump enable +12 V | +12 V out | Firewall bulkhead connector (cabin side) · pin 83 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

# ECU plug B 4-1437290-0

FACE SOURCED




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *1* | *spare* | | | | |
| *2* | *spare* | | | | |
| *3* | *spare* | | | | |
| *4* | *spare* | | | | |
| 5 | 18 Red | `Throttle motor +12 V to ECU` | V Ethrottle (ETB H-bridge supply) | Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 87 | 3-1447221-3 |
| 6 | 20 White | `Oil temp signal` | Oil temp signal | Firewall bulkhead connector (cabin side) · pin 61 | 3-1447221-4 |
| 7 | 20 White | `Charge temp signal` | Charge temp signal | Firewall bulkhead connector (cabin side) · pin 59 | 3-1447221-4 |
| *8* | *spare* | | | | |
| 9 | 20 Blue | `Knock sensor signal` | Knock sensor signal | Firewall bulkhead connector (cabin side) · pin 71 | 3-1447221-4 |
| 10 | 20 White | `Engine speed (tacho)` | Engine speed (tacho) | Splice to: A/C amplifier A15 (behind the glove box); A/C lock sensor resistor 4.7 k · pin 1 | 3-1447221-4 |
| *11* | *spare* | | | | |
| 12 | 18 White | `Power steering enable relay coil (-)` | EPS enable relay (-) | Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 85 | 3-1447221-3 |
| 13 | 18 White | `Condenser fan relay coil (-)` | Cond fan relay (-) | Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 85 | 3-1447221-3 |

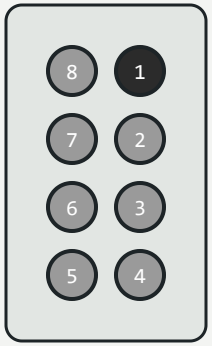
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *14* | *spare* | | | | |
| 15 | ☐ 20 White | `Oil pressure signal` | Oil pressure signal | Firewall bulkhead connector (cabin side) · pin 28 | `3-1447221-4` |
| 16 | ☐ 20 White | `Fuel pressure signal` | Fuel pressure signal | Firewall bulkhead connector (cabin side) · pin 14 | `3-1447221-4` |
| 17 | ■ 20 Black | `Shield drains to ECU plug B pin 17` | Shield drain B17 | Splice to: Firewall bulkhead connector (cabin side) · pin 73; Firewall bulkhead connector (cabin side) · pin 50; Inline connector for rear wheel speed (cabin side) · pin 5 | `3-1447221-4` |
| 18 | ■ 18 Red | `ETB motor +` | ETB motor + | Firewall bulkhead connector (cabin side) · pin 45 | `3-1447221-3` |
| 19 | ■ 20 Blue | `Rear right wheel speed` | Rear right wheel speed | Inline connector for rear wheel speed (cabin side) · pin 4 | `3-1447221-4` |
| 20 | ■ 20 Green | `Rear left wheel speed` | Rear left wheel speed | Inline connector for rear wheel speed (cabin side) · pin 3 | `3-1447221-4` |
| 21 | ■ 20 Blue | `FR conditioned out` | FR conditioned out | Inline connector for front wheel speed (cabin side) · pin 4 | `3-1447221-4` |
| 22 | ■ 18 Blue | `Sensor ground from ECU pin B22` | Sensor ground B22 (ECU Gnd Out) | Sensor ground bus plug, ECU plug B · pin 1 | `3-1447221-3` |
| 23 | ☐ 20 White | `Coolant pressure signal` | Coolant pressure signal | Firewall bulkhead connector (cabin side) · pin 26 | `3-1447221-4` |
| 24 | ☐ 20 White | `Fuel level signal` | Fuel level signal | Splice to: Inline connector for fuel level sender (cabin side) · pin 1; Fuel level pull-up resistor 470 ohm to +5 V · pin 1 | `3-1447221-4` |
| 25 | ■ 18 Black | `ECU power ground` | ECU power ground | Splice to: ECU plug A · pin 25; ECU plug A · pin 34; ECU plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3 | `3-1447221-3` |
| 26 | ■ 18 Black | `ETB motor -` | ETB motor - | Firewall bulkhead connector (cabin side) · pin 46 | `3-1447221-3` |
| 27 | ☐ 20 White | `Anti-theft input` | Anti-theft input | Alarm immobiliser output point | `3-1447221-4` |
| 28 | ■ 18 Yellow | `Ignition switch sense` | Ignition +12 V (IGN fuse) | J/B No.1 (LH kick panel) | `3-1447221-3` |
| 29 | ☐ 20 White | `Gearbox speed signal` | Gearbox speed signal | Firewall bulkhead connector (cabin side) · pin 68 | `3-1447221-4` |
| 30 | ■ 20 Yellow | `Start request` | Start request | LOGIC fuse and relay box (glove box) · fuse BUS2-13 | `3-1447221-4` |
| *31* | *spare* | | | | |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *32* | *spare* | | | | |
| 33 | 20 Blue | `Pedal 2 signal sub` | Pedal 2 signal sub | Accelerator pedal sensor · pin 3 | `3-1447221-4` |
| 34 | 18 Black | `ECU power ground` | ECU power ground | Splice to: ECU plug A · pin 25; ECU plug A · pin 34; ECU plug B · pin 25; POWER box NEG bar, GND stud, ring 1 of 3 | `3-1447221-3` |

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, AntiTheft

# Shield drain bus plug, ECU plug A DT06-08SA + W8S; DT04-08PA-P021 (bussed receptacle)

FACE SOURCED



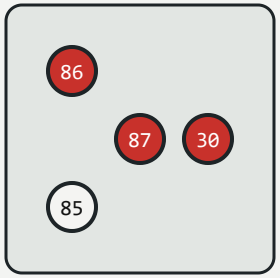

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Black | Shield drains to ECU plug A pin 7 | Shield drain A7 | ECU plug A · pin 7 | 0462-201-16141 |
| 2 | Shield | Crank sensor shield | Shield drain A7 | Firewall bulkhead connector (cabin side) · pin 76 | 0462-201-16141 |
| 3 | Shield | Cam sensor shield | Shield drain A7 | Firewall bulkhead connector (cabin side) · pin 66 | 0462-201-16141 |
| 4 | Shield | Turbo speed shield | Shield drain A7 | Firewall bulkhead connector (cabin side) · pin 57 | 0462-201-16141 |
| 5 | Shield | Throttle shield | Shield drain A7 | Firewall bulkhead connector (cabin side) · pin 47 | 0462-201-16141 |
| 6 | Shield | Pedal 1 cable shield | Shield drain A7 | Shield, not connected at the device end | 0462-201-16141 |
| 7 | Shield | Pedal 2 cable shield | Shield drain A7 | Shield, not connected at the device end | 0462-201-16141 |
| 8 | Shield | Front wheel speed shield drain | Shield drain A7 | Inline connector for front wheel speed (cabin side) · pin 5 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Fuel pump relay (K-FP, Trunk relay box seat K1) V23132-A2001-B200

FACE SOURCED



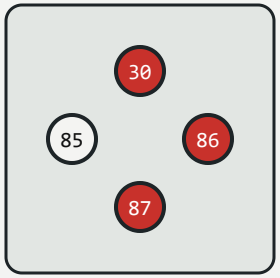

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | `Fuel pump relay feed` | +12 V in | Trunk relay block (fuel pump relay and fuse) · FP fuse (40 A) | TBD |
| 85 | 18 White | `Fuel pump relay coil (-)` | Coil (-) | ECU plug A · pin 19 | 282110-1 |
| 86 | 18 Red | `Fuel pump relay coil +` | Coil + | Switched +12 V bus plug (glove box, by the LOGIC box) · pin 3 | 282110-1 |
| 87 | 10 Red | `Fuel pump +12 V` | +12 V out | Fuel pump · pin 1 | TBD |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, HeavyDC, RearFuel

# Radiator fan relay (K-FAN, POWER fuse box seat R4) `1-1414147-0`

FACE SOURCED



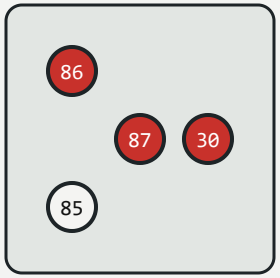

bottom (terminal side) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | `Radiator fan +12 V` | +12 V out | Radiator fan plug (+) · pin 1 | 280756-4 |
| 85 | 18 White | `Radiator fan relay coil (-)` | Coil (-) | ECU plug A · pin 29 | 42281-1 |
| 86 | 18 Red | `Radiator fan relay coil +` | Coil + | Switched +12 V bus plug (glove box, by the LOGIC box) · pin 4 | 42281-1 |
| 87 | 10 Red | `Radiator fan relay feed` | +12 V in | POWER box AMI IN-4 fuse, output stud | 280756-4 |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

## Power steering pump relay (K-EPS, beside the POWER fuse box) V23132-A2001-B200

FACE SOURCED



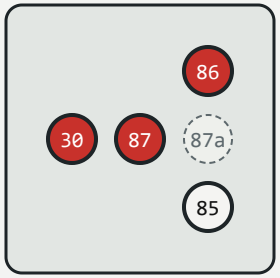

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 8 Red | Power steering pump relay feed | +12 V in | POWER box AMI OUT-6 fuse, output stud | TBD |
| 85 | 18 White | Power steering pump relay coil (-) | Coil (-) | Firewall bulkhead connector (cabin side) · pin 85 | 282110-1 |
| 86 | 18 Red | Power steering pump relay coil + | Coil + | Switched +12 V bus plug (glove box, by the LOGIC box) · pin 8 | 282110-1 |
| 87 | 8 Red | Power steering pump +12 V | +12 V out | Power steering pump plug A · pin 1 | TBD |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

# A/C clutch relay (K-ACC, LOGIC fuse box seat M5) 6-1419137-4

FACE SOURCED



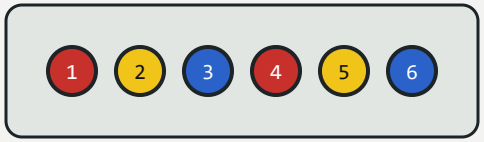

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 16 Red | +12 V to A/C clutch relay | +12 V in | Splice to: A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 86; LOGIC fuse and relay box (glove box) · fuse BUS2-8 | 42281-1 |
| 85 | 18 White | A/C clutch relay coil (-) | Coil (-) | A/C amplifier A15 (behind the glove box) | 280919-2 |
| 86 | 18 Red | A/C clutch relay coil+ | Coil + | Splice to: A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 30; LOGIC fuse and relay box (glove box) · fuse BUS2-8 | 280919-2 |
| 87 | 16 Red | A/C clutch +12 V | +12 V out | A/C compressor A4 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

# Accelerator pedal sensor TBD

FACE NOT SOURCED



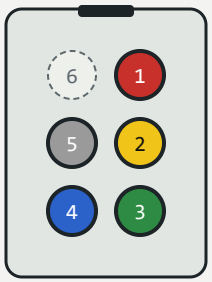

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `+5 V pedal sensor 2` | +5 V (sensor 2) | +5 V sensor supply bus plug 1 · pin 9 | TBD |
| 2 | 20 Yellow | `Pedal 2 ground` | Ground (sensor 2) | Sensor ground bus plug, ECU plug A · pin 8 | TBD |
| 3 | 20 Blue | `Pedal 2 signal sub` | Signal 2 (sub) | ECU plug B · pin 33 | TBD |
| 4 | 20 Red | `+5 V pedal sensor 1` | +5 V (sensor 1) | +5 V sensor supply bus plug 1 · pin 8 | TBD |
| 5 | 20 Yellow | `Pedal 1 ground` | Ground (sensor 1) | Sensor ground bus plug, ECU plug A · pin 7 | TBD |
| 6 | 20 Blue | `Pedal 1 signal main` | Signal 1 (main) | ECU plug A · pin 14 | TBD |

Pin numbers: TBD · harness AB-cabin

# Inline connector for front wheel speed (cabin side) DT06-6S + W6S

FACE SOURCED




wire side (where the contacts go in) view · source

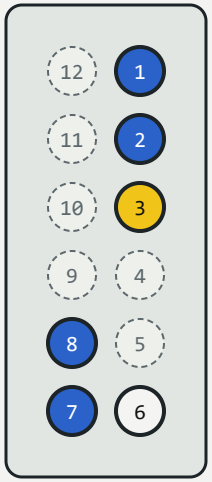
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `+5 V front VRC` | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 10 | 0462-201-1631 |
| 2 | 20 Yellow | `Front VRC ground` | Sensor ground A24 (ECU Gnd Out) | Sensor ground bus plug, ECU plug A · pin 9 | 0462-201-1631 |
| 3 | 20 Green | `FL conditioned out` | FL conditioned out | ECU plug A · pin 23 | 0462-201-1631 |
| 4 | 20 Blue | `FR conditioned out` | FR conditioned out | ECU plug B · pin 21 | 0462-201-1631 |
| 5 | Shield | `Front wheel speed shield drain` | Shield drain A7 | Shield drain bus plug, ECU plug A · pin 8 | 0462-201-1631 |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Sensor ground bus plug, ECU plug B

DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)

FACE SOURCED



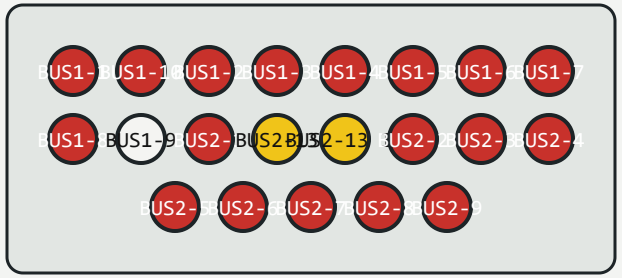

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Blue | Sensor ground from ECU pin B22 | Sensor ground B22 (ECU Gnd Out) | ECU plug B · pin 22 | 0462-201-16141 |
| 2 | 20 Blue | Fuel level ground | Sensor ground B22 (ECU Gnd Out) | Inline connector for fuel level sender (cabin side) · pin 2 | 0462-201-16141 |
| 3 | 20 Yellow | Rear VRC ground | Sensor ground B22 (ECU Gnd Out) | Inline connector for rear wheel speed (cabin side) · pin 2 | 0462-201-16141 |
| 6 | 20 White | Knock sensor (-) | Sensor ground B22 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 72 | 0462-201-16141 |
| 7 | 20 Blue | Sensor ground trunk (oil / coolant pressure, oil / charge temp) | Sensor ground B22 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 29 | 0462-201-16141 |
| 8 | 20 Blue | Sensor ground trunk (fuel pressure, gearbox speed) | Sensor ground B22 (ECU Gnd Out) | Firewall bulkhead connector (cabin side) · pin 15 | 0462-201-16141 |
| *9* | *spare* | | | | |
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# LOGIC fuse and relay box (glove box) ST185-FB-LOGIC rev 7

FACE NOT SOURCED



layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| BUS1-1 | 18 Red | EFI relay coil + | EFI relay coil + | EFI main relay (K-EFI, POWER fuse box seat R2) · terminal 86 | 1-968849-1 |
| BUS1-10 | 16 Red | ETB relay +12 V in | ETB relay +12 V in | Throttle body power relay (K-ETB, LOGIC fuse box seat M4) · terminal 30 | 1-968851-1 |
| BUS1-2 | 14 Red | Low beam +12 V feed | Low-beam fuse +12 V | Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86; DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 86 | 1-968851-1 |
| BUS1-3 | 14 Red | High beam +12 V feed | High-beam fuse +12 V | Splice to: High-beam relay (K-HR, LOGIC fuse box seat M2) · terminal 30 | 1-968851-1 |
| BUS1-4 | 14 Red | Hazard / horn +12 V feed | Hazard and horn fuse +12 V | Splice to: Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 30; Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 86 | 1-968851-1 |
| BUS1-5 | 14 Red | Dome feed to J/B No.1 | Dome feed to J/B No.1 | J/B No.1 (LH kick panel) | 1-968851-1 |
| BUS1-6 | 14 Red | Ignition-on relay +12 V in | ON relay +12 V in | Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) · terminal 30 | 1-968851-1 |
| BUS1-7 | 20 Red | Alarm +12 V | Alarm +12 V | Splice to: Alarm +12 V point | 1-968849-1 |
| BUS1-8 | 20 Red | Shock sensor +12 V | Shock sensor +12 V | Splice to: Shock sensor +12 V point | 1-968849-1 |
| BUS1-9 | 20 White | Alternator battery sense (S) | Alternator battery sense (S) | Alternator plug · pin 1 | 1-968849-1 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| BUS2-1 | 14 Red | DRL +12 V feed | DRL fuse +12 V | Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 30; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 86; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 86 | 1-968851-1 |
| BUS2-13 | 20 Yellow | Start request | Start request | ECU plug B · pin 30 | 1-968849-1 |
| BUS2-13 IN | 20 Yellow | Start switch ST1 feed | Start switch ST1 feed | R/B No.4 (RH kick) | 1-968849-1 |
| BUS2-2 | 16 Red | Switched +12 V feed | Switched +12 V | Switched +12 V bus plug (glove box, by the LOGIC box) · pin 1 | 1-968851-1 |
| BUS2-3 | 14 Red | Coil +12 V feed | Ignition coil +12 V | Firewall bulkhead connector (cabin side) · pin 1 | 1-968851-1 |
| BUS2-4 | 14 Red | Injector +12 V feed | Injector +12 V | Firewall bulkhead connector (cabin side) · pin 2 | 1-968851-1 |
| BUS2-5 | 20 Red | CSB3 +12 V | CSB3 +12 V | Splice to: ECUMaster CAN switch board · pin 1 | 1-968849-1 |
| BUS2-6 | 16 Red | Cluster +12 V | Cluster +12 V | Splice to: Centre cluster +12 V input lead | 1-968851-1 |
| BUS2-7 | 18 Red | Power steering enable relay +12 V in | EPS enable +12 V in | Power steering pump enable relay (K-EPS-EN, LOGIC fuse box seat M6) · terminal 30 | 1-968849-1 |
| BUS2-8 | 16 Red | A/C clutch relay feed (ACC fuse) | A/C clutch relay +12 V (ACC fuse) | Splice to: A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 86; A/C clutch relay (K-ACC, LOGIC fuse box seat M5) · terminal 30 | 1-968851-1 |
| BUS2-9 | 20 Red | Alarm ignition +12 V | Alarm ignition +12 V | Splice to: Alarm ignition point | 1-968849-1 |

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness AB-cabin, CabinPower, EngineRoom-C, Dash

# Inline connector for fuel level sender (cabin side) DT04-2P + W2P

FACE SOURCED



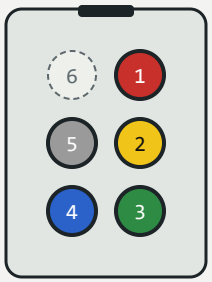

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | `Fuel level signal` | Fuel level signal | Splice to: ECU plug B · pin 24; Fuel level pull-up resistor 470 ohm to +5 V · pin 1 | `0460-202-1631` |
| 2 | 20 Blue | `Fuel level ground` | Sensor ground B22 (ECU Gnd Out) | Sensor ground bus plug, ECU plug B · pin 2 | `0460-202-1631` |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

## Inline connector for rear wheel speed (cabin side) DT06-6S + W6S

FACE SOURCED



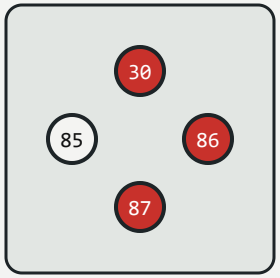

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `+5 V rear VRC` | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 11 | 0462-201-1631 |
| 2 | 20 Yellow | `Rear VRC ground` | Sensor ground B22 (ECU Gnd Out) | Sensor ground bus plug, ECU plug B · pin 3 | 0462-201-1631 |
| 3 | 20 Green | `Rear left wheel speed` | Rear left wheel speed | ECU plug B · pin 20 | 0462-201-1631 |
| 4 | 20 Blue | `Rear right wheel speed` | Rear right wheel speed | ECU plug B · pin 19 | 0462-201-1631 |
| 5 | Shield | `Rear wheel speed shield drain` | Shield drain B17 | Splice to: Firewall bulkhead connector (cabin side) · pin 73; Firewall bulkhead connector (cabin side) · pin 50; ECU plug B · pin 17 | 0462-201-1631 |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Condenser fan relay (K-FAN2, POWER fuse box seat R5) `1-1393304-0`

FACE SOURCED




bottom (terminal side) view · source

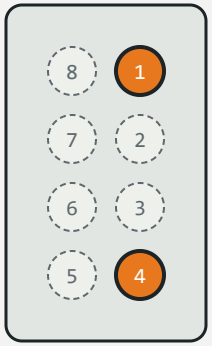
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | `Condenser fan +12 V` | +12 V out | Condenser fan plug (+) · pin 1 | 280756-4 |
| 85 | 18 White | `Condenser fan relay coil (-)` | Coil (-) | ECU plug B · pin 13 | 42281-1 |
| 86 | 18 Red | `Condenser fan relay coil +` | Coil + | Switched +12 V bus plug (glove box, by the LOGIC box) · pin 7 | 42281-1 |
| 87 | 10 Red | `Condenser fan relay feed` | +12 V in | POWER box AMI IN-5 fuse, output stud | 280756-4 |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

# +5 V sensor supply bus plug 2

DT06-08SA + W8S; DT04-08PA-P021 (bussed receptacle)

FACE SOURCED



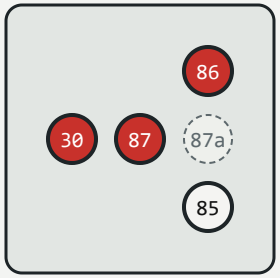

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Orange | +5 V to bus plug 2 | +5 V sensor supply | +5 V sensor supply bus plug 1 · pin 12 | 0462-201-16141 |
| *2* | *spare* | | | | |
| 4 | 20 Orange | +5 V to fuel level pull-up | +5 V sensor supply | Fuel level pull-up resistor 470 ohm to +5 V · pin 2 | 0462-201-16141 |
| *5* | *spare* | | | | |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

# Throttle body power relay (K-ETB, LOGIC fuse box seat M4) 4-1904124-2

FACE SOURCED



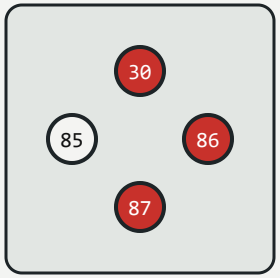

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 16 Red | ETB relay +12 V in | +12 V in | LOGIC fuse and relay box (glove box) · fuse BUS1-10 | 42281-1 |
| 85 | 20 White | ETB relay coil (-) | Coil (-) | ECU plug A · pin 20 | 280919-2 |
| 86 | 20 Red | ETB relay coil + | Coil + | Switched +12 V bus plug (glove box, by the LOGIC box) · pin 5 | 280919-2 |
| 87 | 18 Red | Throttle motor +12 V to ECU | +12 V out | ECU plug B · pin 5 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

# EFI main relay (K-EFI, POWER fuse box seat R2) 1-1414147-0

FACE SOURCED



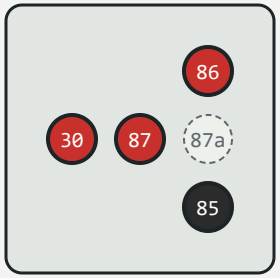

bottom (terminal side) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 10 Red | LOGIC Bus 2 feed from the EFI relay | +12 V out | LOGIC box Bus 2, feed stud | 280756-4 |
| 85 | 18 White | EFI relay coil (-) | Coil (-) | ECU plug A · pin 28 | 42281-1 |
| 86 | 18 Red | EFI relay coil + | Coil + | LOGIC fuse and relay box (glove box) · fuse BUS1-1 | 42281-1 |
| 87 | 12 Red | EFI relay feed | +12 V in | POWER box AMI IN-2 fuse, output stud | 280756-4 |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

# Ignition-on relay (CAN-Lambda feed) (K-ON, LOGIC fuse box seat M7) 6-1419137-4

FACE SOURCED



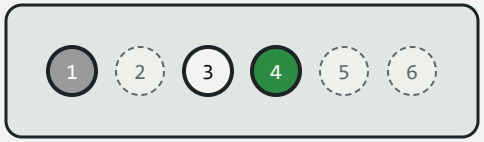

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 14 Red | Ignition-on relay +12 V in | +12 V in | LOGIC fuse and relay box (glove box) · fuse BUS1-6 | 42281-1 |
| 85 | 20 Black | Ignition-on relay coil (-) | Coil (-) | POWER box NEG bar, GND stud, ring 2 of 3 | 280919-2 |
| 86 | 18 Red | Ignition-on relay coil + (IGN fuse) | Coil + | J/B No.1 (LH kick panel) | 280919-2 |
| 87 | 14 Red | CAN-Lambda +12 V | +12 V out | Firewall bulkhead connector (cabin side) · pin 95 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

## ECU plug C (CAN / comms) none (generic round 6-pin plug, not bought)

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | Shield | ECU CAN shield | CAN shield drain | Splice to: Shield, not connected at the device end; Firewall bulkhead connector (cabin side) · pin 81 | none (contact comes with the plug) |
| 2 | *spare* | | | | |
| 3 | 20 White | CAN 1 high | CAN H | Splice to: Firewall bulkhead connector (cabin side) · pin 79; ECUMaster CAN switch board · pin 5; Centre cluster CAN board leads; RealDash Pi CAN adapter leads | none (contact comes with the plug) |
| 4 | 20 Green | CAN 1 low | CAN L | Splice to: Firewall bulkhead connector (cabin side) · pin 80; ECUMaster CAN switch board · pin 6; Centre cluster CAN board leads; RealDash Pi CAN adapter leads | none (contact comes with the plug) |
| 5 | *spare* | | | | |
| 6 | *spare* | | | | |

Pin numbers: PCLink help page Communications Port Pinout (G4X / Xtreme / Fury wire-in), looking into the ECU connector · harness AB-cabin

## Battery kill switch (trunk) 52-45780

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

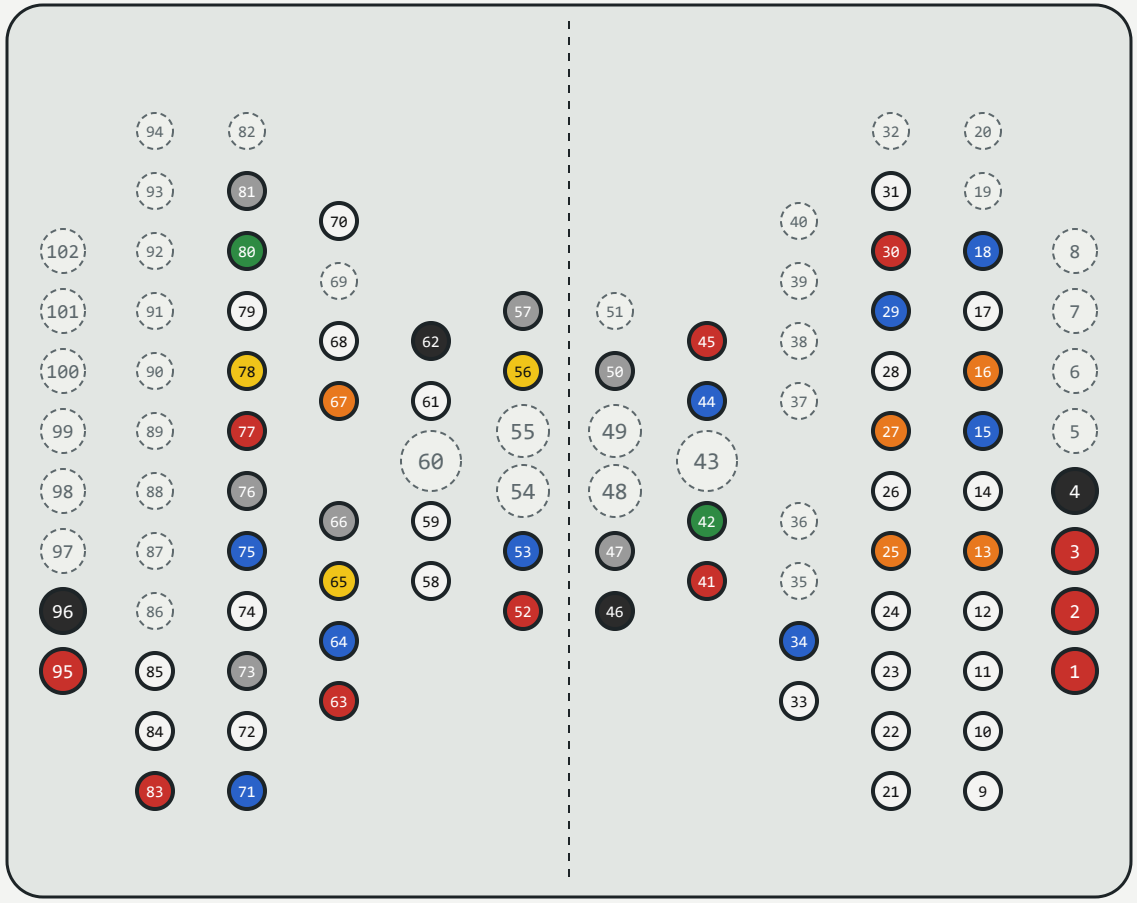
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| ALT1 | 16 Red | Alternator IG to the kill switch | Alternator IG to the kill switch | Cowl plug IG2 (under the ECU) | TBD |
| ALT2 | 16 Red | Alternator IG excite | Alt IG excite | Alternator plug · pin 3 | TBD |
| MAIN1 | 1/0 Red | Battery + to the kill switch | battery + | Battery + post (trunk) | TBD |
| MAIN2 | 10 Red | Trunk relay block +12 V | Battery + | Trunk relay block (fuel pump relay and fuse) · battery + stud | TBD |
| MAIN2 | 1/0 Red | Battery + to the POWER box | Battery + | POWER box + bar, BAT+ IN stud | TBD |

Pin numbers: TBD · harness AB-cabin, EngineRoom-C, HeavyDC

## AB-engine

# Firewall bulkhead connector (engine side) DRB16-102SAE-L018

FACE SOURCED




TE drawing view, numbers moulded on the insert

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | Coil +12 V feed | Ignition coil +12 V | Splice to: Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1 | 0462-210-1231 |
| 2 | 14 Red | Injector +12 V feed | Injector +12 V | Splice to: Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1 | 0462-210-1231 |
| 3 | 12 Red | Starter solenoid S | Starter solenoid S | Starter solenoid trigger plug · pin 1 | 0462-210-1231 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 4 | 14 Black | Coil ground to the POWER box NEG bar | Ground | Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4 | 0462-210-1231 |
| *5* | *spare* | | | | |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |
| 9 | 20 White | Coil 1 trigger (IGT) | Coil 1 trigger (IGT) | Ignition coil 1 · pin 3 | 0462-201-1631 |
| 10 | 20 White | Coil 2 trigger (IGT) | Coil 2 trigger (IGT) | Ignition coil 2 · pin 3 | 0462-201-1631 |
| 11 | 20 White | Coil 3 trigger (IGT) | Coil 3 trigger (IGT) | Ignition coil 3 · pin 3 | 0462-201-1631 |
| 12 | 20 White | Coil 4 trigger (IGT) | Coil 4 trigger (IGT) | Ignition coil 4 · pin 3 | 0462-201-1631 |
| 13 | 20 Orange | +5 V fuel pressure | +5 V sensor supply | Fuel pressure sensor · pin 2 | 0462-201-1631 |
| 14 | 20 White | Fuel pressure signal | Fuel pressure signal | Fuel pressure sensor · pin 3 | 0462-201-1631 |
| 15 | 20 Blue | Sensor ground trunk (fuel pressure, gearbox speed) | Sensor ground B22 (ECU Gnd Out) | Splice to: Fuel pressure sensor · pin 1; Gearbox speed sensor · pin 2 | 0462-201-1631 |
| 16 | 20 Orange | +5 V MAP sensor | +5 V sensor supply | MAP sensor · pin 2 | 0462-201-1631 |
| 17 | 20 White | MAP sensor signal | MAP sensor signal | MAP sensor · pin 3 | 0462-201-1631 |
| 18 | 20 Blue | MAP sensor ground | Sensor ground A24 (ECU Gnd Out) | MAP sensor · pin 1 | 0462-201-1631 |
| *19* | *spare* | | | | |
| *20* | *spare* | | | | |
| 21 | 20 White | Injector 1 drive (-) | Injector 1 drive (-) | Injector 1 · pin 2 | 0462-201-1631 |
| 22 | 20 White | Injector 2 drive (-) | Injector 2 drive (-) | Injector 2 · pin 2 | 0462-201-1631 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 23 | 20 White | `Injector 3 drive (-)` | Injector 3 drive (-) | Injector 3 · pin 2 | 0462-201-1631 |
| 24 | 20 White | `Injector 4 drive (-)` | Injector 4 drive (-) | Injector 4 · pin 2 | 0462-201-1631 |
| 25 | 20 Orange | `+5 V coolant pressure` | +5 V sensor supply | Coolant pressure sensor · pin B | 0462-201-1631 |
| 26 | 20 White | `Coolant pressure signal` | Coolant pressure signal | Coolant pressure sensor · pin C | 0462-201-1631 |
| 27 | 20 Orange | `+5 V oil pressure` | +5 V sensor supply | Oil pressure sensor · pin 2 | 0462-201-1631 |
| 28 | 20 White | `Oil pressure signal` | Oil pressure signal | Oil pressure sensor · pin 3 | 0462-201-1631 |
| 29 | 20 Blue | `Sensor ground trunk (oil / coolant pressure, oil / charge temp)` | Sensor ground B22 (ECU Gnd Out) | Splice to: Coolant pressure sensor · pin A; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2 | 0462-201-1631 |
| 30 | 18 Red | `+12 V boost + flex` | Switched +12 V | Splice to: Boost control solenoid · pin 1; Flex fuel sensor · pin A | 0462-201-1631 |
| 31 | 20 White | `Flex fuel signal` | Flex fuel signal | Flex fuel sensor · pin C | 0462-201-1631 |
| *32* | *spare* | | | | |
| 33 | 20 White | `Intake temp signal` | Intake temp signal | Intake air temp sensor (manifold) · pin 1 | 0462-201-1631 |
| 34 | 20 Blue | `Sensor ground trunk (intake temp, throttle, coolant temp)` | Sensor ground A24 (ECU Gnd Out) | Splice to: Coolant temp sensor · pin 2; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2 | 0462-201-1631 |
| *35* | *spare* | | | | |
| *36* | *spare* | | | | |
| *37* | *spare* | | | | |
| *38* | *spare* | | | | |
| *39* | *spare* | | | | |
| *40* | *spare* | | | | |
| 41 | 20 Red | `+5 V throttle sensor` | +5 V sensor supply | Electronic throttle body · pin 3 | 0462-201-1631 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 42 | 20 Green | `Throttle pos 1 main` | Throttle pos 1 main | Electronic throttle body · pin 6 | 0462-201-1631 |
| *43* | *spare* | | | | |
| 44 | 20 Blue | `Throttle pos 2 sub` | Throttle pos 2 sub | Electronic throttle body · pin 5 | 0462-201-1631 |
| 45 | 18 Red | `ETB motor +` | ETB motor + | Electronic throttle body · pin 4 | 0462-201-1631 |
| 46 | 18 Black | `ETB motor -` | ETB motor - | Electronic throttle body · pin 1 | 0462-201-1631 |
| 47 | Shield | `Throttle shield` | Shield drain A7 | Shield, not connected at the device end | 0462-201-1631 |
| *48* | *spare* | | | | |
| *49* | *spare* | | | | |
| 50 | Shield | `ETB motor shield` | Shield drain B17 | Shield, not connected at the device end | 0462-201-1631 |
| *51* | *spare* | | | | |
| 52 | 20 Red | `+5 V turbo speed` | +5 V sensor supply | Turbo speed sensor · pin A | 0462-201-1631 |
| 53 | 20 Blue | `Turbo speed signal` | Turbo speed signal | Turbo speed sensor · pin B | 0462-201-1631 |
| *54* | *spare* | | | | |
| *55* | *spare* | | | | |
| 56 | 20 Yellow | `Turbo speed ground` | Sensor ground A24 (ECU Gnd Out) | Turbo speed sensor · pin C | 0462-201-1631 |
| 57 | Shield | `Turbo speed shield` | Shield drain A7 | Shield, not connected at the device end | 0462-201-1631 |
| 58 | 20 White | `Boost solenoid drive (-)` | Boost solenoid (-) | Boost control solenoid · pin 2 | 0462-201-1631 |
| 59 | 20 White | `Charge temp signal` | Charge temp signal | Charge pipe air temp sensor · pin 1 | 0462-201-1631 |
| *60* | *spare* | | | | |
| 61 | 20 White | `Oil temp signal` | Oil temp signal | Oil temp sensor · pin 1 | 0462-201-1631 |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 62 | 20 Black | `Flex fuel sensor return` | Ground | Flex fuel sensor · pin B | `0462-201-1631` |
| 63 | 20 Red | `+8 V to cam sensor` | +8 V sensor supply | Cam sensor · pin 1 | `0462-201-1631` |
| 64 | 20 Blue | `Cam sensor signal` | Cam sensor signal | Cam sensor · pin 2 | `0462-201-1631` |
| 65 | 20 Yellow | `Cam sensor ground` | Sensor ground A24 (ECU Gnd Out) | Cam sensor · pin 3 | `0462-201-1631` |
| 66 | Shield | `Cam sensor shield` | Shield drain A7 | Shield, not connected at the device end | `0462-201-1631` |
| 67 | 20 Orange | `+8 V to gearbox speed sensor` | +8 V sensor supply | Gearbox speed sensor · pin 1 | `0462-201-1631` |
| 68 | 20 White | `Gearbox speed signal` | Gearbox speed signal | Gearbox speed sensor · pin 3 | `0462-201-1631` |
| *69* | *spare* | | | | |
| 70 | 20 White | `Coolant temp signal` | Coolant temp signal | Coolant temp sensor · pin 1 | `0462-201-1631` |
| 71 | 20 Blue | `Knock sensor signal` | Knock sensor signal | Knock sensor · pin 1 | `0462-201-1631` |
| 72 | 20 White | `Knock sensor (-)` | Sensor ground B22 (ECU Gnd Out) | Knock sensor · pin 2 | `0462-201-1631` |
| 73 | Shield | `Knock sensor shield` | Shield drain B17 | Shield, not connected at the device end | `0462-201-1631` |
| 74 | 20 White | `Crank sensor signal` | Crank sensor signal | Crank sensor · pin 1 | `0462-201-1631` |
| 75 | 20 Blue | `Crank sensor ground` | Sensor ground A24 (ECU Gnd Out) | Crank sensor · pin 2 | `0462-201-1631` |
| 76 | Shield | `Crank sensor shield` | Shield drain A7 | Shield, not connected at the device end | `0462-201-1631` |
| 77 | 16 Red | `+12 V to reverse switch` | +12 V to reverse switch | Reverse light switch · pin 2 | `0462-201-1631` |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 78 | 16 Yellow | `Switched +12 V from reverse switch` | Reverse +12 V | Reverse light switch · pin 1 | `0462-201-1631` |
| 79 | 20 White | `CAN H to CAN-Lambda` | CAN H | Splice to: CAN bus end terminator plug (120 ohm) · pin 1; CAN-Lambda wideband controller · pin 4 | `0462-201-1631` |
| 80 | 20 Green | `CAN L to CAN-Lambda` | CAN L | Splice to: CAN bus end terminator plug (120 ohm) · pin 2; CAN-Lambda wideband controller · pin 3 | `0462-201-1631` |
| 81 | Shield | `CAN-Lambda shield` | CAN shield drain | Shield, not connected at the device end | `0462-201-1631` |
| *82* | *spare* | | | | |
| 83 | 18 Red | `Power steering pump enable +12 V` | EHPS enable +12 V | Power steering pump plug C · pin 1 | `0462-201-1631` |
| 84 | 20 White | `Power steering pump speed` | EHPS pump speed | Power steering pump plug B · pin 2 | `0462-201-1631` |
| 85 | 18 White | `Power steering pump relay coil (-)` | EHPS relay coil (-) | Power steering pump plug B · pin 5 | `0462-201-1631` |
| *86* | *spare* | | | | |
| *87* | *spare* | | | | |
| *88* | *spare* | | | | |
| *89* | *spare* | | | | |
| *90* | *spare* | | | | |
| *91* | *spare* | | | | |
| *92* | *spare* | | | | |
| *93* | *spare* | | | | |
| *94* | *spare* | | | | |
| 95 | 14 Red | `CAN-Lambda +12 V` | CAN-Lambda +12 V | Splice to: CAN-Lambda wideband controller · pin 1 | `0462-210-1231` |
| 96 | 14 Black | `CAN-Lambda ground` | Ground | Splice to: CAN-Lambda wideband controller · pin 2 | `0462-210-1231` |
| *97* | *spare* | | | | |
| *98* | *spare* | | | | |
| *99* | *spare* | | | | |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 100 | *spare* | | | | |
| 101 | *spare* | | | | |
| 102 | *spare* | | | | |

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-engine

# Crank sensor 90980-10947

FACE SOURCED




latch top

mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | Crank sensor signal | Signal | Firewall bulkhead connector (engine side) · pin 74 | in kit CONN-75800 |
| 2 | 20 Blue | Crank sensor ground | Ground | Firewall bulkhead connector (engine side) · pin 75 | in kit CONN-75800 |

Pin numbers: TBD · harness AB-engine

# Cam sensor DT06-3S-CE05 + W3S

FACE SOURCED




latch top

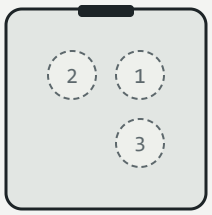
wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | +8 V to cam sensor | +8 V | Firewall bulkhead connector (engine side) · pin 63 | 0462-201-16141 |
| 2 | 20 Blue | Cam sensor signal | Signal | Firewall bulkhead connector (engine side) · pin 64 | 0462-201-16141 |
| 3 | 20 Yellow | Cam sensor ground | Ground | Firewall bulkhead connector (engine side) · pin 65 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

# Turbo speed sensor DT06-3S-CE05 + W3S

FACE SOURCED



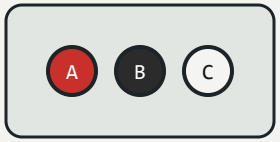

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| A | 20 Red | `+5 V turbo speed` | +5 V | Firewall bulkhead connector (engine side) · pin 52 | `0462-201-16141` |
| B | 20 Blue | `Turbo speed signal` | Signal | Firewall bulkhead connector (engine side) · pin 53 | `0462-201-16141` |
| C | 20 Yellow | `Turbo speed ground` | Ground | Firewall bulkhead connector (engine side) · pin 56 | `0462-201-16141` |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

# Flex fuel sensor 13519047

FACE NOT SOURCED



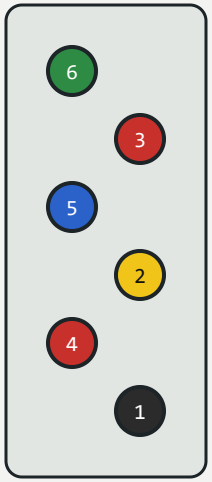

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| A | 20 Red | `+12 V flex fuel` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 30; Boost control solenoid · pin 1 | 15326426 |
| B | 20 Black | `Flex fuel sensor return` | 12 V sensor return | Firewall bulkhead connector (engine side) · pin 62 | 15326426 |
| C | 20 White | `Flex fuel signal` | Signal | Firewall bulkhead connector (engine side) · pin 31 | 15326426 |

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Flex fuel pin table) · harness AB-engine

# Electronic throttle body D 261 205 358-01

FACE SOURCED



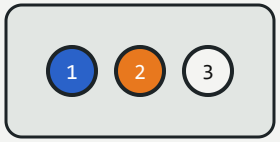

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Black | ETB motor - | Motor - | Firewall bulkhead connector (engine side) · pin 46 | 5-965906-1 |
| 2 | 20 Yellow | Throttle sensor ground | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 34; Coolant temp sensor · pin 2; Intake air temp sensor (manifold) · pin 2 | in kit D 261 205 358-01 |
| 3 | 20 Red | +5 V throttle sensor | +5 V | Firewall bulkhead connector (engine side) · pin 41 | in kit D 261 205 358-01 |
| 4 | 18 Red | ETB motor + | Motor + | Firewall bulkhead connector (engine side) · pin 45 | 5-965906-1 |
| 5 | 20 Blue | Throttle pos 2 sub | Position 2 (sub) | Firewall bulkhead connector (engine side) · pin 44 | in kit D 261 205 358-01 |
| 6 | 20 Green | Throttle pos 1 main | Position 1 (main) | Firewall bulkhead connector (engine side) · pin 42 | in kit D 261 205 358-01 |

Pin numbers: Bosch Motorsport ETB data sheet 51048715 (pins 1A-6F) · harness AB-engine

# MAP sensor 354404

FACE NOT SOURCED



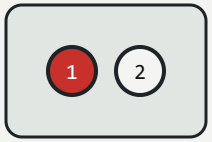

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | `MAP sensor ground` | Ground | Firewall bulkhead connector (engine side) · pin 18 | `in kit 354404` |
| 2 | 20 Orange | `+5 V MAP sensor` | +5 V | Firewall bulkhead connector (engine side) · pin 16 | `in kit 354404` |
| 3 | 20 White | `MAP sensor signal` | Signal | Firewall bulkhead connector (engine side) · pin 17 | `in kit 354404` |

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (MAP pin table) · harness AB-engine

## Injector 1 CONN-76270

FACE NOT SOURCED



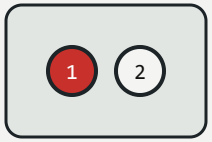

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | `Injector 1 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1 | `in kit CONN-76270` |
| 2 | 20 White | `Injector 1 drive (-)` | Drive (-) | Firewall bulkhead connector (engine side) · pin 21 | `in kit CONN-76270` |

Pin numbers: TBD · harness AB-engine

## Injector 2 CONN-76270

FACE NOT SOURCED



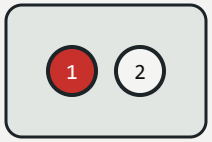

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | `Injector 2 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1 | in kit CONN-76270 |
| 2 | 20 White | `Injector 2 drive (-)` | Drive (-) | Firewall bulkhead connector (engine side) · pin 22 | in kit CONN-76270 |

Pin numbers: TBD · harness AB-engine

## Injector 3 CONN-76270

FACE NOT SOURCED



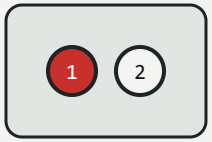

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | `Injector 3 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 4 · pin 1 | `in kit CONN-76270` |
| 2 | 20 White | `Injector 3 drive (-)` | Drive (-) | Firewall bulkhead connector (engine side) · pin 23 | `in kit CONN-76270` |

Pin numbers: TBD · harness AB-engine

## Injector 4 CONN-76270

FACE NOT SOURCED



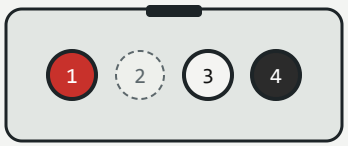

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | `Injector 4 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1 | `in kit CONN-76270` |
| 2 | 20 White | `Injector 4 drive (-)` | Drive (-) | Firewall bulkhead connector (engine side) · pin 24 | `in kit CONN-76270` |

Pin numbers: TBD · harness AB-engine

# Ignition coil 1 90980-11885

FACE SOURCED




latch top

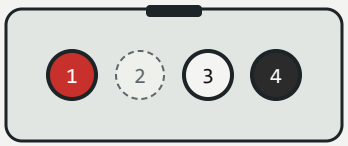
mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | `Coil 1 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | `Coil 1 trigger (IGT)` | Trigger (IGT) | Firewall bulkhead connector (engine side) · pin 9 | TBD |
| 4 | 16 Black | `Coil 1 ground` | Ground | Splice to: Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Ignition coil 2 90980-11885

FACE SOURCED




latch top

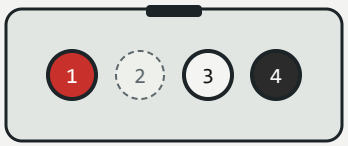
mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | `Coil 2 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 3 · pin 1; Ignition coil 4 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | `Coil 2 trigger (IGT)` | Trigger (IGT) | Firewall bulkhead connector (engine side) · pin 10 | TBD |
| 4 | 16 Black | `Coil 2 ground` | Ground | Splice to: Ignition coil 1 · pin 4; Ignition coil 3 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Ignition coil 3 90980-11885

FACE SOURCED



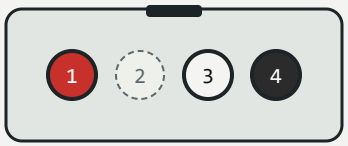

mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | `Coil 3 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 4 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | `Coil 3 trigger (IGT)` | Trigger (IGT) | Firewall bulkhead connector (engine side) · pin 11 | TBD |
| 4 | 16 Black | `Coil 3 ground` | Ground | Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 4 · pin 4; Firewall bulkhead connector (engine side) · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Ignition coil 4 90980-11885

FACE SOURCED



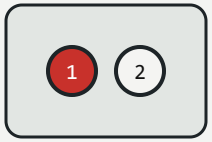

mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | `Coil 4 +12 V` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 1; Ignition coil 1 · pin 1; Ignition coil 2 · pin 1; Ignition coil 3 · pin 1 | TBD |
| *2* | *spare* | | | | |
| 3 | 20 White | `Coil 4 trigger (IGT)` | Trigger (IGT) | Firewall bulkhead connector (engine side) · pin 12 | TBD |
| 4 | 16 Black | `Coil 4 ground` | Ground | Splice to: Ignition coil 1 · pin 4; Ignition coil 2 · pin 4; Ignition coil 3 · pin 4; Firewall bulkhead connector (engine side) · pin 4 | TBD |

Pin numbers: TBD · harness AB-engine

# Boost control solenoid 12052641

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `+12 V boost solenoid` | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 30; Flex fuel sensor · pin A | `12084200` |
| 2 | 20 White | `Boost solenoid drive (-)` | Drive (-) | Firewall bulkhead connector (engine side) · pin 58 | `12084200` |

Pin numbers: TBD · harness AB-engine

# Coolant temp sensor 90980-11062

FACE SOURCED




latch top

mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | Coolant temp signal | Signal | Firewall bulkhead connector (engine side) · pin 70 | 8100-0461 |
| 2 | 20 Blue | Coolant temp ground | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 34; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Intake air temp sensor (manifold) 90980-11062

FACE SOURCED




latch top

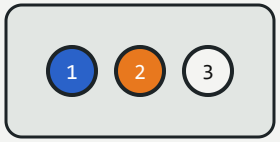
mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | `Intake temp signal` | Signal | Firewall bulkhead connector (engine side) · pin 33 | 8100-0461 |
| 2 | ■ 20 Blue | `Intake temp ground` | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 34; Coolant temp sensor · pin 2; Electronic throttle body · pin 2 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Oil pressure sensor 354404

FACE NOT SOURCED



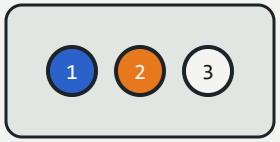

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | `Oil pressure ground` | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2 | `in kit 354404` |
| 2 | 20 Orange | `+5 V oil pressure` | +5 V | Firewall bulkhead connector (engine side) · pin 27 | `in kit 354404` |
| 3 | 20 White | `Oil pressure signal` | Signal | Firewall bulkhead connector (engine side) · pin 28 | `in kit 354404` |

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Oil pressure pin table) · harness AB-engine

# Fuel pressure sensor 354404

FACE NOT SOURCED



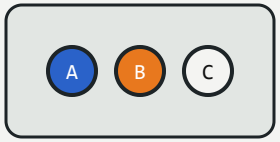

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | `Fuel pressure ground` | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 15; Gearbox speed sensor · pin 2 | `in kit 354404` |
| 2 | 20 Orange | `+5 V fuel pressure` | +5 V | Firewall bulkhead connector (engine side) · pin 13 | `in kit 354404` |
| 3 | 20 White | `Fuel pressure signal` | Signal | Firewall bulkhead connector (engine side) · pin 14 | `in kit 354404` |

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Fuel pressure pin table) · harness AB-engine

## Coolant pressure sensor `pigtail supplied with the sensor (owned)`

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| A | 20 Blue | `Coolant pressure ground` | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 29; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2 | `solder splice onto the pigtail black lead` |
| B | 20 Orange | `+5 V coolant pressure` | +5 V | Firewall bulkhead connector (engine side) · pin 25 | `solder splice onto the pigtail red lead` |
| C | 20 White | `Coolant pressure signal` | Signal | Firewall bulkhead connector (engine side) · pin 26 | `solder splice onto the pigtail green lead` |

Pin numbers: Dan's sensor sheet + seller connection guide (Dan 2026-10-30): A / plug 1 GND black, B / plug 2 supply red, C / plug 3 output green · harness AB-engine

# Starter solenoid trigger plug `90980-11400`

FACE SOURCED




mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 12 Red | `Starter solenoid S` | Solenoid S (start) | Firewall bulkhead connector (engine side) · pin 3 | `in kit CONN-76058 (Sumitomo TS187 4.8 mm sealed female, 12-10 AWG)` |

Pin numbers: single cavity (Toyota RM1022E housing list: 90980-11400 is 1-way, 4.8 mm tab, sealed) · harness AB-engine

# Reverse light switch 90980-11250

FACE SOURCED




latch top

mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Yellow | Switched +12 V from reverse switch | Switched +12 V (NO) | Firewall bulkhead connector (engine side) · pin 78 | 8100-0461 |
| 2 | 16 Red | +12 V to reverse switch | +12 V (COM) | Firewall bulkhead connector (engine side) · pin 77 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Oil temp sensor 90980-11062

FACE SOURCED




latch top

mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | `Oil temp signal` | Signal | Firewall bulkhead connector (engine side) · pin 61 | 8100-0461 |
| 2 | ■ 20 Blue | `Oil temp ground` | Ground | Splice to: Charge pipe air temp sensor · pin 2; Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Charge pipe air temp sensor 90980-11062

FACE SOURCED




latch top

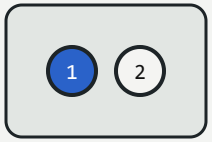
mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | `Charge temp signal` | Signal | Firewall bulkhead connector (engine side) · pin 59 | 8100-0461 |
| 2 | ■ 20 Blue | `Charge temp ground` | Ground | Splice to: Oil temp sensor · pin 2; Firewall bulkhead connector (engine side) · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1 | 8100-0461 |

Pin numbers: TBD · harness AB-engine

# Knock sensor 1 928 403 874

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | Knock sensor signal | Signal | Firewall bulkhead connector (engine side) · pin 71 | BDK 2.8 |
| 2 | 20 White | Knock sensor (-) | Ground | Firewall bulkhead connector (engine side) · pin 72 | BDK 2.8 |

Pin numbers: TBD · harness AB-engine

# Gearbox speed sensor 90980-11143

FACE SOURCED




latch top

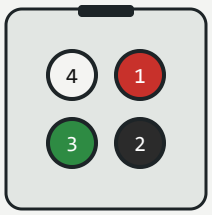
mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Orange | +8 V to gearbox speed sensor | +8 V | Firewall bulkhead connector (engine side) · pin 67 | 8100-0461 |
| 2 | 20 Blue | Gearbox speed ground | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 15; Fuel pressure sensor · pin 1 | 8100-0461 |
| 3 | 20 White | Gearbox speed signal | Signal | Firewall bulkhead connector (engine side) · pin 68 | 8100-0461 |

Pin numbers: Toyota 3-wire speed sensor pinout (wilbo666 wiki; Daniel 2026-09-28) · harness AB-engine

# CAN-Lambda wideband controller DTM06-4S + WM-4S

FACE SOURCED




latch top

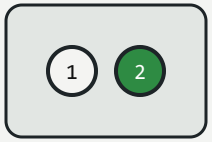
wire side (where the contacts go in) view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 16 Red | CAN-Lambda +12 V | +12 V | Splice to: Firewall bulkhead connector (engine side) · pin 95 | 0462-005-2031 |
| 2 | 16 Black | CAN-Lambda ground | Ground | Splice to: Firewall bulkhead connector (engine side) · pin 96 | 0462-005-2031 |
| 3 | 20 Green | CAN L to CAN-Lambda | CAN L | Splice to: Firewall bulkhead connector (engine side) · pin 80; CAN bus end terminator plug (120 ohm) · pin 2 | 0462-201-2031 |
| 4 | 20 White | CAN H to CAN-Lambda | CAN H | Splice to: Firewall bulkhead connector (engine side) · pin 79; CAN bus end terminator plug (120 ohm) · pin 1 | 0462-201-2031 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

# CAN bus end terminator plug (120 ohm) AT06-2S-RD01 + AW2S

FACE NOT SOURCED



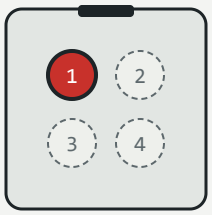

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | CAN H to the 120 ohm terminator plug | CAN H | Splice to: Firewall bulkhead connector (engine side) · pin 79; CAN-Lambda wideband controller · pin 4 | AT62-201-1631 |
| 2 | ■ 20 Green | CAN L to the 120 ohm terminator plug | CAN L | Splice to: Firewall bulkhead connector (engine side) · pin 80; CAN-Lambda wideband controller · pin 3 | AT62-201-1631 |

Pin numbers: TBD · harness AB-engine

# Power steering pump plug C 90980-10942

FACE SOURCED




latch top

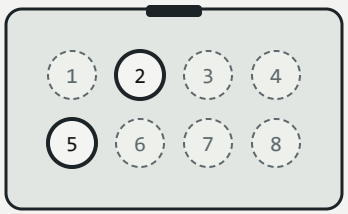
mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 18 Red | Power steering pump enable +12 V | +12 V (IG) | Firewall bulkhead connector (engine side) · pin 83 | 82998-12440 |
| *2* | *spare* | | | | |
| *3* | *spare* | | | | |
| *4* | *spare* | | | | |

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine

## Power steering pump plug B 90980-10897

FACE SOURCED




latch top

mating face view

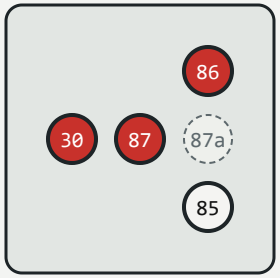
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *1* | *spare* | | | | |
| 2 | ☐ 20 White | `Power steering pump speed` | Speed signal | Firewall bulkhead connector (engine side) · pin 84 | 82998-12440 |
| *3* | *spare* | | | | |
| *4* | *spare* | | | | |
| 5 | ☐ 18 White | `Power steering pump relay coil (-)` | Relay coil drive (-) | Firewall bulkhead connector (engine side) · pin 85 | 82998-12440 |
| *6* | *spare* | | | | |
| *7* | *spare* | | | | |
| *8* | *spare* | | | | |

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine

# CabinPower

# Low-beam relay (K-HL, LOGIC fuse box seat M1) 5-1393292-8

FACE SOURCED



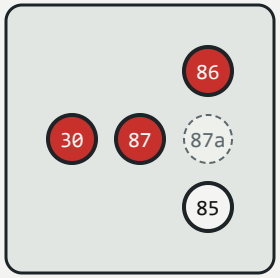

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 14 Red | `Low-beam relay feed` | +12 V in | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86; DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 86 | 42281-1 |
| 85 | 18 White | `Low-beam relay coil (-)` | Coil (-) | Splice to: Cowl plug IE1 (LH kick); DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 85 | 280919-2 |
| 86 | 16 Red | `Low-beam relay coil +` | Coil + | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 86 | 280919-2 |
| 87 | 14 Red | `Low beam +12 V out` | +12 V out | Splice to: High-beam relay (K-HR, LOGIC fuse box seat M2) · terminal 86; LH headlamp H1; RH headlamp H2 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

## Horn relay (K-HORN, LOGIC fuse box seat M3) 4-1904124-3

FACE SOURCED



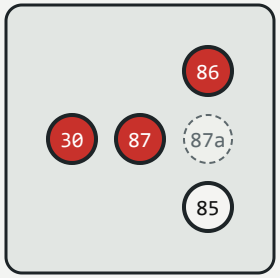

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 14 Red | Horn relay feed | +12 V in | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-4; Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 86 | 42281-1 |
| 85 | 18 White | Horn relay coil (-) | Coil (-) | Cowl plug IE1 (LH kick) | 280919-2 |
| 86 | 16 Red | Horn relay coil + | Coil + | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-4; Cowl plug IE1 (LH kick); Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 30 | 280919-2 |
| 87 | 14 Red | Horn +12 V out | +12 V out | Splice to: LH horn · pin 1; RH horn · pin 1 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

# High-beam relay (K-HR, LOGIC fuse box seat M2) 5-1393292-8

FACE SOURCED



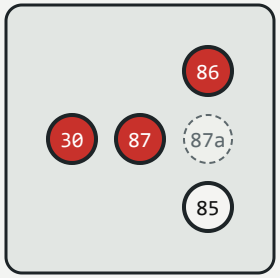

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 14 Red | High-beam relay feed | +12 V in | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-3 | 42281-1 |
| 85 | 18 White | High-beam relay coil (-) to the dimmer | Coil (-) | Cowl plug IE1 (LH kick) | 280919-2 |
| 86 | 16 Red | High-beam relay coil + (from the low beams) | Coil + | Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 87; LH headlamp H1; RH headlamp H2 | 280919-2 |
| 87 | 14 Red | High beam +12 V out | +12 V out | Splice to: Dash high-beam LED feed resistor 220 ohm · pin 1; RH headlamp H2; LH headlamp H1 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

## DRL relay (K-DRL, LOGIC fuse box seat M8) 4-1904124-2

FACE SOURCED



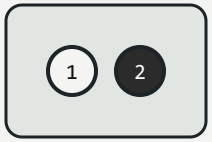

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 18 Red | DRL relay feed | +12 V in | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-1; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 86; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 86 | 42281-1 |
| 85 | 20 White | DRL relay coil (-) to the DRL switch | Coil (-) | Splice to: DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87 | 280919-2 |
| 86 | 18 Red | DRL relay coil + | Coil + | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-1; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 30; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 86 | 280919-2 |
| 87 | 16 Red | DRL +12 V out | +12 V out | DRL cut relay (beside the LOGIC box) (RLY-DRL) · pin 30 | 42281-1 |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

# DRL switch TBD

FACE NOT SOURCED



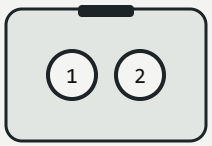

layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | `DRL on (to ground)` | DRL relay coil and pop-up UP | Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87 | TBD |
| 2 | ■ 20 Black | `DRL switch ground (R8 ground lead)` | Ground | Pop-up relay R8 (behind the LH dash) | TBD |

Pin numbers: switch terminals 1 / 2 (as drawn) · harness CabinPower

## Pop-up diode 1 (stalk side) DT06-2S + W2S;DT04-2P-RT01

FACE SOURCED



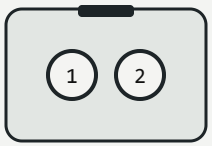

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | Pop-up UP input | D1 anode (R8 pin 8 side) | Splice to: Pop-up relay R8 (behind the LH dash); Pop-up diode 2 (DRL switch side) · pin 1 | 0462-201-1631 |
| 2 | ☐ 20 White | Pop-up UP from the stalk (R-Y) | D1 cathode (stalk side) | R-Y lead from cowl splice I2, cut near pop-up relay R8 (I2 side, behind the LH dash) | 0462-201-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

## Pop-up diode 2 (DRL switch side) DT06-2S + W2S;DT04-2P-RT01

FACE SOURCED




latch top

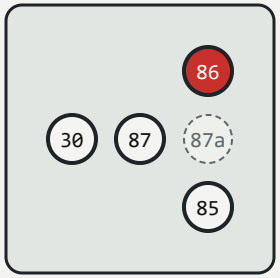
wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | ☐ 20 White | Pop-up UP input | D2 anode (R8 pin 8 side) | Splice to: Pop-up relay R8 (behind the LH dash); Pop-up diode 1 (stalk side) · pin 1 | 0462-201-1631 |
| 2 | ☐ 18 White | Pop-up UP from diode 2 to the key-on relay | D2 cathode (DRL switch side) | Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 30 | 0462-201-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

# Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) 4-1904124-3

FACE SOURCED



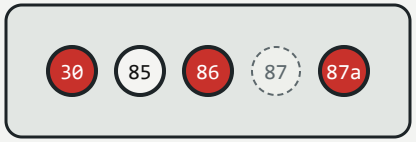

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | ☐ 18 White | Pop-up UP from diode 2 to the key-on relay | Switch contact (UP command in) | Pop-up diode 2 (DRL switch side) · pin 2 | 42281-1 |
| 85 | ☐ 20 White | Pop-up relay coil (-) to the DRL switch | Coil (-) | Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 87 | 280919-2 |
| 86 | ■ 18 Red | Pop-up relay coil + (key on) | Coil + | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-1; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 30; DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 86 | 280919-2 |
| 87 | ☐ 18 White | Pop-up UP command to the DRL switch (key on) | Switch contact (to the DRL switch) | Splice to: DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 85; DRL switch · pin 1; Pop-up key-on relay (K-POD, LOGIC fuse box seat M10) · terminal 85 | 42281-1 |
| *87a* | *spare* | | | | |

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

## DRL cut relay (beside the LOGIC box) (RLY-DRL) `12110539 + 12110540;301-1C-C-R1-U01-12VDC`

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 30 | 16 Red | `DRL +12 V out` | +12 V in | DRL relay (K-DRL, LOGIC fuse box seat M8) · terminal 87 | `12129409-L` |
| 85 | 16 White | `DRL cut relay coil (-)` | Coil (-) | Splice to: Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 85; Cowl plug IE1 (LH kick) | `12129409-L` |
| 86 | 16 Red | `DRL cut relay coil +` | Coil + | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS1-2; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 30; Low-beam relay (K-HL, LOGIC fuse box seat M1) · terminal 86 | `12129409-L` |
| *87* | *spare* | | | | |
| 87a | 16 Red | `DRL +12 V` | +12 V out (NC) | Splice to: LH headlamp H1; RH headlamp H2 | `12129409-L` |

Pin numbers: ISO 7588 relay terminal numbers (Song Chuan 301 series data sheet) · harness CabinPower, EngineRoom-C

# EngineRoom-C

# Power steering pump plug A 90980-12068

FACE SOURCED




latch top

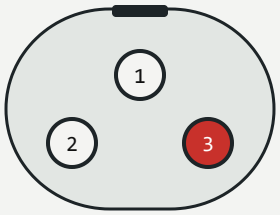
mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 8 Red | Power steering pump +12 V | EHPS pump +12 V | Power steering pump relay (K-EPS, beside the POWER fuse box) · terminal 87 | 82998-12500 |
| 2 | 8 Black | Power steering pump ground | Ground | Ground stud EA, RH front fender | 82998-12500 |

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness EngineRoom-C

# Alternator plug 90980-10341

FACE SOURCED




mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | `Alternator battery sense (S)` | S (battery sense) | LOGIC fuse and relay box (glove box) · fuse BUS1-9 | TBD |
| 2 | 20 White | `Alternator charge lamp (L)` | L (charge lamp) | Cowl plug IG2 (under the ECU) | TBD |
| 3 | 16 Red | `Alternator IG excite` | Alt IG excite | Battery kill switch (trunk) · pin ALT2 | TBD |

Pin numbers: TBD · harness EngineRoom-C

# Condenser fan ground plug DTHD06-1-8S

FACE SOURCED




mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Black | Condenser fan ground | Ground | Ground stud EA, RH front fender | 0462-203-08141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# Radiator fan plug (+) DTHD06-1-8S

FACE SOURCED




mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Red | Radiator fan +12 V | +12 V | Radiator fan relay (K-FAN, POWER fuse box seat R4) · terminal 30 | 0462-203-08141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# Condenser fan plug (+) DTHD06-1-8S

FACE SOURCED




mating face view

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Red | Condenser fan +12 V | +12 V | Condenser fan relay (K-FAN2, POWER fuse box seat R5) · terminal 30 | 0462-203-08141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# LH horn DT06-2S-CE05 + W2S

FACE SOURCED




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | Horn LH +12 V | +12 V | Splice to: Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 87; RH horn · pin 1 | 0462-209-1631 |
| 2 | 14 Black | Horn LH ground | Ground | Splice to: Ground stud EA, RH front fender; RH horn · pin 2 | 0462-209-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

# RH horn DT06-2S-CE05 + W2S

FACE SOURCED




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 14 Red | Horn RH +12 V | +12 V | Splice to: Horn relay (K-HORN, LOGIC fuse box seat M3) · terminal 87; LH horn · pin 1 | 0462-209-1631 |
| 2 | 14 Black | Horn RH ground | Ground | Splice to: Ground stud EA, RH front fender; LH horn · pin 2 | 0462-209-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

## Radiator fan ground plug DTHD06-1-8S

FACE SOURCED




mating face view

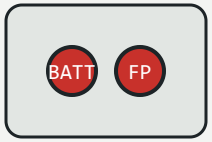
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Black | Radiator fan ground | Ground | Ground stud EA, RH front fender | 0462-203-08141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

## HeavyDC

# Trunk relay block (fuel pump relay and fuse) ST185-FB-BATT rev 7

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| BATT | 10 Red | Trunk relay block +12 V | Battery relay box + | Battery kill switch (trunk) · pin MAIN2 | TBD |
| FP | 10 Red | Fuel pump relay feed | Fuel pump relay feed | Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 30 | 36161 |

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness HeavyDC

# Firewall battery + connector (cabin side) RL00801-50RE

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Red | `Battery + to the firewall connector` | Battery + | POWER box + bar, RADLOK+ stud | INTEGRAL |
| 1 | 1/0 Red | `Battery + through the firewall` | Battery + | Firewall battery + connector (engine side) · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

# Firewall battery RL00801-50BK

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Black | Battery - to the firewall connector | Battery - (engine ground) | POWER box NEG bar, RADLOK- stud | INTEGRAL |
| 1 | 1/0 Black | Battery - through the firewall | Battery - (engine ground) | Firewall battery · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

# Firewall battery RL00801-50BK

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Black | Engine ground to the block | Battery - (engine ground) | Engine block ground stud, main lug | INTEGRAL |
| 1 | 1/0 Black | Battery - through the firewall | Battery - (engine ground) | Firewall battery · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

# Firewall battery + connector (engine side) RL00801-50RE

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 1/0 Red | `Battery + to the jump bus bar` | Battery + | Splice to: Starter B+ stud; Jump start post · pin 1; Alternator B+ stud | INTEGRAL |
| 1 | 1/0 Red | `Battery + through the firewall` | Battery + | Firewall battery + connector (cabin side) · pin 1 | INTEGRAL |

Pin numbers: TBD · harness HeavyDC

## Jump start post TBD

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 2 Red | `Jump post feed` | Jump post feed | Splice to: Starter B+ stud; Firewall battery + connector (engine side) · pin 1; Alternator B+ stud | TBD |

Pin numbers: TBD · harness HeavyDC

## RearFuel

# Fuel pump TBD

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 10 Red | `Fuel pump +12 V` | Fuel pump +12 V | Fuel pump relay (K-FP, Trunk relay box seat K1) · terminal 87 | TBD |
| 2 | 10 Black | `Fuel pump ground` | Fuel pump ground | Ground point BL, back panel centre | TBD |

Pin numbers: TBD · harness RearFuel

# Inline connector for fuel level sender (sender side) DT06-2S + W2S

FACE SOURCED




latch top

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | `Fuel level signal` | Fuel level signal | Fuel level sender · pin 1 | `0462-201-16141` |
| 2 | 20 Blue | `Fuel level ground` | Sensor ground B22 (ECU Gnd Out) | Fuel level sender · pin 2 | `0462-201-16141` |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

## Fuel level sender DT04-2P + W2P

FACE SOURCED




latch top

wire side (where the contacts go in) view · source

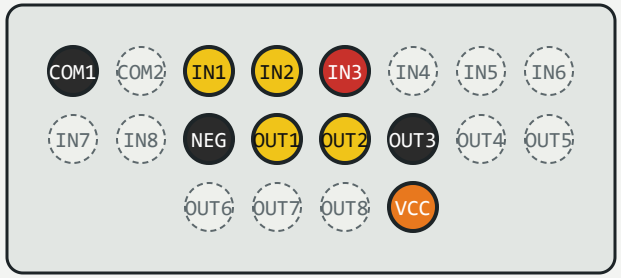
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 White | Fuel level signal | Fuel level signal | Inline connector for fuel level sender (sender side) · pin 1 | 0460-202-1631 |
| 2 | 20 Blue | Fuel level ground | Fuel level ground | Inline connector for fuel level sender (sender side) · pin 2 | 0460-202-1631 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

## Dash

## 8-channel opto board TBD

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

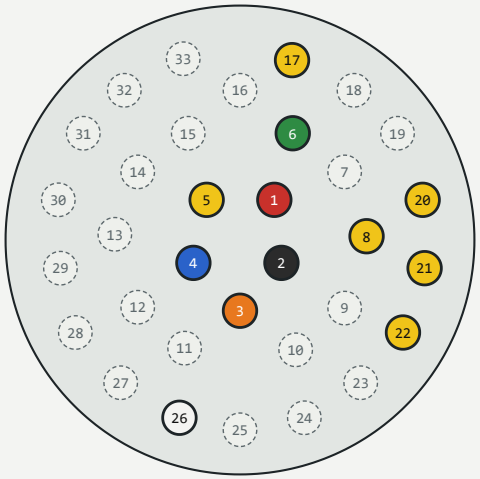
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| COM1 | 20 Black | Opto input return (brake / reverse / tail signals) | Opto input return | Splice to: Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CAN switch board · pin 2; Centre cluster ground input lead; RealDash Pi ground input lead | screw terminal (on the board) |
| *COM2* | *spare* | | | | |
| IN1 | 16 Yellow | Brake on +12 V | Brake on +12 V | Stop lamp switch S9 (pedal) | screw terminal (on the board) |
| IN2 | 16 Yellow | Reverse to opto in 2 | Reverse to opto in 2 | Splice to: Firewall bulkhead connector (cabin side) · pin 78; Cowl plug IG2 (under the ECU) | screw terminal (on the board) |
| IN3 | 20 Red | Lights on +12 V | Lights on +12 V | Dimmer rheostat R10 (left of the steering wheel) | screw terminal (on the board) |
| *IN4* | *spare* | | | | |
| *IN5* | *spare* | | | | |
| *IN6* | *spare* | | | | |
| *IN7* | *spare* | | | | |
| *IN8* | *spare* | | | | |
| NEG | 20 Black | Opto board output ground (to the switch board) | Opto out ground | Splice to: ECUMaster CAN switch board · pin 4; Combination switch plug C16 (B), cruise switch | screw terminal (on the board) |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| OUT1 | 20 Yellow | Brake to CSB3 S7 | Brake to CSB3 S7 | ECUMaster CAN switch board · pin 21 | screw terminal (on the board) |
| OUT2 | 20 Yellow | Reverse to CSB3 S8 | Reverse to CSB3 S8 | ECUMaster CAN switch board · pin 22 | screw terminal (on the board) |
| OUT3 | 20 Black | Headlight sense to cluster | Headlight sense to cluster | Centre cluster headlight sense input | screw terminal (on the board) |
| *OUT4* | *spare* | | | | |
| *OUT5* | *spare* | | | | |
| *OUT6* | *spare* | | | | |
| *OUT7* | *spare* | | | | |
| *OUT8* | *spare* | | | | |
| VCC | 20 Orange | Opto +5 V | Opto +5 V | Splice to: ECUMaster CAN switch board · pin 3; Cruise switch ladder resistor · pin 1 | screw terminal (on the board) |

Pin numbers: terminal names printed on the board · harness Dash

# ECUMaster CAN switch board HD36-24-33SE

FACE SOURCED




wire side (where the contacts go in) view · source

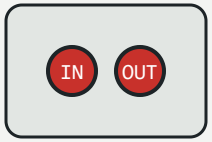
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `CSB3 +12 V` | CSB3 +12 V | Splice to: LOGIC fuse and relay box (glove box) · fuse BUS2-5 | `0462-201-2031` |
| 2 | 20 Black | `CSB3 ground` | CSB3 ground | Splice to: Centre cluster ground input lead; RealDash Pi ground input lead; Firewall bulkhead connector (cabin side) · pin 96; Firewall bulkhead connector (cabin side) · pin 62; Firewall bulkhead connector (cabin side) · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; 8-channel opto board · pin COM1 | `0462-201-2031` |
| 3 | 20 Orange | `Switch board +5 V out` | +5 V (switch board) | Splice to: 8-channel opto board · pin VCC; Cruise switch ladder resistor · pin 1 | `0462-201-2031` |
| 4 | 20 Blue | `Switch board reference ground` | Switch board reference ground | Splice to: 8-channel opto board · pin NEG; Combination switch plug C16 (B), cruise switch | `0462-201-2031` |
| 5 | 20 Yellow | `CAN H to CSB3` | CAN H to CSB3 | Splice to: Firewall bulkhead connector (cabin side) · pin 79; ECU plug C (CAN / comms) · pin 3; Centre cluster CAN board leads; RealDash Pi CAN adapter leads | `0462-201-2031` |
| 6 | 20 Green | `CAN L to CSB3` | CAN L to CSB3 | Splice to: Firewall bulkhead connector (cabin side) · pin 80; ECU plug C (CAN / comms) · pin 4; Centre cluster CAN board leads; RealDash Pi CAN adapter leads | `0462-201-2031` |
| *7* | *spare* | | | | |
| 8 | 20 Yellow | `Cruise ladder` | Cruise ladder | Splice to: Combination switch plug C16 (B), cruise switch; Cruise switch ladder resistor · pin 2 | `0462-201-2031` |

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| *9* | *spare* | | | | |
| *10* | *spare* | | | | |
| *11* | *spare* | | | | |
| *12* | *spare* | | | | |
| *13* | *spare* | | | | |
| *14* | *spare* | | | | |
| *15* | *spare* | | | | |
| *16* | *spare* | | | | |
| 17 | 20 Yellow | `Cruise MAIN on` | Cruise MAIN on | Combination switch plug C16 (B), cruise switch | `0462-201-2031` |
| *18* | *spare* | | | | |
| *19* | *spare* | | | | |
| 20 | 20 Yellow | `Clutch pedal switch` | Clutch pedal switch | Cruise control clutch switch C17 | `0462-201-2031` |
| 21 | 20 Yellow | `Brake to CSB3 S7` | Brake to CSB3 S7 | 8-channel opto board · pin OUT1 | `0462-201-2031` |
| 22 | 20 Yellow | `Reverse to CSB3 S8` | Reverse to CSB3 S8 | 8-channel opto board · pin OUT2 | `0462-201-2031` |
| *23* | *spare* | | | | |
| *24* | *spare* | | | | |
| *25* | *spare* | | | | |
| 26 | 20 White | `Oil LED sink (CSB3)` | Oil LED sink (CSB3) | Oil pressure LED · pin 2 | `0462-201-2031` |
| *27* | *spare* | | | | |
| *28* | *spare* | | | | |
| *29* | *spare* | | | | |
| *30* | *spare* | | | | |
| *31* | *spare* | | | | |
| *32* | *spare* | | | | |
| *33* | *spare* | | | | |

Pin numbers: TBD - enclosure cavity map from the CAD (Dan G1 a); do not build from this pin · harness Dash

## RealDash Pi inline fuse 5 A `0FHM0003ZXJB + ATM-5`

FACE NOT SOURCED




layout not sourced: numbered list only, match the moulded numbers

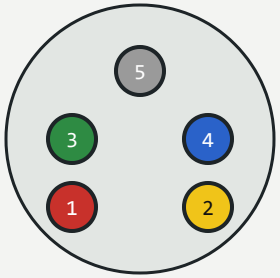
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| IN | 16 Red | RealDash Pi +12 V from the radio ACC feed | Radio ACC +12 V (CIG & RADIO 15 A) | Cowl plug II1 (instrument panel centre) | solder splice onto the holder lead |
| OUT | 20 Red | RealDash Pi +12 V (fused 5 A) | RealDash Pi +12 V (fused 5 A) | RealDash Pi +12 V input lead | solder splice onto the holder lead |

Pin numbers: Littelfuse INLINE MINI Splashproof Fuse Holder datasheet: 0FHM0003ZXJB, 16 AWG GXL leads 93 mm each side, 20 A, 32 V DC, takes MINI blade fuses · harness Dash

## WheelSpeed-Rear

# Rear VR conditioner output plug LP-16-J05PE-02-001

FACE SOURCED



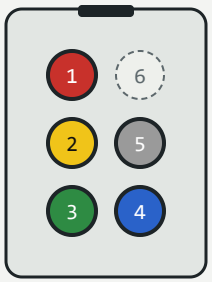

mating face view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | +5 V to rear VR conditioner | +5 V | Inline connector for rear wheel speed (sensor side) · pin 1 | solder cup (LP-16, S16) |
| 2 | 20 Yellow | Rear VR conditioner ground | Ground | Inline connector for rear wheel speed (sensor side) · pin 2 | solder cup (LP-16, S16) |
| 3 | 20 Green | Rear left wheel speed | Rear left wheel speed | Inline connector for rear wheel speed (sensor side) · pin 3 | solder cup (LP-16, S16) |
| 4 | 20 Blue | Rear right wheel speed | Rear right wheel speed | Inline connector for rear wheel speed (sensor side) · pin 4 | solder cup (LP-16, S16) |
| 5 | Shield | Rear wheel speed shield drain | Shield drain | Inline connector for rear wheel speed (sensor side) · pin 5 | solder cup (LP-16, S16) |

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness WheelSpeed-Rear

# Inline connector for rear wheel speed (sensor side) DT04-6P + W6P

FACE SOURCED




wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `+5 V to rear VR conditioner` | +5 V sensor supply | Rear VR conditioner output plug · pin 1 | `0460-202-1631` |
| 2 | 20 Yellow | `Rear VR conditioner ground` | Sensor ground B22 (ECU Gnd Out) | Rear VR conditioner output plug · pin 2 | `0460-202-1631` |
| 3 | 20 Green | `Rear left wheel speed` | Rear left wheel speed | Rear VR conditioner output plug · pin 3 | `0460-202-1631` |
| 4 | 20 Blue | `Rear right wheel speed` | Rear right wheel speed | Rear VR conditioner output plug · pin 4 | `0460-202-1631` |
| 5 | Shield | `Rear wheel speed shield drain` | Shield drain B17 | Rear VR conditioner output plug · pin 5 | `0460-202-1631` |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

# RL wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED



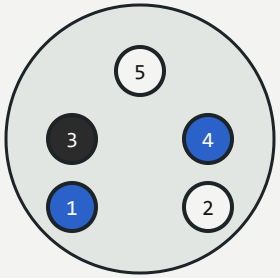

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | RL wheel speed + | RL wheel speed + | Rear VR conditioner input plug · pin 1 | 0462-201-16141 |
| 2 | 20 White | RL wheel speed - | RL wheel speed - | Rear VR conditioner input plug · pin 2 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

# Rear VR conditioner input plug LP-16-J05PE-02-001

FACE SOURCED




mating face view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | RL wheel speed + | RL wheel speed + | RL wheel speed sensor · pin 1 | solder cup (LP-16, S16) |
| 2 | 20 White | RL wheel speed - | RL wheel speed - | RL wheel speed sensor · pin 2 | solder cup (LP-16, S16) |
| 3 | 20 Black | Rear wheel speed sensor cable shield drains | Shield drain | Splice to: Shield, not connected at the device end | solder cup (LP-16, S16) |
| 4 | 20 Blue | RR wheel speed + | RR wheel speed + | RR wheel speed sensor · pin 1 | solder cup (LP-16, S16) |
| 5 | 20 White | RR wheel speed - | RR wheel speed - | RR wheel speed sensor · pin 2 | solder cup (LP-16, S16) |

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness WheelSpeed-Rear

## RR wheel speed sensor `DT06-2S-CE05 + W2S`

FACE SOURCED




wire side (where the contacts go in) view · source

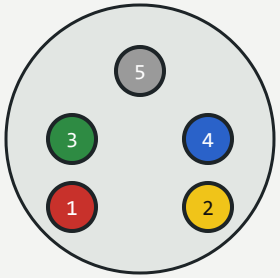
| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | `RR wheel speed +` | RR wheel speed + | Rear VR conditioner input plug · pin 4 | `0462-201-16141` |
| 2 | 20 White | `RR wheel speed -` | RR wheel speed - | Rear VR conditioner input plug · pin 5 | `0462-201-16141` |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

## WheelSpeed-Front

# Front VR conditioner output plug LP-16-J05PE-02-001

FACE SOURCED



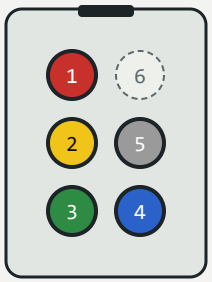

mating face view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `+5 V to front VR conditioner` | +5 V | Inline connector for front wheel speed (sensor side) · pin 1 | `solder cup (LP-16, S16)` |
| 2 | 20 Yellow | `Front VR conditioner ground` | Ground | Inline connector for front wheel speed (sensor side) · pin 2 | `solder cup (LP-16, S16)` |
| 3 | 20 Green | `FL conditioned out` | FL conditioned out | Inline connector for front wheel speed (sensor side) · pin 3 | `solder cup (LP-16, S16)` |
| 4 | 20 Blue | `FR conditioned out` | FR conditioned out | Inline connector for front wheel speed (sensor side) · pin 4 | `solder cup (LP-16, S16)` |
| 5 | Shield | `Front wheel speed shield drain` | Shield drain | Inline connector for front wheel speed (sensor side) · pin 5 | `solder cup (LP-16, S16)` |

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness WheelSpeed-Front

# Inline connector for front wheel speed (sensor side) DT04-6P + W6P

FACE SOURCED




wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Red | `+5 V to front VR conditioner` | +5 V sensor supply | Front VR conditioner output plug · pin 1 | `0460-202-1631` |
| 2 | 20 Yellow | `Front VR conditioner ground` | Sensor ground A24 (ECU Gnd Out) | Front VR conditioner output plug · pin 2 | `0460-202-1631` |
| 3 | 20 Green | `FL conditioned out` | FL conditioned out | Front VR conditioner output plug · pin 3 | `0460-202-1631` |
| 4 | 20 Blue | `FR conditioned out` | FR conditioned out | Front VR conditioner output plug · pin 4 | `0460-202-1631` |
| 5 | Shield | `Front wheel speed shield drain` | Shield drain A7 | Front VR conditioner output plug · pin 5 | `0460-202-1631` |
| *6* | *spare* | | | | |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

# FL wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED



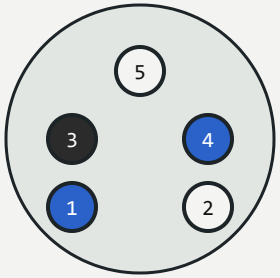

wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | FL wheel speed + | FL wheel speed + | Front VR conditioner input plug · pin 1 | 0462-201-16141 |
| 2 | 20 White | FL wheel speed - | FL wheel speed - | Front VR conditioner input plug · pin 2 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

# Front VR conditioner input plug LP-16-J05PE-02-001

FACE SOURCED




mating face view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | FL wheel speed + | FL wheel speed + | FL wheel speed sensor · pin 1 | solder cup (LP-16, S16) |
| 2 | 20 White | FL wheel speed - | FL wheel speed - | FL wheel speed sensor · pin 2 | solder cup (LP-16, S16) |
| 3 | 20 Black | Front wheel speed sensor cable shield drains | Shield drain | Splice to: Shield, not connected at the device end | solder cup (LP-16, S16) |
| 4 | 20 Blue | FR wheel speed + | FR wheel speed + | FR wheel speed sensor · pin 1 | solder cup (LP-16, S16) |
| 5 | 20 White | FR wheel speed - | FR wheel speed - | FR wheel speed sensor · pin 2 | solder cup (LP-16, S16) |

Pin numbers: CNLINKO LP-16 5-pin; pins per the VRC enclosure CAD BOM vr-conditioner-bom.csv (Dan G2 a, 2026-11-08) · harness WheelSpeed-Front

# FR wheel speed sensor DT06-2S-CE05 + W2S

FACE SOURCED




wire side (where the contacts go in) view · source

| PIN | WIRE | WIRE LABEL | WHAT IT DOES | GOES TO | CONTACT |
|---|---|---|---|---|---|
| 1 | 20 Blue | FR wheel speed + | FR wheel speed + | Front VR conditioner input plug · pin 4 | 0462-201-16141 |
| 2 | 20 White | FR wheel speed - | FR wheel speed - | Front VR conditioner input plug · pin 5 | 0462-201-16141 |

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front