ST185 Pin Chart

94 connectors · 67 faces sourced · 27 still a numbered list

Red +12 V Black ground White signal Blue sensor return Orange sensor supply Yellow switch signal Green CAN Grey shield drain

Dashed = spare cavity Cavity colour is the wire's insulation colour. From MASTER-wirelist.csv.

Bussed plug = a Deutsch DT plug whose bussed cap ties every pin together: a splice you can unplug. Each sits where its name says.

Devices by harness

Each plug belongs to one harness (Dan 2026-11-01). Fuse boxes, relays, buses, studs and factory taps are hubs: several harnesses land on them.

HARNESS	DEVICES AND PLUGS
AB-cabin	OEM ambient air temp sensor A1 pin 1 (front, 6 in pigtail) (A1); OEM A/C amplifier (A15); OEM auto A/C amplifier A32 pin 15 SG (A32); Accelerator pedal sensor (APS-PEDAL); +5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) (BUS-5V); Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) (BUS-GNDOUT-A); Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) (BUS-GNDOUT-B); ECU wake diode (ignition feed) (D-IG2-WAKE); DRB102 bulkhead, cabin side (DRB102-CABIN); Link G4X plug A (ECU-A); ECU plug C (CAN / comms) (ECU-C); Fuel sender inline plug, harness side, trunk (IX-FUEL) (IX-FUEL-P); Front wheel-speed inline plug, VRC side (IX-WS-F) (IX-WS-F-S); Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) (IX-WS-R-S); Cam signal pull-up resistor 1.8 k to +8 V (R-CAM-PULLUP); Fuel level pull-up resistor 470 ohm to +5 V (R-FUELLVL); A/C lock sensor resistor 4.7 k (R-LOCK); POWER box NEG bar, GND stud, ring 1 of 3 (T-PWR-NEG-GND-1); POWER box NEG bar, GND stud, ring 3 of 3 (T-PWR-NEG-GND-3)
AB-engine	Boost control solenoid (BOOST-SOL); Cam sensor (CAM); CAN-Lambda wideband controller (CAN-LAMBDA); 120 ohm CAN terminator plug, Lambda end (CAN-TERM-END); Charge pipe air temp sensor (CHARGE-IAT); Coolant pressure sensor (CLNT-P); Coil 1 (COIL-1); Coil 2 (COIL-2); Coil 3 (COIL-3); Coil 4 (COIL-4); Crank sensor (CRANK); DRB102 bulkhead, engine side (DRB102-ENGINE); Coolant temp sensor (ECT); Electronic throttle body (ETB); Flex fuel sensor (FLEX); Fuel pressure sensor (FUEL-P); Intake air temp sensor (manifold) (IAT); Injector 1 (INJ-1); Injector 2 (INJ-2); Injector 3 (INJ-3); Injector 4 (INJ-4); Knock sensor (KNOCK-1); MAP sensor (MAP); Power steering pump plug B (MRS-B); Power steering pump plug C (MRS-C); Oil pressure sensor (OIL-P); Oil temp sensor (OIL-T); Reverse light switch (REV-SW); Starter solenoid trigger plug (STARTER-TRIGGER); Turbo speed sensor (TURBO-SPD); Gearbox speed sensor (VSS)
CabinPower	Pop-up diode 1 (stalk side) (D-R8-1); Pop-up diode 2 (DRL switch side) (D-R8-2); DRL switch (DRL-SW); OEM R-Y lead from cowl splice I2, cut near retract control relay R8 pin 8: I2 side (behind the LH dash) (I2); LOGIC fuse box relay M8 (DRL (both headlamps)) (K-DRL); LOGIC fuse box relay M1 (low beam (both headlamps)) (K-HL); LOGIC fuse box relay M2 (high beam (both headlamps)) (K-HR); LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) (K-POD); Dash high-beam LED feed resistor 220 ohm (R-HB); OEM retract control relay R8 pin 12 (behind the LH dash), W-B ground lead (R8); LOGIC box Bus 1, feed stud (T-LOG-BUS1); LOGIC box Bus 2, feed stud (T-LOG-BUS2); POWER box AMI IN-1 fuse, output stud (T-PWR-AMI-IN-1); POWER box AMI IN-2 fuse, output stud (T-PWR-AMI-IN-2); POWER box AMI IN-4 fuse, output stud (T-PWR-AMI-IN-4); POWER box AMI IN-5 fuse, output stud (T-PWR-AMI-IN-5); POWER box AMI OUT-1 fuse, output stud (T-PWR-AMI-OUT-1); POWER box AMI OUT-2 fuse, output stud (T-PWR-AMI-OUT-2); POWER box AMI OUT-3 fuse, output stud (T-PWR-AMI-OUT-3); POWER box AMI OUT-4 fuse, output stud (T-PWR-AMI-OUT-4); POWER box AMI OUT-5 fuse, output stud (T-PWR-AMI-OUT-5); POWER box AMI OUT-6 fuse, output stud (T-PWR-AMI-OUT-6); POWER box NEG bar, GND stud, ring 2 of 3 (T-PWR-NEG-GND-2)
EngineRoom-C	A/C compressor A4 pin 4 (A4); OEM A5, factory Y-R lead (A5); Alternator plug (ALT-PLUG); LH front side marker lamp F5 pin 1 (corner lamp) (F5); RH front side marker lamp F6 pin 1 (corner lamp) (F6); LH front turn / clearance lamp F7 pin 3 (F7); RH front turn / clearance lamp F8 pin 3 (F8); Front wiper motor F9 pin 3 (cowl, driver side) (F9); Condenser fan plug (+) (FAN-COND); Condenser fan ground plug (FAN-COND-GND); Radiator fan plug (+) (FAN-RAD); Radiator fan ground plug (FAN-RAD-GND); Ground stud EA, RH front fender (GND-EA); Ground stud EB, LH front fender (GND-EB); Ground stud EB, block strap lug (GND-EB-2); LH headlamp H1 pin 1 (H1); RH headlamp H2 pin 2 (H2); LH horn (HORN-LH); RH horn (HORN-RH); Power steering pump plug A (MRS-A); LH retract motor R2 pin 2 (R2); RH retract motor R3 pin 2 (R3); Engine block ground stud, strap lug (T-ENG-BLOCK-2); Washer motor W1 pin 1 (RH front corner, low) (W1)


HARNESS	DEVICES AND PLUGS
HeavyDC	Battery + post (trunk) (BATT-POS); Trunk relay box (BATT-RELAY-BLOCK); Ground bolt IG, RH kick panel (GND-IG); Jump start post (JUMP-POST); Firewall battery (RADLOK-NEG-CAB); Firewall battery (RADLOK-NEG-ENG); Firewall battery + connector (cabin side) (RADLOK-POS-CAB); Firewall battery + connector (engine side) (RADLOK-POS-ENG); Alternator B+ stud (T-ALT-B); Engine block ground stud, main lug (T-ENG-BLOCK); POWER box NEG bar, BAT- stud (T-PWR-NEG-BAT); POWER box NEG bar, GND ID stud (T-PWR-NEG-ID); POWER box NEG bar, GND IG stud (T-PWR-NEG-IG); POWER box NEG bar, RADLOK- stud (T-PWR-NEG-RADLOK); POWER box + bar, BAT+ IN stud (T-PWR-POS-BAT); POWER box + bar, RADLOK+ stud (T-PWR-POS-RADLOK); Starter B+ stud (T-STARTER-B); Battery (T-TRUNK-NEG)
RearFuel	Fuel level sender (FUEL-LEVEL); Fuel pump (FUEL-PUMP); Ground point BL, back panel centre (GND-BL); Fuel sender inline plug, sender side, trunk (IX-FUEL) (IX-FUEL-S)
Dash	OEM cluster plug C13 (B) pin 2, G-B wire (C13); OEM cluster plug C14 (C) pin 9, B-O wire (C14); OEM combination switch plug C16 (B) pin 5 (cruise control switch), W wire (C16); OEM cruise control clutch switch C17 pin 2, B wire (C17); ECUMaster CSB3 (CSB3); Charge LED (D-CHG); High beam LED (D-HB); Oil pressure LED (D-OIL); Park brake LED (D-PK); Turn LH LED (D-TL); Turn RH LED (D-TR); RealDash Pi 5 A inline fuse (F-PI); OEM cowl plug II1 pin 3 (instrument panel centre, cowl side), GR (II1); 8-channel opto board (OPTO-8); Cruise resistor on the CSB3 (R-CRUISE); OEM dimmer rheostat R10 pin 1 (left of the steering wheel), green TAIL (R10); OEM stop lamp switch S9 pin 1 (pedal), G-W wire (S9); Centre cluster CAN board leads (T-CLUSTER-CAN); Centre cluster ground input lead (T-CLUSTER-GND-LEAD); Centre cluster headlight sense input (T-CLUSTER-HL); Centre cluster +12 V input lead (T-CLUSTER-PWR); RealDash Pi CAN adapter leads (T-REALDASH-CAN); RealDash Pi ground input lead (T-REALDASH-GND-LEAD); RealDash Pi +12 V input lead (T-REALDASH-PWR)
AntiTheft	Alarm +12 V point (AL-12V); Shock sensor +12 V point (AL-12V-SHK); Alarm door trigger point (AL-DOOR); Alarm ground point (AL-GND); Alarm hood trigger point (AL-HOOD); Hood pin lead, front end (RH front corner) (AL-HOOD-BAY); Alarm ignition point (AL-IGN); Alarm immobiliser output point (AL-IMMOB); Alarm siren output point (AL-SIREN); Siren + lead, engine-bay end (AL-SIREN-BAY); Siren ground lead, engine-bay end (AL-SIREN-GND-BAY); OEM door courtesy switch line (R-W) at J/B No.1 connector 1B pin 11 (left kick panel); 0 V with any door open (T-AT-DOOR); Alarm ground ring terminal (chassis point at install) (T-AT-GND)
WheelSpeed-Front	Front wheel-speed inline plug, sensor side (IX-WS-F) (IX-WS-F-P); Front VR conditioner input plug (VRC-F-IN); Front VR conditioner output plug (VRC-F-OUT); FL wheel speed sensor (WSS-FL); FR wheel speed sensor (WSS-FR)
WheelSpeed-Rear	Rear wheel-speed inline plug, sensor side (IX-WS-R) (IX-WS-R-P); Rear VR conditioner input plug (VRC-R-IN); Rear VR conditioner output plug (VRC-R-OUT); RL wheel speed sensor (WSS-RL); RR wheel speed sensor (WSS-RR)
Shared hubs	BUS-5V-2: AB-cabin, Dash; BUS-SW12: AB-cabin, CabinPower, RearFuel; ECU-B: AB-cabin, AntiTheft; GND-ID: Dash, HeavyDC; IE1: CabinPower, EngineRoom-C; IG2: AB-cabin, EngineRoom-C; JB1: AB-cabin, CabinPower, EngineRoom-C; K-ACC: AB-cabin, CabinPower, EngineRoom-C; K-EFI: AB-cabin, CabinPower; K-EPS: AB-cabin, CabinPower, EngineRoom-C; K-EPS-EN: AB-cabin, CabinPower; K-ETB: AB-cabin, CabinPower; K-FAN: AB-cabin, CabinPower, EngineRoom-C; K-FAN2: AB-cabin, CabinPower, EngineRoom-C; K-FP: AB-cabin, HeavyDC, RearFuel; K-HORN: CabinPower, EngineRoom-C; K-ON: AB-cabin, CabinPower; KILL-SW: AB-cabin, EngineRoom-C, HeavyDC; LOGIC: AB-cabin, CabinPower, Dash, EngineRoom-C; RB4: AB-cabin, CabinPower, EngineRoom-C; RLY-DRL: CabinPower, EngineRoom-C

AB-cabin

Link G4X plug A ECU-A · 4-1437290-1

FACE SOURCED

ECU plug A

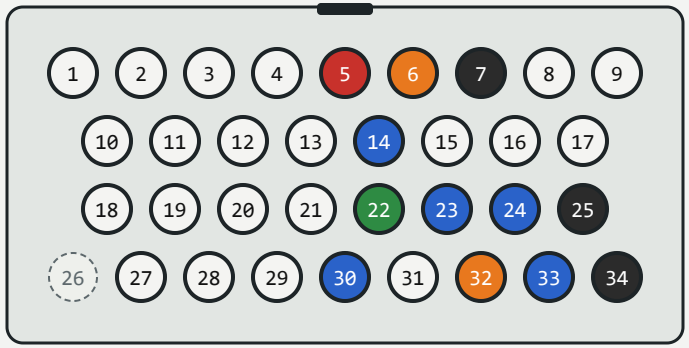

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w111_c	Injector 4 drive (-)	DRB102 bulkhead, cabin side · pin 24	3-1447221-4
2	20 White	w110_c	Injector 3 drive (-)	DRB102 bulkhead, cabin side · pin 23	3-1447221-4
3	20 White	w109_c	Injector 2 drive (-)	DRB102 bulkhead, cabin side · pin 22	3-1447221-4
4	20 White	w108_c	Injector 1 drive (-)	DRB102 bulkhead, cabin side · pin 21	3-1447221-4
5	18 Red	w_a5_pin	Switched +12 V	Splice to: Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 2; DRB102 bulkhead, cabin side · pin 30; ECU wake diode (ignition feed) · pin 2	3-1447221-3
6	20 Orange	w19	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; DRB102 bulkhead, cabin side · pin 63; DRB102 bulkhead, cabin side · pin 67	3-1447221-4
7	20 Black	w_drain_ecu_a	Shield drain A7	Splice to: Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 47	3-1447221-4
8	20 White	w200_c	Crank sensor signal	DRB102 bulkhead, cabin side · pin 74	3-1447221-4
9	20 White	w_trig2_pin	Cam sensor signal	Splice to: DRB102 bulkhead, cabin side · pin 64; Cam signal pull-up resistor 1.8 k to +8 V · pin 2	3-1447221-4

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
10	20 White	w123_c	Coil 4 trigger (IGT)	DRB102 bulkhead, cabin side · pin 12	3-1447221-4
11	20 White	w122_c	Coil 3 trigger (IGT)	DRB102 bulkhead, cabin side · pin 11	3-1447221-4
12	20 White	w121_c	Coil 2 trigger (IGT)	DRB102 bulkhead, cabin side · pin 10	3-1447221-4
13	20 White	w120_c	Coil 1 trigger (IGT)	DRB102 bulkhead, cabin side · pin 9	3-1447221-4
14	20 Blue	w38	Pedal 1 signal main	Accelerator pedal sensor · pin 6	3-1447221-4
15	20 White	w201_c	Coolant temp signal	DRB102 bulkhead, cabin side · pin 70	3-1447221-4
16	20 White	w202_c	Intake temp signal	DRB102 bulkhead, cabin side · pin 33	3-1447221-4
17	20 White	w26_c	MAP sensor signal	DRB102 bulkhead, cabin side · pin 17	3-1447221-4
18	20 White	w_ac_kill	A/C cancel (ACT)	OEM A/C amplifier	3-1447221-4
19	18 White	w_fp85	Fuel pump relay (-)	Trunk relay box relay K1 (fuel pump) · terminal 85	3-1447221-3
20	20 White	w81	ETB relay coil (-)	LOGIC fuse box relay M4 (ETB power) · terminal 85	3-1447221-4
21	20 White	w103_c	Boost solenoid (-)	DRB102 bulkhead, cabin side · pin 58	3-1447221-4
22	20 Green	w128_c	Throttle pos 1 main	DRB102 bulkhead, cabin side · pin 42	3-1447221-4
23	20 Blue	cab_fspur_l	FL conditioned out	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 3	3-1447221-4
24	18 Blue	w68	Sensor ground A24 (ECU Gnd Out)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 1	3-1447221-3
25	18 Black	w70	ECU power ground	Splice to: Link G4X plug A · pin 34; Link G4X plug B · pin 25; Link G4X plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	3-1447221-3
26	*spare*				
27	20 White	w_mrs_c	EHPS pump speed	DRB102 bulkhead, cabin side · pin 84	3-1447221-4


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
28	18 White	w76	EFI relay coil (-)	POWER fuse box relay R2 (EFI main) · terminal 85	3-1447221-3
29	18 White	w_fan85	Rad fan relay (-)	POWER fuse box relay R4 (radiator fan) · terminal 85	3-1447221-3
30	20 Blue	w16_c	Turbo speed signal	DRB102 bulkhead, cabin side · pin 53	3-1447221-4
31	20 White	w48_c	Flex fuel signal	DRB102 bulkhead, cabin side · pin 31	3-1447221-4
32	18 Orange	w67	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 1	3-1447221-3
33	20 Blue	w129_c	Throttle pos 2 sub	DRB102 bulkhead, cabin side · pin 44	3-1447221-4
34	18 Black	w_a34	ECU power ground	Splice to: Link G4X plug A · pin 25; Link G4X plug B · pin 25; Link G4X plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	3-1447221-3

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin

DRB102 bulkhead, cabin side DRB102-CABIN · DRB12-102PAE-L018 + DRBF-1A

FACE SOURCED

Firewall bulkhead connector (cabin side)

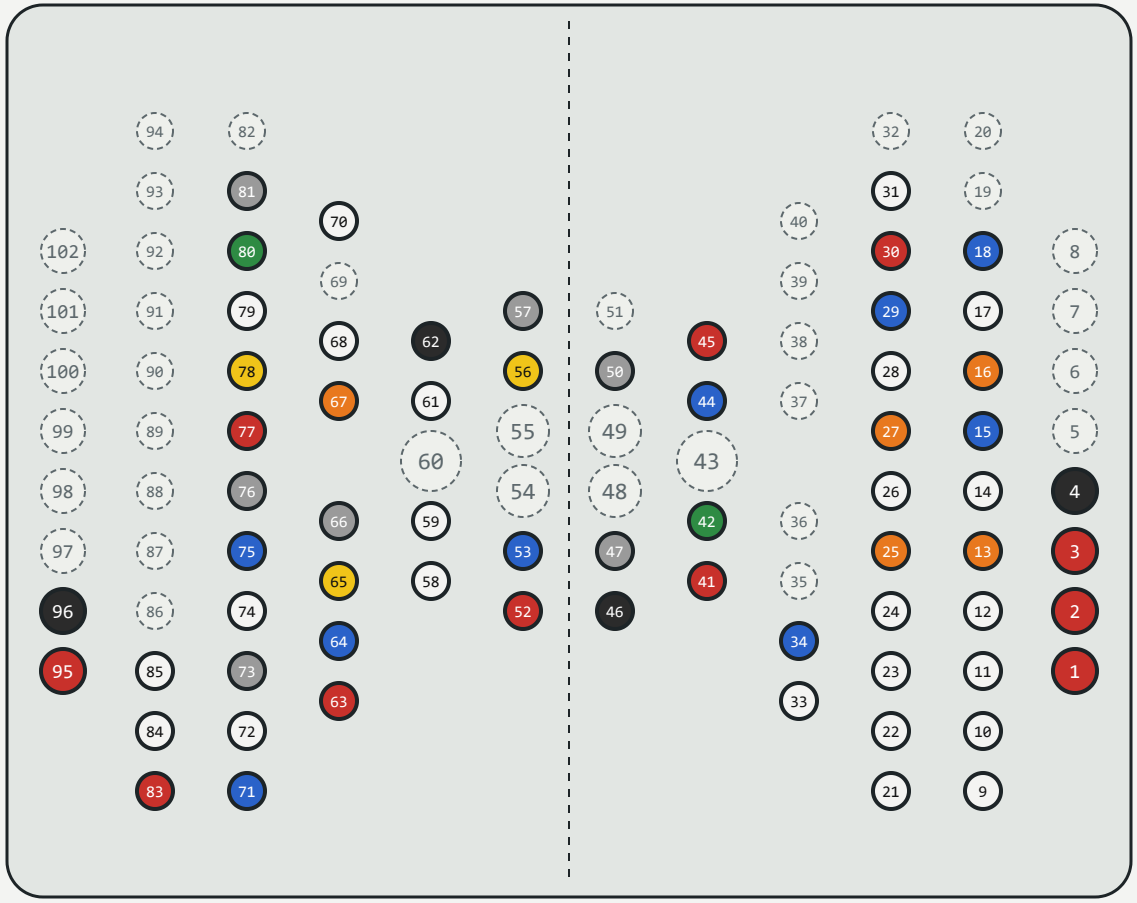

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_cop_pwr_ac	Ignition coil +12 V	LOGIC fuse box · fuse BUS2-3	0460-220-1231
2	14 Red	w_inj_pwr_ac	Injector +12 V	LOGIC fuse box · fuse BUS2-4	0460-220-1231
3	12 Red	w_strl_c	Starter solenoid S	OEM R/B No.4 starter relay pin 4 (RH kick), starter out	0460-220-1231

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
4	■ 14 Black	w_cop_gnd_ac	Ground	Splice to: DRB102 bulkhead, cabin side · pin 96; DRB102 bulkhead, cabin side · pin 62; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CSB3 · pin 2; OEM combination switch plug C16 (B) pin 17 (cruise control switch), BR wire; 8-channel opto board · pin COM1; Centre cluster ground input lead; RealDash Pi ground input lead; OEM A/C amplifier A15	0460-220-1231
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				
9	□ 20 White	w120_c	Coil 1 trigger (IGT)	Link G4X plug A · pin 13	0460-202-1631
10	□ 20 White	w121_c	Coil 2 trigger (IGT)	Link G4X plug A · pin 12	0460-202-1631
11	□ 20 White	w122_c	Coil 3 trigger (IGT)	Link G4X plug A · pin 11	0460-202-1631
12	□ 20 White	w123_c	Coil 4 trigger (IGT)	Link G4X plug A · pin 10	0460-202-1631
13	■ 20 Orange	w_5v_brail_c46	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 6	0460-202-1631
14	□ 20 White	w32_c	Fuel pressure signal	Link G4X plug B · pin 16	0460-202-1631
15	■ 20 Blue	w_gnd_b_c21	Sensor ground B22 (ECU Gnd Out)	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 8	0460-202-1631
16	■ 20 Orange	w_5v_a_c39	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 3	0460-202-1631
17	□ 20 White	w26_c	MAP sensor signal	Link G4X plug A · pin 17	0460-202-1631
18	■ 20 Blue	w_gnd_a_c44	Sensor ground A24 (ECU Gnd Out)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 6	0460-202-1631
19	*spare*				
20	*spare*				
21	□ 20 White	w108_c	Injector 1 drive (-)	Link G4X plug A · pin 4	0460-202-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
22	20 White	`w109_c`	Injector 2 drive (-)	Link G4X plug A · pin 3	`0460-202-1631`
23	20 White	`w110_c`	Injector 3 drive (-)	Link G4X plug A · pin 2	`0460-202-1631`
24	20 White	`w111_c`	Injector 4 drive (-)	Link G4X plug A · pin 1	`0460-202-1631`
25	20 Orange	`w_5v_brail_c47`	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 7	`0460-202-1631`
26	20 White	`w35_c`	Coolant press signal	Link G4X plug B · pin 23	`0460-202-1631`
27	20 Orange	`w_5v_brail_c45`	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 5	`0460-202-1631`
28	20 White	`w29_c`	Oil pressure signal	Link G4X plug B · pin 15	`0460-202-1631`
29	20 Blue	`w_gnd_b_c19`	Sensor ground B22 (ECU Gnd Out)	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 7	`0460-202-1631`
30	18 Red	`w_rail_sp_sw12_c`	Switched +12 V	Splice to: Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 2; ECU wake diode (ignition feed) · pin 2; Link G4X plug A · pin 5	`0460-202-1631`
31	20 White	`w48_c`	Flex fuel signal	Link G4X plug A · pin 31	`0460-202-1631`
32	*spare*				
33	20 White	`w202_c`	Intake temp signal	Link G4X plug A · pin 16	`0460-202-1631`
34	20 Blue	`w_rail_sp_gndout_c`	Sensor ground A24 (ECU Gnd Out)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 2	`0460-202-1631`
35	*spare*				
36	*spare*				
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
41	20 Red	w_rail_sp_5v_c	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 2	0460-202-1631
42	20 Green	w128_c	Throttle pos 1 main	Link G4X plug A · pin 22	0460-202-1631
43	*spare*				
44	20 Blue	w129_c	Throttle pos 2 sub	Link G4X plug A · pin 33	0460-202-1631
45	18 Red	w124_c	ETB motor +	Link G4X plug B · pin 18	0460-202-1631
46	18 Black	w215_c	ETB motor -	Link G4X plug B · pin 26	0460-202-1631
47	Shield	w_shc_etbs	Shield drain A7	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57	0460-202-1631
48	*spare*				
49	*spare*				
50	Shield	w_shc_etbm	Shield drain B17	Splice to: DRB102 bulkhead, cabin side · pin 73; Link G4X plug B · pin 17; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5	0460-202-1631
51	*spare*				
52	20 Red	w_5v_a_c40	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 4	0460-202-1631
53	20 Blue	w16_c	Turbo speed signal	Link G4X plug A · pin 30	0460-202-1631
54	*spare*				
55	*spare*				
56	20 Yellow	w_gnd_a_c43	Sensor ground A24 (ECU Gnd Out)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 5	0460-202-1631
57	Shield	w_shc_turbo	Shield drain A7	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 47	0460-202-1631
58	20 White	w103_c	Boost solenoid (-)	Link G4X plug A · pin 21	0460-202-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
59	20 White	w204_c	Charge temp signal	Link G4X plug B · pin 7	0460-202-1631
60	*spare*				
61	20 White	w203_c	Oil temp signal	Link G4X plug B · pin 6	0460-202-1631
62	20 Black	w_flex_ret_c	Ground	Splice to: DRB102 bulkhead, cabin side · pin 96; DRB102 bulkhead, cabin side · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CSB3 · pin 2; OEM combination switch plug C16 (B) pin 17 (cruise control switch), BR wire; 8-channel opto board · pin COM1; Centre cluster ground input lead; RealDash Pi ground input lead; OEM A/C amplifier A15	0460-202-1631
63	20 Red	w_rail_sp_8v_c	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; Link G4X plug A · pin 6; DRB102 bulkhead, cabin side · pin 67	0460-202-1631
64	20 Blue	w_cam_sig_c	Cam sensor signal	Splice to: Link G4X plug A · pin 9; Cam signal pull-up resistor 1.8 k to +8 V · pin 2	0460-202-1631
65	20 Yellow	w_gnd_a_c42	Sensor ground A24 (ECU Gnd Out)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 4	0460-202-1631
66	Shield	w_shc_cam	Shield drain A7	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 47	0460-202-1631
67	20 Orange	w_rail_sp_8v_vss_c	+8 V sensor supply	Splice to: Cam signal pull-up resistor 1.8 k to +8 V · pin 1; Link G4X plug A · pin 6; DRB102 bulkhead, cabin side · pin 63	0460-202-1631
68	20 White	w_vss_sig_c	Gearbox speed signal	Link G4X plug B · pin 29	0460-202-1631
69	*spare*				
70	20 White	w201_c	Coolant temp signal	Link G4X plug A · pin 15	0460-202-1631
71	20 Blue	w205_c	Knock sensor signal	Link G4X plug B · pin 9	0460-202-1631
72	20 White	w12_c	Sensor ground B22 (ECU Gnd Out)	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 6	0460-202-1631
73	Shield	w_shc_knock1	Shield drain B17	Splice to: DRB102 bulkhead, cabin side · pin 50; Link G4X plug B · pin 17; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5	0460-202-1631
74	20 White	w200_c	Crank sensor signal	Link G4X plug A · pin 8	0460-202-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
75	20 Blue	w_gnd_a_c41	Sensor ground A24 (ECU Gnd Out)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 3	0460-202-1631
76	Shield	w_shc_crank	Shield drain A7	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 47	0460-202-1631
77	16 Red	w_rev_feed_c	+12 V to reverse switch	OEM IG2 pin 4 (under the ECU, cowl side)	0460-202-1631
78	16 Yellow	w_rev_sw_c	Reverse +12 V	Splice to: 8-channel opto board · pin IN2; OEM IG2 pin 13 (under the ECU, cowl side)	0460-202-1631
79	20 White	wc_h_bh_bc	CAN H	Splice to: ECU plug C (CAN / comms) · pin 3; ECUMaster CSB3 · pin 5; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	0460-202-1631
80	20 Green	wc_l_bh_bc	CAN L	Splice to: ECU plug C (CAN / comms) · pin 4; ECUMaster CSB3 · pin 6; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	0460-202-1631
81	Shield	cab_canbh_bc_sh	CAN shield drain	Splice to: ECU plug C (CAN / comms) · pin 1; Shield, not connected at the device end	0460-202-1631
82	*spare*				
83	18 Red	w_fb_mrs_en	EHPS enable +12 V	LOGIC fuse box relay M6 (EPS enable) · terminal 87	0460-202-1631
84	20 White	w_mrs_c	EHPS pump speed	Link G4X plug A · pin 27	0460-202-1631
85	18 White	w_eps_rly	EHPS relay coil (-)	EPS pump relay (beside the POWER fuse box) · terminal 85	0460-202-1631
86	*spare*				
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				
94	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
95	14 Red	`w_lam12_cp`	CAN-Lambda +12 V	LOGIC fuse box relay M7 (ON-only feed (CAN-Lambda)) · terminal 87	`0460-220-1231`
96	14 Black	`w_lamg_ac`	Ground	Splice to: DRB102 bulkhead, cabin side · pin 62; DRB102 bulkhead, cabin side · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; ECUMaster CSB3 · pin 2; OEM combination switch plug C16 (B) pin 17 (cruise control switch), BR wire; 8-channel opto board · pin COM1; Centre cluster ground input lead; RealDash Pi ground input lead; OEM A/C amplifier A15	`0460-220-1231`
97	*spare*				
98	*spare*				
99	*spare*				
100	*spare*				
101	*spare*				
102	*spare*				


Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-cabin

+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V)

`BUS-5V · DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)`

FACE SOURCED

+5 V sensor supply bus plug 1

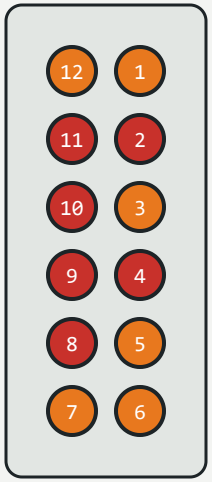

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Orange	`w67`	+5 V sensor supply	Link G4X plug A · pin 32	`0462-201-16141`
2	20 Red	`w_rail_sp_5v_c`	+5 V sensor supply	DRB102 bulkhead, cabin side · pin 41	`0462-201-16141`
3	20 Orange	`w_5v_a_c39`	+5 V sensor supply	DRB102 bulkhead, cabin side · pin 16	`0462-201-16141`
4	20 Red	`w_5v_a_c40`	+5 V sensor supply	DRB102 bulkhead, cabin side · pin 52	`0462-201-16141`
5	20 Orange	`w_5v_brail_c45`	+5 V sensor supply	DRB102 bulkhead, cabin side · pin 27	`0462-201-16141`
6	20 Orange	`w_5v_brail_c46`	+5 V sensor supply	DRB102 bulkhead, cabin side · pin 13	`0462-201-16141`
7	20 Orange	`w_5v_brail_c47`	+5 V sensor supply	DRB102 bulkhead, cabin side · pin 25	`0462-201-16141`
8	20 Red	`w_aps_vc1`	+5 V sensor supply	Accelerator pedal sensor · pin 4	`0462-201-16141`
9	20 Red	`w210`	+5 V sensor supply	Accelerator pedal sensor · pin 1	`0462-201-16141`
10	20 Red	`cab_fspur_5v`	+5 V sensor supply	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 1	`0462-201-16141`
11	20 Red	`cab_rspur_5v`	+5 V sensor supply	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 1	`0462-201-16141`
12	20 Orange	`w_5v_bus_link`	+5 V sensor supply	+5 V bussed plug 2 at the ECU, fed from BUS-5V pin 12 (BUS-5V-2) · pin 1	`0462-201-16141`


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

+5 V bussed plug 2 at the ECU, fed from BUS-5V pin 12 (BUS-5V-2)

`BUS-5V-2 · DT06-08SA + W8S; DT04-08PA-P021 (bussed receptacle)`

FACE SOURCED

+5 V sensor supply bus plug 2

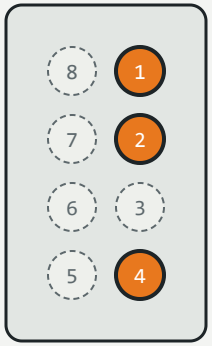

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	`w_5v_bus_link`	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 12	`0462-201-16141`
2	20 Orange	`w_cru_5v_ac`	+5 V sensor supply	Cruise resistor on the CSB3 · pin 1	`0462-201-16141`
4	20 Orange	`w44`	+5 V sensor supply	Fuel level pull-up resistor 470 ohm to +5 V · pin 2	`0462-201-16141`
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, Dash

Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A)

`BUS-GNDOUT-A · DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)`

FACE SOURCED

Sensor ground bus plug, ECU plug A

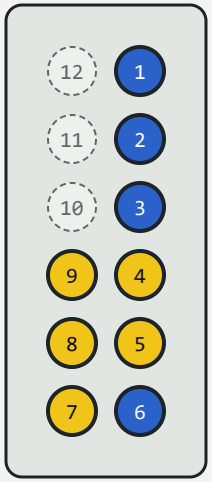

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	`w68`	Sensor ground A24 (ECU Gnd Out)	Link G4X plug A · pin 24	`0462-201-16141`
2	20 Blue	`w_rail_sp_gndout_c`	Sensor ground A24 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 34	`0462-201-16141`
3	20 Blue	`w_gnd_a_c41`	Sensor ground A24 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 75	`0462-201-16141`
4	20 Yellow	`w_gnd_a_c42`	Sensor ground A24 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 65	`0462-201-16141`
5	20 Yellow	`w_gnd_a_c43`	Sensor ground A24 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 56	`0462-201-16141`
6	20 Blue	`w_gnd_a_c44`	Sensor ground A24 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 18	`0462-201-16141`
7	20 Yellow	`w40`	Sensor ground A24 (ECU Gnd Out)	Accelerator pedal sensor · pin 5	`0462-201-16141`
8	20 Yellow	`w_aps_gnd2`	Sensor ground A24 (ECU Gnd Out)	Accelerator pedal sensor · pin 2	`0462-201-16141`
9	20 Yellow	`cab_fspur_gnd`	Sensor ground A24 (ECU Gnd Out)	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 2	`0462-201-16141`
10	*spare*				
11	*spare*				
12	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12)

`BUS-SW12 · DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)`

FACE SOURCED

Switched +12 V bus plug (glove box, by the LOGIC box)

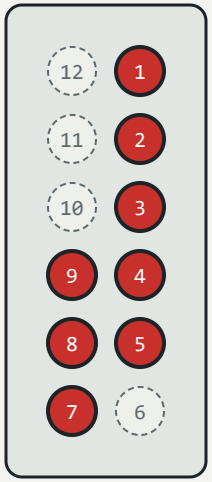

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`w_cp_sw12_in`	Switched +12 V	LOGIC fuse box · fuse BUS2-2	`0462-201-16141`
2	18 Red	`w_fb_sw12`	Switched +12 V	Splice to: ECU wake diode (ignition feed) · pin 2; Link G4X plug A · pin 5; DRB102 bulkhead, cabin side · pin 30	`0462-201-16141`
3	18 Red	`w_k_fp_86_cp`	Switched +12 V	Trunk relay box relay K1 (fuel pump) · terminal 86	`0462-201-16141`
4	18 Red	`w_k_fan_86_cp`	Switched +12 V	POWER fuse box relay R4 (radiator fan) · terminal 86	`0462-201-16141`
5	20 Red	`w_k_etb_86_cp`	Switched +12 V	LOGIC fuse box relay M4 (ETB power) · terminal 86	`0462-201-16141`
7	18 Red	`w_k_fan2_86_cp`	Switched +12 V	POWER fuse box relay R5 (condenser fan) · terminal 86	`0462-201-16141`
8	18 Red	`w_k_eps_86_cp`	Switched +12 V	EPS pump relay (beside the POWER fuse box) · terminal 86	`0462-201-16141`


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
9	18 Red	w_k_eps_en_86_cp	Switched +12 V	LOGIC fuse box relay M6 (EPS enable) · terminal 86	0462-201-16141
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, CabinPower, RearFuel

LOGIC fuse box relay M6 (EPS enable) K-EPS-EN · 6-1419137-4

FACE SOURCED

Power steering pump enable relay

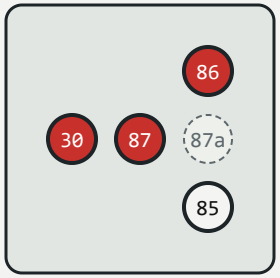

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	18 Red	w_fb_k_eps_en_30_cp	+12 V in	LOGIC fuse box · fuse BUS2-7	42281-1
85	18 White	w_eps_trig	Coil (-)	Link G4X plug B · pin 12	280919-2
86	18 Red	w_k_eps_en_86_cp	Coil +	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 9	280919-2
87	18 Red	w_fb_mrs_en	+12 V out	DRB102 bulkhead, cabin side · pin 83	42281-1
87a	*spare*				


Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

Link G4X plug B

ECU-B · 4-1437290-0

FACE SOURCED

ECU plug B

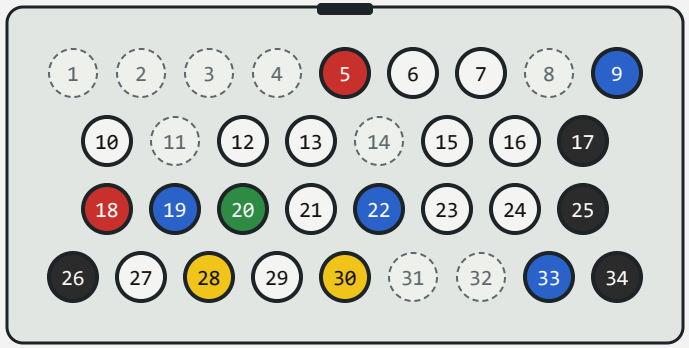

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	*spare*				
3	*spare*				
4	*spare*				
5	18 Red	w82_ac	V Ethrottle (ETB H-bridge supply)	LOGIC fuse box relay M4 (ETB power) · terminal 87	3-1447221-3
6	20 White	w203_c	Oil temp signal	DRB102 bulkhead, cabin side · pin 61	3-1447221-4
7	20 White	w204_c	Charge temp signal	DRB102 bulkhead, cabin side · pin 59	3-1447221-4
8	*spare*				
9	20 Blue	w205_c	Knock sensor signal	DRB102 bulkhead, cabin side · pin 71	3-1447221-4
10	20 White	w_tach	Engine speed (tacho)	Splice to: OEM A/C amplifier A15; A/C lock sensor resistor 4.7 k · pin 1	3-1447221-4
11	*spare*				
12	18 White	w_eps_trig	EPS enable relay (-)	LOGIC fuse box relay M6 (EPS enable) · terminal 85	3-1447221-3

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
13	18 White	w_fan285	Cond fan relay (-)	POWER fuse box relay R5 (condenser fan) · terminal 85	3-1447221-3
14	*spare*				
15	20 White	w29_c	Oil pressure signal	DRB102 bulkhead, cabin side · pin 28	3-1447221-4
16	20 White	w32_c	Fuel pressure signal	DRB102 bulkhead, cabin side · pin 14	3-1447221-4
17	20 Black	w_drain_ecu_b	Shield drain B17	Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 50; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5	3-1447221-4
18	18 Red	w124_c	ETB motor +	DRB102 bulkhead, cabin side · pin 45	3-1447221-3
19	20 Blue	cab_rspur_r	Rear right wheel speed	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 4	3-1447221-4
20	20 Green	cab_rspur_l	Rear left wheel speed	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 3	3-1447221-4
21	20 White	cab_fspur_r_ac	FR conditioned out	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 4	3-1447221-4
22	18 Blue	w69	Sensor ground B22 (ECU Gnd Out)	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 1	3-1447221-3
23	20 White	w35_c	Coolant press signal	DRB102 bulkhead, cabin side · pin 26	3-1447221-4
24	20 White	w_fl_sig_pin	Fuel level signal	Splice to: Fuel sender inline plug, harness side, trunk (IX-FUEL) · pin 1; Fuel level pull-up resistor 470 ohm to +5 V · pin 1	3-1447221-4
25	18 Black	w_b25_ac	ECU power ground	Splice to: Link G4X plug A · pin 25; Link G4X plug A · pin 34; Link G4X plug B · pin 34; POWER box NEG bar, GND stud, ring 1 of 3	3-1447221-3
26	18 Black	w215_c	ETB motor -	DRB102 bulkhead, cabin side · pin 46	3-1447221-3
27	20 White	w_at_immob2	Anti-theft input	Alarm immobiliser output point	3-1447221-4
28	18 Yellow	w_ign	Ignition +12 V (IGN fuse)	OEM J/B No.1 (LH kick panel) 1H pin 7, B-O	3-1447221-3
29	20 White	w_vss_sig_c	Gearbox speed signal	DRB102 bulkhead, cabin side · pin 68	3-1447221-4
30	20 Yellow	w_start	Start request	LOGIC fuse box · fuse BUS2-13	3-1447221-4


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
31	*spare*				
32	*spare*				
33	20 Blue	`w_aps_vpa2`	Pedal 2 signal sub	Accelerator pedal sensor · pin 3	`3-1447221-4`
34	18 Black	`w_b34_ac`	ECU power ground	Splice to: Link G4X plug A · pin 25; Link G4X plug A · pin 34; Link G4X plug B · pin 25; POWER box NEG bar, GND stud, ring 1 of 3	`3-1447221-3`

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, AntiTheft

Trunk relay box relay K1 (fuel pump) K-FP · V23132-A2001-B200

FACE SOURCED

Fuel pump relay

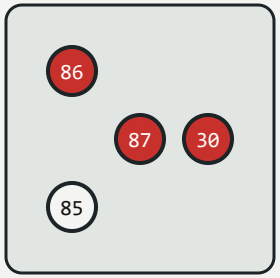

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w_fp_30	+12 V in	Trunk relay box · FP fuse (40 A)	TBD
85	18 White	w_fp85	Coil (-)	Link G4X plug A · pin 19	282110-1
86	18 Red	w_k_fp_86_cp	Coil +	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 3	282110-1
87	10 Red	w_fpump_r	+12 V out	Fuel pump · pin 1	TBD
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, HeavyDC, RearFuel

POWER fuse box relay R4 (radiator fan) K-FAN · 1-1414147-0

FACE SOURCED

Radiator fan relay

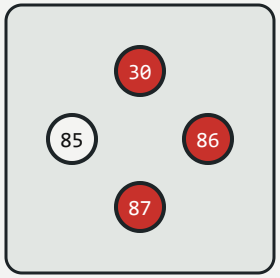

bottom (terminal side) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w_fan_pwr	+12 V out	Radiator fan plug (+) · pin 1	280756-4
85	18 White	w_fan85	Coil (-)	Link G4X plug A · pin 29	42281-1
86	18 Red	w_k_fan_86_cp	Coil +	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 4	42281-1
87	10 Red	w_fb_k_fan_87_cp	+12 V in	POWER box AMI IN-4 fuse, output stud	280756-4

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

EPS pump relay (beside the POWER fuse box) K-EPS · V23132-A2001-B200

FACE SOURCED

Power steering pump relay

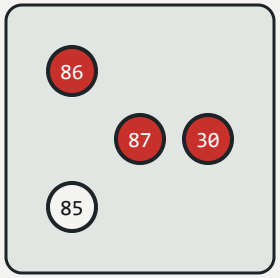

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	8 Red	w_fb_k_eps_30_ac	+12 V in	POWER box AMI OUT-6 fuse, output stud	TBD
85	18 White	w_eps_rly	Coil (-)	DRB102 bulkhead, cabin side · pin 85	282110-1
86	18 Red	w_k_eps_86_cp	Coil +	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 8	282110-1
87	8 Red	w_eps_pwr_bc	+12 V out	Power steering pump plug A · pin 1	TBD
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

LOGIC fuse box relay M5 (A/C clutch) K-ACC · 6-1419137-4

FACE SOURCED

A/C clutch relay

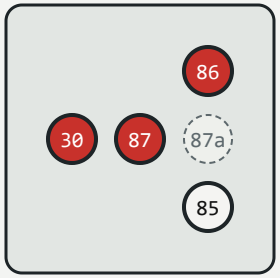

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	w_fb_k_acc_30_cp	+12 V in	Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 86; LOGIC fuse box · fuse BUS2-8	42281-1
85	18 White	w_acc_trig	Coil (-)	OEM A/C amplifier A15	280919-2
86	18 Red	w_acc86	Coil +	Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 30; LOGIC fuse box · fuse BUS2-8	280919-2
87	16 Red	w_acc_clutch	+12 V out	A/C compressor A4 pin 4	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

Accelerator pedal sensor APS-PEDAL · TBD

FACE NOT SOURCED

Accelerator pedal sensor

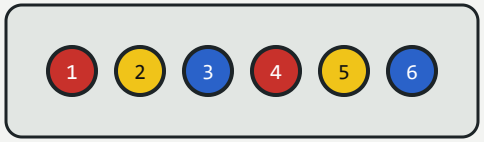

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w210	+5 V (sensor 2)	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 9	TBD
2	20 Yellow	w_aps_gnd2	Gnd (sensor 2)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 8	TBD
3	20 Blue	w_aps_vpa2	Signal 2 (sub)	Link G4X plug B · pin 33	TBD
4	20 Red	w_aps_vc1	+5 V (sensor 1)	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 8	TBD
5	20 Yellow	w40	Gnd (sensor 1)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 7	TBD
6	20 Blue	w38	Signal 1 (main)	Link G4X plug A · pin 14	TBD

Pin numbers: TBD · harness AB-cabin

Front wheel-speed inline plug, VRC side (IX-WS-F) IX-WS-F-S · DT06-6S + W6S

FACE SOURCED

Inline connector for front wheel speed (cabin side)

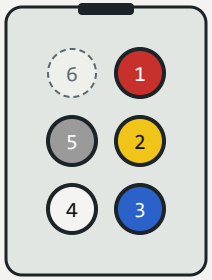

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_fspur_5v	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 10	0462-201-1631
2	20 Yellow	cab_fspur_gnd	Sensor ground A24 (ECU Gnd Out)	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 9	0462-201-1631
3	20 Blue	cab_fspur_l	FL conditioned out	Link G4X plug A · pin 23	0462-201-1631
4	20 White	cab_fspur_r_ac	FR conditioned out	Link G4X plug B · pin 21	0462-201-1631
5	Shield	cab_fspur_sh	Shield drain A7	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 47	0462-201-1631
6	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B)

`BUS-GNDOUT-B · DT06-12SA + W12S; DT04-12PA-P021 (bussed receptacle)`

FACE SOURCED

Sensor ground bus plug, ECU plug B

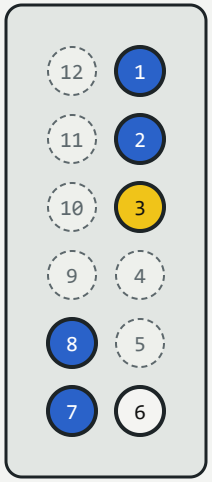

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	w69	Sensor ground B22 (ECU Gnd Out)	Link G4X plug B · pin 22	0462-201-16141
2	20 Blue	w45	Sensor ground B22 (ECU Gnd Out)	Fuel sender inline plug, harness side, trunk (IX-FUEL) · pin 2	0462-201-16141
3	20 Yellow	cab_rspur_gnd	Sensor ground B22 (ECU Gnd Out)	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 2	0462-201-16141
6	20 White	w12_c	Sensor ground B22 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 72	0462-201-16141
7	20 Blue	w_gnd_b_c19	Sensor ground B22 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 29	0462-201-16141
8	20 Blue	w_gnd_b_c21	Sensor ground B22 (ECU Gnd Out)	DRB102 bulkhead, cabin side · pin 15	0462-201-16141
9	*spare*				
10	*spare*				
11	*spare*				
12	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

LOGIC fuse box

LOGIC · ST185-FB-LOGIC rev 7

FACE NOT SOURCED

LOGIC fuse and relay box (glove box)

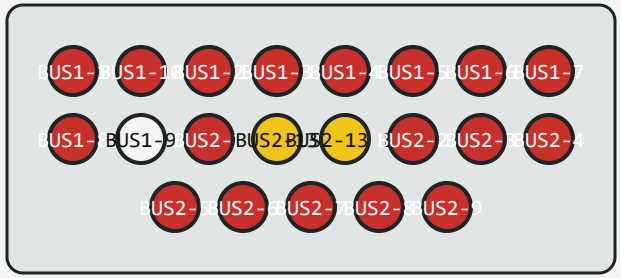

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
BUS1-1	18 Red	w_k_efi_86_cp	EFI relay coil +	POWER fuse box relay R2 (EFI main) · terminal 86	1-968849-1
BUS1-10	16 Red	w_fb_k_etb_30_cp	ETB relay +12 V in	LOGIC fuse box relay M4 (ETB power) · terminal 30	1-968851-1
BUS1-2	14 Red	w_hl_cp	Low-beam fuse +12 V	Splice to: LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 30; LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 86; DRL cut relay (beside the LOGIC box) · pin 86	1-968851-1
BUS1-3	14 Red	w_hr_cp	High-beam fuse +12 V	Splice to: LOGIC fuse box relay M2 (high beam (both headlamps)) · terminal 30	1-968851-1
BUS1-4	14 Red	w_hz_cp	Hazard and horn fuse +12 V	Splice to: OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 30; LOGIC fuse box relay M3 (horn) · terminal 86	1-968851-1
BUS1-5	14 Red	w_pmu_dome	Dome feed to J/B No.1	OEM J/B No.1 1H pin 2 (left kick)	1-968851-1
BUS1-6	14 Red	w_fb_k_on_30_cp	ON relay +12 V in	LOGIC fuse box relay M7 (ON-only feed (CAN-Lambda)) · terminal 30	1-968851-1
BUS1-7	20 Red	w_at_12v_tie_cp	Alarm +12 V	Splice to: Alarm +12 V point	1-968849-1
BUS1-8	20 Red	w_at_12v_shk_tie_cp	Shock sensor +12 V	Splice to: Shock sensor +12 V point	1-968849-1
BUS1-9	20 White	w_alt_s_c	Alternator battery sense (S)	Alternator plug · pin 1	1-968849-1

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
BUS2-1	14 Red	w_drl_cp	DRL fuse +12 V	Splice to: LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 30; LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 86; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 86	1-968851-1
BUS2-13	20 Yellow	w_start	Start request	Link G4X plug B · pin 30	1-968849-1
BUS2-13 IN	20 Yellow	w_start_in_cp	Start sw ST1 feed	OEM ST1 lead B-W at old R/B No.4 pin 1, RH kick panel	1-968849-1
BUS2-2	16 Red	w_cp_sw12_in	Switched +12 V	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 1	1-968851-1
BUS2-3	14 Red	w_cop_pwr_ac	Ignition coil +12 V	DRB102 bulkhead, cabin side · pin 1	1-968851-1
BUS2-4	14 Red	w_inj_pwr_ac	Injector +12 V	DRB102 bulkhead, cabin side · pin 2	1-968851-1
BUS2-5	20 Red	w_csb12	CSB3 +12 V	Splice to: ECUMaster CSB3 · pin 1	1-968849-1
BUS2-6	16 Red	w_dev_clu	Cluster +12 V	Splice to: Centre cluster +12 V input lead	1-968851-1
BUS2-7	18 Red	w_fb_k_eps_en_30_cp	EPS enable +12 V in	LOGIC fuse box relay M6 (EPS enable) · terminal 30	1-968849-1
BUS2-8	16 Red	w_acc_fuse	A/C clutch relay +12 V (ACC fuse)	Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 86; LOGIC fuse box relay M5 (A/C clutch) · terminal 30	1-968851-1
BUS2-9	20 Red	w_at_ig_tie_cp	Alarm ignition +12 V	Splice to: Alarm ignition point	1-968849-1

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness AB-cabin, CabinPower, EngineRoom-C, Dash

Fuel sender inline plug, harness side, trunk (IX-FUEL)

IX-FUEL-P · DT04-2P + W2P

FACE SOURCED

Inline connector for fuel level sender (cabin side)



latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_fl_sig	Fuel level signal	Splice to: Link G4X plug B · pin 24; Fuel level pull-up resistor 470 ohm to +5 V · pin 1	0460-202-1631
2	20 Blue	w45	Sensor ground B22 (ECU Gnd Out)	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 2	0460-202-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) IX-WS-R-S · DT06-6S + W6S

FACE SOURCED

Inline connector for rear wheel speed (cabin side)

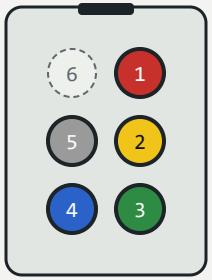

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_rspur_5v	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 11	0462-201-1631
2	20 Yellow	cab_rspur_gnd	Sensor ground B22 (ECU Gnd Out)	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 3	0462-201-1631
3	20 Green	cab_rspur_l	Rear left wheel speed	Link G4X plug B · pin 20	0462-201-1631
4	20 Blue	cab_rspur_r	Rear right wheel speed	Link G4X plug B · pin 19	0462-201-1631
5	Shield	cab_rspur_sh	Shield drain B17	Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 50; Link G4X plug B · pin 17	0462-201-1631
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

POWER fuse box relay R5 (condenser fan) K-FAN2 · 1-1393304-0

FACE SOURCED

Condenser fan relay

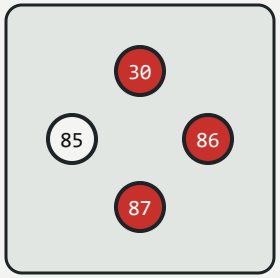

bottom (terminal side) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w_fan2_pwr	+12 V out	Condenser fan plug (+) · pin 1	280756-4
85	18 White	w_fan285	Coil (-)	Link G4X plug B · pin 13	42281-1
86	18 Red	w_k_fan2_86_cp	Coil +	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 7	42281-1
87	10 Red	w_fb_k_fan2_87_ac	+12 V in	POWER box AMI IN-5 fuse, output stud	280756-4

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

LOGIC fuse box relay M4 (ETB power) K-ETB · 4-1904124-2

FACE SOURCED

Throttle body power relay

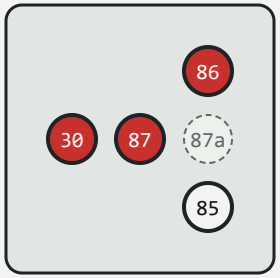

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	w_fb_k_etb_30_cp	+12 V in	LOGIC fuse box · fuse BUS1-10	42281-1
85	20 White	w81	Coil (-)	Link G4X plug A · pin 20	280919-2
86	20 Red	w_k_etb_86_cp	Coil +	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 5	280919-2
87	18 Red	w82_ac	+12 V out	Link G4X plug B · pin 5	42281-1
87a	*spare*				


Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

POWER fuse box relay R2 (EFI main)

K-EFI · 1-1414147-0

FACE SOURCED

EFI main relay

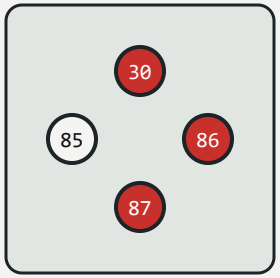

bottom (terminal side) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w77_cp	+12 V out	LOGIC box Bus 2, feed stud	280756-4
85	18 White	w76	Coil (-)	Link G4X plug A · pin 28	42281-1
86	18 Red	w_k_efi_86_cp	Coil +	LOGIC fuse box · fuse BUS1-1	42281-1
87	12 Red	w_fb_k_efi_87_cp	+12 V in	POWER box AMI IN-2 fuse, output stud	280756-4


Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

LOGIC fuse box relay M7 (ON-only feed (CAN-Lambda))

K-ON · 6-1419137-4

FACE SOURCED

Ignition-on relay (CAN-Lambda feed)

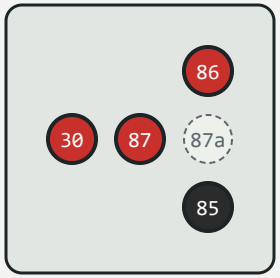

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	w_fb_k_on_30_cp	+12 V in	LOGIC fuse box · fuse BUS1-6	42281-1
85	20 Black	w_k_on_85_cp	Coil (-)	POWER box NEG bar, GND stud, ring 2 of 3	280919-2
86	18 Red	w_k_on_86_cp	Coil +	OEM J/B No.1 (LH kick panel) 1H pin 7, B-O	280919-2
87	14 Red	w_lam12_cp	+12 V out	DRB102 bulkhead, cabin side · pin 95	42281-1
87a	*spare*				


Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

ECU plug C (CAN / comms)

`ECU-C · none (generic round 6-pin plug, not bought)`

FACE NOT SOURCED

ECU plug C (CAN / comms)

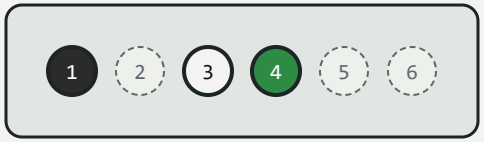

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Black	`w_shd_can_trunk`	CAN shield drain	Splice to: Shield, not connected at the device end; DRB102 bulkhead, cabin side · pin 81	`none (contact comes with the plug)`
2	*spare*				
3	20 White	`wc_h_ecu`	CAN H	Splice to: DRB102 bulkhead, cabin side · pin 79; ECUMaster CSB3 · pin 5; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	`none (contact comes with the plug)`
4	20 Green	`wc_l_ecu`	CAN L	Splice to: DRB102 bulkhead, cabin side · pin 80; ECUMaster CSB3 · pin 6; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	`none (contact comes with the plug)`
5	*spare*				
6	*spare*				

Pin numbers: PCLink help page Communications Port Pinout (G4X / Xtreme / Fury wire-in), looking into the ECU connector · harness AB-cabin

Battery kill switch (trunk) KILL-SW · 52-45780

FACE NOT SOURCED

Battery kill switch (trunk)



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
ALT1	16 Red	w_ig_ks_in	Alt IG to kill sw	OEM IG2 pin 15 (under the ECU, cowl side)	TBD
ALT2	16 Red	w_ig_ks_out	Alt IG excite	Alternator plug · pin 3	TBD
MAIN1	1/0 Red	w_trunk_pos	battery +	Battery + post (trunk)	TBD
MAIN2	10 Red	w_fp_feed	Battery +	Trunk relay box · battery + stud	TBD
MAIN2	1/0 Red	w_ks_h1	Battery +	POWER box + bar, BAT+ IN stud	TBD


Pin numbers: TBD · harness AB-cabin, EngineRoom-C, HeavyDC

AB-engine

DRB102 bulkhead, engine side DRB102-ENGINE · DRB16-102SAE-L018

FACE SOURCED

Firewall bulkhead connector (engine side)

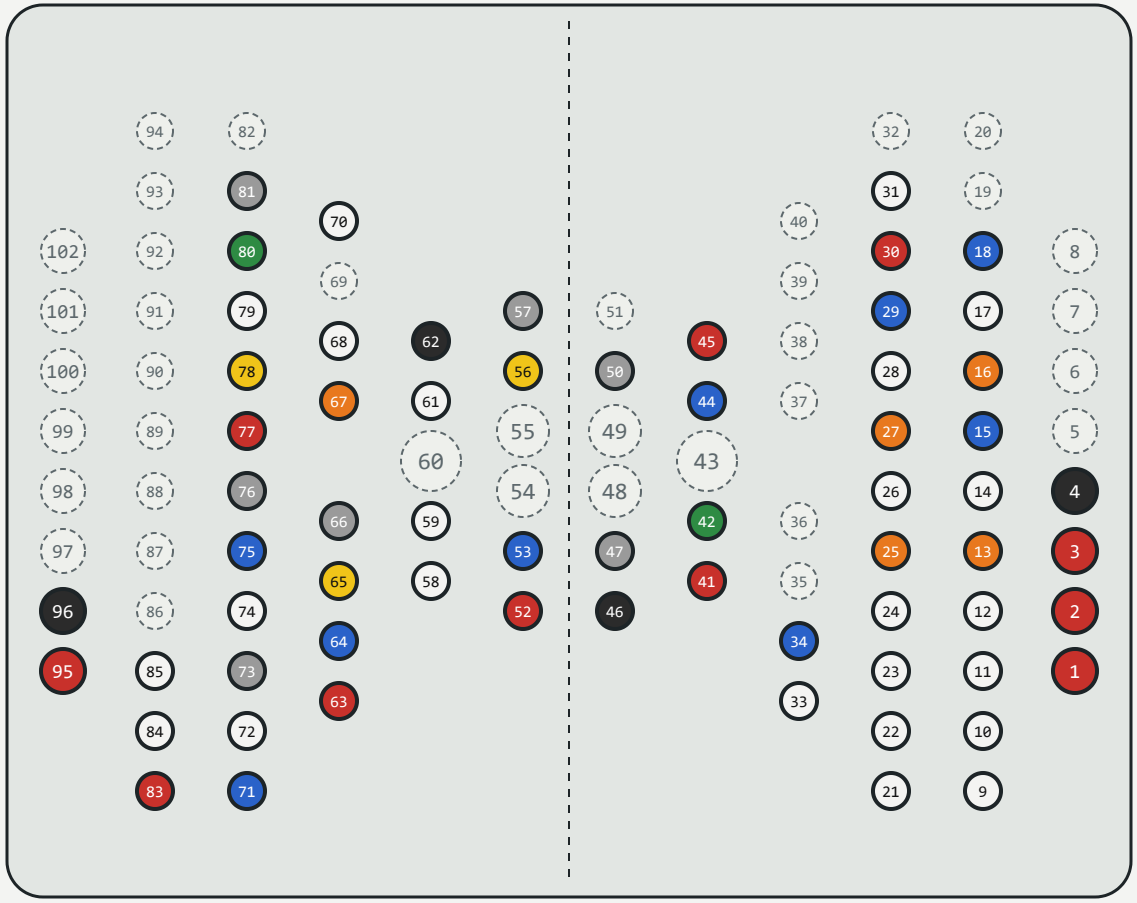

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_cop_pwr_e_ae	Ignition coil +12 V	Splice to: Coil 1 · pin 1; Coil 2 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1	0462-210-1231
2	14 Red	w_inj_pwr_e_ae	Injector +12 V	Splice to: Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	0462-210-1231
3	12 Red	w_strl_e	Starter solenoid S	Starter solenoid trigger plug · pin 1	0462-210-1231
4	14 Black	w_cop_gnd_e_ae	Ground	Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4	0462-210-1231
5	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
6	*spare*				
7	*spare*				
8	*spare*				
9	20 White	`w120_e`	Coil 1 trigger (IGT)	Coil 1 · pin 3	`0462-201-1631`
10	20 White	`w121_e`	Coil 2 trigger (IGT)	Coil 2 · pin 3	`0462-201-1631`
11	20 White	`w122_e`	Coil 3 trigger (IGT)	Coil 3 · pin 3	`0462-201-1631`
12	20 White	`w123_e`	Coil 4 trigger (IGT)	Coil 4 · pin 3	`0462-201-1631`
13	20 Orange	`w_5v_brail_e_c46`	+5 V sensor supply	Fuel pressure sensor · pin 2	`0462-201-1631`
14	20 White	`w32_e`	Fuel pressure signal	Fuel pressure sensor · pin 3	`0462-201-1631`
15	20 Blue	`w_gnd_b_e_c21`	Sensor ground B22 (ECU Gnd Out)	Splice to: Fuel pressure sensor · pin 1; Gearbox speed sensor · pin 2	`0462-201-1631`
16	20 Orange	`w206`	+5 V sensor supply	MAP sensor · pin 2	`0462-201-1631`
17	20 White	`w26_e`	MAP sensor signal	MAP sensor · pin 3	`0462-201-1631`
18	20 Blue	`w_gnd_a_e_c44`	Sensor ground A24 (ECU Gnd Out)	MAP sensor · pin 1	`0462-201-1631`
19	*spare*				
20	*spare*				
21	20 White	`w108_e`	Injector 1 drive (-)	Injector 1 · pin 2	`0462-201-1631`
22	20 White	`w109_e`	Injector 2 drive (-)	Injector 2 · pin 2	`0462-201-1631`
23	20 White	`w110_e`	Injector 3 drive (-)	Injector 3 · pin 2	`0462-201-1631`
24	20 White	`w111_e`	Injector 4 drive (-)	Injector 4 · pin 2	`0462-201-1631`

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
25	20 Orange	`w_5v_brail_e_c47`	+5 V sensor supply	Coolant pressure sensor · pin B	`0462-201-1631`
26	20 White	`w35_e`	Coolant press signal	Coolant pressure sensor · pin C	`0462-201-1631`
27	20 Orange	`w_5v_brail_e_c45`	+5 V sensor supply	Oil pressure sensor · pin 2	`0462-201-1631`
28	20 White	`w29_e`	Oil pressure signal	Oil pressure sensor · pin 3	`0462-201-1631`
29	20 Blue	`w_gnd_b_e_c19`	Sensor ground B22 (ECU Gnd Out)	Splice to: Coolant pressure sensor · pin A; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	`0462-201-1631`
30	18 Red	`w_rail_sp_sw12_e`	Switched +12 V	Splice to: Boost control solenoid · pin 1; Flex fuel sensor · pin A	`0462-201-1631`
31	20 White	`w48_e`	Flex fuel signal	Flex fuel sensor · pin C	`0462-201-1631`
32	*spare*				
33	20 White	`w202_e`	Intake temp signal	Intake air temp sensor (manifold) · pin 1	`0462-201-1631`
34	20 Blue	`w_rail_sp_gndout_e`	Sensor ground A24 (ECU Gnd Out)	Splice to: Coolant temp sensor · pin 2; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2	`0462-201-1631`
35	*spare*				
36	*spare*				
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				
41	20 Red	`w126`	+5 V sensor supply	Electronic throttle body · pin 3	`0462-201-1631`
42	20 Green	`w128_e`	Throttle pos 1 main	Electronic throttle body · pin 6	`0462-201-1631`
43	*spare*				
44	20 Blue	`w129_e`	Throttle pos 2 sub	Electronic throttle body · pin 5	`0462-201-1631`
45	18 Red	`w124_e_ae`	ETB motor +	Electronic throttle body · pin 4	`0462-201-1631`
46	18 Black	`w215_e_ae`	ETB motor -	Electronic throttle body · pin 1	`0462-201-1631`
47	Shield	`cab_etbs_sh`	Shield drain A7	Shield, not connected at the device end	`0462-201-1631`
48	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
49	*spare*				
50	Shield	cab_etbm_ae_sh	Shield drain B17	Shield, not connected at the device end	0462-201-1631
51	*spare*				
52	20 Red	w218	+5 V sensor supply	Turbo speed sensor · pin A	0462-201-1631
53	20 Blue	w16_e	Turbo speed signal	Turbo speed sensor · pin B	0462-201-1631
54	*spare*				
55	*spare*				
56	20 Yellow	w17	Sensor ground A24 (ECU Gnd Out)	Turbo speed sensor · pin C	0462-201-1631
57	Shield	cab_turbo_sh	Shield drain A7	Shield, not connected at the device end	0462-201-1631
58	20 White	w103_e	Boost solenoid (-)	Boost control solenoid · pin 2	0462-201-1631
59	20 White	w204_e	Charge temp signal	Charge pipe air temp sensor · pin 1	0462-201-1631
60	*spare*				
61	20 White	w203_e	Oil temp signal	Oil temp sensor · pin 1	0462-201-1631
62	20 Black	w47	Ground	Flex fuel sensor · pin B	0462-201-1631
63	20 Red	w_rail_sp_8v_e	+8 V sensor supply	Cam sensor · pin 1	0462-201-1631
64	20 Blue	cab_cam_c2	Cam sensor signal	Cam sensor · pin 2	0462-201-1631
65	20 Yellow	w24	Sensor ground A24 (ECU Gnd Out)	Cam sensor · pin 3	0462-201-1631
66	Shield	cab_cam_sh	Shield drain A7	Shield, not connected at the device end	0462-201-1631
67	20 Orange	w_vss_8v	+8 V sensor supply	Gearbox speed sensor · pin 1	0462-201-1631
68	20 White	w_vss_sig_e	Gearbox speed signal	Gearbox speed sensor · pin 3	0462-201-1631
69	*spare*				
70	20 White	w201_e	Coolant temp signal	Coolant temp sensor · pin 1	0462-201-1631
71	20 Blue	cab_knock1_c1	Knock sensor signal	Knock sensor · pin 1	0462-201-1631
72	20 White	cab_knock1_c2	Sensor ground B22 (ECU Gnd Out)	Knock sensor · pin 2	0462-201-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
73	Shield	`cab_knock1_sh`	Shield drain B17	Shield, not connected at the device end	`0462-201-1631`
74	20 White	`cab_crank_c1`	Crank sensor signal	Crank sensor · pin 1	`0462-201-1631`
75	20 Blue	`w2`	Sensor ground A24 (ECU Gnd Out)	Crank sensor · pin 2	`0462-201-1631`
76	Shield	`cab_crank_sh`	Shield drain A7	Shield, not connected at the device end	`0462-201-1631`
77	16 Red	`w_rev_feed_e`	+12 V to reverse switch	Reverse light switch · pin 2	`0462-201-1631`
78	16 Yellow	`w_sw7_e`	Reverse +12 V	Reverse light switch · pin 1	`0462-201-1631`
79	20 White	`wc_h_lam_be`	CAN H	Splice to: 120 ohm CAN terminator plug, Lambda end · pin 1; CAN-Lambda wideband controller · pin 4	`0462-201-1631`
80	20 Green	`wc_l_lam_be`	CAN L	Splice to: 120 ohm CAN terminator plug, Lambda end · pin 2; CAN-Lambda wideband controller · pin 3	`0462-201-1631`
81	Shield	`cab_lamcan_be_sh`	CAN shield drain	Shield, not connected at the device end	`0462-201-1631`
82	*spare*				
83	18 Red	`w_hv_mrs_en_e`	EHPS enable +12 V	Power steering pump plug C · pin 1	`0462-201-1631`
84	20 White	`w_mrs_e`	EHPS pump speed	Power steering pump plug B · pin 2	`0462-201-1631`
85	18 White	`w_eps_rly_e`	EHPS relay coil (-)	Power steering pump plug B · pin 5	`0462-201-1631`
86	*spare*				
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				
94	*spare*				
95	14 Red	`w_lam12_be14`	CAN-Lambda +12 V	Splice to: CAN-Lambda wideband controller · pin 1	`0462-210-1231`
96	14 Black	`w_lamg_be14`	Ground	Splice to: CAN-Lambda wideband controller · pin 2	`0462-210-1231`
97	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
98	*spare*				
99	*spare*				
100	*spare*				
101	*spare*				
102	*spare*				

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-engine

Crank sensor

CRANK · 90980-10947

FACE SOURCED

Crank sensor



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	cab_crank_c1	Signal	DRB102 bulkhead, engine side · pin 74	in kit CONN-75800
2	20 Blue	w2	Gnd	DRB102 bulkhead, engine side · pin 75	in kit CONN-75800

Pin numbers: TBD · harness AB-engine

Cam sensor

`CAM · DT06-3S-CE05 + W3S`

FACE SOURCED

Cam sensor



latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`w_rail_sp_8v_e`	+8 V	DRB102 bulkhead, engine side · pin 63	`0462-201-16141`
2	20 Blue	`cab_cam_c2`	Signal	DRB102 bulkhead, engine side · pin 64	`0462-201-16141`
3	20 Yellow	`w24`	Gnd	DRB102 bulkhead, engine side · pin 65	`0462-201-16141`


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Turbo speed sensor

`TURBO-SPD · DT06-3S-CE05 + W3S`

FACE SOURCED

Turbo speed sensor

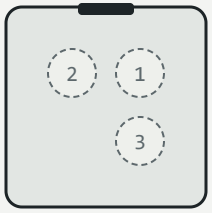

latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	w218	+5 V	DRB102 bulkhead, engine side · pin 52	0462-201-16141
B	20 Blue	w16_e	Signal	DRB102 bulkhead, engine side · pin 53	0462-201-16141
C	20 Yellow	w17	Gnd	DRB102 bulkhead, engine side · pin 56	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Flex fuel sensor FLEX · 13519047

FACE NOT SOURCED

Flex fuel sensor

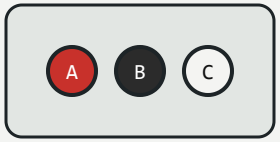

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	w217	+12 V	Splice to: DRB102 bulkhead, engine side · pin 30; Boost control solenoid · pin 1	15326426
B	20 Black	w47	12 V sensor return	DRB102 bulkhead, engine side · pin 62	15326426
C	20 White	w48_e	Signal	DRB102 bulkhead, engine side · pin 31	15326426


Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Flex fuel pin table) · harness AB-engine

Electronic throttle body

ETB · D 261 205 358-01

FACE SOURCED

Electronic throttle body

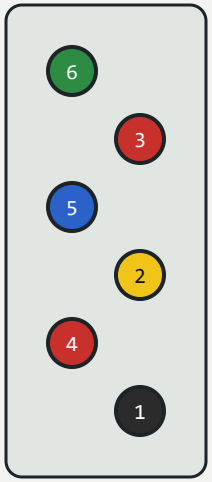

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Black	w215_e_ae	Motor -	DRB102 bulkhead, engine side · pin 46	5-965906-1
2	20 Yellow	w127	Gnd	Splice to: DRB102 bulkhead, engine side · pin 34; Coolant temp sensor · pin 2; Intake air temp sensor (manifold) · pin 2	in kit D 261 205 358-01
3	20 Red	w126	+5 V	DRB102 bulkhead, engine side · pin 41	in kit D 261 205 358-01
4	18 Red	w124_e_ae	Motor +	DRB102 bulkhead, engine side · pin 45	5-965906-1
5	20 Blue	w129_e	Position 2 (sub)	DRB102 bulkhead, engine side · pin 44	in kit D 261 205 358-01
6	20 Green	w128_e	Position 1 (main)	DRB102 bulkhead, engine side · pin 42	in kit D 261 205 358-01


Pin numbers: Bosch Motorsport ETB data sheet 51048715 (pins 1A-6F) · harness AB-engine

MAP sensor

MAP · 354404

FACE NOT SOURCED

MAP sensor

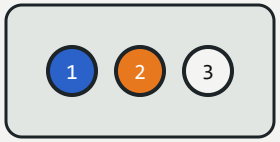

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	w_gnd_a_e_c44	Gnd	DRB102 bulkhead, engine side · pin 18	in kit 354404
2	20 Orange	w206	+5 V	DRB102 bulkhead, engine side · pin 16	in kit 354404
3	20 White	w26_e	Signal	DRB102 bulkhead, engine side · pin 17	in kit 354404

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (MAP pin table) · harness AB-engine

Injector 1 INJ-1 · CONN-76270

FACE NOT SOURCED

Injector 1

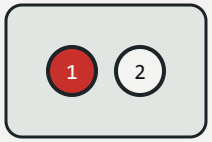

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w211	+12 V	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	w108_e	Drive (-)	DRB102 bulkhead, engine side · pin 21	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 2 INJ-2 · CONN-76270

FACE NOT SOURCED

Injector 2

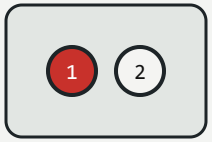

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w212	+12 V	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	w109_e	Drive (-)	DRB102 bulkhead, engine side · pin 22	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 3 INJ-3 · CONN-76270

FACE NOT SOURCED

Injector 3

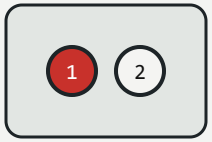

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w213	+12 V	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	w110_e	Drive (-)	DRB102 bulkhead, engine side · pin 23	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 4 INJ-4 · CONN-76270

FACE NOT SOURCED

Injector 4

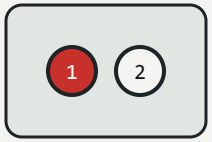

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w214	+12 V	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1	in kit CONN-76270
2	20 White	w111_e	Drive (-)	DRB102 bulkhead, engine side · pin 24	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Coil 1 COIL-1 · 90980-11885

FACE SOURCED

Ignition coil 1

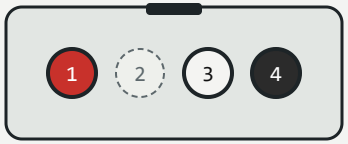

latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w112	+12 V	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 2 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1	TBD
2	*spare*				
3	20 White	w120_e	Trigger (IGT)	DRB102 bulkhead, engine side · pin 9	TBD
4	16 Black	w_cop1g	Gnd	Splice to: Coil 2 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Coil 2 COIL-2 · 90980-11885

FACE SOURCED

Ignition coil 2

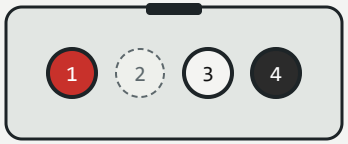

latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w113	+12 V	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1	TBD
2	*spare*				
3	20 White	w121_e	Trigger (IGT)	DRB102 bulkhead, engine side · pin 10	TBD
4	16 Black	w_cop2g	Gnd	Splice to: Coil 1 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Coil 3 COIL-3 · 90980-11885

FACE SOURCED

Ignition coil 3

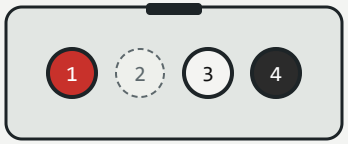

latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w114	+12 V	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 2 · pin 1; Coil 4 · pin 1	TBD
2	*spare*				
3	20 White	w122_e	Trigger (IGT)	DRB102 bulkhead, engine side · pin 11	TBD
4	16 Black	w_cop3g	Gnd	Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Coil 4 COIL-4 · 90980-11885

FACE SOURCED

Ignition coil 4

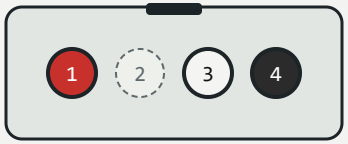

latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w115	+12 V	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 2 · pin 1; Coil 3 · pin 1	TBD
2	*spare*				
3	20 White	w123_e	Trigger (IGT)	DRB102 bulkhead, engine side · pin 12	TBD
4	16 Black	w_cop4g	Gnd	Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 3 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD


Pin numbers: TBD · harness AB-engine

Boost control solenoid

BOOST-SOL · 12052641

FACE NOT SOURCED

Boost control solenoid

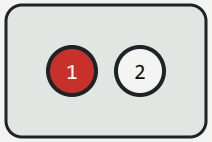

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w219	+12 V	Splice to: DRB102 bulkhead, engine side · pin 30; Flex fuel sensor · pin A	12084200
2	20 White	w103_e	Drive (-)	DRB102 bulkhead, engine side · pin 58	12084200

Pin numbers: TBD · harness AB-engine

Coolant temp sensor

ECT · 90980-11062

FACE SOURCED

Coolant temp sensor



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	w201_e	Signal	DRB102 bulkhead, engine side · pin 70	8100-0461
2	■ 20 Blue	w4	Gnd	Splice to: DRB102 bulkhead, engine side · pin 34; Electronic throttle body · pin 2; Intake air temp sensor (manifold) · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

Intake air temp sensor (manifold) IAT · 90980-11062

FACE SOURCED

Intake air temp sensor (manifold)



latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w202_e	Signal	DRB102 bulkhead, engine side · pin 33	8100-0461
2	20 Blue	w6	Gnd	Splice to: DRB102 bulkhead, engine side · pin 34; Coolant temp sensor · pin 2; Electronic throttle body · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

Oil pressure sensor OIL-P · 354404

FACE NOT SOURCED

Oil pressure sensor

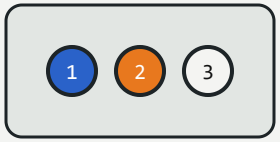

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	w30	Gnd	Splice to: DRB102 bulkhead, engine side · pin 29; Coolant pressure sensor · pin A; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	in kit 354404
2	20 Orange	w_5v_brail_e_c45	+5 V	DRB102 bulkhead, engine side · pin 27	in kit 354404
3	20 White	w29_e	Signal	DRB102 bulkhead, engine side · pin 28	in kit 354404

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Oil pressure pin table) · harness AB-engine

Fuel pressure sensor FUEL-P · 354404

FACE NOT SOURCED

Fuel pressure sensor

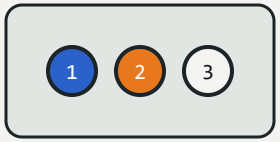

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	w33	Gnd	Splice to: DRB102 bulkhead, engine side · pin 15; Gearbox speed sensor · pin 2	in kit 354404
2	20 Orange	w_5v_brail_e_c46	+5 V	DRB102 bulkhead, engine side · pin 13	in kit 354404
3	20 White	w32_e	Signal	DRB102 bulkhead, engine side · pin 14	in kit 354404


Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Fuel pressure pin table) · harness AB-engine

Coolant pressure sensor

`CLNT-P · pigtail supplied with the sensor (owned)`

FACE NOT SOURCED

Coolant pressure sensor

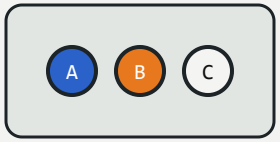

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
A	20 Blue	`w36`	Gnd	Splice to: DRB102 bulkhead, engine side · pin 29; Oil pressure sensor · pin 1; Charge pipe air temp sensor · pin 2; Oil temp sensor · pin 2	`solder splice onto the pigtail black lead`
B	20 Orange	`w_5v_brail_e_c47`	+5 V	DRB102 bulkhead, engine side · pin 25	`solder splice onto the pigtail red lead`
C	20 White	`w35_e`	Signal	DRB102 bulkhead, engine side · pin 26	`solder splice onto the pigtail green lead`

Pin numbers: Dan's sensor sheet + seller connection guide (Dan 2026-10-30): A / plug 1 GND black, B / plug 2 supply red, C / plug 3 output green · harness AB-engine

Starter solenoid trigger plug

STARTER-TRIGGER · 90980-11400

FACE SOURCED

Starter solenoid trigger plug



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	12 Red	w_strl_e	Solenoid S (start)	DRB102 bulkhead, engine side · pin 3	in kit CONN-76058 (Sumitomo TS187 4.8 mm sealed female, 12-10 AWG)

Pin numbers: single cavity (Toyota RM1022E housing list: 90980-11400 is 1-way, 4.8 mm tab, sealed) · harness AB-engine

Reverse light switch REV-SW · 90980-11250

FACE SOURCED

Reverse light switch



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Yellow	w_sw7_e	Switched +12 V (NO)	DRB102 bulkhead, engine side · pin 78	8100-0461
2	16 Red	w_rev_feed_e	+12 V (COM)	DRB102 bulkhead, engine side · pin 77	8100-0461

Pin numbers: TBD · harness AB-engine

Oil temp sensor `OIL-T · 90980-11062`

FACE SOURCED

Oil temp sensor



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	`w203_e`	Signal	DRB102 bulkhead, engine side · pin 61	`8100-0461`
2	■ 20 Blue	`w8`	Gnd	Splice to: Charge pipe air temp sensor · pin 2; DRB102 bulkhead, engine side · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1	`8100-0461`

Pin numbers: TBD · harness AB-engine

Charge pipe air temp sensor

CHARGE-IAT · 90980-11062

FACE SOURCED

Charge pipe air temp sensor



latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w204_e	Signal	DRB102 bulkhead, engine side · pin 59	8100-0461
2	20 Blue	w10	Gnd	Splice to: Oil temp sensor · pin 2; DRB102 bulkhead, engine side · pin 29; Coolant pressure sensor · pin A; Oil pressure sensor · pin 1	8100-0461

Pin numbers: TBD · harness AB-engine

Knock sensor KNOCK-1 · 1 928 403 874

FACE NOT SOURCED

Knock sensor

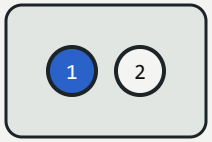

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	cab_knock1_c1	Signal	DRB102 bulkhead, engine side · pin 71	BDK 2.8
2	20 White	cab_knock1_c2	Gnd	DRB102 bulkhead, engine side · pin 72	BDK 2.8

Pin numbers: TBD · harness AB-engine

Gearbox speed sensor VSS · 90980-11143

FACE SOURCED

Gearbox speed sensor



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	w_vss_8v	+8 V	DRB102 bulkhead, engine side · pin 67	8100-0461
2	20 Blue	w_vss_gnd	Gnd	Splice to: DRB102 bulkhead, engine side · pin 15; Fuel pressure sensor · pin 1	8100-0461
3	20 White	w_vss_sig_e	Signal	DRB102 bulkhead, engine side · pin 68	8100-0461


Pin numbers: Toyota 3-wire speed sensor pinout (wilbo666 wiki; Daniel 2026-09-28) · harness AB-engine

CAN-Lambda wideband controller

CAN-LAMBDA · DTM06-4S + WM-4S

FACE SOURCED

CAN-Lambda wideband controller

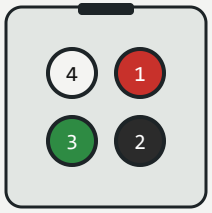

latch top

wire side (where the contacts go in) view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w_lam12_be	+12 V	Splice to: DRB102 bulkhead, engine side · pin 95	0462-005-2031
2	16 Black	w_lamg_be	Gnd	Splice to: DRB102 bulkhead, engine side · pin 96	0462-005-2031
3	20 Green	wc_l_lam_pin	CAN L	Splice to: DRB102 bulkhead, engine side · pin 80; 120 ohm CAN terminator plug, Lambda end · pin 2	0462-201-2031
4	20 White	wc_h_lam_pin	CAN H	Splice to: DRB102 bulkhead, engine side · pin 79; 120 ohm CAN terminator plug, Lambda end · pin 1	0462-201-2031


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

120 ohm CAN terminator plug, Lambda end

`CAN-TERM-END · AT06-2S-RD01 + AW2S`

FACE NOT SOURCED

CAN bus end terminator plug (120 ohm)

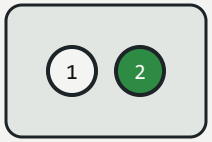

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	`wc_term3`	CAN H	Splice to: DRB102 bulkhead, engine side · pin 79; CAN-Lambda wideband controller · pin 4	`AT62-201-1631`
2	20 Green	`wc_term4`	CAN L	Splice to: DRB102 bulkhead, engine side · pin 80; CAN-Lambda wideband controller · pin 3	`AT62-201-1631`


Pin numbers: TBD · harness AB-engine

Power steering pump plug C

MRS-C · 90980-10942

FACE SOURCED

Power steering pump plug C

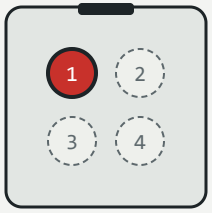

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w_hv_mrs_en_e	+12 V (IG)	DRB102 bulkhead, engine side · pin 83	82998-12440
2	*spare*				
3	*spare*				
4	*spare*				

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine

Power steering pump plug B `MRS-B · 90980-10897`

FACE SOURCED

Power steering pump plug B

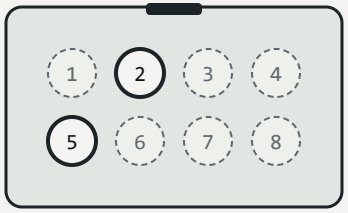

latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	☐ 20 White	`w_mrs_e`	Speed signal	DRB102 bulkhead, engine side · pin 84	`82998-12440`
3	*spare*				
4	*spare*				
5	☐ 18 White	`w_eps_rly_e`	Relay coil drive (-)	DRB102 bulkhead, engine side · pin 85	`82998-12440`
6	*spare*				
7	*spare*				
8	*spare*				

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine


CabinPower

LOGIC fuse box relay M1 (low beam (both headlamps))

K-HL · 5-1393292-8

FACE SOURCED

Low-beam relay

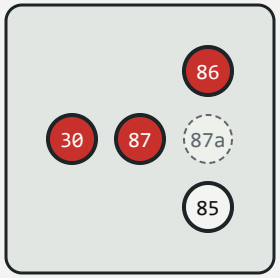

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	w_hl_30_cp	+12 V in	Splice to: LOGIC fuse box · fuse BUS1-2; LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 86; DRL cut relay (beside the LOGIC box) · pin 86	42281-1
85	18 White	w_hl_85_cp	Coil (-)	Splice to: OEM cowl plug IE1 pin 2 (LH kick), R-Y wire; DRL cut relay (beside the LOGIC box) · pin 85	280919-2
86	16 Red	w_hl_86_cp	Coil +	Splice to: LOGIC fuse box · fuse BUS1-2; LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 30; DRL cut relay (beside the LOGIC box) · pin 86	280919-2
87	14 Red	w_hl_on_cp	+12 V out	Splice to: LOGIC fuse box relay M2 (high beam (both headlamps)) · terminal 86; LH headlamp H1 pin 1; RH headlamp H2 pin 1	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

LOGIC fuse box relay M3 (horn) K-HORN · 4-1904124-3

FACE SOURCED

Horn relay

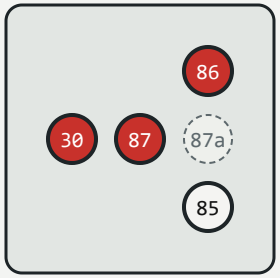

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	w_horn_30_cp	+12 V in	Splice to: LOGIC fuse box · fuse BUS1-4; OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 86	42281-1
85	18 White	w_horn_85_cp	Coil (-)	OEM cowl plug IE1 pin 19 (LH kick), G wire	280919-2
86	16 Red	w_horn_86_cp	Coil +	Splice to: LOGIC fuse box · fuse BUS1-4; OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 30	280919-2
87	14 Red	w_pmu_horn_cp	+12 V out	Splice to: LH horn · pin 1; RH horn · pin 1	42281-1
87a	*spare*				


Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

LOGIC fuse box relay M2 (high beam (both headlamps))

K-HR · 5-1393292-8

FACE SOURCED

High-beam relay

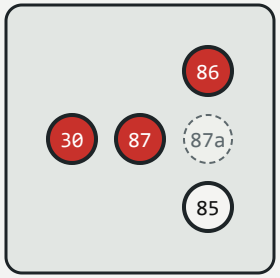

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	w_hr_30_cp	+12 V in	Splice to: LOGIC fuse box · fuse BUS1-3	42281-1
85	18 White	w_hl_low	Coil (-)	OEM IE1 pin 18 (left kick, cowl side)	280919-2
86	16 Red	w_hr_86_cp	Coil +	Splice to: LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 87; LH headlamp H1 pin 1; RH headlamp H2 pin 1	280919-2
87	14 Red	w_hr_on_cp	+12 V out	Splice to: Dash high-beam LED feed resistor 220 ohm · pin 1; RH headlamp H2 pin 2; LH headlamp H1 pin 2	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

LOGIC fuse box relay M8 (DRL (both headlamps)) K-DRL · 4-1904124-2

FACE SOURCED

DRL relay

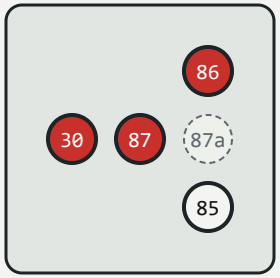

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	18 Red	w_drl_30_cp	+12 V in	Splice to: LOGIC fuse box · fuse BUS2-1; LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 86; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 86	42281-1
85	20 White	w_drl_85_cp	Coil (-)	Splice to: DRL switch · pin 1; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 85; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 87	280919-2
86	18 Red	w_drl_86_cp	Coil +	Splice to: LOGIC fuse box · fuse BUS2-1; LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 30; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 86	280919-2
87	16 Red	w_drl_87_cp	+12 V out	DRL cut relay (beside the LOGIC box) · pin 30	42281-1

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL switch DRL-SW · TBD

FACE NOT SOURCED

DRL switch

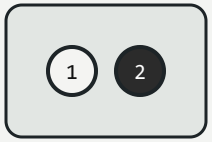

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	w_drl_sw_cp	DRL relay coil and pop-up UP	Splice to: LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 85; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 85; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 87	TBD
2	■ 20 Black	w_drl_sw_gnd_cp	Ground	OEM retract control relay R8 pin 12 (behind the LH dash), W-B ground lead	TBD

Pin numbers: switch terminals 1 / 2 (as drawn) · harness CabinPower

Pop-up diode 1 (stalk side) D-R8-1 · DT06-2S + W2S;DT04-2P-RT01

FACE SOURCED

Pop-up diode 1 (stalk side)

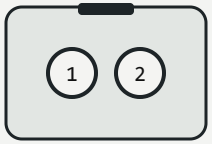

latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	w_r8_d1_a_cp	D1 anode (R8 pin 8 side)	Splice to: OEM retract control relay R8 pin 8 (behind the LH dash), R-Y lead cut near R8: R8 side; Pop-up diode 2 (DRL switch side) · pin 1	0462-201-1631
2	☐ 20 White	w_r8_d1_k_cp	D1 cathode (stalk side)	OEM R-Y lead from cowl splice I2, cut near retract control relay R8 pin 8: I2 side (behind the LH dash)	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

Pop-up diode 2 (DRL switch side) `D-R8-2 · DT06-2S + W2S;DT04-2P-RT01`

FACE SOURCED

Pop-up diode 2 (DRL switch side)

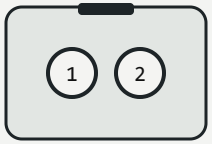

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	`w_r8_d2_a_cp`	D2 anode (R8 pin 8 side)	Splice to: OEM retract control relay R8 pin 8 (behind the LH dash), R-Y lead cut near R8: R8 side; Pop-up diode 1 (stalk side) · pin 1	`0462-201-1631`
2	☐ 18 White	`w_r8_d2_k_cp`	D2 cathode (DRL switch side)	LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 30	`0462-201-1631`


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing); which cavity the MUR460 anode sits on: TBD by the TE drawing of DT04-2P-RT01 (swap the two wires if it is the other one) · harness CabinPower

LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8))

K-POD · 4-1904124-3

FACE SOURCED

Pop-up key-on relay

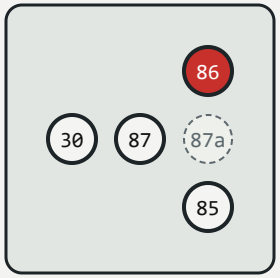

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	18 White	w_r8_d2_k_cp	Switch contact (UP command in)	Pop-up diode 2 (DRL switch side) · pin 2	42281-1
85	20 White	w_pod_85_cp	Coil (-)	Splice to: LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 85; DRL switch · pin 1; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 87	280919-2
86	18 Red	w_pod_86_cp	Coil +	Splice to: LOGIC fuse box · fuse BUS2-1; LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 30; LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 86	280919-2
87	18 White	w_pod_87_cp	Switch contact (to the DRL switch)	Splice to: LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 85; DRL switch · pin 1; LOGIC fuse box relay M10 (pop-up key-on (DRL switch to R8 pin 8)) · terminal 85	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

DRL cut relay (beside the LOGIC box) RLY-DRL · 12110539 + 12110540;301-1C-C-R1-U01-12VDC

FACE NOT SOURCED

DRL cut relay (beside the LOGIC box)

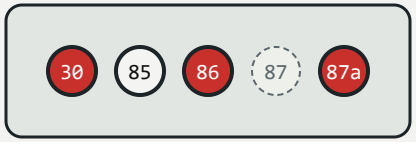

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	w_drl_87_cp	+12 V in	LOGIC fuse box relay M8 (DRL (both headlamps)) · terminal 87	12129409-L
85	16 White	w_drlc_85_cp	Coil (-)	Splice to: LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 85; OEM cowl plug IE1 pin 2 (LH kick), R-Y wire	12129409-L
86	16 Red	w_drlc_86_cp	Coil +	Splice to: LOGIC fuse box · fuse BUS1-2; LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 30; LOGIC fuse box relay M1 (low beam (both headlamps)) · terminal 86	12129409-L
87	*spare*				
87a	16 Red	w_pmu_drl	+12 V out (NC)	Splice to: LH headlamp H1 white DRL lead; RH headlamp H2 white DRL lead	12129409-L

Pin numbers: ISO 7588 relay terminal numbers (Song Chuan 301 series data sheet) · harness CabinPower, EngineRoom-C

EngineRoom-C

Power steering pump plug A

MRS-A · 90980-12068

FACE SOURCED

Power steering pump plug A



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	8 Red	w_eps_pwr_bc	EHPS pump +12 V	EPS pump relay (beside the POWER fuse box) · terminal 87	82998-12500
2	8 Black	w_eps_gnd	Gnd	Ground stud EA, RH front fender	82998-12500


Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness EngineRoom-C

Alternator plug

ALT-PLUG · 90980-10341

FACE SOURCED

Alternator plug

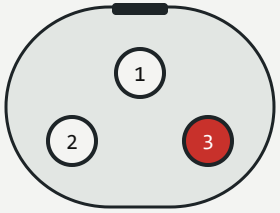

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_alt_s_c	S (battery sense)	LOGIC fuse box · fuse BUS1-9	TBD
2	20 White	w_alt_l_c	L (charge lamp)	OEM IG2 pin 16 (under the ECU, cowl side)	TBD
3	16 Red	w_ig_ks_out	Alt IG excite	Battery kill switch (trunk) · pin ALT2	TBD

Pin numbers: TBD · harness EngineRoom-C

Condenser fan ground plug

`FAN-COND-GND · DTHD06-1-8S`

FACE SOURCED

Condenser fan ground plug



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	w_fan2_gnd	Gnd	Ground stud EA, RH front fender	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Radiator fan plug (+) FAN-RAD · DTHD06-1-8S

FACE SOURCED

Radiator fan plug (+)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	w_fan_pwr	+12 V	POWER fuse box relay R4 (radiator fan) · terminal 30	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Condenser fan plug (+) FAN-COND · DTHD06-1-8S

FACE SOURCED

Condenser fan plug (+)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	w_fan2_pwr	+12 V	POWER fuse box relay R5 (condenser fan) · terminal 30	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

LH horn

HORN-LH · DT06-2S-CE05 + W2S

FACE SOURCED

LH horn



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_horn_lh	+12 V	Splice to: LOGIC fuse box relay M3 (horn) · terminal 87; RH horn · pin 1	0462-209-1631
2	14 Black	w_horn_lh_gs	Gnd	Splice to: Ground stud EA, RH front fender; RH horn · pin 2	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

RH horn

`HORN-RH · DT06-2S-CE05 + W2S`

FACE SOURCED

RH horn



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_horn_rh	+12 V	Splice to: LOGIC fuse box relay M3 (horn) · terminal 87; LH horn · pin 1	0462-209-1631
2	14 Black	w_horn_rh_gs	Gnd	Splice to: Ground stud EA, RH front fender; LH horn · pin 2	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Radiator fan ground plug FAN-RAD-GND · DTHD06-1-8S

FACE SOURCED

Radiator fan ground plug



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	w_fan_gnd	Gnd	Ground stud EA, RH front fender	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C


HeavyDC

Trunk relay box

BATT-RELAY-BLOCK · ST185-FB-BATT rev 7

FACE NOT SOURCED

Trunk relay block (fuel pump relay and fuse)

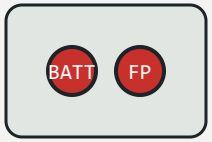

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
BATT	10 Red	w_fp_feed	Battery relay box +	Battery kill switch (trunk) · pin MAIN2	TBD
FP	10 Red	w_fp_30	Fuel pump relay feed	Trunk relay box relay K1 (fuel pump) · terminal 30	36161

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness HeavyDC

Firewall battery + connector (cabin side) RADLOK-POS-CAB · RL00801-50RE

FACE NOT SOURCED

Firewall battery + connector (cabin side)



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	w_h3_radlok_pos	Battery +	POWER box + bar, RADLOK+ stud	INTEGRAL
1	1/0 Red	w_rl_pos	Battery +	Firewall battery + connector (engine side) · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery RADLOK-NEG-CAB · RL00801-50BK

FACE NOT SOURCED

Firewall battery - connector (cabin side)



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	w_h6a_radlok_neg	Battery - (engine ground)	POWER box NEG bar, RADLOK- stud	INTEGRAL
1	1/0 Black	w_rln	Battery - (engine ground)	Firewall battery · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery

RADLOK-NEG-ENG · RL00801-50BK

FACE NOT SOURCED

Firewall battery - connector (engine side)



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	w_rln_blk	Battery - (engine ground)	Engine block ground stud, main lug	INTEGRAL
1	1/0 Black	w_rln	Battery - (engine ground)	Firewall battery · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Firewall battery + connector (engine side)

RADLOK-POS-ENG · RL00801-50RE

FACE NOT SOURCED

Firewall battery + connector (engine side)



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	w_rlp_str	Battery +	Splice to: Starter B+ stud; Jump start post · pin 1; Alternator B+ stud	INTEGRAL
1	1/0 Red	w_rl_pos	Battery +	Firewall battery + connector (cabin side) · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Jump start post JUMP-POST · TBD

FACE NOT SOURCED

Jump start post



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	2 Red	w_jump	Jump post feed	Splice to: Starter B+ stud; Firewall battery + connector (engine side) · pin 1; Alternator B+ stud	TBD

Pin numbers: TBD · harness HeavyDC

RearFuel

Fuel pump FUEL-PUMP · TBD

FACE NOT SOURCED

Fuel pump



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	w_fpump_r	Fuel pump +12 V	Trunk relay box relay K1 (fuel pump) · terminal 87	TBD
2	10 Black	w_fpg	Fuel pump ground	Ground point BL, back panel centre	TBD

Pin numbers: TBD · harness RearFuel

Fuel sender inline plug, sender side, trunk (IX-FUEL)

IX-FUEL-S · DT06-2S + W2S

FACE SOURCED

Inline connector for fuel level sender (sender side)



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_fl_sig_r	Fuel level signal	Fuel level sender · pin 1	0462-201-16141
2	20 Blue	w45_r	Sensor ground B22 (ECU Gnd Out)	Fuel level sender · pin 2	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

Fuel level sender FUEL-LEVEL · DT04-2P + W2P

FACE SOURCED

Fuel level sender



wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_fl_sig_r	Fuel level signal	Fuel sender inline plug, sender side, trunk (IX-FUEL) · pin 1	0460-202-1631
2	20 Blue	w45_r	Fuel level ground	Fuel sender inline plug, sender side, trunk (IX-FUEL) · pin 2	0460-202-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel


Dash

8-channel opto board

OPTO-8 · TBD

FACE NOT SOURCED

8-channel opto board

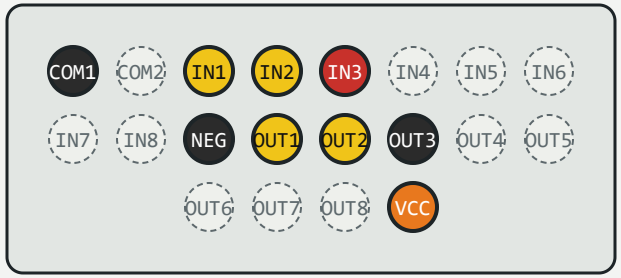

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
COM1	20 Black	w_opto_inc	Opto COM ground	Splice to: Centre cluster ground input lead; RealDash Pi ground input lead; DRB102 bulkhead, cabin side · pin 96; DRB102 bulkhead, cabin side · pin 62; DRB102 bulkhead, cabin side · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; OEM A/C amplifier A15; ECUMaster CSB3 · pin 2; OEM combination switch plug C16 (B) pin 17 (cruise control switch), BR wire	screw terminal (on the board)
COM2	*spare*				
IN1	16 Yellow	w_sw6	Brake on +12 V	OEM stop lamp switch S9 pin 1 (pedal), G-W wire	screw terminal (on the board)
IN2	16 Yellow	w_sw7_c	Reverse to opto in 2	Splice to: DRB102 bulkhead, cabin side · pin 78; OEM IG2 pin 13 (under the ECU, cowl side)	screw terminal (on the board)
IN3	20 Red	w_hl_sense_in	Lights on +12 V	OEM dimmer rheostat R10 pin 1 (left of the steering wheel), green TAIL	screw terminal (on the board)
IN4	*spare*				
IN5	*spare*				
IN6	*spare*				
IN7	*spare*				
IN8	*spare*				
NEG	20 Black	w_opto_outc	Opto out ground	ECUMaster CSB3 · pin 4	screw terminal (on the board)
OUT1	20 Yellow	w_opto_out1	Brake to CSB3 S7	ECUMaster CSB3 · pin 21	screw terminal (on the board)

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
OUT2	20 Yellow	w_opto_out2	Reverse to CSB3 S8	ECUMaster CSB3 · pin 22	screw terminal (on the board)
OUT3	20 Black	w_hl_sense_out	Headlight sense to cluster	Centre cluster headlight sense input	screw terminal (on the board)
OUT4	*spare*				
OUT5	*spare*				
OUT6	*spare*				
OUT7	*spare*				
OUT8	*spare*				
VCC	20 Orange	w_opto_vcc	Opto +5 V	ECUMaster CSB3 · pin 3	screw terminal (on the board)


Pin numbers: terminal names printed on the board · harness Dash

ECUMaster CSB3

CSB3 · HD36-24-33SE

FACE SOURCED

ECUMaster CAN switch board

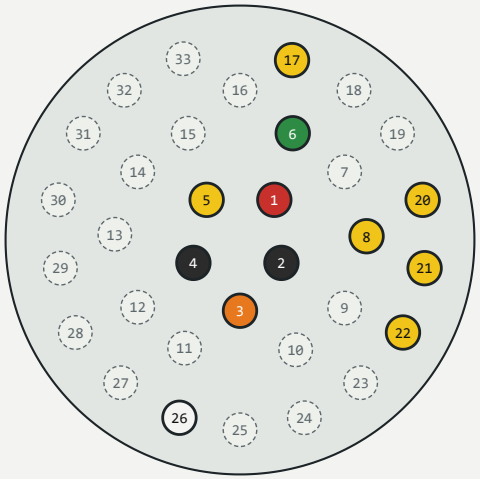

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	wc_12v_csb	CSB3 +12 V	Splice to: LOGIC fuse box · fuse BUS2-5	0462-201-2031
2	20 Black	w_csbg	CSB3 ground	Splice to: Centre cluster ground input lead; RealDash Pi ground input lead; DRB102 bulkhead, cabin side · pin 96; DRB102 bulkhead, cabin side · pin 62; DRB102 bulkhead, cabin side · pin 4; POWER box NEG bar, GND stud, ring 3 of 3; OEM A/C amplifier A15; OEM combination switch plug C16 (B) pin 17 (cruise control switch), BR wire; 8-channel opto board · pin COM1	0462-201-2031
3	20 Orange	w_opto_vcc	Opto +5 V	8-channel opto board · pin VCC	0462-201-2031
4	20 Black	w_opto_outc	Opto out ground	8-channel opto board · pin NEG	0462-201-2031
5	20 Yellow	wc_h_csb	CAN H to CSB3	Splice to: DRB102 bulkhead, cabin side · pin 79; ECU plug C (CAN / comms) · pin 3; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	0462-201-2031
6	20 Green	wc_l_csb	CAN L to CSB3	Splice to: DRB102 bulkhead, cabin side · pin 80; ECU plug C (CAN / comms) · pin 4; Centre cluster CAN board leads; RealDash Pi CAN adapter leads	0462-201-2031
7	*spare*				
8	20 Yellow	w_cru_ladder_out	Cruise ladder	Splice to: OEM combination switch plug C16 (B) pin 5 (cruise control switch), W wire; Cruise resistor on the CSB3 · pin 2	0462-201-2031


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
9	*spare*				
10	*spare*				
11	*spare*				
12	*spare*				
13	*spare*				
14	*spare*				
15	*spare*				
16	*spare*				
17	20 Yellow	`w_sw2`	Cruise MAIN on	OEM combination switch plug C16 (B) pin 15 (cruise control switch), Y-B wire	`0462-201-2031`
18	*spare*				
19	*spare*				
20	20 Yellow	`w_sw5`	Clutch pedal sw	OEM cruise control clutch switch C17 pin 2, B wire	`0462-201-2031`
21	20 Yellow	`w_opto_out1`	Brake to CSB3 S7	8-channel opto board · pin OUT1	`0462-201-2031`
22	20 Yellow	`w_opto_out2`	Reverse to CSB3 S8	8-channel opto board · pin OUT2	`0462-201-2031`
23	*spare*				
24	*spare*				
25	*spare*				
26	20 White	`w_oil_k`	Oil LED sink (CSB3)	Oil pressure LED · pin 2	`0462-201-2031`
27	*spare*				
28	*spare*				
29	*spare*				
30	*spare*				
31	*spare*				
32	*spare*				
33	*spare*				

Pin numbers: TBD · harness Dash

RealDash Pi 5 A inline fuse `F-PI · 0FHM0003ZXJB + ATM-5`

FACE NOT SOURCED

RealDash Pi inline fuse 5 A

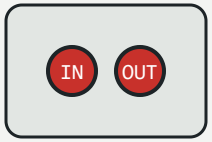

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
IN	16 Red	w_pi12	Radio ACC +12 V (CIG & RADIO 15 A)	OEM cowl plug II1 pin 3 (instrument panel centre, cowl side), GR	solder splice onto the holder lead
OUT	20 Red	wc_12v_rd	RealDash Pi +12 V (fused 5 A)	RealDash Pi +12 V input lead	solder splice onto the holder lead

Pin numbers: Littelfuse INLINE MINI Splashproof Fuse Holder datasheet: 0FHM0003ZXJB, 16 AWG GXL leads 93 mm each side, 20 A, 32 V DC, takes MINI blade fuses · harness Dash


WheelSpeed-Rear

Rear VR conditioner output plug

VRC-R-OUT · LP-16-J05PE-02-001

FACE SOURCED

Rear VR conditioner output plug

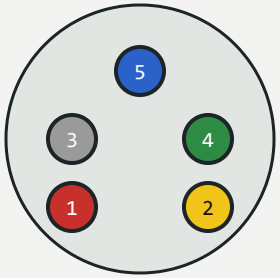

mating face view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_rout_5v	+5 V	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 1	solder cup (LP-16, S16)
2	20 Yellow	cab_rout_gnd	Gnd	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 2	solder cup (LP-16, S16)
3	Shield	cab_rout_sh	Shield drain	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 5	solder cup (LP-16, S16)
4	20 Green	cab_rout_l	Rear left wheel speed	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 3	solder cup (LP-16, S16)
5	20 Blue	cab_rout_r	Rear right wheel speed	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 4	solder cup (LP-16, S16)


Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

Rear wheel-speed inline plug, sensor side (IX-WS-R)

`IX-WS-R-P · DT04-6P + W6P`

FACE SOURCED

Inline connector for rear wheel speed (sensor side)

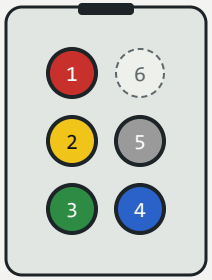

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`cab_rout_5v`	+5 V sensor supply	Rear VR conditioner output plug · pin 1	`0460-202-1631`
2	20 Yellow	`cab_rout_gnd`	Sensor ground B22 (ECU Gnd Out)	Rear VR conditioner output plug · pin 2	`0460-202-1631`
3	20 Green	`cab_rout_l`	Rear left wheel speed	Rear VR conditioner output plug · pin 4	`0460-202-1631`
4	20 Blue	`cab_rout_r`	Rear right wheel speed	Rear VR conditioner output plug · pin 5	`0460-202-1631`
5	Shield	`cab_rout_sh`	Shield drain B17	Rear VR conditioner output plug · pin 3	`0460-202-1631`
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

RL wheel speed sensor

`WSS-RL · DT06-2S-CE05 + W2S`

FACE SOURCED

RL wheel speed sensor



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`cab_rl_p`	RL wheel speed +	Rear VR conditioner input plug · pin 1	`0462-201-16141`
2	20 White	`cab_rl_n`	RL wheel speed -	Rear VR conditioner input plug · pin 2	`0462-201-16141`


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

Rear VR conditioner input plug

`VRC-R-IN · LP-16-J05PE-02-001`

FACE SOURCED

Rear VR conditioner input plug

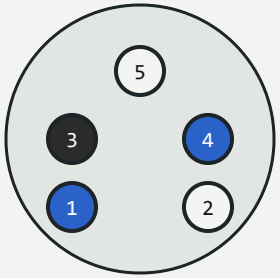

mating face view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`cab_rl_p`	RL wheel speed +	RL wheel speed sensor · pin 1	`solder cup (LP-16, S16)`
2	20 White	`cab_rl_n`	RL wheel speed -	RL wheel speed sensor · pin 2	`solder cup (LP-16, S16)`
3	20 Black	`w_ws_r_shield`	Shield drain	Splice to: Shield, not connected at the device end	`solder cup (LP-16, S16)`
4	20 Blue	`cab_rr_p`	RR wheel speed +	RR wheel speed sensor · pin 1	`solder cup (LP-16, S16)`
5	20 White	`cab_rr_n`	RR wheel speed -	RR wheel speed sensor · pin 2	`solder cup (LP-16, S16)`

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

RR wheel speed sensor `WSS-RR · DT06-2S-CE05 + W2S`

FACE SOURCED

RR wheel speed sensor



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	cab_rr_p	RR wheel speed +	Rear VR conditioner input plug · pin 4	0462-201-16141
2	20 White	cab_rr_n	RR wheel speed -	Rear VR conditioner input plug · pin 5	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear


WheelSpeed-Front

Front VR conditioner output plug

`VRC-F-OUT · LP-16-J05PE-02-001`

FACE SOURCED

Front VR conditioner output plug

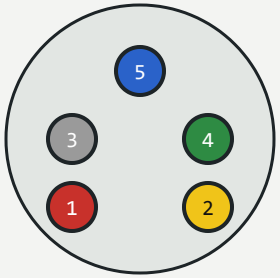

mating face view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`cab_fout_5v`	+5 V	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 1	`solder cup (LP-16, S16)`
2	20 Yellow	`cab_fout_gnd`	Gnd	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 2	`solder cup (LP-16, S16)`
3	Shield	`cab_fout_sh`	Shield drain	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 5	`solder cup (LP-16, S16)`
4	20 Green	`cab_fout_l`	FL conditioned out	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 3	`solder cup (LP-16, S16)`
5	20 Blue	`cab_fout_r`	FR conditioned out	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 4	`solder cup (LP-16, S16)`


Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

Front wheel-speed inline plug, sensor side (IX-WS-F)

IX-WS-F-P · DT04-6P + W6P

FACE SOURCED

Inline connector for front wheel speed (sensor side)

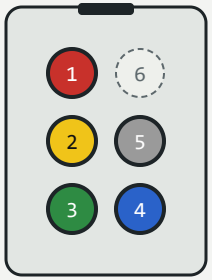

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_fout_5v	+5 V sensor supply	Front VR conditioner output plug · pin 1	0460-202-1631
2	20 Yellow	cab_fout_gnd	Sensor ground A24 (ECU Gnd Out)	Front VR conditioner output plug · pin 2	0460-202-1631
3	20 Green	cab_fout_l	FL conditioned out	Front VR conditioner output plug · pin 4	0460-202-1631
4	20 Blue	cab_fout_r	FR conditioned out	Front VR conditioner output plug · pin 5	0460-202-1631
5	Shield	cab_fout_sh	Shield drain A7	Front VR conditioner output plug · pin 3	0460-202-1631
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

FL wheel speed sensor

`WSS-FL · DT06-2S-CE05 + W2S`

FACE SOURCED

FL wheel speed sensor



`latch top`

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`cab_fl_p`	FL wheel speed +	Front VR conditioner input plug · pin 1	`0462-201-16141`
2	20 White	`cab_fl_n`	FL wheel speed -	Front VR conditioner input plug · pin 2	`0462-201-16141`


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

Front VR conditioner input plug

VRC-F-IN · LP-16-J05PE-02-001

FACE SOURCED

Front VR conditioner input plug

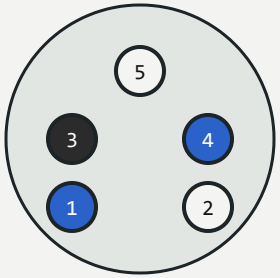

mating face view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	cab_fl_p	FL wheel speed +	FL wheel speed sensor · pin 1	solder cup (LP-16, S16)
2	20 White	cab_fl_n	FL wheel speed -	FL wheel speed sensor · pin 2	solder cup (LP-16, S16)
3	20 Black	w_ws_f_shield	Shield drain	Splice to: Shield, not connected at the device end	solder cup (LP-16, S16)
4	20 Blue	cab_fr_p	FR wheel speed +	FR wheel speed sensor · pin 1	solder cup (LP-16, S16)
5	20 White	cab_fr_n	FR wheel speed -	FR wheel speed sensor · pin 2	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

FR wheel speed sensor

`WSS-FR · DT06-2S-CE05 + W2S`

FACE SOURCED

FR wheel speed sensor



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`cab_fr_p`	FR wheel speed +	Front VR conditioner input plug · pin 4	`0462-201-16141`
2	20 White	`cab_fr_n`	FR wheel speed -	Front VR conditioner input plug · pin 5	`0462-201-16141`

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front