SCHEMATIC - every wire of the set, grouped by job; neat, not to scale

Tables are pinouts (pin | signal) of the pins each panel uses; the PINOUT TABLES sheet has every pin. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

WIRE COLOURS (R209): — RED — BLK — ORN — BLU — WHT — GRN — YEL **IDENT BANDS (R87):** ■ Blue ■ Yellow □ White - - - - built with another harness

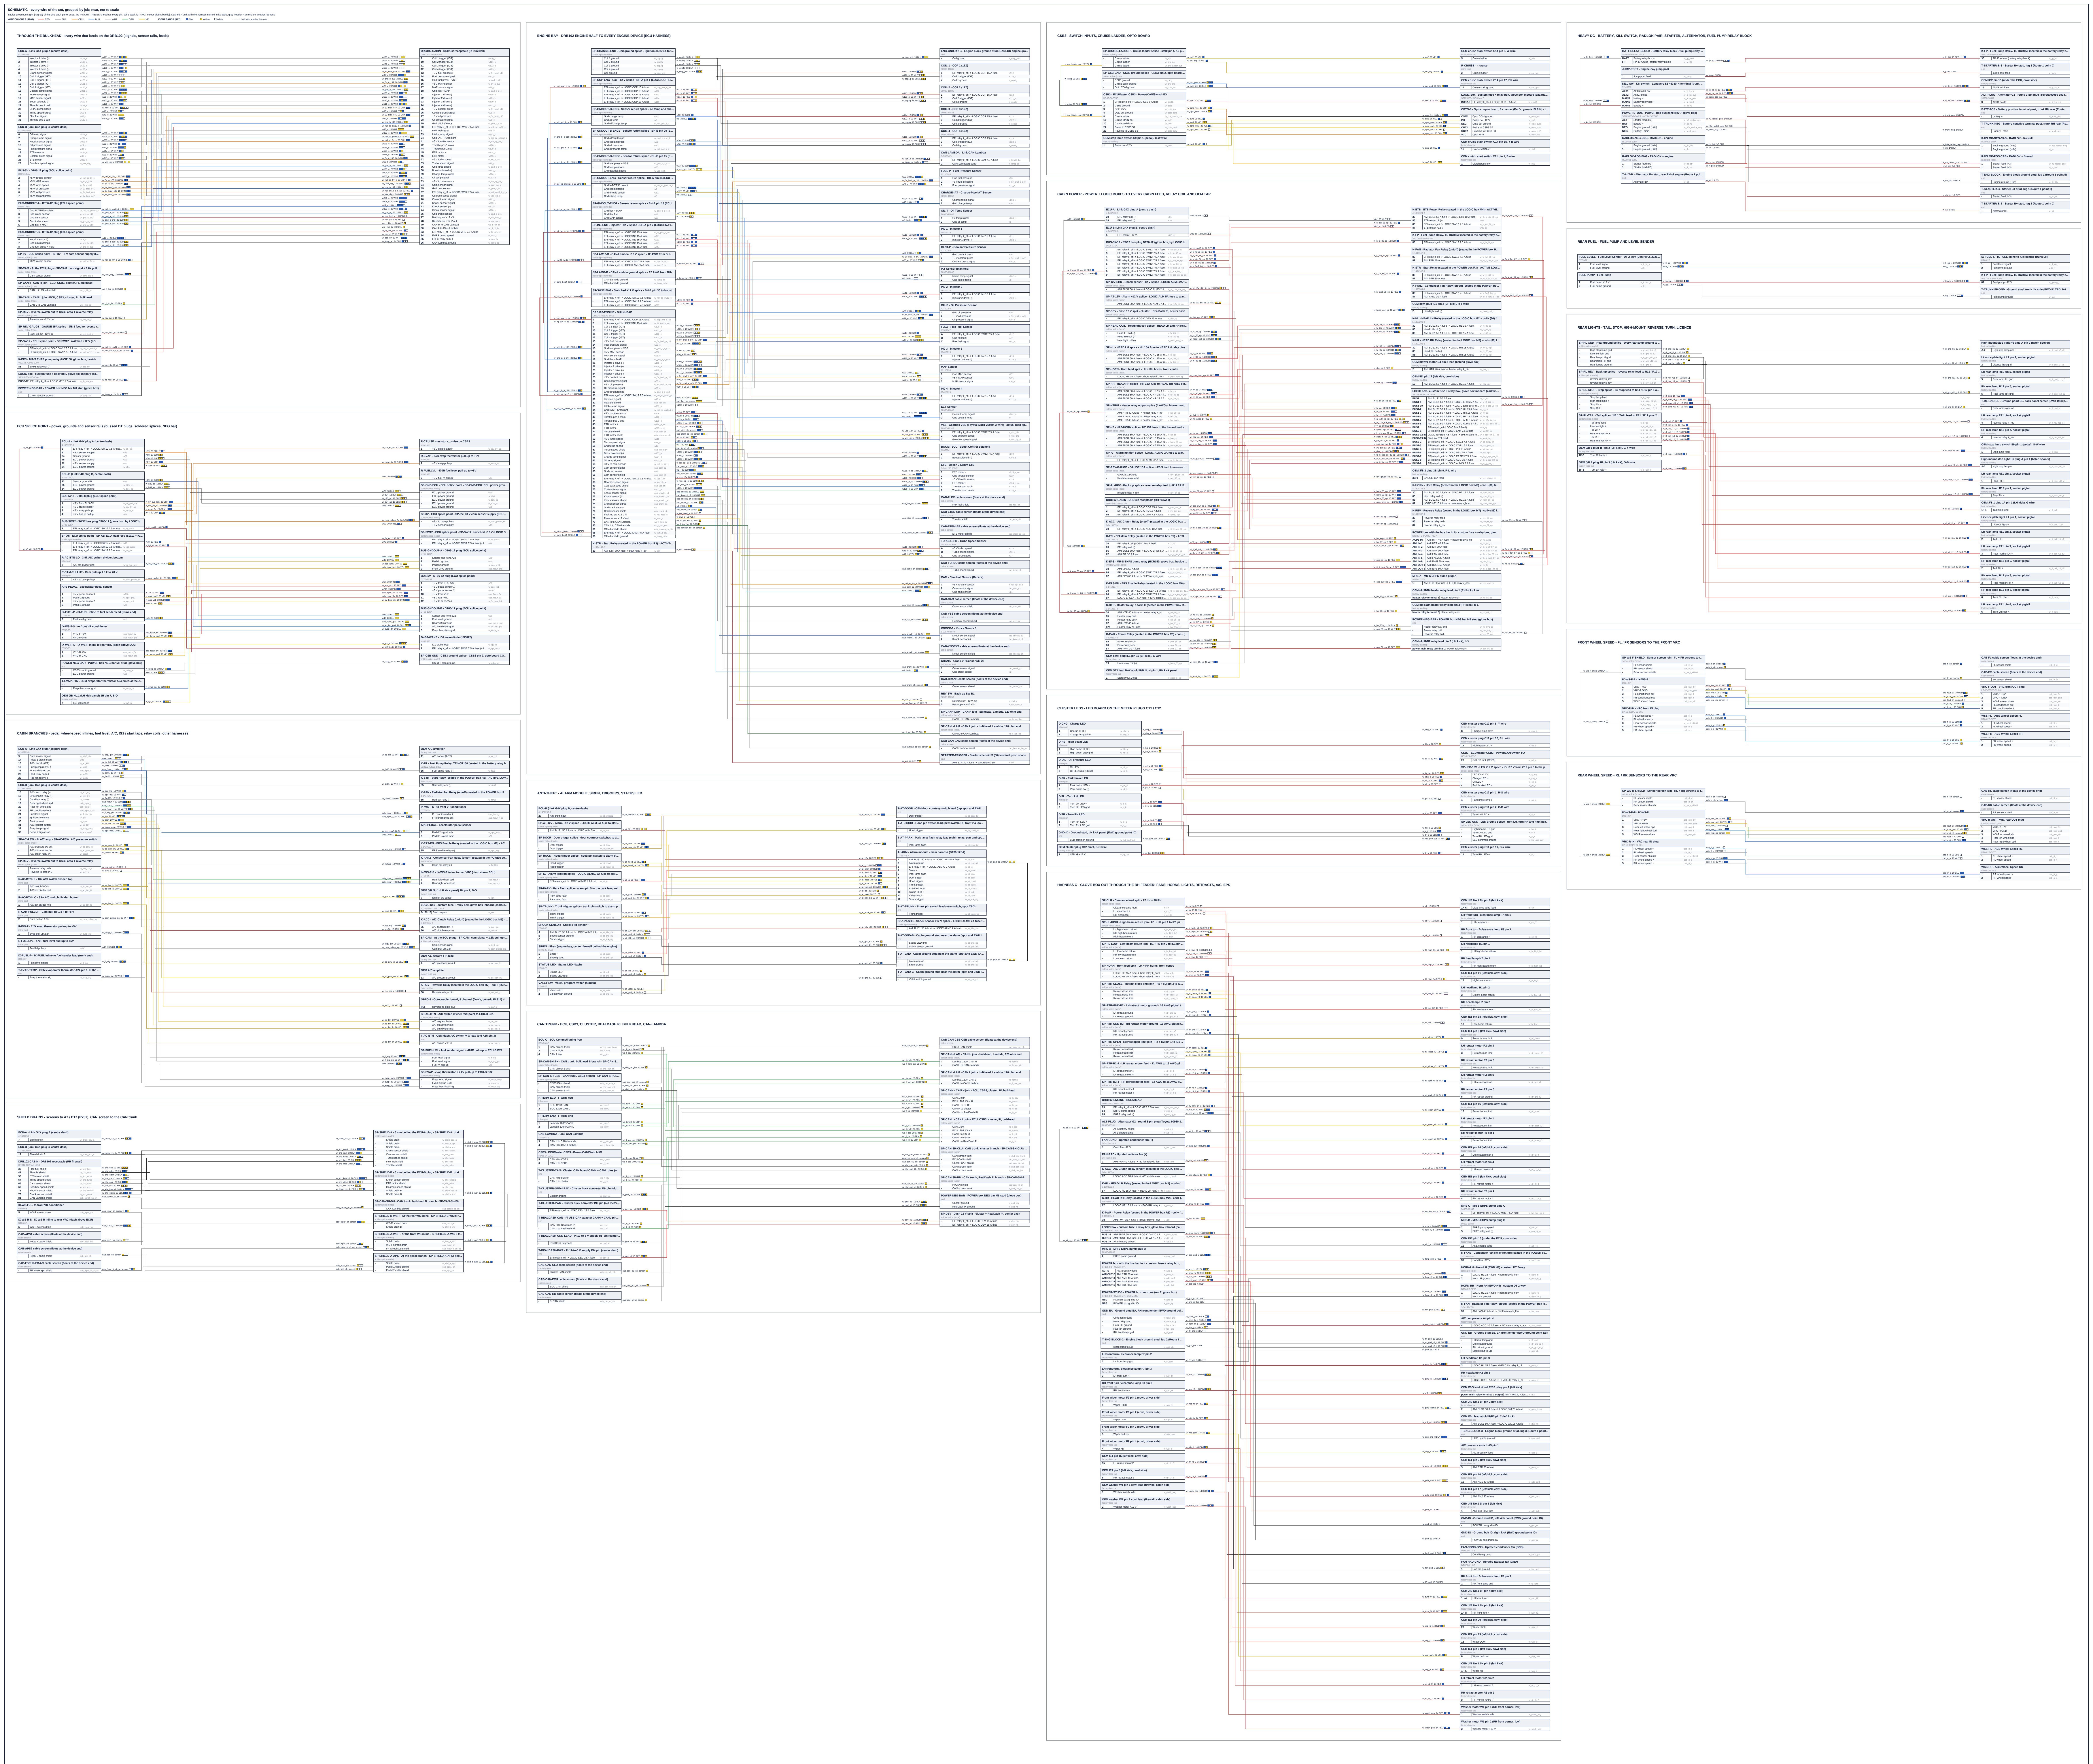
THROUGH THE BULKHEAD - every wire that lands on the DRB102 (signals, sensor rails, feeds)
ECU-A - Link G4X plug A (centre dash)
ECU-B (Link G4X plug B, centre dash)
DRB102-CABIN - DRB102 receptacle (RH firewall)
SP-REV-GAUGE - GAUGE 15A splice - J/B 3 feed to reverse r...
SP-SW12 - ECU splice point - SP-SW12: switched +12 V (LO...
K-EPS - MR-S EHPS pump relay (HCR150, glove box, beside ...
LOGIC box - custom fuse + relay box, glove box inboard (ca...
POWER-NEG-BAR - POWER box NEG bar M8 stud (glove box)
ECU SPLICE POINT - power, grounds and sensor rails (bussed DT plugs, soldered splices, NEG bar)
BUS-5V-2 - DT06-8 plug (ECU splice point)
BUS-SW12 - SW12 bus plug DT06-12 (glove box, by LOGIC b...
R-CRUISE - resistor r_cruise on CSB3
R-EVAP - 2.2k evap thermistor pull-up to +5V
R-FUELLVL - 470R fuel level pull-up to +5V
SP-GND-ECU - ECU splice point - SP-GND-ECU: ECU power grou...
SP-8V - ECU splice point - SP-8V: +8 V cam sensor supply (ECU ...
IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)
T-EVAP-RTN - OEM evaporator thermistor A24 pin 2, at the e...
OEM J/B No.1 (LH kick panel) 1H pin 7, B-O
D-IG2-WAKE - IG2 wake diode (1N5822)
SP-CSB-GND - CSB3 ground splice - CSB3 pin 2, opto board CO...
CABIN BRANCHES - pedal, wheel-speed inlines, fuel level, A/C, IG2 / start taps, relay coils, other harnesses
OEM A/C amplifier
K-FP - Fuel Pump Relay, TE HCR150 (seated in the battery relay b...
K-STR - Start Relay (seated in the POWER box R3) - ACTIVE-LOW...
K-FAN - Radiator Fan Relay (on/off) (seated in the POWER box R...
IX-WS-F-S - to front VR conditioner
APS-PEDAL - accelerator pedal sensor
T-AC-BTN - OEM dash A/C switch V-G lead (old A15 pin 3)
SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24
SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32
SHIELD DRAINS - screens to A7 / B17 (R207), CAN screen to the CAN trunk
SP-SHIELD-A - 6 mm behind the ECU-A plug - SP-SHIELD-A: drai...
SP-SHIELD-B - 6 mm behind the ECU-B plug - SP-SHIELD-B: drai...
SP-CAN-SH-BH - CAN trunk, bulkhead B branch - SP-CAN-SH-BH...
SP-SHIELD-B-WSR - At the rear WS inline - SP-SHIELD-B-WSR: r...
ENGINE BAY - DRB102 ENGINE HALF TO EVERY ENGINE DEVICE (ECU HARNESS)
SP-CHASSIS-ENG - Coil ground splice - ignition coils 1-4 to t...
SP-COP-ENG - Coil +12 V splice - BH-A pin 1 (LOGIC COP 15...
SP-GNDOUT-B-ENG - Sensor return splice - oil temp and cha...
SP-GNDOUT-B-ENG2 - Sensor return splice - BH-B pin 29 (E...
ENG-GND-RING - Engine block ground stud (RADLOK engine gro...
COIL-1 - COP 1 (1ZZ)
COIL-2 - COP 2 (1ZZ)
COIL-3 - COP 3 (1ZZ)
COIL-4 - COP 4 (1ZZ)
REV-SW - Back-up SW B1
SP-CANH-LAM - CAN H join - bulkhead, Lambda, 120 ohm end
SP-CANL-LAM - CAN L join - bulkhead, Lambda, 120 ohm end
CAB-CAN-LAM cable screen (floats at the device end)
STARTER-TRIGGER - Starter solenoid S (50) terminal post, spade
ANTI-THEFT - ALARM MODULE, SIREN, TRIGGERS, STATUS LED
SP-AT-12V - Alarm +12 V splice - LOGIC ALM 5A fuse to alar...
SP-DOOR - Door trigger splice - door courtesy switches to al...
SP-HOOD - Hood trigger splice - hood pin switch to alarm pi...
SP-IG - Alarm ignition splice - LOGIC ALMIG 2A fuse to alar...
SP-PARK - Park flash splice - alarm pin 5 to the park lamp rel...
SHOCK-SENSOR - Shock / tilt sensor *
SIREN - Siren (engine bay, center firewall behind the engine) ...
STATUS-LED - Status LED (dash)
VALET-SW - Valet / program switch (hidden)
T-AT-DOOR - OEM door courtesy switch lead (tap spot and EWD ...
T-AT-HOOD - Hood pin switch lead (new switch, RH front via loo...
T-AT-PARK - Park lamp flash relay lead (cabin relay, part and spo...
ALARM - Alarm module - main harness (DT06-12SA)
T-AT-GND-B - Cabin ground stud near the alarm (spot and EWD I...
T-AT-GND - Cabin ground stud near the alarm (spot and EWD ID ...
T-AT-GND-C - Cabin ground stud near the alarm (spot and EWD I...
CAN TRUNK - ECU, CSB3, CLUSTER, REALDASH PI, BULKHEAD, CAN-LAMBDA
ECU-C - ECU Comms/Tuning Port
SP-CAN-SH-CSB - CAN trunk, CSB3 branch - SP-CAN-SH-CS...
R-TERM-ECU - r_term_ecu
R-TERM-END - r_term_end
CAN-LAMBDA - Link CAN-Lambda
CSB3 - ECUMaster CSB3 - Power/CAN/Switch I/O
T-CLUSTER-CAN
T-CLUSTER-GND-LEAD
T-CLUSTER-PWR
CAB-CAN-CSB-CSB cable screen (floats at the device end)
SP-CANH - CAN H join - ECU, CSB3, cluster, Pi, bulkhead
SP-CANL - CAN L join - ECU, CSB3, cluster, Pi, bulkhead
CSB3 - SWITCH INPUTS, CRUISE LADDER, OPTO BOARD
SP-CRUISE-LADDER - Cruise ladder splice - stalk pin 5, 1k p...
SP-CSB-GND - CSB3 ground splice - CSB3 pin 2, opto board ...
OEM stop lamp switch S9 pin 1 (pedal), G-W wire
OEM cruise stalk switch C14 pin 5, W wire
R-CRUISE - r_cruise
OEM cruise stalk switch C14 pin 17, BR wire
LOGIC box - custom fuse + relay box, glove box inboard (cad/fus...
OPTO-8 - Optocoupler board, 8 channel (Dan's, generic EL814) - i...
OEM cruise stalk switch C14 pin 15, Y-B wire
OEM clutch start switch C11 pin 1, B wire
CABIN POWER - POWER + LOGIC BOXES TO EVERY CABIN FEED, RELAY COIL AND OEM TAP
SP-12V-SHK - Shock sensor +12 V splice - LOGIC ALMS 2A f...
K-ETB - ETB Power Relay (seated in the LOGIC box M4) - ACTIVE...
K-FAN2 - Condenser Fan Relay (on/off) (seated in the POWER bo...
K-PWR - Power Relay (seated in the POWER box R6) - coil+ (...
OEM cowl plug IE1 pin 19 (LH kick), G wire
OEM ST1 lead B-W at old R/B No.4 pin 1, RH kick panel
OEM old R/B2 relay lead pin 2 (LH kick), L-Y
CLUSTER LEDS - LED BOARD ON THE METER PLUGS C11 / C12
D-CHG - Charge LED
D-HB - High beam LED
D-OIL - Oil pressure LED
D-PK - Park brake LED
D-TL - Turn LH LED
D-TR - Turn RH LED
GND-ID - Ground stud, LH kick panel (EWD ground point ID)
OEM cluster plug C12 pin 9, B-O wire
OEM cluster plug C12 pin 8, Y wire
OEM cluster plug C11 pin 12, R-L wire
SP-LED-12V - LED +12 V splice - IG +12 V from C12 pin 9 to the p...
OEM cluster plug C12 pin 1, R-G wire
OEM cluster plug C11 pin 2, G-B wire
SP-LED-GND - LED ground splice - turn LH, turn RH and high bea...
OEM cluster plug C11 pin 11, G-Y wire
HARNESS C - GLOVE BOX OUT THROUGH THE RH FENDER: FANS, HORNS, LIGHTS, RETRACTS, A/C, EPS
SP-CLR - Clearance feed split - F7 LH + F8 RH
SP-HL-HIGH - High-beam return join - H1 + H2 pin 1 to IE1 pi...
SP-HL-LOW - Low-beam return join - H1 + H2 pin 2 to IE1 pin ...
SP-HORN - Horn feed split - LH + RH horns, front centre
OEM J/B No.1 1H pin 6 (left kick)
LH front turn / clearance lamp F7 pin 1
RH front turn / clearance lamp F8 pin 1
LH headlamp H1 pin 1
RH headlamp H2 pin 1
OEM IE1 pin 11 (left kick, cowl side)
HEAVY DC - BATTERY, KILL SWITCH, RADLOK PAIR, STARTER, ALTERNATOR, FUEL PUMP RELAY BLOCK
BATT-RELAY-BLOCK - Battery relay block - fuel pump relay ...
JUMP-POST - Engine-bay jump post
KILL-SW - Kill switch - Longacre 52-45780, 4 terminal (trunk, ...
POWER-STUDS - POWER box bus zone (rev 7, glove box)
RADLOK-NEG-ENG - RADLOK - engine
RADLOK-POS-ENG - RADLOK + engine
T-ALT-B - Alternator B+ stud, rear RH of engine (Route 1 poi...
T-STARTER-B-3 - Starter B+ stud, lug 3 (Route 1 point 2)
OEM IG2 pin 15 (under the ECU, cowl side)
ALT-PLUG - Alternator G2 - round 3-pin plug (Toyota 90980-1034...
BATT-POS - Battery positive terminal post, trunk RH rear (Route ...
T-TRUNK-NEG - Battery negative terminal post, trunk RH rear (Ro...
RADLOK-NEG-CAB - RADLOK - firewall
RADLOK-POS-CAB - RADLOK + firewall
T-ENG-BLOCK - Engine block ground stud, lug 1 (Route 1 point 5)
T-STARTER-B - Starter B+ stud, lug 1 (Route 1 point 2)
T-STARTER-B-2 - Starter B+ stud, lug 2 (Route 1 point 2)
REAR FUEL - FUEL PUMP AND LEVEL SENDER
FUEL-LEVEL - Fuel Level Sender - DT 2-way (Dan rev 2, 2026...
FUEL-PUMP - Fuel Pump
IX-FUEL-S - IX-FUEL inline to fuel sender (trunk LH)
T-TRUNK-FP-GND - Ground stud, trunk LH side (EWD ID TBD, M6...
REAR LIGHTS - TAIL, STOP, HIGH-MOUNT, REVERSE, TURN, LICENCE
SP-RL-GND - Rear ground splice - every rear lamp ground to ...
SP-RL-REV - Back-up splice - reverse relay feed to R11 / R12 ...
SP-RL-STOP - Stop splice - S9 stop feed to R11 / R12 pin 1 a...
SP-RL-TAIL - Tail splice - J/B 1 TAIL feed to R11 / R12 pins 2 ...
High-mount stop light H6 plug A pin 2 (hatch spoiler)
Licence plate light L1 pin 2, socket pigtail
LH rear lamp R11 pin 5, socket pigtail
RH rear lamp R12 pin 5, socket pigtail
T-RL-GND-BL - Ground point BL, back panel center (EWD 1993 p...
LH rear lamp R11 pin 4, socket pigtail
LH rear lamp R11 pin 3, socket pigtail
RH rear lamp R12 pin 2, socket pigtail
RH rear lamp R12 pin 3, socket pigtail
RH rear lamp R12 pin 6, socket pigtail
LH rear lamp R11 pin 6, socket pigtail
FRONT WHEEL SPEED - FL / FR SENSORS TO THE FRONT VRC
SP-WS-F-SHIELD - Sensor screen join - FL + FR screens to t...
IX-WS-F-P - IX-WS-F
VRC-F-IN - VRC front IN plug
CAB-FL cable screen (floats at the device end)
CAB-FR cable screen (floats at the device end)
VRC-F-OUT - VRC front OUT plug
WSS-FL - ABS Wheel Speed FL
WSS-FR - ABS Wheel Speed FR
REAR WHEEL SPEED - RL / RR SENSORS TO THE REAR VRC
SP-WS-R-SHIELD - Sensor screen join - RL + RR screens to t...
IX-WS-R-P - IX-WS-R
VRC-R-IN - VRC rear IN plug
CAB-RL cable screen (floats at the device end)
CAB-RR cable screen (floats at the device end)
VRC-R-OUT - VRC rear OUT plug
WSS-RL - ABS Wheel Speed RL
WSS-RR - ABS Wheel Speed RR

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-20	DG	First issue: every harness of the master in one drawing set (replaces the ST185-AB-cabin pilot, R...

ST185-harness - every wiring harness of the car, one drawing set

Schematic - every wire, grouped by job

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-harness-SCH	A	1 OF 1	1762 x 1538 mm	DG	2026-10-20

ST185 Celica (living-relation) - generated by docs/harness/tools/build_drawings.py from docs/harness/MASTER-wirelist.csv; not to scale