ST185 Pin Chart

92 connectors · 67 faces sourced · 25 still a numbered list

Red +12 V · Black ground · White signal · Blue sensor return · Orange sensor supply · Yellow switch in · Green CAN

Grey shield drain · Dashed = spare cavity · Cavity colour is the wire's insulation colour. From MASTER-wirelist.csv.


Bussed plug = a Deutsch DT plug whose bussed cap ties every pin together: a splice you can unplug. Each sits where its name says.

AB-cabin

Link G4X plug A ECU-A · 4-1437290-1

FACE SOURCED

Link G4X plug A (centre dash)

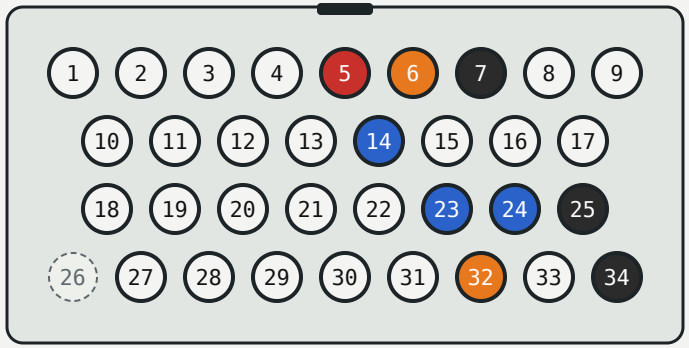

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w111_c	Injector 4 drive (-)	DRB102 bulkhead, cabin side · pin 24	3-1447221-4
2	20 White	w110_c	Injector 3 drive (-)	DRB102 bulkhead, cabin side · pin 23	3-1447221-4
3	20 White	w109_c	Injector 2 drive (-)	DRB102 bulkhead, cabin side · pin 22	3-1447221-4
4	20 White	w108_c	Injector 1 drive (-)	DRB102 bulkhead, cabin side · pin 21	3-1447221-4
5	18 Red	w_a5_pin	EFI relay k_efi → LOGIC SW12 5 A fuse (+ IG2 wake diode)	Splice to: Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 2; DRB102 bulkhead, cabin side · pin 30; IG2 wake diode (1N5822) · pin 2	3-1447221-3
6	20 Orange	w19	+8 V sensor supply	Splice to: Cam pull-up 1.8 k to +8 V · pin 1; DRB102 bulkhead, cabin side · pin 63; DRB102 bulkhead, cabin side · pin 67	3-1447221-4
7	20 Black	w_drain_ecu_a	Shield drain	Splice to: Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47	3-1447221-4
8	20 White	w200_c	Crank sensor signal	DRB102 bulkhead, cabin side · pin 74	3-1447221-4
9	20 White	w_trig2_pin	Cam sensor signal	Splice to: DRB102 bulkhead, cabin side · pin 64; Cam pull-up 1.8 k to +8 V · pin 2	3-1447221-4

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
10	20 White	w123_c	Coil 4 trigger (IGT)	DRB102 bulkhead, cabin side · pin 12	3-1447221-4
11	20 White	w122_c	Coil 3 trigger (IGT)	DRB102 bulkhead, cabin side · pin 11	3-1447221-4
12	20 White	w121_c	Coil 2 trigger (IGT)	DRB102 bulkhead, cabin side · pin 10	3-1447221-4
13	20 White	w120_c	Coil 1 trigger (IGT)	DRB102 bulkhead, cabin side · pin 9	3-1447221-4
14	20 Blue	w38	Pedal 1 signal main	accelerator pedal sensor · pin 6	3-1447221-4
15	20 White	w201_c	Coolant temp signal	DRB102 bulkhead, cabin side · pin 70	3-1447221-4
16	20 White	w202_c	Intake temp signal	DRB102 bulkhead, cabin side · pin 33	3-1447221-4
17	20 White	w26_c	MAP sensor signal	DRB102 bulkhead, cabin side · pin 17	3-1447221-4
18	20 White	w_ac_kill	A/C cancel (ACT)	OEM A/C amplifier	3-1447221-4
19	18 White	w_fp85	Fuel pump relay (-)	Trunk relay box relay K1 (fuel pump) · terminal 85	3-1447221-3
20	20 White	w81	ETB relay coil (-)	LOGIC fuse box relay M4 (ETB power) · terminal 85	3-1447221-4
21	20 White	w103_c	Boost solenoid (-)	DRB102 bulkhead, cabin side · pin 58	3-1447221-4
22	20 White	w128_c	Throttle pos 1 main	DRB102 bulkhead, cabin side · pin 42	3-1447221-4
23	20 Blue	cab_fspur_l	FL conditioned out	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 3	3-1447221-4
24	18 Blue	w68	Sensor ground	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 1	3-1447221-3
25	18 Black	w70	ECU power ground	Splice to: Link G4X plug A · pin 34; Link G4X plug B · pin 25; Link G4X plug B · pin 34; POWER box NEG bar M8 stud (glove box)	3-1447221-3
26	*spare*				
27	20 White	w_mrs_c	EHPS pump speed	DRB102 bulkhead, cabin side · pin 84	3-1447221-4


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
28	18 White	w76	EFI relay coil (-)	POWER fuse box relay R2 (EFI main) · terminal 85	3-1447221-3
29	18 White	w_fan85	Rad fan relay (-)	POWER fuse box relay R4 (radiator fan) · terminal 85	3-1447221-3
30	20 White	w16_c	Turbo speed signal	DRB102 bulkhead, cabin side · pin 53	3-1447221-4
31	20 White	w48_c	Flex fuel signal	DRB102 bulkhead, cabin side · pin 31	3-1447221-4
32	18 Orange	w67	+5 V sensor supply	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 1	3-1447221-3
33	20 White	w129_c	Throttle pos 2 sub	DRB102 bulkhead, cabin side · pin 44	3-1447221-4
34	18 Black	w_a34	ECU power ground	Splice to: Link G4X plug A · pin 25; Link G4X plug B · pin 25; Link G4X plug B · pin 34; POWER box NEG bar M8 stud (glove box)	3-1447221-3

Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, CabinPower

DRB102 bulkhead, cabin side DRB102-CABIN · DRB12-102PAE-L018 + DRBF-1A

FACE SOURCED

DRB102 receptacle (RH firewall)

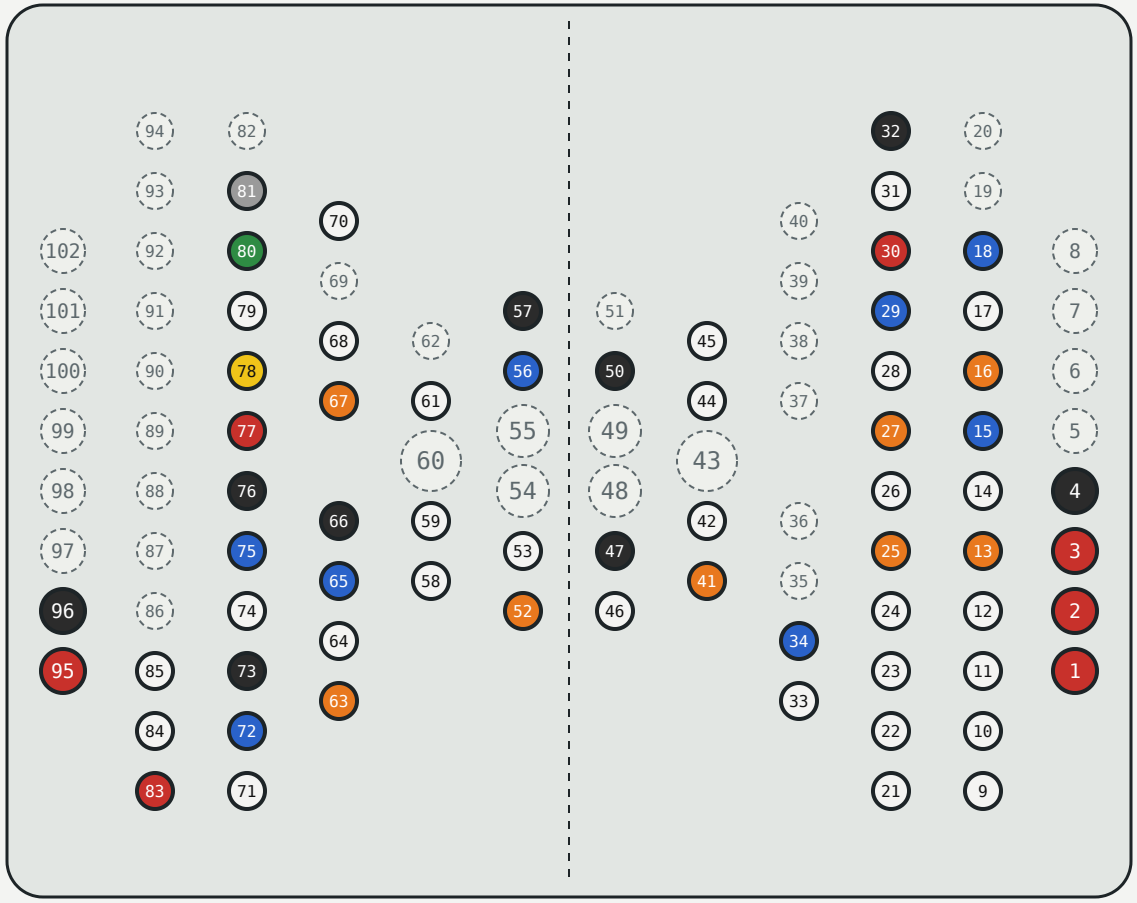

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_cop_pwr_ac	EFI relay k_efi → LOGIC COP 10 A fuse	LOGIC fuse box · fuse BUS2-3 (COP 10 A)	0460-220-1231
2	14 Red	w_inj_pwr_ac	EFI relay k_efi → LOGIC INJ 7.5 A fuse	LOGIC fuse box · fuse BUS2-4 (INJ 7.5 A)	0460-220-1231
3	12 Red	w_strl_c	Starter solenoid S	OEM R/B No.4 starter relay pin 4 (RH kick), starter out	0460-220-1231

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
4	14 Black	w_cop_gnd_ac	Coil ground to the POWER box NEG bar	POWER box NEG bar M8 stud (glove box)	0460-220-1231
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				
9	20 White	w120_c	Coil 1 trigger (IGT)	Link G4X plug A · pin 13	0460-202-1631
10	20 White	w121_c	Coil 2 trigger (IGT)	Link G4X plug A · pin 12	0460-202-1631
11	20 White	w122_c	Coil 3 trigger (IGT)	Link G4X plug A · pin 11	0460-202-1631
12	20 White	w123_c	Coil 4 trigger (IGT)	Link G4X plug A · pin 10	0460-202-1631
13	20 Orange	w_5v_brail_c46	+5 V fuel pressure	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 6	0460-202-1631
14	20 White	w32_c	Fuel pressure signal	Link G4X plug B · pin 16	0460-202-1631
15	20 Blue	w_gnd_b_c21	Gnd fuel press + VSS	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 8	0460-202-1631
16	20 Orange	w_5v_a_c39	+5 V MAP sensor	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 3	0460-202-1631
17	20 White	w26_c	MAP sensor signal	Link G4X plug A · pin 17	0460-202-1631
18	20 Blue	w_gnd_a_c44	Gnd flex + MAP	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 6	0460-202-1631
19	*spare*				
20	*spare*				
21	20 White	w108_c	Injector 1 drive (-)	Link G4X plug A · pin 4	0460-202-1631
22	20 White	w109_c	Injector 2 drive (-)	Link G4X plug A · pin 3	0460-202-1631
23	20 White	w110_c	Injector 3 drive (-)	Link G4X plug A · pin 2	0460-202-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
24	20 White	w111_c	Injector 4 drive (-)	Link G4X plug A · pin 1	0460-202-1631
25	20 Orange	w_5v_brail_c47	+5 V coolant press	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 7	0460-202-1631
26	20 White	w35_c	Coolant press signal	Link G4X plug B · pin 23	0460-202-1631
27	20 Orange	w_5v_brail_c45	+5 V oil pressure	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 5	0460-202-1631
28	20 White	w29_c	Oil pressure signal	Link G4X plug B · pin 15	0460-202-1631
29	20 Blue	w_gnd_b_c19	Gnd oil/clnt/temps	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 7	0460-202-1631
30	18 Red	w_rail_sp_sw12_c	EFI relay k_efi → LOGIC SW12 5 A fuse	Splice to: Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 2; IG2 wake diode (1N5822) · pin 2; Link G4X plug A · pin 5	0460-202-1631
31	20 White	w48_c	Flex fuel signal	Link G4X plug A · pin 31	0460-202-1631
32	20 Black	w_shc_flex	Flex fuel shield	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 47	0460-202-1631
33	20 White	w202_c	Intake temp signal	Link G4X plug A · pin 16	0460-202-1631
34	20 Blue	w_rail_sp_gndout_c	Gnd IAT/TPS/coolant	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 2	0460-202-1631
35	*spare*				
36	*spare*				
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				
41	20 Orange	w_rail_sp_5v_c	+5 V throttle sensor	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 2	0460-202-1631
42	20 White	w128_c	Throttle pos 1 main	Link G4X plug A · pin 22	0460-202-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
43	*spare*				
44	20 White	w129_c	Throttle pos 2 sub	Link G4X plug A · pin 33	0460-202-1631
45	18 White	w124_c	ETB motor +	Link G4X plug B · pin 18	0460-202-1631
46	18 White	w215_c	ETB motor -	Link G4X plug B · pin 26	0460-202-1631
47	20 Black	w_shc_etbs	Throttle shield	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32	0460-202-1631
48	*spare*				
49	*spare*				
50	20 Black	w_shc_etbm	ETB motor shield	Splice to: DRB102 bulkhead, cabin side · pin 73; Link G4X plug B · pin 17; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5	0460-202-1631
51	*spare*				
52	20 Orange	w_5v_a_c40	+5 V turbo speed	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 4	0460-202-1631
53	20 White	w16_c	Turbo speed signal	Link G4X plug A · pin 30	0460-202-1631
54	*spare*				
55	*spare*				
56	20 Blue	w_gnd_a_c43	Gnd turbo speed	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 5	0460-202-1631
57	20 Black	w_shc_turbo	Turbo speed shield	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47	0460-202-1631
58	20 White	w103_c	Boost solenoid (-)	Link G4X plug A · pin 21	0460-202-1631
59	20 White	w204_c	Charge temp signal	Link G4X plug B · pin 7	0460-202-1631
60	*spare*				
61	20 White	w203_c	Oil temp signal	Link G4X plug B · pin 6	0460-202-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
62	*spare*				
63	20 Orange	w_rail_sp_8v_c	+8 V to cam sensor	Splice to: Cam pull-up 1.8 k to +8 V · pin 1; Link G4X plug A · pin 6; DRB102 bulkhead, cabin side · pin 67	0460-202-1631
64	20 White	w_cam_sig_c	Cam sensor signal	Splice to: Link G4X plug A · pin 9; Cam pull-up 1.8 k to +8 V · pin 2	0460-202-1631
65	20 Blue	w_gnd_a_c42	Gnd cam sensor	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 4	0460-202-1631
66	20 Black	w_shc_cam	Cam sensor shield	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47	0460-202-1631
67	20 Orange	w_rail_sp_8v_vss_c	+8 V to gearbox speed sensor	Splice to: Cam pull-up 1.8 k to +8 V · pin 1; Link G4X plug A · pin 6; DRB102 bulkhead, cabin side · pin 63	0460-202-1631
68	20 White	w_vss_sig_c	Gearbox speed signal	Link G4X plug B · pin 29	0460-202-1631
69	*spare*				
70	20 White	w201_c	Coolant temp signal	Link G4X plug A · pin 15	0460-202-1631
71	20 White	w205_c	Knock sensor signal	Link G4X plug B · pin 9	0460-202-1631
72	20 Blue	w12_c	Knock sensor (-)	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 6	0460-202-1631
73	20 Black	w_shc_knock1	Knock sensor shield	Splice to: DRB102 bulkhead, cabin side · pin 50; Link G4X plug B · pin 17; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5	0460-202-1631
74	20 White	w200_c	Crank sensor signal	Link G4X plug A · pin 8	0460-202-1631
75	20 Blue	w_gnd_a_c41	Gnd crank sensor	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 3	0460-202-1631
76	20 Black	w_shc_crank	Crank sensor shield	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 5; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47	0460-202-1631
77	16 Red	w_rev_feed_c	Back-up sw +12 V in	OEM IG2 pin 4 (under the ECU, cowl side)	0460-202-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
78	16 Yellow	w_rev_sw_c	Reverse sw +12 V out	Splice to: Optocoupler board, 8 channel (Dan's, generic EL814) · pin IN2; OEM IG2 pin 13 (under the ECU, cowl side)	0460-202-1631
79	20 White	wc_h_bh_bc	CAN H to CAN-Lambda	Splice to: ECU Comms/Tuning Port · pin 3; 120 ohm CAN end resistor, ECU end · pin 1; ECUMaster CSB3 · pin 5; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash)	0460-202-1631
80	20 Green	wc_l_bh_bc	CAN L to CAN-Lambda	Splice to: ECU Comms/Tuning Port · pin 4; 120 ohm CAN end resistor, ECU end · pin 2; ECUMaster CSB3 · pin 6; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash)	0460-202-1631
81	Shield	cab_canbh_bc_sh	CAN-Lambda shield	Splice to: ECU Comms/Tuning Port · pin 1; Shield, not connected at the device end	0460-202-1631
82	*spare*				
83	20 Red	w_fb_mrs_en	EFI relay k_efi → LOGIC MRS 5 A fuse	LOGIC fuse box · fuse BUS2-12 (MRS 5 A)	0460-202-1631
84	20 White	w_mrs_c	EHPS pump speed	Link G4X plug A · pin 27	0460-202-1631
85	18 White	w_eps_rly	EHPS relay coil (-)	EPS pump relay (beside the POWER fuse box) · terminal 85	0460-202-1631
86	*spare*				
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				
94	*spare*				
95	14 Red	w_lam12_cp	EFI relay k_efi → LOGIC LAM 7.5 A fuse	LOGIC fuse box · fuse BUS2-1 (LAM 7.5 A)	0460-220-1231
96	14 Black	w_lamg_ac	CAN-Lambda ground	POWER box NEG bar M8 stud (glove box)	0460-220-1231
97	*spare*				
98	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
99	*spare*				
100	*spare*				
101	*spare*				
102	*spare*				


Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-cabin, CabinPower

+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V)

BUS-5V · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)

FACE SOURCED

DT06-12 plug (ECU splice point)

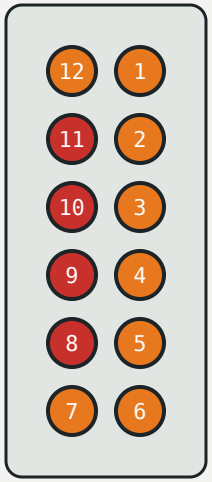

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Orange	w67	+5 V from ECU A32	Link G4X plug A · pin 32	0462-201-16141
2	20 Orange	w_rail_sp_5v_c	+5 V throttle sensor	DRB102 bulkhead, cabin side · pin 41	0462-201-16141
3	20 Orange	w_5v_a_c39	+5 V MAP sensor	DRB102 bulkhead, cabin side · pin 16	0462-201-16141
4	20 Orange	w_5v_a_c40	+5 V turbo speed	DRB102 bulkhead, cabin side · pin 52	0462-201-16141
5	20 Orange	w_5v_brail_c45	+5 V oil pressure	DRB102 bulkhead, cabin side · pin 27	0462-201-16141
6	20 Orange	w_5v_brail_c46	+5 V fuel pressure	DRB102 bulkhead, cabin side · pin 13	0462-201-16141
7	20 Orange	w_5v_brail_c47	+5 V coolant press	DRB102 bulkhead, cabin side · pin 25	0462-201-16141
8	20 Red	w_aps_vc1	+5 V pedal sensor 1	accelerator pedal sensor · pin 4	0462-201-16141
9	20 Red	w210	+5 V pedal sensor 2	accelerator pedal sensor · pin 1	0462-201-16141
10	20 Red	cab_fspur_5v	+5 V front VRC	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 1	0462-201-16141
11	20 Red	cab_rspur_5v	+5 V rear VRC	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 1	0462-201-16141
12	20 Orange	w_5v_bus_link	+5 V to BUS-5V-2	+5 V bussed plug 2 at the ECU, fed from BUS-5V pin 12 (BUS-5V-2) · pin 1	0462-201-16141


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

+5 V bussed plug 2 at the ECU, fed from BUS-5V pin 12 (BUS-5V-2)

`BUS-5V-2 · DT06-08SA + W8S; DT04-08PA-P021 (bussed cap)`

FACE SOURCED

DT06-8 plug (ECU splice point)

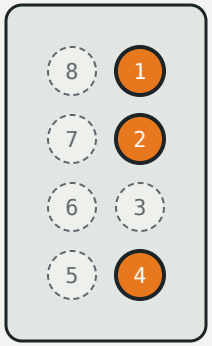

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	`w_5v_bus_link`	+5 V from BUS-5V	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 12	`0462-201-16141`
2	20 Orange	`w_cru_5v_ac`	+5 V cruise ladder	Cruise resistor on the CSB3 · pin 1	`0462-201-16141`
4	20 Orange	`w44`	+5 V fuel lvl pullup	470R fuel level pull-up to +5V · pin 2	`0462-201-16141`
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A)

BUS-GNDOUT-A · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)

FACE SOURCED

DT06-12 plug (ECU splice point)

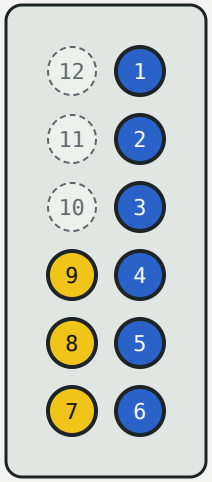

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	w68	Sensor gnd from A24	Link G4X plug A · pin 24	0462-201-16141
2	20 Blue	w_rail_sp_gndout_c	Gnd IAT/TPS/coolant	DRB102 bulkhead, cabin side · pin 34	0462-201-16141
3	20 Blue	w_gnd_a_c41	Gnd crank sensor	DRB102 bulkhead, cabin side · pin 75	0462-201-16141
4	20 Blue	w_gnd_a_c42	Gnd cam sensor	DRB102 bulkhead, cabin side · pin 65	0462-201-16141
5	20 Blue	w_gnd_a_c43	Gnd turbo speed	DRB102 bulkhead, cabin side · pin 56	0462-201-16141
6	20 Blue	w_gnd_a_c44	Gnd flex + MAP	DRB102 bulkhead, cabin side · pin 18	0462-201-16141
7	20 Yellow	w40	Pedal 1 ground	accelerator pedal sensor · pin 5	0462-201-16141
8	20 Yellow	w_aps_gnd2	Pedal 2 ground	accelerator pedal sensor · pin 2	0462-201-16141
9	20 Yellow	cab_fspur_gnd	Front VRC ground	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 2	0462-201-16141
10	*spare*				
11	*spare*				
12	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12)

`BUS-SW12 · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)`

FACE SOURCED

SW12 bus plug DT06-12 (glove box, by LOGIC box)

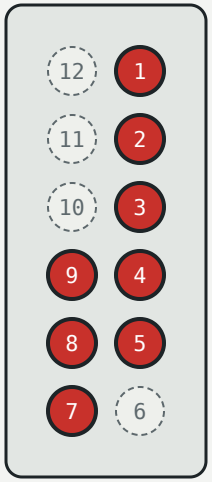

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	`w_cp_sw12_in`	EFI relay k_efi → LOGIC SW12 5 A fuse	LOGIC fuse box · fuse BUS2-2 (SW12 5 A)	`0462-201-16141`
2	18 Red	`w_fb_sw12`	EFI relay k_efi → LOGIC SW12 5 A fuse	Splice to: IG2 wake diode (1N5822) · pin 2; Link G4X plug A · pin 5; DRB102 bulkhead, cabin side · pin 30	`0462-201-16141`
3	18 Red	`w_k_fp_86_cp`	EFI relay k_efi → LOGIC SW12 5 A fuse	Trunk relay box relay K1 (fuel pump) · terminal 86	`0462-201-16141`
4	18 Red	`w_k_fan_86_cp`	EFI relay k_efi → LOGIC SW12 5 A fuse	POWER fuse box relay R4 (radiator fan) · terminal 86	`0462-201-16141`
5	20 Red	`w_k_etb_86_cp`	EFI relay k_efi → LOGIC SW12 5 A fuse	LOGIC fuse box relay M4 (ETB power) · terminal 86	`0462-201-16141`
7	18 Red	`w_k_fan2_86_cp`	EFI relay k_efi → LOGIC SW12 5 A fuse	POWER fuse box relay R5 (condenser fan) · terminal 86	`0462-201-16141`
8	18 Red	`w_k_eps_86_cp`	EFI relay k_efi → LOGIC SW12 5 A fuse	EPS pump relay (beside the POWER fuse box) · terminal 86	`0462-201-16141`

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
9	18 Red	w_k_eps_en_86_cp	EFI relay k_efi → LOGIC SW12 5 A fuse	LOGIC fuse box relay M6 (EPS enable) · terminal 86	0462-201-16141
10	*spare*				
11	*spare*				
12	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin, CabinPower

LOGIC fuse box

LOGIC · ST185-FB-LOGIC rev 5

FACE NOT SOURCED

B2 LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R75): Bus 1 (permanent) and Bus 2 (switched, k_efi 30) mini fuse strips, micro relays M1-M10

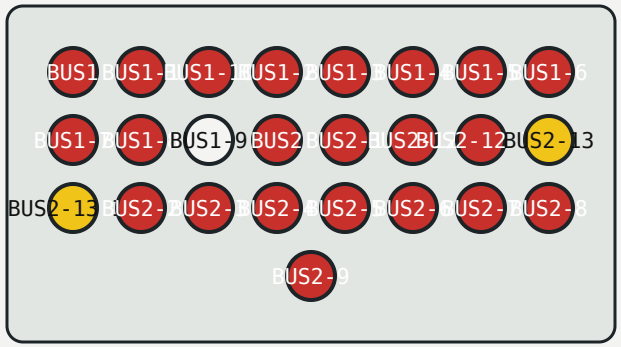

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
BUS1	8 Red	w_hc_fb	AMI BUS1 50 A fuse	POWER fuse box · fuse AMI OUT-1 (BUS1 50 A)	2R5
BUS1-1	18 Red	w_k_efi_86_cp	AMI BUS1 50 A fuse → LOGIC EFI86 5 A fuse	POWER fuse box relay R2 (EFI main) · terminal 86	1-968849-1
BUS1-10	16 Red	w_fb_k_etb_30_cp	AMI BUS1 50 A fuse → LOGIC ETB 7.5 A fuse	LOGIC fuse box relay M4 (ETB power) · terminal 30	1-968851-1
BUS1-2	14 Red	w_hl_cp	AMI BUS1 50 A fuse → LOGIC HL 15 A fuse	Splice to: LOGIC fuse box relay M1 (headlight LH) · terminal 30; LOGIC fuse box relay M1 (headlight LH) · terminal 86	1-968851-1
BUS1-3	14 Red	w_hr_cp	AMI BUS1 50 A fuse → LOGIC HR 15 A fuse	Splice to: LOGIC fuse box relay M2 (headlight RH) · terminal 30; LOGIC fuse box relay M2 (headlight RH) · terminal 86	1-968851-1
BUS1-4	14 Red	w_hz_cp	AMI BUS1 50 A fuse → LOGIC HZ 15 A fuse	Splice to: OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 30; LOGIC fuse box relay M3 (horn) · terminal 86	1-968851-1
BUS1-5	14 Red	w_pmu_dome	AMI BUS1 50 A fuse → LOGIC DM 20 A fuse	OEM J/B No.1 1H pin 2 (left kick)	1-968851-1
BUS1-6	14 Red	w_rb2_wl	AMI BUS1 50 A fuse → LOGIC WL 15 A fuse	OEM W-L lead at old R/B2 pin 2 (left kick)	1-968851-1
BUS1-7	20 Red	w_at_12v_tie_cp	AMI BUS1 50 A fuse → LOGIC ALM 5 A fuse	Splice to: Alarm module · pin 1	1-968849-1
BUS1-8	20 Red	w_at_12v_shk_tie_cp	AMI BUS1 50 A fuse → LOGIC ALMS 2 A fuse	Splice to: Shock / tilt sensor * · pin A	1-968849-1


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
BUS1-9	20 White	w_alt_s_c	Alt S battery sense	Alternator G2 · pin 1	1-968849-1
BUS2	10 Red	w77_cp	EFI relay k_efi (LOGIC Bus 2 feed)	POWER fuse box relay R2 (EFI main) · terminal 30	2R5
BUS2-1	14 Red	w_lam12_cp	EFI relay k_efi → LOGIC LAM 7.5 A fuse	DRB102 bulkhead, cabin side · pin 95	1-968851-1
BUS2-12	20 Red	w_fb_mrs_en	EFI relay k_efi → LOGIC MRS 5 A fuse	DRB102 bulkhead, cabin side · pin 83	1-968849-1
BUS2-12 IN	18 Red	w_k_eps_en_87_cp	LOGIC EPSEN 7.5 A fuse → EPS enable relay k_eps_en	LOGIC fuse box relay M6 (EPS enable) · terminal 87	1-968849-1
BUS2-13	20 Yellow	w_start	Start request	Link G4X plug B · pin 30	1-968849-1
BUS2-13 IN	20 Yellow	w_start_in_cp	Start sw ST1 feed	OEM ST1 lead B-W at old R/B No.4 pin 1, RH kick panel	1-968849-1
BUS2-2	16 Red	w_cp_sw12_in	EFI relay k_efi → LOGIC SW12 5 A fuse	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 1	1-968851-1
BUS2-3	14 Red	w_cop_pwr_ac	EFI relay k_efi → LOGIC COP 10 A fuse	DRB102 bulkhead, cabin side · pin 1	1-968851-1
BUS2-4	14 Red	w_inj_pwr_ac	EFI relay k_efi → LOGIC INJ 7.5 A fuse	DRB102 bulkhead, cabin side · pin 2	1-968851-1
BUS2-5	20 Red	w_csb12	EFI relay k_efi → LOGIC CSB 5 A fuse	ECUMaster CSB3 · pin 1	1-968849-1
BUS2-6	16 Red	w_dev_cp	EFI relay k_efi → LOGIC DEV 15 A fuse	Splice to: Cluster buck converter IN+ pin (old meter spot); Pi 12-to-5 V supply IN+ pin (center dash)	1-968851-1
BUS2-7	18 Red	w_fb_k_eps_en_30_cp	EFI relay k_efi → LOGIC EPSEN 7.5 A fuse	LOGIC fuse box relay M6 (EPS enable) · terminal 30	1-968849-1
BUS2-8	16 Red	w_acc_fuse	EFI relay k_efi → LOGIC ACC 10 A fuse	Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 86; LOGIC fuse box relay M5 (A/C clutch) · terminal 30	1-968851-1
BUS2-9	20 Red	w_at_ig_tie_cp	EFI relay k_efi → LOGIC ALMIG 2 A fuse	Splice to: Alarm module · pin 3	1-968849-1

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness AB-cabin, CabinPower, EngineRoom-C, CSB3

Link G4X plug B ECU-B · 4-1437290-0

FACE SOURCED

ECU-B (Link G4X plug B, centre dash)

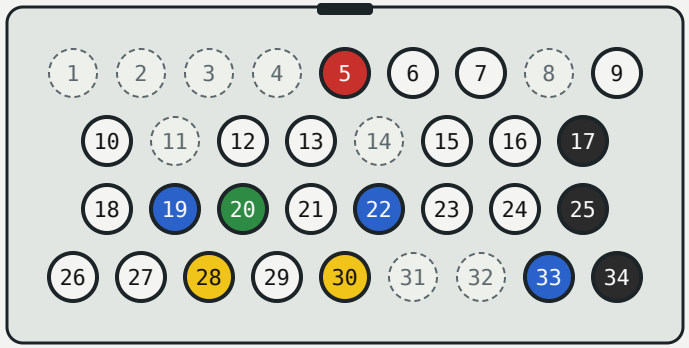

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	*spare*				
3	*spare*				
4	*spare*				
5	18 Red	w82_ac	ETB motor +12 V	LOGIC fuse box relay M4 (ETB power) · terminal 87	3-1447221-3
6	20 White	w203_c	Oil temp signal	DRB102 bulkhead, cabin side · pin 61	3-1447221-4
7	20 White	w204_c	Charge temp signal	DRB102 bulkhead, cabin side · pin 59	3-1447221-4
8	*spare*				
9	20 White	w205_c	Knock sensor signal	DRB102 bulkhead, cabin side · pin 71	3-1447221-4
10	20 White	w_tach	Engine speed (tacho)	Splice to: OEM A/C amplifier A18 (1993 book: A15); Lock-sensor tap 4.7 k from tacho · pin 1	3-1447221-4
11	*spare*				
12	18 White	w_eps_trig	EPS enable relay (-)	LOGIC fuse box relay M6 (EPS enable) · terminal 85	3-1447221-3

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
13	18 White	w_fan285	Cond fan relay (-)	POWER fuse box relay R5 (condenser fan) · terminal 85	3-1447221-3
14	*spare*				
15	20 White	w29_c	Oil pressure signal	DRB102 bulkhead, cabin side · pin 28	3-1447221-4
16	20 White	w32_c	Fuel pressure signal	DRB102 bulkhead, cabin side · pin 14	3-1447221-4
17	20 Black	w_drain_ecu_b	Shield drain B	Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 50; Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 5	3-1447221-4
18	18 White	w124_c	ETB motor +	DRB102 bulkhead, cabin side · pin 45	3-1447221-3
19	20 Blue	cab_rspur_r	Rear right wheel spd	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 4	3-1447221-4
20	20 Green	cab_rspur_l	Rear left wheel spd	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 3	3-1447221-4
21	20 White	cab_fspur_r_ac	FR conditioned out	Front wheel-speed inline plug, VRC side (IX-WS-F) · pin 4	3-1447221-4
22	18 Blue	w69	Sensor ground B	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 1	3-1447221-3
23	20 White	w35_c	Coolant press signal	DRB102 bulkhead, cabin side · pin 26	3-1447221-4
24	20 White	w_fl_sig_pin	Fuel level signal	Splice to: Fuel sender inline plug, harness side, trunk (IX-FUEL) · pin 1; 470R fuel level pull-up to +5V · pin 1	3-1447221-4
25	18 Black	w_b25_ac	ECU power ground	Splice to: Link G4X plug A · pin 25; Link G4X plug A · pin 34; Link G4X plug B · pin 34; POWER box NEG bar M8 stud (glove box)	3-1447221-3
26	18 White	w215_c	ETB motor -	DRB102 bulkhead, cabin side · pin 46	3-1447221-3
27	20 White	w_at_immob2	Anti-theft input	Alarm module · pin 9	3-1447221-4
28	20 Yellow	w_ign	Ignition sw sense	OEM J/B No.1 (LH kick panel) 1H pin 7, B-O	3-1447221-4
29	20 White	w_vss_sig_c	Gearbox speed signal	DRB102 bulkhead, cabin side · pin 68	3-1447221-4
30	20 Yellow	w_start	Start request	LOGIC fuse box · fuse BUS2-13	3-1447221-4

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
31	*spare*				
32	*spare*				
33	20 Blue	w_aps_vpa2	Pedal 2 signal sub	accelerator pedal sensor · pin 3	3-1447221-4
34	18 Black	w_b34_ac	ECU power ground	Splice to: Link G4X plug A · pin 25; Link G4X plug A · pin 34; Link G4X plug B · pin 25; POWER box NEG bar M8 stud (glove box)	3-1447221-3


Pin numbers: Link G4X XtremeX QSG p.5 pin numbering (1-34) · harness AB-cabin, CabinPower, AntiTheft

Trunk relay box relay K1 (fuel pump)

K-FP · V23132-A2001-B200

FACE SOURCED

B3-K1 Fuel Pump Relay, TE HCR150 (seated in the battery relay block K1) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) switched 12 V - HCR 150 coil is a 2-pole Superseal plug (TE terminals 1/2, not marked 85/86), resistor-suppressed so polarity-free

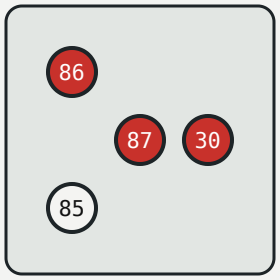

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w_fp_30	FP 40 A fuse (battery relay block)	Trunk relay box · FP fuse (40 A)	TBD
85	18 White	w_fp85	Fuel pump relay (-)	Link G4X plug A · pin 19	282110-1
86	18 Red	w_k_fp_86_cp	EFI relay k_efi → LOGIC SW12 5 A fuse	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 3	282110-1
87	10 Red	w_fpump_r	Fuel pump +12 V	Fuel Pump · pin 1	TBD
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, HeavyDC, RearFuel

POWER fuse box relay R4 (radiator fan) K-FAN · 1-1414147-0

FACE SOURCED

B1-R4 Radiator fan relay (seated in the POWER box R4)

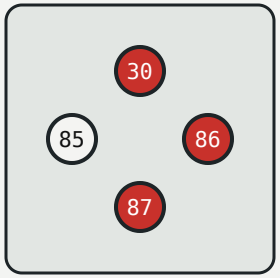

bottom (terminal side) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w_fan_pwr	AMI FAN 30 A fuse → rad fan relay k_fan	Uprated radiator fan (+) · pin 1	280756-4
85	18 White	w_fan85	Rad fan relay (-)	Link G4X plug A · pin 29	42281-1
86	18 Red	w_k_fan_86_cp	EFI relay k_efi → LOGIC SW12 5 A fuse	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 4	42281-1
87	10 Red	w_fb_k_fan_87_cp	AMI FAN 30 A fuse	POWER fuse box · fuse AMI IN-4 (FAN 30 A)	280756-4


Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

EPS pump relay (beside the POWER fuse box)

K-EPS · V23132-A2001-B200

FACE SOURCED

B4 EPS pump relay (HCR150, glove box, beside the POWER box) - coil- (85) switched to ground by the MR-S pump pin B5 (R22); coil+ (86) switched 12 V - HCR 150 coil is a 2-pole plug (TE terminals 1/2, not marked 85/86), resistor-suppressed so polarity-free

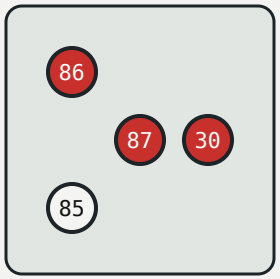

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	8 Red	w_fb_k_eps_30_ac	AMI EPS 50 A fuse	POWER fuse box · fuse AMI OUT-6 (EPS 50 A)	TBD
85	18 White	w_eps_rly	EHPS relay coil (-)	DRB102 bulkhead, cabin side · pin 85	282110-1
86	18 Red	w_k_eps_86_cp	EFI relay k_efi → LOGIC SW12 5 A fuse	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 8	282110-1
87	8 Red	w_eps_pwr_bc	AMI EPS 50 A fuse → EHPS relay k_eps	MR-S EHPS pump plug A · pin 1	TBD
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

LOGIC fuse box relay M5 (A/C clutch) K-ACC · 6-1419137-4

FACE SOURCED

B2-M5 A/C clutch relay (k_acc) - amp A15 pin 8 sinks coil- (85); coil+ (86) fused +12 V from B2-BUS2-8

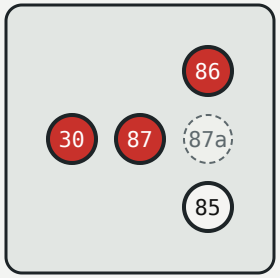

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	w_fb_k_acc_30_cp	A/C clutch +12 V in	Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 86; LOGIC fuse box · fuse BUS2-8 (ACC 10 A)	42281-1
85	18 White	w_acc_trig	A/C clutch relay coil (-)	OEM A/C amplifier A18 (1993 book: A15)	280919-2
86	18 Red	w_acc86	A/C clutch relay coil+	Splice to: LOGIC fuse box relay M5 (A/C clutch) · terminal 30; LOGIC fuse box · fuse BUS2-8 (ACC 10 A)	280919-2
87	16 Red	w_acc_clutch	A/C clutch +12 V	A/C compressor A4 pin 4	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

accelerator pedal sensor APS-PEDAL · TBD

FACE NOT SOURCED

accelerator pedal sensor

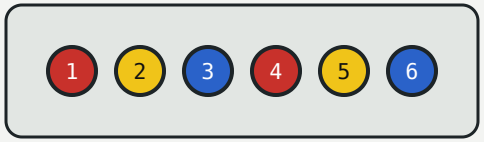

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w210	+5 V pedal sensor 2	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 9	TBD
2	20 Yellow	w_aps_gnd2	Pedal 2 ground	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 8	TBD
3	20 Blue	w_aps_vpa2	Pedal 2 signal sub	Link G4X plug B · pin 33	TBD
4	20 Red	w_aps_vc1	+5 V pedal sensor 1	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 8	TBD
5	20 Yellow	w40	Pedal 1 ground	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 7	TBD
6	20 Blue	w38	Pedal 1 signal main	Link G4X plug A · pin 14	TBD

Pin numbers: TBD · harness AB-cabin

Front wheel-speed inline plug, VRC side (IX-WS-F) IX-WS-F-S · DT06-6S + W6S

FACE SOURCED

to front VR conditioner

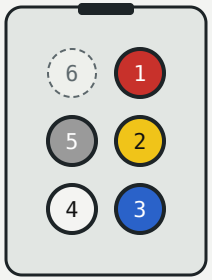

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_fspur_5v	VRC-F +5V	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 10	0462-201-1631
2	20 Yellow	cab_fspur_gnd	VRC-F GND	Sensor-ground bussed plug A at the ECU, to ECU plug A pin 24 (BUS-GNDOUT-A) · pin 9	0462-201-1631
3	20 Blue	cab_fspur_l	FL conditioned out	Link G4X plug A · pin 23	0462-201-1631
4	20 White	cab_fspur_r_ac	FR conditioned out	Link G4X plug B · pin 21	0462-201-1631
5	Shield	cab_fspur_sh	WS-F screen drain	Splice to: Link G4X plug A · pin 7; Shield, not connected at the device end; DRB102 bulkhead, cabin side · pin 76; DRB102 bulkhead, cabin side · pin 66; DRB102 bulkhead, cabin side · pin 57; DRB102 bulkhead, cabin side · pin 32; DRB102 bulkhead, cabin side · pin 47	0462-201-1631
6	*spare*				


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B)

`BUS-GNDOUT-B · DT06-12SA + W12S; DT04-12PA-P021 (bussed cap)`

FACE SOURCED

DT06-12 plug (ECU splice point)

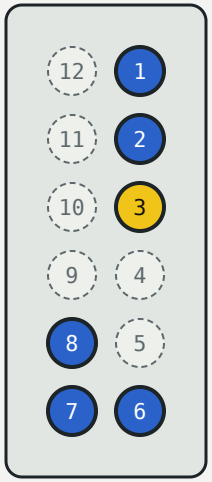

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Blue	w69	Sensor gnd from B22	Link G4X plug B · pin 22	0462-201-16141
2	20 Blue	w45	Fuel level ground	Fuel sender inline plug, harness side, trunk (IX-FUEL) · pin 2	0462-201-16141
3	20 Yellow	cab_rspur_gnd	Rear VRC ground	Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R) · pin 2	0462-201-16141
6	20 Blue	w12_c	Knock sensor (-)	DRB102 bulkhead, cabin side · pin 72	0462-201-16141
7	20 Blue	w_gnd_b_c19	Gnd oil/clnt/temps	DRB102 bulkhead, cabin side · pin 29	0462-201-16141
8	20 Blue	w_gnd_b_c21	Gnd fuel press + VSS	DRB102 bulkhead, cabin side · pin 15	0462-201-16141
9	*spare*				
10	*spare*				
11	*spare*				
12	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

LOGIC fuse box relay M6 (EPS enable) K-EPS-EN · 6-1419137-4

FACE SOURCED

B2-M6 EPS Enable Relay (seated in the LOGIC box M6) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) switched 12 V

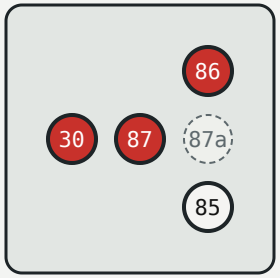

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	18 Red	w_fb_k_eps_en_30_cp	EFI relay k_efi → LOGIC EPSEN 7.5 A fuse	LOGIC fuse box · fuse BUS2-7 (EPSEN 7.5 A)	42281-1
85	18 White	w_eps_trig	EPS enable relay (-)	Link G4X plug B · pin 12	280919-2
86	18 Red	w_k_eps_en_86_cp	EFI relay k_efi → LOGIC SW12 5 A fuse	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 9	280919-2
87	18 Red	w_k_eps_en_87_cp	LOGIC EPSEN 7.5 A fuse → EPS enable relay k_eps_en	LOGIC fuse box · fuse BUS2-12 (MRS 5 A) input	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower

Fuel sender inline plug, harness side, trunk (IX-FUEL)

IX-FUEL-P · DT04-2P + W2P

FACE SOURCED

IX-FUEL inline to fuel sender lead (trunk end)



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_fl_sig	Fuel level signal	Splice to: Link G4X plug B · pin 24; 470R fuel level pull-up to +5V · pin 1	0460-202-1631
2	20 Blue	w45	Fuel level ground	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 2	0460-202-1631


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

Rear wheel-speed inline plug, VRC side, dash above the ECU (IX-WS-R)

IX-WS-R-S · DT06-6S + W6S

FACE SOURCED

IX-WS-R inline to rear VRC (dash above ECU)

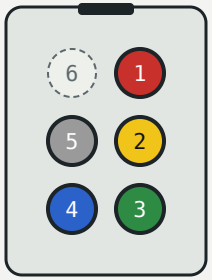

latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_rspur_5v	VRC-R +5V	+5 V bussed plug at the ECU, fed by ECU plug A pin 32 (BUS-5V) · pin 11	0462-201-1631
2	20 Yellow	cab_rspur_gnd	VRC-R GND	Sensor-ground bussed plug B at the ECU, to ECU plug B pin 22 (BUS-GNDOUT-B) · pin 3	0462-201-1631
3	20 Green	cab_rspur_l	Rear left wheel spd	Link G4X plug B · pin 20	0462-201-1631
4	20 Blue	cab_rspur_r	Rear right wheel spd	Link G4X plug B · pin 19	0462-201-1631
5	Shield	cab_rspur_sh	WS-R screen drain	Splice to: DRB102 bulkhead, cabin side · pin 73; DRB102 bulkhead, cabin side · pin 50; Link G4X plug B · pin 17	0462-201-1631
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-cabin

POWER fuse box relay R5 (condenser fan) K-FAN2 · 1-1393304-0

FACE SOURCED

B1-R5 Condenser fan relay (seated in the POWER box R5)

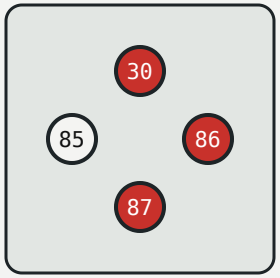

bottom (terminal side) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w_fan2_pwr	Cond fan +12 V	Uprated condenser fan (+) · pin 1	280756-4
85	18 White	w_fan285	Cond fan relay (-)	Link G4X plug B · pin 13	42281-1
86	18 Red	w_k_fan2_86_cp	EFI relay k_efi → LOGIC SW12 5 A fuse	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 7	42281-1
87	10 Red	w_fb_k_fan2_87_ac	AMI FAN2 30 A fuse	POWER fuse box · fuse AMI IN-5 (FAN2 30 A)	280756-4

Pin numbers: ISO 7588 relay terminal numbers · harness AB-cabin, CabinPower, EngineRoom-C

Optocoupler board, 8 channel (Dan's, generic EL814) OPTO-8 · TBD

FACE NOT SOURCED

Optocoupler board, 8 channel (Dan's, generic EL814) - inline at the CSB3

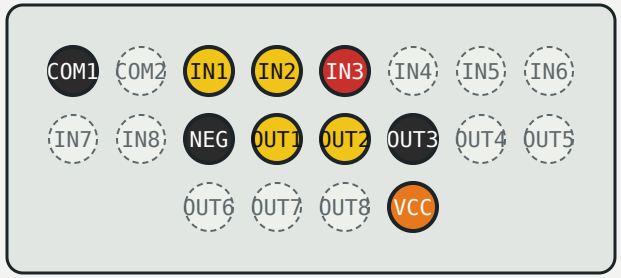

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
COM1	20 Black	w_opto_inc	Opto COM ground	Splice to: POWER box NEG bar M8 stud (glove box); ECUMaster CSB3 · pin 2; OEM cruise stalk switch C14 pin 17, BR wire	screw terminal (on the board)
COM2	*spare*				
IN1	16 Yellow	w_sw6	Brake on +12 V	OEM stop lamp switch S9 pin 1 (pedal), G-W wire	screw terminal (on the board)
IN2	16 Yellow	w_sw7_c	Reverse to opto in 2	Splice to: DRB102 bulkhead, cabin side · pin 78; OEM IG2 pin 13 (under the ECU, cowl side)	screw terminal (on the board)
IN3	20 Red	w_hl_sense_in	Lights on +12 V	OEM dimmer rheostat R10 pin 1 (left of the steering wheel), green TAIL	screw terminal (on the board)
IN4	*spare*				
IN5	*spare*				
IN6	*spare*				
IN7	*spare*				
IN8	*spare*				
NEG	20 Black	w_opto_outc	Opto out ground	ECUMaster CSB3 · pin 4	screw terminal (on the board)
OUT1	20 Yellow	w_opto_out1	Brake to CSB3 S7	ECUMaster CSB3 · pin 21	screw terminal (on the board)
OUT2	20 Yellow	w_opto_out2	Reverse to CSB3 S8	ECUMaster CSB3 · pin 22	screw terminal (on the board)

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
OUT3	20 Black	w_hl_sense_out	Headlight sense to cluster	Centre cluster headlight-sense input (J8 pin 15, GPIO28, active-low)	screw terminal (on the board)
OUT4	*spare*				
OUT5	*spare*				
OUT6	*spare*				
OUT7	*spare*				
OUT8	*spare*				
VCC	20 Orange	w_opto_vcc	Opto +5 V	ECUMaster CSB3 · pin 3	screw terminal (on the board)

Pin numbers: terminal names printed on the board · harness AB-cabin, CSB3


AB-engine

DRB102 bulkhead, engine side

DRB102-ENGINE · DRB16-102SAE-L018

FACE SOURCED

BULKHEAD

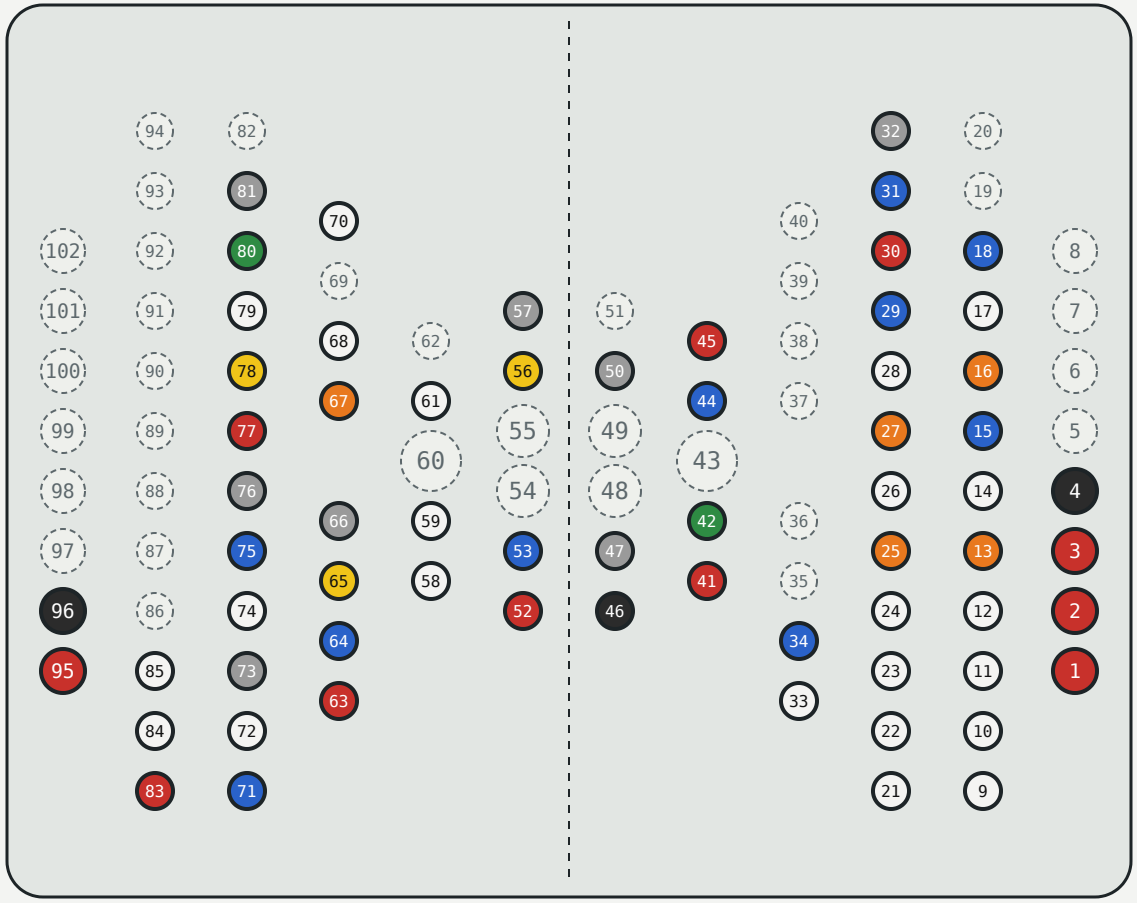

TE drawing view, numbers moulded on the insert

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_cop_pwr_e_ae	EFI relay k_efi → LOGIC COP 10 A fuse	Splice to: Coil 1 · pin 1; Coil 2 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1	0462-210-1231
2	14 Red	w_inj_pwr_e_ae	EFI relay k_efi → LOGIC INJ 7.5 A fuse	Splice to: Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	0462-210-1231
3	12 Red	w_strl_e	Starter solenoid S	Starter solenoid S (50) terminal, 1-way plug · pin 1	0462-210-1231

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
4	14 Black	w_cop_gnd_e_ae	Coil ground to the POWER box NEG bar	Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4	0462-210-1231
5	*spare*				
6	*spare*				
7	*spare*				
8	*spare*				
9	20 White	w120_e	Coil 1 trigger (IGT)	Coil 1 · pin 3	0462-201-1631
10	20 White	w121_e	Coil 2 trigger (IGT)	Coil 2 · pin 3	0462-201-1631
11	20 White	w122_e	Coil 3 trigger (IGT)	Coil 3 · pin 3	0462-201-1631
12	20 White	w123_e	Coil 4 trigger (IGT)	Coil 4 · pin 3	0462-201-1631
13	20 Orange	w_5v_brail_e_c46	+5 V fuel pressure	Fuel Pressure Sensor · pin 2	0462-201-1631
14	20 White	w32_e	Fuel pressure signal	Fuel Pressure Sensor · pin 3	0462-201-1631
15	20 Blue	w_gnd_b_e_c21	Gnd fuel press + VSS	Splice to: Fuel Pressure Sensor · pin 1; Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 2	0462-201-1631
16	20 Orange	w206	+5 V MAP sensor	MAP Sensor · pin 2	0462-201-1631
17	20 White	w26_e	MAP sensor signal	MAP Sensor · pin 3	0462-201-1631
18	20 Blue	w_gnd_a_e_c44	Gnd flex + MAP	Splice to: Flex Fuel Sensor · pin B; MAP Sensor · pin 1	0462-201-1631
19	*spare*				
20	*spare*				
21	20 White	w108_e	Injector 1 drive (-)	Injector 1 · pin 2	0462-201-1631
22	20 White	w109_e	Injector 2 drive (-)	Injector 2 · pin 2	0462-201-1631
23	20 White	w110_e	Injector 3 drive (-)	Injector 3 · pin 2	0462-201-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
24	20 White	w111_e	Injector 4 drive (-)	Injector 4 · pin 2	0462-201-1631
25	20 Orange	w_5v_brail_e_c47	+5 V coolant press	Coolant Pressure Sensor · pin B	0462-201-1631
26	20 White	w35_e	Coolant press signal	Coolant Pressure Sensor · pin C	0462-201-1631
27	20 Orange	w_5v_brail_e_c45	+5 V oil pressure	Oil Pressure Sensor · pin 2	0462-201-1631
28	20 White	w29_e	Oil pressure signal	Oil Pressure Sensor · pin 3	0462-201-1631
29	20 Blue	w_gnd_b_e_c19	Gnd oil/clnt/temps	Splice to: Coolant Pressure Sensor · pin A; Oil Pressure Sensor · pin 1; Charge-Pipe IAT Sensor · pin 2; Oil Temp Sensor · pin 2	0462-201-1631
30	18 Red	w_rail_sp_sw12_e	EFI relay k_efi → LOGIC SW12 5 A fuse	Splice to: Boost Control Solenoid · pin 1; Flex Fuel Sensor · pin A	0462-201-1631
31	20 Blue	w48_e	Flex fuel signal	Flex Fuel Sensor · pin C	0462-201-1631
32	Shield	cab_flex_sh	Flex fuel shield	Shield, not connected at the device end	0462-201-1631
33	20 White	w202_e	Intake temp signal	IAT Sensor (Manifold) · pin 1	0462-201-1631
34	20 Blue	w_rail_sp_gndout_e	Gnd IAT/TPS/coolant	Splice to: ECT Sensor · pin 2; Bosch 74.5mm ETB · pin 2; IAT Sensor (Manifold) · pin 2	0462-201-1631
35	*spare*				
36	*spare*				
37	*spare*				
38	*spare*				
39	*spare*				
40	*spare*				
41	20 Red	w126	+5 V throttle sensor	Bosch 74.5mm ETB · pin 3	0462-201-1631
42	20 Green	w128_e	Throttle pos 1 main	Bosch 74.5mm ETB · pin 6	0462-201-1631
43	*spare*				
44	20 Blue	w129_e	Throttle pos 2 sub	Bosch 74.5mm ETB · pin 5	0462-201-1631
45	18 Red	w124_e_ae	ETB motor +	Bosch 74.5mm ETB · pin 4	0462-201-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
46	18 Black	w215_e_ae	ETB motor -	Bosch 74.5mm ETB · pin 1	0462-201-1631
47	Shield	cab_etbs_sh	Throttle shield	Shield, not connected at the device end	0462-201-1631
48	*spare*				
49	*spare*				
50	Shield	cab_etbm_ae_sh	ETB motor shield	Shield, not connected at the device end	0462-201-1631
51	*spare*				
52	20 Red	w218	+5 V turbo speed	Turbo Speed Sensor · pin A	0462-201-1631
53	20 Blue	w16_e	Turbo speed signal	Turbo Speed Sensor · pin B	0462-201-1631
54	*spare*				
55	*spare*				
56	20 Yellow	w17	Gnd turbo speed	Turbo Speed Sensor · pin C	0462-201-1631
57	Shield	cab_turbo_sh	Turbo speed shield	Shield, not connected at the device end	0462-201-1631
58	20 White	w103_e	Boost solenoid (-)	Boost Control Solenoid · pin 2	0462-201-1631
59	20 White	w204_e	Charge temp signal	Charge-Pipe IAT Sensor · pin 1	0462-201-1631
60	*spare*				
61	20 White	w203_e	Oil temp signal	Oil Temp Sensor · pin 1	0462-201-1631
62	*spare*				
63	20 Red	w_rail_sp_8v_e	+8 V to cam sensor	Cam Hall Sensor (RacerX) · pin 1	0462-201-1631
64	20 Blue	cab_cam_c2	Cam sensor signal	Cam Hall Sensor (RacerX) · pin 2	0462-201-1631
65	20 Yellow	w24	Gnd cam sensor	Cam Hall Sensor (RacerX) · pin 3	0462-201-1631
66	Shield	cab_cam_sh	Cam sensor shield	Shield, not connected at the device end	0462-201-1631
67	20 Orange	w_vss_8v	+8 V to gearbox speed sensor	Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 1	0462-201-1631
68	20 White	w_vss_sig_e	Gearbox speed signal	Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 3	0462-201-1631
69	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
70	20 White	w201_e	Coolant temp signal	ECT Sensor · pin 1	0462-201-1631
71	20 Blue	cab_knock1_c1	Knock sensor signal	Knock Sensor 1 · pin 1	0462-201-1631
72	20 White	cab_knock1_c2	Knock sensor (-)	Knock Sensor 1 · pin 2	0462-201-1631
73	Shield	cab_knock1_sh	Knock sensor shield	Shield, not connected at the device end	0462-201-1631
74	20 White	cab_crank_c1	Crank sensor signal	Crank VR Sensor (36-2) · pin 1	0462-201-1631
75	20 Blue	w2	Gnd crank sensor	Crank VR Sensor (36-2) · pin 2	0462-201-1631
76	Shield	cab_crank_sh	Crank sensor shield	Shield, not connected at the device end	0462-201-1631
77	16 Red	w_rev_feed_e	Back-up sw +12 V in	Back-up SW B1 · pin 2	0462-201-1631
78	16 Yellow	w_sw7_e	Reverse sw +12 V out	Back-up SW B1 · pin 1	0462-201-1631
79	20 White	wc_h_lam_be	CAN H to CAN-Lambda	Splice to: 120 ohm CAN end resistor, Lambda end · pin 1; Link CAN-Lambda · pin 4	0462-201-1631
80	20 Green	wc_l_lam_be	CAN L to CAN-Lambda	Splice to: 120 ohm CAN end resistor, Lambda end · pin 2; Link CAN-Lambda · pin 3	0462-201-1631
81	Shield	cab_lamcan_be_sh	CAN-Lambda shield	Shield, not connected at the device end	0462-201-1631
82	*spare*				
83	20 Red	w_hv_mrs_en_e	EFI relay k_efi → LOGIC MRS 5 A fuse	MR-S EHPS pump plug C · pin 1	0462-201-1631
84	20 White	w_mrs_e	EHPS pump speed	MR-S EHPS pump plug B · pin 2	0462-201-1631
85	18 White	w_eps_rly_e	EHPS relay coil (-)	MR-S EHPS pump plug B · pin 5	0462-201-1631
86	*spare*				
87	*spare*				
88	*spare*				
89	*spare*				
90	*spare*				
91	*spare*				
92	*spare*				
93	*spare*				

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
94	*spare*				
95	12 Red	`w_lam12_be14`	EFI relay k_efi → LOGIC LAM 7.5 A fuse	Splice to: Link CAN-Lambda · pin 1	`0462-210-1231`
96	12 Black	`w_lamg_be14`	CAN-Lambda ground	Splice to: Link CAN-Lambda · pin 2	`0462-210-1231`
97	*spare*				
98	*spare*				
99	*spare*				
100	*spare*				
101	*spare*				
102	*spare*				

Pin numbers: TE drawing DRB12-102PXE-L018 rev C3 · harness AB-engine

Crank VR Sensor (36-2) CRANK · 90980-10947

FACE SOURCED

Crank VR Sensor (36-2)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	cab_crank_c1	Crank sensor signal	DRB102 bulkhead, engine side · pin 74	in kit CONN-75800
2	20 Blue	w2	Gnd crank sensor	DRB102 bulkhead, engine side · pin 75	in kit CONN-75800

Pin numbers: TBD · harness AB-engine

Cam Hall Sensor (RacerX) CAM · DT06-3S-CE05 + W3S

FACE SOURCED

Cam Hall Sensor (RacerX)



latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w_rail_sp_8v_e	+8 V to cam sensor	DRB102 bulkhead, engine side · pin 63	0462-201-16141
2	20 Blue	cab_cam_c2	Cam sensor signal	DRB102 bulkhead, engine side · pin 64	0462-201-16141
3	20 Yellow	w24	Gnd cam sensor	DRB102 bulkhead, engine side · pin 65	0462-201-16141


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Turbo Speed Sensor

TURBO-SPD · DT06-3S-CE05 + W3S

FACE SOURCED

Turbo Speed Sensor

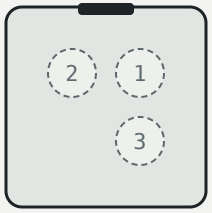

latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	w218	+5 V turbo speed	DRB102 bulkhead, engine side · pin 52	0462-201-16141
B	20 Blue	w16_e	Turbo speed signal	DRB102 bulkhead, engine side · pin 53	0462-201-16141
C	20 Yellow	w17	Gnd turbo speed	DRB102 bulkhead, engine side · pin 56	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

Flex Fuel Sensor FLEX · 13519047

FACE NOT SOURCED

Flex Fuel Sensor

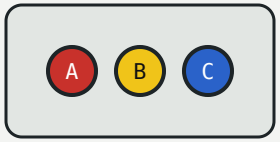

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	w217	EFI relay k_efi → LOGIC SW12 5 A fuse	Splice to: DRB102 bulkhead, engine side · pin 30; Boost Control Solenoid · pin 1	15326426
B	20 Yellow	w47	Gnd flex fuel	Splice to: DRB102 bulkhead, engine side · pin 18; MAP Sensor · pin 1	15326426
C	20 Blue	w48_e	Flex fuel signal	DRB102 bulkhead, engine side · pin 31	15326426


Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Flex fuel pin table) · harness AB-engine

Bosch 74.5mm ETB

ETB · D 261 205 358-01

FACE SOURCED

Bosch 74.5mm ETB

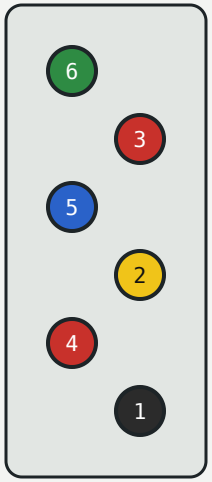

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Black	w215_e_ae	ETB motor -	DRB102 bulkhead, engine side · pin 46	5-965906-1
2	20 Yellow	w127	Gnd throttle sensor	Splice to: DRB102 bulkhead, engine side · pin 34; ECT Sensor · pin 2; IAT Sensor (Manifold) · pin 2	in kit D 261 205 358-01
3	20 Red	w126	+5 V throttle sensor	DRB102 bulkhead, engine side · pin 41	in kit D 261 205 358-01
4	18 Red	w124_e_ae	ETB motor +	DRB102 bulkhead, engine side · pin 45	5-965906-1
5	20 Blue	w129_e	Throttle pos 2 sub	DRB102 bulkhead, engine side · pin 44	in kit D 261 205 358-01
6	20 Green	w128_e	Throttle pos 1 main	DRB102 bulkhead, engine side · pin 42	in kit D 261 205 358-01

Pin numbers: Bosch Motorsport ETB data sheet 51048715 (pins 1A-6F) · harness AB-engine

MAP Sensor MAP · 354404

FACE NOT SOURCED

MAP Sensor

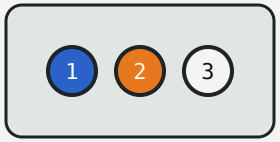

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	w27	Gnd MAP sensor	Splice to: DRB102 bulkhead, engine side · pin 18; Flex Fuel Sensor · pin B	in kit 354404
2	20 Orange	w206	+5 V MAP sensor	DRB102 bulkhead, engine side · pin 16	in kit 354404
3	20 White	w26_e	MAP sensor signal	DRB102 bulkhead, engine side · pin 17	in kit 354404

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (MAP pin table) · harness AB-engine

Injector 1 INJ-1 · CONN-76270

FACE NOT SOURCED

Injector 1

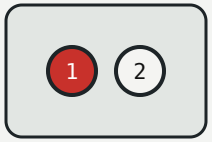

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w211	EFI relay k_efi → LOGIC INJ 7.5 A fuse	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 2 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	w108_e	Injector 1 drive (-)	DRB102 bulkhead, engine side · pin 21	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 2 INJ-2 · CONN-76270

FACE NOT SOURCED

Injector 2

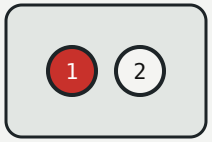

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w212	EFI relay k_efi → LOGIC INJ 7.5 A fuse	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 3 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	w109_e	Injector 2 drive (-)	DRB102 bulkhead, engine side · pin 22	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 3 INJ-3 · CONN-76270

FACE NOT SOURCED

Injector 3

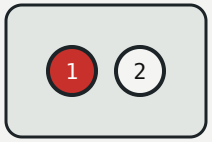

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w213	EFI relay k_efi → LOGIC INJ 7.5 A fuse	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 4 · pin 1	in kit CONN-76270
2	20 White	w110_e	Injector 3 drive (-)	DRB102 bulkhead, engine side · pin 23	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Injector 4 INJ-4 · CONN-76270

FACE NOT SOURCED

Injector 4

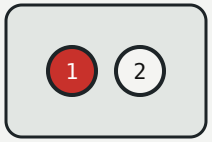

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	18 Red	w214	EFI relay k_efi → LOGIC INJ 7.5 A fuse	Splice to: DRB102 bulkhead, engine side · pin 2; Injector 1 · pin 1; Injector 2 · pin 1; Injector 3 · pin 1	in kit CONN-76270
2	20 White	w111_e	Injector 4 drive (-)	DRB102 bulkhead, engine side · pin 24	in kit CONN-76270

Pin numbers: TBD · harness AB-engine

Coil 1 COIL-1 · 90980-11885

FACE SOURCED

COP 1 (1ZZ)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w112	EFI relay k_efi → LOGIC COP 10 A fuse	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 2 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1	TBD
2	*spare*				
3	20 White	w120_e	Coil 1 trigger (IGT)	DRB102 bulkhead, engine side · pin 9	TBD
4	16 Black	w_cop1g	Coil 1 ground	Splice to: Coil 2 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Coil 2 COIL-2 · 90980-11885

FACE SOURCED

COP 2 (1ZZ)



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w113	EFI relay k_efi → LOGIC COP 10 A fuse	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 3 · pin 1; Coil 4 · pin 1	TBD
2	*spare*				
3	20 White	w121_e	Coil 2 trigger (IGT)	DRB102 bulkhead, engine side · pin 10	TBD
4	16 Black	w_cop2g	Coil 2 ground	Splice to: Coil 1 · pin 4; Coil 3 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Coil 3 COIL-3 · 90980-11885

FACE SOURCED

COP 3 (1ZZ)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w114	EFI relay k_efi → LOGIC COP 10 A fuse	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 2 · pin 1; Coil 4 · pin 1	TBD
2	*spare*				
3	20 White	w122_e	Coil 3 trigger (IGT)	DRB102 bulkhead, engine side · pin 11	TBD
4	16 Black	w_cop3g	Coil 3 ground	Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 4 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Coil 4 COIL-4 · 90980-11885

FACE SOURCED

COP 4 (1ZZ)



mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w115	EFI relay k_efi → LOGIC COP 10 A fuse	Splice to: DRB102 bulkhead, engine side · pin 1; Coil 1 · pin 1; Coil 2 · pin 1; Coil 3 · pin 1	TBD
2	*spare*				
3	20 White	w123_e	Coil 4 trigger (IGT)	DRB102 bulkhead, engine side · pin 12	TBD
4	16 Black	w_cop4g	Coil 4 ground	Splice to: Coil 1 · pin 4; Coil 2 · pin 4; Coil 3 · pin 4; DRB102 bulkhead, engine side · pin 4	TBD

Pin numbers: TBD · harness AB-engine

Boost Control Solenoid BOOST-SOL · 12052641

FACE NOT SOURCED

Boost Control Solenoid

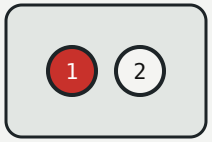

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w219	EFI relay k_efi → LOGIC SW12 5 A fuse	Splice to: DRB102 bulkhead, engine side · pin 30; Flex Fuel Sensor · pin A	12084200
2	20 White	w103_e	Boost solenoid (-)	DRB102 bulkhead, engine side · pin 58	12084200

Pin numbers: TBD · harness AB-engine

ECT Sensor

ECT · 90980-11062

FACE SOURCED

ECT Sensor



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w201_e	Coolant temp signal	DRB102 bulkhead, engine side · pin 70	8100-0461
2	20 Blue	w4	Gnd coolant temp	Splice to: DRB102 bulkhead, engine side · pin 34; Bosch 74.5mm ETB · pin 2; IAT Sensor (Manifold) · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

IAT Sensor (Manifold) IAT · 90980-11062

FACE SOURCED

IAT Sensor (Manifold)



latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w202_e	Intake temp signal	DRB102 bulkhead, engine side · pin 33	8100-0461
2	20 Blue	w6	Gnd intake temp	Splice to: DRB102 bulkhead, engine side · pin 34; ECT Sensor · pin 2; Bosch 74.5mm ETB · pin 2	8100-0461

Pin numbers: TBD · harness AB-engine

Oil Pressure Sensor OIL-P · 354404

FACE NOT SOURCED

Oil Pressure Sensor

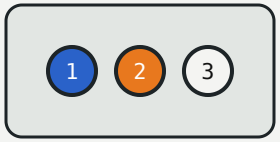

layout not sourced: numbered list only, match the moulded numbers


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	w30	Gnd oil pressure	Splice to: DRB102 bulkhead, engine side · pin 29; Coolant Pressure Sensor · pin A; Charge-Pipe IAT Sensor · pin 2; Oil Temp Sensor · pin 2	in kit 354404
2	20 Orange	w_5v_brail_e_c45	+5 V oil pressure	DRB102 bulkhead, engine side · pin 27	in kit 354404
3	20 White	w29_e	Oil pressure signal	DRB102 bulkhead, engine side · pin 28	in kit 354404

Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Oil pressure pin table) · harness AB-engine

Fuel Pressure Sensor FUEL-P · 354404

FACE NOT SOURCED

Fuel Pressure Sensor

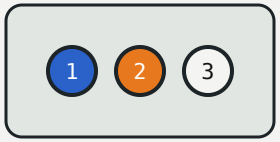

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	w33	Gnd fuel pressure	Splice to: DRB102 bulkhead, engine side · pin 15; Gearbox VSS (Toyota 83181-20040, 3-wire) · pin 2	in kit 354404
2	20 Orange	w_5v_brail_e_c46	+5 V fuel pressure	DRB102 bulkhead, engine side · pin 13	in kit 354404
3	20 White	w32_e	Fuel pressure signal	DRB102 bulkhead, engine side · pin 14	in kit 354404


Pin numbers: device reference docs/devices/SENSOR-AND-ACTUATOR-REFERENCE.md (Fuel pressure pin table) · harness AB-engine

Coolant Pressure Sensor

`CLNT-P · pigtail supplied with the sensor (owned)`

FACE NOT SOURCED

Coolant Pressure Sensor

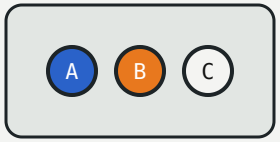

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
A	20 Blue	w36	Gnd coolant press	Splice to: DRB102 bulkhead, engine side · pin 29; Oil Pressure Sensor · pin 1; Charge-Pipe IAT Sensor · pin 2; Oil Temp Sensor · pin 2	solder splice onto the pigtail black lead
B	20 Orange	w_5v_brail_e_c47	+5 V coolant press	DRB102 bulkhead, engine side · pin 25	solder splice onto the pigtail red lead
C	20 White	w35_e	Coolant press signal	DRB102 bulkhead, engine side · pin 26	solder splice onto the pigtail green lead

Pin numbers: Dan's sensor sheet + seller connection guide (Dan 2026-10-30): A / plug 1 GND black, B / plug 2 supply red, C / plug 3 output green · harness AB-engine

Starter solenoid S (50) terminal, 1-way plug

STARTER-TRIGGER · 90980-11400

FACE SOURCED

Starter solenoid S (50) terminal, 1-way plug



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	12 Red	w_strl_e	Starter solenoid S	DRB102 bulkhead, engine side · pin 3	in kit CONN-76058 (Sumitomo TS187 4.8 mm sealed female, 12-10 AWG)

Pin numbers: single cavity (Toyota RM1022E housing list: 90980-11400 is 1-way, 4.8 mm tab, sealed) · harness AB-engine

Back-up SW B1 REV-SW · 90980-11250

FACE SOURCED

Back-up SW B1



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Yellow	w_sw7_e	Reverse sw +12 V out	DRB102 bulkhead, engine side · pin 78	8100-0461
2	16 Red	w_rev_feed_e	Back-up sw +12 V in	DRB102 bulkhead, engine side · pin 77	8100-0461

Pin numbers: TBD · harness AB-engine

Oil Temp Sensor OIL-T · 90980-11062

FACE SOURCED

Oil Temp Sensor



latch top

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w203_e	Oil temp signal	DRB102 bulkhead, engine side · pin 61	8100-0461
2	20 Blue	w8	Gnd oil temp	Splice to: Charge-Pipe IAT Sensor · pin 2; DRB102 bulkhead, engine side · pin 29; Coolant Pressure Sensor · pin A; Oil Pressure Sensor · pin 1	8100-0461

Pin numbers: TBD · harness AB-engine

Charge-Pipe IAT Sensor

CHARGE-IAT · 90980-11062

FACE SOURCED

Charge-Pipe IAT Sensor



latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	☐ 20 White	w204_e	Charge temp signal	DRB102 bulkhead, engine side · pin 59	8100-0461
2	■ 20 Blue	w10	Gnd charge temp	Splice to: Oil Temp Sensor · pin 2; DRB102 bulkhead, engine side · pin 29; Coolant Pressure Sensor · pin A; Oil Pressure Sensor · pin 1	8100-0461

Pin numbers: TBD · harness AB-engine

Knock Sensor 1 KNOCK-1 · 1 928 403 874

FACE NOT SOURCED

Knock Sensor 1

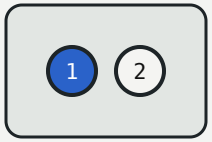

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	cab_knock1_c1	Knock sensor signal	DRB102 bulkhead, engine side · pin 71	BDK 2.8
2	20 White	cab_knock1_c2	Knock sensor (-)	DRB102 bulkhead, engine side · pin 72	BDK 2.8

Pin numbers: TBD · harness AB-engine

Gearbox VSS (Toyota 83181-20040, 3-wire) VSS · 90980-11143

FACE SOURCED

Gearbox VSS (Toyota 83181-20040, 3-wire) - actual road speed, plug 90980-11143



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Orange	w_vss_8v	+8 V to gearbox speed sensor	DRB102 bulkhead, engine side · pin 67	8100-0461
2	20 Blue	w_vss_gnd	Gnd gearbox speed	Splice to: DRB102 bulkhead, engine side · pin 15; Fuel Pressure Sensor · pin 1	8100-0461
3	20 White	w_vss_sig_e	Gearbox speed signal	DRB102 bulkhead, engine side · pin 68	8100-0461


Pin numbers: Toyota 3-wire speed sensor pinout (wilbo666 wiki; Daniel 2026-09-28) · harness AB-engine

Link CAN-Lambda

CAN-LAMBDA · DTM06-4S + WM-4S

FACE SOURCED

Link CAN-Lambda

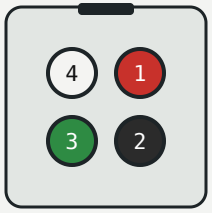

latch top

wire side (where the contacts go in) view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	16 Red	w_lam12_be	EFI relay k_efi → LOGIC LAM 7.5 A fuse	Splice to: DRB102 bulkhead, engine side · pin 95	0462-005-2031
2	16 Black	w_lamg_be	CAN-Lambda ground	Splice to: DRB102 bulkhead, engine side · pin 96	0462-005-2031
3	20 Green	wc_l_lam_pin	CAN L to CAN-Lambda	Splice to: DRB102 bulkhead, engine side · pin 80; 120 ohm CAN end resistor, Lambda end · pin 2	0462-201-2031
4	20 White	wc_h_lam_pin	CAN H to CAN-Lambda	Splice to: DRB102 bulkhead, engine side · pin 79; 120 ohm CAN end resistor, Lambda end · pin 1	0462-201-2031

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AB-engine

MR-S EHPS pump plug C `MRS-C · 90980-10942`

FACE SOURCED

MR-S EHPS pump plug C

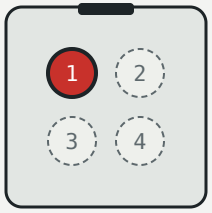

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`w_hv_mrs_en_e`	EFI relay k_efi → LOGIC MRS 5 A fuse	DRB102 bulkhead, engine side · pin 83	`82998-12440`
2	*spare*				
3	*spare*				
4	*spare*				

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine, EngineRoom-C

MR-S EHPS pump plug B MRS-B · 90980-10897

FACE SOURCED

MR-S EHPS pump plug B

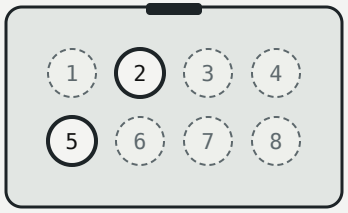

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	*spare*				
2	☐ 20 White	w_mrs_e	EHPS pump speed	DRB102 bulkhead, engine side · pin 84	82998-12440
3	*spare*				
4	*spare*				
5	☐ 18 White	w_eps_rly_e	EHPS relay coil (-)	DRB102 bulkhead, engine side · pin 85	82998-12440
6	*spare*				
7	*spare*				
8	*spare*				


Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness AB-engine, EngineRoom-C

CabinPower

LOGIC fuse box relay M4 (ETB power) K-ETB · 4-1904124-2

FACE SOURCED

B2-M4 ETB Power Relay (seated in the LOGIC box M4) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) switched 12 V

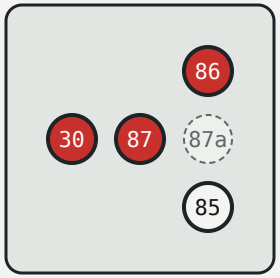

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	16 Red	w_fb_k_etb_30_cp	AMI BUS1 50 A fuse → LOGIC ETB 7.5 A fuse	LOGIC fuse box · fuse BUS1-10 (ETB 7.5 A)	42281-1
85	20 White	w81	ETB relay coil (-)	Link G4X plug A · pin 20	280919-2
86	20 Red	w_k_etb_86_cp	EFI relay k_efi → LOGIC SW12 5 A fuse	Switched 12 V bussed plug in the glove box by the LOGIC fuse box, fed by LOGIC fuse BUS2-2 (BUS-SW12) · pin 5	280919-2
87	18 Red	w82_ac	ETB motor +12 V	Link G4X plug B · pin 5	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

POWER fuse box relay R2 (EFI main) K-EFI · 1-1414147-0

FACE SOURCED

B1-R2 EFI Main Relay (seated in the POWER box R2) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) permanent 12 V (LOGIC EFI86 5 A)

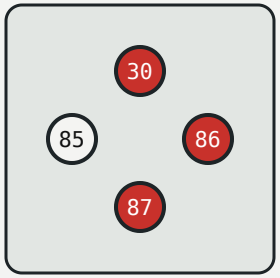

bottom (terminal side) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	10 Red	w77_cp	EFI relay k_efi (LOGIC Bus 2 feed)	LOGIC fuse box · Bus 2 feed	280756-4
85	18 White	w76	EFI relay coil (-)	Link G4X plug A · pin 28	42281-1
86	18 Red	w_k_efi_86_cp	AMI BUS1 50 A fuse → LOGIC EFI86 5 A fuse	LOGIC fuse box · fuse BUS1-1 (EFI86 5 A)	42281-1
87	12 Red	w_fb_k_efi_87_cp	AMI EFI 30 A fuse	POWER fuse box · fuse AMI IN-2 (EFI 30 A)	280756-4


Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

POWER fuse box

POWER · ST185-FB-POWER rev 7

FACE NOT SOURCED

B1 POWER box with the bus bar in it - custom fuse + relay box, glove box outboard (cad/fusebox rev 7, DECISIONS R75, R91): the tinned copper + bar IS the AMI bar (7 AMI IN relay feeds, 7 AMI OUT; no 1/0 link cable), NEG bar in the rear bus zone, Mini ISO relays R1-R6, ACPS mini fuse

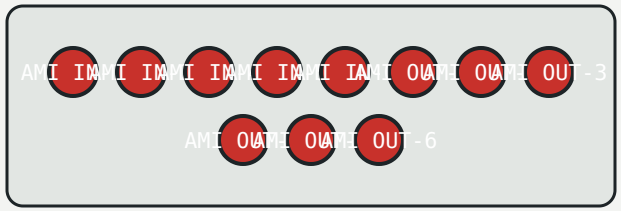

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
AMI IN-1	8 Red	w_rb4_feed	AMI HTR 40 A fuse	OEM R/B No.4 40 A HEATER fuse pin 1 (RH kick)	2R5
AMI IN-2	12 Red	w_fb_k_efi_87_cp	AMI EFI 30 A fuse	POWER fuse box relay R2 (EFI main) · terminal 87	36161
AMI IN-4	10 Red	w_fb_k_fan_87_cp	AMI FAN 30 A fuse	POWER fuse box relay R4 (radiator fan) · terminal 87	36161
AMI IN-5	10 Red	w_fb_k_fan2_87_ac	AMI FAN2 30 A fuse	POWER fuse box relay R5 (condenser fan) · terminal 87	36161
AMI IN-6	10 Red	w_rb2_feed	AMI PWR 30 A fuse	OEM R/B No.2 30 A POWER fuse pin 1 (LH kick)	2R5
AMI OUT-1	8 Red	w_hc_fb	AMI BUS1 50 A fuse	LOGIC fuse box · Bus 1 feed	2R5
AMI OUT-2	10 Red	w_pmu_rtr	AMI RTR 30 A fuse	OEM IE1 pin 3 (left kick, cowl side)	2R5
AMI OUT-3	8 Red	w_pdb_am1	AMI AM1 40 A fuse	OEM IE1 pin 10 (left kick, cowl side)	2R5
AMI OUT-4	10 Red	w_pdb_am2	AMI AM2 30 A fuse	OEM IE1 pin 17 (left kick, cowl side)	2R5
AMI OUT-5	6 Red	w_pdb_jb1	AMI JB1 60 A fuse	OEM J/B No.1 1I pin 1 (left kick)	3R5
AMI OUT-6	8 Red	w_fb_k_eps_30_ac	AMI EPS 50 A fuse	EPS pump relay (beside the POWER fuse box) · terminal 30	2R5


Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness CabinPower, EngineRoom-C

MR-S EHPS pump plug A

`MRS-A · 90980-12068`

FACE SOURCED

MR-S EHPS pump plug A

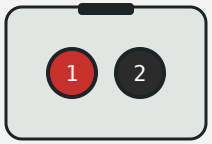

latch top

mating face view


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	8 Red	`w_eps_pwr_bc`	AMI EPS 50 A fuse → EHPS relay k_eps	EPS pump relay (beside the POWER fuse box) · terminal 87	`82998-12500`
2	8 Black	`w_eps_gnd`	EHPS pump ground	Engine block ground stud, lug 3 (Route 1 point 5)	`82998-12500`

Pin numbers: MR-S (ZZW30) EWD power steering page (Dan 2026-10-30): P6 1 MH, 2 PGND; P7 1 IDUP, 2 SPD, 3 TC, 5 MRLY, 6 EFI, 7 TS; P8 1 IGB, 2 SIL, 4 WL · harness CabinPower, EngineRoom-C

LOGIC fuse box relay M1 (headlight LH) K-HL · 5-1393292-8

FACE SOURCED

B2-M1 Headlight LH relay (seated in the LOGIC box M1)

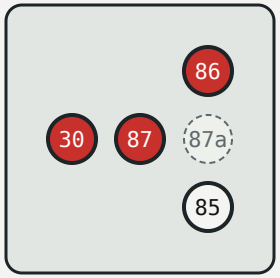

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	w_hl_30_cp	AMI BUS1 50 A fuse → LOGIC HL 15 A fuse	Splice to: LOGIC fuse box · fuse BUS1-2 (HL 15 A); LOGIC fuse box relay M1 (headlight LH) · terminal 86	42281-1
85	18 White	w_hl_85_cp	Head LH coil (-)	Splice to: LOGIC fuse box relay M2 (headlight RH) · terminal 85; OEM cowl plug IE1 pin 2 (LH kick), R-Y wire	280919-2
86	16 Red	w_hl_86_cp	AMI BUS1 50 A fuse → LOGIC HL 15 A fuse	Splice to: LOGIC fuse box · fuse BUS1-2 (HL 15 A); LOGIC fuse box relay M1 (headlight LH) · terminal 30	280919-2
87	14 Red	w_pmu_hl	LOGIC HL 15 A fuse → HEAD LH relay k_hl	LH headlamp H1 pin 3	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

LOGIC fuse box relay M3 (horn) K-HORN · 4-1904124-3

FACE SOURCED

B2-M3 Horn relay (seated in the LOGIC box M3)

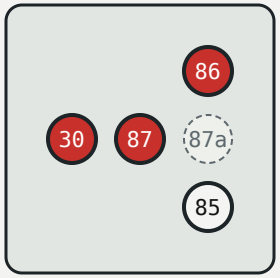

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	w_horn_30_cp	AMI BUS1 50 A fuse → LOGIC HZ 15 A fuse	Splice to: LOGIC fuse box · fuse BUS1-4 (HZ 15 A); OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 86	42281-1
85	18 White	w_horn_85_cp	Horn relay coil (-)	OEM cowl plug IE1 pin 19 (LH kick), G wire	280919-2
86	16 Red	w_horn_86_cp	AMI BUS1 50 A fuse → LOGIC HZ 15 A fuse	Splice to: LOGIC fuse box · fuse BUS1-4 (HZ 15 A); OEM IE1 pin 12 (left kick, cowl side); LOGIC fuse box relay M3 (horn) · terminal 30	280919-2
87	14 Red	w_pmu_horn_cp	LOGIC HZ 15 A fuse → horn relay k_horn	Splice to: Horn LH (EWD H3) · pin 1; Horn RH (EWD H4) · pin 1	42281-1
87a	*spare*				

Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower

LOGIC fuse box relay M2 (headlight RH) K-HR · 5-1393292-8

FACE SOURCED

B2-M2 Headlight RH relay (seated in the LOGIC box M2)

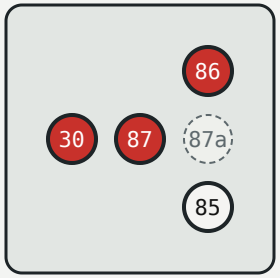

mating face view. Relay terminal numbers mapped to ISO 85 / 86 / 30 / 87 / 87a (1 = 86, 2 = 85, 3 = 30, 4 = 87a, 5 = 87).

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
30	14 Red	w_hr_30_cp	AMI BUS1 50 A fuse → LOGIC HR 15 A fuse	Splice to: LOGIC fuse box · fuse BUS1-3 (HR 15 A); LOGIC fuse box relay M2 (headlight RH) · terminal 86	42281-1
85	18 White	w_hr_85_cp	Head RH coil (-)	Splice to: LOGIC fuse box relay M1 (headlight LH) · terminal 85; OEM cowl plug IE1 pin 2 (LH kick), R-Y wire	280919-2
86	16 Red	w_hr_86_cp	AMI BUS1 50 A fuse → LOGIC HR 15 A fuse	Splice to: LOGIC fuse box · fuse BUS1-3 (HR 15 A); LOGIC fuse box relay M2 (headlight RH) · terminal 30	280919-2
87	14 Red	w_pmu_hr	LOGIC HR 15 A fuse → HEAD RH relay k_hr	RH headlamp H2 pin 3	42281-1
87a	*spare*				


Pin numbers: ISO 7588 relay terminal numbers · harness CabinPower, EngineRoom-C

EngineRoom-C

Alternator G2 ALT-PLUG · 90980-10341

FACE SOURCED

Alternator G2 - round 3-pin plug (Toyota 90980-10341; 1993 EWD p.74-75 G2 (B) pinout)

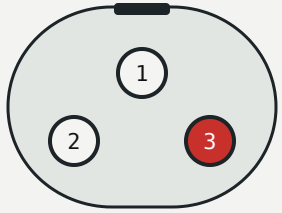

mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_alt_s_c	Alt S battery sense	LOGIC fuse box · fuse BUS1-9	TBD
2	20 White	w_alt_l_c	Alt L charge lamp	OEM IG2 pin 16 (under the ECU, cowl side)	TBD
3	16 Red	w_ig_ks_out	Alt IG excite	Kill switch · pin ALT2	TBD

Pin numbers: TBD · harness EngineRoom-C, HeavyDC

Uprated condenser fan (GND) FAN-COND-GND · DTHD06-1-8S

FACE SOURCED

Uprated condenser fan (GND)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	w_fan2_gnd	Cond fan ground	Ground stud EA, RH front fender (EWD ground point EA)	0462-203-08141


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Horn LH (EWD H3)

HORN-LH · DT06-2S-CE05 + W2S

FACE SOURCED

Horn LH (EWD H3) - custom DT 2-way

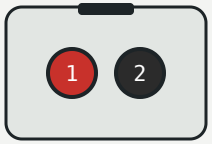

latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_horn_lh	LOGIC HZ 15 A fuse → horn relay k_horn	Splice to: LOGIC fuse box relay M3 (horn) · terminal 87; Horn RH (EWD H4) · pin 1	0462-209-1631
2	14 Black	w_horn_lh_g	Horn LH ground	Ground stud EA, RH front fender (EWD ground point EA)	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Horn RH (EWD H4) HORN-RH · DT06-2S-CE05 + W2S

FACE SOURCED

Horn RH (EWD H4) - custom DT 2-way

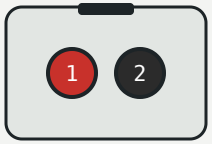

latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	14 Red	w_horn_rh	LOGIC HZ 15 A fuse → horn relay k_horn	Splice to: LOGIC fuse box relay M3 (horn) · terminal 87; Horn LH (EWD H3) · pin 1	0462-209-1631
2	14 Black	w_horn_rh_g	Horn RH ground	Ground stud EA, RH front fender (EWD ground point EA)	0462-209-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Uprated radiator fan (+) FAN-RAD · DTHD06-1-8S

FACE SOURCED

Uprated radiator fan (+)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	w_fan_pwr	AMI FAN 30 A fuse → rad fan relay k_fan	POWER fuse box relay R4 (radiator fan) · terminal 30	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

Uprated condenser fan (+) FAN-COND · DTHD06-1-8S

FACE SOURCED

Uprated condenser fan (+)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	w_fan2_pwr	Cond fan +12 V	POWER fuse box relay R5 (condenser fan) · terminal 30	0462-203-08141


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C

POWER fuse box

POWER-STUDS · ST185-FB-POWER rev 7 BUS ZONE

FACE NOT SOURCED

POWER box bus zone (rev 7, glove box)

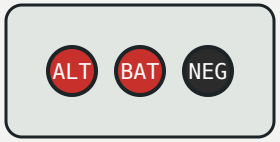

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
ALT	1/0 Red	w_h3_radlok_pos	Starter feed (H3)	RADLOK + firewall · pin 1	TBD
BAT	1/0 Red	w_ks_h1	battery +	Kill switch · pin MAIN2	TBD
NEG	1/0 Black	w_gnd_id	POWER box gnd to ID	Ground stud ID, left kick panel (EWD ground point ID)	TBD
NEG	1/0 Black	w_gnd_ig	POWER box gnd to IG	Ground bolt IG, right kick (EWD ground point IG)	TBD
NEG	1/0 Black	w_h6a_radlok_neg	Engine ground (H6a)	RADLOK · pin 1	TBD
NEG	1/0 Black	w_trunk_neg	Battery - main	Battery negative terminal post, trunk RH rear (Route 1 point 1)	TBD

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness EngineRoom-C, HeavyDC

Uprated radiator fan (GND) FAN-RAD-GND · DTHD06-1-8S

FACE SOURCED

Uprated radiator fan (GND)



mating face view

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Black	w_fan_gnd	Rad fan ground	Ground stud EA, RH front fender (EWD ground point EA)	0462-203-08141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness EngineRoom-C


HeavyDC

Trunk relay box

BATT-RELAY-BLOCK · ST185-FB-BATT rev 5

FACE NOT SOURCED

Battery relay block - fuel pump relay + its fuse, trunk, passenger side between the rear wall and the battery (cad/fusebox rev 5, DECISIONS R75, Z4)

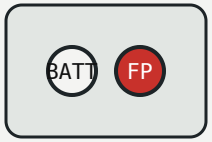

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
BATT	10 White	w_fp_feed	Battery relay box +	Kill switch · pin MAIN2	TBD
FP	10 Red	w_fp_30	FP 40 A fuse (battery relay block)	Trunk relay box relay K1 (fuel pump) · terminal 30	36161

Pin numbers: ST185 fuse-box design (cad/fusebox/rev7/wiring_plan.json, R204) · harness HeavyDC

Kill switch KILL-SW · 52-45780

FACE NOT SOURCED

Kill switch - Longacre 52-45780, 4 terminal (trunk, passenger rear corner, Route 1)



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
ALT1	16 Red	w_ig_ks_in	Alt IG to kill sw	OEM IG2 pin 15 (under the ECU, cowl side)	TBD
ALT2	16 Red	w_ig_ks_out	Alt IG excite	Alternator G2 · pin 3	TBD
MAIN1	1/0 Red	w_trunk_pos	battery +	Battery positive terminal post, trunk RH rear (Route 1 point 1)	TBD
MAIN2	10 White	w_fp_feed	Battery relay box +	Trunk relay box · battery + stud	TBD
MAIN2	1/0 Red	w_ks_h1	battery +	POWER fuse box · BAT stud	TBD

Pin numbers: TBD · harness HeavyDC

RADLOK + firewall

RADLOK-POS-CAB · RL00801-50RE

FACE NOT SOURCED

RADLOK + firewall



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	w_h3_radlok_pos	Starter feed (H3)	POWER fuse box · ALT stud	INTEGRAL
1	1/0 Red	w_rl_pos	Starter feed (H3)	RADLOK + engine · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

RADLOK RADLOK-NEG-CAB · RL00801-50BK

FACE NOT SOURCED

RADLOK - firewall



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	w_h6a_radlok_neg	Engine ground (H6a)	POWER fuse box · NEG stud	INTEGRAL
1	1/0 Black	w_rln	Engine ground (H6a)	RADLOK · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

RADLOK RADLOK-NEG-ENG · RL00801-50BK

FACE NOT SOURCED

RADLOK - engine



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Black	w_rln_blk	Engine ground (H6a)	Engine block ground stud, lug 1 (Route 1 point 5)	INTEGRAL
1	1/0 Black	w_rln	Engine ground (H6a)	RADLOK · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

RADLOK + engine

RADLOK-POS-ENG · RL00801-50RE

FACE NOT SOURCED

RADLOK + engine



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	1/0 Red	w_rlp_str	Starter feed (H3)	Starter B+ stud, lug 1 (Route 1 point 2)	INTEGRAL
1	1/0 Red	w_rl_pos	Starter feed (H3)	RADLOK + firewall · pin 1	INTEGRAL

Pin numbers: TBD · harness HeavyDC

Engine-bay jump post JUMP-POST · TBD

FACE NOT SOURCED

Engine-bay jump post



layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	2 Red	w_jump	Jump post feed	Starter B+ stud, lug 3 (Route 1 point 2)	TBD


Pin numbers: TBD · harness HeavyDC

RearFuel

Fuel Pump FUEL-PUMP · TBD

FACE NOT SOURCED

Fuel Pump

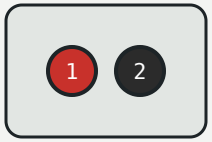

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	10 Red	w_fpump_r	Fuel pump +12 V	Trunk relay box relay K1 (fuel pump) · terminal 87	TBD
2	10 Black	w_fpg	Fuel pump ground	Ground stud, trunk LH side (EWD ID TBD, M6 assumed)	TBD

Pin numbers: TBD · harness RearFuel

Fuel sender inline plug, sender side, trunk (IX-FUEL)

IX-FUEL-S · DT06-2S + W2S

FACE SOURCED

IX-FUEL inline to fuel sender (trunk LH)



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_fl_sig_r	Fuel level signal	Fuel Level Sender · pin 1	0462-201-16141
2	20 Blue	w45_r	Fuel level ground	Fuel Level Sender · pin 2	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

Fuel Level Sender `FUEL-LEVEL · DT04-2P + W2P`

FACE SOURCED

Fuel Level Sender - DT 2-way (Dan rev 2, 2026-10-10 - no OEM connector)



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 White	w_fl_sig_r	Fuel level signal	Fuel sender inline plug, sender side, trunk (IX-FUEL) · pin 1	0460-202-1631
2	20 Blue	w45_r	Fuel level ground	Fuel sender inline plug, sender side, trunk (IX-FUEL) · pin 2	0460-202-1631


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness RearFuel

CSB3

ECUMaster CSB3 CSB3 · HD36-24-33SE

FACE SOURCED

ECUMaster CSB3 - Power/CAN/Switch I/O

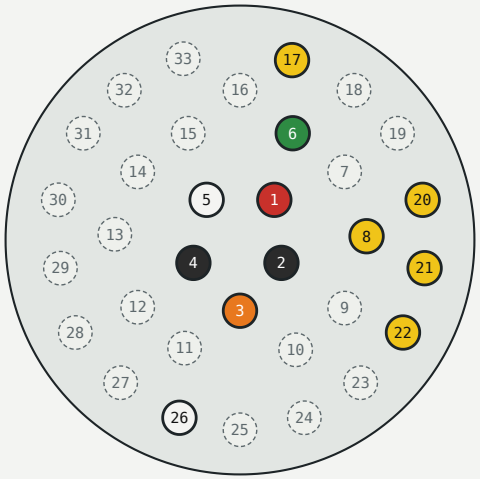

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w_csb12	EFI relay k_efi → LOGIC CSB 5 A fuse	LOGIC fuse box · fuse BUS2-5 (CSB 5 A)	0462-201-2031
2	20 Black	w_csbg	CSB3 ground	Splice to: POWER box NEG bar M8 stud (glove box); OEM cruise stalk switch C14 pin 17, BR wire; Optocoupler board, 8 channel (Dan's, generic EL814) · pin COM1	0462-201-2031
3	20 Orange	w_opto_vcc	Opto +5 V	Optocoupler board, 8 channel (Dan's, generic EL814) · pin VCC	0462-201-2031
4	20 Black	w_opto_outc	Opto out ground	Optocoupler board, 8 channel (Dan's, generic EL814) · pin NEG	0462-201-2031
5	20 White	wc_h_csb	CAN H to CSB3	Splice to: DRB102 bulkhead, cabin side · pin 79; ECU Comms/Tuning Port · pin 3; 120 ohm CAN end resistor, ECU end · pin 1; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash)	0462-201-2031
6	20 Green	wc_l_csb	CAN L to CSB3	Splice to: DRB102 bulkhead, cabin side · pin 80; ECU Comms/Tuning Port · pin 4; 120 ohm CAN end resistor, ECU end · pin 2; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash)	0462-201-2031
7	*spare*				
8	20 Yellow	w_cru_ladder_out	Cruise ladder	Splice to: OEM cruise stalk switch C14 pin 5, W wire; Cruise resistor on the CSB3 · pin 2	0462-201-2031

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
9	*spare*				
10	*spare*				
11	*spare*				
12	*spare*				
13	*spare*				
14	*spare*				
15	*spare*				
16	*spare*				
17	20 Yellow	`w_sw2`	Cruise MAIN on	OEM cruise stalk switch C14 pin 15, Y-B wire	`0462-201-2031`
18	*spare*				
19	*spare*				
20	20 Yellow	`w_sw5`	Clutch pedal sw	OEM cruise control clutch switch C17 pin 2, B wire	`0462-201-2031`
21	20 Yellow	`w_opto_out1`	Brake to CSB3 S7	Optocoupler board, 8 channel (Dan's, generic EL814) · pin OUT1	`0462-201-2031`
22	20 Yellow	`w_opto_out2`	Reverse to CSB3 S8	Optocoupler board, 8 channel (Dan's, generic EL814) · pin OUT2	`0462-201-2031`
23	*spare*				
24	*spare*				
25	*spare*				
26	20 White	`w_oil_k`	Oil LED sink (CSB3)	Oil pressure LED · pin 2	`0462-201-2031`
27	*spare*				
28	*spare*				
29	*spare*				
30	*spare*				
31	*spare*				
32	*spare*				
33	*spare*				

Pin numbers: TBD · harness CSB3, ClusterLED, CAN


AntiTheft

Alarm module

ALARM · DT06-12SA + W12S

FACE SOURCED

Alarm module - main harness (DT06-12SA)

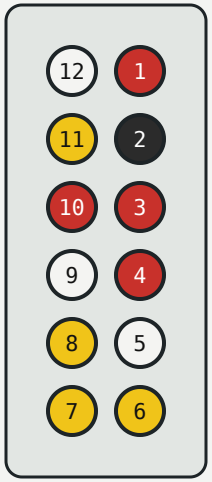

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w_at_12v	AMI BUS1 50 A fuse → LOGIC ALM 5 A fuse	Splice to: LOGIC fuse box · fuse BUS1-7 (ALM 5 A)	0462-201-1631
2	20 Black	w_at_gnd_a1	Alarm ground	Cabin ground stud near the alarm (spot and EWD ID TBD, M6)	0462-201-1631
3	20 Red	w_at_ig	EFI relay k_efi → LOGIC ALMIG 2 A fuse	Splice to: LOGIC fuse box · fuse BUS2-9 (ALMIG 2 A)	0462-201-1631
4	20 Red	w_at_siren	Siren +	Siren (engine bay, center firewall behind the engine) · pin 1	0462-201-1631
5	20 White	w_at_park	Park lamp flash	Splice to: Park lamp flash relay lead (cabin relay, part and spot TBD)	0462-201-1631
6	20 Yellow	w_at_door	Door trigger	Splice to: OEM door courtesy switch line (R-W) at J/B No.1 connector 1B pin 11 (left kick panel); 0 V with any door open	0462-201-1631
7	20 Yellow	w_at_hood	Hood trigger	Splice to: Hood pin switch lead (new switch, RH front via loom C, spot TBD)	0462-201-1631
8	20 Yellow	w_at_trunk	Trunk trigger	Splice to: Trunk pin switch lead (new switch, spot TBD)	0462-201-1631
9	20 White	w_at_immob2	Anti-theft input	Link G4X plug B · pin 27	0462-201-1631

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
10	20 Red	w_at_led	Status LED +	Status LED (dash) · pin 1	0462-201-1631
11	20 Yellow	w_at_valet	Valet switch	Valet / program switch (hidden) · pin 1	0462-201-1631
12	20 White	w_at_shk_sig	Shock trigger	Shock / tilt sensor * · pin C	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

Siren (engine bay, center firewall behind the engine)

SIREN · DT06-2S-CE05 + W2S

FACE SOURCED

Siren (engine bay, center firewall behind the engine) - leads cross via harness C's own RH fender grommet, decided 2026-10-10, not the FR wheel-speed grommet



latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w_at_siren	Siren +	Alarm module · pin 4	0462-201-1631
2	20 Black	w_at_gnd_a2	Siren ground	Cabin ground stud near the alarm (spot and EWD ID TBD, M6)	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

Status LED (dash) STATUS-LED · DT06-2S + W2S

FACE SOURCED

Status LED (dash)

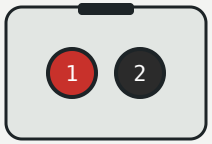

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	w_at_led	Status LED +	Alarm module · pin 10	0462-201-1631
2	20 Black	w_at_gnd_b2	Status LED gnd	Cabin ground stud near the alarm (spot and EWD ID TBD, M6)	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

Valet / program switch (hidden)

VALET-SW · DT06-2S + W2S

FACE SOURCED

Valet / program switch (hidden)



latch top

wire side (where the contacts go in) view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Yellow	w_at_valet	Valet switch	Alarm module · pin 11	0462-201-1631
2	20 Black	w_at_gnd_c1	Valet switch ground	Cabin ground stud near the alarm (spot and EWD ID TBD, M6)	0462-201-1631

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

Shock / tilt sensor * SHOCK-SENSOR · DT06-3S + W3S

FACE SOURCED

Shock / tilt sensor *

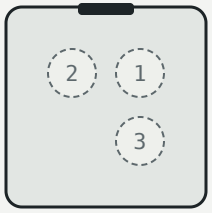

latch top

wire side (where the contacts go in) view. Deutsch moulds this 3-way as A / B / C; the master numbers it 1 / 2 / 3, read here as A = 1, B = 2, C = 3. · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
A	20 Red	w_at_12v_shk	AMI BUS1 50 A fuse → LOGIC ALMS 2 A fuse	Splice to: LOGIC fuse box · fuse BUS1-8 (ALMS 2 A)	0462-201-1631
B	20 Black	w_at_gnd_b1	Shock sensor ground	Cabin ground stud near the alarm (spot and EWD ID TBD, M6)	0462-201-1631
C	20 White	w_at_shk_sig	Shock trigger	Alarm module · pin 12	0462-201-1631


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness AntiTheft

CAN

ECU Comms/Tuning Port `ECU-C · DTM06-6S + WM-6S`

FACE NOT SOURCED

ECU Comms/Tuning Port

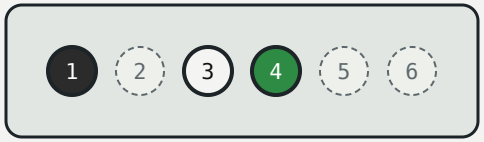

layout not sourced: numbered list only, match the moulded numbers

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Black	`w_shd_can_trunk`	CAN screen trunk	Splice to: Shield, not connected at the device end; DRB102 bulkhead, cabin side · pin 81	`0462-201-2031`
2	*spare*				
3	20 White	`wc_h_ecu`	CAN 1 high	Splice to: DRB102 bulkhead, cabin side · pin 79; 120 ohm CAN end resistor, ECU end · pin 1; ECUMaster CSB3 · pin 5; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash)	`0462-201-2031`
4	20 Green	`wc_l_ecu`	CAN 1 low	Splice to: DRB102 bulkhead, cabin side · pin 80; 120 ohm CAN end resistor, ECU end · pin 2; ECUMaster CSB3 · pin 6; Cluster CAN board CANH + CANL pins (old meter spot); Pi USB-CAN adapter CANH + CANL pins (center dash)	`0462-201-2031`
5	*spare*				
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness CAN


WheelSpeed-Rear

VRC rear OUT plug

`VRC-R-OUT · LP-16-J05PE-02-001`

FACE SOURCED

VRC rear OUT plug

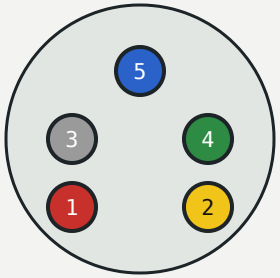

mating face view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	`cab_rout_5v`	VRC-R +5V	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 1	`solder cup (LP-16, S16)`
2	20 Yellow	`cab_rout_gnd`	VRC-R GND	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 2	`solder cup (LP-16, S16)`
3	Shield	`cab_rout_sh`	WS-R screen drain	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 5	`solder cup (LP-16, S16)`
4	20 Green	`cab_rout_l`	Rear left wheel spd	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 3	`solder cup (LP-16, S16)`
5	20 Blue	`cab_rout_r`	Rear right wheel spd	Rear wheel-speed inline plug, sensor side (IX-WS-R) · pin 4	`solder cup (LP-16, S16)`


Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

Rear wheel-speed inline plug, sensor side (IX-WS-R)

IX-WS-R-P · DT04-6P + W6P

FACE SOURCED

IX-WS-R

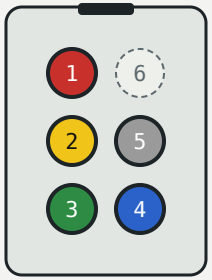

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_rout_5v	VRC-R +5V	VRC rear OUT plug · pin 1	0460-202-1631
2	20 Yellow	cab_rout_gnd	VRC-R GND	VRC rear OUT plug · pin 2	0460-202-1631
3	20 Green	cab_rout_l	Rear left wheel spd	VRC rear OUT plug · pin 4	0460-202-1631
4	20 Blue	cab_rout_r	Rear right wheel spd	VRC rear OUT plug · pin 5	0460-202-1631
5	Shield	cab_rout_sh	WS-R screen drain	VRC rear OUT plug · pin 3	0460-202-1631
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

ABS Wheel Speed RL

`WSS-RL · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed RL



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	cab_rl_p	RL wheel speed +	VRC rear IN plug · pin 1	0462-201-16141
2	20 White	cab_rl_n	RL wheel speed -	VRC rear IN plug · pin 2	0462-201-16141


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear

VRC rear IN plug

VRC-R-IN · LP-16-J05PE-02-001

FACE SOURCED

VRC rear IN plug

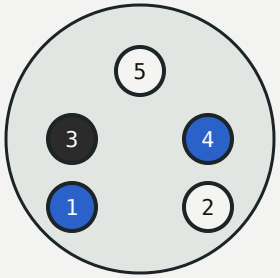

mating face view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	cab_rl_p	RL wheel speed +	ABS Wheel Speed RL · pin 1	solder cup (LP-16, S16)
2	20 White	cab_rl_n	RL wheel speed -	ABS Wheel Speed RL · pin 2	solder cup (LP-16, S16)
3	20 Black	w_ws_r_shield	Rear sensor shields	Splice to: Shield, not connected at the device end	solder cup (LP-16, S16)
4	20 Blue	cab_rr_p	RR wheel speed +	ABS Wheel Speed RR · pin 1	solder cup (LP-16, S16)
5	20 White	cab_rr_n	RR wheel speed -	ABS Wheel Speed RR · pin 2	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Rear

ABS Wheel Speed RR `WSS-RR · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed RR



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	cab_rr_p	RR wheel speed +	VRC rear IN plug · pin 4	0462-201-16141
2	20 White	cab_rr_n	RR wheel speed -	VRC rear IN plug · pin 5	0462-201-16141

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Rear


WheelSpeed-Front

VRC front OUT plug

VRC-F-OUT · LP-16-J05PE-02-001

FACE SOURCED

VRC front OUT plug

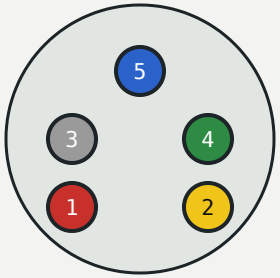

mating face view · source


PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_fout_5v	VRC-F +5V	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 1	solder cup (LP-16, S16)
2	20 Yellow	cab_fout_gnd	VRC-F GND	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 2	solder cup (LP-16, S16)
3	Shield	cab_fout_sh	WS-F screen drain	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 5	solder cup (LP-16, S16)
4	20 Green	cab_fout_l	FL conditioned out	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 3	solder cup (LP-16, S16)
5	20 Blue	cab_fout_r	FR conditioned out	Front wheel-speed inline plug, sensor side (IX-WS-F) · pin 4	solder cup (LP-16, S16)

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

Front wheel-speed inline plug, sensor side (IX-WS-F) IX-WS-F-P · DT04-6P + W6P

FACE SOURCED

IX-WS-F

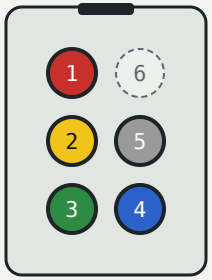

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Red	cab_fout_5v	VRC-F +5V	VRC front OUT plug · pin 1	0460-202-1631
2	20 Yellow	cab_fout_gnd	VRC-F GND	VRC front OUT plug · pin 2	0460-202-1631
3	20 Green	cab_fout_l	FL conditioned out	VRC front OUT plug · pin 4	0460-202-1631
4	20 Blue	cab_fout_r	FR conditioned out	VRC front OUT plug · pin 5	0460-202-1631
5	Shield	cab_fout_sh	WS-F screen drain	VRC front OUT plug · pin 3	0460-202-1631
6	*spare*				

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

ABS Wheel Speed FL

`WSS-FL · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed FL



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`cab_fl_p`	FL wheel speed +	VRC front IN plug · pin 1	`0462-201-16141`
2	20 White	`cab_fl_n`	FL wheel speed -	VRC front IN plug · pin 2	`0462-201-16141`


Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front

VRC front IN plug

`VRC-F-IN · LP-16-J05PE-02-001`

FACE SOURCED

VRC front IN plug

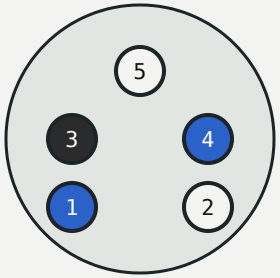

mating face view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`cab_fl_p`	FL wheel speed +	ABS Wheel Speed FL · pin 1	`solder cup (LP-16, S16)`
2	20 White	`cab_fl_n`	FL wheel speed -	ABS Wheel Speed FL · pin 2	`solder cup (LP-16, S16)`
3	20 Black	`w_ws_f_shield`	Front sensor shields	Splice to: Shield, not connected at the device end	`solder cup (LP-16, S16)`
4	20 Blue	`cab_fr_p`	FR wheel speed +	ABS Wheel Speed FR · pin 1	`solder cup (LP-16, S16)`
5	20 White	`cab_fr_n`	FR wheel speed -	ABS Wheel Speed FR · pin 2	`solder cup (LP-16, S16)`

Pin numbers: CNLINKO LP-16 5-pin, pins 1-5 (Dan 2026-10-19) · harness WheelSpeed-Front

ABS Wheel Speed FR

`WSS-FR · DT06-2S-CE05 + W2S`

FACE SOURCED

ABS Wheel Speed FR



latch top

wire side (where the contacts go in) view · source

PIN	WIRE	WIRE ID	WHAT IT DOES	GOES TO	CONTACT
1	20 Blue	`cab_fr_p`	FR wheel speed +	VRC front IN plug · pin 4	`0462-201-16141`
2	20 White	`cab_fr_n`	FR wheel speed -	VRC front IN plug · pin 5	`0462-201-16141`

Pin numbers: Deutsch DT / DTM cavity numbers (moulded on the housing) · harness WheelSpeed-Front