ST185 CELICA - CONNECTOR ATLAS

Every connector of all 15 harnesses, and every OEM junction box / plug we splice into.

Generated from docs/harness/wirelist/*.csv by docs/harness/atlas/build_atlas.py. Never edit the PDF; change the wire list and regenerate.

DRAWN	SHEETS	REV	SOURCE HASH	PROJECT
DG	27 (11 x 17 in landscape)	A	7a23d07370335f69	st185-link-ecu-config

PAGE INDEX

p.2 ECU AND BULKHEAD (1 of 2)
DRB102 bulkhead

p.3 ECU AND BULKHEAD (2 of 2)
ECU COMMS, ECU-A, ECU-B (Link G4X plug B, centre dash)

p.4 CABIN (1 of 2)
CSB3, ALARM, OPTO8, BUS-5V, BUS-5V cap, BUS-GNDOUT-A, BUS-GNDOUT-A cap, BUS-GNDOUT-B, BUS-GNDOUT-B cap, SHOCK SNSR, SIREN, STATUS LED, VALET SW, CAN-LAMBDA

p.5 CABIN (2 of 2)
FRONT WS INLINE, PEDAL, IX-FUEL inline to fuel sender lead (trunk end), IX-WS-R inline to rear VRC (dash above ECU), BUS-5V-2, BUS-5V-2 cap

p.6 ENGINE BAY (1 of 2)
EHPS PUMP, Turbo speed sensor, MAP sensor (sensor block, LH firewall), Flex fuel sensor (fuel return line), Injector cyl 1, Injector cyl 2, Injector cyl 3, Injector cyl 4, Ignition coil cyl 1, Ignition coil cyl 2, Ignition coil cyl 3, Ignition coil cyl 4, Throttle body (Bosch ETB), Boost control solenoid, Coolant temp sensor (water neck), Intake air temp sensor (manifold), Crank sensor, Cam sensor (Hall), Oil pressure sensor (sensor block, LH firewall), Fuel pressure sensor (sensor block, LH...

p.7 ENGINE BAY (2 of 2)
WSS FR, IX-WS-F, VRC-F IN, VRC-F OUT

p.8 FUSE BOXES, RELAYS AND HEAVY DC (1 of 2)
FB-LOGIC, FB-POWER, SW12 bus plug DT06-12 (glove box, by LOGIC box), SW12 bussed cap DT04-12 P021 (on plug), POWER R2, POWER R4, LOGIC M4, POWER R3, POWER R5, EHPS RELAY, LOGIC M5, LOGIC M6, LOGIC M7, LOGIC M1, LOGIC M2, LOGIC M3, POWER R1, POWER R6, RADLOK+ FW

p.9 FUSE BOXES, RELAYS AND HEAVY DC (2 of 2)
RADLOK+ ENG, RADLOK- FW, RADLOK- ENG, JUMP POST, ALT PLUG G2, KILL SWITCH, BATT RLY BOX, FP RELAY K1

p.10 OEM JUNCTION BOXES AND SPLICE POINTS (1 of 17)
J/B No.1 - LH kick panel junction block (1 of 3)

p.11 OEM JUNCTION BOXES AND SPLICE POINTS (2 of 17)
J/B No.1 - LH kick panel junction block (2 of 3)

p.12 OEM JUNCTION BOXES AND SPLICE POINTS (3 of 17)
J/B No.1 - LH kick panel junction block (3 of 3)

p.13 OEM JUNCTION BOXES AND SPLICE POINTS (4 of 17)
IE1 - engine room main wire to cowl wire joint (LH kick panel) (1 of 3)

p.14 OEM JUNCTION BOXES AND SPLICE POINTS (5 of 17)
IE1 - engine room main wire to cowl wire joint (LH kick panel) (2 of 3)

p.15 OEM JUNCTION BOXES AND SPLICE POINTS (6 of 17)
IE1 - engine room main wire to cowl wire joint (LH kick panel) (3 of 3)

p.16 OEM JUNCTION BOXES AND SPLICE POINTS (7 of 17)
R/B No.2 - LH kick panel relay block position

p.17 OEM JUNCTION BOXES AND SPLICE POINTS (8 of 17)
R/B No.4 - RH kick panel relay block position (1 of 2)

p.18 OEM JUNCTION BOXES AND SPLICE POINTS (9 of 17)
R/B No.4 - RH kick panel relay block position (2 of 2)

p.19 OEM JUNCTION BOXES AND SPLICE POINTS (10 of 17)
J/B No.3 - behind the combination meter

p.20 OEM JUNCTION BOXES AND SPLICE POINTS (11 of 17)
IG2 - engine wire to cowl wire joint (under the ECU)

p.21 OEM JUNCTION BOXES AND SPLICE POINTS (12 of 17)
OEM device plugs we tap (1 of 6)

p.22 OEM JUNCTION BOXES AND SPLICE POINTS (13 of 17)
OEM device plugs we tap (2 of 6)

p.23 OEM JUNCTION BOXES AND SPLICE POINTS (14 of 17)
OEM device plugs we tap (3 of 6)

p.24 OEM JUNCTION BOXES AND SPLICE POINTS (15 of 17)
OEM device plugs we tap (4 of 6)

p.25 OEM JUNCTION BOXES AND SPLICE POINTS (16 of 17)
OEM device plugs we tap (5 of 6)

p.26 OEM JUNCTION BOXES AND SPLICE POINTS (17 of 17)
OEM device plugs we tap (6 of 6)

p.27 REAR
IX-FUEL inline to fuel sender (trunk LH), FUEL LVL, FUEL PUMP, WSS RL, WSS RR, IX-WS-R, VRC-R IN, VRC-R OUT

HOW TO READ

Cavity circle: number inside, short signal label under it, fill = function (legend below). White = spare.
Connector title: name, maker part number, harness, true cavity count. "mates X" names the other half.
OEM pages: header = factory box + link to its location page in the repair-manual app; left = real plug face view; row = pin, factory wire colour, factory signal (FSM/EWD), then OUR wire, colour, harness and leg to grab.
Factory wire colours use the Toyota codes: B black, W white, R red, G green, L blue, Y yellow, O orange, BR brown, GR grey, P pink, LG light green; second letter = stripe.

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

DRB102 firewall bulkhead - insert face (TE drawing view) - same face as DRB102-bulkhead-map.png

DRB12-102PAE (cabin) / DRB16-102SAE (engine bay) | harnesses: ECU-cabin, ECU-engine | circle size = contact size (4 > 8 > 12 > 16)

Left wedgelock half (52-102)

- 102
- 101
- 100
- 99
- 98
- 97
- 96 — CAN-Lambda ground
- 95 — CAN-Lambda +12 V
- 94
- 93
- 92
- 91
- 90
- 89
- 88
- 87
- 86
- 85 — EHPS relay coil (-)
- 84 — EHPS pump speed
- 83 — EHPS enable +12 V
- 82
- 81 — CAN-Lambda shield
- 80 — CAN L to CAN-Lambda
- 79 — CAN H to CAN-Lambda
- 78 — Reverse sw +12 V out
- 77 — Back-up sw +12 V in
- 76 — Crank sensor shield
- 75 — Gnd crank sensor
- 74 — Crank sensor signal
- 73 — Knock sensor shield
- 72 — Knock sensor (-)
- 71 — Knock sensor signal
- 70 — Coolant temp signal
- 69 — Gearbox speed shield
- 68 — Gearbox speed signal
- 67 — +12 V gearbox speed
- 66 — Cam sensor shield
- 65 — Gnd cam sensor
- 64 — Cam sensor signal
- 63 — +8 V to cam sensor
- 62
- 61 — Oil temp signal
- 60
- 59 — Charge temp signal
- 58 — Boost solenoid (-)
- 57 — Turbo speed shield
- 56 — Gnd turbo speed
- 55
- 54
- 53 — Turbo speed signal
- 52 — +5 V turbo speed

Right wedgelock half (1-51)

- 51
- 50 — ETB motor shield
- 49
- 48
- 47 — Throttle shield
- 46 — ETB motor -
- 45 — ETB motor +
- 44 — Throttle pos 2 sub
- 43
- 42 — Throttle pos 1 main
- 41 — +5 V throttle sensor
- 40
- 39
- 38
- 37
- 36
- 35
- 34 — Gnd IAT/TPS/coolant
- 33 — Intake temp signal
- 32 — Flex fuel shield
- 31 — Flex fuel signal
- 30 — +12 V boost + flex
- 29 — Gnd oil/clnt/temps
- 28 — Oil pressure signal
- 27 — +5 V oil pressure
- 26 — Coolant press signal
- 25 — +5 V coolant press
- 24 — Injector 4 drive (-)
- 23 — Injector 3 drive (-)
- 22 — Injector 2 drive (-)
- 21 — Injector 1 drive (-)
- 20
- 19
- 18 — Gnd flex + MAP
- 17 — MAP sensor signal
- 16 — +5 V MAP sensor
- 15 — Gnd fuel press + VSS
- 14 — Fuel pressure signal
- 13 — +5 V fuel pressure
- 12 — Coil 4 trigger (IGT)
- 11 — Coil 3 trigger (IGT)
- 10 — Coil 2 trigger (IGT)
- 9 — Coil 1 trigger (IGT)
- 8
- 7
- 6
- 5
- 4
- 3
- 2 — Injector +12 V feed
- 1 — Coil +12 V feed

Spare | CAN | Shield drain | +12 V power | Sensor signal | Output / actuator | Ground / sensor return | Sensor supply +5/+8 V | Coil trigger | Injector drive | Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

ECU AND BULKHEAD (2 of 2)

ECU COMMS

DTM06-6S | CAN | 6 cavities | numbered grid (true count)

C1	C2	C3	C4	C5	C6
CAN screen trunk		CAN 1 high	CAN 1 low		

ECU-A

4-1437290-1 | ECU-cabin | 34 cavities | numbered grid (true count)

A1 Injector 4 drive (-)	A2 Injector 3 drive (-)	A3 Injector 2 drive (-)	A4 Injector 1 drive (-)	A5 ECU main +12 V	A6 +8 V sensor supply	A7 Shield drain
A8 Crank sensor signal	A9 Cam sensor signal	A10 Coil 4 trigger (IGT)	A11 Coil 3 trigger (IGT)	A12 Coil 2 trigger (IGT)	A13 Coil 1 trigger (IGT)	A14 Pedal 1 signal main
A15 Coolant temp signal	A16 Intake temp signal	A17 MAP sensor signal	A18 A/C cancel (ACT)	A19 Fuel pump relay (-)	A20 ETB relay coil (-)	A21 Boost solenoid (-)
A22 Throttle pos 1 main	A23 FL conditioned out	A24 Sensor ground	A25 ECU power ground	A26 Start relay coil (-)	A27 EHPS pump speed	A28 EFI relay coil (-)
A29 Rad fan relay (-)	A30 Turbo speed signal	A31 Flex fuel signal	A32 +5 V sensor supply	A33 Throttle pos 2 sub	A34 ECU power ground	

ECU-B (Link G4X plug B, centre dash)

4-1437290-0 | ECU-cabin | 34 cavities | numbered grid (true count)

B1	B2	B3	B4	B5 ETB motor +12 V	B6 Oil temp signal	B7 Charge temp signal
B8	B9 Knock sensor signal	B10 A/C clutch relay (-)	B11	B12 EPS enable relay (-)	B13 Cond fan relay (-)	B14
B15 Oil pressure signal	B16 Fuel pressure signal	B17 Shield drain B	B18 ETB motor +	B19 Rear right wheel spd	B20 Rear left wheel spd	B21 FR conditioned out
B22 Sensor ground B	B23 Coolant press signal	B24 Fuel level signal	B25 ECU power ground	B26 ETB motor -	B27 Anti-theft input	B28 Ignition sw sense
B29 Gearbox speed signal	B30 Start request	B31 A/C request button	B32 Evap temp signal	B33 Pedal 2 signal sub	B34 ECU power ground	

Spare | CAN | Shield drain | +12 V power | Sensor signal | Output / actuator | Ground / sensor return | Sensor supply +5/+8 V | Coil trigger | Injector drive | Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

CABIN (1 of 2)

CSB3

HD36-24-33SE | CSB3 | 33 cavities | numbered grid (true count)

1	2	3	4	5	6	7
CSB3 +12 V	CSB3 ground	Opto +5 V	Opto out ground	CAN H to CSB3	CAN L to CSB3	
8	9	10	11	12	13	14
Cruise ladder						
15	16	17	18	19	20	21
		Cruise MAIN on			Clutch pedal sw	Brake to CSB3 S7
22	23	24	25	26	27	28
Reverse to CSB3 S8				Oil LED sink (CSB3)		
29	30	31	32	33		

ALARM

DT06-12SA | AntiTheft | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
Alarm +12 V	Alarm ground	Alarm ignition +12V	Siren +	Park lamp flash	Door trigger
7	8	9	10	11	12
Hood trigger	Trunk trigger	Anti-theft input	Status LED +	Valet switch	Shock trigger

OPTO8

(Dan's on-hand board - generic 8-ch EL814 opt... | CSB3 | 20 cavities | numbered grid (true count)

VCC	GND	OUT1	OUT2	IN1	COM1	COM2
Opto +5 V	Opto out ground	Brake to CSB3 S7	Reverse to CSB3 S8	Brake on +12 V	Opto COM ground	
IN3	IN4	IN5	IN6	IN7	IN8	OUT3
OUT4	OUT5	OUT6	OUT7	OUT8	IN2	
					Reverse to opto in 2	

BUS-5V

DT06-12SA | ECU-cabin | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
+5 V from ECU A32	+5 V throttle sensor	+5 V MAP sensor	+5 V turbo speed	+5 V oil pressure	+5 V fuel pressure
7	8	9	10	11	12
+5 V coolant press	+5 V pedal sensor 1	+5 V pedal sensor 2	+5 V front VRC	+5 V rear VRC	+5 V to BUS-5V-2

mates bus_5v_r

BUS-5V cap

DT04-12PA-P021 | ECU-cabin | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
+5 V from ECU A32	+5 V throttle sensor	+5 V MAP sensor	+5 V turbo speed	+5 V oil pressure	+5 V fuel pressure
7	8	9	10	11	12
+5 V coolant press	+5 V pedal sensor 1	+5 V pedal sensor 2	+5 V front VRC	+5 V rear VRC	+5 V to BUS-5V-2

mates bus_5v_p

BUS-GNDOUT-A

DT06-12SA | ECU-cabin | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
Sensor gnd from A24	Gnd IAT/TPS/coolant	Gnd crank sensor	Gnd cam sensor	Gnd turbo speed	Gnd flex + MAP
7	8	9	10	11	12
Pedal 1 ground	Pedal 2 ground	Front VRC ground			

mates bus_gnd_a_r

BUS-GNDOUT-A cap

DT04-12PA-P021 | ECU-cabin | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
Sensor gnd from A24	Gnd IAT/TPS/coolant	Gnd crank sensor	Gnd cam sensor	Gnd turbo speed	Gnd flex + MAP
7	8	9	10	11	12
Pedal 1 ground	Pedal 2 ground	Front VRC ground			

mates bus_gnd_a_p

BUS-GNDOUT-B

DT06-12SA | ECU-cabin | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
Sensor gnd from B22	Fuel level ground	Rear VRC ground	A/C btn divider gnd	Evap thermistor gnd	Knock sensor (-)
7	8	9	10	11	12
Gnd oil/clnt/temps	Gnd fuel press + VSS				

mates bus_gnd_b_r

BUS-GNDOUT-B cap

DT04-12PA-P021 | ECU-cabin | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
Sensor gnd from B22	Fuel level ground	Rear VRC ground	A/C btn divider gnd	Evap thermistor gnd	Knock sensor (-)
7	8	9	10	11	12
Gnd oil/clnt/temps	Gnd fuel press + VSS				

mates bus_gnd_b_p

SHOCK SNSR

DT06-3S | AntiTheft | 3 cavities | numbered grid (true count)

B	C	A
Shock sensor ground	Shock trigger	Shock sensor +12 V

SIREN

DT06-2S-CE05 | AntiTheft | 2 cavities | numbered grid (true count)

1	2
Siren +	Siren ground

STATUS LED

DT06-2S | AntiTheft | 2 cavities | numbered grid (true count)

1	2
Status LED +	Status LED gnd

VALET SW

DT06-2S | AntiTheft | 2 cavities | numbered grid (true count)

1	2
Valet switch	Valet switch ground

CAN-LAMBDA

DTM06-4S | CAN | 4 cavities | numbered grid (true count)

1	2	3	4
CAN-Lambda +12 V	CAN-Lambda ground	CAN L to CAN-Lambda	CAN H to CAN-Lambda

Spare | CAN | Shield drain | +12 V power | Sensor signal | Output / actuator | Ground / sensor return | Sensor supply +5/+8 V | Coil trigger | Injector drive | Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

CABIN (2 of 2)

FRONT WS INLINE

DT06-6S | ECU-cabin | 6 cavities | numbered grid (true count)

1	2	3	4	5	6
VRC-F +5V	VRC-F GND	FL conditioned out	FR conditioned out	WS-F screen drain	

mates ix_ws_front_r on WheelSpeed-Front

PEDAL

Sumitomo TS 025 6-way | ECU-cabin | 6 cavities | numbered grid (true count)

1	2	3	4	5	6
+5 V pedal sensor 2	Pedal 2 ground	Pedal 2 signal sub	+5 V pedal sensor 1	Pedal 1 ground	Pedal 1 signal main

IX-FUEL inline to fuel sender lead (trun...

DT04-2P | ECU-cabin | 2 cavities | numbered grid (true count)

1	2
Fuel level signal	Fuel level ground

mates ix_fuel_p on RearFuel

IX-WS-R inline to rear VRC (dash above ECU)

DT06-6S | ECU-cabin | 6 cavities | numbered grid (true count)

1	2	3	4	5	6
VRC-R +5V	VRC-R GND	Rear left wheel spd	Rear right wheel spd	WS-R screen drain	

mates ix_ws_rear_r on WheelSpeed-Rear

BUS-5V-2

DT06-08SA | ECU-cabin | 8 cavities | numbered grid (true count)

1	2	3	4	5	6	7	8
+5 V from BUS-5V	+5 V cruise ladder	+5 V evap pull-up	+5 V fuel lvl pullup				

mates bus_5v2_r

BUS-5V-2 cap

DT04-08PA-P021 | ECU-cabin | 8 cavities | numbered grid (true count)

1	2	3	4	5	6	7	8
+5 V from BUS-5V	+5 V cruise ladder	+5 V evap pull-up	+5 V fuel lvl pullup				

mates bus_5v2_p

Spare | CAN | Shield drain | +12 V power | Sensor signal | Output / actuator | Ground / sensor return | Sensor supply +5/+8 V | Coil trigger | Injector drive | Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

ENGINE BAY (1 of 2)

EHPS PUMP
MR-S ZZW30 EHPS pump - A 90980-12068 / B 9098... | EngineRoom-C | 10 cavities | numbered grid (true count)

A-1	C-1	B-2	B-5	A-2
EHPS pump +12 V	EHPS enable +12 V	EHPS pump speed	EHPS relay coil (-)	EHPS pump ground

B-1	B-3	B-4	B-6	C-2

Turbo speed sensor
DT06-3S-CE05 | ECU-engine | 3 cavities | numbered grid (true count)

A	B	C
+5 V turbo speed	Turbo speed signal	Gnd turbo speed

MAP sensor (sensor block, LH firewall)
12110293 | ECU-engine | 3 cavities | numbered grid (true count)

1	2	3
Gnd MAP sensor	+5 V MAP sensor	MAP sensor signal

Flex fuel sensor (fuel return line)
13519047 | ECU-engine | 3 cavities | numbered grid (true count)

C	A	B
Flex fuel signal	+12 V flex fuel	Gnd flex fuel

Injector cyl 1
15419715 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Injector 1 +12 V	Injector 1 drive (-)

Injector cyl 2
15419715 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Injector 2 +12 V	Injector 2 drive (-)

Injector cyl 3
15419715 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Injector 3 +12 V	Injector 3 drive (-)

Injector cyl 4
15419715 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Injector 4 +12 V	Injector 4 drive (-)

Ignition coil cyl 1
90980-11885 | ECU-engine | 4 cavities | numbered grid (true count)

1	2	3	4
Coil 1 +12 V		Coil 1 trigger (IGT)	Coil 1 ground

Ignition coil cyl 2
90980-11885 | ECU-engine | 4 cavities | numbered grid (true count)

1	2	3	4
Coil 2 +12 V		Coil 2 trigger (IGT)	Coil 2 ground

Ignition coil cyl 3
90980-11885 | ECU-engine | 4 cavities | numbered grid (true count)

1	2	3	4
Coil 3 +12 V		Coil 3 trigger (IGT)	Coil 3 ground

Ignition coil cyl 4
90980-11885 | ECU-engine | 4 cavities | numbered grid (true count)

1	2	3	4
Coil 4 +12 V		Coil 4 trigger (IGT)	Coil 4 ground

Throttle body (Bosch ETB)
D 261 205 358-01 | ECU-engine | 6 cavities | numbered grid (true count)

1	2	3	4	5	6
ETB motor -	Gnd throttle sensor	+5 V throttle sensor	ETB motor +	Throttle pos 2 sub	Throttle pos 1 main

Boost control solenoid
12052641 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
+12 V boost sol	Boost solenoid (-)

Coolant temp sensor (water neck)
90980-11062 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Coolant temp signal	Gnd coolant temp

Intake air temp sensor (manifold)
90980-11062 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Intake temp signal	Gnd intake temp

Crank sensor
DT06-2S-CE05 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Crank sensor signal	Gnd crank sensor

Cam sensor (Hall)
(kit-supplied pigtail) | ECU-engine | 3 cavities | numbered grid (true count)

1	2	3
+8 V to cam sensor	Cam sensor signal	Gnd cam sensor

Oil pressure sensor (sensor block, LH...
12110293 | ECU-engine | 3 cavities | numbered grid (true count)

1	2	3
Gnd oil pressure	+5 V oil pressure	Oil pressure signal

Fuel pressure sensor (sensor block, LH...
12110293 | ECU-engine | 3 cavities | numbered grid (true count)

1	2	3
Gnd fuel pressure	+5 V fuel pressure	Fuel pressure signal

Coolant pressure sensor (rear of block,...
12110293 | ECU-engine | 3 cavities | numbered grid (true count)

1	2	3
Gnd coolant press	+5 V coolant press	Coolant press signal

Oil temp sender
90980-11062 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Oil temp signal	Gnd oil temp

Back-up light switch B1 (transaxle)
90980-11250 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Reverse sw +12 V out	Back-up sw +12 V in

Charge-pipe air temp sensor
90980-11062 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Charge temp signal	Gnd charge temp

Gearbox speed sensor (transaxle)
90980-11143 | ECU-engine | 3 cavities | numbered grid (true count)

1	2	3
+12 V gearbox speed	Gnd gearbox speed	Gearbox speed signal

Knock sensor 1 (block)
1 928 403 874 | ECU-engine | 2 cavities | numbered grid (true count)

1	2
Knock sensor signal	Knock sensor (-)

POWER BUS
ST185-FB-POWER rev 7 BUS ZONE | EngineRoom-C | 3 cavities | numbered grid (true count)

GND	BAT+	ALT/STR
POWER box gnd to ID / POWER box gnd to IG / Engine...	Battery + to POWER	Starter feed (H3)

RAD FAN+
DTHD06-1-8S | EngineRoom-C | 1 cavities | numbered grid (true count)

+
Rad fan +12 V

COND FAN+
DTHD06-1-8S | EngineRoom-C | 1 cavities | numbered grid (true count)

+
Cond fan +12 V

RAD FAN-
DTHD06-1-8S | EngineRoom-C | 1 cavities | numbered grid (true count)

-
Rad fan ground

COND FAN-
DTHD06-1-8S | EngineRoom-C | 1 cavities | numbered grid (true count)

-
Cond fan ground

HORN LH
DT06-2S-CE05 | EngineRoom-C | 2 cavities | numbered grid (true count)

1	2
Horn LH +12 V	Horn LH ground

HORN RH
DT06-2S-CE05 | EngineRoom-C | 2 cavities | numbered grid (true count)

1	2
Horn RH +12 V	Horn RH ground

WSS FL
DT06-2S-CE05 | WheelSpeed-Front | 2 cavities | numbered grid (true count)

1	2
FL wheel speed +	FL wheel speed -

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

ENGINE BAY (2 of 2)

WSS FR

DT06-2S-CE05 | WheelSpeed-Front | 2 cavities | numbered grid (true count)

1	FR wheel speed +
2	FR wheel speed -

IX-WS-F

DT04-6P | WheelSpeed-Front | 6 cavities | numbered grid (true count)

1	VRC-F +5V
2	VRC-F GND
3	FL conditioned out
4	FR conditioned out
5	WS-F screen drain
6	

mates ix_ws_front_p on ECU-cabin

VRC-F IN

LP-16-J05PE-02-001 | WheelSpeed-Front | 5 cavities | numbered grid (true count)

1	FL wheel speed +
2	FL wheel speed -
3	Front sensor shields
4	FR wheel speed +
5	FR wheel speed -

VRC-F OUT

LP-16-J05PE-02-001 | WheelSpeed-Front | 5 cavities | numbered grid (true count)

1	VRC-F +5V
2	VRC-F GND
3	FL conditioned out
4	FR conditioned out
5	WS-F screen drain

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

FUSE BOXES, RELAYS AND HEAVY DC (1 of 2)

FB-LOGIC

ST185-FB-LOGIC rev 5 | CabinPower | 25 cavities | numbered grid (true count)

BUS2-5	BUS1-1	BUS1-10	BUS1-2	BUS1-3	BUS1-4	BUS1-7
CSB3 +12 V	EFI relay coil+	ETB relay +12 V in	Head LH +12 V feed	Head RH +12 V feed	Haz-horn +12 V feed	Alarm +12 V
BUS1-8	BUS2-1	BUS2-2	BUS2-3	BUS2-4	BUS2-6	BUS2-7
Shock sensor +12 V	CAN-Lambda +12 V	Switched +12 V feed	Coil +12 V feed	Injector +12 V feed	Dash devices +12 V	EPS enable +12 V in
BUS2-8	BUS2-9	BUS1	BUS2	BUS2-12 IN	BUS2-13 IN	BUS2-12
A/C clutch +12 V in	Alarm ignition +12V	LOGIC Bus 1 feed	LOGIC Bus 2 feed	EPS enable out	Start sw ST1 feed	EHPS enable +12 V
BUS2-13	BUS1-5	BUS1-6	BUS1-9			
Start request	DOME feed to J/B1	Door lock feed	Alt S battery sense			

FB-POWER

ST185-FB-POWER rev 7 | CabinPower | 14 cavities | numbered grid (true count)

AMI IN-1	AMI IN-2	AMI IN-3	AMI IN-4	AMI IN-5	AMI IN-6	AMI OUT-1
Heater relay feed	EFI relay feed	Start relay feed	Rad fan relay feed	Cond fan relay feed	Power relay feed	LOGIC Bus 1 feed
AMI OUT-6	ACPS IN	ACPS	AMI OUT-2	AMI OUT-3	AMI OUT-4	AMI OUT-5
EHPS relay feed	ACPS fuse feed	A/C press sw feed	Retract relay feed	AM1 feed to IE1	AM2 feed to IE1	J/B1 main feed

SW12 bus plug DT06-12 (glove box, by LOGIC box)

DT06-12SA | CabinPower | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
Switched +12 V feed	Switched +12 V feed	Fuel pump rly coil+	Rad fan rly coil+	ETB relay coil+	Start relay coil+
7	8	9	10	11	12
Cond fan rly coil+	EHPS relay coil+	EPS enable coil+			

mates bus_sw12_r

SW12 bussed cap DT04-12 P021 (on plug)

DT04-12PA-P021 | CabinPower | 12 cavities | numbered grid (true count)

1	2	3	4	5	6
Switched +12 V feed	Switched +12 V feed	Fuel pump rly coil+	Rad fan rly coil+	ETB relay coil+	Start relay coil+
7	8	9	10	11	12
Cond fan rly coil+	EHPS relay coil+	EPS enable coil+			

mates bus_sw12_p

POWER R2

1-1414147-0 | CabinPower | 4 cavities | numbered grid (true count)

30	85	86	87
LOGIC Bus 2 feed	EFI relay coil (-)	EFI relay coil+	EFI relay feed

POWER R4

1-1414147-0 | CabinPower | 4 cavities | numbered grid (true count)

30	85	86	87
Rad fan +12 V	Rad fan relay (-)	Rad fan rly coil+	Rad fan relay feed

LOGIC M4

4-1904124-2 | CabinPower | 5 cavities | numbered grid (true count)

86	30	85	87	87a
ETB relay coil+	ETB relay +12 V in	ETB relay coil (-)	ETB motor +12 V	

POWER R3

1-1414147-0 | CabinPower | 4 cavities | numbered grid (true count)

30	85	86	87
Starter solenoid S	Start relay coil (-)	Start relay coil+	Start relay feed

POWER R5

1-1393304-0 | CabinPower | 4 cavities | numbered grid (true count)

30	85	86	87
Cond fan +12 V	Cond fan relay (-)	Cond fan rly coil+	Cond fan relay feed

EHPS RELAY

V23132-A2001-B200 | CabinPower | 5 cavities | numbered grid (true count)

86	30	87	87a	85
EHPS relay coil+	EHPS relay feed	EHPS pump +12 V		EHPS relay coil (-)

LOGIC M5

6-1419137-4 | CabinPower | 5 cavities | numbered grid (true count)

30	87a	86	85	87
A/C clutch +12 V in		A/C clutch relay (+)	A/C clutch relay (-)	A/C clutch +12 V

LOGIC M6

6-1419137-4 | CabinPower | 5 cavities | numbered grid (true count)

86	30	87	87a	85
EPS enable coil+	EPS enable +12 V in	EPS enable out		EPS enable relay (-)

LOGIC M7

6-1419137-4 | CabinPower | 5 cavities | numbered grid (true count)

85	87	30	87a	86
Reverse relay coil-	Back-up lamps +12 V	Reverse relay feed		Reverse relay coil+

LOGIC M1

5-1393292-8 | CabinPower | 5 cavities | numbered grid (true count)

85	30	86	87a	87
Head LH coil (-)	Head LH relay feed	Head LH relay coil+		Head LH +12 V out

LOGIC M2

5-1393292-8 | CabinPower | 5 cavities | numbered grid (true count)

85	30	86	87a	87
Head RH coil (-)	Head RH relay feed	Head RH relay coil+		Head RH +12 V out

LOGIC M3

4-1904124-3 | CabinPower | 5 cavities | numbered grid (true count)

85	87	30	86	87a
Horn relay coil (-)	Horn +12 V out	Horn relay feed	Horn relay coil+	

POWER R1

1-1414687-0 | CabinPower | 5 cavities | numbered grid (true count)

87	30	85	87a	86
Heater relay feed	Heater relay out	Heater relay coil-	Heater relay NC gnd	Heater relay coil+

POWER R6

1-1393304-0 | CabinPower | 4 cavities | numbered grid (true count)

30	85	86	87
Power window feed	Power relay coil-	Power relay coil+	Power relay feed

RADLOK+ FW

RL00801-50RE | HeavyDC | 1 cavities | numbered grid (true count)

1
Starter feed (H3)

mates rl_pos_eng on HeavyDC

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

FUSE BOXES, RELAYS AND HEAVY DC (2 of 2)

RADLOK+ ENG

RL00801-50RE | HeavyDC | 1 cavities | numbered grid (true count)

1
Starter feed (H3)

mates rl_pos_fw on HeavyDC

RADLOK- FW

RL00801-50BK | HeavyDC | 1 cavities | numbered grid (true count)

1
Engine ground (H6a)

mates rl_neg_eng on HeavyDC

RADLOK- ENG

RL00801-50BK | HeavyDC | 1 cavities | numbered grid (true count)

1
Engine ground (H6a)

mates rl_neg_fw on HeavyDC

JUMP POST

jump-post-M8 | HeavyDC | 1 cavities | numbered grid (true count)

1
Jump post feed

ALT PLUG G2

90980-10341 | HeavyDC | 3 cavities | numbered grid (true count)

1	2	3
Alt S battery sense	Alt L charge lamp	Alt IG excite

KILL SWITCH

52-45780 | HeavyDC | 4 cavities | numbered grid (true count)

ALT 2	MAIN 2	ALT 1	MAIN 1
Alt IG excite	Battery relay box + / Battery + to POWER	Alt IG to kill sw	Battery + main

BATT RLY BOX

ST185-FB-BATT rev 5 | HeavyDC | 2 cavities | numbered grid (true count)

FP 40A	BATT +
Fuel pump rly feed	Battery relay box +

FP RELAY K1

V23132-A2001-B200 | HeavyDC | 5 cavities | numbered grid (true count)

86	85	30	87a	87
Fuel pump rly coil+	Fuel pump relay (-)	Fuel pump rly feed		Fuel pump +12 V

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.


J/B No.1 - LH kick panel junction block (1 of 3)

Factory box KEPT. We splice the factory leads of plugs 1F / 1H / 1I.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-relay-locations&page=3

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)


1F (from floor wire, dark gray)

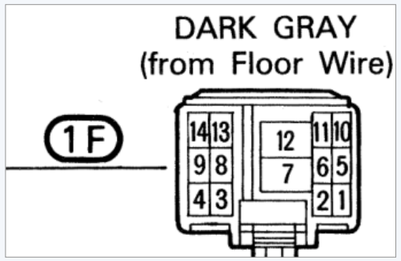

Housing / terminal PN: not matched; RM1022E 14P female
non-waterproof housings p.139-143 (confirm shape)
Source: tis1993-relay-locations p.3

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G	TAIL 15A out	w_rl_tail 16 AWG Tail lamp feed	Red	RearLights toward splice sp_rl_tail
2	G-Y	turn RH out	w_rl_turn_r 18 AWG Turn RH rear +	Red	RearLights toward RH rear lamp R12 pin 6, socket pigtail
3	G-B	turn LH out	w_rl_turn_l 18 AWG Turn LH rear +	Red	RearLights toward LH rear lamp R11 pin 6, socket pigtail

1H (from engine room main wire)

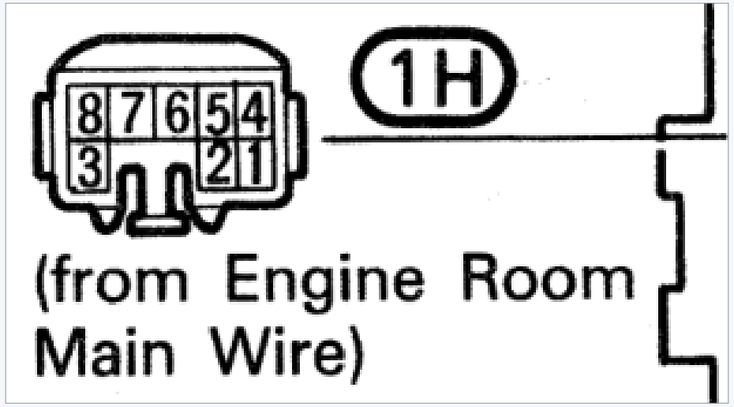

Housing / terminal PN: not matched; RM1022E 8P female
non-waterproof housings p.122-124 (confirm shape)
Source: tis1993-relay-locations p.3

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
2	L-Y	DOME 20 A feed	w_pmu_dome 14 AWG DOME feed to J/B1	Red	EngineRoom-C toward FB-LOGIC pin BUS1-5
4	G-B	turn LH out	w_turn_f7 18 AWG LH front turn +	Red	EngineRoom-C toward LH front turn / clearance lamp F7 pin 3
5	L	WIPER 20 A out	w_wip_b 14 AWG Wiper +B	Red	EngineRoom-C toward Front wiper motor F9 pin 4

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.


J/B No.1 - LH kick panel junction block (2 of 3)

Factory box KEPT. We splice the factory leads of plugs 1F / 1H / 1I.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-relay-locations&page=3

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

1H (from engine room main wire) (cont.)

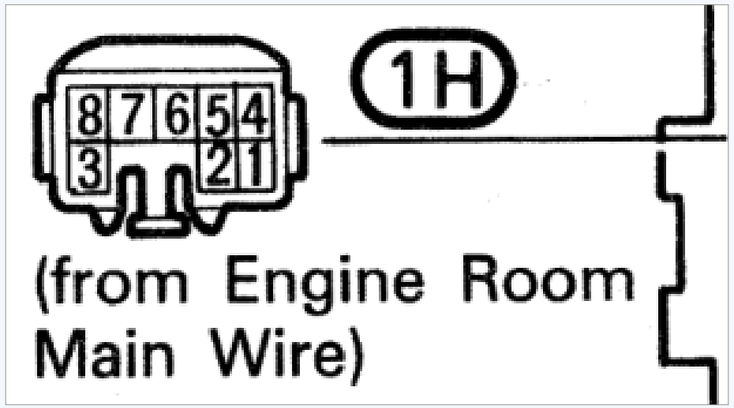

Housing / terminal PN: not matched; RM1022E 8P female
non-waterproof housings p.122-124 (confirm shape)
Source: tis1993-relay-locations p.3

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
6	G	TAIL 15 A out	w_clr 16 AWG Clearance lamp feed	Red	EngineRoom-C toward splice sp_clr
7	B-O	IGN fuse out	w_ig2_in 20 AWG IG2 wake feed	Yellow	ECU-cabin IG2 tap branch (LH kick panel)
7	B-O	IGN fuse out	w_ign 20 AWG Ignition sw sense	Yellow	ECU-cabin toward ECU-B pin B28
8	G-Y	turn RH out	w_turn_f8 18 AWG RH front turn +	Red	EngineRoom-C toward RH front turn / clearance lamp F8 pin 3

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

J/B No.1 - LH kick panel junction block (3 of 3)

Factory box KEPT. We splice the factory leads of plugs 1F / 1H / 1I.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-relay-locations&page=3

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB

1I (from engine room main wire)



Housing / terminal PN: not matched; RM1022E 1P female
non-waterproof housings p.103-104 (confirm shape)
Source: tis1993-relay-locations p.3

1	B	J/B1 always-hot B+	w_pdb_jb1 6 AWG J/B1 main feed	Red	EngineRoom-C toward FB-POWER pin AMI OUT-5

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.


IE1 - engine room main wire to cowl wire joint (LH kick panel) (1 of 3)

Engine-room main REMOVED. We tap the cowl-side leads of IE1.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-wiring-routing-2&page=8

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

IE1 (both halves; cowl side = our taps)

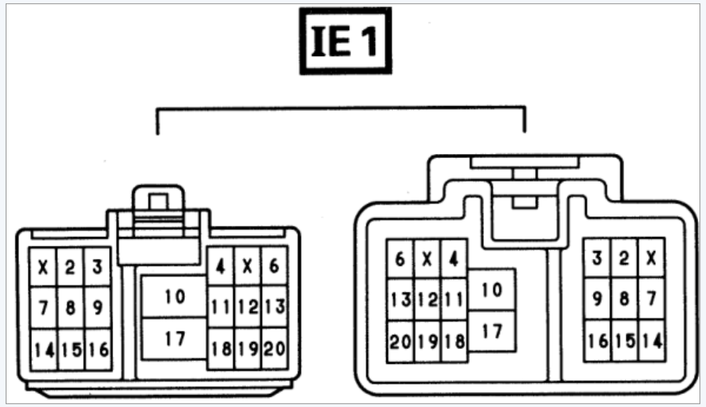

Housing / terminal PN: not matched; RM1022E 20P female
non-waterproof housings p.161-164 (confirm shape)
Source: tis1993-wiring-routing-2 p.8

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
2	R-Y	headlight relay coil line	w_head_coil_cp 18 AWG Headlight coil (-)	White	CabinPower toward splice sp_head_coil
3	W	RTR 30 A to retract relay	w_pmu_rtr 10 AWG Retract relay feed	Red	EngineRoom-C toward FB-POWER pin AMI OUT-2
6	L-W	park switch S	w_wip_park 14 AWG Wiper park sw	Yellow	EngineRoom-C toward Front wiper motor F9 pin 3
7	G-Y	RH retract motor pin 4	w_rtr_r3_4 12 AWG RH retract motor 4	Red	EngineRoom-C toward splice sp_rtr_r3_4
8	G-B	RH retract motor pin 2	w_rtr_r3_2 16 AWG RH retract motor 2	Red	EngineRoom-C toward RH retract motor R3 pin 2
9	G-Y	retract close limit	w_rtr_close 18 AWG Retract close limit	Yellow	EngineRoom-C toward splice sp_rtr_close
10	W	AM1 to ignition switch	w_pdb_am1 8 AWG AM1 feed to IE1	Red	EngineRoom-C toward FB-POWER pin AMI OUT-3
11	R-L	high-beam return	w_hl_high 14 AWG High-beam return	Red	EngineRoom-C toward splice sp_hl_high

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

IE1 - engine room main wire to cowl wire joint (LH kick panel) (2 of 3)


Engine-room main REMOVED. We tap the cowl-side leads of IE1.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-wiring-routing-2&page=8

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

PIN | FACTORY WIRE | FACTORY SIGNAL (FSM / EWD) | OUR WIRE (as on the harness drawing) | OUR COLOUR | HARNESS / LEG TO GRAB

IE1 (both halves; cowl side = our taps) (cont.)

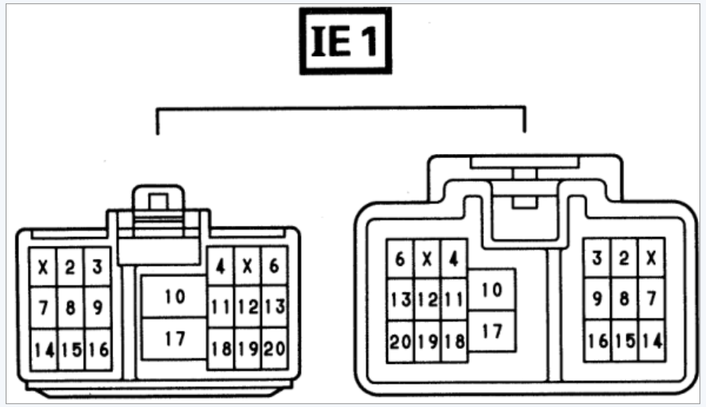

Housing / terminal PN: not matched; RM1022E 20P female
non-waterproof housings p.161-164 (confirm shape)
Source: tis1993-wiring-routing-2 p.8

12	W	hazard	w_haz_cp 14 AWG Hazard feed	Red		CabinPower toward splice sp_hz
13	L-B	wiper LOW	w_wip_lo 14 AWG Wiper LOW	Red		EngineRoom-C toward Front wiper motor F9 pin 2
14	G	LH retract motor pin 4	w_rtr_r2_4 12 AWG LH retract motor 4	Red		EngineRoom-C toward splice sp_rtr_r2_4
15	G-O	LH retract motor pin 2	w_rtr_r2_2 16 AWG LH retract motor 2	Red		EngineRoom-C toward LH retract motor R2 pin 2
16	G-W	retract open limit	w_rtr_open 18 AWG Retract open limit	Yellow		EngineRoom-C toward splice sp_rtr_open
17	B-R	AM2 to ignition switch	w_pdb_am2 10 AWG AM2 feed to IE1	Red		EngineRoom-C toward FB-POWER pin AMI OUT-4
18	R-W	low-beam return	w_hl_low 14 AWG Low-beam return	Red		EngineRoom-C toward splice sp_hl_low
19	G	horn switch line	w_horn_85_cp 18 AWG Horn relay coil (-)	White		CabinPower toward LOGIC M3 pin 85

Spare | CAN | Shield drain | +12 V power | Sensor signal | Output / actuator | Ground / sensor return | Sensor supply +5/+8 V | Coil trigger | Injector drive | Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

IE1 - engine room main wire to cowl wire joint (LH kick panel) (3 of 3)


Engine-room main REMOVED. We tap the cowl-side leads of IE1.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-wiring-routing-2&page=8

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB

IE1 (both halves; cowl side = our taps) (cont.)

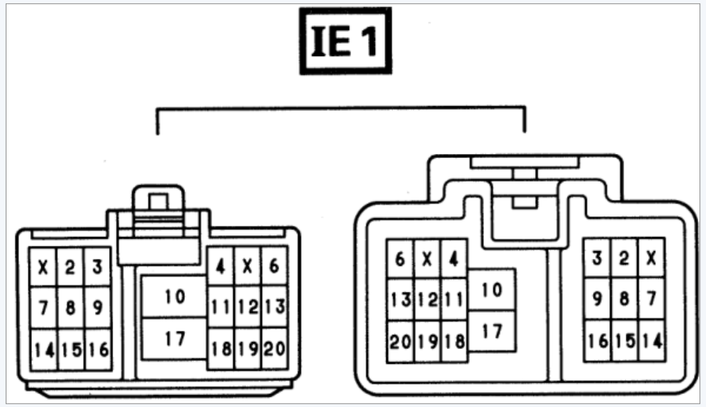

Housing / terminal PN: not matched; RM1022E 20P female
non-waterproof housings p.161-164 (confirm shape)
Source: tis1993-wiring-routing-2 p.8

20	L-O	wiper HIGH	w_wip_hi 14 AWG Wiper HIGH	Red		EngineRoom-C toward Front wiper motor F9 pin 1	

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.


R/B No.2 - LH kick panel relay block position

Relay block REMOVED; its factory leads stay in the loom.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-relay-locations&page=9

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

Power main relay socket (R/B No.2)

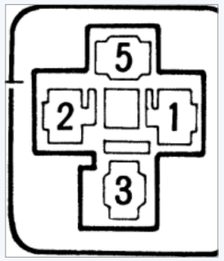

Housing / terminal PN: not matched
Source: tis1993-relay-locations p.9

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	W-G	power windows	w_rb2 10 AWG Power window feed	Red	EngineRoom-C toward POWER R6 pin 30
2	L-Y	GAUGE 15A, ignition on	w_pwr_86_cp 18 AWG Power relay coil+	Red	CabinPower toward POWER R6 pin 86
2	W-L	door lock hot	w_rb2_wl 14 AWG Door lock feed	Red	EngineRoom-C toward FB-LOGIC pin BUS1-6

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

R/B No.4 - RH kick panel relay block position (1 of 2)

Relay block REMOVED; its factory leads stay in the loom.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-relay-locations&page=10

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

Heater relay socket (R/B No.4)



Housing / terminal PN: not matched
Source: tis1993-relay-locations p.10

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	L-W	A/C amp HR	w_htr_85_cp 18 AWG Heater relay coil-	White	CabinPower toward POWER R1 pin 85
3	R-L	coil + feed	w_htr_86_cp 18 AWG Heater relay coil+	Red	CabinPower toward POWER R1 pin 86

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

R/B No.4 - RH kick panel relay block position (2 of 2)


Relay block REMOVED; its factory leads stay in the loom.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-relay-locations&page=10

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB

Starter relay socket (R/B No.4)

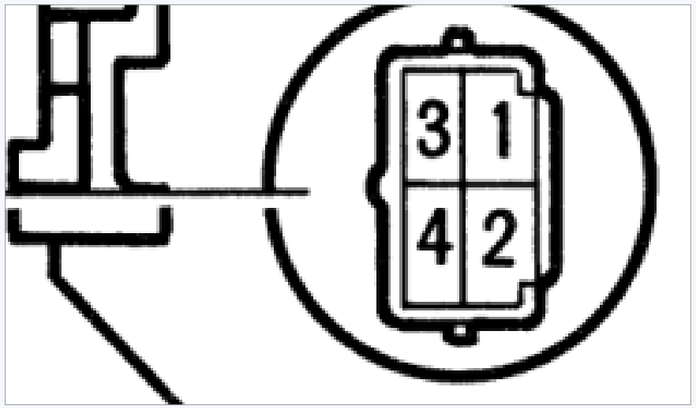

Housing / terminal PN: not matched
Source: tis1993-relay-locations p.10

1	B-W	start	w_start_in_cp 20 AWG Start sw ST1 feed	Yellow	CabinPower toward FB-LOGIC pin BUS2-13 IN

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

J/B No.3 - behind the combination meter


OEM junction block KEPT; we tap plug 3B.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-relay-locations&page=8

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB

3B (J/B No.3 plug, cowl wire)

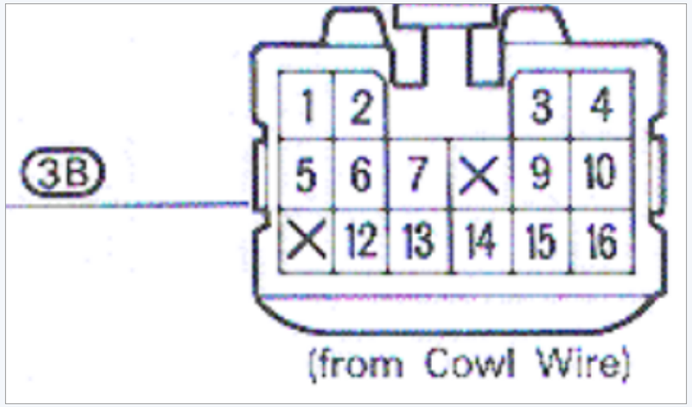

Housing / terminal PN: not matched; RM1022E 16P female
non-waterproof housings p.146-153 (confirm shape)
Source: tis1993-relay-locations p.8

9	R-L	**GAUGE 15A, ignition on (Mitchell 1993 Fig. 16)**	**w_rev_gauge_cp 16 AWG** GAUGE 15A feed	Red		**CabinPower** toward splice sp_rev_gauge	

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

IG2 - engine wire to cowl wire joint (under the ECU)


Engine-side wire removed. We tap the cowl-side leads of IG2.

Repair-manual app, location page: http://127.0.0.1:8765/electrical/index.html#open=tis1993-wiring-routing-2&page=8

start the app server first: python celica-manual/build/app.py --server-only --port 8765 (run in C:/projects/active/st185-celica-repair-manual)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB

IG2 (both halves, dark gray)

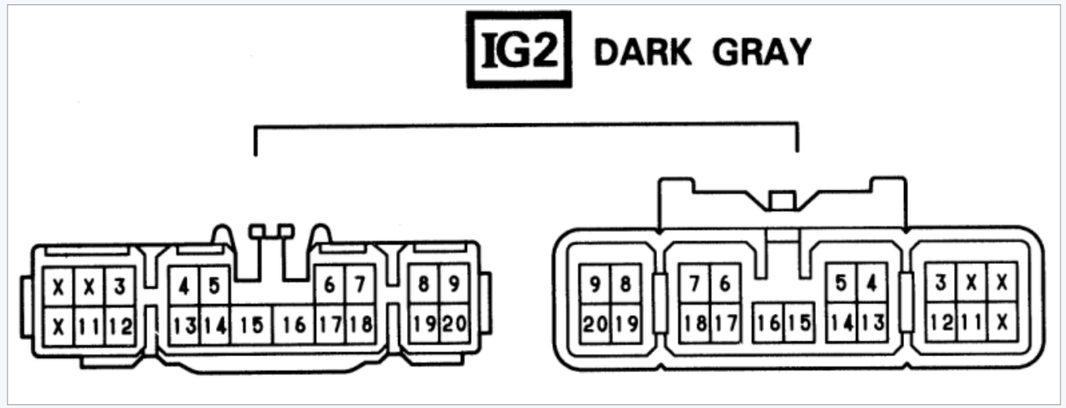

Housing / terminal PN: not matched; RM1022E 20P female
non-waterproof housings p.161-164 (confirm shape)
Source: tis1993-wiring-routing-2 p.8

15	B-R	ECU-IG 15 A feed	w_ig_ks_in 16 AWG Alt IG to kill sw	Red	HeavyDC toward KILL SWITCH pin ALT 1
16	Y	charge lamp	w_alt_l_c 20 AWG Alt L charge lamp	White	EngineRoom-C toward ALT PLUG G2 pin 2

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

OEM device plugs we tap (1 of 6)

Factory component connectors (the leads stay on the car). Source pages: 1993 EWD wiring routing, in the repair-manual app.

A18 A/C Control Assembly

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.5 (printed 32)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
11	G-Y	A/C cancel (ACT)	w_ac_kill 20 AWG A/C cancel (ACT)	White	ECU-cabin A/C amp branch (behind dash)
13	Y-R	A/C pressure sw out	w_ac_psw_sw 20 AWG A/C pressure sw out	Yellow	ECU-cabin A/C amp branch (behind dash)

A4 A/C Magnetic Clutch and...

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.1 (printed 28)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
4	B-W	magnet clutch +	w_acc_clutch 16 AWG A/C clutch +12 V	Red	EngineRoom-C toward LOGIC M5 pin 87

A5 A/C Pressure SW or Short Pin

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.1 (printed 28)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	V-R	+12 V feed	w_acp_1 18 AWG A/C press sw feed	Yellow	EngineRoom-C toward FB-POWER pin ACPS
4	Y-R	A/C pressure sw out	w_ac_psw_in 20 AWG A/C pressure sw out	Yellow	ECU-cabin A/C amp branch (behind dash)

B4 Blower Motor

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.5 (printed 32)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
2	B	blower +	w_rb4_cp 8 AWG Blower motor +	Red	CabinPower toward splice sp_htr87

C11 (cluster-side plug, code check)

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.5 (printed 32)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
2	G-B	turn LH indicator	w_tl_a 20 AWG Turn LH LED +	Red	ClusterLED toward Turn LH LED
11	G-Y	turn RH indicator	w_tr_a 20 AWG Turn RH LED +	Red	ClusterLED toward Turn RH LED
12	R-L	high beam indicator feed	w_hb_a 20 AWG High beam LED +	Red	ClusterLED toward High beam LED

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

OEM device plugs we tap (2 of 6)

Factory component connectors (the leads stay on the car). Source pages: 1993 EWD wiring routing, in the repair-manual app.

C11 Clutch Start SW

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.5 (printed 32)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	B	clutch pedal switch	w_sw5 20 AWG Clutch pedal sw	Yellow	CSB3 toward CSB3 pin 20

C12 Combination Meter

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.5 (printed 32)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	R-G	park brake switch ground	w_pk_k 20 AWG Park brake sw (-)	Yellow	ClusterLED toward Park brake LED
8	Y	alternator L, charge lamp drive	w_chg_k 20 AWG Charge lamp drive	White	ClusterLED toward Charge LED
9	B-O	IG +12 V feed for the LEDs	w_ig_tap 20 AWG LED IG +12 V	Red	ClusterLED toward splice sp_led_12v

C14 Combination Meter

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.5 (printed 32)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
5	W	cruise ladder	w_an2 20 AWG Cruise ladder	Yellow	CSB3 toward splice sp_cruise_ladder
15	Y-B	cruise MAIN on	w_sw2 20 AWG Cruise MAIN on	Yellow	CSB3 toward CSB3 pin 17
17	BR	stalk ground	w_cru_gnd 20 AWG Cruise stalk ground	Blue	CSB3 toward splice sp_csb_gnd

F7 Front Turn Signal Light and...

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.1 (printed 28)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G	clearance +	w_clr_f7 16 AWG LH clearance +	Red	EngineRoom-C toward splice sp_clr
2	W-B	ground	w_f7_gnd 16 AWG LH front lamp gnd	Black	EngineRoom-C toward Ground stud EB, LH front fender
3	G-B	turn LH out	w_turn_f7 18 AWG LH front turn +	Red	EngineRoom-C toward OEM J/B No.1 1H pin 4

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

OEM device plugs we tap (3 of 6)

Factory component connectors (the leads stay on the car). Source pages: 1993 EWD wiring routing, in the repair-manual app.

F8 Front Turn Signal Light and...

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.1 (printed 28)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G	clearance +	w_clr_f8 16 AWG RH clearance +	Red	EngineRoom-C toward splice sp_clr
2	W-B	ground	w_f8_gnd 16 AWG RH front lamp gnd	Black	EngineRoom-C toward Ground stud EA, RH front fender
3	G-Y	turn RH out	w_turn_f8 18 AWG RH front turn +	Red	EngineRoom-C toward OEM J/B No.1 1H pin 8

F9 Front Wiper Motor

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.1 (printed 28)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	L-O	wiper HIGH	w_wip_hi 14 AWG Wiper HIGH	Red	EngineRoom-C toward OEM IE1 pin 20
2	L-B	wiper LOW	w_wip_lo 14 AWG Wiper LOW	Red	EngineRoom-C toward OEM IE1 pin 13
3	L-W	park switch S	w_wip_park 14 AWG Wiper park sw	Yellow	EngineRoom-C toward OEM IE1 pin 6
4	L	WIPER 20 A out	w_wip_b 14 AWG Wiper +B	Red	EngineRoom-C toward OEM J/B No.1 1H pin 5

H1 Headlight LH

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.2 (printed 29)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	R-L	high-beam return	w_hl_high_h1 16 AWG LH high-beam return	Red	EngineRoom-C toward splice sp_hl_high
2	R-W	low-beam return	w_hl_low_h1 16 AWG LH low-beam return	Red	EngineRoom-C toward splice sp_hl_low
3	R	+12 V feed	w_pmu_hl 14 AWG Head LH +12 V out	Red	EngineRoom-C toward LOGIC M1 pin 87

H2 Headlight RH

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.2 (printed 29)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	R-L	high-beam return	w_hl_high_h2 16 AWG RH high-beam return	Red	EngineRoom-C toward splice sp_hl_high
2	R-W	low-beam return	w_hl_low_h2 16 AWG RH low-beam return	Red	EngineRoom-C toward splice sp_hl_low
3	R-Y	+12 V feed	w_pmu_hr 14 AWG Head RH +12 V out	Red	EngineRoom-C toward LOGIC M2 pin 87

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

OEM device plugs we tap (4 of 6)

Factory component connectors (the leads stay on the car). Source pages: 1993 EWD wiring routing, in the repair-manual app.

H6 High Mount Stop Light

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.7 (printed 34)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G-W	HMSL +	w_rl_stop_h6_c1 16 AWG High stop lamp +	Red	RearLights toward splice sp_rl_stop
2	W-B	HMSL ground	w_rl_gnd_h6_c2 16 AWG High stop lamp gnd	Black	RearLights toward splice sp_rl_gnd

L1 License Plate Light

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.8 (printed 35)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G	licence light +	w_rl_tail_l1_c1 16 AWG Licence light +	Red	RearLights toward splice sp_rl_tail
2	W-B	licence light ground	w_rl_gnd_l1_c2 16 AWG Licence light gnd	Black	RearLights toward splice sp_rl_gnd

R11 Rear Combination Light LH

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.8 (printed 35)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G-W	stop LH	w_rl_stop_r11_c1 16 AWG Stop LH +	Red	RearLights toward splice sp_rl_stop
2	G	tail LH	w_rl_tail_r11_c2 16 AWG Tail LH +	Red	RearLights toward splice sp_rl_tail
3	G	rear side marker LH	w_rl_tail_r11_c3 16 AWG Rear marker LH +	Red	RearLights toward splice sp_rl_tail
4	R-B	back-up LH (Mitchell 1993 Fig. 16)	w_rl_rev_r11_c4 16 AWG Back-up LH +	Red	RearLights toward splice sp_rl_rev
5	W-B	lamp ground LH	w_rl_gnd_r11_c5 16 AWG Rear lamp LH gnd	Black	RearLights toward splice sp_rl_gnd
6	G-B	turn LH out	w_rl_turn_l 18 AWG Turn LH rear +	Red	RearLights toward OEM J/B 1 plug 1F pin 3

R12 Rear Combination Light RH

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.8 (printed 35)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G-W	stop RH	w_rl_stop_r12_c1 16 AWG Stop RH +	Red	RearLights toward splice sp_rl_stop
2	G	tail RH	w_rl_tail_r12_c2 16 AWG Tail RH +	Red	RearLights toward splice sp_rl_tail
3	G	rear side marker RH	w_rl_tail_r12_c3 16 AWG Rear marker RH +	Red	RearLights toward splice sp_rl_tail

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

OEM device plugs we tap (5 of 6)

Factory component connectors (the leads stay on the car). Source pages: 1993 EWD wiring routing, in the repair-manual app.

R12 Rear Combination Light RH (cont

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.8 (printed 35)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
4	R-B	back-up RH (Mitchell 1993 Fig. 16)	w_rl_rev_r12_c4 16 AWG Back-up RH +	Red	RearLights toward splice sp_rl_rev
5	W-B	lamp ground RH	w_rl_gnd_r12_c5 16 AWG Rear lamp RH gnd	Black	RearLights toward splice sp_rl_gnd
6	G-Y	turn RH out	w_rl_turn_r 18 AWG Turn RH rear +	Red	RearLights toward OEM J/B 1 plug 1F pin 2

R2 Retract Motor LH

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.2 (printed 29)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G-W	open (UP) limit	w_rtr_open_r2 18 AWG Retract open limit	Yellow	EngineRoom-C toward splice sp_rtr_open
2	G-O	LH retract motor pin 2	w_rtr_r2_2 16 AWG LH retract motor 2	Red	EngineRoom-C toward OEM IE1 pin 15
3	G-Y	close (DOWN) limit	w_rtr_close_r2 18 AWG Retract close limit	Yellow	EngineRoom-C toward splice sp_rtr_close
4	G	motor feed from IE1 pin 14	w_rtr_r2_4_p 16 AWG LH retract motor 4	Red	EngineRoom-C toward splice sp_rtr_r2_4
5	W-B	ground	w_rtr_gnd_r2 16 AWG LH retract ground	Black	EngineRoom-C toward splice sp_rtr_gnd_r2

R3 Retract Motor RH

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.2 (printed 29)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G-W	open (UP) limit	w_rtr_open_r3 18 AWG Retract open limit	Yellow	EngineRoom-C toward splice sp_rtr_open
2	G-B	RH retract motor pin 2	w_rtr_r3_2 16 AWG RH retract motor 2	Red	EngineRoom-C toward OEM IE1 pin 8
3	G-Y	close (DOWN) limit	w_rtr_close_r3 18 AWG Retract close limit	Yellow	EngineRoom-C toward splice sp_rtr_close
4	G-Y	motor feed from IE1 pin 7	w_rtr_r3_4_p 16 AWG RH retract motor 4	Red	EngineRoom-C toward splice sp_rtr_r3_4
5	W-B	ground	w_rtr_gnd_r3 16 AWG RH retract ground	Black	EngineRoom-C toward splice sp_rtr_gnd_r3

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

OEM device plugs we tap (6 of 6)

Factory component connectors (the leads stay on the car). Source pages: 1993 EWD wiring routing, in the repair-manual app.

S9 Stop Light SW (w/o Cruise Control)

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.6 (printed 33)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	G-W	brake on, +12 V	w_sw6 16 AWG Brake on +12 V	Yellow	CSB3 toward OPTO8 pin IN1
1	G-W	stop lamp feed	w_rl_stop 16 AWG Stop lamp feed	Red	RearLights toward splice sp_rl_stop

W1 Washer Motor

No connector face view in the repair-manual app (the EWD shows only the part position)

Housing / terminal PN: not matched
Source: tis1993-wiring-routing p.2 (printed 29)

PIN	FACTORY WIRE	FACTORY SIGNAL (FSM / EWD)	OUR WIRE (as on the harness drawing)	OUR COLOUR	HARNESS / LEG TO GRAB
1	L-R	switch side	w_wash_neg 14 AWG Washer switch side	Red	EngineRoom-C toward OEM washer W1 pin 1 cowl lead
2	L	+12 V	w_wash_pos 14 AWG Washer motor +12 V	Red	EngineRoom-C toward Washer motor W1 pin 2

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.

REAR

IX-FUEL inline to fuel sender (trunk LH)

DT06-2S | RearFuel | 2 cavities | numbered grid (true count)

1	Fuel level signal
2	Fuel level ground

mates ix_fuel_r on ECU-cabin

FUEL LVL

DT04-2P | RearFuel | 2 cavities | numbered grid (true count)

1	Fuel level signal
2	Fuel level ground

FUEL PUMP

(pump pigtail - Walbro F90000295) | RearFuel | 2 cavities | numbered grid (true count)

1	Fuel pump +12 V
2	Fuel pump ground

WSS RL

DT06-2S-CE05 | WheelSpeed-Rear | 2 cavities | numbered grid (true count)

1	RL wheel speed +
2	RL wheel speed -

WSS RR

DT06-2S-CE05 | WheelSpeed-Rear | 2 cavities | numbered grid (true count)

1	RR wheel speed +
2	RR wheel speed -

IX-WS-R

DT04-6P | WheelSpeed-Rear | 6 cavities | numbered grid (true count)

1	VRC-R +5V
2	VRC-R GND
3	Rear left wheel spd
4	Rear right wheel spd
5	WS-R screen drain
6	

mates ix_ws_rear_p on ECU-cabin

VRC-R IN

LP-16-J05PE-02-001 | WheelSpeed-Rear | 5 cavities | numbered grid (true count)

1	RL wheel speed +
2	RL wheel speed -
3	Rear sensor shields
4	RR wheel speed +
5	RR wheel speed -

VRC-R OUT

LP-16-J05PE-02-001 | WheelSpeed-Rear | 5 cavities | numbered grid (true count)

1	VRC-R +5V
2	VRC-R GND
3	Rear left wheel spd
4	Rear right wheel spd
5	WS-R screen drain

Spare · CAN · Shield drain · +12 V power · Sensor signal · Output / actuator · Ground / sensor return · Sensor supply +5/+8 V · Coil trigger · Injector drive · Other / lighting / misc

Fill = function (keyword rule on the wire-list description). Circle size = contact size (DRB102 only). Only the DRB102 is its real maker insert face; every other connector is a numbered grid with the true cavity count (pin order, not the maker face view). Wire lists are the truth. Spare = no wire on that cavity.