
ST185 FUSE BOX ASSEMBLIES - WIRING BLOCK DIAGRAM

POWER box + LOGIC box (glove box) and battery relay block (trunk). Sources: sot/channels.csv, cad/fusebox/src/spec.py, docs/harness/interfaces.json.

Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py - do not edit by hand.

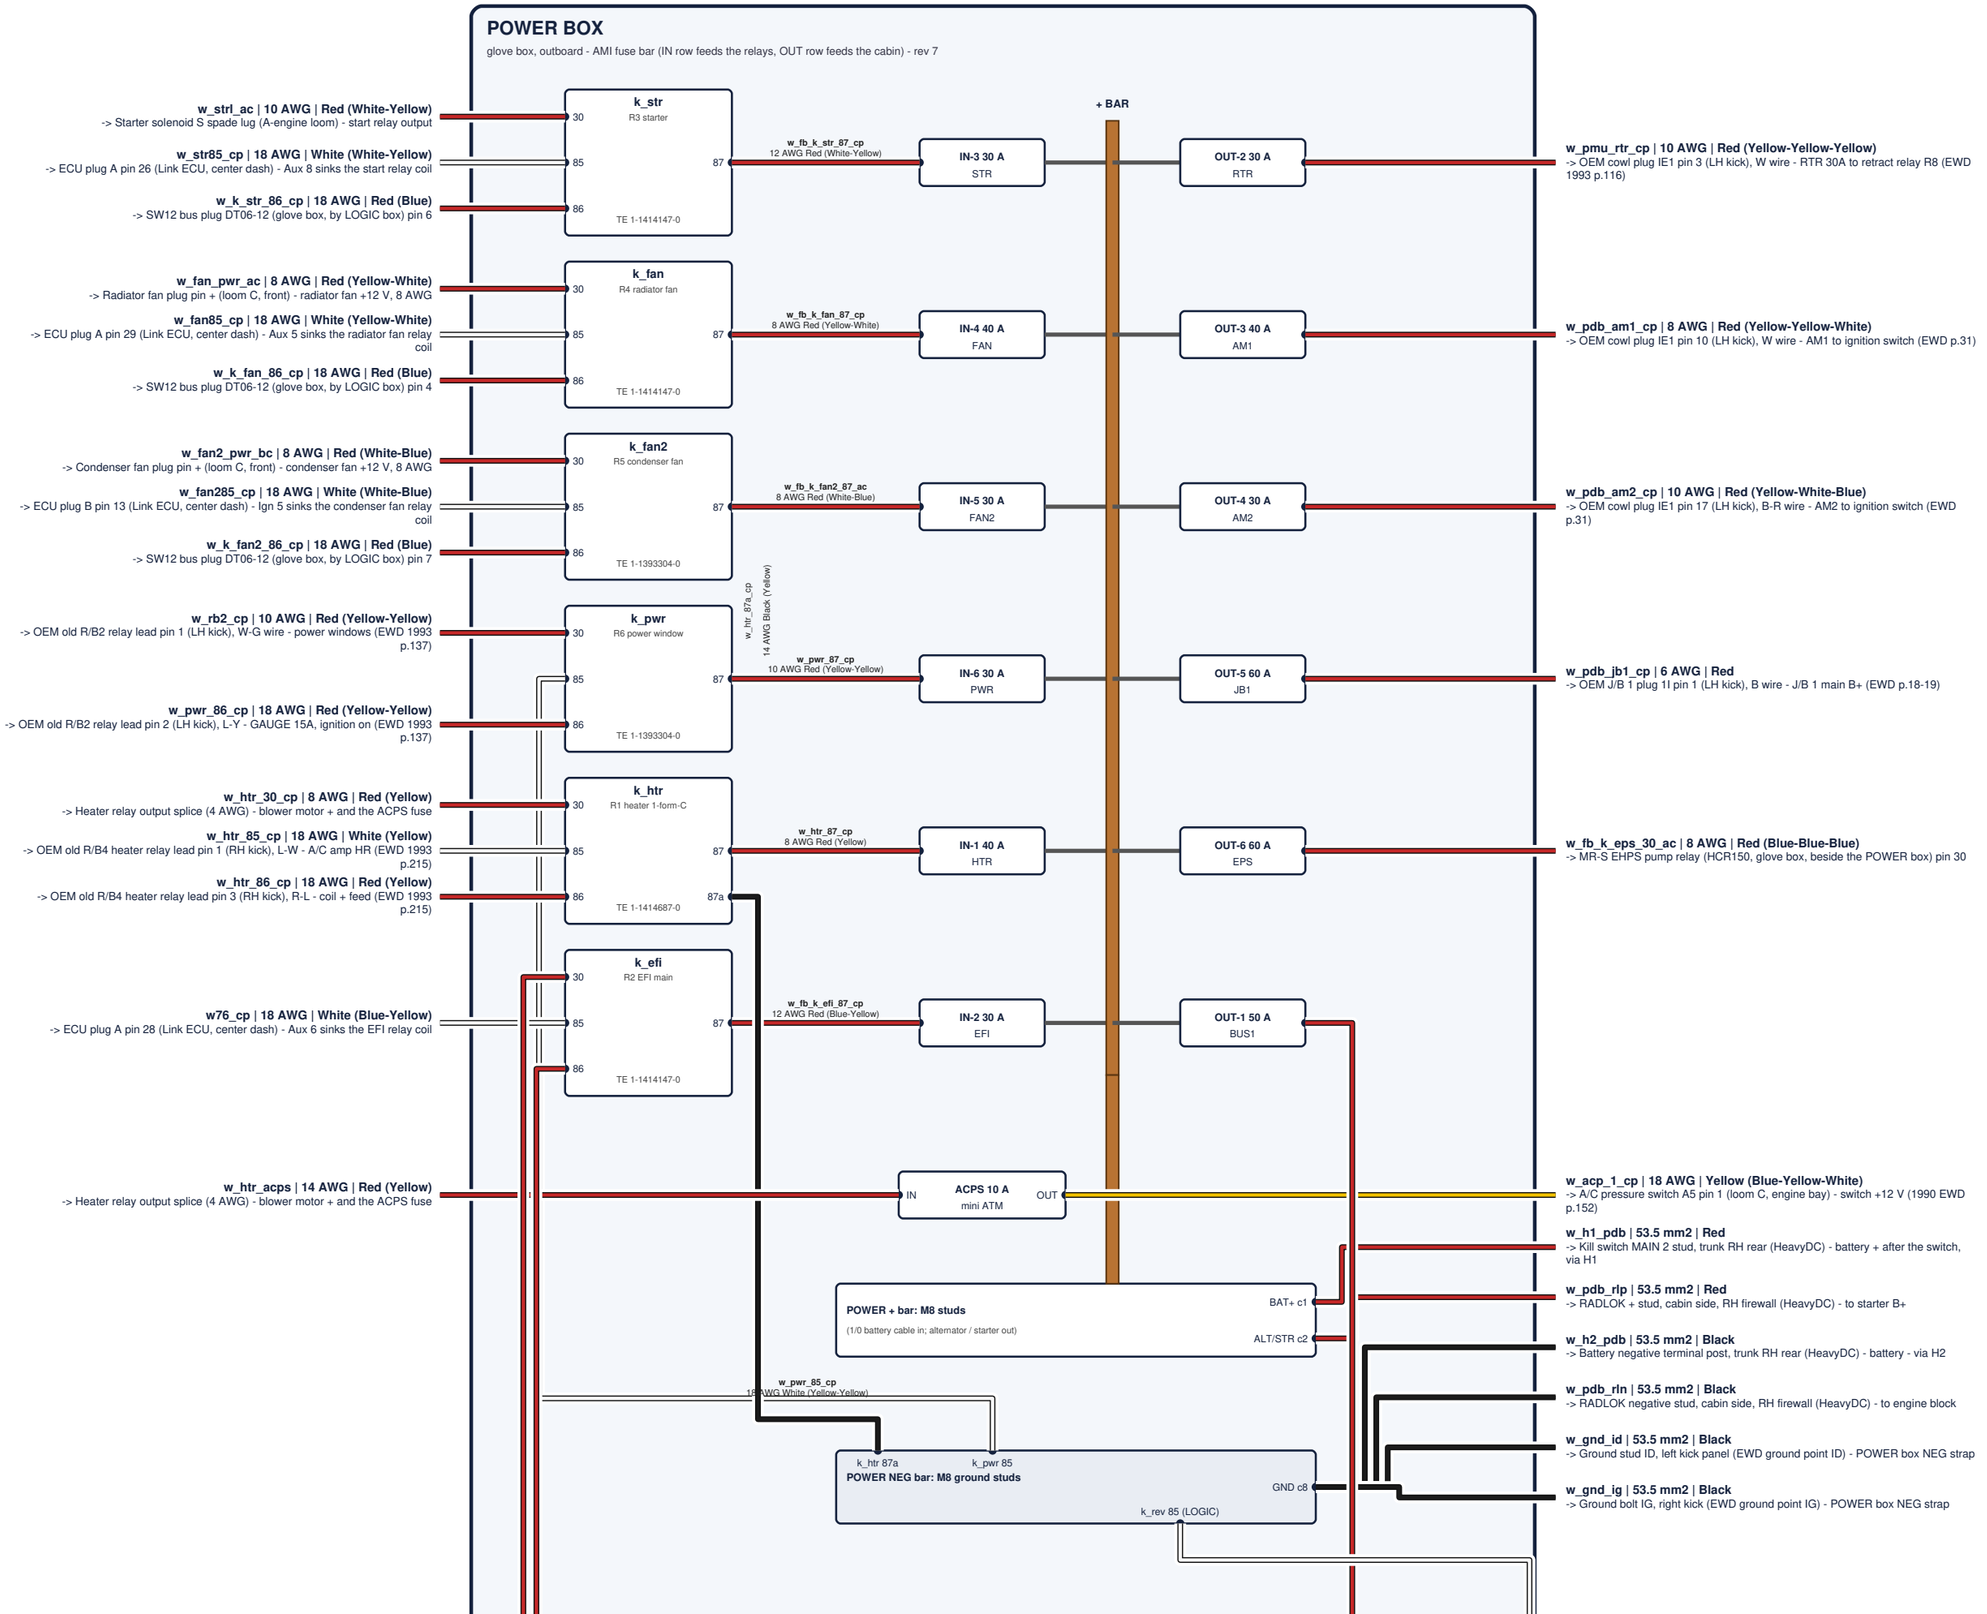

10 AWG Red (Blue-Yellow)

LOGIC BOX

glove box lidboard - Bus 1 / Bus 2 mini-fuse strips and 7 micro relays - rev 7

w_k_efi_86_cp
18 AWG Red (Blue-Yellow)

BUS1-1 5 A
EFI86

w_hl_85_cp | 18 AWG | White (Blue-Yellow-Blue)
-> Headlight coil splice - HEAD LH and RH relay coils to cowl plug IE1 pin 2

w_pmu_hl_cp | 14 AWG | Red (Blue-Blue-Yellow)
-> LH headlight plug H1 pin 3 (loom C, LH front) - headlight LH +12 V (EWD 1993 p.116)

k_hl
HEAD LH
TE 5-1393292-8
85
87
30
86

w_hl_30_cp
14 AWG Red (Blue-Blue-Yellow)
w_hl_cp
14 AWG Red (Blue-Blue-Yellow)
sp_hl
w_hl_86_cp
16 AWG Red (Blue-Blue-Yellow)

BUS1-2 15 A
HL

w_hr_85_cp | 18 AWG | White (Blue-Yellow-Blue)
-> Headlight coil splice - HEAD LH and RH relay coils to cowl plug IE1 pin 2

w_pmu_hr_cp | 14 AWG | Red (Blue-Blue-White)
-> RH headlight plug H2 pin 3 (loom C, RH front) - headlight RH +12 V (EWD 1993 p.116)

k_hr
HEAD RH
TE 5-1393292-8
85
87
30
86

w_hr_30_cp
14 AWG Red (Blue-Blue-White)
w_hr_cp
14 AWG Red (Blue-Blue-White)
sp_hr
w_hr_86_cp
16 AWG Red (Blue-Blue-White)

BUS1-3 15 A
HR

w81_cp | 20 AWG | White (White-White)
-> ECU plug A pin 20 (Link ECU, center dash) - Aux 2 sinks the ETB relay coil

w_k_etb_86_cp | 20 AWG | Red (Blue)
-> SW12 bus plug DT06-12 (glove box, by LOGIC box) pin 5

w82_ac | 18 AWG | Red (White-White)
-> ECU plug B pin 5 (Link ECU, center dash) - ETB motor supply from the ETB relay

k_etb
ETB power
TE 4-1904124-2
85
86
87
30

w_fb_k_etb_30_cp
16 AWG Red (White-White)

BUS1-10 10 A
ETB

w_hz_cp | 14 AWG | Red (Blue-Blue)
-> HAZ-HORN splice - HZ 15A fuse to the hazard feed and the horn relay

BUS1-4 15 A
HZ

w_pmu_dome_cp | 14 AWG | Red (Yellow-Blue-White)
-> OEM J/B 1 plug 1H pin 2 (LH kick), L-Y wire - DOME 20A feed (EWD 1993 p.132)

BUS1-5 20 A
DM

w_rb2_wl_cp | 14 AWG | Red (Yellow-Yellow-Blue)
-> OEM old R/B2 relay lead pin 2 (LH kick), W-L wire - door lock + tilt-away (EWD p.137)

BUS1-6 15 A
WL

w_at_12v_tie_cp | 20 AWG | Red (Yellow-White-Yellow)
-> Alarm +12 V splice (AntiTheft loom, center dash) - alarm pin 1 constant +12 V

BUS1-7 5 A
ALM

w_at_12v_shk_tie_cp | 20 AWG | Red (Yellow-White-White)
-> Shock sensor +12 V splice (AntiTheft loom, ECU area) - shock sensor pin A

BUS1-8 2 A
ALMS

w_alt_s_cp | 20 AWG | White (White-Blue-Yellow)
-> Alternator plug G2 pin 1 (engine bay, via loom C) - S battery sense (EWD 1993 p.74-75)

BUS1-9 2 A
ALTS

BUS 1 (permanent) strip

BUS2-8 10 A
ACC

w_fb_k_acc_30_cp
16 AWG Red (Yellow-Blue)

BUS2-7 7.5 A
EPSEN

w_fb_k_eps_en_30_cp
18 AWG Red (Blue-White)

k_eps_en_87_cp
18 AWG Red (Blue-White)

BUS2-12 7.5 A
MRS
IN
OUT

BUS2-1 7.5 A
LAM

BUS2-2 7.5 A
SW12

BUS2-3 15 A
COP

BUS2-4 15 A
INJ

BUS2-5 5 A
CSB

BUS2-6 15 A
DEV

BUS2-9 2 A
ALMIG

BUS2-13 2 A
B30
IN
OUT

BUS 2 (switched, k_efi 30) strip

k_rev
REVERSE
TE 6-1419137-4
30
85
86
87

w_rev_85_cp
20 AWG White (White)

w_rev_30_cp | 16 AWG | Red (White)
-> GAUGE 15A splice - J/B 3 feed to reverse relay pin 30 and the back-up switch

w_rev_86_cp | 16 AWG | Red (White)
-> Reverse switch splice (B-cabin loom) - back-up switch B1 pin 1, +12 V in reverse

w_rev_87_cp | 16 AWG | Red (White)
-> Back-up lamp splice (RearLights loom, rear) - R11 and R12 pin 4 back-up lamps

k_horn
HORN
TE 4-1904124-3
30
85
86
87

w_horn_30_cp | 16 AWG | Red (Blue-Blue)
-> HAZ-HORN splice - HZ 15A fuse to the hazard feed and the horn relay

w_horn_85_cp | 18 AWG | White (Blue-Blue)
-> OEM cowl plug IE1 pin 19 (LH kick), G wire - horn switch line (EWD 1993 p.185)

w_horn_86_cp | 16 AWG | Red (Blue-Blue)
-> HAZ-HORN splice - HZ 15A fuse to the hazard feed and the horn relay

w_pmu_horn_cp | 14 AWG | Red (Blue-Blue)
-> Horn splice (loom C, front) - horn relay output to horns H3 and H4 pin 1

k_acc
A/C clutch
TE 6-1419137-4
85
86
87
30

w_acc_trig_cp | 18 AWG | White (Yellow-Blue)
-> ECU plug B pin 10 (Link ECU, center dash) - Ign 8 sinks the A/C clutch relay coil

w_acc86_cp | 18 AWG | Red (Yellow-Blue)
-> A/C pressure switch splice (A-cabin loom) - switch A5 pin 4 output to the clutch relay

w_acc_clutch_cp | 16 AWG | Red (Yellow-Blue)
-> A/C magnet clutch A4 pin 4 (loom C, compressor) - clutch +12 V (1990 EWD p.152)

k_eps_en
EPS enable
TE 6-1419137-4
85
86
30
87

w_eps_trig_cp | 18 AWG | White (Blue-White)
-> ECU plug B pin 12 (Link ECU, center dash) - Ign 6 sinks the EPS enable relay coil

w_k_eps_en_86_cp | 18 AWG | Red (Blue)
-> SW12 bus plug DT06-12 (glove box, by LOGIC box) pin 9

w_fb_mrs_en_cp | 20 AWG | Red (Blue-White)
-> Bulkhead A pin 42 (DRB102, RH firewall) - EHPS pump logic enable (pump pin C1)

w_lam12_cp | 14 AWG | Red (Blue-White-White)
-> Bulkhead B pin 95 (DRB102, RH firewall) - CAN-Lambda +12 V

w_cp_sw12_in | 16 AWG | Red (Blue)
-> SW12 bus plug DT06-12 (glove box, by LOGIC box) pin 1

w_cop_pwr_c_ac | 14 AWG | Red (Blue-White-Yellow)
-> Bulkhead A pin 2 (DRB102, RH firewall) - COP coil +12 V rail (COP 15A)

w_inj_pwr_c_ac | 14 AWG | Red (Blue-White-Blue)
-> Bulkhead A pin 1 (DRB102, RH firewall) - injector +12 V rail (INJ 15A)

w_csb12_cp | 20 AWG | Red (Yellow-Blue-Blue)
-> CSB3 plug pin 1 (CSB3 box under the cluster) - CSB3 +12 V switched


w_dev_cp | 16 AWG | Red (Yellow-Blue-Yellow)
-> Dash device +12 V splice (CAN loom) - center cluster and RealDash Pi +12 V

w_at_ig_tie_cp | 20 AWG | Red (White-Blue-Blue)
-> Alarm ignition splice (AntiTheft loom, center dash) - alarm pin 3 ignition sense

w_start_in_cp | 20 AWG | Yellow (Blue-Yellow-Yellow)
-> OEM starter relay socket R/B4 pin 1, B-W wire - ignition ST1 start request (EWD 1993 p.66)

w_start_cp | 20 AWG | Yellow (Blue-Yellow-Yellow)
-> ECU plug B pin 30 (Link ECU, center dash) - DI 7 start request

BATTERY RELAY BLOCK

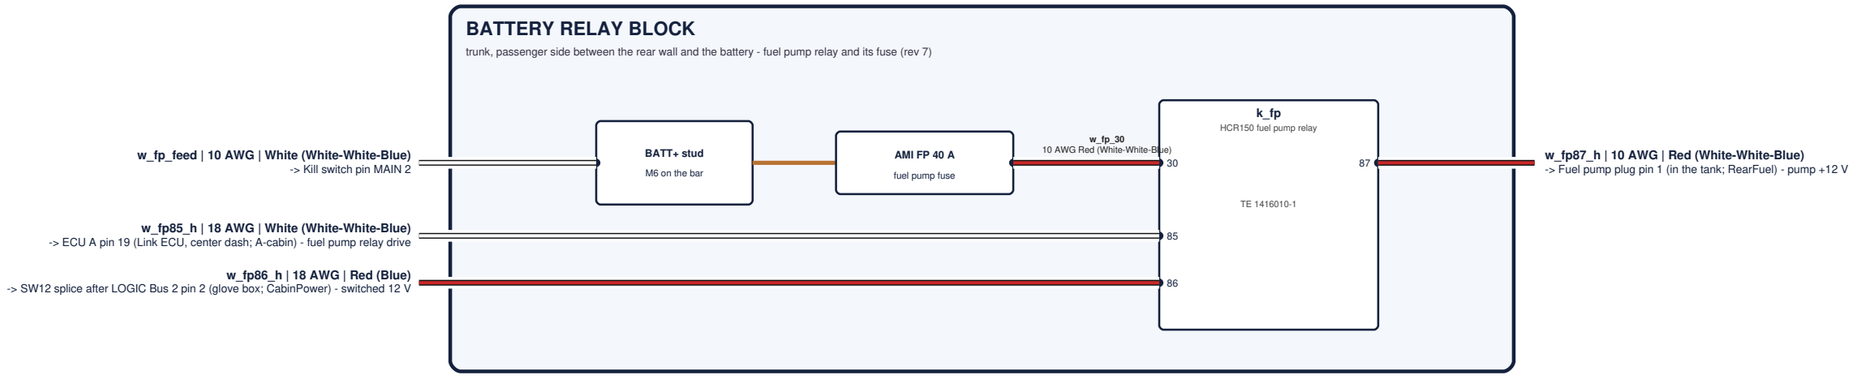

How to read

one wire, drawn in its insulation colour; the label is "wire id | gauge | colour (ident bands)"

A line that crosses another with a gap does not connect to it. A dot is a pin or stud. The brown bar is a copper bus bar / strip.

A wire that leaves the assembly ends at the stub; the text after "->" is where that far end lands (DECISIONS R156). Overhead block view, not to scale.

Rows are grouped for readable wires, not in physical order: every fuse and relay carries its cavity number (BUS1-n, BUS2-n, AMI IN-n, AMI OUT-n).