
LUMIERE

For the safety and the proper use of the product, please read the user manual

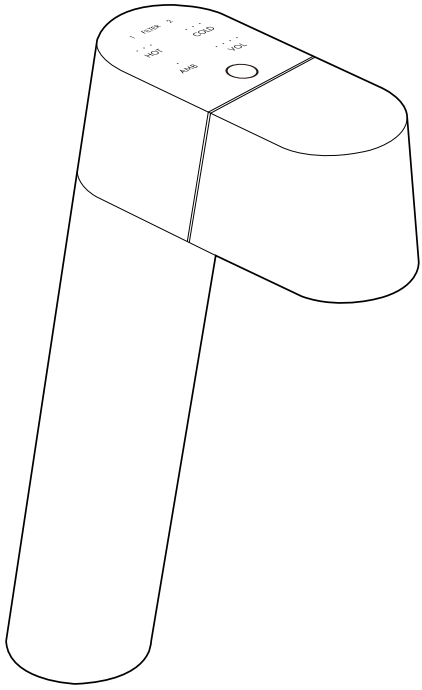

LIVINGCARE

For LIVINGCARE Customers

hank you for choosing our **LIVINGCARE** Water Purifier.
Please make sure to read this user manual for proper use and maintenance of the product.
If any issues arise during use, you can refer to the manual to resolve the problems.
The warranty is included in this manual, so please keep it in a safe place.

Contents

Information

|01| Contents
|02| Key features
|03| Precatuions for safety
|06| Menu and Display
|09| Faucet Flushing

Instructions

|10| Filters
|11| Water Purification Process
|12| How to Replace the Filter

Maintenance

|13| Maintenance and Inspection

Others

|14| Before Asking for Service
|15| Product Warranty

Key Features

Pre-set Temperatures

Choose from 7 temperatures, perfect for refreshing cold drinks, warm sips, or hot brews.

Tankless Design

No storage tank means a sleeker look and no stagnant water.

Touch Sensor

Dispense water with a simple tap on the touch sensor for instant access to your desired temperature.

Hot Water Safety Lock

Designed for your safety, this feature prevents accidental hot water dispensing, keeping you and your family safe.

Micro-plastic Removal

Equipped with the premium Electro-adsorptive technology Filtration System, removing micro-plastic and ensuring healthy minerals are maintained while purifying your water.

Filter Replacement Indicator

Automatically alerts you when it's time to replace filters, ensuring optimal performance at all times.

Minimised Standby Power Consumption

Save energy with reduced power usage in standby mode, making your purifier both efficient and eco-friendly.

Minimal & Modern Design

Designed with sleek, modern touch controls for effortless use and convenience, while also saving kitchen space with its compact size..

Precations for safety

Since this information is related to safety, please be sure to follow it carefully!

This information is provided to protect user safety and prevent property damage.
Please read the precautions carefully and use it correctly.

DANGER Failure to follow these instructions may result in serious injury or death.

WARNING Failure to follow these instructions may result in significant bodily injury or property damage.

CAUTION Failure to follow these instructions may result in minor bodily injury or property damage.

Power

DANGER Please use a dedicated wall outlet.
Do not use multiple electrical appliances in a single outlet at the same time.
There is a risk of electric shock and fire

DANGER Do not use damaged or loose power plugs or outlets.
There is a risk of electric shock and fire.

DANGER Do not excessively bend or damage the power cord by pressing it with heavy objects, and ensure it is not deformed. Be cautious to prevent damage caused by pets.
There is a risk of electric shock and fire.

DANGER Do not touch the power cord with wet hands.

WARNING Do not modify or connect the power cord arbitrarily.
If it is damaged, please contact the service center. This may cause a fire

WARNING If water gets into the power supply, unplug it and use it only after it is completely dry.
There is a risk of electric shock and fire.

WARNING Please insert the power cord fully into the outlet until it is secure and does not wobble.
This may cause a fire.

Precations for safety

lastallation

DANGER

Do not install near flammable materials, in places exposed to snow or rain,
or in areas with high humidity. There is a risk of electric shock and fire.

WARNING

Do not install in locations where the ambient temperature is below 5°C.
This may cause performance degradation and malfunction.

WARNING

Do not install on sloped or unstable surfaces with a distance of 10 cm from the wall.
This may cause performance degradation and failure.

WARNING

Do not supply water above 35°C to the product.
This may cause performance degradation and failure.

CAUTION

Connect the inlet and outlet hoses correctly. If the inlet and outlet hoses are reversed,
the device may not operate and could be damaged.

CAUTION

Install the drainage line to avoid kinks, pinching, or blockages,
and ensure that the lift height does not exceed 2 meters.
This may cause malfunctions and abnormal operation

lastallation

DANGER

Do not arbitrarily open, modify, or repair the product.
There is a risk of damage to the product and electric shock.

DANGER

Always unplug the power cord during cleaning. There is a risk of electric shock and fire.

DANGER

If water is leaking from inside the product or if there is water pooling around it,
unplug the power cord and turn off the water supply valve, then contact the service center.
There is a risk of electric shock.

DANGER


If you smell burning, see smoke, or hear unusual noises from the product,
unplug it and contact the service center. There is a risk of electric shock.

Precations for safety

Please be sure to check before use!

⚠ This product is designed for 220V~60Hz only.

Make sure to plug the power cord into a grounded 220V ~ 60Hz dedicated outlet. The water purifier will operate normally only when powered



Please open the raw water supply valve.

The water purifier will operate normally only when the source water is supplied.

Please check if the indicator light on the display panel is illuminated.

If the indicator lamp on the display is not lit, please check if there is a power outage or any other reason preventing power from being supplied.

Initial setup after powering on the water purifier.

When the power is first applied or restored after a power outage, the product will perform an initialization process for about 4 minutes to check its status and prepare for internal water filling.

Filter cleaning after installing the water purifier.

After the initial installation, use the filter cleaning function (long press the Ambient icon for 5 seconds) to clean the filter before use. During the operation of the filter cleaning function, the corresponding filter lamp will flash in the order of red > orange > green, and input on the touch pad will not be accepted. The filter cleaning process takes about 10 minutes, and upon completion, the lamp will light up green.

Filter replacement notification.


If the status indicator lamp for the filter changes to red and the alert is activated,
please replace the filter accordingly.
Using a filter that has reached the end of its lifespan will degrade purification performance.

Menu and Display


Cleaning the water outlet in response to the "Water Outlet Cleaning Alert" will help you keep it even cleaner.

Faucet

[FRONT] [SIDE] [TOP]

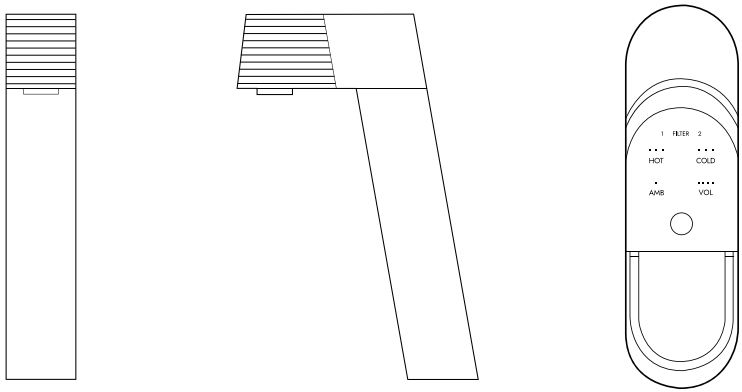


Body

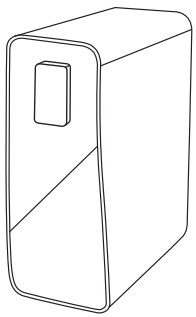


Item Built in Water Purifier	**Model** UCHP-01	**Heating Method** Metal Heater(Instant Heating)
Fitration Stage Carbon Block(1st) + Electro-Adsoptive(2nd) * Available Alkaline Filter	**Cooling Method** Thermoelectric Cooling(Air Forced Convection)	**Flow Speed(Average)** Cold(0.4 lpm) / Hot(0.5 lpm) / Ambeint(0.8 lpm)
Cold Water Temperature Cold water(10℃ ~ 13℃)	**Hot Water Temperature** LV1(50°C) / LV2(75°C) / LV3(85°C)	
Volume 110ml / 250ml / 500ml / Continuous	**Size** 130× 322× 285 mm (Body)	

Menu and Display


Menu and Display

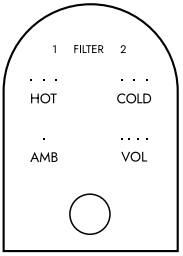

AMB	Ambeint Water Discharging	Touch the water discharging button to have Ambeint water to be discharged.
COLD	Cold Water Discharging	Touch the cold water selection button to select cold water. Then touch the water discharging button to have cold water to be discharged.
	Select the cold water temperature	The cold water temperature can selct three stage, and the more lights are on, the cold water is colder.

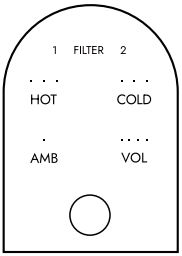


HOT	Hot water Discharging	Touch the hot water selection button to select hot water.
	Hot water lock button	This funtion prevents hot water from being discharged to prevent accidents when children are alone. The hot water lock function is activated by pressing the lock button for more than 5 seconds.
	Select the hot water temperature	The hot water temperature can select three stages, and the more lights are on, the hot water is hotter.

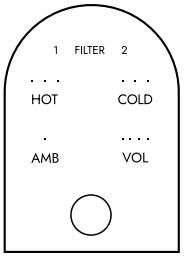

◯	Water discharging button	It is a function divides the capacity of water purification Ambeint water, cold water, and hot water into four.
VOL	Water volume control button	Press the pure water, cold water, or hot water button, select the water volume, and press the discharge button to get the selected capacity. Depending on the installation environment, the water amount may different.


Menu and Display

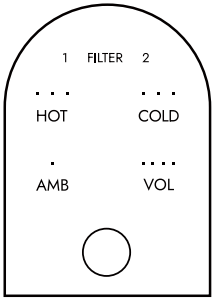

1 FILTER 2	Filter Flushing	It indicate filter replacement cycle and auto flushing. Normally the lamp is green, is orange when replacement cycle is near, and is red when replacement cycle is done. The lamp blinks during auto flushing.
HOT	Select the hot water temperature	The hot water temperature can three stages, and the more lights are on, the hot water is hotter.
COLD	Select the cold water temperature	The cold water temperature can three stages, and the more lights are on, the cold water is colder.


Faucet Flushing

Faucet Flushing

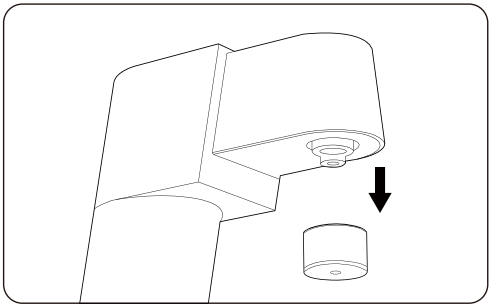


1. Slowly pull the nozzle downward to remove it.

2. Clean the nozzle thoroughly.

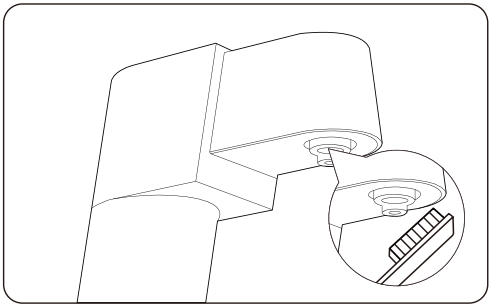

3. Periodically clean the area around the spout where the nozzle was removed using a soft brush

   If not cleaned regularly, foreign substances may accumulate.

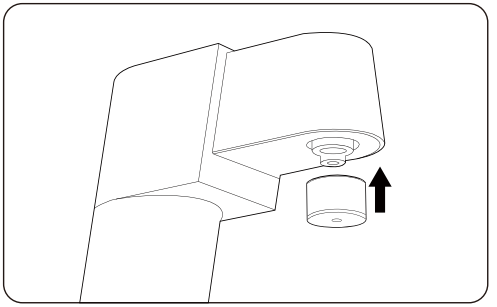

4. Slowly push the cleaned nozzle upward to reinsert it.

Caution

Before inserting the nozzle, check for dust and foreign substances around the nozzle and spout.

Contaminants may enter the inside along with the nozzle, leading to internal pollution.

If the nozzle is not fully inserted, it may come loose during use, causing the container to break.

Filters

Filter purification performance

Effective purification capacity

It refers to the minimum filtration capacity at which contaminants can be effectively removed without cleaning, regenerating, or replacing the filter inside the water purifier.

Filter replacement cycle

The filter replacement cycle is not the warranty period; it indicates the expected time for each filter to perform at its best. This cycle is based on using tap water as the inlet source and a daily drinking water consumption of 6L (for four people). Therefore, the replacement cycle may vary depending on the quality, temperature, and usage of the inlet water, as well as the location or season

Filter replacement cycle:
Carbon block filter - approximately 6 months, Electro-Adsoptive filter - approximately 12 months.

The filter, which is essential for the water purifier, may lose its purification performance if it is not an original part or if an original filter is used for an extended period. Please replace it with an original filter according to the recommended replacement schedule.

After approximately 6 months of use or after dispensing about 7,000 cups of water, the filter replacement notification light will turn red to indicate that it's time for a replacement. If the notification light turns orange, it means that the water supply amount has decreased due to water quality effects or that the filter replacement period is approaching due to elapsed usage time.

To enjoy clean water, please replace the filter at the appropriate time.

The filter, which is the lifeblood of the water purifier, will decrease in filtration performance if it is not a genuine product or if a genuine product is used for an extended period. Therefore, please replace it with a genuine filter according to the replacement cycle.

Notice

Water purifier cleaning method

Exterior of the water purifier

Regularly wipe with a dry cloth. If the contamination cannot be removed with a dry cloth, use a damp cloth to clean the area

Internal flow path of the water purifier

If unused for more than 72 hours,
dispense and discard one cup each of cold and hot water before using

Water Purification Process

The Importance of Water Purifier Filters

If the filter is not genuine, or even if it is a genuine filter but used for too long, its performance may decline.
The LIVINGCARE water purifier uses a positive charge filtration system with a four-stage purification process.
Additionally, it features a compact filter design for increased filtration capacity and a one-touch replacement system, making filter changes quick and easy.

Water Purification Process

This method effectively removes waterborne contaminants and microorganisms with negatively charged surfaces by adding a positive charge to the filter material, allowing contaminants to be absorbed through electrostatic attraction

Filtration System

1st Filter: Carbon Block Filter

It filters large particulate matter, such as solids from source water (like pipe debris, rust, and residue).
A high-performance carbon block made from coconut-based activated carbon powder is used to effectively remove residual chlorine, chloroform, and volatile organic compounds, eliminating taste- and odor-causing substances to improve water taste.

2nd Filter: Electro-Adoaptive Filter

This is a triple-layer filter composed of an antimicrobial sediment layer on the outside, with a positively charged membrane and carbon block on the inside.

1st Stage: Filters large particulate solids from source water, such as pipe debris, rust, and residue.
2nd Stage: Removes fine particulate matter, microorganisms, bacteria, E. coli, and heavy metals through electrostatic adsorption.
3rd Stage: Eliminates residual chlorine, chloroform, and volatile organic compounds.

In direct-flow systems, fine bubbles may temporarily appear during dispensing due to water pressure.
These bubbles naturally dissipate and are unrelated to water quality or the filter.

If hot water is used frequently, white powder may appear around the dispenser, and white sediment may occur when purified water is boiled. This is not a foreign substance but a natural mineral content in the water and is unrelated to water quality.

Notice


To prevent glare and save energy at night, if the unit is not used for a certain period, only the dispensing icon remains lit, while other indicator lights turn off. To resume operation, touch any icon in the touch area to light up the indicators, then touch the dispensing icon to dispense purified water.

How To Replace The Filter

⚠ Precautions Before Filter Replacement


Before replacing the filter, be sure to close the raw water supply valve.
Press the purification button to drain any residual water from inside the purifier.
(If the residual water is not drained, there may be noise when removing the filter.)

1.

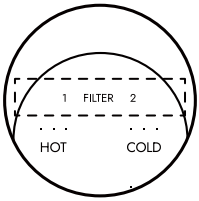

The filter status is displayed based on filter usage.
When it is time to replace the filter, the lamp color will change to red.

2.

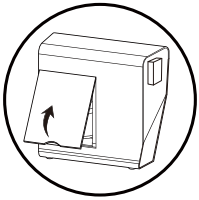

Please detach the filter cover by using the groove located
at the bottom of the filter cover on the side of the main unit.

3.



Lift and pull the filter out. (Be cautious, as residual water may
come out of the filter. This water is from the filter and is not a product leak.)

4.



Insert the new filter and close the filter cover.

Touch the hot water icon for more than 3 seconds to activate the
hot water selection button, allowing hot water to dispense.
In the hot water lock mode, touching the hot water icon will prevent
hot water from dispensing.

Maintenance and Inspection

Maintenace

Continuous hygiene maintenance is performed to keep the area around the water purifier sanitary.

Regularly wipe with a dry cloth to prevent dust and water stains from forming.
If a dry cloth does not remove the stains, use a damp cloth, but do not clean it directly with water.

1. Detach and clean the dispenser spout at least once a week..
2. Turn the dispenser spout clockwise to disassemble it.
3. Rinse the detached dispenser spout under running water.
4. Wipe off the moisture with a soft, dry cloth.
5. Assemble the dispenser spout by turning it counterclockwise.

Inspection

To use the water purifier safely, it is advisable to frequently check its condition.
Please regularly inspect the following items to maintain the purifier in optimal condition.
If any of the following issues arise, stop using the purifier, unplug it, and contact the service center.

- If you feel heat when touching the power cord.
- The indicator lamp on the display blinks even when the power cord is not moved.
- When the power cord is moved after connecting the power, the indicator lights on the display flicker.
- If there is a significant amount of dust on the rear side, it may lead to reduced performance or malfunction.

Before Asking for Service

| Before asking for service

The product may not be malfunctioning, but various factors can cause the water purifier to operate abnormally. In such cases, please first check the items below. If the abnormal operation persists, please contact the service center.

Phenomenon	Cause	Measures
Water Tastes Bad	Have you been using the water purifier for too long?	Please change the filter according to the filter replacement time.
Amount of Water is Suddenly Smaller	Filter replacement cycle has arrived.	Replace the filter.
	Check if the tab water supply valve is closed.	Open the tab water supply valve.
Water Not Discharged	Filter replacement cycle has arrived.	Replace the filter.
	Check if the tab water supply valve is closed.	Open the tab water supply valve.
	Check if the power is connected	Connect power.
	Check the press dispense button	Call the sevice center.
Cold/Hot water Not discharged	Check the dispense a lot of cold water	Please wait a moment and use it.
	Check the dispense a lot of hot water	Please wait a moment and use it.
Fine particles are produced in the water	Occurred the bubbles	Bubbles can occur during the discharging in the water. It's harmless to human, so don't worry.
Self-care	Clean the faucet	Wipe the faucet with a clean dry cloth or cotton swab. (once a week)
	Wipe the water	If the drink is smeared on the product, wipe it with a dry cloth immediately.

Product Warranty

About Service

If a malfunction occurs due to a manufacturing defect during normal use, we provide a warranty for the product as outlined below, in accordance with the Consumer Dispute Resolution Standards by item (as notified by the Fair Trade Commission). Service requests can be made through Living Care or the point of sale.

Model		
Purchase date	day month year	
Place of purchase		Serial No.

Free Service

- If a household product is used for commercial purposes, the warranty period will be reduced by half.
- Free service is available only if the product malfunctions within one year of purchase (the warranty period).

1. When a malfunction occurs due to performance or functional defects arising during normal use

Types of consumer damage	Within the warranty period	After the warranty period
If a major repair is required due to a performance or functional defect that occurs under normal use within 10 days of purchase	Product Exchange	Not Applicable
Damage occurring during transportation at the time of product purchase	Product Exchange	Not Applicable
If the exchanged product requires a major repair within one month or if an exchange is not possible	Product Exchange	Not Applicable
If the same defect occurs twice within the warranty period	Free Repair	Paid Repair
If repair is not possible for other reasons	Product Exchange	Compensation after straight-line depreciation

2. When the malfunction is due to the consumer's intentional actions or negligence

Types of consumer damage	Within the warranty period	After the warranty period
When repair is not possible	Product exchange after charging the amount applicable to paid repairs	A portion of the purchase price from the remaining balance after straight-line depreciation
When repair is possible	Paid Refair	Paid Repair

Paid Service

1. In cases where the product is damaged due to consumer fault

- When a malfunction occurs due to the consumer's negligence in handling, or due to unauthorized repair or modification
- When damage or malfunction is caused by external impact or dropping
- When a malfunction occurs due to failure to follow the precautions in the user manual

2. In other cases

- When a malfunction occurs due to natural disasters (lightning, fire, flood, epidemic, etc.)
- When consumable parts reach the end of their lifespan (including within the warranty period), such as lamps, filters, etc.

This warranty certificate will not be reissued, so please keep it safe along with the user manual.

http://livingcare.co