


AUTO-Boot

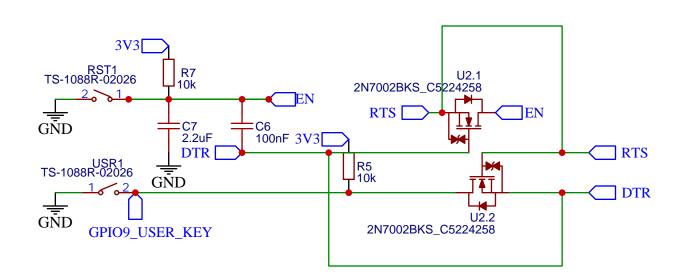


Extend Power

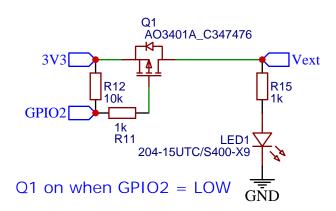


UART to USB

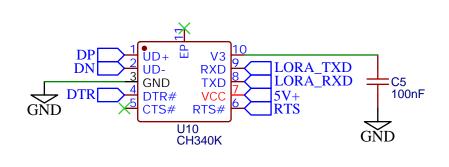


Type-C USB

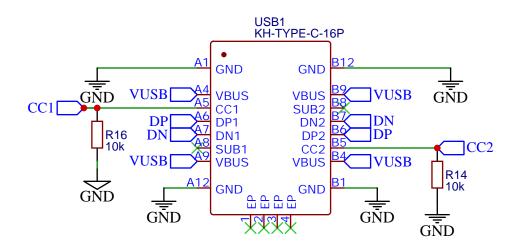




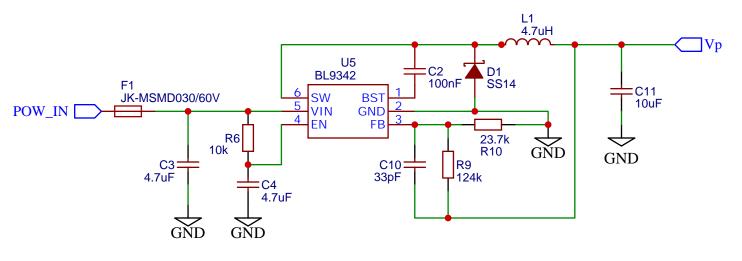

USB Power Input

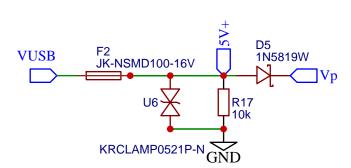

VP to 3.3V

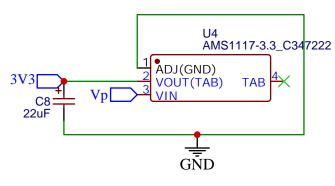

RS485

LORA CT62

