

## HF-SmartLink User Manual (Android、IOS Platform) <sub>V3.2</sub>



1 After installed, there is an icon on the desktop of the OS as following picture.



- 2 Connect the Smart Terminal's Wi-Fi to router and click the icon to start the program.
  - 2.1 SSID: The SSID of router which Smart Terminal is connecting to.
  - 2.2 Password: The password of router.
  - 2.3 Amount : Select the number of device to be configured, single or multiple.





- 3 After the Wi-Fi module is powered up, click the module 'nReload' button to start SmartLink config mode. The module will reboot and the 'nLink' LED is flashing fast indicating the module is in SmartLink configure mode. Quick to execute Step 4.
- 4 Click the APP "connect" button, it will push message to Wi-Fi module, and the APP indicate it is configing the module and also the module's "nLink" LED is flashing slowly:





- 5 After the configure process is finished, the Wi-Fi module restart itself and connect to the router in STA mode.
  - a) "nLink" LED is on indicating the the Wi-Fi module connect to router successfully and the APP shows configure is OK.
  - b) If the password is error . The "nLink" LED is flashing slowly indicating the configure is failed. Reset the module and configure again.








## **APPENDIX:**

1. Hardware connection of Wi-Fi module.

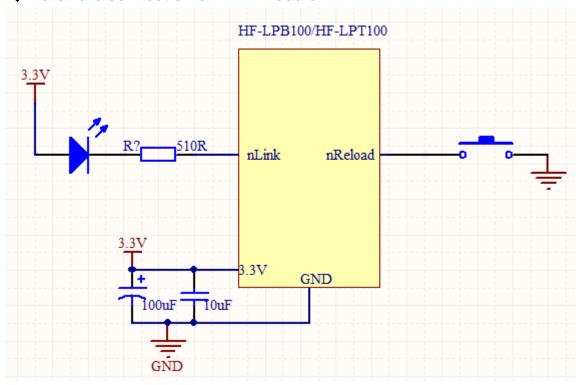

- a) nReload : SmartLink Function Key.
- b) nLink: SmartLink Status Indicator.



## **Conact information of Hi-flying**

Address: Room 511, 7# Building, No.365 Chuanhong Road, Pudong, Shanghai

postcode: 201202

Web: www.hi-flying.com

Online consultation: 400-189-3108

More information about Hi-flying products, please visit our web: http://www.hi-

flying.com/

<The End>