


Temperature and Humidity Station

Introduction

There are 2 parts in this project. The first one is to build an LCD display clock using ESP32, LCD or OLED module with temperature sensors. It will show the current date time and the sensor information. You can build as many temperature monitors and put that round your house, garage, back yard etc with different types of IoT sensors as you design.

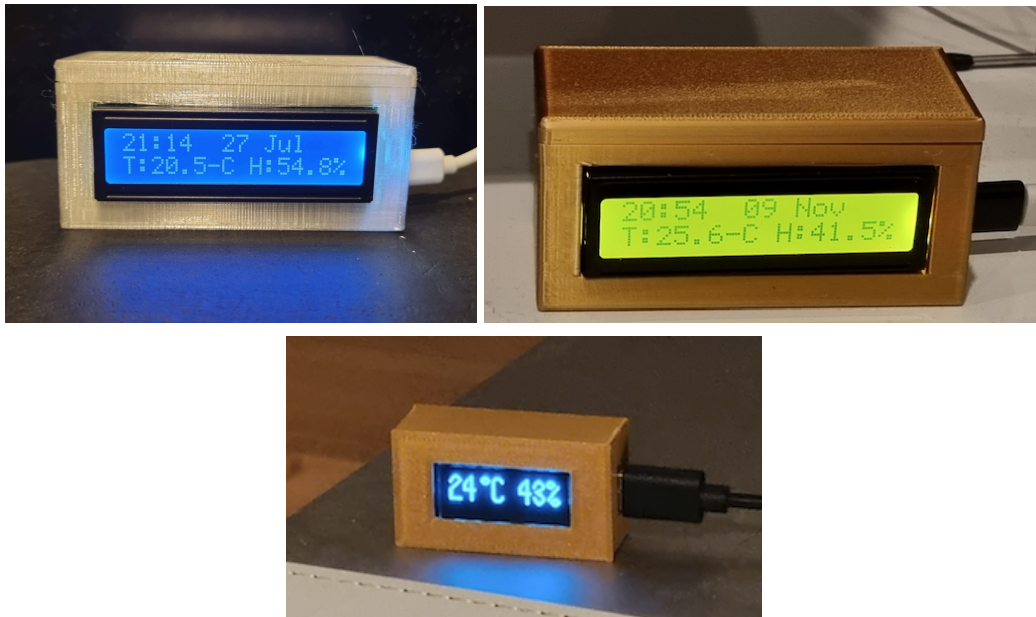

Part 2 is to build a server that collects all the sensor data and presents the latest sensor information such as temperature and humidity on a webserver. The ESP32 control board will send data every 2 mins using API calls. API Keys are stored on the server. Users can disable / enable any key resulting allow or reject the data from individual sensors. In addition, email notification can also be configured if temperature or humidity is outside of the comfort zone and trigger the power on/off of an electrical application via relay module



T.H. Automation

Login

Sensor Station

[Change Password](#)
[System On Off](#)
[SMTP Settings](#)
[Notification Recipients](#)
[Sensor Settings](#)
[Current Temperature & Humidity](#)
[History View](#)

Temp and Humi of all sensors

Time: 2025-08-10 16:39:02

Sensor Name	Temperature	Humidity
Outdoor	13.8	0.0
Living_room	19.4	70.0
Office	22.8	53.4



T.H. Automation

Logout


Sensor Station

[Change Password](#)
[System On Off](#)
[SMTP Settings](#)
[Notification Recipients](#)
[Sensor Settings](#)
[Current Temperature & Humidity](#)
[History View](#)

Last: 1 Week

Sensor: Office

View

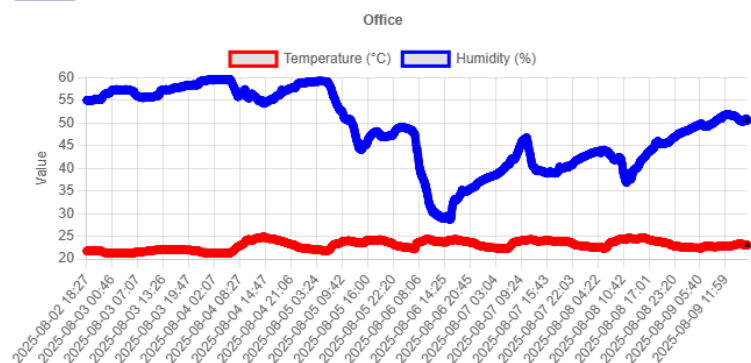

Hardware

ESP32-C3 / C6 mini	Support 5v and 3.3v out, wifi , BT. It's perfect for this project
ESP32 CP2102 (Optional)	Support 5v and 3.3v out, wifi, BT and more GPIO pins
ESP32-S3 (not recommend)	Support 3.3v out only. It has the most GPIO pins

LCD1602 (Optional)	I2C 2 x 16 LCD display. 5V input
OLED 128 x 32 (Optional)	I2C 128 x32 OLES display. 3V input
DHT 11 (your pick)	Indoor temperature and humidity sensor / Cheap Input 3.3-5V / 0 – 50° C (± 2° C) / 20 – 90%RH (± 5%RH)
DHT 22 (your pick)	Temperature and humidity sensor Input 3.3-5V / -40 – 80 ° C (± 0.5° C) / 0 – 100%RH (± 2%)
DS18B20 (your pick)	Outdoor waterproof temperature sensor Input 3.3-5V / -55 – 125 ° C
Raspberry Pi 3b	32Gb SD-card and Raspberry Lite OS
QC-3FF-S-Z	Power relay switch Input 5V / 10A 250vac or 15A 125vac

Build the ESP32 and Sensors

ESP32 Wiring - LCD and Temp Sensor

You will need to update the main.py file with the correct pin numbers according to the sensor and the LCD display you are going to use.

Below are the example values can be used / configured in the main.py for ESP32-CP2102 control board with LCD1602 display and DS18B20 temperature sensor

```
TEMP_PIN = 2
```

```
SDA_PIN = 21
```

```
SCL_PIN = 22
```

Another example for ESP32-3C, the SIG pin of the temperature sensor can go to ESP32's GPIO 5. The LCD display SDA -> pin 8 and SCL -> pin 9

```
TEMP_PIN = 5
```


```
SDA_PIN = 8
```

```
SCL_PIN = 9
```


Temperature Sensor Wiring (example)

DS18B20 can work on either 3v or 5v. I use 3v to reserve the 5v pin for LCD display

VCC <--> 3V, GND <--> Ground, SIG <--> GPIO 2

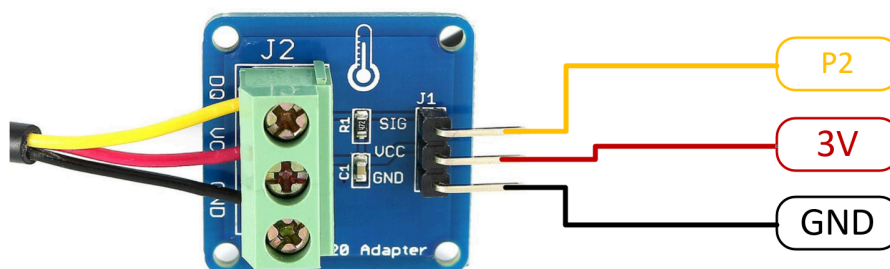


Same applies to sensor DHT11 and DHT22. SIG pin goes to GPIO pin 2 or any available GPIO accordingly. Please refer to the ESP32 wiring diagram.

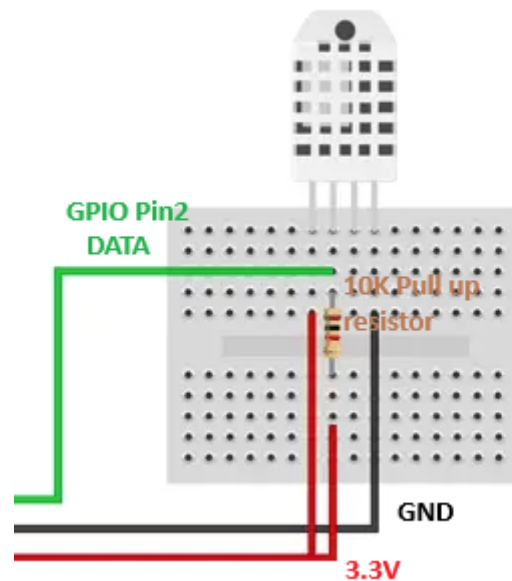

LCD Wiring (example)

VCC <--> 5V, GND <--> Ground, SDA <--> GPIO21, SCL <--> GPIO22

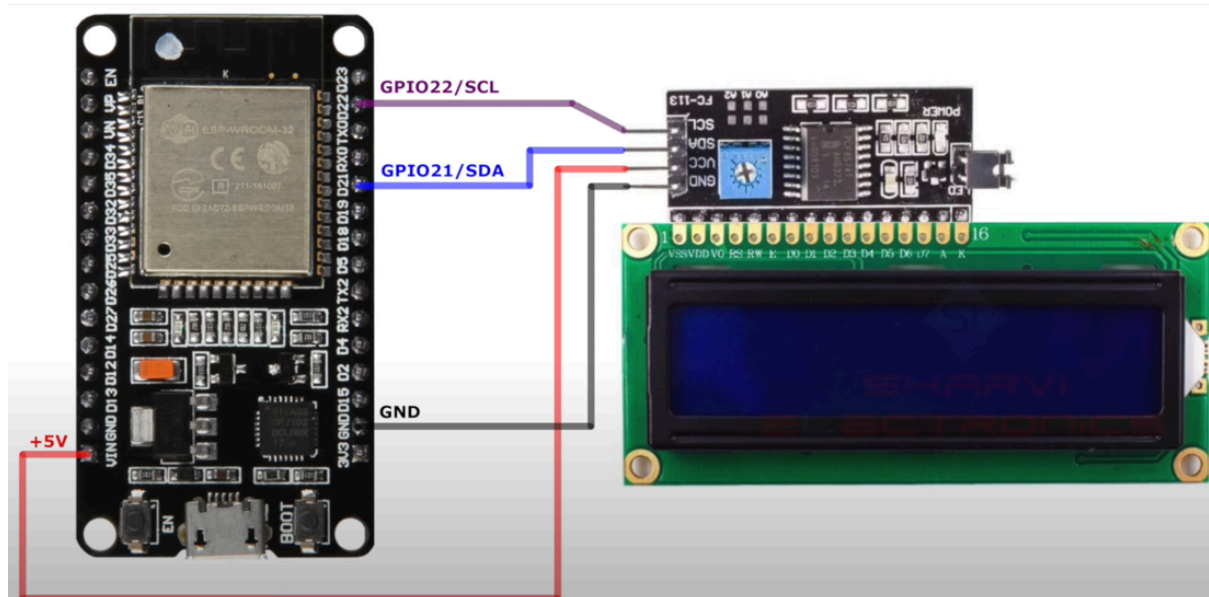

Flash MicroPython firmware to ESP32



- Download and install Thonny for Windows (free Tools)
- Version: ESP32_GENERIC-xxxxxxxxx.bin

This version support https which required for API call

- Set ESP32 to download model

hold down the BOOT button (often labeled as GPIO0) and then briefly press and release the EN (enable/reset) button

- Using Thonny application to flash firmware (Optional)

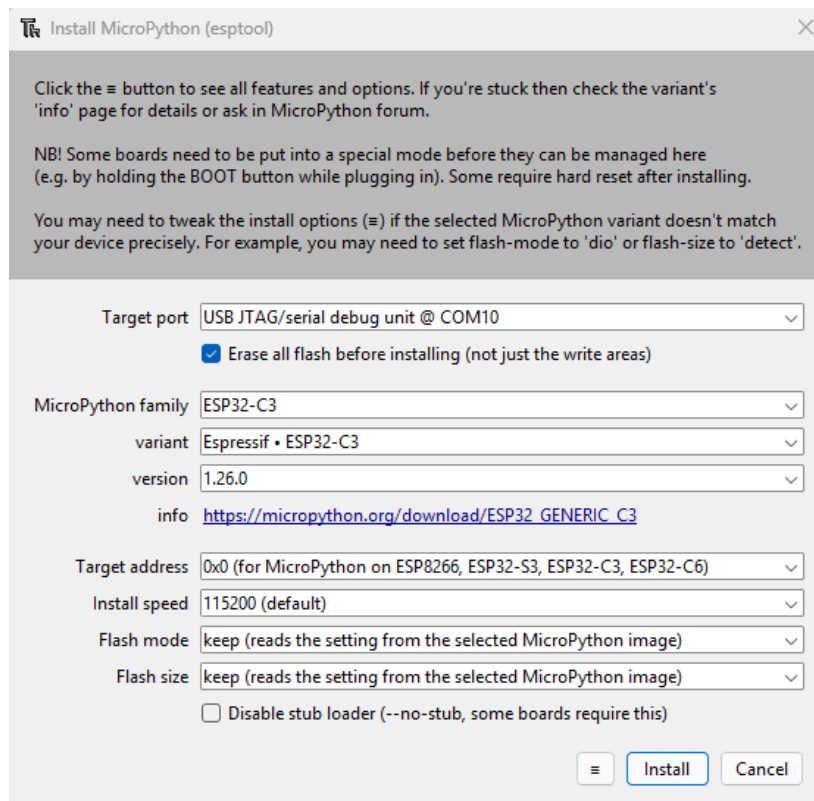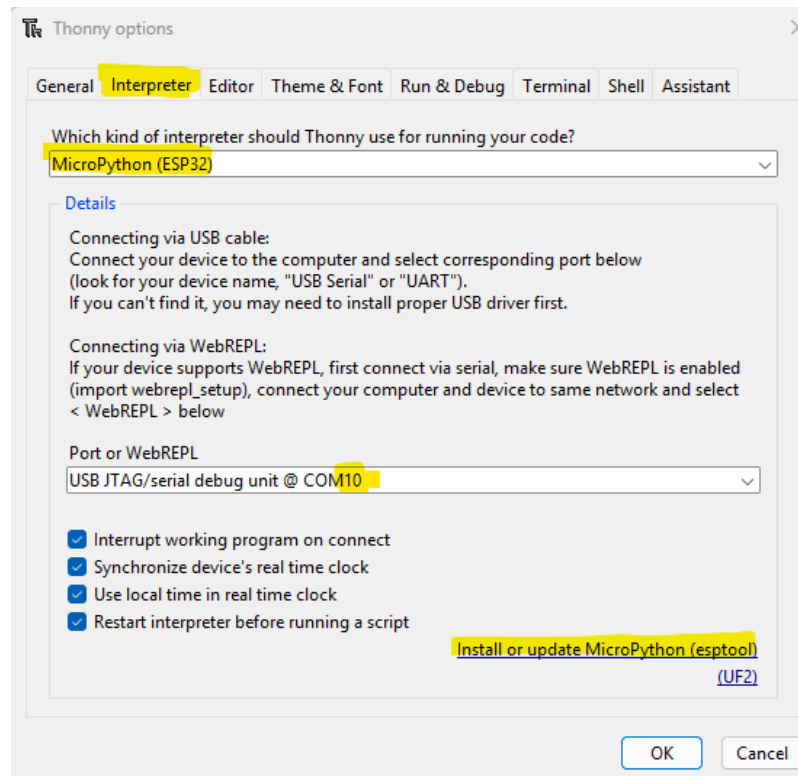


Python code for ESP32

- Connect the ESP32 in Thonny

Tools → Thonny Options → Interpreter → Select MicroPython (ES32) → Select the Communication Port @ COM?? → OK

- Upload <ESP32 Source Python> to ESP32

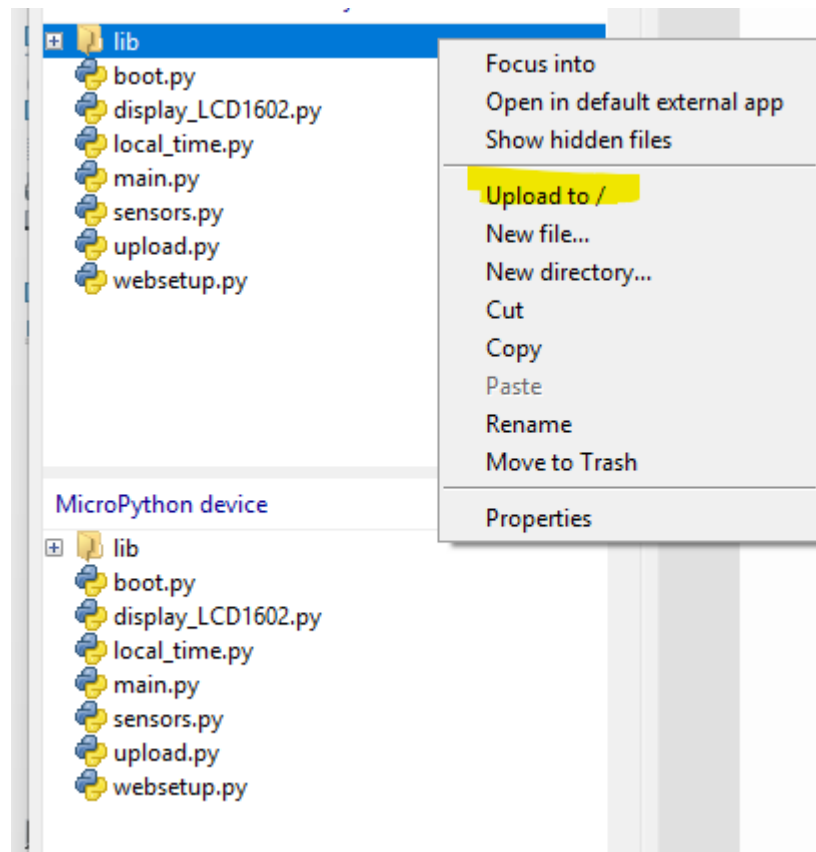


- Edit the main.py file to meet your need

TEMP_PIN, SDA_PIN and SCL_PIN

Day Light saving settings

Timezone settings

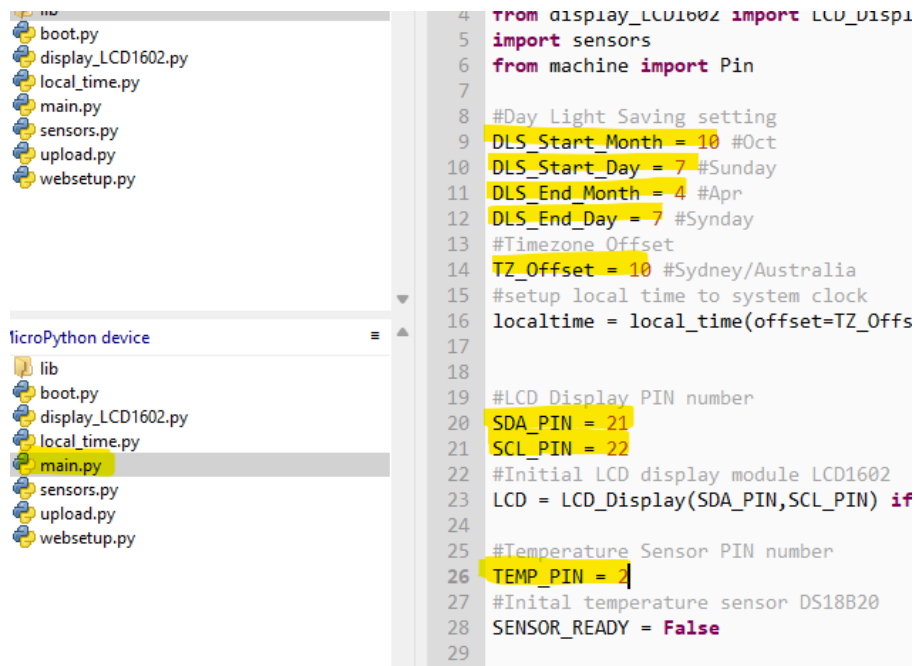

Setup Django Web Server

We can Ubuntu server VM or Raspberry Pi OS with SSH enable with full access

- Ubuntu server 24.04.01 (minimal footprint install / 2 CPU / 2G RAM / 20Gb Disk)
 - If the system is running on a VM. Make sure all disk space has been used.

sudo lvextend -l +100%FREE /dev/ubuntuv/ubuntuv

sudo resize2fs /dev/mapper/ubuntuv-ubuntuv

```

user@filesafer:~$ df -h
Filesystem                Size      Used Avail Use% Mounted on
tmpfs                     192M        976K  192M   1% /run
/dev/mapper/ubuntuv-ubuntuv 18G       4.0G    13G  24% /
tmpfs                     960M         0  960M   0% /dev/shm
tmpfs                     5.0M         0   5.0M   0% /run/lock
/dev/sda2                 1.8G       99M    1.6G   7% /boot
tmpfs                     192M        12K   192M   1% /run/user/1000

```

- Raspberry Pi 3 or 4B
 - Install Raspberry Pi OS Lite (no Desktop needed)

Install Django Framework and necessary Apps

sudo apt-get update

sudo apt-get install python3-django python3-pip python3-venv

- If you are using Ubuntu server 20.04 with minimal footprint installation

sudo apt-get install nano cron iputils-ping

sudo nano /etc/resolv.conf

add line: nameserver 8.8.8.8

Create virtual environment and install Django

cd /

sudo mkdir Automation

sudo chmod 777 Automation

python3 -m venv Automation

cd Automation

source bin/activate

pip3 install Django

```
user@filesafer:~$ cd /
user@filesafer:/$ sudo mkdir Automation
user@filesafer:/$ sudo chmod 777 Automation/
user@filesafer:/$ python3 -m venv Automation
user@filesafer:/$ cd Automation
source bin/activate
pip3 install Django
Collecting Django
  Downloading django-5.2.2-py3-none-any.whl.metadata (4.1 kB)
Collecting asgiref>=3.8.1 (from Django)
  Downloading asgiref-3.8.1-py3-none-any.whl.metadata (9.3 kB)
Collecting sqlparse>=0.3.1 (from Django)
  Downloading sqlparse-0.5.3-py3-none-any.whl.metadata (3.9 kB)
  Downloading django-5.2.2-py3-none-any.whl (8.3 MB)
    8.3/8.3 MB 6.3 MB/s eta 0:00:00
  Downloading asgiref-3.8.1-py3-none-any.whl (23 kB)
  Downloading sqlparse-0.5.3-py3-none-any.whl (44 kB)
    44.4/44.4 kB 3.8 MB/s eta 0:00:00
Installing collected packages: sqlparse, asgiref, Django
Successfully installed Django-5.2.2 asgiref-3.8.1 sqlparse-0.5.3
(Automation) user@filesafer:/Automation$
(Automation) user@filesafer:/Automation$
```

Create web applications and install dependent libraries

- Perform below commands under directory /Automation within the virtual environment

django-admin startproject Thermometer .

python3 manage.py startapp Login

python3 manage.py startapp TempLog

pip3 install ipcalc six apscheduler pandas gunicorn

- Above process creates below folder structure

Thermometer

TempLog

Login

Copy the source code files and setup

We will use sftp to copy the source files into created directories from above

If you are using a Windows computer you can use MoxaXterm free application to do this. Linux users can perform this task natively using Terminal.

- Start from the directory where you have downloaded the Django Source Code. SFTP to the server

```
cd /Automation
```

```
put -R *
```

```
cd TempLog
```

```
mv apps.py apps.py.tmp
```

```
cd ..
```

```
python3 manage.py makemigrations
```

```
python3 manage.py migrate
```

```
cd TempLog
```

```
mv apps.py.tmp apps.py
```

```
cd ..
```

```
chmod +x run.sh
```

- Create superuser for the Web App. This account is for you to login to the Web GUI

```
python3 manage.py createsuperuser
```

```
(Automation) user@filesafer:/Automation$ python3 manage.py createsuperuser
Username (leave blank to use 'user'): user
Email address:
Password:
Password (again):
Superuser created successfully.
(Automation) user@filesafer:/Automation$
```

- Setup application auto-start (My ubuntu user account is called "user". It used in @reboot code below)

```
sudo nano /etc/crontab
```

- add below line to the bottom and save / exit

```
@reboot user /bin/bash -c "/Automation/run.sh"
```

Setup and configure the web server

- Setup Nginx (Engine X) as front-end web server
 - Install Nginx

```
sudo apt-get install nginx
```

- Setup web site in nginx by creating file “Django” in /etc/nginx/sites-available/

```
sudo nano /etc/nginx/sites-available/Django
```

- Copy below to the file, save and exit

```
server {  
    listen 443 ssl;  
    server_name <server FQDN or IP Address>;  
  
    ssl_certificate /Automation/Cert/server.crt;  
    ssl_certificate_key /Automation/Cert/server.key;  
  
    location / {  
        proxy_pass http://127.0.0.1:8000;  
        proxy_set_header Host $host;  
        proxy_set_header X-Real-IP $remote_addr;  
        proxy_set_header X-Forwarded-For $proxy_add_x_forwarded_for;  
        proxy_set_header X-Forwarded-Proto $scheme;  
    }  
    location /static/ {  
        alias /Automation/static/;  
    }  
}  
  
server {  
    listen 80;  
    server_name your.domain.or.ip;  
    return 301 https://$host$request_uri;  
}
```

- Start Nginx

```
sudo ln -s /etc/nginx/sites-available/Django /etc/nginx/sites-enabled/
```

```
sudo nginx -t
```


```
sudo systemctl restart nginx
```

- Set the correct timezone (optional) before Rebooting the server.

```
sudo timedatectl set-timezone <local timezone such as Australia/Sydney>
```

```
sudo reboot now
```

- o <https://<your-server-ip-address>>

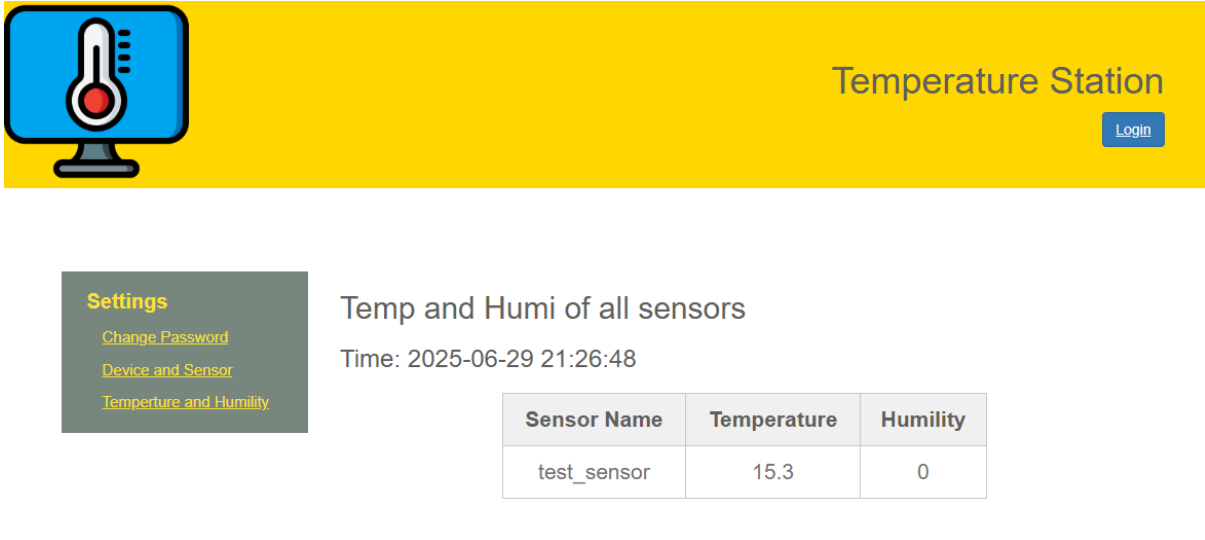

The screenshot shows the 'Temperature Station' web interface. At the top, there is a yellow header with a thermometer icon on the left and the title 'Temperature Station' on the right, with a 'Login' button. Below the header, on the left, is a 'Settings' sidebar with links: 'Change Password', 'Device and Sensor', and 'Temperture and Humidity'. The main content area is titled 'Temp and Humi of all sensors' and shows the time 'Time: 2025-06-29 21:26:48'. Below this is a table with three columns: 'Sensor Name', 'Temperature', and 'Humility'. The table contains one row with the sensor name 'test_sensor', a temperature of '15.3', and a humidity of '0'.


Sensor Name	Temperature	Humility
test_sensor	15.3	0

- Switch on email notifications

To enable email notification, you will need to set up SMTP settings and create Notification Recipients. You can select any sensor or All sensors you would like to receive notification when the sensor detected value outside of the comfort zone settings in your registered device.

To disable notification, you can either remove from the Recipients or set both of the Low and High values to the same value.

Last to switch on the notification, you will need to click on “Start” button from “System On Off”

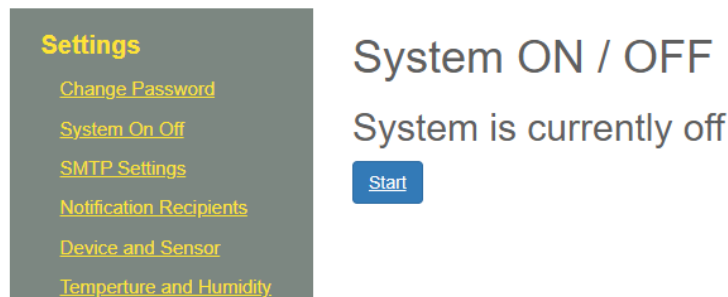

The screenshot shows the 'System ON / OFF' web interface. On the left, there is a 'Settings' sidebar with links: 'Change Password', 'System On Off', 'SMTP Settings', 'Notification Recipients', 'Device and Sensor', and 'Temperture and Humidity'. The main content area is titled 'System ON / OFF' and shows the status 'System is currently off'. Below this status is a blue 'Start' button.

- Using alert value to trigger electrical applications (Automation for bathroom sensor)
Setting Highest Comfort Humidity to 90 in Sensor settings. It can trigger your bathroom DHT11 sensor to switch on a relay module JQC-3FF-S-Z.

Sensor Station

[Change Password](#)

[System On Off](#)

[SMTP Settings](#)

[Notification Recipients](#)

[Sensor Settings](#)

[Current Temperature & Humidity](#)

[History View](#)

Devices and Sensors

Sensor Name:

Sensor Type:

Lowest Comfort Temperature:

Highest Comfort Temperature:

Lowest Comfort Humidity:

Highest Comfort Humidity:

Is Active: ☒

In main.py, set a value to SW4_PIN in below. The GPIO pin on the ESP32 where a relay module JQC-3FF-S-Z IN pin connected. When the sensor reaches to 90% humidity. An exhaust fan can be switched on automatically for example.

boot.py

display_LCD1602.py

local_time.py

main.py

sensors.py

upload.py

websetup.py

Build The Temperature Station.pdf

README.md

```

24
25 #Temperature Sensor PIN number
26 TEMP_PIN = 23
27 #Initial temperature sensor DS18B20
28 SENSOR_READY = False
29
30 # PLC application PIN. Set to 0 will disable power triggering function
31 # The PIN number that connected to an application. It will be power on when low temperature triggered
32 SW1_PIN = 0
33 switch1 = Pin(SW1_PIN, Pin.OUT) if SW1_PIN !=0 else None
34 # The PIN number that connected to an application. It will be power on when high temperature triggered
35 SW2_PIN = 0
36 switch2 = Pin(SW2_PIN, Pin.OUT) if SW2_PIN !=0 else None
37 # The PIN number that connected to an application. It will be power on when low humidity triggered
38 SW3_PIN = 0
39 switch3 = Pin(SW3_PIN, Pin.OUT) if SW3_PIN !=0 else None
40 # The PIN number that connected to an application. It will be power on when high humidity triggered
41 SW4_PIN = 0
42 switch4 = Pin(SW4_PIN, Pin.OUT) if SW4_PIN !=0 else None
43 # Application trigger condition. Value will be assign by initiating connection to server

```

5V 1 One Channel Relay Module

Maximum load: AC 250V/10A, DC 30V/10A
 Trigger current: 5mA
 Working voltage: 5V
 Module size: 50 x 26 x 18.5mm (L x W x H)
 Four mounting bolts holes, diameter 3.1mm

Operation VCC:
 This voltage is consistent with the operating voltage on the relay.

Work GND:
 Often using the microcontroller to provide the trigger signal, and the single chip.

Trigger Model:
 This module is low-level trigger, the voltage value between 0-1.2V

When one pin is connected, connect it to the public (COM).
 Such as right:
 With the public to disconnect.

Public (COM):
 The common part.



Register / create API key for sensor device

Device and Sensor → Register New Sensor → Put in a name for Device Name → Select the sensor type
→ Click Register

Settings

- [Change Password](#)
- [Device and Sensor](#)**
- [Temperature and Humidity](#)

Devices and Sensors

Sensor Name:

Sensor Type:

Is Active: ☒

Setup ESP32 when it powers up at the first time

- Browse the server from your phone and copy the API key from website

Devices and Sensors

Device Name: **LivingRoom_1**

Device Type: Temperature Sensor

API Key: **514734ba937900c2df92c165f5b0f109566b8ba82f15272ea537fe073fde9ae**

Active: ☒

Create At: June 29, 2025, 9:33 p.m.

- Search SSID "Set-me-up" and connect with password as password. Browse <http://192.168.0.1>
- Fill in all necessary detail then click "Save and Reboot"
 - Wifi name
 - Wifi password
 - Server IP
 - Device name (as above)
 - API Key (as above / paste)
- The ESP32 should reboot and connect to local wifi. You should see the display showing live information. The Website will show the temperature and humidity in 3 mins (average of last 3 mins)
- If the ESP32 can not connect to local wifi. The "set-me-up" network will show up again otherwise you will not see "Set-me-up" anymore.