




Home

Sea Wolf II Dip Switch Settings

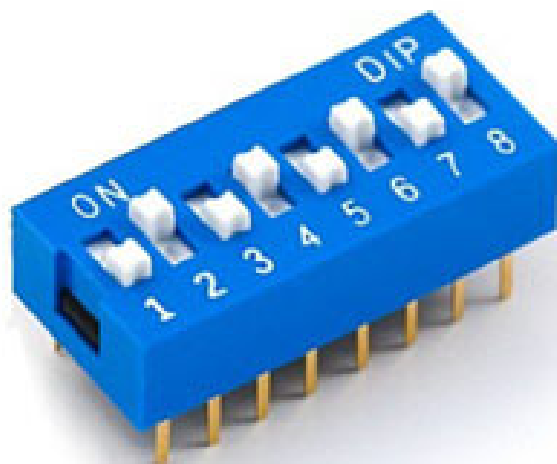

Below are the dip-switch found in MAME for this [Sea Wolf II](#) romset.

WARNING: While MAME has very useful dip switch settings, many of them are listed in reverse order (ie: the settings are really for switches 8 down to 1 instead of 1 up to 8, or vice versa, or on really should be off and off really show be on. If you compare what is

shown on the chart to the switch settings you already know, you should be able to figure it out. When available, please see manual)

Dip Switch: S1 (P4HANDLE)

1	2	3	4	5	6	7	8	Function	Option
							Off	Coinage	1 Coin/1 Credit*
							On		2 Coins/1 Credit
					Off	Off		Play Time	1P 40s/2P 45s
					Off	On			1P 50s/2P 60s
					On	Off			1P 60s/2P 75s
					On	On			1P 70s/2P 90s*

1	2	3	4	5	6	7	8	Function	Option
				Off				2 Players Game	2 Credits*
				On					1 Credit
		Off	Off					Extended Play	7000
		Off	On						6000
		On	Off						5000
		On	On						None*
	Off							Monitor	Color*
	On								B/W
Off								Service Mode	Off*
On									On

Dip Switch: S2 (P1HANDLE)

1	2	3	4	5	6	7	Function	Option
Off							Language 1	French

1	2	3	4	5	6	7	Function	Option
On								Language 2*

Dip Switch: S2 (P3HANDLE)

1	2	3	4	Function	Option
			Off	Language 2	German
			On		English*

NOTE: Dip switch setting information is contributed by the community and although is believed to be correct (most of the time), has not been tested or verified.

Use this information at your own risk.