

USBCANFD Analyzer

Out-of-the-box Test Instructions

Version: V1.0

Updated Date: 2023.10.15

Revising History

Version	Date	Instruction
V1.0	2023.10.15	First Version

CONTENT

I. Foreword	4
II. Test Procedure.....	5
1. Install Drivers for Hardware	5
2. Installation of Test Software	5
3. Connect the USBCANFD Analyzer's Two Channels	5
3.1 Shorting Terminating Resistors.....	5
3.2 Connection of signal lines CANH and CANL of channels CAN1 and CAN2	5
4. Run the Test Tool.....	6
5. According to the above method, the test is normal, but access to the bus cannot be sent and received if the processing	7
5.1 Physical Wiring.....	7
5.2 Parameter Matching	8

I. Foreword

First of all, we would like to thank you for purchasing and using our products.

This document is intended to help first-time buyers of USBCANFD analyzers to check that the USBCANFD analyzer they have received is working properly.

It can be ignored by experienced users or those who are familiar with the operation of the USBCANFD analyzer.

II. Test Procedure

To test your USBCANFD analyzer, follow the steps below.

1. Install Drivers for Hardware

Connect the USBCANFD analyzer to a USB port on your computer using the standard USB cable. The computer will then display the Driver Installation Wizard.

For detailed instructions on installing the driver, please refer to the '3. *USB Driver Installation and Uninstallation Manual.pdf*'.

2. Installation of Test Software

Please double-click on the "debugging tools" exe in the package to run it and install it directly.

3. Connect the USBCANFD Analyzer's Two Channels

3.1 Shorting Terminating Resistors

Set the blue dip switches R1 and R2 of the left CAN1 channel of the USBCANFD analyzer to the top OFF position; set the red dip switches R1 and R2 of the right CAN2 channel to the bottom ON position.

Note: Be sure to configure the terminating resistor before connecting the unit to the USB port of the computer via the USB cable, otherwise the test will fail and you will have to plug and unplug the USB to re-test.

3.2 Connection of signal lines CANH and CANL of channels CAN1 and CAN2

Short the analyzer's CANH on channel CAN1 and CANH on channel CAN2 with wires, and CANL on channel CAN1 and CANL on channel CAN2 with wires. The schematic diagram after short-circuiting is shown below:


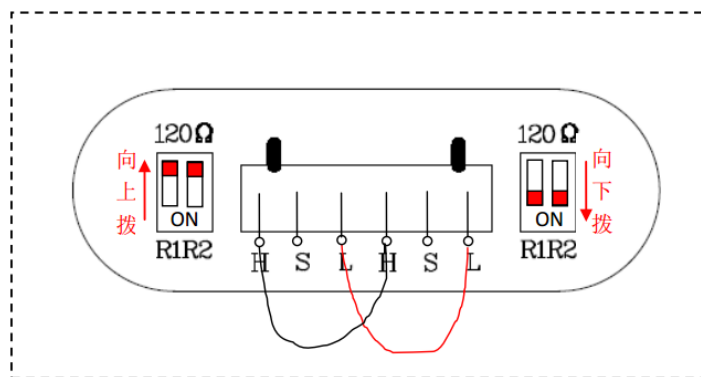



Fig. 1 USBCANFD Analyzer Test Wiring Diagram

4. Run the Test Tool

Double-click the CANFDToolPro software, click Device Management -> Device Operation -> Open Device:

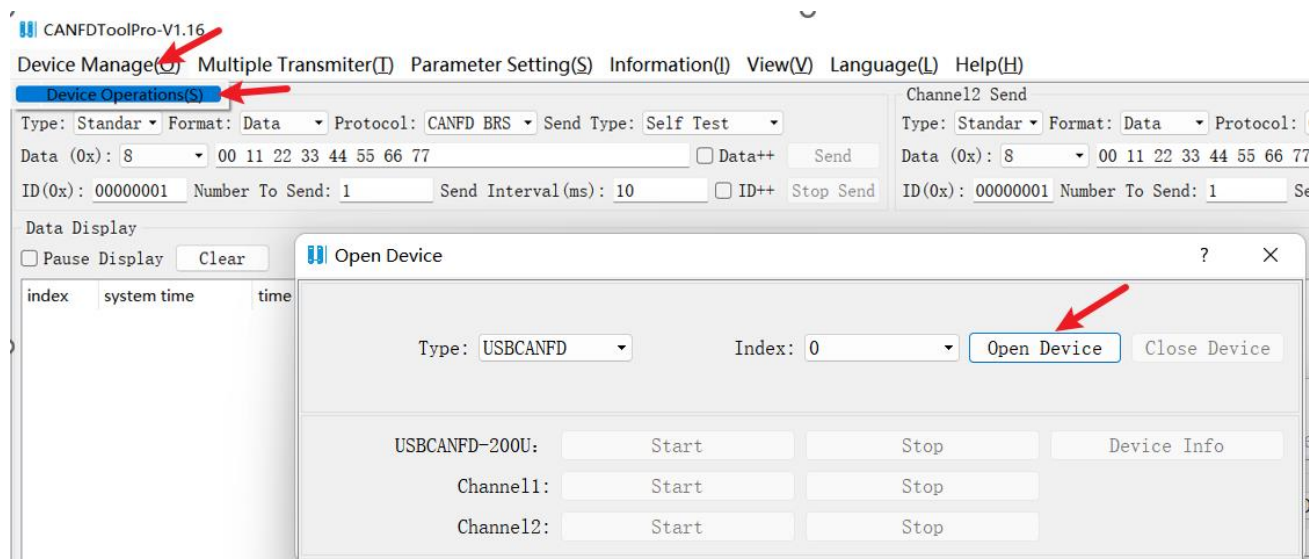


After opening successfully, select "Start" in the column of "USBCANFD-200U" on the interface, select the baud rate in the pop-up interface, and then click "OK". As shown below:

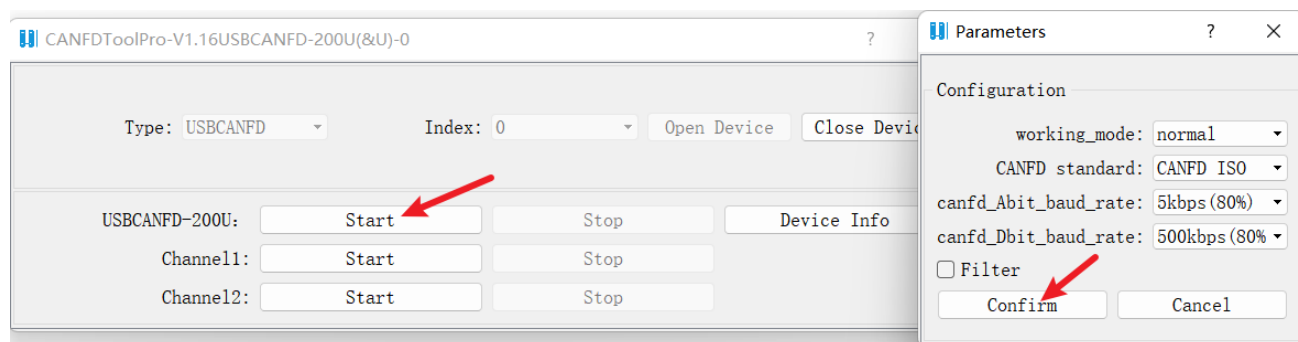

After completion, close the configuration interface, enter the main interface, click the channel 1 "send" button to

send a frame of data, at this time the channel 2 will receive a frame of the same data, that is, the CAN1 channel sends normal, CAN2 channel receives normal. Then click channel 2 "send" button to send a frame of data, at this time CAN1 channel will receive a frame of the same data, that is, CAN2 channel sends normal, CAN1 channel receives normal.

Note: Check that the terminal wiring is secure if no data is received after clicking Send.

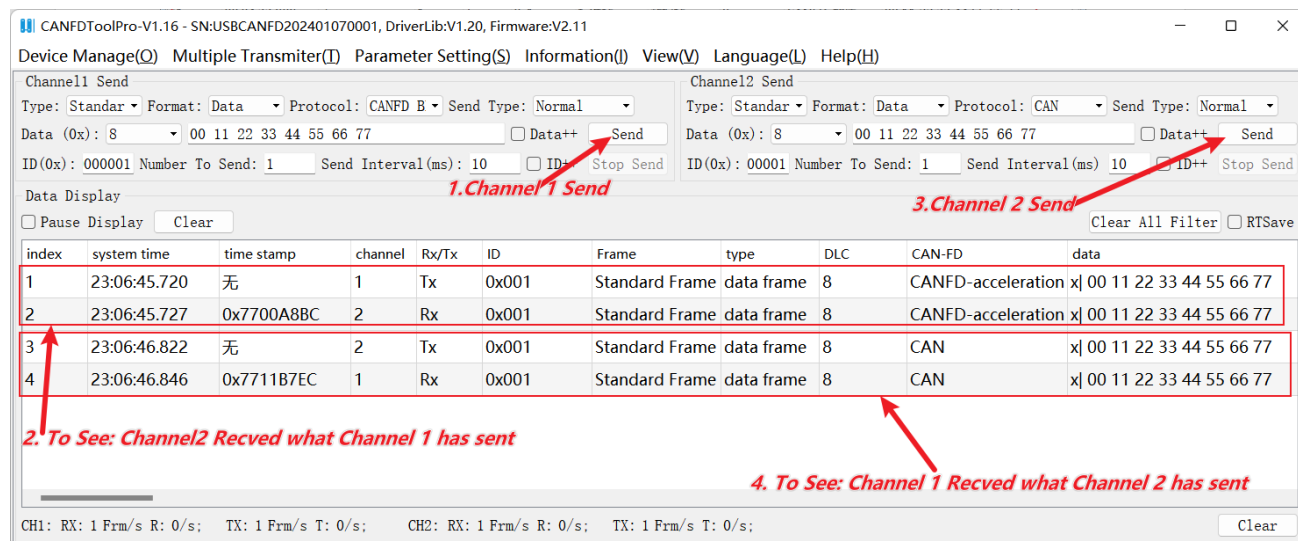

If the transmission and reception of both CAN1 and CAN2 channels are normal, then the USB-CAN bus adapter is functioning correctly.

5. According to the above method, the test is normal, but access to the bus cannot be sent and received if the processing

After the above steps are tested normally, it means there is no problem inside the USBCANFD analyser, if you still can't receive or send data normally after accessing the bus, most of them are caused by physical wiring and baud rate mismatch, please check the following sections:

5.1 Physical Wiring

When wiring, strictly follow the steps above.

Ensure that the H and L equivalents of the two channels are securely connected.

Make sure that the terminating resistor is connected correctly.

5.2 Parameter Matching

To configure the parameters, strictly follow the steps above; if you are using it for the first time, you can use the default values directly. If the configuration has been changed, it is recommended to use the "Device management" -> "Device operation" -> "Switch off device" menu and then follow the instructions.