


VIVE VR Controller Diagram

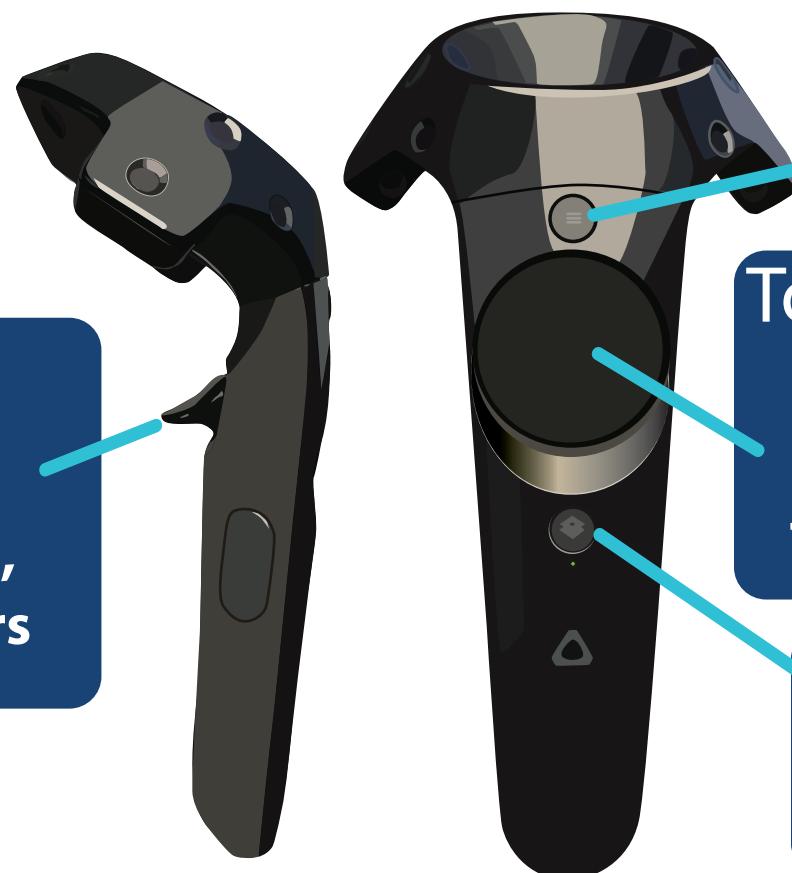

Trigger:

Select Items
buttons, tabs,
arrows, sliders

Menu Button:
**Press to open the pressure
and variables menus**

TouchPad:

**Press down and hold
hover over location you want
to teleport to then release**

VIVE Menu Button:
**Press to exit the game
and go to Steam**



General Tips:

- Green: ready for use.**
- Blue: in pairing mode and searching for a headset.**
- Blinking blue: controller is in 'Pairing mode'**
- Blinking red: Low battery**
- Orange: Controller is charging**
- White: fully charged**
- Off: The controller LED will be off when your controller isn't powered on.**



Adjust Lens Knob:

-adjusts the distance between the lens
to sharpen the image



Adjusts the sizes of the headset:
left to loosen right to tighten
make sure this is comfortable but not too loose
that the headset slips or looks blurry



General Tips:

**Don't forget to walk around in the environment!
This is VR you can physically walk around the room
and move your body and head up and down.**

**Look at your controller to see your in-game hand
move as well.**