SLCD5 / SLCD5+ Reference Manual Version 1.7.9

Firmware Version 1.5.0 and above; BMPload 2.4.0 and above

04/14/2017 Hardware Revisions A thru D

Note: This manual refers to the SLCD5/SLCD5+ Controller board. Specifications for various Display Module products that use this controller board are found in the individual product datasheets. Please refer to your Display Module's datasheet for power requirements, input voltage, temperature ranges, etc.

© Copyright Reach Technology, a Novanta Company 2003-2017 All Rights Reserved

Note: The software included with this product is subject to a license agreement as described in this Manual.

Reach Technology

www.reachtech.com

Sales: 408-754-4176 sales@reachtech.com

Technical Support: 503-675-6464 techsupport@reachtech.com

Table of Contents

0.	HARDWARE LIMITED WARRANTY AND SOFTWARE LICENSE AGREEMENT	10
0.1 0.2 0.3	HARDWARE LIMITED WARRANTY RETURNS AND REPAIR POLICY SOFTWARE LICENSE AGREEMENT	10
1.	INTRODUCTION	
1.1	Overview	
1.2	CONTROLLER FEATURES	
1.3	ELECTRICAL CHARACTERISTICS	16
1.4	PANEL SUPPORT	
1.5	SD CARD SUPPORT	
1.6	DIMENSIONS	17
2.	CONNECTORS AND JUMPERS	18
2.1	OVERVIEW	
2.2	J6 – POWER AND COMMUNICATION COM0 (RS232 MODE)	
2.3	J6 – Power and Communication COM0 (3.3V CMOS Mode)	21
2.4	J7 – COMMUNICATION COM1 AND RESET	
2.5	J4 – POWER	
2.6 2.7	J3 – 4 WIRE TOUCH (HARDWARE VERSION DEPENDENT)	
2.7	J12 – 4 WIRE TOUCH (HARDWARE VERSION DEPENDENT)	
2.9	J9 – 33 PIN 0.5MM FLAT FLEX LCD CONNECTOR	
2.10	J8 – 31 PIN 1MM LCD CONNECTOR	
2.11	J10 – BACKLIGHT / INVERTER CONTROL	
2.12	J13 – BACKLIGHT / INVERTER CONTROL	
2.13	J5 – EXTERNAL AUDIO OUTPUT (NOT TYPICALLY USED)	
2.14	J15 SD CARD CONNECTOR	
2.15	J14 – FOR EXTERNAL SD CARD	
2.16	JP5 – SD CARD POWER	
2.17	JP2 – DEPRECATED FOR REV B AND ABOVE	
3.	CONFIGURATION GUIDE	
3.1	POWER CONNECTIONS	
3.2	SERIAL PORTS	
3.3 3.4	TFT HARDWARE PANEL ORIENTATION	
4.	SYSTEM OVERVIEW	
4.1	GENERAL SLCD5 CONTROLLER INFORMATION	
4.2	COMPATIBILITY WITH SLCD, SLCD6, SLCD43, SLCD+ CONTROLLERS	
4.3 4.4	BITMAPS AND MACROS OVERVIEW – SLCD5 EVALUATION KITS	
4.4	GETTING STARTED	
4.6	CONNECTING THE KIT TO A PC	
4.7	SWITCHING BETWEEN PC AND EMBEDDED CONTROLLER	

4.8	POWERCOM4 SCHEMATIC	
4.9	POWERCOM4 CABLE SCHEMATIC	40
4.10	POWERCOM4 OPERATIONAL NOTES	41
	Operational Notes	41
4.11	COMMUNICATIONS INTERFACE	42
	General	42
4.12	SLCD5 INPUT BUFFER PROCESSING.	
	Input Buffer	
	Flow Control	
	Buffer Limit Discussion	
	Prompt Summary	
4.13	Touch Interface	
	Hotspot	
	Button	
	Host Notification	
4.14	HOST INPUT PROCESSING	
4.15	SYSTEM FIRMWARE BOOT PROCESS	
7.13	Algorithm	
5.	SOFTWARE COMMAND REFERENCE	48
5.1	COMMANDS AFFECTING NON-VOLATILE SETTINGS (EEPROM)	48
5.2	COMMAND BASICS	
	Compressed Syntax	
	Case Sensitivity	
	Assumed Orientation	
	Touch Priority	
5.3	COMMANDS BY FUNCTION	
5.4	COMMANDS ALPHABETICALLY BY COMMAND SYNTAX	
5.5	COMMANDS	
	ALARM	
	ANIMATED GIF START	
	ANIMATED GIF STOP	
	ANIMATION CLEAR (TEXT FLASHING CLEAR)	
	ANIMATION DEFINE	
	ANIMATION DELETE	
	ANIMATION DISABLE	
	ANIMATION ENABLE	
	ANIMATION LIST (TEXT FLASHING LIST)	
	ANIMATION SYNCH	
	ANIMATION YIELD	
	APPEND TO SCROLLING TEXTBOX	
	BEEP FREQUENCY, BEEP FREQUENCY SPECIAL	
	BEEP ONCE	68
	BEEP REPEAT	
	BEEP TOUCH	
	BEEP VOLUME, BEEP VOLUME SPECIAL	
	BEEP WAIT	
	BINARY CHART VALUES	
	BINARY DOWNLOAD	
	BINARY NOTIFICATION MODE	
	BUTTON CLEAR	
	~ ~ ~ ~ · · · · · · · · · · · · · · · ·	

BUTTON DEFINE CENTER TEXT	
BUTTON DEFINE - LATCHING STATE	74
BUTTON DEFINE - MOMENTARY	75
CHANGE SD CARD DIRECTORY	76
CHART CLEAR DISPLAY AREA	76
CHART DEFINE	
CHART DEFINE with BITMAP	
CHART REDEFINE BACKGROUND BITMAP	
CHART REDEFINE BACKGROUND COLOR	
CHART REDEFINE CLEAR-BEFORE-DRAW MODE	
CHART REDEFINE PEN	
CHART REDEFINE RETRACE MODE	
CHART RESET PENS TO START	
CHART VALUES	
CLEAR ALL HOTSPOT	
CLEAR HOTSPOT	
CLEAR SCREEN	
CLEAR SCROLLING TEXTBOX	
CLEAR SCREEN SPECIAL	
CLEAR TEXT WINDOW (SLCD5+ Only)	
CONTROL PORT AUTOSWITCH	
CONTROLLER TYPE	
COPY FLASH to DRAM (SLCD5+ Only)	
COPY TEXT WINDOW VISIBLE TO VARIABLES (SLCD5+ Only)	
CRC EXTERNAL FLASH	
CRC PROCESSOR BOOTLOAD CODE	
CRC PROCESSOR CODE	
CRC SCREEN	
DEBUG MACRO	
DEBUG TOUCH	84
DEFINE HOTSPOT (VISIBLE TOUCH AREA)	
DEFINE INVERTER CONTROL POLARITY	
DEFINE INVERTER PWM CONTROL	
DEFINE MAX, MIN BRIGHTNESS	
DEFINE PANEL ORIENTATION	
DEFINE RELATIVE X-Y HOTSPOT	
DEFINE RELATIVE X-Y HOTSPOT (Silent – No Beep)	86
DEFINE SCROLLING TEXTBOX	87
DEFINE SPECIAL HOTSPOT (Invisible Touch Area)	
DEFINE SPECIAL HOTSPOT (Invisible, No Beep)	
DEFINE SPECIAL TYPEMATIC TOUCH AREA	
DEFINE TEXT WINDOW (SLCD5+ Only)	
DEFINE TOUCH ACTION	
DEFINE TOUCH CALIBRATION TIMEOUT	
DEFINE TOUCH PARAMETERS	89
DEFINE TOUCH SIGNAL ORIENTATION	
DEFINE TYPEMATIC TOUCH AREA	
DISABLE TOUCH (Hotspot / Button)	
DISPLAY BITMAP IMAGE	
DISPLAY BITMAP IMAGE CENTERED	
DISPLAY CLIPPED RITMAP IMAGE	91

DISPLAY CONFIG STRING	
DISPLAY IMAGE FILE	92
DISPLAY ON/OFF	
DISPLAY WINDOWED BITMAP IMAGE	93
DRAW ARC SEGMENT	93
DRAW CIRCLE	94
DRAW ELLIPSE	94
DRAW FILLED ELLIPSE	
DRAW FILLED POLYGON	
DRAW LINE	
DRAW OUTLINE POLYGON	
DRAW POLYLINE	
DRAW RECTANGLE	
DRAW ROTATED FILLED POLYGON	96
DRAW ROTATED POLYGON	
DRAW ROTATED POLYLINE	
DRAW TRIANGLE	
EEPROM READ, WRITE	
ENABLE TOUCH (Hotspot / Button)	
EXTERNAL BACKLIGHT BRIGHTNESS CONTROL	
EXTERNAL BACKLIGHT BRIGHTNESS CONTROL	
EXTERNAL MEMORY AVAILABLE	
EXTERNAL MEMORY CHIP ERASE	
GET PANEL TYPE	
GET TEXT DISPLAY WIDTH IN PIXELS	
GET VARIABLE	
GET VARIABLE (HEX)	
GOTO POSITION IN TEXT WINDOW (Absolute) (SLCD5+ Only)	
GOTO POSITION IN TEXT WINDOW (Percentage) (SLCD5+ Only)	102
LAST FIRMWARE FILE LOADED	
LEVELBAR DEFINE	
LEVELBAR VALUE	
LIST BITMAPS DETAIL	
LIST DOWNLOADED RECORDS	
LIST MACROS DETAIL	104
LIST SD CARD DIRECTORY	
LOAD SYSTEM FILE FROM SD CARD (CURRENT DIRECTORY)	
LOAD SYSTEM FILE FROM SD CARD (SPECIFIED DIRECTORY)	
LOAD SYSTEM FILE FROM SD CARD INTO FLASH (SLCD5+ Only)	105
LOAD TEXT WINDOW BUFFER (SLCD5+ Only)	106
MACRO ABORT	106
MACRO EXECUTE	107
MACRO NOTIFY	108
MEMORY POP	108
MEMORY PUSH	
METER DEFINE	110
METER DEFINE BAND	111
METER VALUE	
METER VALUE BAND	
MOVE TEXT WINDOW (SLCD5+ Only)	
OUTPUT STRING (AUX)	

OUTPUT STRING (MAIN)	115
PANEL TIMING ADJUST	115
PIXEL READ	116
PIXEL WRITE	116
POWER-ON MACRO	117
PREPEND SCROLLING TEXTBOX	117
QUERY SCROLLING TEXTBOX	118
QUERY TEXT WINDOW (SLCD5+ Only)	118
READ FRAME BUFFER LINE	118
READ FROM AUX PORT	118
READ TEMPERATURE	119
REDRAW ROTATED POLYGON	119
REDRAW TEXT WINDOW (SLCD5+ Only)	
RESET BOARD / SOFTWARE	119
RESET BOARD TO MANUFACTURED STATE	120
RESET TOUCH CALIBRATION	120
RESTORE DRAWING ENVIRONMENT (State Restore)	120
SAVE DRAWING ENVIRONMENT (State Save)	
SAVE CONFIGURATION TO SD CARD	
SAVE SCREEN SHOT TO SD CARD	121
SCROLL SCREEN AREA	
SET AUX ESCAPE	
SET AUX PORT AUTO READ	
SET BAUD RATE	123
SET BAUD RATE (Output Prompt First)	
SET BAUD RATE (Sticky and Prompt First)	
SET COLOR (Basic)	
SET COLOR (Detailed)	
SET CONTROL PORT	
SET CURSOR	127
SET DRAW MODE	
SET FONT	
SET or QUERY (LATCHING) STATE BUTTON	
SET LED.	
SET ORIGIN	
SET PEN WIDTH	
SET PREVIOUS CONTROL PORT	129
SET TEXT ALIGNMENT	
SET TEXT MODE	
SET TOUCH CHARACTERISTICS	
SET TOUCH DEBOUNCE	
SET TYPEMATIC PARAMETERS	132
SET VARIABLE	
SET VARIABLE (HEX)	
SLIDER DEFINE	
SLIDER VALUE.	
SPEAKER ON / OFF (Rev D and later boards only)	
SPEED TEST	
SPLASH SCREEN.	
TEXT DISPLAY.	
TEXT FLASHING DELETE	

	TEXT FLASHING DISABLE	138
	TEXT FLASHING DISPLAY	139
	TEXT FLASHING ENABLE	
	TEXT FLASHING SYNCHRONIZE	
	TOUCH CALIBRATE	
	TOUCH MACRO ASSIGN	
	TOUCH MACRO ASSIGN QUIET	
	TOUCH MACRO ASSIGN WITH PARAMETERS	
	TOUCHSCREEN ON/OFF	
	TOUCH SIMULATE MOMENTARY	
	TOUCH SIMULATE PRESS	
	TOUCH SIMULATE RELEASE TOUCH SIMULATE TYPEMATIC	
	UTF8 ENABLE / DISABLE	
	VERSION	
	WAIT	
	WAIT FOR REFRESH	
	WAIT VERTICAL RETRACE	
	WINDOW RESTORE (SLCD5+ Only)	
	WINDOW RESTORE RECTANGLE (SLCD5+ Only)	
	WINDOW SAVE (SLCD5+ Only)	
6.	FONTS	
6.1	External Fonts	148
6.2	CHARACTER SET – ISO 8859-1	
7.	COLOR SPECIFICATIONS	150
7.1	OVERVIEW	150
7.2	RGB565 Encoding	150
8.	USING CRC'D COMMANDS	151
8.1	Overview	151
8.2	COMMAND PROTOCOL	151
8.3	EXAMPLE CRC GENERATION CODE	151
9.	COMMUNICATIONS WATCHDOG TIMER	154
9.1	Overview	154
9.2	USING THE '*COMWDT' COMMAND	
9.3	Example	
10.	WORKING WITH VARIABLES	157
10.1	Overview	157
10.1		
10.2		
10.4		
11.	USING SIMPLE MATH EXPRESSIONS	161
11.1	OVERVIEW	
11.2	LIMITATIONS AND REQUIREMENTS	
112	EVAMBLES	167

APPE	NDIX A – LCD AND TOUCH PANELS COMPATIBLE WITH THE SLCD CONTROLLER	
A.1	LCD PANELS	163
A.2	TOUCH PANEL	163
APPE	NDIX B – PARTS AND SUPPLIERS FOR SLCD5 CONNECTIONS	164
B.1	CONNECTORS AND CABLES FOR J6, J7, J10, J13	164
B.2	CABLES FOR J8.	
B.3	DISCRETE WIRE CABLE VENDORS	164
APPE	NDIX C – ORDERING INFORMATION	165
C.1	GENERAL INFORMATION	
C.2	CONTACT REACH DIRECTLY FOR SPECIFIC ORDERING INFORMATION	165
APPE	NDIX D – BMPLOAD PROGRAM	166
D.1	OVERVIEW	166
D.2	BITMAP COMPRESSION	
D.3	BITMAP FORMAT	
D.4	PROGRAM OPERATION	
D.5 D.6	CONNECTING VIA SERIAL PORT	
	NDIX E – MACRO COMMANDS AND FILE FORMAT	
E.1	INTRODUCTION AND LIMITATIONS	
E.2 E.3	MACRO FILE FORMATMACRO PARAMETERS (ARGUMENTS)	
E.3 E.4	ASSIGNING MACROS TO BUTTONS	
E.5	SPECIAL MACRO COMMANDS, AND MACRO LABELS	
	Memory commands	
	Special Arguments	173
	Repeat Command	
Г.	Labels	
E.6 E.7	CHANGING THE FIRMWARE POWER-ON BAUD RATE (POWER-ON MACRO) CHANGING THE FIRMWARE POWER-ON BAUD RATE (EEPROM)	
	NDIX F – TROUBLESHOOTING	
	Touch Unreliable or Non-Operative	
F.1		
APPE	NDIX G – EVALUATION / DEMO KIT TUTORIAL	
G.1	SELF-RUNNING DEMONSTRATION	
G.2	CONNECTION AND CONTROL VIA PC	
G.3 G.4	SIMPLE COMMANDSBITMAPS	
G.4 G.5	MACROS	
G.6	FONTS	
G.7	ATTACHING TO THE EMBEDDED CONTROLLER	
APPE	NDIX H – WORKING WITH BITMAPS	181
H.1	CREATING BITMAPS	181
H.2	HIGH COLOR	
11.2		101

H.4	Transparency	182
APPE	NDIX I – SD CARD SUPPORT FEATURES	183
I.1	Overview	183
I.2	FIRMWARE UPGRADE	183
I.3	HOLDING BINARY WORKING SET FILE	
I.4	UPDATE BINARY FILE IN FLASH	
I.5	SCREEN SHOT SAVING	
I.6	Run Demo Macro	
I.7	MULTIPLE BINARY FILES	
I.8	SEPARATE IMAGE FILES	
APPE	NDIX J – SD CARD REMOTE	185
J.1	OVERVIEW	185
J.2	SCHEMATIC	186
APPE	NDIX K – PREVIOUS VERSIONS	187
K.1	REV A VS. REV B BOARD FAB REV A VS. REV B BOARD FAB	187
K.2	REV B VS. REV D BOARD FAB	187
APPE	NDIX L – MANUAL CHANGE HISTORY	188
	Figures	
Figure	1: SLCD5+ (Rev D) Controller Board	14
	2: SLCD5 DIMENSIONS AND CONNECTOR LOCATIONS (INCHES)	
	4: TYPICAL (RS-232) CONNECTION FROM A PC	
	5: SLCD5 Power Connections	
	6: SLCD5 COMMUNICATIONS	
	7: POWERCOM4 BOARD SUPPLIED WITH EVALUATION KIT	
	8: POWERCOM4 SCHEMATIC	
	10: CABLE #23-0101 DIAGRAM	
	11: SYSTEM SOFTWARE BOOT ALGORITHM.	
	12: SD CARD SCHEMATIC	

0. Hardware Limited Warranty and Software License Agreement

0.1 Hardware Limited Warranty

REACH TECHNOLOGY, a Novanta Company, warrants its hardware products to be free from manufacturing defects in materials and workmanship under normal use for a period of one (1) year from the date of purchase from REACH. This warranty extends to products purchased directly from REACH or an authorized REACH distributor. Purchasers should inquire of the distributor regarding the nature and extent of the distributor's warranty, if any, REACH shall not be liable to honor the terms of this warranty if the product has been used in any application other than that for which it was intended, or if it has been subjected to misuse, accidental damage, modification, or improper installation procedures. Furthermore, this warranty does not cover any product that has had the serial number altered, defaced, or removed. This warranty shall be the sole and exclusive remedy to the original purchaser. In no event shall REACH be liable for incidental or consequential damages of any kind (property or economic damages inclusive) arising from the sale or use of this equipment. REACH is not liable for any claim made by a third party or made by the purchaser for a third party. REACH shall, at its option, repair or replace any product found defective, without charge for parts or labor. Repaired or replaced equipment and parts supplied under this warranty shall be covered only by the unexpired portion of the warranty. Except as expressly set forth in this warranty, REACH makes no other warranties, expressed or implied, nor authorizes any other party to offer any warranty, including any implied warranties of merchantability or fitness for a particular purpose. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty. This warranty statement supercedes all previous warranties, and covers only the Reach hardware. The unit's software is covered by a separate license agreement.

0.2 Returns and Repair Policy

No merchandise may be returned for credit, exchange, or service without prior authorization from REACH. To obtain warranty service, contact the factory and request an RMA (Return Merchandise Authorization) number. Enclose a note specifying the nature of the problem, name and phone number of contact person, RMA number, and return address.

Authorized returns must be shipped freight prepaid to Reach Technology, 5750 Hellyer Ave, San Jose, CA 95138 with the RMA number clearly marked on the outside of all cartons. Shipments arriving freight collect or without an RMA number shall be subject to refusal. REACH reserves the right in its sole and absolute discretion to charge a 15% restocking fee, plus shipping costs, on any products returned with an RMA.

Return freight charges following repair of items under warranty shall be paid by REACH, shipping by standard ground carrier. In the event repairs are found to be non-warranty, return freight costs shall be paid by the purchaser.

0.3 Software License Agreement

PLEASE READ THIS SOFTWARE LICENSE AGREEMENT CAREFULLY BEFORE USING THE SOFTWARE.

This License Agreement ("Agreement") is a legal contract between you (either an individual or a single business entity) and Reach Technology, a Novanta Compay ("Reach") for software referenced in this manual, which includes software embedded in the hardware product, and, as applicable, associated media, printed materials, and "online" or electronic documentation (the "Software").

BY INSTALLING, COPYING, OR OTHERWISE USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT INSTALL OR USE THE SOFTWARE. IF YOU HAVE PAID A FEE FOR THIS LICENSE AND DO NOT ACCEPT THE TERMS OF THIS AGREEMENT, REACH WILL REFUND THE FEE TO YOU PROVIDED YOU (1) DO NOT INSTALL THE SOFTWARE AND (2) RETURN ALL SOFTWARE, MEDIA AND OTHER DOCUMENTATION AND MATERIALS PROVIDED WITH THE SOFTWARE TO REACH TECHNOLOGY AT: REACH TECHNOLOGY, 5750 HELLYER AVE, SAN JOSE, CA 95138.

Reach Technology ("Reach") and its suppliers grant to Customer ("Customer") a nonexclusive and nontransferable license to use the Reach software ("Software") in object code form on one or more central processing units owned or leased by Customer or otherwise embedded in equipment provided by Reach.

EXCEPT AS EXPRESSLY AUTHORIZED ABOVE, CUSTOMER SHALL NOT: COPY, IN WHOLE OR IN PART, SOFTWARE OR DOCUMENTATION; MODIFY THE SOFTWARE; REVERSE COMPILE OR REVERSE ASSEMBLE ALL OR ANY PORTION OF THE SOFTWARE; OR RENT, LEASE, DISTRIBUTE, SELL, OR CREATE DERIVATIVE WORKS OF THE SOFTWARE.

Customer agrees that aspects of the licensed materials, including the specific design and structure of individual programs, constitute trade secrets and/or copyrighted material of Reach. Customer agrees not to disclose, provide, or otherwise make available such trade secrets or copyrighted material in any form to any third party without the prior written consent of Reach. Customer agrees to implement reasonable security measures to protect such trade secrets and copyrighted material. Title to Software and documentation shall remain solely with Reach.

SOFTWARE LIMITED WARRANTY. Reach warrants that for a period of ninety (90) days from the date of shipment from Reach: (i) the media on which the Software is furnished will be free of defects in materials and workmanship under normal use; and (ii) the Software substantially conforms to its published specifications. Except for the foregoing, the Software is provided AS IS. This limited warranty extends only to Customer as the original licensee. Customer's exclusive remedy and the entire liability of Reach and its suppliers under this limited warranty will be, at Reach's option, repair, replacement, or refund of the Software. In no event does Reach warrant that the Software is error free or that Customer will be able to operate the Software without problems or interruptions.

This warranty does not apply if the software (a) has been altered, except by Reach, (b) has not been installed, operated, repaired, or maintained in accordance with instructions supplied by Reach, (c) has been subjected to abnormal physical or electrical stress, misuse, negligence, or accident, or (d) is used in High Risk Activities.

DISCLAIMER. EXCEPT AS SPECIFIED IN THIS WARRANTY, ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS, AND WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE, ARE HEREBY EXCLUDED TO THE EXTENT ALLOWED BY APPLICABLE LAW.

IN NO EVENT WILL REACH OR ITS SUPPLIERS BE LIABLE FOR ANY LOST REVENUE, PROFIT, OR DATA, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL, OR PUNITIVE DAMAGES HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY ARISING OUT OF THE USE OF OR INABILITY TO USE THE SOFTWARE EVEN IF REACH OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

HIGH RISK ACTIVITIES. The Software Product is not fault-tolerant and is not designed, manufactured, or intended for use or resale as on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the Software Product, or any software, tool, process, or service that was developed using the Software Product, could lead directly to death, personal injury, or severe physical or environmental damage ("High Risk Activities"). Accordingly, Reach and its suppliers and licensors specifically disclaim any express or implied warranty of fitness for High Risk Activities. You agree that Reach and its suppliers and licensors will not be liable for any claims or damages arising from the use of the Software Product, or any software, tool, process, or service that was developed using the Software Product, in such applications.

In no event shall Reach's or its suppliers' liability to Customer, whether in contract, tort (including negligence), or otherwise, exceed the price paid by Customer. The foregoing limitations shall apply even if the above-stated warranty fails of its essential purpose. SOME STATES DO NOT ALLOW LIMITATION OR EXCLUSION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES.

The above warranty DOES NOT apply to any beta software, any software made available for testing or demonstration purposes, any temporary software modules or any software for which Reach does not receive a license fee. All such software products are provided AS IS without any warranty whatsoever.

This License is effective until terminated. Customer may terminate this License at any time by destroying all copies of Software including any documentation. This License will terminate immediately without notice from Reach if Customer fails to comply with any provision of this License. Upon termination, Customer must destroy all copies of Software.

Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software.

This License shall be governed by and construed in accordance with the laws of the State of California, United States of America, as if performed wholly within the state and without giving effect to the principles of conflict of law. If any portion hereof is found to be void or unenforceable, the remaining provisions of this License shall remain in full force and effect. This License constitutes the entire License between the parties with respect to the use of the Software.

1. Introduction

1.1 Overview

The SLCD5 controller family includes the original SLCD5 and the current SLCD5+. This manual will refer to both as the SLCD5 except where their features and capabilities differ. The SLCD5 and SLCD5+ have the same base board (large board) but different attached CPU modules. The SLCD5+ module has more storage, a faster processor, and is recommended for new designs.

The SLCD5 controllers provide complete Graphical User Interface for embedded systems using VGA, WVGA, and (SLCD5+ only) SVGA panels. Using the SLCD5 is simply the quickest way to generate a user interface without a lot of graphical programming. It has a small size to fit in space-constrained applications.



Figure 1: SLCD5+ (Rev D) Controller Board

1.2 Controller Features

- Drives digital TFT displays at VGA, WVGA, and SVGA resolution.
- 16-bit color (565 mapping same as PC / Mac).
- Touch controller (4 wire resistive) on board.
- Beeper for audible touch feedback and alarms.
- 3" by 4.5" size, 0.55" thick.
- High speed ARM9 processor (200+MHz).
- On-board RS232, RS485, and CMOS-level interfaces, up to 460,800 baud.
- Up to 28MB highly reliable NOR data flash for user downloadable bitmaps with optional RLE compression.
- Backlight enable and brightness control.
- SD card slot for firmware upgrades and bitmap / macro storage.
- Can be modified for specific OEM requirements.

1.3 Electrical Characteristics

Note: If you have a Reach Display Module that uses the SLCD5/SLCD5+, you need to refer to the Data Sheet for the Reach Display Module you are using for correct electrical characteristics (typically, the Display Module input voltage is more restrictive due to the LCD panel requirements).

If you are integrating the SLCD5/5+ Controller Board with your own display panel, you must determine the appropriate power for your display.

In general, as a stand-alone product, the SLCD5/5+ Controller Board can be powered with 5-12V DC +/- 10%. It has an on-board switching regulator that generates the 3.3V required by the LCD panel and the SLCD5/5+ processor.

LCD panels that require 3.3V power and have a 3.3V "CMOS" level compatible data interface are supported. A list of compatible panels in provided in <u>Appendix A</u>.

The power requirements shown below are typical values. The theoretical maximum when all parts are worst case is up to 2 times these values, but it is extremely unlikely that this will occur on a specific board. We suggest a 150% of the below values is a reasonable value.

The following table gives the SLCD5 Board Only Power Supply requirement; for a total power budget you must include the input-referenced panel power plus backlight power.

Supply Voltage:	Typical Current (beeper off):	Typical Current (beeper on full):	Typical Current (Vin -10%, speaker option, max volume):
5V nominal	260mA (typ.)	330mA (typ.)	530mA (typ.)
12V nominal	160mA (typ.)	210mA (typ.)	270mA (typ.)

1.4 Panel Support

See Appendix A.

1.5 SD Card Support

The SD card slot supports cards that are FAT 16 formatted, maximum 2GB. We have tested, and recommend SanDisk brand cards. You may need to format them on the PC before use with FAT (also known as FAT16) format selected (DO **NOT** USE "FAT32").

Long filenames are not supported; only 8.3 format names can be used.

1.6 Dimensions

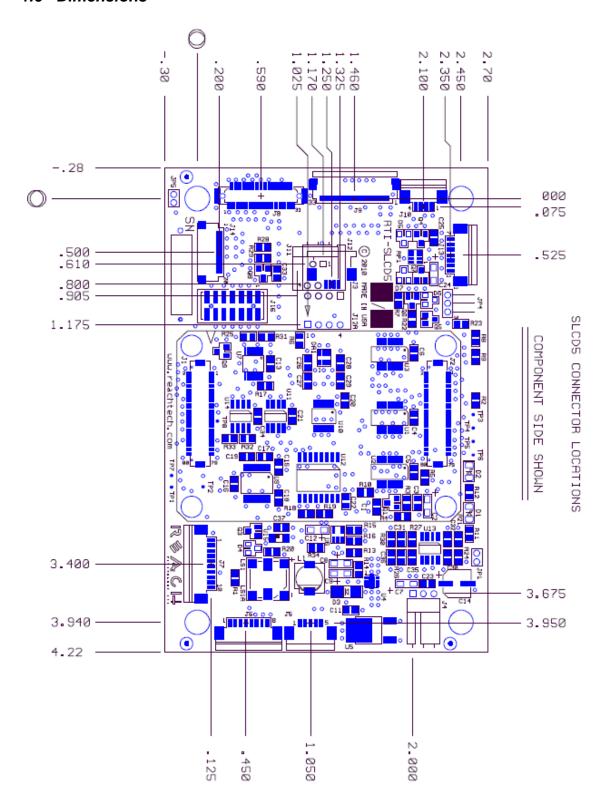


Figure 2: SLCD5 Dimensions and Connector Locations (Inches)

2. Connectors and Jumpers

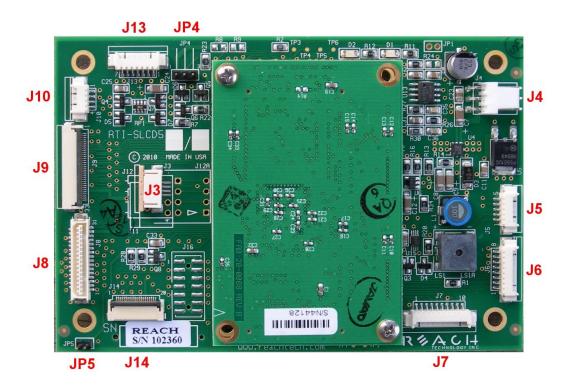


Figure 3: Connectors and Jumpers (SLCD5+ Rev D Shown)

2.1 Overview

The SLCD5 requires the following major connections for operation: **Power, Communications, Panel, and Inverter.** The following table summarizes these connections and options.

Purpose	Use	Notes
POWER	J6	J6 has both power and communications signals.
	- or –	
	J4	Alternate power connector. Can also be used as power out if J6 is providing power. Required if inverter (see below) takes more than 1A current.
COMMUNICATIONS	J6	COM0 port (typically RS-232).
	J7	COM1 port (RS-232, RS485/RS422 or CMOS 3.3V).
PANEL	J8	VGA panels, SVGA panels using DF9-31 or DF9-41 connector.
	J9	All other panels.
INVERTER	J13	High power inverters, two types of dimming supported.
	J10	Compatible with SLCD inverter cabling.

2.2 J6 – Power and Communication COM0 (RS232 Mode)

J6 8 Pin Molex 53261-0871 for Power and Main Communications

Pin	RS232 Mode – R1 installed on board
1	Do not connect
2	Do not connect
3	RS232 input (ESD protected 15KV)*
4	RS232 output (ESD protected 15KV)*
5	Backlight power input, feeds directly to J10, J13, max. 1A (Note 2, 4)
6	Ground
7	5 – 12V main power Input (Note 1, 3, 4)
8	Ground

Note 1: The board can be powered either through J6 OR J4. If it is powered through J4, pins J6-5 and J6-7 do not need to be connected.

Note 2: Rev B board: If pin 5 is powered with 5V for a 5V backlight driver / inverter, resistor R8 (zero ohms) needs to be installed for full speaker volume.

Note 3: Rev A board: If pin 7 is powered with 5V, Jumper JP2 needs to be installed for full speaker volume.

Note 4: Consult appropriate Reach Display Module Data Sheet; some modules work only with 5V, some only with 12V.

*ESD protection via ICL3222E ESD protected RS-232 transceiver or equivalent.

Backlight Voltage

Main voltage

GND

P1 5 GND

O 3 PC DATA OUT
O 7 PC DATA IN

AMP 747844-4

Molex 53261-0890

PC serial compatible

Typical connection from a PC (RS-232) is as follows:

Figure 4: Typical (RS-232) Connection from a PC

2.3 J6 – Power and Communication COM0 (3.3V CMOS Mode)

To use this mode, REMOVE resistor R1 from the board to disconnect the RS232 receiver from pin 2.

J6 8 Pin Molex 53261-0871 for Power and Main Communications

Pin	CMOS I/F Mode – R1 removed from board
1	UART TxD (output from SLCD5) (Note: Connects directly to CPU!)
2	UART RxD (input to SLCD5) (Note: Connects directly to CPU!)
3	Do not connect
4	Do not connect
5	Backlight power input (Typically. 12V) input, max. 1A (Note 1, 2, 4)
6	Ground
7	5 – 12V main power Input (Note 1, 3, 4)
8	Ground

Notes: See Section 2.2 above.

pinout DB9 Female

2.4 J7 - Communication COM1 and Reset

On the standard SLCD5 controller, J7 supports either RS-232 levels OR 3.3V CMOS levels as a serial port interface. This is selected via a jumper on the connector. It can also support RS485/RS422 as a manufacturing option.

J7 10 Pin Molex 53261-1071 for **RS232 COM1** Communications

Pin	Connections for RS232 Mode
1	3.4V output (for powering external transceiver)
2	Not used
3	No connect
4	Connect to pin 9
5	RS-232 out (ESD protected 15KV*)
6	RS-232 in (ESD protected 15KV*)
7	Ground
8	RESET- input (active low with on-board pull-up)
9	Connect to pin 4 to select RS232 operation
10	Not used

^{*}ESD protection via ICL3222E ESD protected RS-232 transceiver or equivalent.

Example J7 Cable for connecting to PC serial port via DB9-Female

J7 Pin	DB9 (Female) pin	Signal
5	2	RS-232 from SLCD5 to PC
6	3	RS-232 from PC to SLCD5
7	5	Ground
4	n/a	Connect to pin 9
9	n/a	Connect to pin 4

J7 10 Pin Molex 53261-1071 for 3.3V CMOS COM1 Communications

Pin	Connections for 3.3V CMOS Mode	
1	3.4V output (for powering external transceiver)	
2	RTS (can be used to enable external driver)	
	buffered, 3.3V CMOS levels, 5v tolerant	
3	No connect	
4	RxD- (standard UART receive data input),	
	buffered, 3.3V CMOS levels, 5v tolerant	
5	Do not use	
6	Do not use	
7	Ground	
8	RESET- input (active low with on-board pull-up)	
9	Do not use	
10	*TxD- (standard UART transmit data output)	
	buffered, 3.3V CMOS levels, 5v tolerant	

J7 10 Pin Molex 53261-1071 for RS485/RS422 COM1 Communications NOTE: THIS IS AVAILABLE ONLY AS A MANUFACTURING STUFF OPTION (U14 SN65HVD32D, R25=0 OHM).

Pin	Connections for RS485 / RS422 Mode	
1	3.4V output (for powering external transceiver)	
2	Inverting driver output*	
3	Inverting input**	
4	Non-inverting input**	
5	Do not use	
6	Do not use	
7	Ground	
8	RESET- input (active low with on-board pull-up)	
9	Do not use	
10	Non-inverting driver output*	

^{*}On-board optional output termination resistor is R33.

^{**} On-board optional input termination resistor is R32.

2.5 J4 – Power

Used if separate power input is desired. Can also be used as passthrough output for power supplied via J6).

J4 3 Pin Molex 22-05-3031 0.1" polarized or equivalent

Pin	Signal
1	Backlight and Speaker power. Connects directly to J6-5. J10-1, J13-1, J13-2. Typically 5V or 12V (Note 1, 4)
2	Main power, connects directly to J6-7. Typically 5V or 12V (Note 1, 4)
3	Ground (common to main and inverter power)

Note 1: Notes for J6 power levels should be applied.

2.6 J3 – 4 Wire Touch (hardware version dependent)

J3 4 Pin Molex 52271-0469 or equivalent bottom contact 1mm pitch bottom contact Zero-Insertion-Force

Pin	Signal*
1	X Right / X+
2	Y Down / Y+
3	X Left / X-
4	Y Up / Y-

Connector compatible with Fujitsu N010-0554-T511 8.4" 4-wire touch or similar.

All signals are ESD protected via California Micro Devices PACDN044Y5.

2.7 J11 – 4 Wire Touch (hardware version dependent)

J11 4 Pin Molex 39-51-3043 or equivalent 1.25mm pitch top contact Zero-Insertion-Force Connector

Pin	Signal
1	Y Up
2	X Left
3	Y Down
4	X Right

For Kyocera touch.

2.8 J12 – 4 Wire Touch (hardware version dependent)

J12 4 Pin Molex 22-05-3041 or equivalent 0.1" pitch 0.025" square post right angle friction latch Connector

Pin	Signal
1	X Right
2	Y Up
3	X Left
4	Y Down

Compatible with Kyocera top contact 1.25 mm pitch touch panels.

2.9 J9 – 33 pin 0.5mm Flat Flex LCD Connector

J9 33 Pin Omron XF2M-3315-1 0.5mm pitch Zero-Insertion-Force Connector

Pin	Signal	Pin	Signal
1	GND	18	Green 5
2	LCD Clock	19	GND
3	LCD Line Pulse (HSYNC)	20	Blue 0 (= Blue 5)
4	LCD Frame Pulse (VSYNC)	21	Blue 1
5	GND	22	Blue 2
6	Red 0 (= Red 5)	23	Blue 3
7	Red 1	24	Blue 4
8	Red 2	25	Blue 5
9	Red 3	26	GND
10	Red 4	27	LCD DE (Data Enable)
11	Red 5	28	LCD VCC
12	GND	29	LCD VCC
13	Green 0	30	R/L *
14	Green 1	31	U/D *
15	Green 2	32	V_Q**
16	Green 3	33	GND
17	Green 4		

^{*} These signals can be set via SLCD5 "*orient" command.

^{**} This signal is typically set by the board's firmware and is panel-dependent. Note: The SLCD5 supports 565 16-bit color, so the least significant color bits are set to the most significant bit. This preserves dynamic range at the expense of middle level steps.

2.10 J8 - 31 pin 1mm LCD Connector

J8 31 Pin Hirose DF9-31P Connector

Pin	Signal	Pin	Signal
1	GND	17	Green 4
2	LCD Clock	18	Green 5
3	LCD Line Pulse (HSYNC)	19	GND
4	LCD Frame Pulse (VSYNC)	20	Blue 0 (= Blue 5)
5	GND	21	Blue 1
6	Red 0 (= Red 5)	22	Blue 2
7	Red 1	23	Blue 3
8	Red 2	24	Blue 4
9	Red 3	25	Blue 5
10	Red 4	26	GND
11	Red 5	27	LCD DE (Data Enable)
12	GND	28	LCD VCC
13	Green 0	29	LCD VCC
14	Green 1	30	R/L *
15	Green 2	31	U/D *
16	Green 3		

^{*} These signals can be set via SLCD5 "*orient" command

2.11 J10 - Backlight / Inverter Control

J10 4 Pin Molex 53261-0471

Pin	Signal
1	Backlight power (connects directly to J6-5. J4-1, J13-1, J13-2)
2	Ground
3	Backlight on/off control
4	Backlight brightness control (analog voltage)

This connector is used to power and control the panel backlight. The active sense of the on/off control (active high or low) is set in the firmware. The sense and range of the brightness voltage output is also set in the firmware.

2.12 J13 – Backlight / Inverter Control

J13 7 Pin Molex 53261-0771

Pin	Signal
1	Backlight power (connects directly to J6-5. J4-1, J10-1)
2	Backlight power (connects directly to J6-5. J4-1, J10-1)
3	Ground
4	Ground
5	Backlight on/off control
6	Backlight brightness control (analog voltage)
7	ERG Backlight on/off + PWM (high = on)

This connector is used to power and control the panel backlight. The active sense of the on/off control (active high or low) is set in the firmware. The sense and range of the brightness voltage output is also set in the firmware.

2.13 J5 – External Audio Output (not typically used)

J5 5 Pin Molex 53261-0571 or equivalent

Pin	Signal
1	Audio out (-)
2	Audio out (+)
3	N/C
4	Speaker out 1
5	Speaker out 2

The Audio out provides a square wave at audio frequency and is the same signal as connected to the on-board beeper. The Speaker output is designed to connect to an 8 ohm speaker, typically 0.5W-IW size. The speaker vs. beeper selection is made by firmware command (see <u>SPEAKER ON/OFF</u>).

2.14 J15 SD Card Connector

The SD card connector on the back of the SLCD5 is compatible with standard SD cards.

J15 ALPS P/N SCDA\$A0301

Pin	Signal		
1	SD_DAT3		
2	SD_CMD		
3	GND		
4	V_CARD (approx. 3.15V)		
5	SD_CLK		
6	GND		
7	SD_DAT0		
8	SD_DAT1		
9	SD_DAT2		
10	GND (Tab)		
11	GND (Tab)		
12	GND (Tab)		
13	n/c		
14	SD_DETECT		
15	SD_WP		
16	GND		

2.15 J14 - For External SD Card

The SLCD5 has an SD card slot on the back of the board. The SD card signals are also routed to J14 so that the SD socket can be placed on a small board and located in a more convenient location.

J14 20 Pin Omron XF2M-2015-1 0.5mm pitch Zero-Insertion-Force Connector

Pin	Signal	Pin	Signal
1	GND	11	GND
2	SD_DAT2	12	SD_DAT1
3	GND	13	GND
4	SD_DAT3	14	n/c
5	GND	15	V_CARD (approx. 3.15V)
6	SD_CMD	16	n/c
7	GND	17	n/c
8	SD_CLK	18	SD_LED* for activity indication
9	GND	19	SD_DETECT
10	SD_DAT0	20	SD_WP

^{*} High true LED drive, max 3.4V, must provide external series resistor.

2.16 JP5 - SD Card Power

When installed, JP5 forces the SD card power to be on when power is applied. This is for compatibility with older firmware that did not control the SD card power, and previous hardware versions.

2.17 JP2 - Deprecated for Rev B and Above

The SLCD5 is typically powered by 12VDC, and generates 5V for its on-board speaker and inverter interface via a linear regulator. If the board is powered with 5V (JP6-7 or J4-2) the linear regulator needs to be bypassed for maximum beeper volume and inverter control. Insert JP2 in this case.

CAUTION: WITH JP2 INSTALLED, APPLYING 12VDC to JP6-7 / J4-2 WILL DAMAGE THE BEEPER AND POSSIBLY THE ATTACHED INVERTER.

3. Configuration Guide

3.1 Power Connections

The diagram below illustrates the power flow in an SLCD5 configuration.

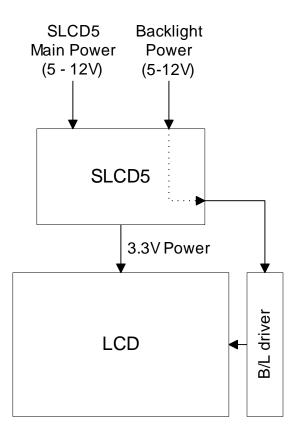


Figure 5: SLCD5 Power Connections

3.2 Serial Ports

The SLCD5 can use either RS-232 levels or CMOS logic levels for serial communication. As shipped in the standard configuration, the COM0 serial port is configured for RS-232 and the COM1 serial port is either RS-232 or CMOS cable jumper selectable. The COM0 can be set for CMOS levels by removing resistor R1. This can be provided as a factory option when production board quantities are ordered – contact the factory for ordering information. COM1 has the option to be RS485/RS422 as a manufacturing option – consult the factory.

In the SLCD5 development kits, the COM0 and COM1 ports are mapped to "Main" and "Aux" ports. The Main port is connected to the embedded processor and controls the display. The Aux port is typically connected to a PC and is used to update the bitmaps and macros stored on the board.

By default, the serial communication protocol is 115200 baud, 8 data bits, no parity, with 1 stop bit, and software (XON/XOFF) flow control. The baud rate can be changed by using a power-on macro (see Appendix E), or by using the "bauds" command.

The following diagram illustrates this communications setup.

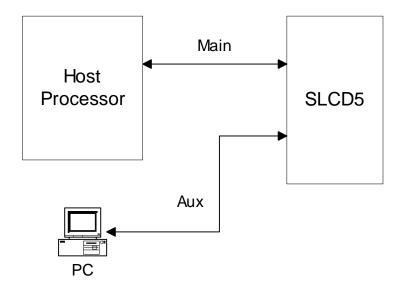


Figure 6: SLCD5 Communications

3.3 TFT Hardware Panel Orientation

Some TFT LCD panels have orientation signals such as "UP / DOWN", and "LEFT / RIGHT" that allow the display orientation to be flipped in the horizontal and / or vertical orientation. The SLCD5 provides these signals on the LCD connector, and they can be set under software control using the *orient* command or the origin config.ini setting.

3.4 System Configuration

The SLCD5 maintains touch calibration and option parameters in non-volatile memory (EEPROM). These parameters include LCD timing, inverter interface details, startup command, and so on. These can be set via the serial command interface, but in a production environment, it is recommended to set them via a file on an SD card. In this way, the SLCD5 can be configured for production simply by inserting the appropriate SD card and cycling power. When the controller starts, it reads the configuration file and stores the specified values into EEPROM. This is done only once, as typically the SD card is not shipped installed in the unit.

Warning: The EEPROM has a limited life of 1,000,000 writes. The CONFIG.INI file causes the EEPROM to be written, and so it should not be present on an SD card installed in a production system.

The config.ini file must be in the root directory of the SD card. It is a plain text file, with one or more lines in the following format:

```
<variable name> = <value>
```

Comments are indicated by a # character at the beginning of a line. Empty lines are allowed and ignored.

Note that unlike a PC Windows system, the config.ini file only needs to be present once on power-on to set the board optional parameters. It should not be present on an SD card that is present on power-on since it will re-write the EEPROM each time the board is powered on.

CONFIG.INI Example:

```
#--- start of file----
#this is an example

#display active config.ini statements on COMO port at
power-on
verbose = 1

#set power on macro to 1
PONMAC = 1
#PONMAC = 2 - example of how to comment out an
alternate value

#set test string response to *config command
config = "test config file"

#--- end of file ----
```

CONFIG.INI Options: (* indicates default)

Variable Name	Values	Action
verbose	0* or 1	If 1, the valid config variables are displayed on the console port at power-on. This helps in debugging or validating a config,ini file.
mainPort	0* or 1	Sets the COM port that is active on power-on. Note that boot and startup messages will always be displayed on COM0.
orient	03	Equivalent to *orient command.
invEnaHiTrue	0 or 1	Same as *invEnaHiTrue command.
pwmlsEnable	0 or 1	Same as *pwmlsEnable command.
maxBrite	0255	Same as *maxBrite command.
minBrite	0255	Same as *minBrite command.
brite	0255	Same as xbb command.
touchSwap	0 or 1	Same as *touchSwap command This is no longer needed due to 5 point calibration.
tsamp	020	Default value is panel-dependent
		See *touchParm command.
tspan	020	Default value is panel-dependent
		See *touchParm command.
touchMode	0*7	bit 1 => lockout bit 2 => validate touch pressure bit 3 => touch wander acts as release
		See *touchMode command.
tplo	065535	Default value is panel-dependent.
tphi	065535	Default value is panel-dependent.
tcTimeout	099	Same as *tcTimeout command.
auxEsc		Same as *auxEsc command.
beepFreq	03000	Same as bf command.
beepVol	0255	Same as by command.
debounce	50200	Same as *debounce command.
typematicDelay		Same as first argument of typematic command.
typematicRepeat		Same as second argument of typematic command.
PONMAC		Same as *PONMAC command, except that the <option> parameter is handled automatically. If macro <index> is 0 or 255, the copyright display is enabled, otherwise it is disabled.</index></option>
SPL		Same as *SPL command.
hfp		Set LCD horizontal "front porch" timing in clocks.

hpw		Set LCD horizontal sync width timing in clocks.
hbp		Set LCD horizontal "back porch" timing in clocks.
vfp		Set LCD vertical "front porch" timing in lines.
vpw		Set LCD vertical sync width timing in lines.
vbp		Set LCD vertical "back porch" timing in lines.
config "text string"		Sets response for *config command.
LCDshiftclock	0 or 1	0 = Data stable on positive edge of LCD Shift Clock.
		1 = Data stable on negative edge of LCD Shift Clock.
baud0	460800	Set COM0 baud rate.
baud1	230400 115200 57600 38400 19200 9600 4800 1200	Set COM1 baud rate.
		The new rate becomes active at the next power cycle.
externalSpeaker	0* or 1	0 = External Speaker OFF, on-boad Beeper ON
		1 = External Speaker ON, on-board Beeper OFF
autoCal	0* or 1	0 = autoCal disabled.
		1 = autoCal enabled: if the touch screen is touched while the unit powers on, it will perform a touch calibration and then continue normal startup.
macdebug	0* or 1	Same as *macdebug command. Use to debug power on macro.

4. System Overview

4.1 General SLCD5 Controller Information

The SCLD5 acts as a "smart terminal" and is meant to be connected to a host processor that implements the desired Graphical User Interface (GUI) by issuing commands to the SLCD5 and processing button press responses from the SLCD5. In this manual, the term "host" is used to describe the device connected to the SLCD5.

For use in systems where the connection between the SLCD5 and the host needs to be checked for validity on a regular basis, a Communications Watchdog feature can be enabled to cause special messages to be sent to the "host" if the SLCD5 does not receive input from the "host" for an interval determined by the host (see COMMUNICATIONS WATCHDOG).

4.2 Compatibility with SLCD, SLCD6, SLCD43, SLCD+ controllers

The SCLD5 is generally software-compatible with the smaller screen SLCD family controller. The significant differences are:

- The built-in fonts are different. The SLCD fonts were specifically designed for a small screen. The SLCD5 fonts are Microsoft Windows compatible to ease graphic bitmap development. The SLCD font names are still supported so that macros will not fail, but the fonts are different.
- The latching button response has changed; there is now a space between the button index and the state:

Response format: s<index> <state>

Example: s128 1

• The SLCD5 is much faster; this may impact host timing.

4.3 Bitmaps and Macros

To implement a GUI, a set of graphic images are needed for backgrounds, logos, buttons, switches, and so forth. These are created on a PC as bitmaps (.bmp files) in 24-bit color. Photoshop and Gimp can be used as bitmap editors. The bitmaps are compressed into a binary file which is then either downloaded directly into the SLCD5 flash memory via the serial port, or stored on an SD card that is then inserted into the SLCD5.

This binary file can also contain macros and extra fonts. A macro is a set of commands that can be invoked with a single command, and this is detailed in <u>Appendix E.</u>

In a development environment, the SD card is a convenient way to load bitmaps stored macros. Once development is complete, the SD card is also used to update the on-board flash memory. Once updated, an SD card is no longer needed to be shipped with the controller.

Bitmaps are numbered from 1 to n, depending on how many bitmaps are loaded (with <u>BMPload</u>). The first bitmap loaded will be bitmap #1, the second bitmap loaded will be #2, etc.

See <u>Appendix D</u> regarding the BMPload program that is provided to store bitmaps and other data into the SLCD5.

4.4 Overview – SLCD5 Evaluation Kits

The SCLD5 is available in an evaluation kit form. It comes pre-loaded with bitmaps and macros that implement a demo if the unit is powered on with an SD card installed that contains a file "rundemo.ini". This file is a standard text file that contains the line:

• demomac = <macro number>

For example:

• demomac = 1

Where the <macro number> is the macro to run at power-on, typically 1. The SLCD5 evaluation kit comes with a two-port DB9 interface board that makes it easier to develop applications. One port connects to the host processor and the other connects to a PC which is used to interactively develop screen content and test commands and also to download bitmap images.

4.5 Getting Started

The SLCD5 kit as shipped contains a demo that allows you to verify its functionality and see various interface possibilities. Just plug the supplied power supply into the barrel connector on the triangular PowerCom 4 board. The display should light up and lead you through various touch-activated screens. If for some reason the touch is not working, you may need to run the "touch calibrate" command.

Note that in a kit, the demo is preloaded into the unit's flash memory, and includes both bitmap files and a macro file. To best learn how the SLCD5 board and this kit works, start with simple commands using the serial interface and leave the creation and use of macros for later.

Appendix G provides a brief tutorial.

4.6 Connecting the kit to a PC

The kit should be connected to a PC so that the serial command interface can be experimented with. This is a preliminary step before the unit is connected to the embedded system that will control the kit.

As shipped, the serial port is set to 115,200 baud, 8-bit, 1 start, 1 stop, no parity. There are two DB9 connectors on the triangular "PowerCom 4" board. Connect the PC using a straight through serial cable to the DB9 marked "MAIN" (P1). A USB-to-serial adapter cable can also be used and plugged directly into this connector. Reach recommends the FTDI series of serial adapters, see www.ftdichip.com. These can be purchased from www.digikey.com. Warning: The Belkin USB-serial adapter has software compatibility issues and is not recommended.

Once connected, use a terminal emulator such as Realterm (http://realterm.sourceforge.net/) to send and receive commands from the unit.

Appendix G provides a brief tutorial.

4.7 Switching Between PC and Embedded Controller

The SLCD5 firmware has the concept of a "Main" control port and an "Aux" port. The main port is used to send commands to the unit. During development, it is useful to be able to switch which physical port is considered Main. This is useful so that the PC can take control and download new images, or be used to test a command via a serial terminal emulator.

Switching happens when the aux port receives three <return> characters in a row. After that, it switches to become the main port. The BMPload program uses this method to take control and download new bitmaps. It also uses the *prevCons command to switch back so that the embedded host has control.

The embedded host code should be written such that when it starts and tries to connect to the SLCD5, it issues a <return>, waits for the SLCD5 prompt (2 characters, '>' followed by <return>), and then tries again. Doing this, it will end up sending the three <return> characters in a row and auto switch the port it is connected to the main port.

NOTE: Only one port is in control at any given time.

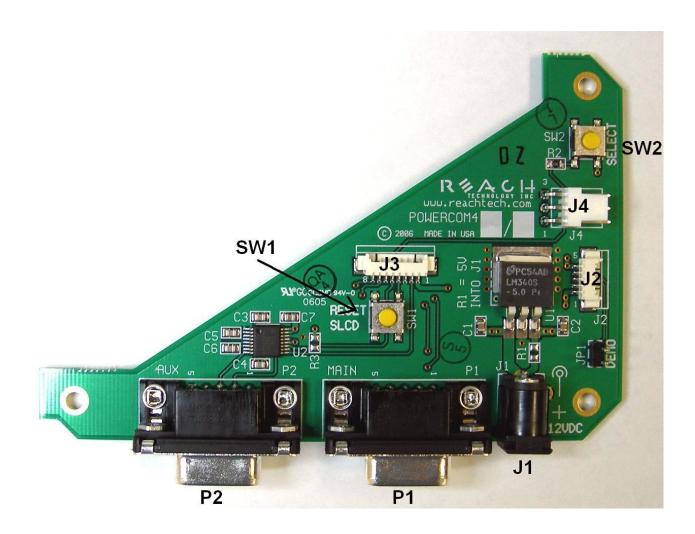


Figure 7: PowerCom4 Board Supplied with Evaluation Kit

4.8 PowerCom4 Schematic

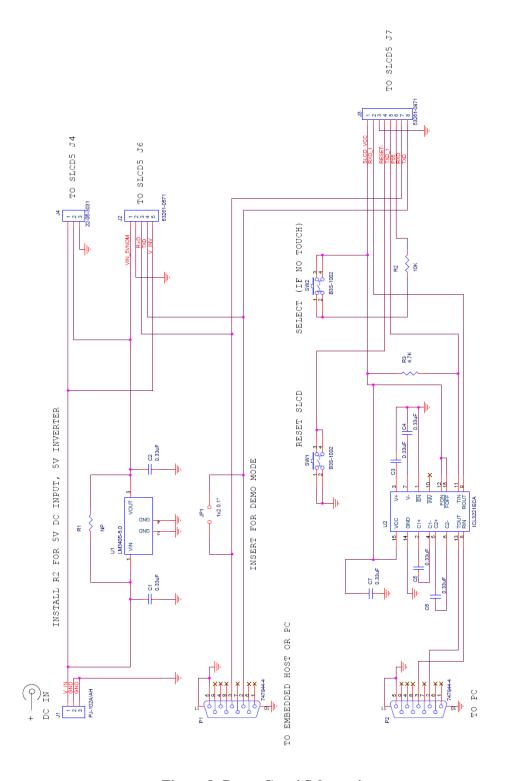


Figure 8: PowerCom4 Schematic

4.9 PowerCom4 Cable Schematic

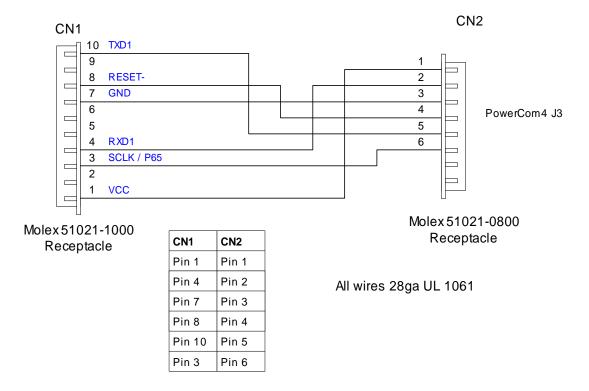


Figure 9: Cable #23-0101 Diagram

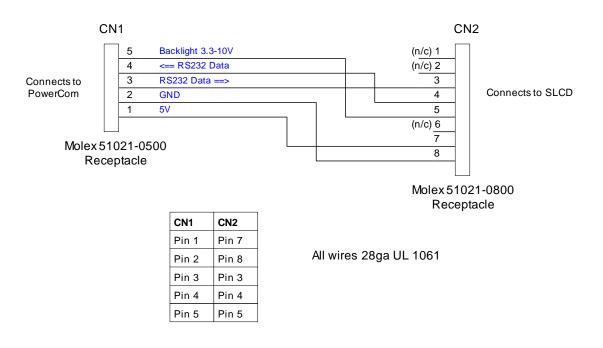


Figure 10: Cable #23-00064 Diagram

4.10 PowerCom4 Operational Notes

Operational Notes

- 1. The unit default baud rate is 115200. The unit does not echo characters (for communications efficiency), so you must select "echo characters locally" or set "half duplex" in your PC communications program. Also, all return strings are terminated by a <return> only, so you need to specify "add line feed to line return" as well.
- 2. The internal demo starts with an optional touch calibration. In order for the touch screen to work reliably, ensure the LCD frame is grounded to the SLCD5 mounting holes.
- 3. The demo requires a certain set of bitmaps, macros, and fonts to be loaded. If these are not present, the demo will not run correctly. Copies of these are provided in the "Reach_SD_Card/<screen type>" folders on the CD provided. Copy the appropriate folder to the SD card, and install the SD card into the SLCD5 to run the demo.
- 4. The SW1 "RESET" button on the PowerCom4 board resets the SLCD5 processor and performs the equivalent of a power-on reset.
- 5. The SW2 "SELECT" button on the PowerCom 4 board is intended for use with kits that don't have a touch screen, and is not implemented on a standard kit.
- 6. Jumper JP1 marked "DEMO" should not be used with the SLCD5 controller.
- 7. The J1 barrel connector is the external power supply connector for the development kit. For kits that use 12V input, it is 2.1mm, center pin positive. For kits with 5V input, it is 2.5mm, center pin positive. This prevents a 12V supply from being used with a 5V kit.
- 8. Connector J2 provides the communications path for the P1 "MAIN" RS232 serial port. It connects to J6 of the SLCD5 controller. Connector J2 also provides 5VDC power to the SLCD5 controller.
- 9. Connector J3 of the PowerCom4 board is the communications path for the P2 "AUX" RS232 serial port. It connects to J7 of the SLCD5 controller. This provides the path for the "RESET", and "SELECT" signal buttons, as well as the communications path for downloading of bitmaps and macros to the SLCD5 controller.
- 10. Connector J4 is reserved for future use.

4.11 Communications Interface

General

- Default communication is at a baud rate of 115200 with no parity, software (XON/XOFF) flow control, 8 bits of data, and 1 stop bit. The baud rate can be set to a different initial value on power-on by using the bauds or POWER-ON MACRO feature.
- Only one comport can be in control of the SLCD5 at any time; control may be switched to the other port using software. (See Switching Between PC and Embedded Controller).
- ASCII commands consist of a command (one or more ASCII characters) followed by the data associated with that command, followed by a carriage return. In this manual, the return character (value 0x0D, decimal 13) is signified by <return>.
- Screen pixel values start at the upper left-hand corner. This is point x=0, y=0. The lower right corner is point x=(width-1), y=(height-1); for VGA, width=640 and height =480.
- The maximum length of any command including the termination character is 127 characters.

4.12 SLCD5 Input Buffer Processing

Input Buffer

The SLCD5 has a nominal 512 byte input circular buffer. As commands are received, they are queued in the buffer and executed first come first served. After a command has been processed, the SLCD5 issues a "prompt" character followed by a <return> indicating the success or failure of the command. The '>' prompt indicates success and the '!' prompt indicates failure. Failure can be due to either a syntax error or an out-of-bounds parameter. Depending on how long a command takes to execute, one or more commands may be stacked in the input buffer. The SLCD5 will issue a prompt for each command after it executes. These prompts may be issued while the host is sending a command to the SLCD5 (full duplex operation).

The purpose of the circular buffer is to provide overlapped command issue and execution with full duplex communication. If this is not needed, the host can wait for the prompt before sending another command.

The SLCD5 controller issues a prompt when it has finished processing a command. This includes the null command which is just a <return>.

There is no special "power-on" prompt supplied when the unit first powers on. To detect that the board is available for commands, the host should send a null command (single <return> character) and wait at least 10ms for a success prompt back. Alternatively, the POWER-ON MACRO command / feature can be used together with the OUTPUT command to send a unique message indicating that the unit is up and running.

Flow Control

The SLCD5 implements software flow control using the XON (decimal 17) and XOFF (decimal 19) characters. When the circular buffer is approximately ¾ full, an XOFF is issued to the host. An XON is then issued when the buffer is approximately ¼ full. If the host cannot or does not want to accommodate software flow control, the host can make sure that no more than two commands are outstanding at any time. Given that the maximum length of any command is 127 bytes, this guarantees that the host will not be sent an XOFF character.

Buffer Limit Discussion

The input buffer can become full and unable to accept more data in two scenarios, both of which should never happen in normal operation. This discussion is presented because buffer overflow issues have presented security and reliability problems in PC and internet devices. The two scenarios are as follows. In both cases, the buffer limit event happens when the buffer is full and one more character is received and has to be thrown away.

Scenario #1: The host sends data that a) does not conform to the command specification, and b) keeps doing so until the buffer size limit is reached, and c) ignores the XOFF request from the SLCD5. ASCII commands are limited to a total of 127 characters including the <return>. Input buffer limit will occur when enough data is sent without a <return> to fill the buffer. This indicates a flaw in the host protocol or a hardware failure (for example, the communication line is chattering).

Scenario #2: The host sends valid commands that take a long time to execute and ignores the XOFF request from the SLCD5. The limit event can occur when the buffer is full of unexecuted commands.

In both of the previous cases, when the SLCD5 detects a buffer limit it does the following:

- Discards the received character that caused the limit event, and resets (flushes) the entire input buffer. This is done in an attempt to make the error obvious to the GUI user. If a buffer overflow occurs it is a serious system error.
- Sends an overflow prompt to the host. The overflow prompt is '^'<return>. That is, shift-6 or caret followed by a return.
- Sends an XON character to the host (matches the XOFF that was previously sent).

Prompt Summary

The SLCD5 can issue the following prompts. These are in addition to any result of a command or button press event.

- '>'<return> Indicates that the command has been executed successfully.
- '!'<return> Indicates that the command had a syntax or parameter error.
- \^'<return> Indicates that an input buffer full event occurred.
- '?' < return > Indicates that a transmission line error occurred. This includes parity, framing, and receive overrun errors.

If the display returns an error mid-command, then it probably got a bit error. If it returns an error after receiving the <return>, then it is probably getting either a CRC error or a syntax error. Either of these could be from getting a message with missing bytes or incorrect bytes.

4.13 Touch Interface

The SLCD5 contains a touch controller that interfaces to a four wire resistive touchscreen. Touch sensitive areas of the display are defined as either "hotspots" or "buttons". When either of these is pressed or released, the SLCD5 can either notify the host directly or execute a "macro", or both. A macro is a predefined sequence of SLCD5 commands.

Hotspot

A hotspot is an area of the display that is touch-sensitive. There are two types of hotspots – visible and invisible. A visible hotspot is the standard type and when touched, the display area of the hotspot is color inverted (technically XOR'd with the foreground color) to provide a visual indication that a hotspot has been activated. An invisible hotspot does not provide any visual indication when touched. See <u>SET TOUCH CHARACTERISTICS</u> for information on hotspot touch characteristics (notify on press, release, typematic, etc).

The invisible hotspot is useful where a touch control is used to switch display screens. If a visible hotspot is used, and the host redraws the screen when the hotspot is pressed, the hotspot area can become inverted when the user removes their finger from the screen.

Button

A button is a touch sensitive area that has two bitmaps associated with it. These bitmaps correspond to the two states of the button -1) normal /not pressed and 2) active / pressed. This allows a button to look like any GUI object including pushbuttons, toggle switches, radio buttons, check boxes, and so forth.

There are two major types of buttons: normal (momentary) and latching. A momentary button changes visual state only when pressed. This is like a momentary pushbutton or a keyboard key. A latching button is like a checkbox – press and release it once and the checkbox is filled, press and release again to clear it. See <u>SET TOUCH CHARACTERISTICS</u> for information on button touch characteristics (notify on press, release, typematic, etc).

Host Notification

When a touch sensitive area is pressed or released, the SLCD5 can either notify the host, execute a macro or both. See the <u>BUTTON DEFINE</u> and <u>TOUCH MACRO ASSIGN</u> commands for details.

4.14 Host Input Processing

When integrated into a host environment, the SLCD5 sends prompts, touch activity notifications, and user-defined text to the host it is connected to. In general, all SLCD5 messages are terminated with a <return>.

There can be no guarantee as to the order of arrival for prompts, touch notifications, etc. It is guaranteed that the messages arrive complete and do not overwrite each other. The debounce algorithm for touch processing ensures that the host is not overwhelmed by touch notifications.

4.15 System Firmware Boot Process

The sequence of operations that occur after power is applied to the SLCD5 is important for system configuring, macro application programming (via bitmaps and macros), demo execution, and updating firmware. These operations are indicated by output activity on the serial connection COM0 and LED (D2). Users can observe text messages of the Boot Process with a terminal emulator running on a PC when connected to the MAIN RS232 port of the POWERCOM4 board.

The System Software consists of two major components: the Bootloader and the main Firmware. The Bootloader is responsible for hardware component initialization, and Firmware updating. The Firmware is responsible for the standard board application functionality as outlined in this document. The diagram below explains the high level sequence of major operations between these major software components. See sections on System Configuration and Bitmaps and Macros.

Algorithm

The following pseudo code is an explanation of the System Software Boot Process. Note that files are just checked for presence (e.g. FLASH?.INI) and should be non-zero length.

```
Boot Loader begins execution

Hardware Component Initialization

Display version and copyright

Look in SD Card for "*.ELF" firmware update file

Read last saved firmware file name from EEPROM

IF the two file names do not match (SD card has different firmware file) THEN

Update firmware in Flash (erase / program)

Display status

ENDIF

Display "Starting firmware"

Jump to Firmware code

Boot Loader completed
```

```
Firmware begins execution
    Read EEPROM
    IF EEPROM contents not valid THEN
        Set Default EEPROM Values
    ENDIF
    IF SD Card present THEN
        IF CONFIG.INI file present THEN
        Parse option keywords, set option variables
        IF verbose = 1 THEN
             Display (option keyword and value)
             ENDIF
        ENDIF
        IF SPLASH.BMP file present THEN
             Display SPLASH.BMP
        ENDIF
        IF SLCD*.BIN present THEN
             ----- SLCD5 only -----
             Copy .BIN file to DRAM, use as working set BMP/macro/fonts
             IF FLASH1.INI present THEN
                 Copy DRAM to base board data flash (4MB)
             ENDIF
             ----- SLCD5+ only -----
             IF FLASH2.INI file present THEN
                 Copy .BIN file to CPU board flash (28MB)
                 Use flash for working set BMP/macro/fonts
             ELSE
                 Copy .BIN file to DRAM, use as working set BMP/macro/fonts
             ENDIF
             ----- end of model-specific code -----
```

```
ELSE
             IF Flash memory contains a .BIN file THEN
                 ----- SLCD5 only -----
                 Copy flash to DRAM, use as working set BMP/macro/fonts
                 ----- SLCD5+ only -----
                 Use flash for working set BMP/macro/fonts (no copy for speed)
                 ----- end of model-specific code -----
             ENDIF
        ENDIF
        IF RUNDEMO.INI present THEN
             IF "demomac = <macro number>" found THEN
                 Run <macro number>
                 Display message on main port if "verbose = 1" previously found
             ENDIF
        ENDIF
    ELSE
            //SD Card NOT Present
        IF Flash memory contains a .BIN file THEN
             ----- SLCD5 only -----
             Copy flash to DRAM, use as working set BMP/macro/fonts
             ----- SLCD5+ only -----
             Use flash for working set BMP/macro/fonts (no copy for speed)
             ----- end of model-specific code -----
        ENDIF
    ENDIF
Start main firmware application
```

Figure 11: System Software Boot Algorithm

5. Software Command Reference

5.1 Commands Affecting Non-Volatile Settings (EEPROM)

Some commands affect settings that are stored in non-volatile memory; this memory is implemented using an I2C Serial EEPROM with a limit of 1 million write cycles.

Warning: At 1 write per second, 24 hours a day, the EEPROM will exceed 1 million writes and become unreliable in only 11 days. Take care that commands marked as affecting EEPROM non-volatile settings are not continuously executed.

IT IS RECOMMENDED that commands writing to EEPROM be used only in development, and that the config.ini file (Section 3.4) method of setting these values be used in production.

5.2 Command Basics

All commands end with a <return> character, which is hex 0x0D, decimal 13. All responses from the SLCD5 end with a <return> character. Linefeeds are not provided in order to minimize communications overhead.

Arguments in angle brackets <...> are to be replaced by the characters described in the command arguments. The angle brackets themselves are not to be used. Square brackets with a vertical spacer '|' indicates optional arguments.

All commands that take x and y position arguments are affected by the SET ORIGIN command. This allows a set of graphic commands to draw the same object in different locations.

Compressed Syntax

All ASCII commands are shown with a space after the command mnemonic, for example:

This command sets the line drawing width. This space is optional in all commands where the first argument is numeric (e.g. not text display) and can be removed to reduce code space and transmission overhead. For example:

sets the line width to two.

Case Sensitivity

All commands are case-sensitive as shown in this manual. The meaning of some commands changes depending on the use of upper- or lower-case.

Assumed Orientation

Note: All command descriptions assume the display is running in landscape mode. X and Y parameter limits need to be swapped for portrait mode.

Touch Priority

If touch areas overlap, the one with the lowest index value (lowest button or hotspot number) has priority.

5.3 Commands by Function

Note: ♦ Indicates that the command stores the setting in EEPROM (non-volatile); see the warning concerning these commands

Function	Command Name	Command
Animation	Animation Clear	anic
	Animation Define	ani <n> <text string=""></text></n>
	Animation Delete	anix <n></n>
	Animation Disable	anid <n> [yield #]</n>
	Animation Enable	anie <n></n>
	Animation List	ani? <n></n>
	Animation Synch	anis
	Animation Yield	y <milliseconds> stop</milliseconds>
	Wait for Refresh	wrf <x> <y></y></x>
	Wait Vertical Retrace	<pre>wvr [<line>]</line></pre>
Animated	Animated GIF Start	agif <n> <index> <x> <y> <repeat></repeat></y></x></index></n>
GIFs	Animated GIF Stop	agifd
Bitmaps /	Display Bitmap Image	xi <index> x y</index>
Splash	Display Bitmap Image Centered	xim <index> x y</index>
Screen	Display Clipped Bitmap Image	xic <index> x y x0 y0 x1 y1</index>
	Display Image File	<pre>xif <filename>.<ext> x y</ext></filename></pre>
	Display Windowed Bitmap Image	xio < bitmap index > < x > < y > < 0 1 >
		<length> <offset></offset></length>
	List Bitmaps Detail	<pre>lsbmp [index]</pre>
	Splash Screen ◆	*SPL <number></number>
Buttons /	Binary Notification Mode	*binr <0 1>
Touch	Button Clear	bc <n></n>
	Button Define Center Text	bdc <n> x y type "text0" ["text1"] bmp0</n>
		bmp1
	Button Define – Latching State	bd <n> x y type "text0" "text1" dx0</n>
		dy0 dx1 dy1 bmp0 bmp1

```
Clear All Hotspot
                                         xc all
                                         xc <n>
           Clear Hotspot
           Define Hotspot
                                         x < n > x0 y0 x1 y1
                                         xxy < n > x0 y0 x1 y1
           Define Relative X Y Hotspot
           Define Relative X-Y Hotspot
                                         xxynb < n > x0 y0 x1 y1
           (Silent – No Beep)
           Define Special Hotspot (Invisible) xs <n> x0 y0 x1 y1
           Define Special Hotspot (Invisible,
                                         xsnb < n > x0 y0 x1 y1
           No Beep)
           Define Special Typematic Touch
                                         xst < n > x0 y0 x1 y1
           Define Touch Action◆
                                         *touchMode[s] [S|L|W]
           Define Touch Calibration
                                         *tcTimeout [<timeout in seconds>]
           Timeout♦
           Define Touch Parameters◆
                                         *touchParm [<samples> <span>]
           Define Touch Signal Orientation◆
                                         *touchSwap [0|1]
           Define Typematic Touch Area
                                         xt <n> x0 y0 x1 y1
                                         xd <n | "all"> [<n last>]
           Disable Touch
                                         xe[s] <n | "all"> [<n last>]
           Enable Touch
                                         *RT
           Reset Touch Calibration◆
           Set Touch Characteristics
                                         xset < n > [+|-][p|r|t|T|x]
           Set Touch Debounce◆
                                         *debounce <delay in ms>
           Query (Latching) State Button
                                         ssb < n >
           Set (Latching) State Button
                                         ssb < n > state
           Set Typematic Parameters◆
                                         typematic[s] <delay> <repeat>
           Touch Calibrate◆
           Touch Simulate Momentary
                                         *tsmm
           Touch Simulate Press
                                         *tsmp
           Touch Simulate Release
                                         *tsmr
           Touch Simulate Typematic
                                         *tsmt
           Touchscreen On/Off
                                         touch [on/off]
Charts
           Binary Chart Values
                                         bcv n number of pen values to follow
           Chart Clear Display
                                         cc n
           Chart Define
                                         cd n x0 y0 x1 y1 t dw bv tv bc <pens>
           Chart Define with Bitmap
                                         cdb n x y dw bv tv bitmap <pens>
           Chart Redefine Backgrd Bitmap
                                         cdbb n bitmap
                                         cdbc n color
           Chart Redefine Backgrd Color
                                         cddm n <on|off>
           Chart Redefine Draw Mode
           Chart Redefine Pen
                                         cdp n pen width color
           Chart Redefine Retrace Mode
                                         cdrm n <on|off>
           Chart Reset Pens
                                         cr n
           Chart Values
                                         cv n pen0 value [pen1 value ..]
```

bd <n> x y type "text" dx dy bmp0 bmp1

Button Define – Momentary

Clear / Clear All Hotspot xc all Unclear Clear Hotspot xc <n>

Clear Screen

Clear Screen Special zs <bitmap index>

Com Port *comwdt <macro> <short> <long> Communication Watchdog Timer

> Control Port Autoswitch◆ (see description) aout "<text string>" Output String (Aux) Output String (Main) out "<text string>"

Read from Aux Port ain[b]

*auxEsc <hex value of ASCII character> Set Aux Escape◆

Set Aux Port Auto Read◆ auxIO [0|1]

Set Baud Rate ComN baudN [460800|230400|115200|57600| (N = 0 or 1)

38400 | 19200 | 9600 | 4800 | 1200 |

Set Baud Rate (Prompt First) baudp[0|1] <rate> Set Baud Rate (Sticky and Prompt bauds [0 | 1] < rate>

First) ♦

Set Control Port◆ *com[0|1]main[s]

Set Previous Control Port *prevCons

Debug / *macdebug <0|1> Debug Macro **Debug Touch** *debug <0|1> Maint.

> Reset Board / Software *RESET Reset Board to Mfg. State◆ *MFGRESET **Speed Test** *speedtest

Drawing Set Color (Basic) s <fore> <back>

Environ-Set Color (Detailed) S <foreground det> <background det>

ment Set Draw Mode d[n|x]

> Set Origin o <x> <y> Set Pen Width p <pixels>

Restore Drawing Environment sr Save Drawing Environment SS

Window Restore wr x y [index]

Window Restore Rectangle wrr x y <width> <height> <index>

[<offset>]

Window Save ws x0 y0 x1 y1 [index]

Download bdld <index> <offset> <size> <timeout> **Binary Download**

> External Memory Available xma

External Memory Chip Erase xmc FEEB

Macros Debug Macro *macdebug <0|1> Get Variable get <internal variable name> Get Variable (HEX) getx <internal variable name> List Macros Detail lsmac [index] Macro Abort *abt Macro Execute m <n> [macro parameters . .] *macnote <0|1|2|3> Macro Notify Memory Pop mpop [index] <number> mpush [index] "<string>" [max] Memory Push *PONMAC <index | name> [<option>] Power-On Macro◆ Set Variable set <internal variable name> <value> Set Variable (HEX) setx <internal var. name> <HEX value> Touch Macro Assign xm <touch index><macro index | name> [<macro2 index>] Touch Macro Assign Quiet xmg <touch index> <macro index | name> [<macro2 index>] Touch Macro Assign With xa[q] <n> action <macro index | name> <args> **Parameters** Wait w <number of milliseconds> Read / Controller Type *ctype Write / Copy Flash To DRAM *flash2ram Verify **CRC** External Flash *CEXT [<from> <to>] CRC Processor Bootload Code *CSUMB CRC Processor Code *CSUM **CRC Screen** *CRC **Display Config String** *config EEPROM Read / Write *eer <hex location> *eew <hex location> <hex value> Get Panel Type *panel List Downloaded Records ls *FB <line> Read Frame Buffer Line Read Temperature temp Set LED led [0|1]Version vers Screen Define Inverter Control Polarity◆ *invEnaHiTrue [0|1] Control Define Inverter PWM Control◆ *pwmIsEnable [0|1] Define Max, Min Brightness *maxBrite <value from 0 to 255> *minBrite <value from 0 to 255> **Define Panel Orientation**◆ *orient [0|1|2|3] Display On/Off v <on|off> xbb [+|-|<level>External Backlight Bright Ctrl

External Backlight Bright Ctrl xbbs [+|-| < level>External Backlight On/Off xbl <onloff> Panel Timing Adjust♦ *paneladj SD Card Change SD Card Directory *cd <directory name> Last Firmware File Loaded *firmware *ls List SD Card Directory Load System File From SD Card *load (or *LOAD) (Current Directory) Load System File From SD Card *sdload <directory name> (Specified Directory) Load System File From SD Card *loadf (or *LOADF) Into Flash Save Configuration To SD Card *getConfigAsFile Save Screen Shot To SD Card *getScreenAsBMPFile Shapes / **Draw Arc Segment** a x0 y0 <radius> <start> <end> **Pixels Draw Circle** c x0 y0 r [f] Draw Ellipse e x y <x radius> <y radius> ef x y \langle x radius \rangle \langle y radius \rangle Draw Filled Ellipse Draw Filled Polygon pf x0 y0 [x/y x/y ...]1 x0 y0 x1 y1 **Draw Line** Draw Rotated Filled Polygon pfr <angle> x0 y0 [x/y x/y...]**Draw Rotated Polygon** pgr <angle> x0 y0 [x/y x/y...]plr x0 y0 [x/y x/y...]**Draw Rotated Polyline** Draw Outline Polygon pg x0 y0 [x/y x/y...]**Draw Polyline** pl x0 y0 [x/y x/y...]r x0 y0 x1 y1 [style] [color] Draw Rectangle Redraw Rotated Polygon ppgr <angle> x0 y0 tr x0 y0 x1 y1 x2 y2 [color] Draw Triangle Pixel Read pr Pixel Write pw x y [color] Pixel Write pwx x y [color] Sliders *binr <0|1> Binary Notification Mode Meters & Levelbar Define ld n x0 y0 x1 y1 or inv bv bc <levels> Levelbars Levelbar Value lv n val md <id> <bitmap> <x> <y> <type> Meter Define <minVal> <maxVal> <initial value> <minAngle> <maxAngle> <x0, y0 ... [x10, y10]>

Meter Define Band
mdb <ix> <bm> <x> <y> <type> <minVal>

<maxVal> <init_val> <minAngle> <maxAngle> <bandMin> <bandMax>

<bandRadius> <bandPen > <bandColor>
<bandBG> <pivotX> <pivotY> <x1 y1 . .</pre>

.[x10, y10] >

Meter Value mv <id> <value>

Meter Value Band
mvb <ix> <val> <bandMin> <bandMax>

<bandRadius> <bandPen> <bandColor>

<indicatorColor>

Scroll Screen Areak x0 y0 x1 y1 <numlines>[1|r|u|d|L|R]Slider Definesl idx bg x y slider off ornt inv cont

hi lo

Slider Value sv idx val

Sound Alarm al <alarm> <count>

Beep Frequency ◆ bf[s] [<hertz>]
Beep Once beep <count>

Beep Repeat rb <on> <off> [alarm]

Beep Touch bb <number>

Beep Volume \bullet by [s] [+|-]<level>

 Beep Wait
 beepw <count>

 Speaker On / Off◆
 *spkr [on|off]

Scrolling Append to Scrolling Textbox sta <index> "text"

Textbox Clear Scrolling Textbox stc <index>

Define Scrolling Textbox std <index> <type> <x0> <y0> <x1> <y1>

Prepend to Scrolling Textbox stp <index> "text"

Query Scrolling Textbox std <index>

Text Get Text Display Width In Pixels t? "text string"

Flashing Set Cursor sc x y

ListText Set Font f <fontName>

Set Text Alignmentta [L|C|R][T|C|B]Set Text Modetm [R|T|X|TR|N]

Text Display t "text string" x y [R|T|X|TR|N]

t "text string"

Text Flashing Clear tfc

Text Flashing Delete tfx <index>

Text Flashing Disable tfd <index> <state>

Text Flashing Display tf <index> [t] "text string" x y

[R|T|X|TR]

Text Flashing Enable tfe <index>

Text Flashing List tf?
Text Flashing Synchronize tfs

<u>UTF8 Enable / Disable</u> utf8 [on|off]

Text <u>Clear Text Window</u> twc <n>

Variables

<u>Define Text Window</u> twd <n> <x0> <y0> <x1> <y1>

Goto Position in Text Window twga <n> <char>

(Absolute)

Goto Position in Text Window twgp <n> < <char %>

(Percentage)

<u>Load Text Window Buffer</u> tw <n> "text"

Query Text Windowtwq <n>Redraw Text Windowtwr <n>

5.4 Commands Alphabetically by Command Syntax

Note: ♦ Indicates that the command stores the setting in EEPROM (non-volatile); see the warning concerning these commands

Command	Command Name
*abt	Macro Abort
*auxEsc <hex ascii="" character="" of="" value=""></hex>	Set Aux Escape ◆
*binr <0 1>	Binary Notification Mode
*cd <directory name=""></directory>	Change SD Card Directory
*CEXT [<from> <to>]</to></from>	CRC External Flash
*com[0 1]main[s]	Set Control Port◆
*comwdt <macro> <short> <long></long></short></macro>	Communication Watchdog Timer
*CRC	CRC Screen
*CSUM	CRC Processor Code
*CSUMB	CRC Processor Bootload Code
*ctype	Controller Type
*debounce <delay></delay>	Set Touch Debounce◆
*debug <0 1>	Debug Touch
*eer <hex location=""></hex>	EEPROM Read / Write
*eew <hex location=""> <hex value=""></hex></hex>	
*FB <line></line>	Read Frame Buffer Line
*firmware	Last Firmware File Loaded
*flash2ram	Copy Flash To DRAM
*getConfigAsFile	Save Configuration To SD Card
*getScreenAsBMPFile	Save Screen Shot To SD Card
*invEnaHiTrue [0 1]	<u>Define Inverter Control Polarity</u> ◆
*load(or *LOAD)	Load System File From SD Card
	(Current Directory)
*loadf (or *LOADF)	Load System File From SD Card
	<u>Into Flash</u>
*ls	<u>List SD Card Directory</u>
*macdebug <0 1>	<u>Debug Macro</u>
*macnote <0 1 2 3>	Macro Notify
*maxBrite <value 0="" 255="" from="" to=""></value>	<u>Define Max, Min Brightness</u> ◆
*minBrite <value 0="" 255="" from="" to=""></value>	
*MFGRESET	Reset Board to Manufactured State
*orient [0 1 2 3]	<u>Define Panel Orientation</u> ◆
*panel	Get Panel Type
*paneladj	Panel Timing Adjust ◆
*PONMAC <index> [<option>]</option></index>	Power-On Macro ◆
*prevCons	Set Previous Control Port

```
*pwmIsEnable [0|1]
                                                        Define Inverter PWM Control◆
*RESET
                                                        Reset Board / Software
                                                        Reset Touch Calibration◆
*RT
                                                        Load System File From SD Card
*sdload <directory name>
                                                        (Specified Directory)
*speedtest
                                                        Speed Test
*spkr [on|off]
                                                        Speaker On / Off
*SPL <index>
                                                        Splash Screen
*tcTimeout [<timeout in seconds>]
                                                        Define Touch Calibration Timeout◆
                                                        Define Touch Action♦
*touchMode[s] [S|L|W]
                                                        Define Touch Signal Orientation
*touchSwap [0|1]
*touchParm [<samples> <span>]
                                                        Define Touch Parameters
*tsmm
                                                        Touch Simulate Momentary
*tsmp
                                                        Touch Simulate Press
                                                        Touch Simulate Release
*tsmr
*tsmt
                                                        Touch Simulate Typematic
<return> <return> <return> 3 consecutive
                                                        Control Port Autoswitch
<return> characters to the Aux port
a x0 y0 <radius> <start> <end>
                                                        Draw Arc Segment
agif <n> <index> <x> <y> <repeat>
                                                         Animated GIF Start
agifd
                                                         Animated GIF Stop
ain[b]
                                                        Read from Aux Port
al <alarm> <count>
                                                         Alarm
ani <n> <text string>
                                                         Animation Define
ani? \langle n \rangle
                                                         Animation List
anic
                                                         Animation Clear
anid <n> [yield #]
                                                         Animation Disable
anie <n>
                                                         Animation Enable
anis
                                                         Animation Synch
anix <n>
                                                         Animation Delete
aout "<text string>"
                                                        Output String (Aux)
                                                         Set Aux Port Auto Read◆
auxIO [0|1]
baudN [460800|230400|115200|57600|38400|
                                                        Set Baud Rate Port N
       19200 | 9600 | 4800 | 1200 ]
baudp[0|1] <rate>
                                                        Set Baud Rate (Prompt First)
                                                        Set Baud Rate (Sticky and Prompt
bauds[0|1] <rate>
                                                        First) ♦
bb <number>
                                                        Beep Touch
bc < n >
                                                        Button Clear
bcv n number of pen values to follow <bytes>
                                                        Binary Chart Values
bd <n> x y type "text" dx dy bmp0 bmp1
                                                        Button Define – Momentary
```

```
bd <n> x y type "text0" "text1" dx0 dy0 dx1
                                                      Button Define – Latching State
dy1 bmp0 bmp1
bdc <n> x y type "text0" ["text1"] bmp0 bmp1
                                                      Button Define Center Text
bdld <index> <offset> <size> <timeout>
                                                      Binary Download
beep <count>
                                                      Beep Once
beepw <count>
                                                      Beep Wait
bf[s] [<hertz>]
                                                      Beep Frequency◆
bv[s] [+|-] < level >
                                                      Beep Volume◆
c x0 y0 r [f]
                                                      Draw Circle
cc n
                                                      Chart Clear Display
cd n x0 y0 x1 y1 t dw bv tv bc <pens>
                                                      Chart Define
cdb n x y dw bv tv bitmap <pens>
                                                      Chart Define with Bitmap
cdbb n bitmap
                                                      Chart Redefine Background Bitmap
cdbc n color
                                                      Chart Redefine Background Color
cddm n <on|off>
                                                      Chart Redefine Draw Mode
cdp <n> <pen> <width> <color>
                                                      Chart Redefine Pen
cdrm n <on|off>
                                                      Chart Redefine Retrace Mode
                                                      Chart Reset Pens
cv n pen0 value [pen1 value ..]
                                                      Chart Values
d[n|x]
                                                      Set Draw Mode
e x y < x radius > < y radius >
                                                      Draw Ellipse
ef x y < x radius> < y radius>
                                                      Draw Filled Ellipse
f <type>
                                                      Set Font
get <internal variable name>
                                                      Get Variable
getx <internal variable name>
                                                      Get Variable (HEX)
k \times 0 y \times 1 y 1 < numlines > [l|r|u|d|L|R]
                                                      Scroll Screen Area
1 x0 y0 x1 y1
                                                      Draw Line
ld n x0 y0 x1 y1 or inv bv bc <levels>
                                                      Levelbar Define
led [0|1]
                                                      Set LED
ls
                                                      List Downloaded Records
lsbmp [index]
                                                      List Bitmaps Detail
lsmac [index]
                                                      List Macros Detail
lv n val
                                                      Levelbar Value
m <n> [macro parameters . . ]
                                                      Macro Execute
md <id> <bitmap> <x> <y> <type> <minVal>
                                                      Meter Define
<maxVal> <initial value> <minAngle>
<maxAngle> <x0, y0 ... [x10, y10]>
mdb < ix > < bm > < x > < y > < type > < minVal >
                                                      Meter Define Band
<maxVal> <init_val> <minAngle> <maxAngle>
<bandMin> <bandMax> <bandRadius> <bandPen >
<bandColor> <bandBG> <pivotX> <pivotY> <x1 y1</pre>
...[x10, y10] >
```

```
mpop [index] <number>
                                                          Memory Pop
mpush [index] "<string>" [max]
                                                          Memory Push
mv <id> <value>
                                                          Meter Value
mvb <ix> <val> <bandMin> <bandMax>
                                                          Meter Value Band
<bandRadius> <bandPen> <bandColor>
<indicatorColor>
o <x> <y>
                                                          Set Origin
out "<text string>"
                                                          Output String (Main)
p <pixels>
                                                          Set Pen Width
pf x0 y0 [x/y x/y ...]
                                                          Draw Filled Polygon
pfr <angle> x0 y0 [x/y x/y...]
                                                          Draw Rotated Filled Polygon
pg x0 y0 [x/y x/y...]
                                                          Draw Outline Polygon
pgr <angle> x0 y0 [x/y x/y...]
                                                          Draw Rotated Polygon
pl x0 y0 [x/y x/y...]
                                                          Draw Polyline
plr x0 y0 [x/y x/y...]
                                                          Draw Rotated Polyline
ppgr <angle> x0 y0
                                                          Redraw Rotated Polygon
                                                          Pixel Read
pr
pw x y [color]
                                                          Pixel Write
pwx x y [color]
                                                          Pixel Write
r x0 y0 x1 y1 [style] [color]
                                                          Draw Rectangle
rb <on> <off> [alarm]
                                                          Beep Repeat
s <fore> <back>
                                                          Set Color (Basic)
S <fore detail> <back detail>
                                                          Set Color (Detailed)
                                                          Set Cursor
SC X V
set <internal variable name> <value>
                                                          Set Variable
setx <internal variable name> <HEX value>
                                                          Set Variable (HEX)
sl idx bg x y slider off ornt inv cont hi lo
                                                          Slider Define
                                                          Restore Drawing Environment
sr
                                                          Save Drawing Environment
SS
                                                          Query (Latching) State Button
ssb < n >
ssb <n> state
                                                          Set (Latching) State Button
sta <index> "text"
                                                          Append to Scrolling Textbox
stc <index>
                                                          Clear Scrolling Textbox
std \langle index \rangle \langle type \rangle \langle x0 \rangle \langle y0 \rangle \langle x1 \rangle \langle y1 \rangle
                                                          Define Scrolling Textbox
stp <index> "text"
                                                          Prepend to Scrolling Textbox
std <index>
                                                          Query Scrolling Textbox
sv idx val
                                                          Slider Value
t "text string" x y [R|T|X|TR|N]
                                                          Text Display
t "text string"
t? "text string"
                                                          Get Text Display Width In Pixels
ta [L|C|R][T|C|B]
                                                          Set Text Alignment
                                                          Touch Calibrate◆
tc
```

```
temp
                                                         Read Temperature
tf <index> [t] "text string" x y [R|T|X|TR]
                                                         Text Flashing Display
                                                         Text Flashing List
tf?
tfc
                                                         Text Flashing Clear
                                                         Text Flashing Disable
tfd <index> <state>
tfe <index>
                                                         Text Flashing Enable
tfs
                                                         Text Flashing Synchronize
tfx <index>
                                                         Text Flashing Delete
                                                         Set Text Mode
tm [R|T|X|TR|N]
                                                         Touchscreen On/Off
touch [on/off]
tr x0 y0 x1 y1 x2 y2 [color]
                                                         Draw Triangle
tw <n> "text"
                                                         Load Text Window Buffer
twc < n >
                                                         Clear Text Window
twd < n > < x0 > < y0 > < x1 > < y1 >
                                                         Define Text Window
twga <n> <line> <char>
                                                         Goto Position in Text Window
                                                         (Absolute)
twgp <n> <line %> <char %>
                                                         Goto Position in Text Window
                                                         (Percentage)
twm <n> <dir> [count]
                                                         Move Text Window
twq < n >
                                                         Ouery Text Window
twr <n>
                                                         Redraw Text Window
twv <n> <line v index> <char v index>
                                                         Copy Text Window Visible to
                                                         Variables
typematic[s] <delay> <repeat>
                                                         Set Typematic Parameters◆
utf8 [on|off]
                                                         UTF8 Enable / Disable
v <on|off>
                                                         Display On/Off
                                                         Version
vers
w <number of milliseconds>
                                                         Wait
wr x y [index]
                                                         Window Restore
wrf < x > < y >
                                                         Wait for Refresh
wrr x y <width> <height> <index> [<address>]
                                                         Window Restore Rectangle
ws x0 y0 x1 y1 [index]
                                                         Window Save
wvr [<line>]
                                                         Wait Vertical Retrace
x < n > x0 y0 x1 y1
                                                         Define Hotspot
xa[q] <n> action <args>
                                                         Touch Macro Assign w/ Parameters
                                                         External Backlight Brightness
xbb[s] [+|-] < level >
xbl <onloff>
                                                         External Backlight On/Off
xc <n>
                                                         Clear Hotspot
                                                         Clear All Hotspot
xc all
xd <n | "all"> [<n last>]
                                                         Disable Touch
xe[s] < n \mid "all" > [< n last >]
                                                         Enable Touch
                                                         Display Bitmap Image
xi <index> x y
```

```
xic < index > x y x0 y0 x1 y1
                                                                                                                                                                                                                                                                                                                                                                                                                                            Display Clipped Bitmap Image
xif <filename>.<ext> x y
                                                                                                                                                                                                                                                                                                                                                                                                                                            Display Image File
                                                                                                                                                                                                                                                                                                                                                                                                                                            Display Bitmap Image Centered
xim < index > x y
                                                                                                                                                                                                                                                                                                                                                                                                                                            Display Windowed Bitmap Image
xio \langle x \rangle 
<offset>
xm <touch index><macro index | name> [<macro2</pre>
                                                                                                                                                                                                                                                                                                                                                                                                                                            Touch Macro Assign
index | name>]
                                                                                                                                                                                                                                                                                                                                                                                                                                            External Memory Available
xma
xmc feeb
                                                                                                                                                                                                                                                                                                                                                                                                                                            External Memory Chip Erase
                                                                                                                                                                                                                                                                                                                                                                                                                                            Touch Macro Assign Quiet
xmq <touch index><macro index> [<macro2 index>]
                                                                                                                                                                                                                                                                                                                                                                                                                                            <u>Define Special Hotspot (Invisible)</u>
xs < n > x0 y0 x1 y1
xset < n > [+|-][p|r|t|T|x]
                                                                                                                                                                                                                                                                                                                                                                                                                                            Set Touch Characteristics
                                                                                                                                                                                                                                                                                                                                                                                                                                            Define Special Hotspot (Invisible,
xsnb < n > x0 y0 x1 y1
                                                                                                                                                                                                                                                                                                                                                                                                                                            No Beep)
                                                                                                                                                                                                                                                                                                                                                                                                                                            Define Special Typematic Touch
xst < n > x0 y0 x1 y1
                                                                                                                                                                                                                                                                                                                                                                                                                                            Define Typematic Touch Area
xt < n > x0 y0 x1 y1
                                                                                                                                                                                                                                                                                                                                                                                                                                            Define Relative X-Y Hotspot
xxy < n > x0 y0 x1 y1
xxynb < n > x0 y0 x1 y1
                                                                                                                                                                                                                                                                                                                                                                                                                                            Define Relative X-Y Hotspot (Silent
                                                                                                                                                                                                                                                                                                                                                                                                                                            No Beep
y <milliseconds> | stop
                                                                                                                                                                                                                                                                                                                                                                                                                                            Animation Yield
                                                                                                                                                                                                                                                                                                                                                                                                                                            Clear Screen
 zs <bitmap index>
                                                                                                                                                                                                                                                                                                                                                                                                                                            Clear Screen Special
```

5.5 COMMANDS

ALARM

Description: Sounds an alarm sound using the beeper.

Command: al <alarm> <count>

Arguments: <alarm> is the alarm sound:

1 = whoop 2 = annoy 3 = dee-dah

<count> is number of ms to sound the beeper.

Example: al 2 1500

Sounds the "annoy" alarm for 1.5 seconds.

ANIMATED GIF START

Description: Starts an animated GIF. Note that the GIF file should be located in RAM

to provide the best performance. Use the <u>COPY FLASH to DRAM</u> command before starting an animated GIF (only required once per reset/power cycle). Note: Only one animated GIF may be running at a

time.

Command: agif <n> <index> <x> <y> <repeat>

Arguments: <n> - Animated GIF number.

<index> - Index of GIF (in bitmap list) to display.

<x><y> - Top/left corner of GIF screen location.

<repeat> - Number of times to cycle GIF. Use 0 to repeat forever.

Example: agif 0 1 0 0 8

Starts animated GIF 0 using GIF image 1 at coordinates 0/0, repeating

eight times.

ANIMATED GIF STOP

Description: Stop animated GIF.

Command: agifd
Arguments: None.
Example: agifd

ANIMATION CLEAR (TEXT FLASHING CLEAR)

Description: Clears the animation and flashing text definitions and disables the

animation engine.

Command: anic or

tfc

Arguments: None. Example: anic

Clears the animation buffers and stops the animation engine.

ANIMATION DEFINE

Description: Defines a sequence of commands to be played back continuously or on

demand, concurrently and independent of commands received from the communications port, macros and buttons. A delay function (see Animation Yield) is used to suspend the animation for a specified period of milliseconds. The animation may be suspended at any "Yield" point

(see Animation Disable).

Animations are disabled when defined and must be activated using the "anie" (Animation Enable) command. An animation without a yield is executed once and suspended at the end of the animation. Animations cycle continuously unless a "yield stop" is contained in the animation script, the animation lacks a yield, or the "anid" command is issued to stop the animation.

An animation executes in a temporary state (see <u>SAVE DRAWING ENVIRONMENT</u>), which exists only until the animation yields. Properties like foreground color must be set within the yield point where they are to be used.

Command: ani <n> <text string>

Arguments: <n> The index of the animation, 0 through 9

<text string> Any valid command *EXCEPT*:

- An Animation Define / Flashing Text Define command.
- A Wait command (use Yield instead)
- A State Save/Restore command

Note: To control an animation using an animation script, the controlled animation or flashing text must be defined before defining the controlling animation. Only one animation may be defined at a time. Each "ani" command is used to define one graphics command; multiple commands may be incorporated into a single animation by breaking the display list into multiple lines, one command per line. Defining an animation with a different index closes the previous animation. Use the "anie" and "anid" commands to activate and deactivate defined animations. Use the "anic" and "anix" commands to delete animations.

Example:

The list of commands below implements the "New Features" demo included with the kit. Comments were added to assist the reader and are stripped when received by the display.

```
xi 7 0 0
                    // Background bitmap
anic
                    // Clear animation
// setup font and color for TF command
f 24B
S 0f0 fff
                    // Green text
tf 0 "FLASHING TEXT" 45 110 T
// Define animation #1 - Flashing LEDS
ani 1 xi 27 150 130
                       // Left LED On
ani 1 y 50
                       // wait 50 MS
ani 1 xi 26 150 130
                       // Left LED Off
ani 1 xi 27 210 130
                       // Middle LED On
ani 1 y 50
                       // Wait 50 MS
ani 1 xi 26 210 130
                       // Middle LED Off
ani 1 xi 27 270 130
                       // Right LED On
ani 1 v 50
                       // Wait 50 MS
ani 1 xi 26 270 130
                       // Right LED Off
ani 1 y 50
                       // Wait 50 MS
// End of animation #1
anie 1
                // Start animation 1
// Define animation #2 - "ROTATE" left
continuously
ani 2 k 226 70 300 100 1 L// "ROTATE" left
ani 2 y 50
                       // Wait 50 MS
// End of animation #2
```

```
anie 2 // Start animation 2
k 100 60 180 110 10 u // Move "scroll" up
// Define animation #3 - "SCROLL" moves Down
ani 3 s 0 1
                      // Scroll fill color
ani 3 k 100 60 180 110 1 d// Scroll Down
                      // Wait 50 MS
ani 3 y 50
// End of animation #3
// Define animation #4 - "SCROLL" moves Up
ani 4 s 0 1
                      // Scroll fill color
ani 4 k 100 60 180 110 1 u// Scroll Up
ani 4 y 50
                      // Wait 50 MS
// End of animation #4
// Define Controlling animation #5, This
animation
// selectively enables and disables animation
scripts
// 3 and 4 successively for a period of \frac{1}{2} second.
// The effect is "SCROLL" scrolls up for a period
// ½ second, down for ½ second and repeats.
ani 5 anie 3
                   // Enable Scroll Down
ani 5 y 500
                      // wait ⅓ Sec.
ani 5 anid 3 0
                      // Stop at first yield
ani 5 anie 4
                  // Enable Scroll Up
ani 5 y 500
                      // Wait for ½ Sec.
ani 5 anid 4 0
                      // Stop at first yield
// end of animation #5
               // Start animation #5
anie 5
S 000 fff
```

ANIMATION DELETE

Description: Deletes the selected animation script.

Command: anix <N>

Arguments: $\langle n \rangle$ The index of the animation, 0 through 9.

Example: anix 0

Removes animation 0, reclaims animation memory.

ANIMATION DISABLE

Description: Stops the animation specified by animation index and yield #.

Command: anid <n> <Yield #>

The index of the animation, 0-9. Arguments: <n>

> A reference to one of a animation's yield commands. <Yield #>

Yields are numbered for each animation starting at 0 (zero) and continues up to the number of yields-1 contained in that animation.

Note: Animations are "stopped" by advancing and executing those

commands between the previous and selected yield.

Example: anid 0 0

Stops animation 0 at the first yield command.

ANIMATION ENABLE

Description: Enables animation execution for a specified animation.

Command: anie <n>

Arguments: < n > The index of the animation, 0-9.

Example: anie 0

Enables animation 0.

ANIMATION LIST (TEXT FLASHING LIST)

Description: Lists the animation to the serial port for editing or incorporation into a

> macro, button or script. The animation is listed in a form suitable for cut and paste into other scripts. This method can be used to develop and tune

animations, then incorporate the completed animation into a script.

Command: ani? <n> or

tf? < n>

Arguments: $\langle n \rangle$ The index of the animation, 0 through 9. If no parameter

is given, the amount of free animation space in bytes is returned.

Example: When the command tf 0 "hello world" is entered to create a

text flash animation, after issuing `f12`, `s 0 1`, and `z` commands:

f12 > s 0 1 > 7. tf 0 "hello world" ani? 0 Returns:

// ani:0 count: 500 Size: 134

ani 0 f 12 ani 0 S 000000 ffffff ani 0 ta LT ani 0 o 0 0 ani 0 sc 0 0 ani 0 tm N ani 0 T "hello world" ani 0 y 500 ani 0 f 12 ani 0 S ffffff ffffff ani 0 ta LT ani 0 o 0 0 ani 0 sc 0 0 ani 0 tm N ani 0 T "hello world" ani 0 y 500

ANIMATION SYNCH

Description: Restarts all animations at beginning of scripts.

Command: anis
Arguments: None.
Example: anis

Any running animations are restarted.

Note: For best results, stop the animations using the anid command with the proper yield points to prevent graphics residue. Possible uses of this command are synchronizing flashing text or lamps.

ANIMATION YIELD

Description: Suspends (sleeps) an animation for <Milliseconds> or stops the

animation.

Note: The Yield command is only valid when executed in an animation

script.

Command: y [<Milliseconds> | stop]

Arguments: <Milliseconds> Number of milliseconds to sleep this animation.

Stop Halt this animation until the ANIMATION ENABLE

command is issued.

APPEND TO SCROLLING TEXTBOX

Description: Appends a line to the bottom of an existing Scrolling Textbox. If the

textbox is full, existing lines are scrolled up and the top-most line is

discarded.

Command: sta <index> "text"

Arguments: <index> Index of scrolling textbox.

"text" Text to append, in double-quotes.

Example: sta 0 "Sample text"

BEEP FREQUENCY, BEEP FREQUENCY SPECIAL

NOTE: The beep frequency is set at the factory to generate maximum loudness level.

Description: Sets the frequency of the beeper; 'bf' stores the setting in non-volatile

memory (see warning), whereas 'bfs' does not. When given no

arguments, the command returns the current setting.

This command is used during factory calibration to set the sound level as the sounders used resonate at slightly different frequencies. If you use it to change the frequency, the factory test results are invalid. Please do not use without premeditation! The *MFGRESET command cannot restore

the original value of this setting.

Command: bf[s] [<hertz>]

Arguments: is number from 1 through 4000. Default is 2650, but may be

slightly different due to volume calibration at the factory. If no argument is supplied, the current frequency is returned as a variable length decimal

number.

Example: bfs 2500

Sets the beep frequency to 2500 Hertz, but does not store the setting; on

powerup, the value stored in non-volatile memory will be used.

bf (or bfs)

Returns 2500 after the above command was issued.

BEEP ONCE

Description: Beeps the beeper for <count> ms. This will temporarily interrupt any

running repeating beep. A prompt is returned immediately even if the

beep continues.

Command: beep <count>

Arguments: <count> is number of ms to sound the beeper. The value has the range

of a 32-bit variable.

BEEP REPEAT

Description: Beeps the beeper for <on> ms, stays silent for <off> ms, and then repeats

until the values are changed with another "rb" command. Can be

temporarily overridden by a regular "beep" command. If <on> and <off>

are both 0 the repeat stops.

Command: rb <on> <off> [alarm]

Arguments: <on> is number of ms to sound the beeper. The value has the range of a

32-bit variable.

<off> is number of ms to stay silent before beeping again. The value

has the range of a 32-bit variable.

[alarm] is an optional parameter to use the alarm sound instead of a

steady tone. See <u>ALARM</u> command for valid alarm numbers.

Example: rb 100 400

Repeatedly beeps for 100 ms then goes silent for 400 ms during each 500

ms cycle.

BEEP TOUCH

Description: Sets the duration of the audible feedback beep when a hotspot or button

is pressed. Not stored in non-volatile memory. Default is 10 which

equals 100ms beep.

Command: bb <number>

Arguments: <number> is tens of milliseconds to sound the beeper.

Example: bb 10

Sets the beep feedback to power-on value.

BEEP VOLUME, BEEP VOLUME SPECIAL

Description: Sets the volume level of the beeper; 'bv' stores the setting in non-volatile

memory (see warning), whereas 'bvs' does not. When given no

arguments, the commands return the current setting.

Command: bv[s][+|-] < level >

Arguments: <level> is number from 0 through 255. Default is 200. Loudest is

255. The optional '+' or '-' prefix changes the <level> into an increment

up or down.

Example: bvs 120

Sets the beep volume setting to 120, but does not store the setting; on

powerup, the value stored in non-volatile memory will be used.

bv (or bvs)

Returns 120 after the above command was issued.

BEEP WAIT

Description: Beeps the beeper for <count> ms. This will temporarily interrupt any

running repeating beep. The system issues a command prompt only after

the beep has stopped.

Command: beepw <count>

Arguments: <count> is number of ms to sound the beeper. The value has the range

of a 32-bit variable.

BINARY CHART VALUES

Description: Same as CHART VALUES except that multiple values are sent using

binary data format for faster drawing speed. Use this command if the standard chart values command is too slow. Note that the pen value is limited to maximum 65535. There is a timeout of five seconds if the amount of data specified in the command is not received. If a timeout

occurs, the error prompt "!\r" is returned.

Command: bcv n number of pen values to follow

<lo byte pen0 value><high byte pen0 value>
<lo byte pen1 value><high byte pen1 value>

. . .

<lo byte penN value><high byte penN value>

. . .

Arguments: n - chart index from 0 to 9 (maximum 10 charts).

 ${\tt Number_of_pen_values_to_follow-this\ is\ equivalent\ to\ the}$

number of bytes to follow divided by two.

Pen0_value - value to be added for pen 0. Must be in the range

previously defined for chart 'n'.

penN value – additional values for each pen defined for chart 'n'.

Must be in the range previously defined for chart 'n'.

Use a pen value of 0xFFFF as a "no value" placeholder to skip points.

Example: Send: "cd 0 10 20 110 120 1 4 0 99 333 2 0FF 1 F00\r"

Get: ">\r"

Send: "bcv 0 5\r"

Get: ">\r"

Send (20 bytes): 0x00,0x00, 0x00,0x00, 0x05,0x00, 0x0a,0x00, 0x0a,0x00,

0x14,0x00, 0x0f,0x00, 0x1e,0x00, 0x14,0x00, 0x28,0x00

Get: ">\r"

The example defines a chart (see <u>CHART DEFINE</u>) and adds values of 0,5,10,15,20 for the teal pen and 0,10,20,30,40 for the red pen. Each data point is four pixels to the right of the last one. Note: The example above is in ASCII with commas between values for readability – the raw data would be in binary without the leading "0x" and without the commas and spaces.

BINARY DOWNLOAD

Description: Enables a raw binary data stream to be written to the SLCD5+ flash

memory or frame buffer. This is used by BMPload to update the stored

bitmaps and macros.

Command bdld <index> <offset> <size> <timeout>

Arguments: index – A number between 0 and 4, referring to the type and location

of memory to store data. Indices 0 - 3 refer to the four areas used by the

"window restore" command. Index 4 refers to Flash memory.

offset – Offset from beginning of selected memory area to store pixel data. *NOTE: value is interpreted as HEX, whether or not preceded by 0x*

size - Number of bytes to store in memory

timeout – Maximum delay in milliseconds between bursts of data from the host computer. If the host computer fails to respond within this period, an exclamation is returned and the binary download terminates.

Notes: 1. If the command is accepted, the SLCD5 issues a standard 2 byte

prompt '>',0x0d. From then on all received data is handled as binary. On successful completion, another standard prompt is issued. If there is a

timeout, a 2 character error prompt '!',0x0d is issued.

2. Software flow control from the SLCD5x to the host *MUST* be obeyed. No more than 64 characters may be sent after an XOFF (0x13) is

received by the host.

3. The SLCD5 Flash memory must be erased before bdld can be used to

update its contents. The erase command is "xmc FEEB".

BINARY NOTIFICATION MODE

Description: Used to set SLCD5 notification mode to binary or ASCII.

Due to parsing constraints, it is sometimes useful to have the SLCD5 provide notifications in fixed length binary format instead of variable

length ASCII. This command provides the binary option.

Command: *binr <0|1>

Arguments: 0 Button / Hotspot / Macro notification is standard ASCII as

specified in the button, and hotspot, and macro notify commands.

2 Button / Hotspot / Macro notification is in binary format as follows:

Functionality:

Standard (ASCII) Notification	Binary Notification
x <index><return></return></index>	X <binary index=""></binary>
x <index> <xr> <yr><return></return></yr></xr></index>	Y <index_byte><xr_lsbyte><xr_msb yte> <yr_lsbyte><yr_msbyte></yr_msbyte></yr_lsbyte></xr_msb </xr_lsbyte></index_byte>
r <index><return></return></index>	R binary index>
s <index> <state><return></return></state></index>	S <binary index=""><binary state=""></binary></binary>
m <index><return></return></index>	M binary index>
e <index><return></return></index>	E binary index>
<index> is 1-3 ASCII digits</index>	<pre><binary index=""> is a single byte</binary></pre>

Returns: on<return>

or

off<return>

BUTTON CLEAR

Description: Clears the definition for the specified button.

NOTE: THIS DOES NOT CHANGE THE SCREEN IMAGE.

Command: bc <n>

Arguments: <n> - Previously defined button number (0-127).

Example: bc 3

This command clears the definition of the previously defined button 3.

Note: To clear all buttons, see the CLEAR ALL HOTSPOT "xc all"

command.

BUTTON DEFINE CENTER TEXT

Description: Defines a momentary or latching state touch button on the screen. The

text for the button(s) is automatically centered vertically and

horizontally. The difference between this command and other BUTTON DEFINE commands syntactically, is that the text offsets are not needed.

Command: bdc <n> x y type "text0" ["text1"] bmp0 bmp1

Arguments: <n> Button number, must be in the range of 0 to 127.

x y Upper left hand corner of the button bitmap.

type Button type:

All types supported in BUTTON DEFINE -

LATCHING STATE and BUTTON DEFINE -

MOMENTARY commands.

"text0" Text string to be displayed on the button. Quotes are

required. The current foreground color will be used for the text. For multi-line text, use the newline (' \n ') character

decimal 10 in the string.

"text1" Additional argument for BUTTON DEFINE - LATCHING

STATE types; text displayed on button in pressed state. The

current foreground color will be used for the text.

bmp0 Index of bitmap displayed in the unpressed state.

bmp1 Index of bitmap displayed in the pressed state.

Note: Both bitmaps must be the same size.

Example 1: bdc 23 150 100 1 "Test" 2 3

Defines button number 23 displayed at x=150, y=100. The "un-pressed" image uses bitmap 2 with the text "Test" drawn on the bitmap in the vertical and horizontal center of the bitmap. The "pressed" image is the

same except bitmap 3 is used.

Host notification: See BUTTON DEFINE – MOMENTARY command.

Example 2: bdc 24 150 200 2 "ON" "off" 2 3

Defines button number 24 displayed at x=150, y=200. The "un-pressed" image uses bitmap 2 with the text "ON" centered on it. The "pressed"

image uses bitmap 3 with the text "off" centered on it.

Host notification: See BUTTON DEFINE – LATCHING STATE command.

BUTTON DEFINE - LATCHING STATE

Description: Defines a touch button on the screen with two distinct states. This is the

equivalent of a retractable pen actuator – push it down, it clicks and stays down; push it again and is comes back up. When touched, the host is notified. A macro can also be invoked from a button press – see <u>TOUCH</u>

MACRO ASSIGN.

< dx1 > < dy1 > < bmp0 > < bmp1 >

Arguments: <n> Button number, must be in the range of 0 to 127.

 $\langle x \rangle$ $\langle y \rangle$ Upper left hand corner of the button

<type> Button type:

2 Latching. Displays bitmap <bmp0> in state 0 and <bmp1> in state 1. Initial state is set to state 0 (not pressed).

20 Latching. Same as above. Initial state is set to state 0 (not pressed).

21 Latching. Same as above, but with initial state set to state 1 (pressed).

"text0" Text string to be displayed on the button in state 0. The current foreground color will be used for the text. For multiline text, use the newline ('\n') character decimal 10.

"text1" Text string to be displayed on the button in state 1. The current foreground color will be used for the text.

 $\langle dx1 \rangle$ Same as above for "text1".

<dy1> Same as above for "text1".

<bmp0> Index of bitmap displayed in state 0.

<bmp1> Index of bitmap displayed in the state 1.

Note: Both bitmaps must be the same size.

Host notification: s<n> <s><return> where <s> is 0 or 1 for the new state. Note the

space between the button index and the state value.

Example: bd 3 20 30 2 "GO" "STOP" 10 5 3 5 7 8

Define a latching button #3 at x=20, y=30 using bitmaps 7 and 8 with the text "GO" displayed in state 0 at offset (10,5) and "STOP" in state 1 at

offset (3,5).

bd 3 20 30 2 "" "" 0 0 0 0 2 3

Define a button as above, but use bitmaps that have the GO and STOP text as part of the bitmaps so no text is needed.

BUTTON DEFINE - MOMENTARY

Description: Defines a momentary touch button on the screen. When touched, the host

is notified, and optionally a macro can be invoked – see TOUCH

MACRO ASSIGN.

Note: When a button is number is redefined, all macro assignments are

cleared.

Command: bd < n > < x > < y > < type > "text" <math>< dx > < dy > < bmp0 > < bmp1 >

Arguments: <n> Button number, must be in the range of 0 to 127.

 $\langle x \rangle \langle y \rangle$ Upper left hand corner of the button

<type> Button type:

- 1 Standard. Displays

 splays

 spressed. Host is notified when button is pressed, but not when it is released.
- 3 Typematic. Same as regular but with typematic functionality; that is, host notification repeats after the button is held down. See <u>SET TYPEMATIC PARAMETERS</u> command.
- 30 Typematic; same as type 3 above, except that subsequent host notifications do not generate a beep.
- 4 Standard except host is notified only when the button is released.
- 5 Standard with both press and release notification.

"text" Text string to be displayed on the button. The current foreground color will be used for the text. For multi-line text, use the newline ('\n') character decimal 10.

<dx> Text offset in the x direction from the upper left-hand corner of the button.

<dy> Text offset in the y direction from the upper left-hand corner of the button.

<bmp0> Index of bitmap displayed in the unpressed state.

<bmp1> Index of bitmap displayed in the pressed state.

Note: Both bitmaps must be the same size.

Host notification, type 1, 3, or 5 when button pressed:

x<n><return>

Host notification, type 4, 5 when button released:

r<n><return>

Example: bd 23 150 100 1 "Test" 10 12 2 3

Defines button number 23 displayed at x=150, y=100. The "un-pressed" image uses bitmap 2 with the text "Test" drawn on the bitmap in the current font at offset x=10, y=12 from the top left corner of the bitmap. The "pressed" image is the same except bitmap 3 is used. Bitmaps 2, 3 must be loaded and have the same size. When pressed, the host is sent:

x23<return>

Example: bd 0 10 20 5 "" 0 0 5 6

Defines button 0 displayed at x=10, y=20. The "un-pressed" image uses bitmap 5, and the "pressed" image uses bitmap 6. No text is supplied so the bitmaps themselves must contain the description. For example, the bitmap 5 could show a toggle switch in the "up" position, and bitmap6 could show a toggle switch in the "down" position. Bitmaps 5, 6 must be loaded and have the same size. When pressed, the host is sent:

x0<return>

When released, the host is sent:

r0<return>

CHANGE SD CARD DIRECTORY

Description: Changes the current working directory of the installed SD card. This can

be used in conjunction with the xif and *LOAD commands.

Note: <directory name> follows the DOS 8.3 naming convention, so the

directory name is limited to eight characters.

Example: *cd /Images

CHART CLEAR DISPLAY AREA

Description: Clears a given chart's display area and resets its pens to their starting

position.

Command: cc < n >

Arguments: n - Object index from 0 to 9 (maximum 10 charts).

CHART DEFINE

Description:

Creates a chart to which data can be added. See <u>CHART VALUES</u> command to add data to a chart. If more data points are added than can fit on the graph, behavior is determined by chart type:

- 0 (STRIP): Initially, data is added at the left edge of the chart until the right edge is reached; then, current data is shifted left and new data is added at the right hand edge of the chart, like a strip chart recorder.
- 1 (OSCILLOSCOPE): The new data is added at the left edge of the chart, overwriting the oldest data, like an oscilloscope.
- 3 (STRIP starting at RIGHT EDGE): Data is always added at the right edge of the chart after shifting the current data left.
- NOTE: Type 2 is reserved for internal use by the "cdb" command (see <u>CHART DEFINE</u> with <u>BITMAP</u> command)

Command:

cd n x0 y0 x1 y1 t dw bv tv bc <pens>

Arguments:

n – chart index from 0 to 9 (maximum 10 charts).

x0, y0 and x1, y1 are the top left corner and bottom right corners of the chart area.

t – Chart type; must be 0, 1, or 3 (see Description, above).

dw – Data width, number of pixels horizontally between chart data points.

by – Bottom data value (lowest y value), positive numbers only.

tv – Top data value (highest y value), positive numbers only.

bc – Background color in RGB444 format (see Color Specifications).

<pens> - One or more sets of two values: pen width and pen color; up
to 8 pens can be defined. Width can be 1-5, color is in RGB444 format
(see Color Specifications).

Example:

cd 0 10 20 110 120 1 4 0 99 333 2 0FF 1 F00

Defines a chart in the rectangular area (10,20), (110,120). Each data value will be 4 horizontal pixels wide. The chart ('Y') values are scaled from 0 to 99. The background color is dark gray (333). Two pens are defined: the first is pen width 2, color teal (0FF), the second is pen width 1, color red (F00).

CHART DEFINE with BITMAP

Description: Creates a chart to which data can be added. See CHART VALUES

command to add data to a chart. The background of the chart is a bitmap. If more data points are added than can fit on the graph, the data starts

again on the left in "Oscilloscope" style.

Command: cdb n x y dw bv tv bitmap <pens>

Arguments: n - Chart index from 0 to 9 (maximum 10 charts).

x and y are the top left corner coordinates. The bottom right corner coordinate is defined by the width (x axis length) and height (y axis

length) of the chart area.

dw – Data width, number of pixels horizontally between chart data

points.

by – Bottom data value (lowest y value), positive numbers only.

tv – Top data value (highest y value), positive numbers only.

bitmap - Bitmap index

<pens> - one or more sets of two values: pen width and pen color; up to
eight pens can be defined. Width can be 1–5, color is in RGB444 format

(see Color Specifications).

Example: cdb 0 10 20 4 0 99 72 2 0FF 1 F00

Defines a chart in the rectangular area defined by bitmap index 72, starting in the upper left (10,20). The lower right is defined by the bitmap's width and height. Each data value will be 4 horizontal pixels wide. The chart ('Y') values are scaled from 0 to 99. The background bitmap is index 72. Two pens are defined: the first is pen width 2, color

teal (0FF), the second is pen width 1, color red (F00).

CHART REDEFINE BACKGROUND BITMAP

Description: Redefines a given chart's background bitmap; useful to highlight a

portion of a trace on a chart with a bitmap background.

Command: cdbb <n> <bitmap>

Arguments: n - Object index from 0 to 9 (maximum 10 charts).

bitmap - bitmap index.

CHART REDEFINE BACKGROUND COLOR

Description: Redefines a given chart's background color; useful to highlight a portion

of a trace.

Command: cdbc <n> <color>

Arguments: n - Object index from 0 to 9 (maximum 10 charts).

color - Color in RGB444 format (see Color Specifications)

CHART REDEFINE CLEAR-BEFORE-DRAW MODE

Description: Redefines the Clear Before Draw Mode of a given OSCILLOSCOPE

type chart (with or without a bitmap background). The default mode is on, which causes the chart to clear the area before drawing a new value.

Command: cddm <n> <on|off>

Arguments: n - Object index from 0 to 9 (maximum 10 charts).

CHART REDEFINE PEN

Description: Redefines a given chart's pen width and pen color.

Command: cdp <n> <pen> <width> <color>

Arguments: n - object index from 0 to 9 (maximum 10 charts).

pen - Pen number, 1-8
width - Pen width

color - Color in RGB444 format (see Color Specifications)

CHART REDEFINE RETRACE MODE

Description: Redefines the Retrace Mode of a given OSCILLOSCOPE type chart

(with or without a bitmap background). The default mode is on, which causes the chart pens to reset to the start of the chart when the chart is full. Selecting off causes the chart to stop updating when the chart is full.

Command: cdrm <n> <on|off>

Arguments: n - Object index from 0 to 9 (maximum 10 charts).

CHART RESET PENS TO START

Description: Resets a given chart's pens to their starting position, without changing

what's already displayed.

Command: cr <n>

Arguments: n - Object index from 0 to 9 (maximum 10 charts).

CHART VALUES

Description: Adds data points to previously defined chart. Note: If multiple pens are

defined, they are drawn in order first to last – if multiple pens have the same value only the last pen color will be visible. A value or a minus sign must be supplied for each pen defined. If a minus sign character, '-', is present instead of a pen_value, the associated pen will not draw on the

chart, leaving a gap in the line for that pen.

Command: cv n pen0 value [pen1 value ..]

Arguments: n - Chart index from 0 to 9 (maximum 10 charts).

pen0_value - Value to be added for pen 0. Must be in the range

previously defined for chart 'n'.

pen1 value - Additional values for each pen defined for chart 'n'.

Must be in the range previously defined for chart 'n'.

Example: cd 0 10 20 110 120 1 4 0 99 333 2 0FF 1 F00

cv 0 30 50 cv 0 40 60 cv 0 - 60 cv 0 40 -

Defines a chart (see <u>CHART DEFINE</u>) and enters a value of 30 for the teal pen and 50 for the red pen. The lines will be 4 horizontal pixels long for each. The second cv command extends the teal pen another 4 pixels in the X+ (left to right) direction and to 50 in the Y axis. The red pen moves 4 pixels in the X+ direction and to 60 in the Y axis. The third cv command does not draw the teal pen, but does extend the red pen another 4 pixels. The fourth cv command draws a 4 pixel line segment at value 40 with the teal pen, but does not draw the red pen.

CLEAR ALL HOTSPOT

Description: Clears all previously defined touch areas including the button touch

areas.

Command: xc all

CLEAR HOTSPOT

Description: Clears the previously defined hotspot touch area.

Command: xc <n>

Arguments: <n> Hotspot (touch button) number. Value must be in the range of 128

to 255.

CLEAR SCREEN

Description: Clears the screen to the background color and removes any buttons and

hotspots.

Command: z

CLEAR SCROLLING TEXTBOX

Description: Clears an existing Scrolling Textbox.

Command: stc <index>

Arguments: <index> - Index of scrolling textbox.

Example: stc 0

CLEAR SCREEN SPECIAL

Description: Same function as the 'z' command but the display is either not cleared or

cleared by writing a full screen bitmap.

Command: zs

Clears all buttons, charts etc like 'z' but does not change the display.

Command: zs <bitmap index>

Same as 'z' but instead of clearing the screen, it displays the specified bitmap at location (0, 0). This is useful when a full screen bitmap is used.

CLEAR TEXT WINDOW (SLCD5+ Only)

Description: Clear a Textwindow viewport and its associated text buffer. The

Textwindow viewport position is reset to the upper-left corner of the associated text buffer (first character position of first line position).

Command: twc <n>

Arguments: <n> - Textwindow number.

Example: twc 0

CONTROL PORT AUTOSWITCH

Description: The SLCD5 unit has two serial ports. COM0 is connected to J6 while

COM1 is connected to J7. Only one port is active at a time as the unit's control port. However in certain circumstances it is useful to be able to

switch ports temporarily.

Command: This can be done by sending three consecutive special characters to the

inactive port. Once this is done, the inactive port will become the active

port temporarily.

The special character is <return> by default. The *auxEsc command can

be used to change the special character.

CONTROLLER TYPE

Description: Returns type of controller – SLCD5 or SLCD5+.

Command: *ctype

Returns: 0 - SLCD5

1 - SLCD5+

! - Error prompt for older firmware; controller type is SLCD5

COPY FLASH to DRAM (SLCD5+ Only)

Description: If the flash memory is being used directly as the working set for

Bitmaps/macros/fonts (no SD card present), the image load time can be slower than if the working set were in DRAM. The flash is used directly so that boot time from power-on is fast. If the extra speed is needed, this command copies the working set to DRAM. This command may take several seconds to execute depending on the size of the .bin file loaded in

flash.

Command: *flash2ram

Returns: Standard prompt; error prompt means the flash contents were not valid.

COPY TEXT WINDOW VISIBLE TO VARIABLES (SLCD5+ Only)

Description: Copy the value 0-100 representing the visible (viewport) line location

(by percent) into the system integer variable referenced by the "line v_index" and the visible character location (by percent) into the system integer variable referenced by the "char v_index" line. Line values are 0-100, where 0 means showing bottom of buffer and 100 means top line. Character values are 0-100, where 0 means showing left of buffer and

100 means right.

Command: twv <n> v index> <char v index>

Arguments: <n> - Textwindow number.

v index> - Integer variable to receive the viewport line

position.

<char v index> - Integer variable to receive the viewport char

position.

Example: twv 0 2 3

Copies Textwindow 0 current viewport line percentage number into integer variable i2 and the current viewport character percentage number

into integer variable i3.

CRC EXTERNAL FLASH

Description: Returns the 16-bit CRC of the data flash used to store macros and

bitmaps. This can be used in production code to verify that the correct

bitmaps are loaded in the board.

Command: *CEXT [<from> <to>]

Arguments: [<from> <to>] optional start and stop offsets used to specify a

section of the external flash to CRC. Values are interpreted as HEX numbers. Valid ranges are 0x0 to (external memory available -1); see

EXTERNAL MEMORY AVAILABLE.

Returns: 0xXXXX<return> where XXXX is a hex number.

CRC PROCESSOR BOOTLOAD CODE

Description: Returns a 16-bit CRC of the processor bootload code space (first 64KB

of program flash).

Command: *CSUMB

CRC PROCESSOR CODE

Description: Returns a 16-bit CRC of the entire processor code space. The purpose is

to give an indication of the firmware version loaded.

Command: *CSUM

Returns: 0xHHHH<return> where H is a single hex digit.

CRC SCREEN

Description: Returns the 16-bit CRC of the display buffer. This can be used to

generate automated tests to verify correct user interface operation across

a user's system software version changes.

Command: *CRC

Returns: 0xXXXX<return> where XXXX is a hex number.

Returns: 0xHHHH <return> where H is a single hex digit.

DEBUG MACRO

Description: Used to enable macro debug. When set, the commands in the macro are

displayed as they are executed. This is useful when a macro stops due to

a command error.

Command: *macdebug <0|1>

Returns: [on|off]<return>

DEBUG TOUCH

Description: Used for touch screen debugging. When set to 1, an "X" is written on the

screen when a valid touch is detected. Also, additional information is

displayed during touch calibration.

Command: *debug <0|1>

Returns: [on|off]<return>

DEFINE HOTSPOT (VISIBLE TOUCH AREA)

Description: Defines a touch area on the screen. When touched, this area's number

will be returned on the serial control line. The area defined will be set to

reverse video while touched.

Command: x < n > x0 y0 x1 y1

Arguments: <n> touch button number. Must be in the range of 128 to 255.

(x0,y0), and (x1,y1) specify the touch area for this hotspot.

Returns: x<n><return>

when the corresponding button is pushed. Note that once a hotspot is defined, the return string can be transmitted at any time including during

a command transmission to the unit (full duplex).

Example: x 135 100 100 179 139

Creates a rectangular hotspot with height of width of 80 and height of 40.

DEFINE INVERTER CONTROL POLARITY

Description: The inverter power connectors J10, J13 have an "inverter enable" signal.

On some inverters, this is high true (high = typically 5V), and on others it is low true. This command sets the enable polarity and stores the value in non-volatile memory (see warning); when given no arguments, it returns

the current setting.

Command: *invEnaHiTrue [0|1]

Argument: (none) – Display current state.

O – Inverter enable signal will be low for inverter on.

1 - Inverter enable signal will be high for inverter on.

DEFINE INVERTER PWM CONTROL

Description: The backlight inverter is typically either voltage- or enable-controlled.

This corresponds to high or low PWM frequency respectively. If the inverter is voltage-controlled the PWM must be high frequency so the analog filter will work. This command sets the value and stores it in non-volatile memory (see warning); when given no arguments, it returns the

current setting.

Command: *pwmIsEnable [0|1]

Arguments: (none) - display current state.

- pwm is high frequency for voltage controlled inverters.- pwm is low frequency for "enable" controlled inverters.

DEFINE MAX, MIN BRIGHTNESS

Description: These commands set the range and polarity for inverter brightness

control via J10 / J13, and store the values in non-volatile memory (see warning). When given no arguments, they return the current setting.

*minBrite <value from 0 to 255>

Arguments: If maxBrite > minBrite, the polarity of the brightness signal is

positive: higher brightness = higher level.

If maxBrite < minBrite, the polarity of the brightness signal is

negative: higher brightness = lower level.

Example: maxBrite 0

minBrite 230

When the backlight brightness command "xbb 255" is issued, the brightness control level will be zero. When "xbb 0" is issued, the brightness control level will be (230/255 * maximum value).

DEFINE PANEL ORIENTATION

Description: Some LCD panels have hardware signals to flip the display horizontally,

vertically, or both. This command allows these signals to be set and it stores the value in non-volatile memory (<u>see warning</u>). When given no

arguments, it returns the current setting.

Command: *orient [0|1|2|3]

Argument: (none) – Display current state

Pin 31 low, pin 30 low
Pin 31 low, pin 30 high
Pin 31 low, pin 30 high
Pin 31 high, pin 30 low
Pin 31 high, pin 30 high
Pin 31 high, pin 30 high
(pins on DF9-31 connector)
(pins on DF9-31 connector)

Example: *orient 2

This flips an NEC panel 180 degrees compared to the "*orient 0"

position.

DEFINE RELATIVE X-Y HOTSPOT

Description: Defines a touch area on the screen that has no reverse video highlight.

When touched, this area's number and the X and Y position of the touch is returned, relative to the top left corner of the area as defined by x0 and

y0. A beep is generated.

Command: xxy < n > x0 y0 x1 y1

Arguments: <n> touch button number. Must be in the range of 128 to 255.

(x0,y0), and (x1,y1) specify the touch area for this hotspot.

Returns: x < n > < x > < y > < return >

when the screen is touched in the hotspot area. Note that once a hotspot

is defined, the return string can be transmitted at any time including

during a command transmission to the unit (full duplex).

Example: xxy 140 100 120 200 220

Enables a rectangular hotspot. When the screen location x=110, y=140 is

touched the following string is sent to the host:

x140 10 20<return>

DEFINE RELATIVE X-Y HOTSPOT (Silent – No Beep)

Description: Same as DEFINE RELATIVE X-Y HOTSPOT but without the beep.

Command: xxynb <n> x0 y0 x1 y1

DEFINE SCROLLING TEXTBOX

Description: Define a new Scrolling Textbox, using the current font, foreground color,

and background color. Note that scrolling textboxes require monospaced fonts. The built-in fonts that have names starting with 'M' or 'm' are

monospaced fonts.

Command: std $\langle \text{index} \rangle \langle \text{type} \rangle \langle \text{x0} \rangle \langle \text{y0} \langle \text{x1} \rangle \langle \text{y1} \rangle$

Arguments: <index> - Index of scrolling textbox.

<type> - Must be 0. Simple terminal-like display, no line buffering.

< x0 > < y0 > - Top/left corner of textbox location.

 $\langle x1 \rangle$ $\langle y1 \rangle$ -Bottom/right corner of textbox location.

Example: std 0 0 1 80 165 180

Defines a scrolling textbox at coordinates 1/80 165/180.

DEFINE SPECIAL HOTSPOT (Invisible Touch Area)

Description: Same as DEFINE HOTSPOT except that the touch area is not reverse

video highlighted when touched. This allows a "hidden" touch area to be

placed on the screen.

Command: xs < n > x0 y0 x1 y1

Arguments,

Returns: Same as DEFINE HOTSPOT command.

Example: xs 135 100 100 179 139

Draws a rectangular hotspot with height of width of 80 and height of 40.

DEFINE SPECIAL HOTSPOT (Invisible, No Beep)

Description: Same as DEFINE HOTSPOT except that the touch area is not reverse

video highlighted and there is no audible beep when touched. This allows

a silent, hidden touch area to be placed on the screen.

Command: xsnb < n > x0 y0 x1 y1

Arguments,

Returns: Same as DEFINE HOTSPOT command.

DEFINE SPECIAL TYPEMATIC TOUCH AREA

Description: Same as <u>DEFINE TYPEMATIC TOUCH AREA</u> except that the touch

area is not reverse video highlighted when touched and beeps only once when pressed continuously (use "xset <n>-T" to enable repeated beeps).

Command: xst < n > x0 y0 x1 y1

Arguments,

Returns: Same as DEFINE HOTSPOT command.

DEFINE TEXT WINDOW (SLCD5+ Only)

Description: Define a new Textwindow, using the current font, foreground color, and

background color. Note that Textwindows require monospaced fonts. The built-in fonts that have names starting with 'M' or 'm' are monospaced fonts. The Textwindow viewport and its associated text buffer will be blank until text is loaded into the buffer with the LOAD TEXT WINDOW BUFFER command. The Textwindow viewport position is set to the upper-left corner of the associated text buffer (first character position of first line position). Textwindows allow up to 200

lines of 120 characters each (SLCD5+).

Command: twd < n > < x0 > < y0 > < x1 > < y1 >

Arguments: <n> - Textwindow number, 0 or 1 (2 max).

<x0> <y0> - Top/left corner of Textwindow viewport location.
<x0> <y0> - Bottom/right corner of Textwindow viewport location.

Example: twd 0 10 80 165 180

Defines a Textwindow with a viewport at coordinates 10/80 165/180.

DEFINE TOUCH ACTION

Description: The touch screen can have different operating characteristics defined

using this command. It stores the value in non-volatile memory (<u>see warning</u>). When given no arguments, it returns the current setting. If the

optional 's' is present, it does NOT store the value.

Command: *touchMode[s] [S|L|P|W]

Arguments: (none) - Display current options.

S - Standard (none of the others).

Lockout other touch areas until a touch release

(turn off "n-key rollover).

 Use touch pressure to validate touch (can eliminate multiple touch aliasing).

W - Wandering from the initial press will cause the touch

to release.

Example: *touchModes LPW

This sets the touch action to be the most guarded against unintentional

presses at the cost of less responsive feel.

DEFINE TOUCH CALIBRATION TIMEOUT

Description: The touch screen calibrate command has a timeout when waiting for a

touch input. This sets the timeout value and stores it in non-volatile memory (see warning). When given no arguments, it returns the current

setting.

Example: *tcTimeout 5

This sets the timeout to five seconds.

DEFINE TOUCH PARAMETERS

Description: The touch screen can have different sensitivities defined using this

command. These values are dependent on the touch panel used. The command stores the values in non-volatile memory (see warning). When

given no arguments, it returns the current setting.

Arguments: (none) - Display current options.

<samples> - Number of touch samples required for a valid touch;

the larger the number the less sensitive.

 - Allowable range for sample location measurement;

the smaller the number the less sensitive.

Example: *touchParm 8 12

DEFINE TOUCH SIGNAL ORIENTATION

Description: The touch panel connectors J3, J11, J12 are defined in terms of

X/left/right and Y/up/down. A touch panel that has these X and Y

reversed (swapped) can be accommodated by using this command, which stores the value in non-volatile memory (see warning). When given no

arguments, it returns the current setting.

Command: *touchSwap [0|1]

Arguments: (none) - Display current state.

- Touch signal names are given per J3 / J11 / J12 descriptions.

1 - Touch signals on J3 / J11 / J12 are swapped X and Y.

DEFINE TYPEMATIC TOUCH AREA

Description: Same as DEFINE HOTSPOT except that the touch area is typematic and

will repeatedly send the return code if the area is pressed continuously.

Command: xt < n > x0 y0 x1 y1

Arguments,

Returns: Same as DEFINE HOTSPOT command.

DISABLE TOUCH (Hotspot / Button)

Description: Temporarily disables touch area or button. Once disabled, the button

graphic may be overwritten by a pop-up or other element. Disabled touch

areas / buttons can be re-enabled.

Command: $xd < n \mid "all" > [< n last >]$

Arguments: <n> touch area or button number. Must be in the range of 0 to 255, and

must have been previously defined.

"all" disables all touch areas or buttons (entire screen).

<n last> optional parameter that is the highest number of touch area or button; if present, all touch areas and buttons are disabled incrementally

from <n> thru <n last>.

Example: xd 1

Disables previously defined button 1.

xd 2 10

Disables touch areas or buttons numbered 2-10.

DISPLAY BITMAP IMAGE

Description: Copies a stored bitmap onto the screen at x y (top left corner of bitmap

target).

The Windows program BMPload.exe is used to download bitmaps into

the SLCDx flash memory. These are accessed by index number.

Command: xi < index > x y

Arguments: <index> - Bitmap index.

x y - Location of top left corner of bitmap.

Example: xi 4 10 20

This displays the fourth bitmap at location (10, 20).

DISPLAY BITMAP IMAGE CENTERED

Description: Same as xi command above, except the bitmap is centered at (x, y).

Command: xim < index > x y

Arguments: <index> - Bitmap index.

x y - Location of center of bitmap.

Example: xim 4 100 120

This displays the fourth bitmap centered at location (100, 120).

DISPLAY CLIPPED BITMAP IMAGE

Description: Same as xi command above, except that a clipping area is applied so only

part of the bitmap is displayed. This is useful to restore a part of a large graphic that has had text or graphics overlaid on it, for example when a graphic cursor is drawn on a map. When the cursor moves, the map area previously obscured by the cursor needs to be restored. The clip area is defined <u>relative to the top left of the bitmap</u> (i.e.: x0 y0 x1 y1 are offsets

from x y).

Command: xic < index > x y x0 y0 x1 y1

Arguments: <index> - Stored bitmap index. Bitmap should not be compressed by

BMPLoad.

x y - Location of top left corner of bitmap

x0 y0 x1 y1

- Rectangle within the bitmap to be displayed

Note: $0 \le x 0 \le bitmap width, 0 \le y 0 \le bitmap height,$

 $x0 \le x1 \le \text{bitmap width, } y0 \le y1 \le \text{bitmap height}$

Example: xi 1 10 20 // draw main bitmap

p 1 // set pen width to 1 r 30 40 35 45 // draw rectangle

// calc rectangle offsets (x0 y0 x1 y1):

// (30-10) (40-20) (35-10) (45-10)

xic 1 10 20 20 20 25 25

This example draws a main bitmap #1. Then it places a rectangle on top of it. Then, instead of redrawing the entire bitmap to erase the rectangle,

the xic command is used to only redraw a part of it.

DISPLAY CONFIG STRING

Description: The SLCD5 configuration can be set by a CONFIG.INI file. This file can

also define the response of this command. In this way, the host software

can verify the SLCD5 configuration.

Command: *config

Returns: Text string that was set by the line:

config = "text string"

in the **CONFIG.INI** file.

Note: The text string displayed by this command does not have double quotes

around it.

DISPLAY IMAGE FILE

Description: Displays an image file from the current directory on the SD Card (see

<u>CHANGE SD CARD DIRECTORY</u>) onto the screen at x y (relative to

top left corner of the screen, which is location 0, 0).

Command: xif <filename>.<ext> x y

Arguments: <filename> is the name of the image file (max 8 chars).

<ext> is a 3 character extension identifying the type of image file:

"bmp" bitmap
"gif" GIF
"jpg" JPEG

Example: xif button.bmp 10 20

This displays the bitmap image in file "button.bmp", found in the current

directory of the SD Card, at location (10, 20).

DISPLAY ON/OFF

Description: Turns power to the display (and backlight) on or off.

Command: v < on | off >

DISPLAY WINDOWED BITMAP IMAGE

Description: Displays a section (window) of a stored bitmap with an offset. This is

used to implement a sliding window into a larger bitmap, for example, a section of a compass or ruler. It can also be used to simulate a rotating dial. Only uncompressed bitmaps are supported by this command.

Note: the window is clipped and offset only in the specified direction. For example, with a horizontal compass bitmap, the visible rectangle width is specified with the length parameter, but the height is always the

full vertical height of the bitmap.

Command: xio < index > < x > < y > < 0 | 1 > < length > < offset >

Arguments: <index> - Stored bitmap index. Bitmap should not be compressed

by BMPLoad.

<x> <y> - Screen coordinates for drawing location

<0 | 1> - 0: Vertical window

- 1: Horizontal window

<length> - Number of pixels to display along orientation

<offset> - Offset into

Note: Highcolor firmware will only support Highcolor bitmaps or the xio

command will return an error.

Example: xio 4 10 10 1 100 50

Bitmap #4 can be wider than the LCD screen; assume it is N pixels long and 45 pixels high. This command draws a rectangular screen area (10, 10) to (109, 54) with the source being bitmap #4 with a horizontal

offset into the bitmap of 50 pixels.

DRAW ARC SEGMENT

Description: Draws an arc segment using the current foreground color and pen width.

Command: a <X0> <Y0> <Radius> <Start Angle> <End Angle>

Arguments: $\langle X0 \rangle \langle Y0 \rangle$ Center point of the ARC segment.

<Radius> Radius of arc (Pixels)
<Start Angle> Starting angle (Degrees)
<End Angle> Ending angle (Degrees)

Angles are CCW from 0=horizontal right (on a clock, 3:00, on a compass, East). <End Angle> must be greater than <Start Angle>.

Example: a 100 100 40 20 110

Draws a semi-circle centered at 100X100.

DRAW CIRCLE

Description: Draws a single pixel width circle using the current foreground color. If

the optional fill argument is supplied, the entire circle is filled with the

current foreground color.

Command: $c \times 0 \times 0 r = [f]$

Arguments: Center is (x0,y0) with radius r. The circle is not filled if 'f' is omitted,

and is filled if f=1.

Example: c 100 100 50

Draws a circle centered at 100,100 with a radius of 50.

C 100 100 50 1

Draws a circle filled with the current foreground color centered at 100,

100 with a radius of 50.

DRAW ELLIPSE

Description: Draws a single pixel width ellipse using the current foreground color.

Command: $e \times y < x \text{ radius} > < y \text{ radius} >$

Arguments: x y Specifies the center point of the ellipse.

<x radius> Specifies the X radius of the ellipse.
<y radius> Specifies the Y radius of the ellipse.

Notes: 1. Ellipse radii are limited to values of 180.

2. Ellipses are limited to horizontal and vertical orientation.

Example: e 150 150 30 50

Draws an ellipse centered at 150X150. Ellipse is vertically orientated.

DRAW FILLED ELLIPSE

Description: Draws a filled ellipse using the current foreground color.

Command: ef x y < x radius> < y radius>

Arguments: x y Specifies the center point of the ellipse.

<x radius> Specifies the X radius of the ellipse.
<y radius> Specifies the Y radius of the ellipse.

Notes: 1. Ellipse radii are limited to values of 180.

2. Ellipses are limited to horizontal and vertical orientation.

Example: ef 150 150 30 50

Draws an ellipse centered at 150X150, Ellipse is vertically orientated.

DRAW FILLED POLYGON

Description: Draws a filled polygon at specified origin, using current foreground

color.

Command: pf <X Orig> <Y Orig> <X/Y vertices....>

Arguments: <X Orig> <Y Orig> is X/Y location for polygon.

<X/Y vertices ...> are vertex end-points (MAX=11)

Example: pf 100 100 0 0 15 15 15 10 40 10 40 -10 15 -10 15

-15 0 0

Draws a filled polygon at offset 100 100.

DRAW LINE

Description: Draws a line from (x0, y0) to (x1, y1) using the current foreground color

and pen width.

Command: 1 x0 y0 x1 y1

Example: 1 0 0 639 479

This will draw a line from the upper left-hand corner of the screen to the

lower right hand corner of a VGA display (640x480).

DRAW OUTLINE POLYGON

Description: Draws a polygon at specified origin, using current foreground color and

pen width.

Command: pg <X Orig> <Y Orig> <X/Y vertices....>

Arguments: <X Orig> <Y Orig> is X/Y location for polygon.

 $\langle X/Y \text{ vertices } ... \rangle$ are vertex end-points (MAX=11).

Example: pg 100 100 0 0 15 15 15 10 40 10 40 -10 15 -10 15

-15 0 0

Draws a polygon at offset 100 100.

DRAW POLYLINE

Description: Draws a polyline at the specified origin, using current foreground color

and pen width. A polyline is a line with multiple segments that may not

connect to form a complete shape.

Command: pl <X Orig> <Y Orig> <X/Y vertices...>

Arguments: <X Orig> <Y Orig> is X/Y location for polygon.

 $\langle X/Y \rangle$ vertices ...> are vertex end-points (MAX=11).

Example: pl 100 100 35 -15 0 0 35 15

DRAW RECTANGLE

Description: Draws a rectangle using the current foreground color and pen width, or

an alternate style and color.

Command: r x0 y0 x1 y1

r x0 y0 x1 y1 <style>
r x0 y0 x1 y1 1 [color]

Arguments: Upper left corner is (x0,y0) and lower right corner at (x1,y1).

<style>: 1=filled, 2= one pixel wide dotted line.

[color]: Fill color in RGB444 format (see Color Specifications); if not

present, uses foreground color.

Example: r 100 100 179 119

Draws a rectangle positioned at 100,100 with a width of 80 and a height

of 20.

R 100 100 179 119 1

Draws a rectangle filled with the foreground color positioned at 100,100

with a width of 80 and a height of 20.

R 50 100 179 119 1 C03

Draws a rectangle filled with the color R=C, G=0, B=3 positioned at

50,100 with a width of 130 and a height of 20

DRAW ROTATED FILLED POLYGON

Description: Draws a rotated, filled, polygon at the specified origin, using the current

foreground color.

Command: pfr <angle> <X Orig> <Y Orig> <X/Y vertices....>

Arguments: <angle> Number of degrees to rotate polygon

<X Orig> <Y Orig> is X/Y location for polygon.

<X/Y vertices ...> are vertex end-points (MAX=11).

Example: pfr 45 100 100 0 0 15 15 15 10 40 10 40 -10 15

-10 15 -15 0 0

Draws a filled polygon rotated 45 Deg **CCW** at offset 100 100.

DRAW ROTATED POLYGON

Description: Draws a rotated polygon at the specified origin, using the current

foreground color and pen width.

Command: pgr <angle> <X Orig> <Y Orig> <X/Y vertices...>

Arguments: <angle> Number of degrees to rotate polygon

<X Orig> <Y Orig> is X/Y location for polygon. <X/Y vertices ...> are vertex end-points (MAX=11).

Example: pgr 45 100 100 0 0 15 15 15 10 40 10 40 -10 15

-10 15 -15 0 0

Draws polygon rotated 45 Deg CW at offset 100 100.

DRAW ROTATED POLYLINE

Description: Draws a rotated polyline at the specified origin, using the current

foreground color and pen width.

Command: plr <angle> <X Orig> <Y Orig> <X/Y vertices...>

Arguments: <angle> Number of degrees to rotate polygon

<X Orig> <Y Orig> is X/Y location for polygon.

<X/Y vertices ...> are vertex end-points (MAX=11).

Example: plr 45 100 100 35 -15 0 0 35 15

Draws a polyline rotated 45 Deg <u>CCW</u> at offset 100 100.

DRAW TRIANGLE

Description: Draws a triangle using the current pen width and foreground color for the

line. If the optional fill argument is supplied, the triangle is also filled with the specified color. Note: To fill without an outline border, set the

pen width to one.

Command: tr x0 y0 x1 y1 x2 y2 [RGB444 | RGB888]

Arguments: The three x, y sets are the triangle vertices. The optional color fill

argument is three or 6 hex characters (see Color Specifications).

Example: tr 10 10 10 100 200 200

Draws a triangle with points (10,10), (10,100), (100,200).

Tr 10 10 10 100 200 200 0CC

Same as above, but the triangle is filled with light blue.

EEPROM READ, WRITE

Description: The EEPROM can be read from and written to, at addresses 0x00-0x0F

(16 bytes total). When writing values, be aware the EEPROM chip has

limited total write cycles (see warning).

Commands: *eer <hex address byte>

*eew <hex address byte> <hex value byte>

Arguments: all arguments are ASCII Hex characters, representing byte values.

Examples: *eew Of a5

*eer Of

Returns: OF = A5

ENABLE TOUCH (Hotspot / Button)

Description: Re-enables touch area or button. For buttons, the state of the button is

remembered and the correct graphic is displayed. If the optional [s] variation is used, the button bitmaps are not shown on re-enable.

Command: $xe[s] < n \mid "all" > [< n last >]$

Arguments: <n> touch area or button number. Must be in the range of 0 to 255, and

must have been previously defined.

"all" re-enables all touch areas or buttons (entire screen).

<n last> optional parameter that is the highest number of touch area

or button; if present, all touch areas and buttons are re-enabled

incrementally from <n> thru <n last>.

Example: xe 1

Enables previously disabled button 1.

xe 2 10

Enables touch areas or buttons numbered 2-10.

EXTERNAL BACKLIGHT BRIGHTNESS CONTROL

Description: Sets the brightness of the external backlight if the external unit supports

this feature; 'xbb' stores the setting in non-volatile memory (see warning), whereas 'xbbs' does not. When given no arguments, the

command returns current setting.

Command: xbb[s][+|-] < level >

Arguments: <1eve1> is a number from 0 through 255. 0 is the dimmest and 255 is

brightest. The optional '+' or '-' prefix makes the level value an

increment up or down rather than an absolute value. The value saturates at 0 and 255 without error; in other words if the level is at 255 and an "xbb + 10" is issued, the level stays at 255 and no error prompt is issued.

Example: xbb-10

This will reduce the brightness by 10 units but no lower than 0.

Example: xbbs 255

This set the brightness to maximum and no save in EEPROM

(executes quickly).

EXTERNAL BACKLIGHT ON/OFF

Description: Turns the external backlight control on or off via J10 or J13.

Command: xbl <on|off>

EXTERNAL MEMORY AVAILABLE

Description: Returns four values: the size of External (macro/bitmap) memory, in

bytes, the size of a single sector, the size a second time and the base

address of FLASH.

Command: xma

EXTERNAL MEMORY CHIP ERASE

Description: Erases all of External Flash (macro/bitmap) memory.

Command: xmc FEEB

Note: May take as long as 60 seconds to complete.

GET PANEL TYPE

Description: The unit's firmware is different depending on the panel and inverter it

supports, even if the software version is the same. This command displays a human readable string that shows the panel definition used to create the firmware. Note: if the CONFIG.INI file specifies a config

string, this string will be returned by the *panel command.

Command: *panel

GET TEXT DISPLAY WIDTH IN PIXELS

Description: Returns the width of the space required to display the given text using

the current font, in pixels.

Command: t? "text string"

Examples: f 20B

>

t? "string one"

134

>

t? "string TWO"

149

GET VARIABLE

Description: Used to return the value of an internal variable (Integer, EEPROM,

String, and Point Coordinate).

Command: get <internal variable name>

Arguments: <internal variable name>

Returns: <value><return>

Example: get i9

-200

Internal Integer variable i9 returns its value, negative 200.

Get p5 20 200

Internal Point Coordinate variable p5 returns its value, x coordinate, 20

and y coordinate, 200.

GET VARIABLE (HEX)

Description: Used to return the HEX value of an internal variable (Integer or

EEPROM only).

Command: getx <internal variable name>

Arguments: <internal variable name>

Integer - i0 thru i19
EEPROM val - e0 thru eF

Returns: <HEX value><return>

Example: getx i9

A5

Internal Integer variable i9 returns its value, HEX A5.

GOTO POSITION IN TEXT WINDOW (Absolute) (SLCD5+ Only)

Description: Move the viewport of a Textwindow to a new absolute position of the

text buffer. Movement in the 'down' direction will be limited by the

actual number of lines of text in the text buffer.

Command: twga <n> <char>

Arguments: <n> - Textwindow number.

New line position. Use 999 to indicate current position.

<char> - New character position. Use 999 to indicate current position.

Example: twga 0 5 20

Moves Textwindow 0 viewport to line 5, character 20.

twga 1 999 75

Moves Textwindow 1 viewport to character 75 without changing the line

position.

twga 1 150 999

Moves Textwindow 1 viewport to line 150 without changing the current

character position.

GOTO POSITION IN TEXT WINDOW (Percentage) (SLCD5+ Only)

Description: Move the viewport of a Textwindow to a new position, by percent, of the

text buffer. Movement in the 'down' direction will be limited by the

actual number of lines of text in the text buffer.

Command: twgp <n> <n> <char %>

Arguments: <n> - Textwindow number.

- New line position by %. Use 999 to indicate current position.

<char> - New character position by %. 999 indicates current position.

Example: twgp 0 5 20

Moves Textwindow 0 viewport to the line position 5% into the buffer,

character position 20% into the buffer.

twgp 1 999 75

Moves Textwindow 1 viewport to the character position 75% into the

buffer without changing the line position.

twgp 1 80 999

Moves Textwindow 1 viewport to the line position 80% into the buffer

without changing the character position.

LAST FIRMWARE FILE LOADED

Description: When the bootloader finds a new firmware file on the SD card, it stores

the name of the file in EEPROM. This command displays the name of the most recent firmware file loaded. Fresh from the factory, or after using the *MFGRESET command, the response will be "????????".

Command: *firmware

Returns: "<eight ASCII characters>"

This is the eight character DOS filename. The firmware file is this name

with extension ".elf".

LEVELBAR DEFINE

Description: Defines a "levelbar" object. The object provides scaling and different

colors for different levels, similar to a sound level meter. Note that the object is not visible until a value is assigned – see the <u>LEVELBAR</u>

VALUE command.

Command: Id n x0 y0 x1 y1 or inv bv bc <levels>

Arguments: n - Object index from 0 to 9 (maximum 10 charts).

x0, y0 and x1, y1 are the top left corner and bottom right corners of

the object's area

or – Orientation: 0 = vertical, 1 = horizontal

inv-Invert: 0 = no (low value at bottom / left); 1 = yes (low value at

top / right)

by – Bottom data value; should be 1 if value 0 means no level displayed;

negative numbers allowed

bc – Background color in RGB444 or RGB888 format (see Color

Specifications)

 ${\tt <levels>}$ - One or more sets of two values: value and associated color.

These start with the maximum and go down. At most three sets are

possible. Color is the same format at the bc parameter.

Example: ld 0 10 10 30 200 0 0 1 333 99 F00 50 FF0 40 0F0

Defines a levelbar in the rectangular area (10,10), (30,200). Levelbar is vertical with the lowest value at the bottom; minimum visible value of 1, with background color dark gray (333). Three color bands are defined: red (F00) from 99 to 51, yellow (FF0) from 50 to 41, and green (0F0)

from 40 to 1.

LEVELBAR VALUE

Description: Sets the value of a previously defined "levelbar" object.

Command: Iv n val

Arguments: n - Object index

val - Value for the levelbar.

Example: 1v 0 50

Sets levelbar 0 to value 50.

LIST BITMAPS DETAIL

Description: Returns extended details of the bitmaps stored in downloadable flash

memory. This is for human debugging and the format is subject to

change.

Command: lsbmp [index]

Arguments: index – Optional bitmap index used to display a single bitmap.

LIST DOWNLOADED RECORDS

Description: Returns a summary of the records in data flash memory. This is for

human debugging and the format is subject to change.

Command: ls

LIST MACROS DETAIL

Description: Returns extended details of the macros stored in downloadable flash

memory. This is for human debugging and the format is subject to

change.

This command also lists the current button to macro assignments.

Command: lsmac [index]

Arguments: index – Optional macro index used to display a single macro.

LIST SD CARD DIRECTORY

Description: Lists the contents of the current working directory of the installed SD

card. Directories are listed with the "/" character following their name.

Command: *1s

Note: Listed files and directories will follow the DOS 8.3 naming

convention.

Example: *1s

RUNDEMO.INI RT2_DEMO/ IKB_DEMO/ GFX_DEMO/ SLCD5PWV.BIN SPLASH.BMP

LOAD SYSTEM FILE FROM SD CARD (CURRENT DIRECTORY)

Description: Causes the file "SLCD????.BIN" to be loaded from the SD card current

directory into memory; if the optional "SPLASH.BMP" file is present, the image in it will be displayed. For a complete description refer to the Firmware portion of System Firmware Boot Process. Note: the file "SLCD????.BIN" is generated by the BMPload.exe program and

contains bitmaps, macros, and external fonts.

Command: *load(or *LOAD)

LOAD SYSTEM FILE FROM SD CARD (SPECIFIED DIRECTORY)

Description: Causes only the bitmap file "SLCD????.BIN" to be loaded from the SD

card directory into memory. This file is generated by the BMPload.exe

program and contains both bitmaps and macros.

Arguments: <directory name> - Directory to load .BIN file from.

Note: <directory name> follows the DOS 8.3 naming convention. The <directory name> argument limit is 16 characters so that directories can

be specified using the .. and / (Linux)conventions.

[index] – Optional index of macro to run after loading .BIN file.

Example: *sdload /French 1

The file "SLCD????.BIN" (if present) is loaded into memory from the directory "/French" on the SD Card. Macro 1 will be automatically run

after the .BIN file is loaded.

LOAD SYSTEM FILE FROM SD CARD INTO FLASH (SLCD5+ Only)

Description: Same as the *load command except that instead of loading into memory,

the file is loaded into flash, and used from there. This can take some time

to execute. Status is provided on the board LEDs.

Command: *loadf or *LOADF

Returns: Status messages as progress, standard or error prompt if the command

succeeds or fails.

LOAD TEXT WINDOW BUFFER (SLCD5+ Only)

Description: Loads a line of text into the buffer for the specified Textwindow. The

new text is added to the next available line in the text buffer, until the buffer is full. If the new line of text is within the viewport, the new line is displayed. The viewport will scroll up as long as the bottom of the

viewport is set to the bottom of the text buffer.

Command: tw <n> "text"

Arguments: <n> —Textwindow number.

"text" - Text in double-quotes.

Example: tw 0 "A line of text."

Returns the standard reply prompts for success or error (e.g. if text buffer

is full).

MACRO ABORT

Description: This command stops execution of the current running macro. In addition,

the command flushes (resets) the incoming command buffer. It is useful for instance if the host has sent a long sequence of commands to update data on a screen. While those commands are being processed by the SLCD5, a button is pushed which means "draw different screen". The host then sends a MACRO ABORT command and waits for the response. The SLCD5 can start drawing the new screen immediately, instead of having to wait until the previously buffered commands were

finished.

Command: *abt

Host Notification: :aborting on *abt<return> ... 1 line per macro call level.

'>'<return> ... the success prompt, indicates successful abort of

executing macro(s).

MACRO EXECUTE

Description: Runs a macro (list of commands) previously stored in flash memory. The

BMPload.exe program is used to store both macros and bitmaps into the

flash; see $\underline{Appendix\ D}$. See $\underline{Appendix\ E}$ for the macro file format.

The stored macros can be defined to take arguments when called. In this case, the arguments are specified by this command. For more details on

parameterized macros, see Appendix E.

Note: The maximum number of arguments is 10, and the maximum size of arguments is only limited by total command line length (max 128). See

Appendix E.

Command: m <n|name> [macro parameters . .]

Arguments: <n | name > is the macro index number (1 to 254), or the macro name. If

the macro takes arguments, the values are supplied in order after the macro number. They are delimited by spaces, If a space is to be included in an argument, the argument must be enclosed with double quotes.

Example: m2

This causes macro #2 to execute.

Example: m test3 ""2

This causes macro "test3" to execute with a value for the first parameter of a space character, and the value of the second parameter the number 2.

Command: m <n|name>:<label> [macro parameters . .]

Arguments: Same as above, with macro label. See Appendix E for a full description.

Example: m test3:lbl_4 arg1 arg2

Note: If you execute a macro and get the reply

:no macro commands processed

this means that the macro either had no commands in it (a blank macro), or that the specified section of the macro (run as a result of the label

given in the macro call) was blank.

MACRO NOTIFY

Description: This command sets the desired macro execution notification. This is used

when a button or hotspot is assigned to a macro (see <u>TOUCH MACRO ASSIGN</u>). By default when an assigned macro executes there is no notification to the host other than the button response. For debugging and software interface verification purposes, the host can be notified when a touch-invoked macro is executed, when it finishes, or both.

Note: the notification is sent after the button press response.

Command: *macnote <0 | 1 | 2 | 3 >

Arguments: 0 – Turn notification off.

1 - Send notification "m<index><return>" when macro starts.

2 - Send notification "e<index><return>" when macro ends.

3 – Send start and end notifications per 1 and 2 above.

Returns: off<return> or

start < return > or

end<return> or
both<return>

MEMORY POP

Description: Removes one or more characters from the end of a string variable. If

[index] is 0-9, removes <number> of characters specified from the end of the corresponding string var, s0-s9; otherwise, removes from the end of memory variable `M`. If <number> is -1, all characters are removed.

Command: mpop [index] <number>

Arguments: - Selects string variable s0 through s9

number — Number of characters to remove from string variable

Example: mpop 1 3

This removes 3 characters from the end of the `s1` variable.

MEMORY PUSH

Description: Appends a string to a string variable. If [index] is 0-9, <string> will be

appended to the corresponding string var, s0-s9; otherwise <string> will be appended to memory variable `M`. Length is limited to 80, or [max] if

given (must be between 1 and 80).

Command: mpush [index] "<string>" [max]

Arguments: - Selects string variable s0 through s9

string — String to append to contents of string variable

max — Maximum length of string variable

Example: mpush 1 "0" 3

This appends "0" to 's1' variable, unless length is already 3.

METER DEFINE

Description: Creates a "Meter" object that resembles an analog meter (with an

indicator). The meter object uses a background bitmap that visually represents the meter, and a polygon for the indicator needle. The needle is drawn using the current foreground color. **Only uncompressed**

bitmaps are supported by this command.

Command: md <idx> <bitmap> <x> <y> <type> <minVal>

<maxVal> <init_val> <minAngle> <maxAngle> <x0 y0>

 $\langle x1 y1 \rangle$. . . $[x10 y10] \rangle$

Arguments: idx — Meter index. The meter index must be in the range 0 to 7

(maximum 8 meters).

Bitmap — Background bitmap index

X, y — Top left corner to place the background bitmap.

Type - Always 1.

minVal - Minimum numerical value for indicator.

maxVal - Maximum numerical value for indicator.

Init val — Initial numerical value for indicator.

minAngle – Angle of minimum numerical value for indicator.

maxAngle - Angle of maximum numerical value for indicator.

X0 y0 — Pivot point for indicator relative to 0,0 top left of bitmap.

X1 y1 ... - Polygon points for indicator relative to pivot point. Max

[x10 y10] 10 points.

Notes: The angle values are with respect to the indicator as specified by the

polygon points where 0 degrees is as drawn and degrees (only positive) $\,$

move indicator clockwise.

See <u>Draw Rotated Filled Polygon</u> for details on the operation of the

indicator needle parameters.

The minVal, maxVal, Init_val, minAngle and maxAngle parameters are all unsigned integers, so negative numbers are not allowed. If your meter needs to display negative numbers, the application will need to bias the

negative values so the meter sees only positive numbers.

Example: md 1 48 0 0 1 475 515 500 270 90 126 120 -4 0 0 -

78 4 0

This example defines a meter with index number 1, using bitmap index 48 as the background image. The type is always 1. The minimum value of 475 for the indicator is at angle 270 degrees (90 degrees to left of vertical), and the maximum value of 515 is at angle 90 degrees. The indicator will point to initial value 500. The indicator pivot point is 126 120 and the indicator is drawn as a

vertical triangle with polygon points -4 0 0 -78 4 0.

METER DEFINE BAND

Description: Creates a "Meter" object that resembles an analog meter (with an indicator) with a settable color band. The meter object uses a background bitmap that visually represents the meter, a polygon for the indicator needle, and arcs for the band. The needle is drawn using the current foreground color. Command: mdb <ix> <bitmap> <x> <y> <type> <minVal> <maxVal> <init val> <minAngle> <maxAngle> <bandMin> <bandMax> <bandRadius> <bandPen > <bandColor> <bandBG> <pivotX> <pivotY> <x1, y1</pre> ... [x10, y10] >Arguments: ix – Meter index. The meter index must be in the range 0 to 7 (maximum 8 meters). Bitmap - Background bitmap index (bitmap should not be compressed by BMPLoad). X, y - Top left corner to place the background bitmap. Type – Always 1. minVal - Minimum numerical value for indicator. maxVal - Maximum numerical value for indicator. Init val - Initial numerical value for indicator. minAngle - Minimum angle for minimum numerical value for indicator. maxAngle - Maximum angle for maximum numerical value for indicator. bandMin - Minimum/lowest value in band range. bandMax - Maximum/highest value in band range. bandRadius - Radius of arc used to draw band. bandPen - Width of pen used to draw band. bandColor - Foreground color of band in RGB444 format (see Color Specifications). bandBG Background color of band in RGB444 format (see Color Specifications). - Pivot point for indicator relative to 0,0 top left of bitmap. pivotX, pivotY X1 y1 ... - Polygon points for indicator relative to pivot point. Max 10 points. [x10 y10]

Notes:

The angle values are with respect to the indicator as specified by the polygon points where 0 degrees is as drawn and degrees (only positive) move indicator clockwise.

See <u>Draw Rotated Filled Polygon</u> for details on the operation of the indicator needle parameters.

Example:

```
mdb 0 3 282 150 1 0 8000 0 60 300 0 3000 105 5 0f0 ccc 120 115 -5 0 0 85 5 0
```

This example defines a meter with band, with index number 0, using bitmap index 3 as the background image, located at X/Y of 282/150. The type is always 1. The minimum indicator value of 0 is at angle 60 degrees (clockwise from vertical bottom), and the maximum value of 8000 is at angle 300 degrees (clockwise from vertical bottom). The indicator will point to initial value 0. The band range is from 0 to 3000, the band radius is 105 degrees, the band pen width is 5 pixels, the band foreground color is green, and the band background color is grey. The indicator pivot point is 120/115, and the indicator is drawn as a triangle with polygon points -5 0 0 85 5 0.

METER VALUE

Description: Sets the value of the indicator for a specified meter. The meter must have

been previously created by the Meter Define command.

Command: mv id value

Arguments id – Index value for meter previously defined.

value - Value to set indicator. Must be in the range of values as

defined by the Meter Define command.

METER VALUE BAND

Description: Sets the value of the indicator for a specified meter. The meter must have

been previously created by the Meter Define Band command. The second form of the command allows the use of parameters from a previous full command, and is useful if none of the other parameters are

changing for the new indicator value.

Command: mvb <ix> <val> <bandMin> <bandMax> <bandRadius>

<bandPen> <bandColor> <indicatorColor>

mvb <ix> <val>

Arguments: ix — Index value for meter with band previously

defined.

Val — Value to set indicator. Must be in the range of

values as defined by the Meter Define Band

command.

bandMin — Lower value of meter band. Must be in the

range of band values as defined by the Meter

Define Band command.

bandMax — Upper value of meter band. Must be in the

range of band values as defined by the Meter

Define Band command.

bandRadius — Radius of meter band arc.

bandPen — Pen width of meter band.

bandColor — Color of meter band in RGB444 format (see

Color Specifications).

indicatorColor - Color of meter indicator in RGB444 format

(see Color Specifications).

Example: mvb 0 5400 4000 7000 105 5 ff0 f00

This example sets the indicator of meter 0 to the value of 5400, sets the band range of the meter to 4000-7000, sets the radius of the band arc to 105 degrees, sets the band pen width to 5 pixels, the band color to yellow

and the indicator to red.

MOVE TEXT WINDOW (SLCD5+ Only)

Description: Move the viewport of a Textwindow to a new position of the text buffer.

> The viewport may be moved up, down, left or right. Movements may be one or more lines or characters, or to the furthest position in the specified direction. Movement in the 'down' direction will be limited by the actual

number of lines of text in the text buffer.

Command: twm < n > < dir > [count]

Argument: - Textwindow number. <n>

> <dir> - Direction to move viewport. Options are:

> > u - Move viewport up < count> lines.

d - Move viewport down <count> lines.

1 - Move viewport left <count> characters.

r - Move viewport right <count> characters.

U - Move viewport to the top line in the buffer.

D - Move viewport to the bottom line in the buffer.

L - Move viewport to the left-most side of the buffer.

R - Move viewport to the right-most side of the buffer.

[count] - Number of lines or characters to move, depending on <dir>. The default, if not specified, is one line or character.

Host Notification: If the Textwindow viewport is commanded to move beyond the top or bottom limit of the associated text buffer, the position of the Textwindow viewport will be set to the top/bottom line and the host will receive a notification indicating which direction has hit a limit. There are no host notifications for left/right movement limits.

> Trying to move Textwindow 0 viewport up beyond the top line of the buffer:

u0<return>

Trying to move Textwindow 1 viewport down beyond the bottom line of

the buffer: d1<return>

Examples: twm 0 d 1

Moves Textwindow 0 viewport down one line.

twm 1 U

Moves Textwindow 1 viewport up to top of text buffer.

twm 1 r

Moves Textwindow 1 viewport right one character position.

OUTPUT STRING (AUX)

Description: Similar to OUTPUT STRING, but writes to the AUX communications

port. Note that whatever port is acting as the main port cannot be written to this way; use the OUTPUT STRING command. Standard hex escapes

are supported. A null byte must be sent as "\x00".

Command: aout "<your message>"

Argument: Quoted string to send "<your message>"

Example: aout "hello world\x01\xff"

Sends "hello world" followed by two bytes hex 01 and hex FF to the

Auxiliary serial port.

Example: aout "\x00"

Sends a single byte 0x00 to the Auxiliary port.

OUTPUT STRING (MAIN)

Description: This outputs a text string to the serial port. This is typically used in

macros that are assigned to buttons using the quiet feature above. This

enables a button press to output arbitrary text to the serial port.

Command: out "<text string>"

Arguments: The text string can contain back tick enclosed variables or the following

escapes:

n = line feedr = return

 $\xspace \xspace \xspace \xspace xhh = arbitrary character with hex value hh$

Example: out "\x48ello \"world\"\r"

This will send the following string out on the serial port:

Hello "world" < return >

PANEL TIMING ADJUST

Description: The SLCD5 firmware sets its LCD panel timings to certain default

values. These may not work correctly with certain panels. This command

can be used to adjust the timings.

Command: *paneladj

Use: Follow the directions displayed on the terminal emulator. Once the

proper timing has been determined, these values can be put in the CONFIG.INI file for production setting, or stored in non-volatile

memory (see warning).

PIXEL READ

Description: The "pr" commands read a pixel at location (x, y).

Command: pr x y

Returns: Color value in RGB565 format (see <u>Color Specifications</u>)

Command: prx x y

Returns: Color value in RGB888 format (see <u>Color Specifications</u>)

Example: prx 10 20 (assume the pw command listed below has been sent)

Returns: F80008

PIXEL WRITE

Description: The "pw" commands write a pixel at location (x, y). See Color

Specifications for color definitions.

Commands: pw x y [RGB565 color value]

pwx x y [RGB888 color value]

Arguments: If no color value is given, the pixel is written in the current foreground

color.

Example: pw 10 20 F801

This sets the pixel at (10, 20) to R=11111XXX (8 bit), G = 0, B =

00001XX.

POWER-ON MACRO

Description: Specifies a macro to be executed when the unit is first powered on; it

stores the setting in non-volatile memory (see warning). When given no arguments, the command returns the current setting (0 is the default, meaning no macro will run at power-up). A common usage for a power-on macro is to set the baud rate to a value other than the default of

115200.

Note: The internally generated power-on copyright notice is displayed AFTER the power-on macro executes. This is done so the baud rate can be displayed. This can be disabled via the optional second parameter.

Note: The power-on copyright can also be suppressed by the splash screen option. If a splash screen is specified, the copyright notice is not displayed. The splash screen can be any bitmap, even a very small one

that is the same color as the screen background.

Command: *PONMAC <index | name> [<option>]

Arguments: (none) = Display the current power-on macro index, or 0 for none.

<index> = 0 or 255 disables the power-on macro feature

<index | name> = 1 through 254 (or name) sets the power-on macro

to the specified macro.

<option> = Optional argument; 0 means display the power-on

copyright, and 1 means do not display it.

Example: *PONMAC 2

PREPEND SCROLLING TEXTBOX

Description: Prepends a line to the top of an existing Scrolling Textbox. If the textbox

is full, existing lines are scrolled down and the bottom-most line is

discarded.

Command: stp <index> "text"

Arguments: <index> - Index of scrolling textbox.

"text" – Text to prepend, in double-quotes.

Example: stp 0 "Sample text"

QUERY SCROLLING TEXTBOX

Description: Query an existing Scrolling Textbox for the number of lines and

characters that fit into the display region.

Command: std <index>

Arguments: <index> - Index of scrolling textbox.

Example: std 0

Returns 5 16 0 0, based on a scrolling textbox created at 1/80 165/180 with the font set to M12. The two zero values are reserved for future

options.

QUERY TEXT WINDOW (SLCD5+ Only)

Description: Query a Textwindow for the number of lines and characters that fit in the

viewport based on the assigned font, as well as the size (in lines and

characters) of the associated buffer.

Command: twq <n>

Arguments: <n> - Textwindow number.

Example: twq 0

Example reply showing a Textwindow viewport that is 5 lines of 16

characters with a text buffer of 200 lines of 120 characters:

5 16 200 120

READ FRAME BUFFER LINE

Description: Displays 640 (VGA) or 800 (WVGA, SVGA) comma separated frame

buffer hex words for a given display line. Each word is four ASCII

characters representing a 16-bit RGB565 value.

Command: *FB <line>

Arguments: < is the display line buffer from 0 to 479 (VGA, WVGA) or 599

(SVGA).

READ FROM AUX PORT

Description: Reads serial data from the AUX port. The AUX port receive buffer is 80

bytes long (79 characters plus a NULL char). If the buffer becomes full, any further data is thrown away. Outputs a ':', followed by the received data in ASCII printable range 0x20-0x7E, followed by a standard prompt 0x3e 0x0d ("><return>"). If optional 'b' is present, outputs in binary, 1st byte output is number of bytes received, followed by the received bytes,

then a standard prompt.

Command: ain[b]

Example: ain

Returns: :<received data from COM 3><prompt>

READ TEMPERATURE

Description: Displays temperature measured by the sensor at location U10 (center of

the board, under the processor module) in degrees Centigrade. The accuracy, and the minimum step size, is approximately 1.5 degrees C.

Command: temp

Returns: <degrees>.<tenths><return>

Where <degrees> is a three character number with leading zeros as spaces and tenths is a single numeric character. The 'C' equivalent to

produce this is

printf("%3d.%1d",degrees, tenths);

REDRAW ROTATED POLYGON

Description: Redraws a rotated polygon or rotated filled polygon at specified origin,

using the current pen width and foreground color.

Command: ppgr <Angle> <X Orig> <Y Orig>

Arguments: <angle> Number of degrees to rotate polygon

<X Orig> <Y Orig> is X/Y location for polygon.

Example: ppgr 45 100 100

Draws previously defined polygon rotated 45 Deg CW at offset 100 100.

The defined polygon persists until overwritten by a new polygon

definition.

REDRAW TEXT WINDOW (SLCD5+ Only)

Description: Redraw an existing Textwindow viewport at the current position. Useful

in case the application wants to display an alternate screen image without needing to reload the Textwindow when returning to the current screen.

Command: twr <n>

Arguments: <n> - Textwindow number.

Example: twr 1

RESET BOARD / SOFTWARE

Description: Issues a software reset to the processor. Used to simulate a power-on

condition for testing. This command can take a second or so to execute.

Command: *RESET

Returns: "Power on" prompt.

RESET BOARD TO MANUFACTURED STATE

Description: Clears the on-board EEPROM memory (see warning) and issues a

software reset (see above). This restores the board to factory

manufactured state with the exception that the contents of the data flash

memory (bitmap and macro storage) is not affected.

Note: After issuing this command, the touch screen MUST BE

recalibrated using the "tc" command.

Note: After issuing this command, the screen timing configuration may be set incorrectly for your specific LCD panel. If this occurs you will

need to reload the appropriate config.ini file.

Command: *MFGRESET

Returns: "Power on" prompt.

RESET TOUCH CALIBRATION

Description: Resets the touch calibration to a default value. Doing this before setting

the entire screen to be a touch sensitive area guarantees that a touch will be seen independent of the current touch calibration. *NOTE: Only use*

this if it is to be followed by a touch calibrate command.

Command: *RT

RESTORE DRAWING ENVIRONMENT (State Restore)

Description: Restores the drawing state. If the save state (ss) command has not been

executed since power up or reset, the power up state is used.

Note: Each macro call-level has its own memory for state save/restore, including call-level 0 (no macro running); also, the animation engine uses its own memory to save the existing state before animations run,

and restoring it after.

Command: sr

Arguments: None

Examples: sr

SAVE DRAWING ENVIRONMENT (State Save)

Description: Saves the current drawing state including color, pen and line style, cursor

position and origin (margins), font, text alignment and drawing mode.

Note: Each macro call-level has its own memory for state save/restore, including call-level 0 (no macro running); also, the animation engine uses its own memory to save the existing state before animations run,

and restoring it after.

Command: ss

Arguments: None.

Examples: ss

SAVE CONFIGURATION TO SD CARD

Description: Causes a copy of the current configuration to be saved to the SD Card.

The file generated is in the format of a standard config.ini file with the name currcont.txt. Note that any existing file of the same name on the

SD card will be over written.

Command: *getConfigAsFile

Returns: :writing SD File currconf.txt.

SAVE SCREEN SHOT TO SD CARD

Description: Causes an image of the entire screen ("screen shot") to be saved to the

SD Card. This image generated is saved in the form of a BMP file format. The name of the file is SLCD###.BMP, where "####" is the decimal value indicating a count of presently saved files minus one, up to

1,000 (i.e.: first file is SLCD0000.BMP).

Command: *qetScreenAsBMPFile

Note: The write performance of SD Cards can vary greatly. Saving an

entire screen shot can take as long as 40 seconds.

Returns: :writing SD File SLCD####.BMP... (1 dot added each half-

second or so to indicate progress; at completion, returns a prompt)

SCROLL SCREEN AREA

Description: Scrolls a screen area up, down, left, or right. The background color is

used to fill in the moved pixels. Can also rotate left or right by one pixel.

Command: $k \times 0 \times 0 \times 1 \times 1 < \text{numlines} > [1|r|u|d|L|R]$

Arguments: x0 y0 x1 y1 - Defines the rectangle area for the scroll.

<numlines> - Number of lines to scroll. Must be 1 for 'L' or 'R' action.

L = left scroll; r = right scroll; u = up scroll; d = down scroll

L = left rotate 1 pixel (< numlines > must be 1)

R = right rotate 1 pixel (<numlines> must be 1)

Note: <numlines> is limited to the number of pixels in the axis of the scroll.

(e.g.: If the rectangle is 10x X 20y pixels, the maximum X < numlines > is

10 and the maximum Y < numlines > is 20).

Example: f13B

t "line 1\nline 2" 100 120

k 100 120 140 146 13u

This displays two lines of text and then scrolls up the text area such that

the lower line replaces the upper line.

SET AUX ESCAPE

Description: The control port can be selected by sending three consecutive special

characters on the inactive port. For example, if COM0 is the active control port, sending three special characters on COM1 will cause COM1 to become the control port. This command sets the special character and stores the value in non-volatile memory (see warning);

when given no arguments, it returns the current setting.

Command: *auxEsc <hex value of ASCII character>

Arguments: (none) - Display current escape character.

0x01 though 0x7e - set escape character.

Example: *auxEsc 0x0d

This sets the escape character to <return> which is the standard

default value.

SET AUX PORT AUTO READ

Description: Reads or sets the AUX port auto-read flag and stores it in non-volatile

memory (see warning). When set, ASCII characters that are received in the AUX port input buffer are automatically written to the main port.

Command: auxIO [0|1]

Example: auxIO

Returns: 0

Returns the current auxIO setting.

Example: auxIO 1

Enables AUX port auto read. When characters are received by the AUX port, they are automatically written to the main port with a preceding "a"

and a trailing "\r".

SET BAUD RATE

Description: Sets a new baud rate for COM0 or COM1 (baud0, baud1); if the port is

not specified, the port currently in control will be set. This is temporary and the unit will revert to the default setting the next time power is cycled. Use a "power-on" macro to set the baud rate on power-up. Unless the command fails, the system prompt will be output at the new rate.

Command: baud[0|1] <rate>

Argument: <rate>: Valid values are 460800, 230400, 115200, 57600, 38400,

19200, 9600, 4800, and 1200.

Example: baud0 57600

This sets COM0 to 57600 baud and then outputs the system prompt.

Example: baud 19200

This sets COM port currently configured as the Control/Main port to

19200 baud and then outputs the system prompt.

SET BAUD RATE (Output Prompt First)

Description: Sets a new baud rate for COM0 or COM1 (baudp0, baudp1). If the port

is not specified, the port currently in control will be set. This is temporary and the unit will revert to the default setting the next time power is cycled. Use a "power-on" macro to set the baud rate on power-up. The system prompt will be output at the old rate, before the rate is

changed.

Command: baudp[0|1] <rate>

Argument: <rate>: Valid values are 460800, 230400, 115200, 57600, 38400,

19200, 9600, 4800, and 1200.

Example: baudp0 57600

This outputs the system prompt and then sets COM0 to 57600.

Example: baudp 19200

This outputs the system prompt and then sets the COM port currently

configured as the Control/Main port to 19200 baud.

SET BAUD RATE (Sticky and Prompt First)

Description: Sets a new baud rate for COM0 or COM1 (baud0, baud1) and stores it in

non-volatile memory (<u>see warning</u>). If the port is not specified, the port currently in control will be set. The system prompt will be output at the

old rate, before the rate is changed.

Command: bauds[0|1] <rate>

Argument: <rate>: Valid values are 460800, 230400, 115200, 57600, 38400,

19200, 9600, 4800, and 1200.

Example: bauds0 57600

This outputs the system prompt, sets COM0 to 57600 baud, and then stores the setting in non-volatile memory, so it will be used again after a

power cycle or reset.

Example: bauds 19200

This outputs the system prompt, sets the COM port currently configured as the Control/Main port to 19200 baud, and then stores the setting in non-volatile memory, so it will be used again after a power cycle or reset.

SET COLOR (Basic)

Description: Sets the background and foreground color for all commands using a

basic color palette.

Command: s <fore> <back>

Arguments: <fore> = Foreground color value per the table below

<back> = Background color value per the table below

Color value	Color	Color value	Color
0	Black	10	Light Grey
1	White	11	Light Blue
2	Blue	12	Light Green
3	Green	13	Light Cyan
4	Cyan	14	Light Red
5	Red	15	Light Magenta
6	Magenta	16	Yellow
7	Dark Brown		
8	Dark Grey		
9	Grey		

Example: s 0 1

Form this point on, all objects will be drawn in black with a white

background if applicable.

Note: To reset the background after changing the color, the screen can be

cleared using the command, 'z'. The screen is cleared to the background

color.

SET COLOR (Detailed)

Description: Sets the background and foreground color for all commands using

arbitrary RBG values. If given no argument, returns the current setting.

Command: S [<fore detail> <back detail>]

Arguments: <fore detail> = Foreground color value in RGB format

<back detail> = Foreground color value in RGB format

RGBformat = RGB444 or RGB888 format (see Color

Specifications)

Note: The recommended argument format is RGB888. The RGB444 argument

is preserved for SLCD compatibility. Both arguments must be in the

same format.

Example: S 00FF00 112233

Foreground = maximum green, background = 0x11 red, 0x22 green,

0x33 blue.

Usage note: To visibly change the screen to the background color after using this

command, the screen must be cleared using the command, 'z'.

Usage note: The SLCD5 uses 565-color encoding – that is, 5 bits for red, 6 bits for

green and 5 bits for blue. Therefore, the full 24-bit value specified will

be mapped to the 565 space. See RGB565 Encoding.

SET CONTROL PORT

Description: Used to set the port used to control the unit. This is stored in non-volatile

memory (see warning) and will be used on power-up. Note: This

switches between the MAIN and AUX ports of the PowerCom4 board.

Command: *com0main

This sets the main port to COM0. When the unit is powered up, COM0

will be sent the '>' prompt.

Command: *com1main

This sets the main port to COM1. When the unit is powered up, COM1

will be sent the '>' prompt.

SET CURSOR

Description: Sets the location where text will be displayed by default. This is used

with the TEXT DISPLAY command where only the text to be displayed is the argument. This is useful when text is generated by a macro and the location is specified before the macro is invoked. The location is reset to (0,0) by the "z" command. If given no argument, this command returns

the current setting.

Command: $sc [\langle x \rangle \langle y \rangle]$

Example: sc 10 20

t "hello"

The above is equivalent to:

t "hello" 10 20

SET DRAW MODE

Description: Sets the drawing mode for all line draw commands including draw line,

rectangle, and circle. Note that for color displays the XOR mode

produces the bit-inverted RGB color. If given no argument, the command

returns the current setting.

Command: $d [\langle n | x \rangle]$

Arguments: n: Normal drawing mode; draws with the colors from Set Color.

x: XOR drawing mode; inverts the existing pixel to draw lines.

Example: d n

This sets the drawing mode to normal.

Caution: In general, the XOR mode will not work as expected with pen width of

more than 1. This is due to multiple pixel writes when rounded ends are

drawn. The same issue arises with circles.

SET FONT

Description: Sets the font to be used in subsequent TEXT DISPLAY and BUTTON

DEFINE commands. The "f?" command will list available fonts (both

built-in fonts and externally downloaded fonts, if any).

Commands: f

f?

Arguments: is one of the following.

Proportional fonts; equivalent to Windows Arial at point size shown;

trailing 's' signifies not antialiased (s = "standard"):

8s, 8Bs, 8, 8B, 10s, 10Bs, 10, 10B, 12, 12B, 14, 14B, 16, 16B, 20, 20B,

24, 24B, 32, 32B, 48, 64

Monospace fonts; equivalent to Windows Monospac821 BT at point

size shown. Fonts m48 and m64 are NOT antialiased.

m8, m8B, m10, m10B, m12, m12B, m14, m14B, m16, m16B, m20,

m20B, m24, m24B, m32, m32B, m48, m64

Example: f 16B Sets the current font to 16 point Arial bold.

Example: f? Displays a list of loaded fonts

Example: f Displays the current font

SET or QUERY (LATCHING) STATE BUTTON

Description: Changes the latching state button to a specified state or queries the

current state. This can be used to implement a set of selection buttons

where pushing one down causes the others to pop up.

Command: ssb <n> <state>

Arguments: <n> - Latching button number (0-127)

<state> - Specifies the desired state: 0 for not pressed, or 1 for pressed.

Example: ssb 5 1

This command would force a button defined with DEFINE BUTTON

(type=2) into state 1.

Example: ssb 5

This command queries the current state of button 5.

SET LED

Description: The LED D2 on the board usually is controlled by the system and is on

when the software is not idle. For debug and other purposes, the LED

can be controlled by the host using this command.

Command: led [on|off|sys]

Arguments: sys is the default state.

SET ORIGIN

Description: Sets the origin, relative to the upper left corner of the display, for all

subsequent operations including lines, text, bitmaps, buttons and so forth (but not another 'o' command – origin cannot be nested). This is useful for macros that draw compound objects. If the macro draws everything relative to $(0\ ,0)$, by setting the origin before calling the macro, the compound object can be placed anywhere on the screen. If given no argument, returns the current setting. *Note that the SET CURSOR*

command location is relative to this global origin, AND the "z" command will reset the origin to the upper left corner.

Command: $\circ [\langle x \rangle \langle y \rangle]$

Arguments: <x> X axis value between 0 and 319 for QVGA or 479 for VGA.

<y> Y axis value between 0 and 239 for QVGA or 639 for VGA.

Example: 0 10 20

t "hello" 0 0

This sets the origin to x=10, y=20, and then displays the text "hello" at

absolute location 10, 20.

SET PEN WIDTH

Description: Sets the pen width for line drawing commands including line, rectangle

but not circle. Default is width of 1 at power up, width of 2 after the Touch Calibrate command is executed. If given no argument, the

command returns the current setting.

Command: p <pixels>

Example: p 1

This sets the pen width to 1 pixel wide.

SET PREVIOUS CONTROL PORT

Description: Used to revert to the previous port after a port autoswitch (three <return>

characters on the inactive port).

Command: *prevCons

SET TEXT ALIGNMENT

Description: Sets the alignment of the text with respect to the insert point specified.

Used with the test display command. If given no argument, the command returns the current setting. *NOTE: The horizontal alignment reverts to "L" (left) after a text display command is issued, but the vertical*

alignment remains as set.

Command: ta $[\langle L|C|R \rangle \langle T|C|B \rangle]$

Arguments: The first letter argument is horizontal (Left, Center, Right), second is

vertical (Top, Center, Bottom) alignment.

Example 1: ta CC

t "hello" 100 100

This draws the text "hello" centered horizontally and vertically on

x=100, y=100.

Example 2 (assume VGA LCD):

ta RB

t "bottom right corner" 639 479

This draws the text "hello" in the bottom right hand corner of the LCD

screen.

SET TEXT MODE

Description: Sets the text draw mode for subsequent TEXT DISPLAY commands.

With no argument, the command returns the current mode.

Command: tm [R|T|X|TR|N]

Arguments: Same as TEXT DISPLAY, with N for "normal".

Note: When used within an animation, only guaranteed to persist until a yield

occurs; likewise, within a macro, only guaranteed to persist until an

animation interrupts the macro, or another macro starts (via a touch press

or release event).

SET TOUCH CHARACTERISTICS

Description: Allows button or hotspot characteristics to be modified after being

defined. Useful to make a typematic hotspot.

Command: xset < n > [+|-][p|r|t|T|x]

Arguments: <n> Index of hotspot or button

+ (Optional) add the following option

- Remove the following option

p Notify on press

r Notify on release

b Beep on notify (normal, use -b to disable beep)

t Typematic

T Typematic special (beep on first press only)

x include relative x and y in notification (hotspots only)

NOTE: Only one option may be changed with each xset command.

Note: A hotspot needs to be a typematic hotspot before the upper-case T works. You can define the hotspot with the 'x' command and then use "xset <n> t" to make it typematic, or you can use the 'xt' command

to define it as typematic. Then use "xset < n > +T".

Example: x set 10 + r

Adds "notify on release" characteristic to button 10.

SET TOUCH DEBOUNCE

Description: Sets the delay between touch button responses and stores the value in

non-volatile memory (see warning). With no arguments, the command

returns the current setting. Manufacturing default is 100ms.

Command: *debounce <delay>

Return: Debounce = ###ms<return>

Arguments: <delay> is the number of milliseconds after a touch is recognized that

another touch can be recognized. If no argument is given, the current

value is returned.

Example: *debounce 50

This sets the delay to 50 milliseconds.

SET TYPEMATIC PARAMETERS

Description: Sets the delay and repeat rate for typematic buttons and stores the values

in non-volatile memory (see warning). With no arguments, the command returns the current settings. If the optional 's' is present, the command

does NOT store values.

Command: typematic[s] <delay> <repeat>

Arguments: <delay> is the number of 10's of milliseconds a typematic button must

be held down before it starts to repeat. <repeat> is the repeat interval in 10s of milliseconds. Both <delay> and <repeat> must be numbers

between 0 and 255 (inclusive).

Example: typematics 200 50

This sets the delay to 2 seconds and the repeat rate at 500ms = 2 per second, but does not store the values, making the change temporary.

Example return: Delay 2000ms, Repeat 500ms<return>

SET VARIABLE

Description: Used to set a value to an internal variable. If an internal variable (Integer,

EEPROM, String, and Point Coordinate) is used, it should be after this command to have a meaningful value. When setting EEPROM values, note the EEPROM chip has limited total write cycles (see warning).

Command: set <internal variable name> <value>

Arguments: <internal variable name>

Integer - i0 thru i19
EEPROM val - e0 thru eF
String - s0 thru s9

Point Coordinate - p0 thru p9

Examples: set i9 -200

Set internal integer variable i9 to negative 200.

set s5 "Hello World"

Set internal string variable s5 to the string value, "Hello World".

SET VARIABLE (HEX)

Description: Used to set a HEX value to an internal variable. If an internal variable

(Integer or EEPROM only) is used, it should be after this command to have a meaningful value. When setting EEPROM values, note the

EEPROM chip has limited total write cycles (see warning).

Command: setx <internal variable name> <HEX value>

Arguments: <internal variable name>

Integer - i0 thru i19

EEPROM val - e0 thru eF

Examples: setx i9 A5

Set internal integer variable i9 to HEX A5.

SLIDER DEFINE

Description: Creates a slider object using background and slider control bitmaps.

Command: slidx bg x y slider off ornt inv cont hi lo

Arguments: idx Slider index. Must be in the range 128 to 255. A maximum

of 8 sliders may be defined in this range. Note that slider indices are shared with hotspot indices; that is if a slider is defined with index 128, hotspot index 128 cannot be used.

bg Background bitmap index

x, y Top left corner to place the background bitmap slider Slider control (e.g. knob / button) bitmap index

off Slider offset from the edge of the background bitmap

ornt Orientation: 0 = vertical; 1 = horizontal

inv Invert: 0 = top / left is low; 1 = bottom / right is low

cont Always one. Value has no impact.

Maximum slider value, negative numbers allowed

Minimum slider value, negative numbers allowed

Host notification when slider value is changed:

l<idx>:<value>

Example: sl 128 44 100 30 45 5 0 1 1 100 0

This example assumes that the demo bitmaps are loaded with 44 and 45 being the slider background and control respectively. A slider is created in the middle of the screen (left corner = 100, 30) in a vertical orientation

with the control bitmap offset 5 pixels from the left edge of the

background bitmap. The slider values range from 100 at the top to 0 at

the bottom.

Example notification: 1128:50

SLIDER VALUE

Description: Sets the value of a previously defined slider object.

Command: sv idx val

Arguments: idx - Slider index

val - Value for the slider

Example: sv 128 50

Sets slider index 128 to value 50.

SPEAKER ON / OFF (Rev D and later boards only)

Description: Turns the external speaker on/off and stores the setting in non-volatile

memory (<u>see warning</u>) to be restored on power-on. Normally, the external speaker is off and the onboard beeper is on; when the speaker is turned on, the beeper is turned off. If no setting is given, the command

returns the current setting.

Command: *spkr [on|off]

Arguments: [on| off] external speaker setting.

SPEED TEST

Description: Command to determine the execution speed of a given command.

Arguments: N – number of times to run the command.

<command line> - Command line enclosed in angle brackets. This

is done so that quotes (") can be used in the command.

Examples: *speedtest 100 <t "Hello World" 0 0>

Returns: :time/command = 4 ms

SPLASH SCREEN

Description: Selects a downloaded bitmap as the power-on "splash screen", which

will be shown at power-on instead of the copyright notice and firmware version text string; the setting is stored in non-volatile memory (see warning). When given no arguments, the command returns the current

setting (0 is the default, meaning 'off').

The Windows program BMPload.exe is used to download bitmaps into

the SLCD5 data flash memory. See Appendix D for details.

Command: *SPL <number>

Arguments: <number> is bitmap number as listed in the "ls" command. If 0 is used,

no bitmap is selected and the standard product text string is displayed.

Example *SPL 5

This displays the 5^{th} memory record at location (0, 0) on power-on reset.

TEXT DISPLAY

Description: Displays a text string starting at a specified point using the currently set

font and text alignment. Draws text in foreground color inside a

background color box unless options are specified. The backslash ("\") is

the escape character, used to create double quotes ("\""), newline characters ("\n"), backslashes ("\"), or arbitrary characters ("\xhh). A newline will move the next character down one character block height in

the implied box starting at the x pixel location.

Command: t "text string" x y [mode]

or

t "text string" x0 y0 x1 y1 [[mode][wrap/rotate]]

or

t "text string"

Arguments: x is the left edge of the first character areas.

Y is the top edge of the first character area.

x0 y0 is top left corner of rectangle

x1 y1 is bottom right corner of rectangle

[mode] is one of:

R – Reverse: Foreground / background colors are reversed.

T - Transparent: Text written on top of current display with no

"background box".

X - XOR

TR – Transparent reversed

N – Normal: Foreground / background colors are used.

[wrap/rotate] is one of:

WW – Wrap text on word boundary

WC – Wrap text on char boundary

CW – Rotate text 90 degrees clockwise

CCW – Rotate text 90 degrees counter-clockwise

I – Rotate text 180 degrees (invert)

Notes: Quotes are required around the text string. *The entire command*

including <return> must be less than 120 characters.

In the first two forms of the command (see above) if the text mode (N, R, T, X, TR) is not specified, it will be reset to Normal; if it is specified, it will be used and will persist until another mode is specified (which may occur within an animation or a macro attached to a touch press/release event). Initially, Normal mode is used, and will remain in effect until changed. To prevent confusion about which mode the command will use, always explicitly declare it within the command. This is especially important within macros and animations.

In the second form of the command, there must be no space between the [mode] and the [wrap/rotate] if both are present.

To use any of the rotate specifications, you must use a font that is not anti-aliased.

The XOR mode does not work with anti-aliased fonts.

Examples:

```
t "Press \"next\" \nto continue" 10 0 N
```

This displays the text:

```
Press "next" to continue
```

with the top left corner of the 'P' at location x=10, y=0, in Normal mode.

```
t "\xa9Copyright" 0 0 R
t "\n 1999-2009"
```

Displays the text

```
©Copyright 1999-2009
```

at the top left corner of the screen, in Reverse mode.

```
f13B
r 100 100 160 200
ta CC
t "This is in a box" 100 100 160 200 NWW
```

Displays the text (in Normal Text Mode)

```
This is in a box
```

centered in a rectangle with word wrap enabled; "This is in" is the first line; "a box" is the second line; the rectangle is at 100, 100 is 61 pixels wide and 101 pixels tall.

TEXT FLASHING DELETE

Description: Deletes the specified text flash animation.

Command: tfx <index>

Arguments: <index> is the identifier for the text; accepted identifiers are 0 through

9.

Examples: tfx 0

This stops and deletes from memory the specified (0) text animation.

TEXT FLASHING DISABLE

Description: Disables a flashing text animation as specified by the index (see the

TEXT FLASHING DISPLAY command). The stopping point state can

be specified.

Command: tfd <index> <state>

Arguments: <index> is the identifier for the animation; valid range is 0-9.

<state> Specifies the state to stop the animation, for text flash, this is

0 or 1.

Examples: tfd 0 0

This stops the text flash animation at the first state with text in selected

foreground color.

tfd 0 1

This stops the test flash animation at the second state with text in the

selected background color.

Note: To delete and re-use a text flash's animation index, use the "tfd <index> <state>" command to stop the animation at the selected state, and then use the "tfx <index>" command to delete the animation.

TEXT FLASHING DISPLAY

Description: Creates an animation to display a flashing text string starting at the

current or specified point using the currently set font. The string is alternately drawn in the current foreground color, then erased (by drawing in the background color) at a rate specified by the parameter <t> (delay time). Each alternate view is displayed for <t> mS. The total time to cycle is 2X the selected delay time. See TEXT DISPLAY for text

string escapes and other details.

Command: tf index t "text string" x y [R|N]

All parameters except index and "text string" are optional. If unspecified, <t> will default to 500 mS, [x y] will be the current character position, and [R \mid N] will be N (Normal). A null text string "" is acceptable.

Arguments: <index> is an identifier for this animation; valid range is 0-9.

t - The number of milliseconds between flashes.

x − The left edge of the first character areas.

y — The top edge of the first character area.

R — Reverse flashing text: The string is shown in reverse text mode,

and then erased.

 $\,{\mathbb N}\,$ $\,$ - Normal flashing text: The string is shown in normal text mode, then erased. This is the default mode of operation, and need not be

specified.

Note: Quotes are required around the text string. *The entire command*

including <return> must be less than 120 characters.

Example: tf 0 300 "FLASHING TEXT" 10 0

This puts the text FLASHING TEXT with the top left corner of the 'F'

at location x=10, y=0 with a delay of 300 milliseconds between

displayed and non-displayed text.

Note: The clear screen command 'z' clears all flashing text instances (and all

other types of animations).

TEXT FLASHING ENABLE

Description: Enables text flashing for individual strings as specified by the identifier,

or re-enables a currently stopped text flash animation. If the text flash animation is currently running for that identifier, no action is performed.

Command: tfe <index>

Arguments: <index> is the identifier for the animation; valid range is 0-9.

Examples: tfe 0

This resumes the text animation from a previously stopped state.

TEXT FLASHING SYNCHRONIZE

Description: Synchronizes all animations.

Command: tfs
Arguments: None.
Examples: tfs

Resets all animations and flashing text to initial state. If animations or flashing text are using integral delays, the animation and text flashing

will be performed in synchronization.

TOUCH CALIBRATE

Description: Runs the touch calibration procedure. This displays calibration points on

the screen and asks the user to touch them to calibrate the screen. Note that a command prompt is not given until the procedure has been completed. Calibration values are stored in non-volatile memory and

restored on power-on. Note: pen width gets changed to 2.

Command: tc

TOUCH MACRO ASSIGN

Description: Links a button or hotspot to a macro. When the button or hotspot is

touched, the associated macro is executed. See the MACRO NOTIFY

command for host notification of macro execution options.

Command: xm <touch index><macro index | name> [<macro2

index | name>]

Arguments: <touch index> is the index of the button or hotspot.

<macro index | name > is the index (or name) of the macro to be
executed when the button or hotspot is pressed, or in the case of latching
buttons, when the button is pressed to change from state 0 to state 1.

<macro2 index | name> is an optional parameter. In the case of button or hotspot, this specifies a macro to be executed when the touch area is released. For latching buttons, this macro is executed when the button changes state from state 1 to 0.

Within the <name> an optional system-constructed, predefined label (based upon the type of button or hotspot) may be concatenated. The format for these labels only applies to this command. The specific format of the predefined label is related to the host response for the type of hotspot or button. The format for the predefined label is:

':'<response character: 'x' | 'r' | 's'><touch index>[<state: '0' | '1'>]

For a latching state button with index 13, the labels would be ":s13_0" (button 13 in state 0) or ":s13_1" (button 13 in state 1).

For a momentary button with index 14 defined to notify on press only, release only, or both, the labels would be ":x14" (button 14 pressed) or ":r14" (button 14 released).

Similarly, for a hotspot with index 150, the label would be ":x150" (hotspot 150 touched or released).

Note: When using predefined labels, both macros (pressed and released) must include labels.

Examples: xm 128 2

This will run macro #2 when hotspot 128 is pressed.

xm 128 2 3

This will run macro #2 when hotspot 128 is pressed, and #3 when it is released.

```
bd 2 150 100 2 "OFF" "ON" 30 10 30 10 xm 2 5 3
```

This creates a latching button and executes macro 5 when the button is switched to "ON" and macro 3 when the button is switched to "OFF"

```
bdc 1 100 100 20 "TURN ON" "TURN OFF"
xm 1 button_laction:s1_1 button_laction:s1_0
```

This creates a latching button with centered text. The initial state is 0. When the button is pressed and the state becomes 1, macro "button_laction" is executed, including the macro statements following the label "s1—1".

TOUCH MACRO ASSIGN QUIET

Description: This has the same functionality as TOUCH MACRO ASSIGN except

that the standard button response to the host is disabled AND pushing the button does not cause a beep. This is useful when the macro contains an

OUT command to generate arbitrary button responses.

Command: xmq <touch index><macro index | name> [<macro2

index | name>1

Arguments: See TOUCH MACRO ASSIGN.

Example: xmq 5 2

This will run macro #2 whenever button 5 is touched, and the standard button press response will not be given to the host.

TOUCH MACRO ASSIGN WITH PARAMETERS

Description: Links a button or hotspot to a parameterized macro. When the button or

hotspot is touched, the associated macro is executed with the specified arguments. If given no arguments, returns the amount of free argument

storage space.

Note: The maximum number of arguments, and the maximum size of each

argument, is version-dependent (see Appendix E).

Command: xa[g] < t > (action) < m > (args)

Arguments: <t> the index of the button or hotspot.

<action> is one of:

- Execute the macro and arguments when the button is pressed (momentary) or when it changes from state 0 to state 1 (latching).
- 1 Same as above.
- r Execute the macro and arguments when the button is released (momentary) or when it changes from state 1 to state 0 (latching).
- 0 Same as above.

<m> The index of the macro to be executed when the button or hotspot is pressed.

[<args>] Optional arguments for the macro. These are delimited by spaces. Double quotes can be used to surround an argument if it contains spaces..

Example 1: bd 1 100 100 1 "test" 10 15 xa 1 p 17 Check

This defines button 1 and assigns macro 17 to run with the first argument = Check when button 1 is pushed. The corresponding macro definition could look as follows:

```
#define test 17
t 0 0 `0`
#end
```

When button 1 is pushed, macro 17 is invoked and the following command will be executed:

```
t 0 0 Check
```

Example 2: xa 1 p 17 Check

Assuming button 1 has been defined in a previous command, this assigns macro 17 to run with the first argument Check when button 1 is pushed. The corresponding macro definition could look as follows:

```
#define test 17
t 0 0 `0`
#end
```

When button 1 is pushed, macro 17 is invoked and the following command will be executed:

t 0 0 Check

TOUCHSCREEN ON/OFF

Description: Enables or disables the whole touch screen, or reports its status.

Command: touch [on/off]

Arguments: [on/off] – Turns the touch screen on/off; if not given, reports the current

setting: "touch on" or "touch off".

Example: touch off

bdc 1 10 10 1 "1" bdc 2 80 10 1 "2" bdc 3 150 10 1 "3" xmq 1 b1_macro xmq 2 b2_macro xmq 3 b3_macro

touch on

This example causes all touches to be ignored until after the buttons are defined and attached to macros.

TOUCH SIMULATE MOMENTARY

Description: Simulates a momentary touch (press and release) on the touch panel at

the specified coordinates.

Command: *tsmm <x> <y>

Arguments: $\langle x \rangle$ X location of simulated touch.

<y> Y location of simulated touch.

Example: *tsmm 100 100

The display module will behave as if location 100/100 was touched

momentarily.

TOUCH SIMULATE PRESS

Description: Simulates a press on the touch panel at the specified coordinates.

Command: *tsmp < x > < y >

Arguments: $\langle x \rangle$ X location of simulated touch press.

<y> Y location of simulated touch press.

Example: *tsmp 100 100

The display module will behave as if location 100/100 was touched and

not released.

TOUCH SIMULATE RELEASE

Description: Simulates a release on the touch panel at the specified coordinates.

Command: *tsmr <x> <y>

Arguments: <x> X location of simulated touch release.

<y> Y location of simulated touch release.

Example: *tsmr 100 100

The display module will behave as if location 100/100 was released. Has no effect if the location was not already being touched (as from a *tsmp).

TOUCH SIMULATE TYPEMATIC

Description: Simulates a single typematic cycle on the touch panel at the specified

coordinates. If the specified location was being touched (as from a *tsmp), and the screen item at that location was not already in typematic mode, the display module will do a single typematic cycle/action.

Command: *tsmt <x> <y>

Arguments: <x> X location of simulated touch typematic.

<y> Y location of simulated touch typematic.

Example: *tsmt 100 100

UTF8 ENABLE / DISABLE

Description: Enables or disables UTF8 encoding in text strings. When UTF8 is

disabled, the 256 character extended ASCII character set per ISO 8859-1

is accessible. This is all that is needed for the basic font set. For

downloaded fonts with Unicode sets larger than 256 characters, UTF8

encoding is used.

Command: utf8 [on|off]

Example: utf8 on

t "\xe4\xb8\x81"

This displays the Unicode character 0x4e01 whose UTF8 equivalent is hex E4 B8 81. Note that an embedded host can send the UTF8 characters as three bytes – the text escape is not necessary unless the host can only

send 7-bit ASCII.

VERSION

Description: Displays the version of the software.

Command: vers

Returns: SLCD5 V<maj>.<min>.<bld> <resolution> <panel

string>

Parameters: <resolution> – this is the resolution standard of the display (VGA,

WVGA, SVGA).

<panel string> - Contact REACH Technology with Panel String to

determine display panel information.

Example: SLCD5-PLUS V1.2.63 WVGA "VGG8048 PVLED"

WAIT

Description: Returns a command prompt after a specified number of milliseconds.

This is useful in macros that implement self-paced demonstrations as it

delays execution of the next line.

Command: w <number of milliseconds>

Arguments: <number of milliseconds > is the number of milliseconds to

delay, maximum is 65535.

Example: w 1000

This will return the command prompt in one second or in the case of a

macro, delays execution by one second.

WAIT FOR REFRESH

Description: Imported from SLCD43/6/+ for compatibility. Similar to WAIT

VERTICAL RETRACE, it works only in Landscape orientation. Returns when a vertical display retrace occurs. This command is used to avoid

"tearing" or "flashing" in animations.

Command: wrf < x > < y >

Arguments: <x> Ignored in SLCD5; present for compatibility only.

<y> This is the y coordinate. This is also the number of

horizontal scan lines to wait after retrace. Note that the horizontal scan lines go from the top to bottom of

screen.

Note: For best results, bitmaps for animations should be stored uncompressed

in flash memory.

Example: wrf 100 135

The 100 is ignored (no portrait mode on SLCD5); same as wvr 135.

WAIT VERTICAL RETRACE

Description: Returns when a vertical display retrace occurs with an optional offset.

Used to avoid "tearing" in animations.

Command: wvr [<line>]

Arguments: Optional number of vertical lines to wait after retrace.

Used to wait until the display trace has passed a

specified vertical display line.

Example: wvr 135

This waits until vertical refresh plus 135 vertical lines. Useful to put in an animation script before displaying a bitmap at x,100 with height 35. Note that for best results, bitmaps for animations should be stored

uncompressed in flash memory.

WINDOW RESTORE (SLCD5+ Only)

Description: Restores previously saved rectangular screen area.

Command wr x y [index]

Arguments: x y — Top left corner of area

index - Optional argument; see WINDOW SAVE.

WINDOW RESTORE RECTANGLE (SLCD5+ Only)

Description: Restores previously saved rectangular screen area saved with the binary

download command.

Command wrr x y <width> <height> <index> [<offset>]

Arguments: x y -Top left corner of area.

width - Width of image. height - Height of image.

index - A number between 0 and 3 referring to the portion of memory to

start retrieving data from.

offset – optional argument. Offset into off-screen memory to start

retrieving pixel data. The default offset is 0.

Notes: 1. If the offset points somewhere other than the beginning of the image

data, the beginning or last pixels in the image may display data outside

the range of the stored image (See **BINARY DOWNLOAD**).

2. Command not supported on SLCD43 controller boards.

WINDOW SAVE (SLCD5+ Only)

Description: Saves contents of a rectangular screen area to an off-screen buffer. Maximum

size available depends on color depth (see tables below).

Command ws x0 y0 x1 y1 [index]

Arguments: x0 y0 x1 y1 - Rectangular area to save

index — Optional argument if more than one area is to be saved. Note

that the storage areas overlap, which restricts the size of each

saved area. See tables below

For example, if two areas are to be saved, use index 0 and 2 and observe the size restriction below. Note that the limit is the product of the screen area's width (x1-x0+1) and its height (y1-y0+1). As long as that product is less than the max value shown for the target save area, it will fit.

One Area	Two Areas	Four Areas
Index none or 0; max WxH=1048576	Index 0; max	Index 0; max WxH=262144
	WxH=524288	Index 1; max WxH=262144
	Index 2; max	Index 2; max WxH=262144
	WxH=524288	Index 3; max WxH=262144

Example: ws 0 180 160 239

Saves the lower left eighth of the screen to index area 0.

6. Fonts

6.1 External Fonts

External fonts allow users to use fonts which are available in Microsoft Windows. These programmable fonts are used often used to get a particular look-and-feel for an application, or to support a non-Latin language for product localization with. These fonts are loaded into the onboard flash memory along with bitmaps and macros. A font is contained in a .SIF extension file. A separate .SIF file is needed for each unique combination of font, size, and attribute (e.g. bold).

The basic steps to creating and using External Fonts are:

- 1. Request a System Independent Font (.SIF) file from Reach Technical Support: Specify Windows font name, size (height in pixels or points), and attributes (bold, italic, both), code set ("ASCII + ISO 8859" (256 characters) or Unicode Character set), or individual characters*.
- 2. Reach will generate a .SIF from your specifications.
- 3. Create a Font List (.RFL) file: Create a text file with a ".RFL" file extension.
 - a. The contents should contain a line for each font in the format: <fort alias> <filename>.sif <CR>
 - b. There must be a space character between font alias and the filename.
 - c. The limit for the font alias is eight characters.
 - d. The filename must include "aa2" or "aa4" (case insensitive) if the font uses 2bpp or 4bpp anti-aliasing.
- 4. Download Font List file: Use the Windows BMPload application under Windows.
- 5. Use the External font: Use the SET FONT command ("f <font_alias>") before any text related command.
- 6. If the character set is non-Latin Unicode, you will need to use the SET UTF8 ENCODING command before displaying any characters.

*Users which would like a .SIF file with individual characters (rather than a range of Unicode values) should submit a Microsoft Notepad generated text file known as a "Pattern File". To generate this file, copy desired characters into MS Notepad. When complete, use menu option "File->Save As", with Encoding set to Unicode.

6.2 Character Set - ISO 8859-1

The ISO 8859-1 character set used by all fonts is as follows. Note: The ASCII character set is the same as the ISO set up to Code 127. The ISO set does not define characters 0-31, or 127-159.

The following tables can be used to determine the character code for non-ASCII characters. The standard ASCII set is 0x20 through 0x7E. The extended set is from 0xA0 through 0xFF.

For example, to display the copyright symbol, note that it is hex A9, so the command to display the character is:

t	"	\	ха	9	″

	0	1	2	3	4	5	6	7	8	9	A	В	\mathbf{C}	D	E	\mathbf{F}
0020		!	"	#	\$	%	&	'	()	*	+	,	_		1
0030	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
0040	@	Α	В	С	D	Е	F	G	Н	I	J	K	L	М	Ν	0
0050	Р	Q	R	S	Т	U	٧	W	Χ	Υ	Ζ	[١]	۸	_
0060	`	а	b	С	d	е	f	g	h	İ	j	k	I	m	n	0
0070	р	q	r	s	t	u	٧	W	Х	у	Z	{		}	~	

	0	1	2	3	4	5	6	7	8	9	A	В	С	D	\mathbf{E}	\mathbf{F}
00A0		i	¢	£	¤	¥	I I	§		0	а	«	7	_	®	_
00B0	0	±	2	3	•	μ	¶	-	د	1	0	»	1/4	1/2	3/4	خ
00C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	ĺ	Î	Ϊ
00D0	Đ	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
00E0	à	á	â	ã	ä	å	æ	Ç	è	é	ê	ë	Ì	ĺ	î	Ϊ
00F0	ð	ñ	Ò	Ó	Ô	õ	Ö	÷	Ø	ù	ú	û	ü	ý	þ	ÿ

7. Color Specifications

7.1 Overview

The SLCD5 has several types of color specifications. Commands that use a color specification will refer to one of the specifications shown below.

Name	Color Depth	Description
RGB444	12-bit color	RGB, where each color is four bits, 0-F in value. Pure red would be
		F00, pure green would be 0F0 and pure blue would be 00F.
RGB565	16-bit color	RGB, where R is 5 bits, G is 6 bits, and B is 5 bits. Pure red would
		be F800, pure green would be 07E0 and pure blue would be 001F.
		See RGB565 Encoding.
RGB888	24-bit color	RGB, where each color is eight bits, 00-FF in value. Pure red would
		be FF0000, pure green would be 00FF00 and pure blue would be
		0000FF.

7.2 RGB565 Encoding

The RGB565 color specification compresses Truecolor 24-bit colors into 16-bit color values. In this format, 5 bits of color are used for RED, 6 bits for GREEN, and 5 bits for BLUE.

The basic algorithm for converting from Truecolor (24-bit BMP file) to Highcolor (16-bit LCD screen) is:

- 1. Divide [Blue and Red value] by 8 (ignore remainder)
- 2. Divide [Green value] by 4 (ignore remainder)
- 3. Add [Red value times 2048] plus [Green value times 32] plus [Blue value] (= Highcolor value)

Bitwise, this is the same as:

- 1. Drop the three lowest bits of the Red and Blue values: 0b76543210.
- 2. Drop the two lowest bits of the Green values: 0b76543210.
- 3. Shift and OR the truncated R, G and B values into a 16-bit value in the form 0bRRRRGGGGGBBBBB.

8. Using CRC'd Commands

8.1 Overview

The SLCD5 can accept a command with a CRC prefix and use it to verify the command was not corrupted in transmission from the host. Once verified, the command is processed in the normal manner, and the SLCD5 responds as expected. If, however, the CRC check fails, the SLCD5 ignores the command and returns an invalid CRC response ('#'<return>).

8.2 Command Protocol

The format for a CRC'd command is:

~<CRC><Command><return>

A '~' (tilde) character at the start of the command string signals the SLCD5 that an embedded CRC (4 ASCII-Hex chars, [0-9,a-f,A-F]) will follow the '~' and then the actual SLCD5 command will begin. The CRC is calculated for the SLCD5 command and its <return>, which means a NULL Command (just a <return>) will still have a CRC to validate the <return>.

For example: to send the "s 0 1" command with a CRC, calculate the CRC for the 'C' string "s 0 \r", which is 0x4050. Send:

~4050s 0 1<return>

The SLCD5 will validate the command, execute it, and respond with the '>'<return> prompt, indicating success. If the CRC value does not match the string's computed CRC, the '#'<return> prompt is given. If the CRC is correct, but the command has a syntax error, the standard error prompt '!'<return> is given.

8.3 Example CRC generation code

Included below is 'C' code for a program that accepts a standard SLCD5 command as input and generates the CRC'd version of the command as output. It includes a CRC generator function that produces CRC's compatible with the SLCD5. The CRC polynomical is CRC-16-IBM.

```
// Functions for calculating CRC-16-IBM
   // (Bisync, Modbus, USB, ANSI X3.28, CRC-16, or CRC-16-ANSI)
   // CRC tables for the CRC16. The polynomial is x^16 + x^15 + x^2 + 1
   unsigned char CRCHi[] = {
  0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC1, 0x81, 0x40, 0xC1, 
   0x80, 0x41, 0x01, 0xc0, 0x80, 0x41, 0x00, 0xc1, 0x81, 0x40, 0x00, 0xc1, 0x81, 0x40, 0x01,
 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0,
   0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01,
 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0xC1, 
 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0xC1, 0x81, 0xC1, 
   0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0,
0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x81, 0x40, 0xC1, 0x81, 0xC1, 
  0x40
  } ;
  unsigned char CRCLo[] = {
  0 \times 00, 0 \times C0, 0 \times C1, 0 \times 01, 0 \times C3, 0 \times 03, 0 \times 02, 0 \times C2, 0 \times C6, 0 \times 06, 0 \times 07, 0 \times C7, 0 \times C5, 0 \times C5, 0 \times C4, 0 \times 04, 0 \times 05, 0 \times 
   0x08, 0xC8, 0xD8, 0x18, 0x19, 0xD9, 0x1B, 0xDB, 0xDA, 0x1A, 0x1E, 0xDE, 0xDF, 0x1F, 0xDD,
 0x1D, 0x1C, 0xDC, 0x14, 0xD4, 0xD5, 0x15, 0xD7, 0x17, 0x16, 0xD6, 0xD2, 0x12, 0x13, 0xD3, 0x11, 0xD1, 0xD0, 0x10, 0xF0, 0x30, 0x31, 0xF1, 0x33, 0xF3, 0xF2, 0x32, 0x36, 0xF6, 0xF7, 0x37, 0xF5, 0x35, 0x34, 0xF4, 0x3C, 0xFC, 0xFD, 0x3D, 0xFF, 0x3F, 0x3E, 0xFE, 0xFA, 0x3A,
   0x3B, 0xFB, 0x39, 0xF9, 0xF8, 0x38, 0x28, 0xE8, 0xE9, 0x29, 0xEB, 0x2B, 0x2A, 0xEA, 0xEE,
 0x2E, 0x2F, 0x2E, 0x2D, 0xED, 0xEC, 0x2C, 0x2C, 0x2A, 0x25, 0xE5, 0x27, 0xE7, 0xE6, 0x26, 0x22, 0xE2, 0xE3, 0x23, 0xE1, 0x21, 0x20, 0xE0, 0xA0, 0xE0, 0xE1, 0xA1, 0xE3, 0xA3, 0xA2, 0xE2, 0xE6, 0xA6, 0xA6, 0xA7, 0xE7, 0xE5, 0xE5, 0xE6, 0xA0, 0xE0, 0xA0, 0xE5, 
 0x6E, 0xAE, 0xAA, 0x6A, 0x6B, 0xAB, 0x69, 0xA9, 0xA8, 0x68, 0x78, 0xB8, 0xB9, 0x79, 0xBB, 0x7B, 0x7A, 0xBA, 0xBE, 0x7E, 0x7F, 0xBF, 0x7D, 0xBD, 0xBC, 0x7C, 0xB4, 0x74, 0x75, 0xB5, 0x77, 0xB7, 0xB6, 0x76, 0x72, 0xB2, 0xB3, 0x73, 0xB1, 0x71, 0x70, 0xB0, 0x50, 0x90, 0x91,
   0x51, 0x93, 0x53, 0x52, 0x92, 0x96, 0x56, 0x57, 0x97, 0x55, 0x95, 0x94, 0x54, 0x9C, 0x5C,
   0x5D, 0x9D, 0x5F, 0x9F, 0x9E, 0x5E, 0x5A, 0x9A, 0x9B, 0x5B, 0x99, 0x59, 0x58, 0x98, 0x88,
 0x48, 0x49, 0x89, 0x4B, 0x8B, 0x8A, 0x4A, 0x4E, 0x8E, 0x8F, 0x4F, 0x8D, 0x4D, 0x4C, 0x8C, 0x44, 0x84, 0x85, 0x45, 0x87, 0x47, 0x46, 0x86, 0x82, 0x42, 0x43, 0x83, 0x41, 0x81, 0x80,
  0 \times 40
  } ;
   unsigned short CalcCRC(unsigned char *ptr, unsigned int length)
                               register unsigned char k, crclo, crchi;
                               crclo = 0xff:
                               crchi = 0xff;
                               while (length--)
                                                             k = crclo ^ *ptr++;
                                                            crclo = crchi ^ CRCHi[k];
                                                            crchi = CRCLo[k];
                                return (unsigned short)crclo + ((unsigned short)crchi << 8);
```

```
// main()
static char cmdStr[ 129 ];
// syntax: CmdCrc "SLCD Command Line"
// output: "~HHHHSLCD Command Line<CR>"
int main(int argc, char* argv[])
    unsigned short crc;
    // must be 1 and only 1 arg:
    if(argc == 2)
         // copy slcd command to our buffer:
         strcpy( cmdStr, argv[1] );
         // append a <CR>:
         strcat( cmdStr, "\r" );
         // calc the CRC:
         crc = CalcCRC( (unsigned char *)cmdStr, strlen(cmdStr) );
         // show results:
        printf( " Input: [%s\\r]\r\n", argv[1] );
printf( " Output: [~%04X%s\\r]\r\n", crc, argv[1] );
    else
         printf( " ERROR: syntax is 'CmdCrc \"slcd cmd\"' (quotes req'd)\r\n" );
        return( -1 );
    return 0;
}
Example usages:
C:\CRC>cmdcrc "s 0 1"
  Input: [s 0 1\r]
Output: [~4050s 0 1\r]
C:\CRC>cmdcrc "t \"Hello\""
  Input: [t "Hello"\r]
Output: [~298Ct "Hello"\r]
```

9. Communications Watchdog Timer

9.1 Overview

As of version 1.3.0 and later, the SLCD5 firmware contains a Communications Watchdog Timer feature that can be used to execute a macro with one of four predefined labels when a corresponding communications events is detected:

- 1. Short Term loss of communication
 - o No characters received for X seconds
 - Specified macro executes with label ":st_down"
- 2. Communication restored after Short Term loss
 - A character is received after a Short Term loss I
 - o Specified macro executes with label ":st up"
- 3. Long Term loss of communication
 - No characters received for Y seconds
 - o Specified macro executes with label ":lt down"
- 4. Communication restored after Long Term loss
 - o A character is received after a Long Term loss I
 - o Specified macro executes with label ":lt up"

The macro to execute and the definitions of Short Term and Long Term communications loss are specified using the '*comwdt' command, which also enables the feature. Once enabled, it remains active until a '*comwdt off' command is received, power is cycled or the SLCD5 is reset.

9.2 Using the "comwdt command

9.3 Example

Below are example macro definitions demonstrating a simple usage of the Communications Watchdog:

```
// example macro to enable the watchdog
// short term timeout is 5 seconds, long term is 10 seconds
//
#define enable wdt
f32B
ta CC
t "Communications Timeout Demo\n" 240 25
*comwdt com wdt 5 10
#end
// macro that gets executed when comwdt times out
// predefined labels are used for the timeout actions:
//
#define com wdt
// the following is a required label, do not change the name
:st down
// short term timeout expired; animate backlight blinking
ani 0 xbbs 127
ani 0 y 250
ani 0 xbbs 255
ani 0 y 250
anie 0
// the following is a required label, do not change the name
// recover from short term timeout; kill the animation and
// restore to full brightness
anix 0
xbb 255
//
// the following is a required label, do not change the name
// long term timeout expired; clear screen and warn user
anix 0
xbb 255
f32B
ta CC
t "Communications Timeout\n" 240 75
t "Please Restart System"
// the following is a required label, do not change the name
:lt up
// recover from long term timeout; in a real system the power-on macro or some other
startup
// macro would be run
f32B
t "Communications Restored" 240 200
#end
```

```
// example macro to disable the watchdog
//
#define disable_wdt
f32B
ta CC
t "Communications Timeout Disabled\n" 240 20
*comwdt off
#end
```

10. Working with Variables

10.1 Overview

In versions prior to 1.2.0, the SLCD5 has supported a limited set of variables with primitive access capabilities. As of version 1.3.0, simple printf() like formatting is supported; this allows using variables in formatted output on the SLCD5 display or in a line of text sent to one of the serial ports. As of version 1.4.12, the number of integer variables (i0-i9) has been increased to a total of 20 (i0-i19).

10.2 User Variables

User Variables are available with predefined names which specify their data type, as shown in the table below. They are assigned values using the <u>"Set Variable" command</u>, and the host can query their values using the <u>"Get Variable" command</u>. Their values can also be used as arguments to commands or macros by enclosing their names inside back-tick characters.

Note: The back-tick is a different character than the single-quote/apostrophe character.

Variable Name	Format Type	Data Type
i0 – i19	Numeric	32-Bit integer
e0 – eF	Numeric	8-bit unsigned integer
s0 – s9	String	Text string, max of 80 chars
p0 – p9	Numeric	Pair of X and Y Coordinates (16-Bit integers)

10.3 System Variables

System Variables have values that are set by the system and cannot be accessed via the "get" and "set" commands. Their values can be used as arguments to commands or macros by enclosing their names inside back-tick characters.

Variable Name	Format Type	Data Type
H#	numeric	Height of bitmap # (in pixels)
W#	numeric	Width of bitmap # (in pixels)
V	numeric	Volume setting (0–255)
В	numeric	Brightness setting (0–255)
М	string	Default "mpush" string, max of 80 chars
Т	string	5 char string containing SLCDx's temp in degrees C; formatted "%+05.1d", the last 2 chars will always be the decimal point and the tenths digit.
L128 – L255	numeric	Slider value (16-bit integer)
R#:#	numeric	Random integer in the range #:#
Xa, Ya, Xr, Yr	numeric	Last Touch Coordinates, absolute and relative to hotspot Top Left Corner (16-bit integers)
Xc, Yc, Xm, Ym, Xs, Ys, Xo, Yo	numeric	Absolute X and Y coordinates for center of display, bottom right corner of display, screen cursor as set by the 'sc' command, and origin.
\$BAUD0	numeric	String containing Main Comm port Baud Rate

10.4 Formatting Variables

A simple printf()-like output format may be applied to a variable by inserting a format specifier between the first back-tick and the variable's name, with a space between them, as shown in the examples below. Two different format specifier syntaxes are supported; one for string variables and one for numeric variables (see Format Types in preceding tables). Note: Macro arguments '0'-'9' must be formatted using the string syntax.

String syntax: `%[-]<width>[.<max>] <varName>`

[-] Left justify output text by adding trailing spaces; default is right

justification by adding leading spaces

<width> Minimum output field width

<max> Maximum number of characters from string variable to output

Examples: set s0 "abcdef"

Sets string variable s0 to "abcdef".

get s0

abcdef

Outputs string variable s0.

Outputs "[", up to 3 chars from s0 in a left justified field of 4 chars, "]", and a return.

```
out "[`%4.3 s0`]\r"
```

Outputs "[", up to 3 chars from s0 in a right justified field of 4 chars, "]", and a return.

```
out "[`%6 T`]\r"
[ +33.1]
```

Outputs "[", the temperature string in a right justified field of 6 chars, "]", and a return.

```
out "[`%6.3 T`]\r"
[ +33]
```

Outputs "[", 3 chars from the temperature string in a right justified field of 6 chars, "]", and a return.

Numeric syntax: %[+|-|0|+0]<width> <varName>

[+] Always include sign of value.

[-] Left justify output text by adding trailing spaces; default is right

justification by adding leading spaces.

[0] Right justify by adding leading 0's.

[+0] Always include sign of value AND right justify output by adding

leading 0's after the sign.

<width> Minimum output field width

Examples: set i0 123

Sets integer variable i0 to positive 123.

get i0

123

Outputs integer variable i0.

Outputs "[", the value of i0 in a right justified field of 6 chars with the sign of i0 followed by enough leading 0's to fill out the field, "]", and a return.

```
out "[`%+6 i0`]\r"
[ +123]
```

Outputs "[", the value of i0 in a right justified field of 6 chars with the sign of i0 preceded by enough leading spaces to fill out the field, "]", and a return.

```
out "[`%-6 i0`]\r"
[123 ]
```

Outputs "[", the value of i0 in a left justified field of 6 chars with enough trailing spaces to fill out the field, "]", and a return.

```
set p0 12 345
out "[`%06 p0`]\r"
[000012 000345]
```

Outputs "[", the X and Y values of p0 in right justified fields of 6 chars with enough leading 0's to fill out the fields and a space between fields, "]", and a return.

11. Using Simple Math Expressions

11.1 Overview

Since version 1.2.0, the SLCD5 has supported a limited simple math capability, using the backtick-escaped format:

`(`<argNum>`<op><value>)`, where:

- <argNum> can be '0'-'9', representing macro arg '0'-'9'
- <op> can be '+' or '-' for addition, or subtraction
- <value> can be 0-65536

Such expressions could be used only within a macro, and were thus of limited value. Now, in version 1.3.0 and later, simple math expressions can be used with any command that accepts integer values as arguments. When the command executes, the expression will be evaluated and its numeric value will be used. The new format is:

```
`(<value><op><value>)`, where:
```

- <value> can be:
 - o A positive number between 0 and 65535
 - A backtick-escaped macro argument (`0`-`9`) or the backtick-escaped name of any variable with a numeric format type, as listed in <u>WORKING</u> WITH VARIABLES (above).
- <op> can be one of:
 - '+' for addition
 - o '-' for subtraction
 - o '*' for multiplication
 - o '/' for division (integer, truncating)
 - o '%' for integer modulo

11.2 Limitations and Requirements

- No nesting of expressions is allowed (to avoid problems with recursion).
- BMPload for the SLCD5, version 2.2.2 or later is required.
- Expressions used in an "ani" command or a "tf" command will be evaluated before the resulting command is stored in the animation buffer.

11.3 Examples

Below are some example macro definitions demonstrating valid variants of the new format:

```
// Display a given bitmap centered on the screen:
// -- arg 0 is index of bitmap
// -- arg 1 is its width
// -- arg 2 is its height
#define showBitmapCentered
set i0 `(`1`/2)`  // divide width by 2
set i0 `(`Xc`-`i0`)` // subtract from Screen Center X coord
set i1 `(`2`/2)`
                         // divide height by 2
set i1 `(`Yc`-`i1`)` // subtract from Screen Center Y coord
xi `0` `i0` `i1`
                       // display the bitmap
#end
// show bitmap 1 in center of screen
//
#define test sbc
m showBitmapCentered 1 `W1` `H1`
#end
// increment variable i0 each time called:
//
#define inc i0
set i0 `(`i0`+1)`
#end
```

Appendix A – LCD and Touch Panels Compatible with the SLCD5 Controller

A.1 LCD Panels

The SLCD5 can support a variety of LCD panels. The main issue is cabling and external backlight driver interface. Reach manufactures custom flat flex cabling for interfacing the SLCD5 to Hitachi and other panels that use 40 pin FFC connectors. Reach also supports most panels via ERG inverters and backlight drivers; see www.ergpower.com. Please contact Reach sales for specific requirements.

A.2 Touch Panel

The on-board touch controller supports 4 wire resistive panels with either 1mm pigtail contact spacing (Fujitsu 4 wire standard), 1.25mm spacing (Kyocera standard), or 0.1" spacing (3M standard).

Appendix B – Parts and Suppliers for SLCD5 Connections

B.1 Connectors and Cables for J6, J7, J10, J13

The board connector is Molex type 53261-XX71 where XX is the number of pins. The mating connector is made of two parts: the receptacle housing and the crimp pins. A special tool is needed to make the crimps. Alternatively, custom cables can be purchased. See below for cable vendors.

J6 Receptacle housing Molex P/N 51021-0800 J7 Receptacle housing Molex P/N 51021-1000 J10 Receptacle housing Molex P/N 51021-0400 J13 Receptacle housing Molex P/N 51021-0700

Crimp pins Molex 50079 or 50058

Prototype (small qty) crimp tool Molex 63811-0200

Production crimp tool Molex 63811-0000

All of the above are available from www.digikey.com

B.2 Cables for J8

A DF9-31 to DF9-31 cable is used to connect J8 to panels using this type of connector. This cable is available from:

```
www.axoncable.com e.g. P/N FDC31/254AFF03
DF9-31 to DF9-31 cable 10" female – female same side 1-1 pinout
```

www.digikey.com e.g. P/N PS563AB0254S-ND DF9-31 to DF9-31 cable 10" female – female same side 1-1 pinout

B.3 Discrete Wire Cable Vendors

The cables needed for J6 through J13 can be specified and supplied as assembled cables by:

International Component Technology www.intcomptech.com

Appendix C – Ordering Information

C.1 General Information

See www.reachtech.com for SLCD5/SLCD5+ controller and display model ordering numbers. When ordering either a board or a module, you must also specify a specific two-part revision number. The first number indicates the hardware version and accounts for options such as touch connector configuration. The second number designates the firmware that comes pre-loaded on the board. The firmware revision numbering ensures that production boards have the same firmware as was tested and approved.

C.2 Contact Reach Directly for Specific Ordering Information

Reach Technology 5750 Hellyer Ave San Jose, CA 95138 (408) 754-4176

Appendix D – BMPload Program

D.1 Overview

The BMPload program is used to load bitmaps, optional macros, and optional fonts into the SLCD5 controller. It creates a compressed binary file containing all these elements. This file is either loaded directly into the SLCD5 flash via a serial port, or stored on an SD card that is inserted into the controller. There are different use cases depending on whether the controller is being used for development or as part of the end equipment production. See System Firmware Boot Process for a discussion of the exact sequence power-on loading of the binary file.

Small Image Development

If the bitmaps and other files are relatively small, BMPload can be connected to the SLCD5 controller via a serial port, and the binary file directly loaded into the controller flash memory. This is useful for rapid testing of different images and macros.

Large Image Development

When the binary file is too large for the serial programming method (loading is too slow), BMPload can store the file on an SD card. This card is then inserted into the SLCD5 controller, and it will be read from the card into DRAM on power-on. This loading process can delay the controller power-on but in most cases this is acceptable for development.

Alpha Test Through Production

In production, the file used in Large Image Development is placed on an SD card along with a file named "FLASH1.INI" (SLCD5) or "FLASH2.INI" (SLCD5+) whose presence directs the controller to store the binary file into the on-board flash memory. Once written to flash, the SD card does not need to be used, and the power-on to screen active time is short. See Appendix J for more details about using the SD card.

D.2 Bitmap Compression

The BMPload program can compress bitmaps using the RLE (Run Length Encoding) method. This is very efficient space-wise for control surfaces that have horizontal lines of constant color. However they are slower to display. Small images are not compressed as they do not take up much space. To disable compression of larger images, insert the lower-case string ".unc" into the file name, e.g. "01_MyBitmap.unc.bmp". This tells the BMPload program not to compress this file's image. Background bitmaps for slider objects and meter objects and sliding graphics ("xio" command) need to be uncompressed.


D.3 Bitmap Format

The BMPload program requires bitmaps to be in 24-bit RGB color. The SLCD5 uses 16-bit color in RGB565 format; the BMPload program does the required translation.

BMPload also compresses images using RLE16 (run length encoding). This is very efficient for control surface images that have horizontally repeated pixels of the same color.

D.4 Program Operation

BMPload runs under Windows XP through Windows 7. The computer running BMPload must have a serial port connected to the SLCD5 board using either the Main or Aux ports. The serial port must not be in use by another program. When it is first run, you will see the following:

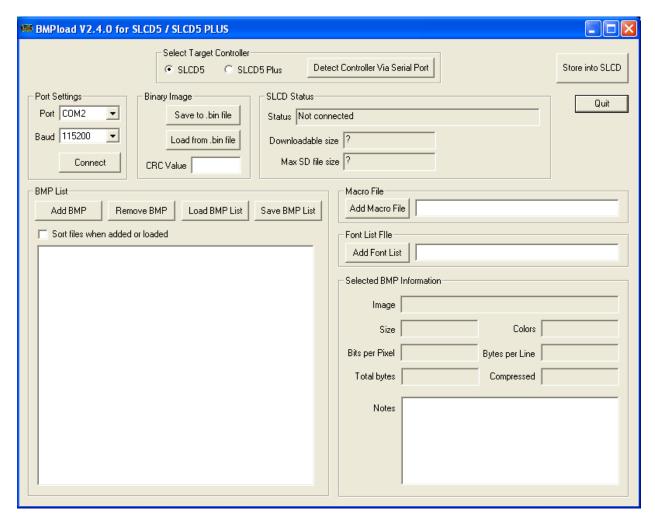


You must first set the Target Controller to the appropriate type for your SLCD5 controller board. If you are already connected to the serial port, the type can be automatically detected and set by clicking the "Detect Controller Via Serial Port" button.

You can now use the "Add BMP" button to add BMP files to the list. Note that the order is important because you use the index number in the DISPLAY BITMAP IMAGE command. The best way to keep this clear is to start all bmp file names with their index number, for example "01_first_bitmap.bmp" and then enable the "Sort files when added or loaded" checkbox.

A list file (.lst) is a better way to load all the image files used for the interface. It also keeps the file names in the correct order. The list file is a standard text file; a list file with the following files was used for the screen shot that follows. Note that since the full path name is not specified, the files are assumed to be in the same directory as the list file.

```
01 button.bmp
                                     14 bbutton dn.bmp
02 button click.bmp
                                     15 Speed.unc.BMP
03 check box.bmp
                                     16 RPM.unc.BMP
04 check box click.bmp
                                     17 button black.bmp
05 splash.bmp
                                     18 button.tr0000.bmp
                                     19 sliderBack.unc.bmp
06 MtHood.bmp
07 SLCDInfo.BMP
                                     20 sliderKnob.bmp
08 Contact Blank.BMP
                                     21 slider2Back.unc.bmp
09 logo bounce.bmp
                                     22 slider2Knob.bmp
10 button up.BMP
                                     23 SlidingCompass.unc.BMP
11 button dn.BMP
                                     24 PanelInfo.BMP
12 input box.bmp
                                     25 LEDOFF.unc.bmp
13 bbutton up.bmp
                                     26 LEDON.unc.bmp
```

Note that the full path name is displayed in the file list, but does not need to be in the list file. After the list has been loaded, this is what the program looks like. Note that when a bitmap is selected, the compression and size information is shown on the right.

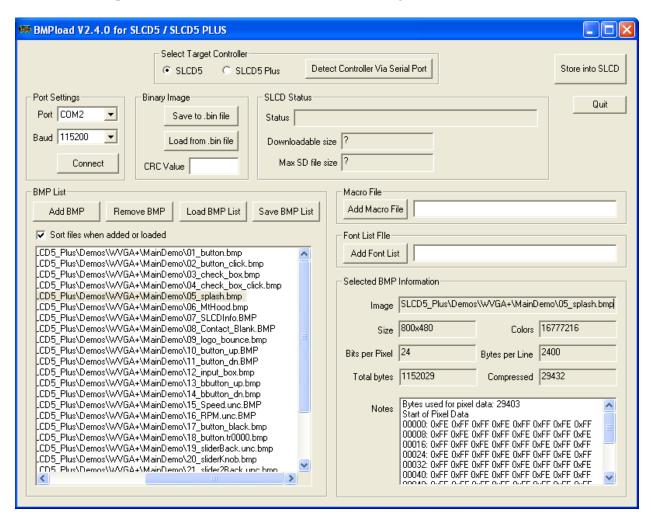

Use the "Add Macro File" button to add a macro file to the binary file in addition to bitmaps. Once you have added the bitmaps, use the "Save to .bin File" button to save them to the SD card. The file name must be 8 characters, start with "slcd" and have the extension ".bin".

Alternatively, you can use the "Store into SLCD" to write the binary file directly into the SLCD5 flash memory via the serial port. This can be much slower than using the SD card.

D.5 Connecting Via Serial Port

To connect to the SLCD5 via a serial port, select the port and / or baud rate. If the specified port is in use by another program, you will see something like this (COM1 will be replaced by the COM port you are trying to open)



This means that the program was unable to open the specified port. This is due to another program such as Tera Term being open and connected to it. Shut down or disconnect any other serial programs, and click OK.

You may see the following message instead:



This means that the serial connection between the PC and the SLCD5 is not working. Check the cables.

D.6 BMPload Speed Issues

For fast serial loading, speeds of up to 460800 baud are supported. For reliable communication at this speed, use a USB-serial adapter with the electronics in the DB9 connector.

The BMPload program will work with any type of serial port. However, some USB-to-serial converters have high overhead for the small transaction sizes used by the BMPload program. If you are seeing slow programming times with a USB converter, try using a standard serial port, or use the "Save to .bin File" method.

If you are using an FTDI adapter (www.ftdichip.com), you can set the latency timer to a smaller than default value to speed up transfers. To do this on an XP machine, open the Control Panel, open System, select Hardware, Device Manager, Ports, Serial port (select the USB adapter), Properties, Port Settings, Advanced, Latency Timer.

Appendix E – Macro Commands and File Format

E.1 Introduction and limitations

Macros have two main purposes.

- 1. They allow a series of commands to be invoked by a single command. This can speed up the display by reducing communication overhead. It also reduces the space needed to store commands on the host processor.
- 2. They can be linked to buttons and other graphical objects so that by pushing a button, a macro can be invoked for example to draw a new screen. This is useful to keep the overhead on the processor low and provide fast response for users.

Macros can have parameters associated with them. This allows a general purpose macro to be used in different ways. For example, a macro can create a numeric keypad and the parameters can specify where to draw the keypad on the screen. This reduces hard coding of graphical elements and promotes reuse of screen elements.

These are the limits on the macro commands and their arguments:

- MAXIMUM NUMBER OF MACROS = 254
 A macro can use an unlimited number of labels, which is an effective way to work around this limit.
- MAXIMUM MACRO NAME LENGTH = 64 chars
- MAXIMUM CALL DEPTH = 4 A macro can call another macro, but only to a depth of 4.
- MAXIMUM ARGUMENTS PER MACRO = 10
- MAXIMUM BYTES PER ARGUMENT is only limited by the total command line length (max 128)
- MAXIMUM TOTAL STORED ARGUMENTS = 100

E.2 Macro File Format

The macro file is an ASCII text file and can be generated by Windows applications such as Notepad. There are two macro definition versions to choose from when creating a macro file. The original version, version 1, takes two arguments <text_name> and <number>. This version requires that all macros be listed in numerical order starting at 1 and incrementing by 1. It has the disadvantage that editing a macro file can be cumbersome because you have to keep track of macro numbers.

Version 2 takes only the < text_name> argument. When using version 2 each macro definition is assigned a number based on the order in which it appears, starting with 1. This way, when using functions that refer to macros, the <text_name> can be used to reference them.

The BMPload program generates a header file in the same folder with the same name as the macro file but with extension '.h'. These header files list all the macro defines and display every macro name with its assigned number. This header file can be used as a 'C' include file in the user's microcontroller program.

The format for each macro in version 1 is as follows:

```
#define <text_name> <number>
(one or more command lines)
#end
```

The format for each macro in version 2 is as follows:

```
#define <text_name>
(one or more command lines)
#end
```

The <text_name> is an identifier that follows 'C' language conventions. In version 2 the name can also be used instead of the macro number when using a command that references a macro, such as the command that assigns a macro to a button.

All macro names must start with an alphabetical letter or an underscore but thereafter can also contain numbers.

In version 1 the <number> argument must be 1 for the first macro, 2 for the second, and so on. The macros must be listed in increasing contiguous index order.

Comments are ignored. Comments are text starting with the "//" string. All lines outside of a "#define...#end pair are treated as comments.

Version 2 referencing examples:

```
#define example_a
m example_b
#end

#define example_b
*PONMAC example_a
#end
```

Also with BMPload version 2.2 or higher it is acceptable to indent lines.

E.3 Macro Parameters (Arguments)

Macros can be parameterized by using the special escape sequences `0` thru `9` in the command lines. These are replaced at execution time by the arguments supplied by the command that invoked the macro. The combined total length of all macro arguments for a macro call is 128 characters (command line length) minus the character length of the macro name or number plus spaces, and delimiters (ex. Double quotes). Note the special escape sequence delimiter character ''' has the ASCII value 96 decimal, 60 hexadecimal.

Parameterized macro example:

```
#define argExample
t "`0`" `1` `2`
#end
```

The following command uses this macro to display the text "Hello" at location x=10, y=20:

```
>m argExample Hello 10 20
```

E.4 Assigning Macros to Buttons

The <u>Touch Macro Assign</u> command and variants can be used to automatically run a macro when a button is pressed or released. Note that macros that execute this way (as a result of touching a graphic object with an associated macro) will cause any currently executing macro to quit running. This also halts any macros that called the currently running macro.

E.5 Special Macro Commands, and Macro Labels

Memory commands

Memory commands were added to implement the keyboard in the demo macros that come with the SLCD5 kits. These allow a character string to be saved and manipulated. The character string is accessed as a special macro parameter.

The commands are <u>mpush</u> to append a string to a string variable, and <u>mpop</u> to remove characters from the end of string variable.

Special Arguments

The macro system recognizes other symbols in the parameter escape format – enclosed in back tick marks. These are as follows.

Simple Math on Integer Arguments

```
`(`0`+ 1)`
```

This is replaced by the value of the macro's first argument plus 1. Simple math supports addition or subtraction, but only on arguments with an integer value; ie: "abc" or "1.2" would cause an error.

Memory Variable

`M`

This is replaced by the string stored by the mpush command.

Integer Variable

```
`i0` thru `i19`
```

This is replaced by a 32-bit signed integer. See the SET VARIABLE command.

String Variable

```
`s0` thru `s9`
```

This is replaced by a character string with a maximum length of 80 characters. See the <u>SET VARIABLE</u> command.

Point Coordinate Variable

```
`p0` thru `p9`
```

This is replaced by the string representing a coordinate of a point on the screen. The format is "<x coordinate value><space> <y coordinate value>". See the SET VARIABLE command.

Slider Value

```
`L<index>`
```

This is replaced by the value of the slider defined by <index>.

Random Number

```
`R<lo>:<hi>`
```

This is replaced by a random number in the range <lo> to <hi>.

Repeat Command

A special macro directive allows a macro to repeat execution. The directive must be at the start of a line and is:

```
:repeat
```

When the macro processor reads this line, the macro will begin execution again at the first line of the macro. Note: An escape character (hex 1B) followed by a <return> received from the serial port will halt a looping macro.

Labels

A special directive can be used to identify a location within a macro in order to selectively execute specific command lines when the macro is called with the optional label identifier. A label consists of a colon (':') followed by a maximum of 32 alphanumeric characters (label name). The first character of a label name must not be numeric. The line placement of the label must begin in column 1 of the line (the colon in column 1).

Example:

```
:beep
```

A special label, ":default", can be used to execute commands when the given label identifier is missing or does not match any other labels within the macro. This label must always be the last label in a macro.

Labels are invoked by calling the macro in the normal fashion, but including the colon and label name directly after the macro name/number in a macro call. For example, to invoke label "attach" in macro number 8, the command would be:

```
m 8:attach (invoking the macro by number)
or, if its name is "button_action":
m button action:attach (invoking the macro by name)
```

The format of a macro label invocation is: "m <macro name/number>:<label name>".

The execution flow of a macro invoked with an optional label starts with the "common code area". The common code area is a new feature with labels. The common code area is all command lines in a macro after the macro definition line (#define) up to the first label. So, first the common code area command lines are executed, then execution starts with the line after the matching label, and ends with the next label. Below are examples of a macro that uses labels. Command lines executed are in **bold**.

Example of Macro Call with a Label

```
m 8:attach
           (user calls macro number 8 with label
":attach")
#define create button /*
                         (command lines below are always
executed)
s 333 ccc
                                         Common
f 24
                                         Code Area
t "Calling create button" 200 10
:attach
                 (command lines below this matching label
are processed)
t "Attaching button 1 to macro" 200 30
xa 1 p 3 0
:define
                (execution stops here)
t "Defining button" 200 50
bd 1 0 32 1 "INCREASE" 9 5 10 11
#end */
```

Example of Macro Call without a Label

```
m 8 (user calls macro number 8 without any label)
#define create button /* (command lines below are always
executed)
s 333 ccc
                                        Common
f 24
                                        Code Area
t "Calling create button" 200 10
:attach
                 (command lines below are not executed since
there is no matching label)
t "Attaching button 1 to macro" 200 30
xa 1 p 3 0
:define
                (command lines below are not executed since
there is no matching label)
t "Defining button" 200 50
bd 1 0 32 1 "INCREASE" 9 5 10 11
#end */
```

Error conditions for a label include:

- Label name is not found.
- Use of a label that results in no commands line being executed.

In both these cases, an error message is transmitted to the user.

E.6 Changing The Firmware Power-on Baud Rate (Power-On Macro)

The following is an example of how to set the power-on baud rate. Create and load the following macro file:

```
#define pon_mac 1
/* (start comment out contents)...
// set baud rate
baud 9600
#end */
```

Now, connect to the SLCD5 and run the command:

```
*PONMAC 1
```

Now cycle power to the SLCD5, and the initial baud rate will be 9600 baud.

E.7 Changing The Firmware Power-on Baud Rate (EEPROM)

The power on macro can change the firmware baud rate, or the <u>SET BAUD RATE (Sticky)</u> command can be used to change the setting in EEPROM. Note that the bootloader will start at 115200 baud.

Appendix F – Troubleshooting

F.1 Touch Unreliable or Non-Operative

If the touch screen is unreliable or non-operative, do the following:

- Make sure the metal shell of the display is connected to one of the SLCD5 mounting holes. This is the same as saying that the display case should be grounded to SLCD5 ground. Note that this only applies to displays with CCFL backlights, not to LED backlights.
- 2. Run the TOUCH CALIBRATE command, "tc". This will reset the calibration values and allow you to recalibrate the touch screen.

If after doing this, the touch is still non-operative, check the touch connection into the SLCD5 board. Some touch panels use conductive ink that can be easily scraped off by too many or incorrect connector insertion cycles. If there are holes you can see through on the touch connector end where it plugs into the SLCD5 connector this is the problem.

To determine the accuracy and sensitivity of the touch, you can use the "touch debug" command as follows:

*debug 1

This puts an "X" on the screen whenever a valid touch is recognized. To turn it off, use:

*debua 0

Appendix G – Evaluation / Demo Kit Tutorial

G.1 Self-Running Demonstration

The kit comes shipped with a demo installed. This tutorial will uninstall the demo. To run the demo afterwards, place the supplied SLCD.BIN and RUNDEMO.INI files in the root directory of an empty SD card, install the card, and reset the board or cycle power. This will run the demo. Note that it may be slow to load because it is big, but in production on the SLCD5+, it will be loaded into flash for fast startup.

G.2 Connection and Control Via PC

This section describes how to connect to and control the SLCD5 from a PC type computer. Any other computer (Mac / Unix / Linux) can be used instead with analogous procedures.

The two DB9 serial ports (Main and Aux) on the PowerCom4 board are wired to be compatible with the PC 9 pin serial standard. You need a DB9 female to DB9 male 1-1 serial cable to connect to the PC serial port. Alternatively if you have a USB-serial adapter you can plug the adapter directly onto the PowerCom4 board. The Main port should be used for initial communications with the host PC.

The PC needs to run a serial terminal emulator. Options are Realterm or Teraterm, both are open source. Assuming Teraterm, once installed do the following:

```
Setup -> Serial Port -> Baud Rate 115200, Flow control Xon/Xoff
```

Setup -> Terminal -> Local Echo checked, Newline Receive: CR+LF

Setup -> Save Setup -> Save (replaces default setup file)

In the case of a USB-serial adapter, you may have to open the Control Panel -> System -> Hardware -> Device Manager -> Ports to determine which COM port is mapped to the USB adapter. With FTDI adapters, the device Properties -> Port Settings -> Advanced allows you to assign a specific COM port to the adapter.

Once this is done, open the terminal emulator, connect to the Main DB9 port, and hit enter. You should see a '>' prompt come back. Now, type 'z' followed by the enter key. The display should clear as a result. You should also see the 'z' letter you typed and the '>' prompt. You are successfully controlling the SLCD5 now.

G.3 Simple Commands

This section presents some simple commands that illustrate some of the SLCD5 capabilities.

Type in the line(s) as shown in courier typeface followed by the enter key. (Note: To minimize typing, you can use the "Text select tool" in Acrobat Reader to select each line, right click to copy, and then paste into the terminal screen.)

```
Clear the screen:
```

Z

```
Type Hello World in a 24 point bold font starting at pixel location x=100, y=110:
```

```
f 24B // set font command t "Hello World" 100 110 // draw text command
```

Same as above, but with yellow text on a blue background:

```
f 24B
s 16 2  // set foreground and background color
t "Hello World" 100 110

Restore default colors (black text, white background) and clear screen"
s 0 1
z

Create a solid pure blue rectangle with corners (140, 200) and (160, 250)
r 140 100 160 250 1 0000FF
```

Define momentary pushbutton #1 named "Test" at location (100,50) which is the top left corner of the button, use default (internal) bitmaps for the button, and send notification when both pressed and released:

```
z
f 16B
bdc 1 150 110 5 "Test" // button define command
//press button on screen to see notification messages)
```

Create types of hotspot

G.4 Bitmaps

Note: If you have another serial port available, hook it up to the AUX DB9 so that bitmaps and macros can be downloaded without having to disconnect the terminal emulator. Otherwise, when using BMPload, make sure the terminal emulator is disconnected.

Start the BMPload program. Select the controller type or use the "DETECT CONTROLLER button. Click "Load BMP list", and look in the supplied CD for the Demo directory containing bitmaps (.BMP) and list files (.lst) for the screen size you are using. For the 7" screen, that is WVGA. Click on the demo.lst and a set of bitmap files will appear in the main window. Note that the files are numbered; this is useful because bitmaps are referred to by load order, so the number helps identify the bitmaps.

Clicking on any bitmap file name will display statistics for the bitmap. You may have to scroll horizontally to see the bitmap as full path names are shown. For this next tutorial section, it is assumed that image #25 is 25_LEDOFF.unc.bmp and 26 is 26_LEDON.unc.bmp.

Make sure the Serial port is configured to the correct speed and port. Click on "Connect" to test the connection. If connected, click on "Store into SLCD" and it should download the bitmaps to the controller. If the download is less than 8KB/sec, and you are using a USB-serial adapter, you may have to reduce the latency; see BMPload Speed Issues in <u>Appendix D</u>. Note that serial download is suitable for small bitmaps and for larger file collections you need to use the SD card method described in the Fonts Section below.

Once loaded, use Teraterm to connect to the controller. Do the following:

```
Display the bitmaps loaded in the controller:
```

```
Display a bitmap by number:
```

```
xi 5 0 0 // display bitmap #6 with top right corner at 0,0
```

Use "LED" bitmaps for the two states of a latching button with index #2:

```
z
bdc 2 100 200 2 "" "" 25 26
```

// touch red dot to see touch notification with latched state

G.5 Macros

The easiest way to develop and investigate the uses of macros is to have a small set of bitmap images and a small macro file. See the demo macro file macros.txt for examples of macros.

G.6 Fonts

See Section 6 for a discussion of font lists and files. This tutorial will also demonstrate how to use an SD card with BMPload. For conversion between Unicode and UTF-8, see http://www.utf8-chartable.de/

Restart BMPload, and select "Add Font List", and open the fonts.rfl file from the same directory as the bitmaps used above. Then insert a blank SD card into the PC and hit the Save to .bin file" button and save the file as slcd.bin on the SD card root directory. Then exit the BMPload program and eject the SD card via the File Explorer right click menu. Install the card into the SLCD5 and reset the board. Then do the following:

List available fonts:

f?

// font names are listed; last one is CH48 which was just downloaded

Set font and display

G.7 Attaching to the Embedded Controller

The PC connection method described above is useful for trying out the development kit. After that, the kit should be attached to the OEM's embedded microcontroller for actual GUI development and testing. Attaching one port (MAIN) to the microcontroller, and the other (AUX) to the micro allows either the terminal emulator or the BMPload program to share control with the micro. This is useful when a series of commands is to be tested and it is faster to test using a terminal than writing and compiling microcontroller code. To switch between the micro being the active host and the PC being the active host, either one sends three <return> characters in a row. BMPload does this and then switches the port back so the microcontroller does not have to reestablish its port as the control port. It can also be done at the terminal via the *prevCons command.

This tutorial assumes the host microcontroller has an RS-232 port. This is often the case with microcontroller development kits.

Attach the micro's 232 port to the Main SLCD5 port; typically via a serial crossover cable. To verify, look at the voltages on pins 2 and 3 of each DB9; connect one side's pin X at a negative voltage to the other side's pin Y of no voltage and vice versa.

Reset the SLCD5 via the yellow button on the PowerCom4 triangle board. Write code on the micro to poll the serial port waiting for the '>' < return > prompt. When it gets this, have the micro send commands such as described above and verify that they work as expected.

Appendix H – Working with Bitmaps

H.1 Creating Bitmaps

Bitmaps are used to create the visual elements of the user interface. These include buttons, tabbed folders, and data entry and display areas. Most interface styles implemented on Microsoft Windows can be duplicated on the SLCD5. The way to do this is to create or capture the visual element and create the desired layout.

The popular programs used to create bitmaps (.BMP files) are Adobe Photoshop, and the open source program, GIMP.

To capture any visual element on the PC screen, hit the "PrintScreen" button on the PC's keyboard. This captures the screen to the clipboard. Then open the image editing program, open a new window, and paste the screen to that window. The desired elements can then be copied and saved.

Note: Bitmaps must be saved in 24-bit RGB color mode.

H.2 High Color

The SLCD5 supports high color depth (RGB565) as standard. The BMPload program converts 24-bit BMPs into the RGB565 physical format used by the controller. See <u>RGB565 Encoding</u> for details.

Users can read the stored Highcolor value by using the <u>PIXEL READ</u> command.

H.3 Gradients

Many modern-looking graphic designs use 24-bit color gradients. These can end up with a "banded" look when converted to 16-bit color. To eliminate this effect, use a spatial diffusion converter (dither) to limit the number of colors to 16-bit while diffusing the step changes spatially. This should be done after the image is rendered for use. A Photoshop plugin called DepthDither can be used to perform this function.

H.4 Transparency

High Color depth transparent bitmaps are supported. To make a bitmap transparent, select a transparency color. It must have an exact RGB565 equivalent, e.g. solid red 0xF800 (top 5 bits), solid green 0x07E0 (middle 6 bits), or solid blue 0x001F (lower 5 bits). Then have the bitmap file name include the string ".unc.trXXXX", where XXXX is the 16-bit RGB transparent color value. For example, if solid red is transparent, have the filename include the form above, such as "01_my_bitmap.unc.trf800.bmp". Note, the ".unc" indicates that the bitmap is uncompressed, which is required for transparency. When this bitmap is displayed, the transparent color will not be displayed.

Appendix I – SD Card Support Features

I.1 Overview

The SLCD5 board contains an SD card slot. This slot can be replicated in a more convenient location using connector J14. See Appendix K for details.

The SD card can be used to do the following:

- Initialize non-volatile (EEPROM) system variables via config.ini file (see <u>System</u> Configuration).
- Load new firmware into the SLCD5 controller.
- Hold a BMPload binary file (bitmaps, macros, fonts) to be used as the working set of images, macros, and fonts
- Update the on-board flash with the above binary file
- Save screen shots.
- Run demo macro on startup.
- Hold multiple BMPload binary files (working sets) to be loaded as needed
- Hold individual image files of type .jpg, .gif, and .bmp

Note: The SD card must be 2GB or less in size and formatted as FAT (also known as FAT16) to work properly with the SLCD5. **Do not use FAT32.** Some SD cards must be reformatted before use. Reach recommends the SanDisk brand of SD card.

I.2 Firmware Upgrade

On power-on, the SLCD5 boot loader program checks if an SD card is present, and if so, looks in the root directory for a file with the name:

SLCD????.ELF

where '?' is any character. If it finds this file, it compares the file name with the name of the last loaded firmware stored in non-volatile memory (EEPROM). If they are different, it initiates a firmware update. This process may take a minute or two, during which time the LED D2 flashes, and progress messages appear on COM0 (115200 baud). Once the firmware has been upgraded it starts running.

To force an update (ignore the stored name), place a non-null text file called "LOADFW.INI" in the root directory.

I.3 Holding Binary Working Set File

When the SLCD5 controller powers on, it looks to load a binary file (working set of images, macros, and fonts). If an SD card is present, and has a file named SLCD*.BIN, this file is used. It is loaded into DRAM because loading images on the fly from SD is too slow. Loading into DRAM provides the fastest display time for images, but this loading can delay the power-on of the display. This can be eliminated by writing the binary file to on-board flash.

I.4 Update Binary File in Flash

In order to speed up the power-on display time, the binary file can be loaded into on-board flash. To do this, include a non-null text file called "FLASH1.INI" (SLCD5) or "FLASH2.INI" (SLCD5+) in the SD card root directory. When the SLCD5/SLCD5+ controller powers on, if an SD card is present, and has a file named SLCD*.BIN, and the appropriate FLASH*.INI is present, the binary file is directly loaded into flash memory and used from there. This may take some time; the main serial port will display progress dots, the LCD screen will display status messages and dots, and the on-board LED will flash.

I.5 Screen Shot Saving

Users can save the current contents of the entire screen on a file on an inserted SD Card. Refer to the "SAVE CONFIGURATION TO SD CARD" command for details.

I.6 Run Demo Macro

A special file, rundemo.ini can be used to launch a macro on power-on. If an SD card contains both a bitmap/macro binary file (e.g. SLCD.BIN) and this special file, a demo can be run without disturbing the binary file stored in flash.

The rundemo.ini file only has two options: verbose mode and the number of the macro to run. Verbose mode is the same as for the config.ini file (See <u>System Configuration</u>). To specify the macro to run, use the syntax below.

```
Demomac = <macro number>
Example:
   demomac = 1
```

I.7 Multiple Binary Files

In some cases it is useful to be able to switch the "working set" of images, macros, and fonts. This could be done to support different GUI styles (skins) or languages. This can be done by storing the binary files in different root directories on the SD card. The command "*sdload <directory name>" can be used to load a different binary file. See <u>LOAD FILE FROM SD CARD</u> (SPECIFIED DIRECTORY).

I.8 Separate Image Files

The SD card can also be used to hold individual images as .bmp, .jpg, or .gif formatted files. This may be useful if, for instance, a user's manual was to be stored and displayed page by page. The "xif" command is used to display these files. The "*cd" command changes the current directory on the SD card so that different groups of images can be used. See CHANGE SD CARD DIRECTORY.

Appendix J – SD Card Remote

J.1 Overview

The SLCD5 has an on-board SD card slot. It may be more convenient to place this SD card connector elsewhere; in this case, connector J14 can be used to cable to a small application-specific board containing a remote SD card slot.

To do this, refer to the schematic in Section K.2.

The LED output is used for external status and mirrors the SD card activity. A maximum drive of 10mA is provided, at Max 3.4V. So for a green LED with Vf of 2.1V, the resistor value would be

(3.4-2.1) / 0.01 = 130 ohms.

J.2 Schematic

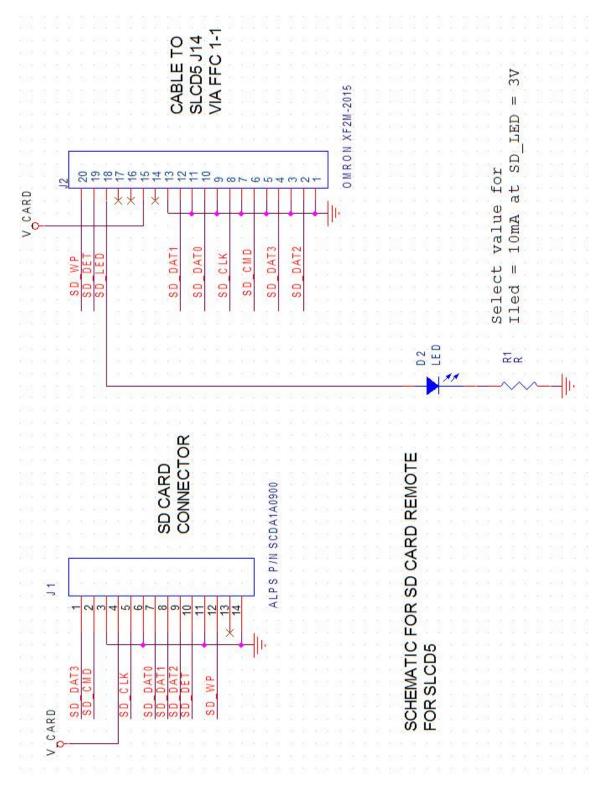


Figure 12: SD Card Schematic

Appendix K – Previous Versions

This Appendix details the changes made from previous versions to the current version of the Base Board for both the SLCD5 and SLCD5+.

K.1 Rev A vs. Rev B Board Fab Rev A vs. Rev B Board Fab

The board Fab is located on the back side of the board in the metal layer. The Base SLCD5 board Rev A and Rev B have the following differences. From the component side, the Rev A board can be identified by Jumper JP2 located in one corner that is not present on Rev B. From the back side, the board revision is etched in the trace layer.

Rev A	Rev B	Explanation
JP2 present	JP2 not present	On Rev A, when the board is powered with 5V, the jumper should be installed. When powered with 12V, the jumper must be removed or the speaker will be damaged.
R8 not present	R8 present	On Rev B, the jumper function is not needed as long as the backlight inverter is powered from >7V. Otherwise, R8 must be installed.
	R6 option	R6 normally is a zero ohm resistor and allows the *orient command to control the LCD connectors J8, J9 pin 30 (R/L). Some panels such as the NEC 6.5" need this to be a true no connect, and for these panels R6 is removed.
	R7	Resistor added to keep backlight off during board power-on. Only applicable for inverters using pin 7 of J13.
	C26-C29	Capacitors added for noise reduction on touch screen.

K.2 Rev B vs. Rev D Board Fab

Rev D incorporates the following changes from Rev B.

Rev B	Rev D	Explanation
J5	J5	J5 was I2C expansion on Rev B, and is external beeper / speaker on Rev D.
J3	J3	J3 was moved to be closer to the board edge
	JP1	JP1 added; if inserted, the SD card power is always on like Rev B. If not, the processor controls the SD card power.

Appendix L – Manual Change History

Date	Changes					
10/17/08	Modified to clarify use of RUNDEMO.INI file and associated keywords.					
10/24/08	Added "System Software Boot Process" section and updated other flowcharts.					
11/04/08	Added macro label description in Section 5 and Appendix E.					
11/24/08	Added "SAVE SCREEN SHOT TO SD CARD" command.					
11/25/08	Added System Software Boot Algorithm, and removed existing related flowcharts for clarity.					
12/15/08	Clarified binary filename for "LOAD BITMAP / MACRO FILE" command.					
03/09/09	Removed extra verbiage for "J7 10 Pin Molex 53261-1090 for 3.3V CMOS COM1 Communications" table asterisk note.					
3/24/2009	Section 2.5 clarified ("J4 – Power (if separate power input is desired)"): Noted that Pin 1 on J4 also powers speaker for customer clarity.					
3/26/2009	Added Feature 82 (Load binary file from SD Card Directory).					
4/7/2009	Added comments on 24- to 16-bit conversion in "Appendix H – Working with bitmaps".					
7/23/2009	Added METER DEFINE and METER VALUE. Appendix section on Screen Shot information had some formatting errors, and was made brief.					
8/12/2009	Changed corporate address.					
8/17/2009	Added "LCDshiftclock" to CONFIG.INI options.					
8/18/2009	Added improvements to DISABLE and ENABLE TOUCH.					
1/07/2010	 Feature 87 (Bitmap translation needed (2-bit to High Color)) Feature 142 (UTF8 support for UNICODE fonts) Feature 133 (Macros support up to ten parameters) Feature 132 (Macro call by name). Macros can also use a name. Feature 151 (Incoming CRC). Commands sent to the SLCD5 can use a CRC. Feature 128 (Add index parameter to listing commands). Feature 127 (Macro Save State and Restore State commands macro depth aware). These commands were added to the manual. Feature 109 (Version string needs additional build information). Feature 55 (Ability to remember serial baud rates changes). Defect 115 (SLIDER DEFINE continuous touch has no impact) Defect 187 (Transparent bitmaps not documented and look 'iccky') Defect 219 (DISABLE/ENABLE TOUCH does not document range optional parameters) Defect 231 (Section missing on how to use external fonts). Defect 241 (Internal Arguments description valid only within macro. 					
1/28/2010	Defect 242 (DRAW RECTANGLE doesn't do what manual says). Feature 152 (Text Box commands)					

2/25/2010	Defect 321 (CRC generation example code uses wrong CRC polynomial)
3/09/2010	Defect 315 (Need command and config variable to support selecting sound output)
5/10/2010	New Release, version 1.2.9
1/20/2011	New Release, firmware version 1.3.0
2/16/2011	Fixed a few command description errors, examples, and pagination
4/18/2011	Added Chart commands 'cc', 'cr', 'cdp', 'cdbc', 'cdbb', 'cdrm', 'cddm'
8/4/2011	Added missing config.ini options, added ainb command
8/4/2011	New Release, firmware version 1.4.0
2/22/2012	Added detail to Communications Watchdog Timer description, and a new set of macros. Fixed typos in various places.
7/26/2012	Sorted Commands by name, reconciled command names with SLCDx Software Reference, added tables of command names with cross-references, cleaned up format throughout the manual, reformatted heading styles, and updated command descriptions where needed.
02/11/2013	Added bdld, wr, wrr, ws, xma and xmc commands. Added 'query' detail to ssb command.
05/22/2013	Added zs command. Added commands for Scrolling Textbox feature.
05/23/2013	Added table entries for ssb query command, added agif, agifd commands (Animated GIF), tw, twc, twd, twga, twgp, twm, twq, twr, and twv commands (Text Window).
05/28/2013	Added clarification about bitmap compression, added correct information about the demo locations, added new cable vendor, added 'macro to run' detail for *sdload command, added PowerCom4 cable schematics, add clarification about back-tick character in User Variables, clarified need for non-aliased fonts with rotate options in 't' command.
05/29/2013	Changed Molex connector part numbers to RoHS versions, fixed connector part number for J3, clarified bcv data example.
06/04/2013	Added clarification about the xset 'T' option, clarified arc segment parameters, added detail about using FLASH1.INI on an SLCD5 vs FLASH2.INI on an SLCD5+, added *tsmm, *tsmp, *tsmr, and *tsmt commands, added range values to *CEXT command description, added mdb and mvb commands. Fixed formatting of SLIDER DEFINE description.
06/05/2013	Corrected value limit in Simple Math Expressions.
06/12/2013	Fixed hyperlink in BUTTON DEFINE – MOMENTARY description.
06/13/2013	Fixed slider index range specification.
06/14/2013	Fixed SET COLOR (Detailed) links, added Color Specifications section.
07/25/2013	Added many missing hyperlinks for unlinked references, changed wording of all 'color' parameters to use the new color specifications.
07/26/2013	Added entry for 'pwx' command, fixed style of color parameter for PIXEL WRITE, DRAW TRIANGLE commands. Changed wording in Electrical Characteristics to highlight the need to refer to the Data Sheet for Display Modules.

07/29/2013	Fixed typos in the RGB888 color description.
08/01/2013	Removed p#.x, p#.y notation from Working with Variables (not implemented), increased range of integer variables to i19, fixed example data for bcv command.
10/22/2013	Updated screen shots of BMPload program. Added *getConfigAsFile, getx, setx, and auxIO commands. Added range of <count> value in "beep" commands.</count>
10/30/2013	Added "all" and range options to xd/xe command listings.
11/05/2013	Clarified/fixed descriptions for cdbc, cddm, and cdrm commands.
12/12/2013	Fixed typo in System Configuration section.
03/19/2014	Added clarification on copyright display option in PONMAC config.ini file setting.
04/10/2014	Added clarification about vertical alignment in SET TEXT ALIGN command, added information about text alignment in TEXT DISPLAY command. Removed second parameter from wvr command listing – not implemented on SLCD5+.
04/14/2014	Fixed coordinates in DEFINE HOTSPOT and DEFINE SPECIAL HOTSPOT to match size as described. Clarified initial state of type 2 latching state button.
04/16/2014	Added reference to xset command for hotspot and button characteristics, added xset command example. Fixed xset command listing syntax.
04/22/2014	Added note that XOR mode (for drawing text) does not work with anti-aliased fonts.
04/24/2014	Added clarifications on parameter types in METER DEFINE, CHART DEFINE, LEVELBAR DEFINE, and SLIDER DEFINE commands.
05/14/2014	Added clarification to several drawing commands about using the current foreground color. Fixed some typos and text formatting. Added argument format clarification to SET COLOR (Detailed).
06/09/2014	Fixed minor typo in WAIT VERTICAL RETRACE description.
07/11/2014	Added clarification about bitmap numbering, fixed formatting for xma, xmc commands, fixed parameter listings for SLIDER DEFINE command. Added detail about error replies.
09/16/2014	Fixed typos in Formatting Variables section, fixed typo in 'cr' Command by Function listing, Clarified CHART REDEFINE PEN description, added missing commands to reference lists, fixed font/capitalization typos.
09/18/2014	Added command entries for mpush, mpop.
09/24/2014	Changed all "SLCD5 PLUS" strings to "SLCD5+", clarified description for LCDshiftclock.
10/08/2014	Final changes for 1.5.0 release. Clarified value per pen requirement in CHART VALUES command.
12/16/2014	More 1.5.0 release changes – Added notes about Rx/Tx signal levels in COM0 and COM1 descriptions, updated version information on title page.
01/05/2015	Minor formatting changes.
01/06/2015	Fixed connector label errors in: PowerCom4 schematic, PowerCom4 Operational Notes,
	•

	and in control port autoswitch description. Updated BMPLoad images to current revision.
07/23/2015	Fixed hyperlinks for aout, *binr, xs, *touchMode, *tcTimeout, *RT, *debounce, zs, *comwdt, baud, *RESET, *abt, *CEXT, *panel, *FB, *firmware, utf8, twga, twm, and mv command listings, fixed upper-case typos in TOUCH MACRO ASSIGN command description.
08/27/2015	Formatting changes to get bookmarks working properly, many other (mostly) grammatical changes. Fixed several upper-case command errors (from Word 'helping' too eagerly).
12/01/2015	Updates/corrections found when doing SLCD5+N Manual.
02/29/2016	Corrected GET/SET command descriptions to reflect integer variable range up to i19.
05/13/2016	Added clarification to xset command description. Clarified state definitions of latching state buttons.
06/01/2016	Changed business name.
07/06/2016	Added error message to MACRO EXECUTE description.
04/14/2017	Changed Sales phone number and company mailing address to San Jose location.