


JLC-100 assembly orientation guide — native holes and inward locking walls

Red = native pin 1 Blue arrow = friction-lock wall / J113 ribbon notch Page corners follow board coordinates

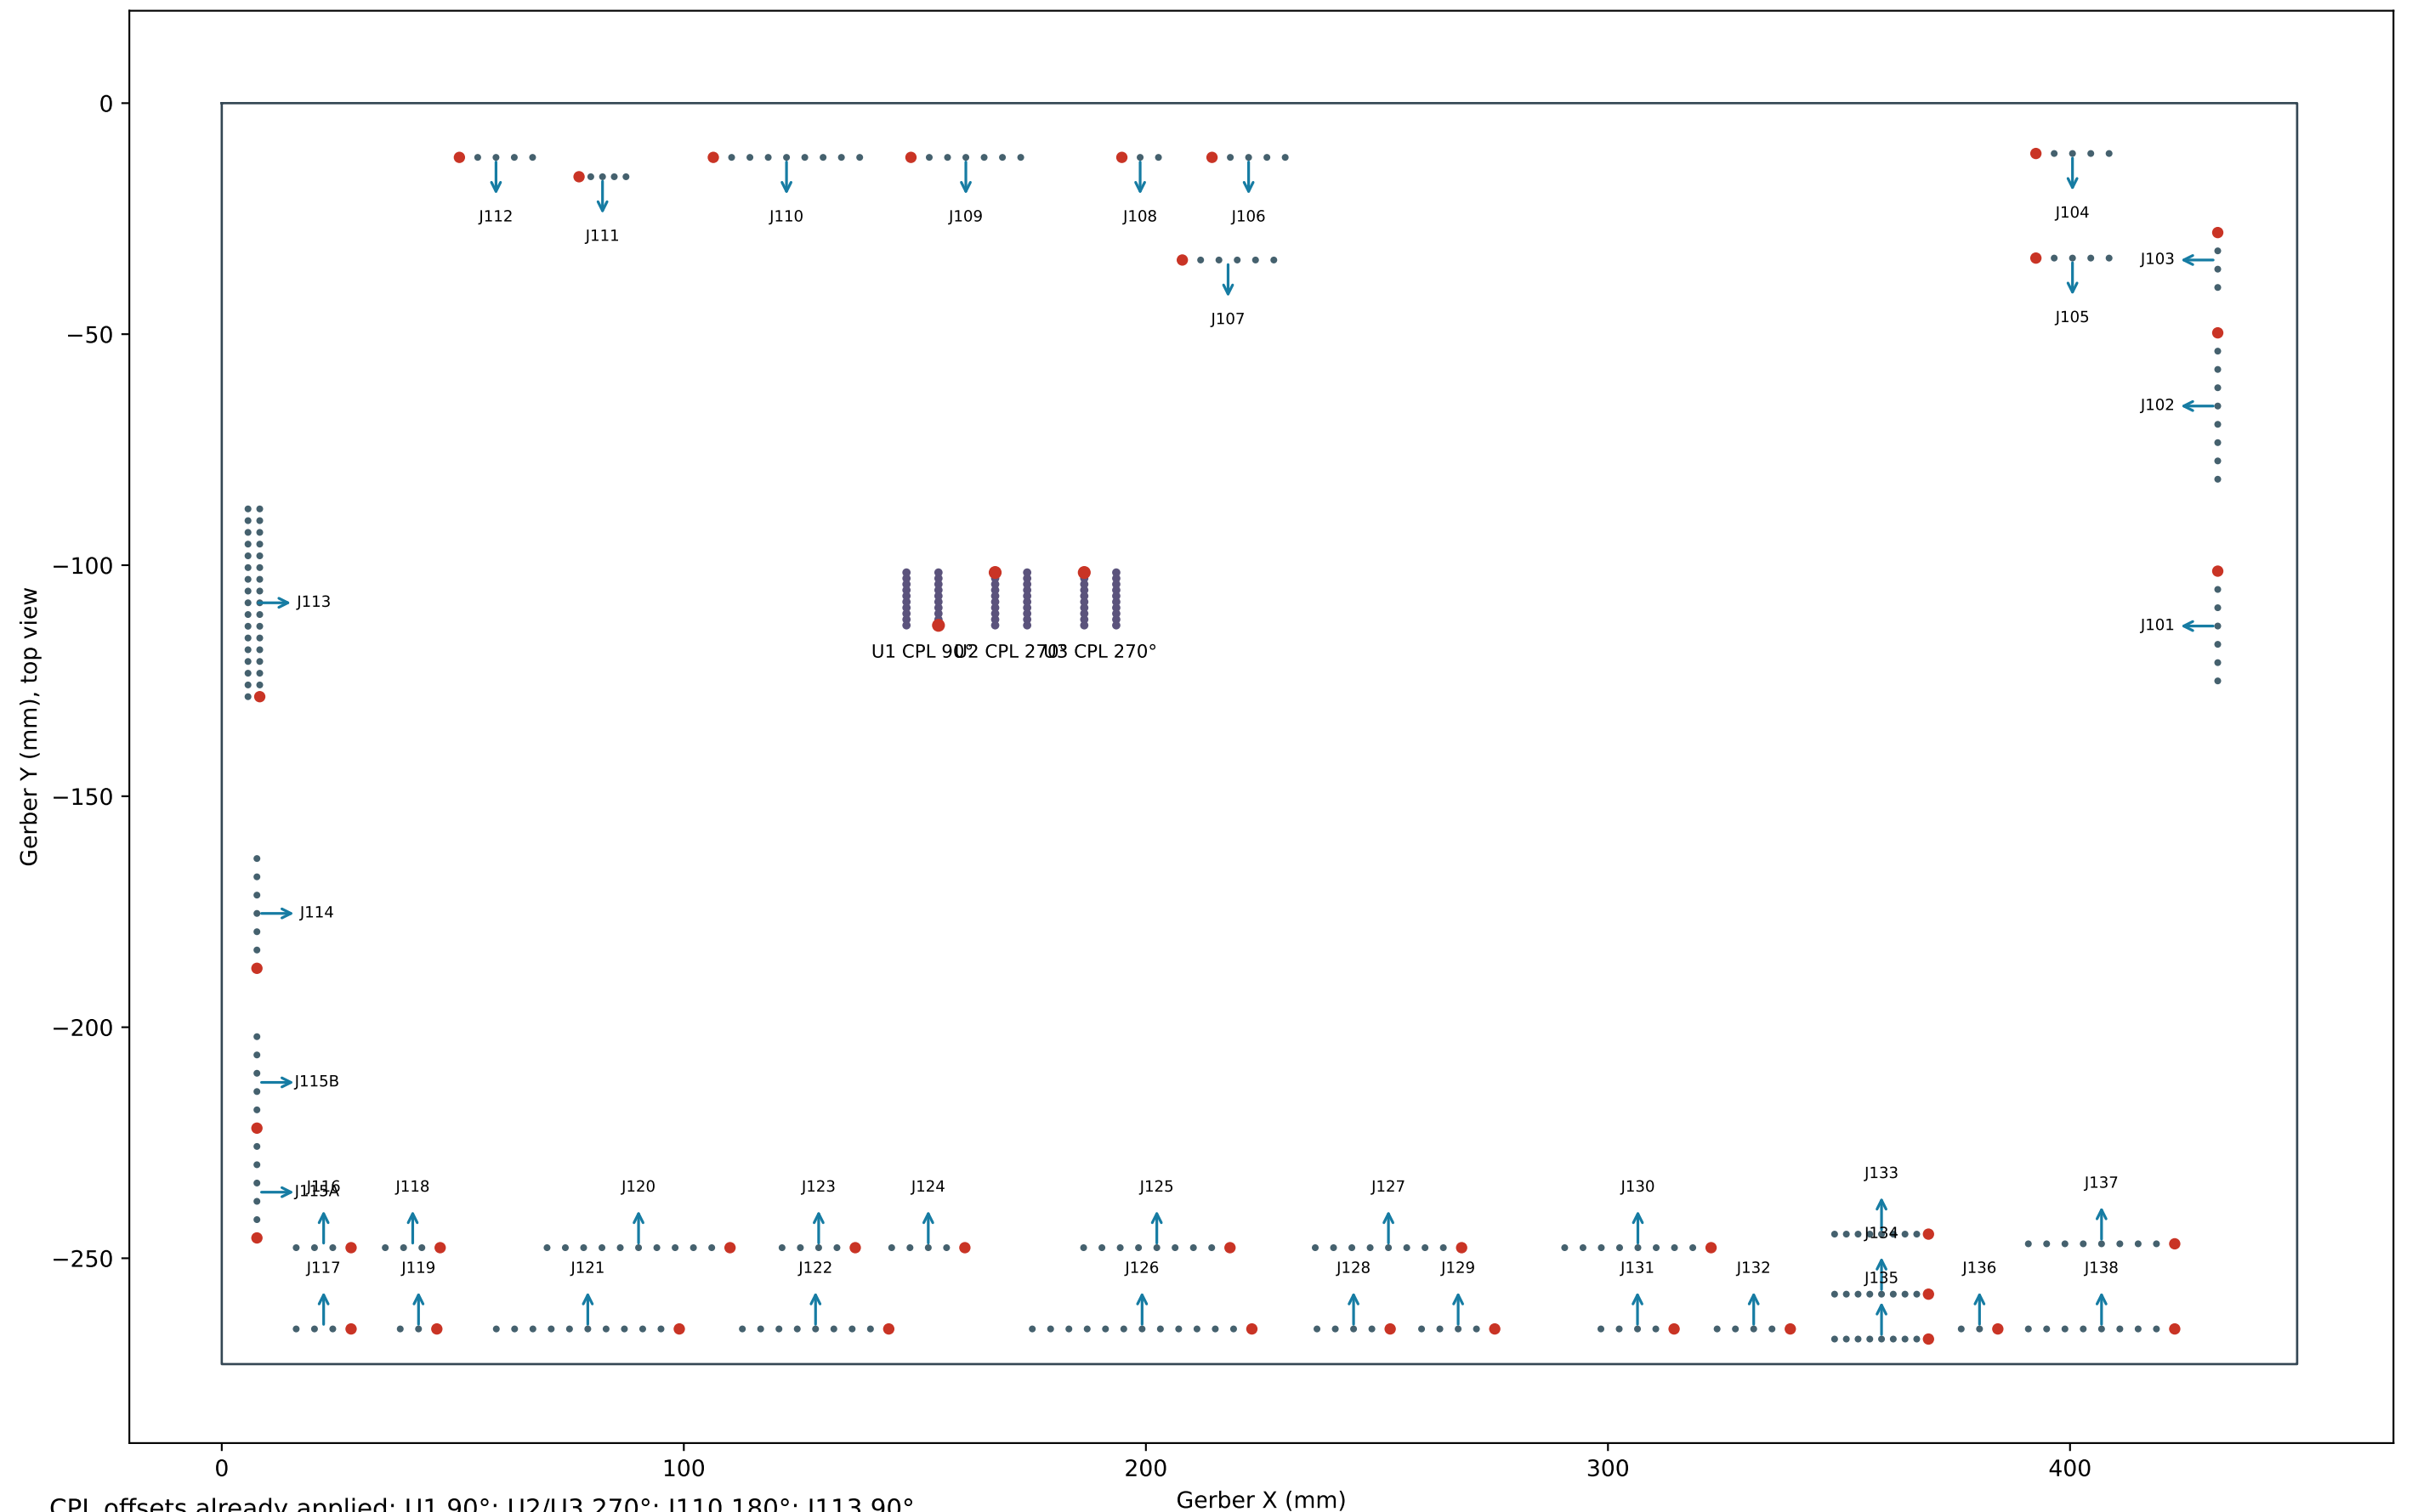

CPL offsets already applied: U1 90°; U2/U3 270°; J110 180°; J113 90°.

Supplier model/pad conflicts remain manual assembly gates. Use the detailed pages for every connector.

Do not infer pin 1 from JLCPCB's red/pink orientation dot. Verify physical pin functions and key posts.

Connector details — board top view; red square = pin 1; orange x = remove only this post
Blue arrow points to friction wall (ribbon key notch for J113). All unmarked posts remain, including electrically unused posts.

J101 C305801 CPL 90°




Pin 1 (431.968, -101.288) mm | remove post 3
MANUAL: housing/pad conflict

J102 C305802 CPL 90°




Pin 1 (431.968, -49.714) mm | remove post 7
MANUAL: housing/pad conflict

J103 C240824 CPL 270°

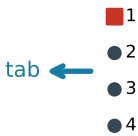


Pin 1 (431.968, -28.010) mm | remove post none
Functional pad orientation checked

J104 C505166 CPL 180°

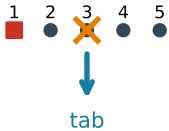


Pin 1 (392.612, -10.898) mm | remove post 3
MANUAL: housing unavailable

J105 C505166 CPL 180°

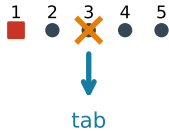


Pin 1 (392.612, -33.531) mm | remove post 3
MANUAL: housing unavailable

J106 C505166 CPL 180°

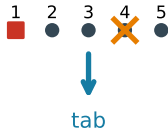

Pin 1 (214.309, -11.736) mm | remove post 4
MANUAL: housing unavailable

J107 C86500 CPL 180°

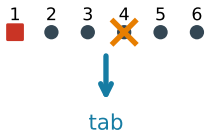


Pin 1 (207.886, -33.950) mm | remove post 4
MANUAL: housing/pad conflict

J108 C240823 CPL 0°




Pin 1 (194.797, -11.736) mm | remove post none
Functional pad orientation checked

J109 C305801 CPL 180°

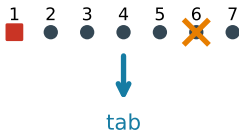


Pin 1 (149.154, -11.736) mm | remove post 6
MANUAL: housing/pad conflict

J110 C305802 CPL 180°

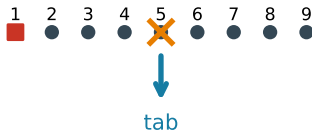


Pin 1 (106.382, -11.736) mm | remove post 5
MANUAL: housing/pad conflict

J111 C588986 CPL 180°

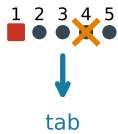

Pin 1 (77.323, -15.927) mm | remove post 4
MANUAL: housing/pad conflict

J112 C505166 CPL 180°

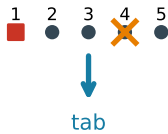

Pin 1 (51.430, -11.736) mm | remove post 4
MANUAL: housing unavailable


Connector details — board top view; red square = pin 1; orange x = remove only this post
Blue arrow points to friction wall (ribbon key notch for J113). All unmarked posts remain, including electrically unused posts.

J113 C5200275 CPL 90°




Pin 1 (8.220, -128.459) mm | remove post none
Functional pad orientation checked

J114 C305801 CPL 270°

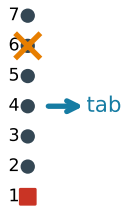


Pin 1 (7.610, -187.249) mm | remove post 6
MANUAL: housing/pad conflict

J115A C86500 CPL 270°

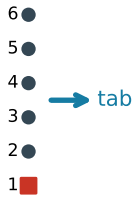

Pin 1 (7.610, -245.602) mm | remove post none
MANUAL: housing/pad conflict

J115B C86500 CPL 270°

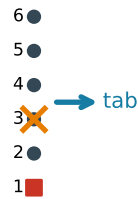

Pin 1 (7.610, -221.842) mm | remove post 3
MANUAL: housing/pad conflict

J116 C240824 CPL 180°



Pin 1 (27.987, -247.713) mm | remove post 1
Functional pad orientation checked

J117 C240824 CPL 180°



Pin 1 (27.987, -265.300) mm | remove post 1
Functional pad orientation checked

J118 C240824 CPL 180°



Pin 1 (47.267, -247.713) mm | remove post 1
Functional pad orientation checked

J119 C240823 CPL 180°



Pin 1 (46.545, -265.300) mm | remove post 2
Functional pad orientation checked

J120 C592598 CPL 0°




Pin 1 (109.999, -247.713) mm | remove post 4
MANUAL: no library

J121 C592598 CPL 0°



Pin 1 (99.018, -265.300) mm | remove post 4
MANUAL: no library

J122 C305802 CPL 0°

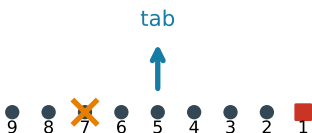

Pin 1 (144.349, -265.300) mm | remove post 7
MANUAL: housing/pad conflict

J123 C505166 CPL 0°



Pin 1 (137.100, -247.713) mm | remove post 2
MANUAL: housing unavailable

Connector details — board top view; red square = pin 1; orange x = remove only this post
Blue arrow points to friction wall (ribbon key notch for J113). All unmarked posts remain, including electrically unused posts.

J124 C505166 CPL 0°



Pin 1 (160.823, -247.713) mm | remove post 4
MANUAL: housing unavailable

J125 C305802 CPL 0°




Pin 1 (218.202, -247.713) mm | remove post 4
MANUAL: housing/pad conflict

J126 C592598 CPL 0°




Pin 1 (222.936, -265.300) mm | remove post 9
MANUAL: no library

J127 C305802 CPL 0°

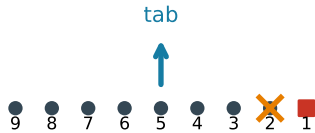


Pin 1 (268.331, -247.713) mm | remove post 2
MANUAL: housing/pad conflict

J128 C505166 CPL 0°

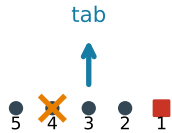


Pin 1 (252.867, -265.300) mm | remove post 4
MANUAL: housing unavailable

J129 C505166 CPL 0°

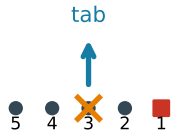


Pin 1 (275.500, -265.300) mm | remove post 3
MANUAL: housing unavailable

J130 C305802 CPL 0°

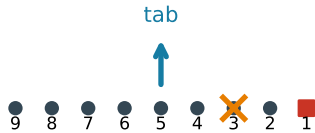


Pin 1 (322.317, -247.713) mm | remove post 3
MANUAL: housing/pad conflict

J131 C505166 CPL 0°

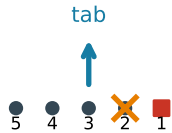


Pin 1 (314.313, -265.300) mm | remove post 2
MANUAL: housing unavailable

J132 C505166 CPL 0°

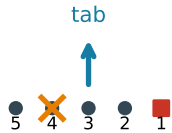


Pin 1 (339.461, -265.300) mm | remove post 4
MANUAL: housing unavailable

J133 C94118 CPL 0°

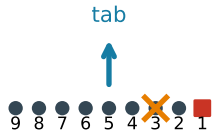


Pin 1 (369.365, -244.779) mm | remove post 3
Functional pad orientation checked

J134 C94118 CPL 0°

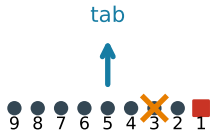

Pin 1 (369.365, -257.772) mm | remove post 3
Functional pad orientation checked

J135 C94118 CPL 0°

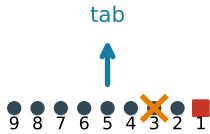

Pin 1 (369.365, -267.490) mm | remove post 3
Functional pad orientation checked

Connector details — board top view; red square = pin 1; orange x = remove only this post

Blue arrow points to friction wall (ribbon key notch for J113). All unmarked posts remain, including electrically unused posts.

J136 C240823 CPL 180°



Pin 1 (384.373, -265.300) mm | remove post 1
Functional pad orientation checked

J137 C305802 CPL 0°



Pin 1 (422.659, -246.875) mm | remove post 8
MANUAL: housing/pad conflict

J138 C305802 CPL 0°



Pin 1 (422.659, -265.300) mm | remove post 8
MANUAL: housing/pad conflict