



F800 Screen Menu & Common Functions




Content

1. Screen menu	3
1.1 Main Interface	3
1.2 Main Interface/Config Interface	6
1.3 Main Interface/Config Interface/Event interface	7
1.4 Main Interface/Config Interface/Machine Interface	8
1.5 Main Interface/Config Interface/Machine Interface /Passive System Interface	9
1.6 Main Interface/Config Interface/Machine Interface /Passive System Interface/Reader Setup Interface	10
1.7 Main Interface/Config Interface/Machine Interface /Date Time Setting Interface	11
1.8 Main Interface/Config Interface/Machine Interface /Network Interface	12
1.9 Main Interface/Config Interface/Machine Interface /Logs Interface	13
1.10 Main Interface/Config Interface/Machine Interface /Software Update Interface	14
1.11 Main Interface/Config Interface/Machine Interface /Settings Interface	15
1.12 Main Interface/Config Interface/Machine Interface /Advanced settings Interface	16

1.13 Main Interface/Config Interface/About Interface.....	17
1.14 Main Interface/Config Interface/Shutdown Interface .	18
1.15 Main Interface/Config Interface/Extended Config Interface	19
2. Common Functions	20
2.1 Turn on/off the reader	20
2.2 Set languages	22
2.3 Set time zone	24
2.4 Time setting	27
2.5 Network setting	29
2.6 Adjust power	31
2.7 Set frequency	33
2.8 Connect to WIFI	36
2.9 Download race config file	37
2.10 Beep sound control	38
2.11 Keyboard	40
2.12 Change server address	41
2.13 View files	44
2.14 Firmware update	45
2.15 Software upgrade	48

1. Screen menu

1.1 Main Interface

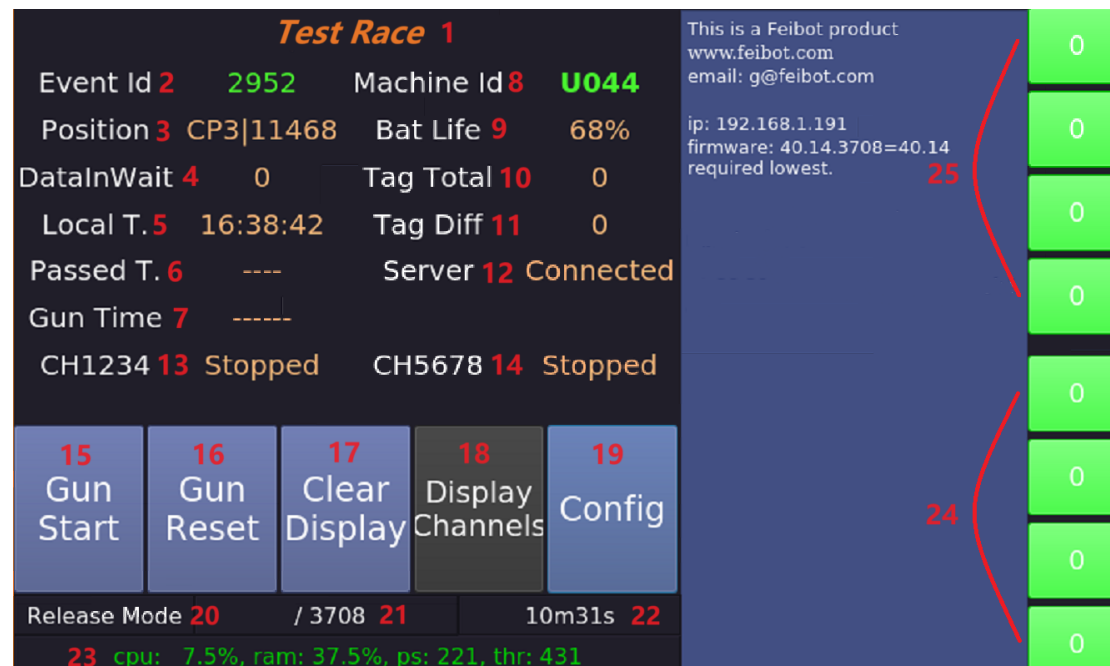


- 1) Event Name: The name of the event the device is currently associated with.
- 2) Event Id: After downloading the event configuration file from the Feibot scoring software, the screen will display the event code for the current event the device is equipped with.
- 3) Position: The position information configured for the device in the backend.
- 4) Data In Wait: The total amount of data that has been read by the device but not yet uploaded to the backend. If the device is not connected to the network, there will be pending data. Do not turn off the device; wait until it connects to the network and the pending data count is zero before turning it off.

- 5) Local T.: The current time (hours, minutes, seconds) of the device. Ensure the time is calibrated before the event.
- 6) Passed T.: The ongoing time of the current event.
- 7) Gun Time: The time when the starting gun was fired for this event.
- 8) Machine Id: The serial number of the device.
- 9) Bat Life: The current battery level of the device.
- 10) Tag Total: The total number of tag data read by the device.
- 11) Tag Diff: The number of unique tags currently detected.
- 12) Server: The current network status with three possible states:
"Not Connected," "Connected to Network but Not Backend,"
and "Connected to Backend."
- 13) CH 1234: The status of channel 1-4 controlled by reader 1.
- 14) CH 5678: The status of channel 5-8 controlled by reader 2.
- 15) Gun Start: Click to start recording the time when the starting gun is fired for the current event.
- 16) Gun Reset: Click to reset the starting gun time to zero.
- 17) Clear Display: Click to clear all content displayed on the right side of the screen.
- 18) Display Channels: Display the tag data read by the current device.
- 19) Config: Click to open the config page.


- 20) Current Mode: The current mode of the device, with two options: "Normal Mode" and "Test Mode."
- 21) Software/Firmware Version: The current software/firmware version of the device.
- 22) Uptime: The duration for which the device has been powered on.
- 23) CPU and RAM Usage: The CPU and RAM usage, as well as the number of running processes and threads on the current operating system.
- 24) They are channel 1, 2, 3, 4 from bottom to top. The displayed numbers represent the total number of tags read by each channel. Click them to open/close each channel; green indicates an open state while gray indicates a close state.
- 25) They are channel 5, 6, 7, 8 from bottom to top. The displayed numbers represent the total number of tags read by each channel. Click them to open/close each channel; green indicates an open state while gray indicates a close state.

1.2 Main Interface/Config Interface

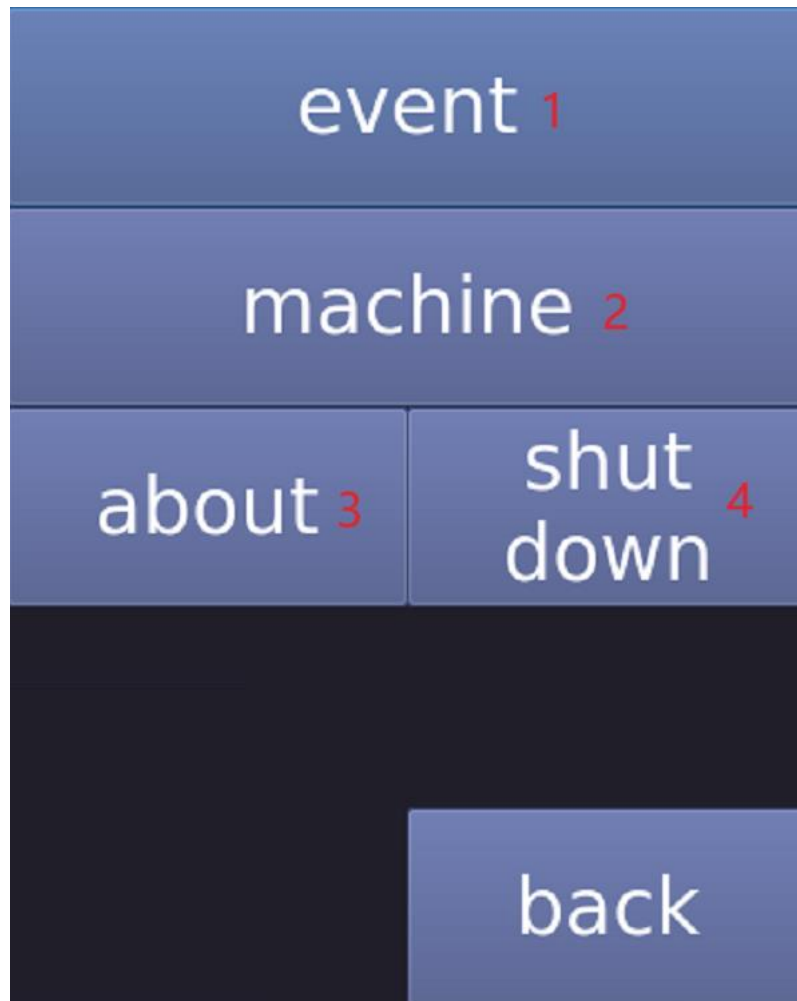

- 1) Event
- 2) Machine
- 3) About
- 4) Shutdown


1.3 Main Interface/Config Interface/Event interface

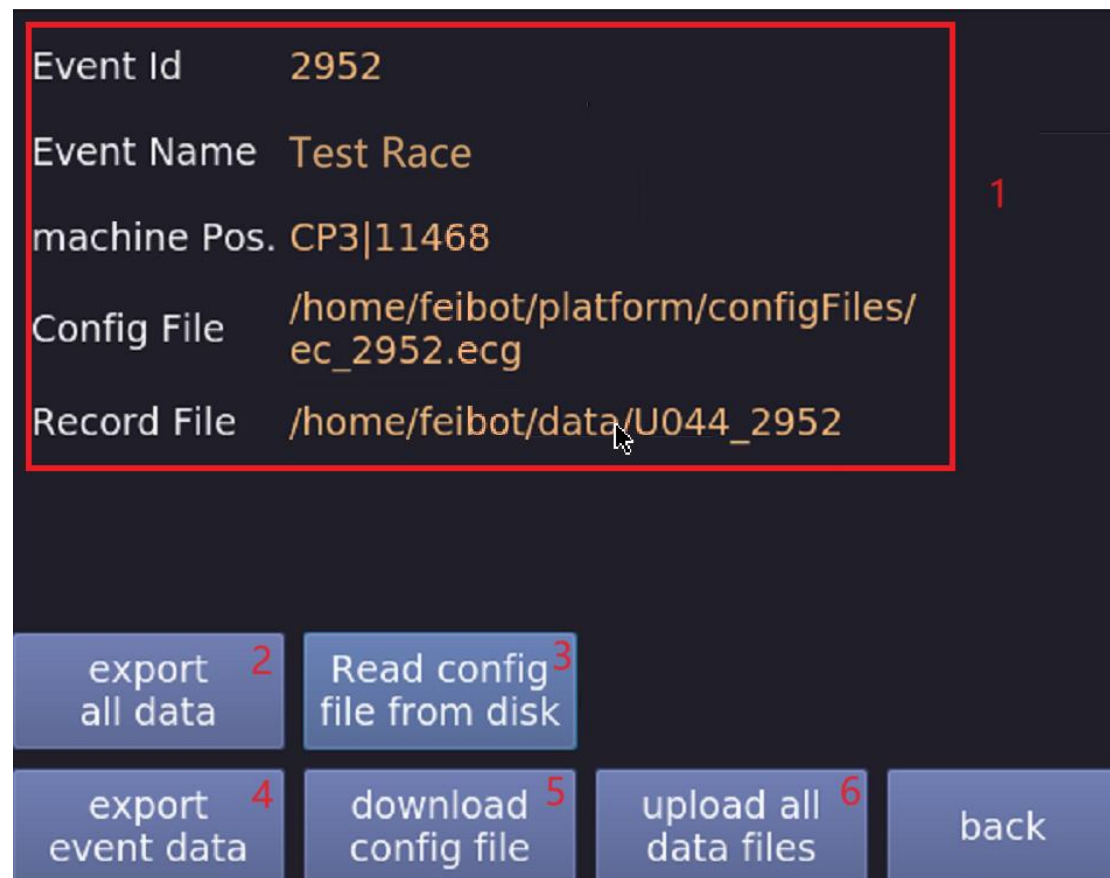

- 1) Event Information: Displays the current event's information and the storage location of event config file and record file in the scoring software.
- 2) Export All Data: Click to export all data stored on this device.
- 3) Read Config File from Disk: Click to read the event config file from a USB drive.
- 4) Export Event Data: Click to export the data of the current event.
- 5) Download Event Config File: Click to download the pre-configured event file from the scoring software. You need to download the event config file before the event starts.

- 6) Upload All Data Files: Click to upload all event data files read by this device to the scoring software.

1.4 Main Interface/Config Interface/Machine Interface

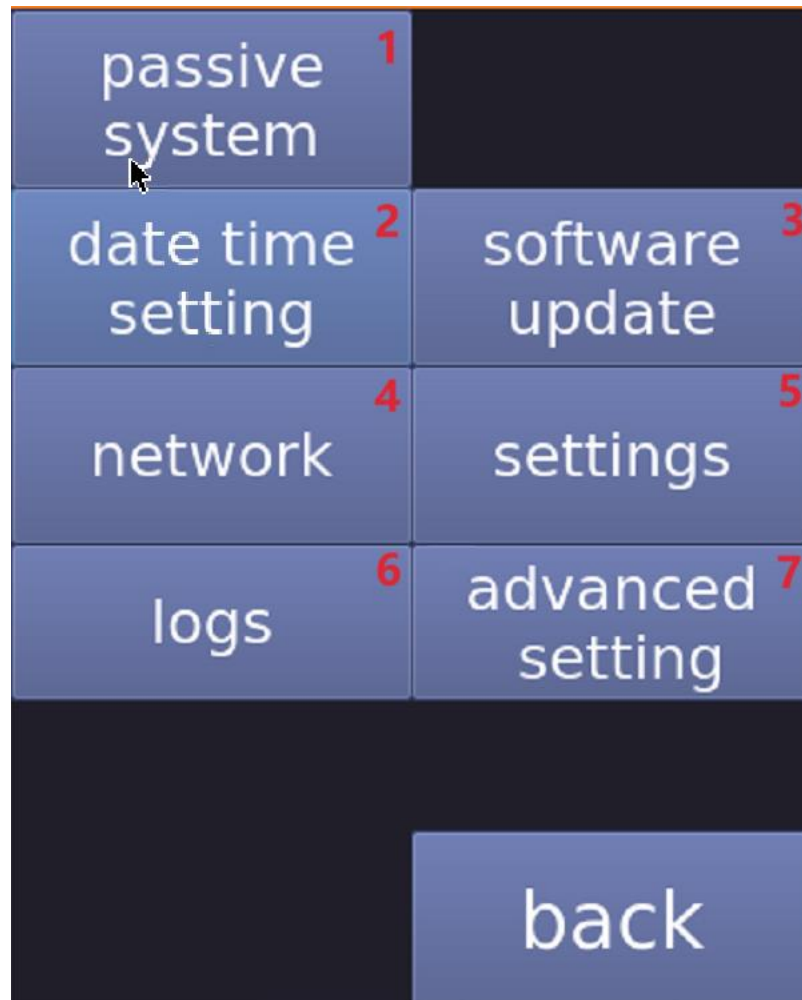

- 1) Passive System
- 2) Date Time Setting
- 3) Software Update
- 4) Network
- 5) Settings
- 6) Logs
- 7) Advanced Setting

1.5 [Main Interface](#)/[Config Interface](#)/[Machine Interface](#)

/Passive System Interface



- 1) Start: Initiate reader 1/2.
- 2) Stop: Stop reader 1/2.
- 3) Reboot: Restart reader1/2.
- 4) Setup: Open the setup interface for reader1/2.
- 5) EPC Allowed: Select allowed EPC byte length according to the EPC byte length of your chip.
- 6) Fan On: Turn on the device fan.
- 7) Fan Off: Turn off the device fan.
- 8) Power Off: Shut down the system.

1.6 [Main Interface](#)/[Config Interface](#)/[Machine Interface](#) [/Passive System Interface](#)/Reader Setup Interface

1 reader power (dbm): 33

2 working band: CHN:920~925MHz

3 reader type: D, white reader

CHN:920~925MHz
FCC:902~928MHz
ETSI:866~868MHz
AUS:918~926MHz
ZA:915~919Mhz
VN:918~923Mhz

A, black reader
B1, purple reader V1
B2, purple reader V2
C, blue reader
D, white reader

- 1) Reader Power: Set reader power by clicking “+” and “-”. The reading performance improves as the power increases.
- 2) Working Band: Select the operating frequency band for the reader, which should match the regulatory standards of the region you are operating in.
- 3) Reader Type: Choose the type of the reader you are using.

1.7 [Main Interface](#)/[Config Interface](#)/[Machine Interface](#)

/Date Time Setting Interface

2024 Y 8 M 8 D 18 h 40 m 12 s 170

+1 +1 +1 +1 +1 +1 +100

-1 -1 -1 -1 -1 -1 -100

linux time:
2024-08-08 11:40:11.370

modify¹ time set date² set time³

set linux time⁴ wireless time set⁵ change linux time⁶ back

- 1) Modify Time: Manually adjust the time by clicking the "+1" or "-1" buttons at the top to set the correct time.
- 2) Set Date: If manually modifying the date, you need to click the "Set Date" button.
- 3) Set Time: If manually modifying the time, you need to click the "Set Time" button.
- 4) Set Linux Time: Set the time displayed on the interface to match Linux/network time. (Linux time here is correspondent to network time, for Linux system is configured to synchronize with a Network Time Protocol (NTP) server)
- 5) Wireless Time Set: Click to synchronize nearby devices with the current time of this device.

- 6) Change Linux time: Update the Linux system's clock to match the time you manually adjusted on the interface.

1.8 [Main Interface](#)/[Config Interface](#)/[Machine Interface](#)

/Network Interface

protocol: TCP Server 1

TCP Server settings

local ip 192.168.1.191 2 listening port 3333 3


network state 4

interface: wlan0. IP address: 192.168.1.191.
local listening ip: 3333. mask:
255.255.255.0.
gate way: 192.168.1.1

Set connected Back


- 1) Network Protocol: Choose between two network protocols, "UDP" or "TCP".
- 2) Target Host IP Address: Enter the IP address of the target host.
- 3) Target Host Port Number: Enter the port number of the target host.
- 4) Network State: Shows the current network state of the host.

1.9 [Main Interface](#)/[Config Interface](#)/[Machine Interface](#) /Logs Interface

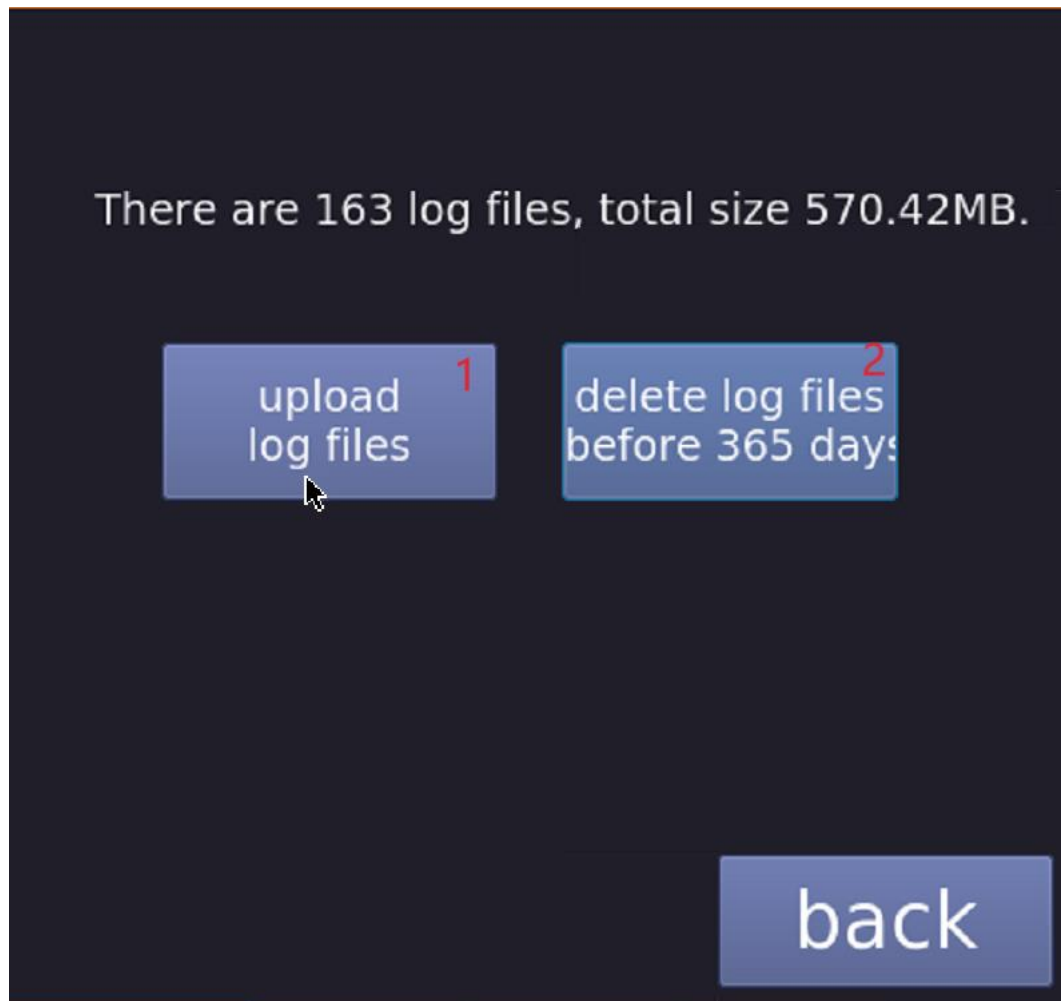

- 1) Upload Log Files: Upload all log files from this device
- 2) Delete Log Files Before 365 Days: Delete log files that are older than 365 days from this device.

1.10 Main Interface/Config Interface/Machine Interface /Software Update Interface

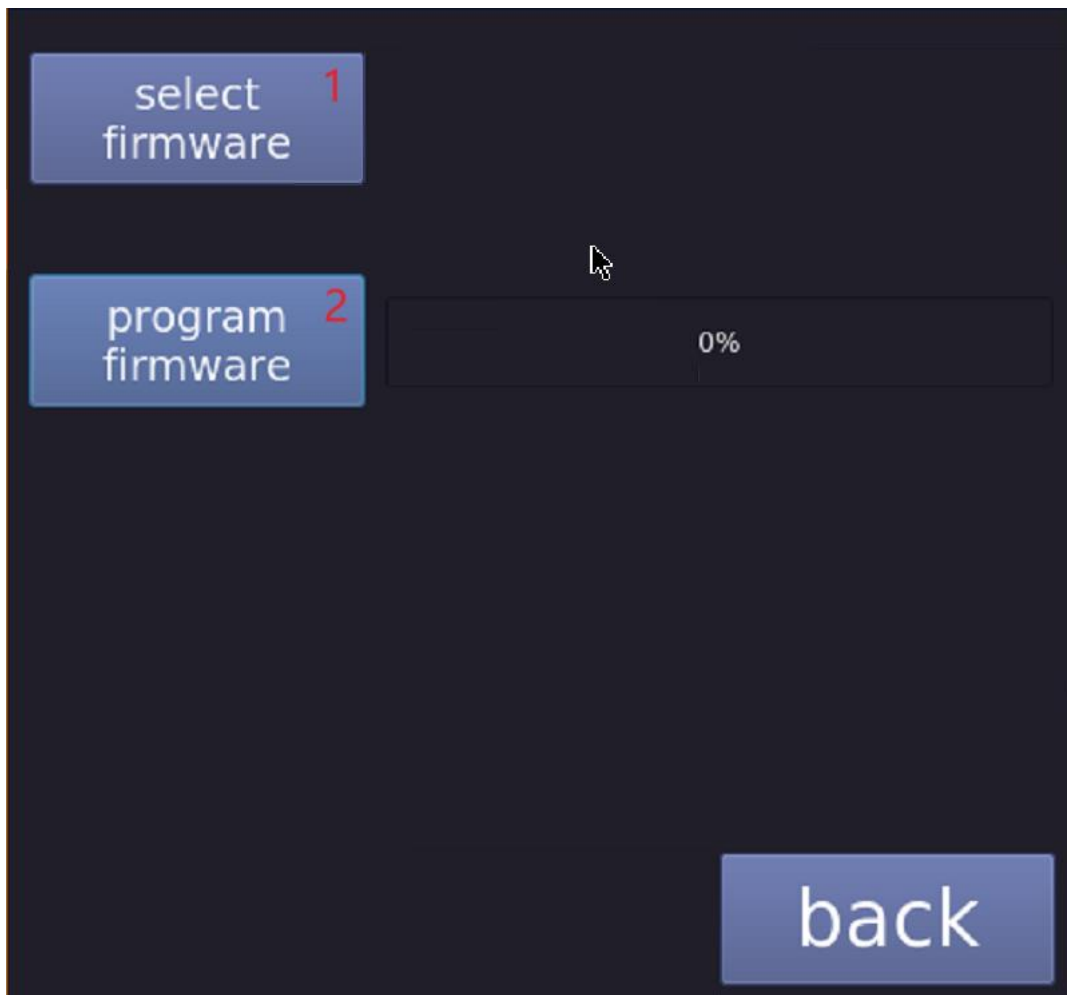

- 1) Select Firmware: Click to choose the firmware version you want to upgrade from a file list.
- 2) Program Firmware: After selecting the firmware to upgrade, click this button to start burning the firmware. Wait for the progress bar to reach 100% and then restart the software.

1.11 [Main Interface](#)/[Config Interface](#)/[Machine Interface](#) /Settings Interface



- 1) Beeper: Activate or deactivate the beeper.
- 2) New Record File: Create a new file in the /data/ directory in the scoring software.
- 3) Time Zone: Set the device's time zone by clicking the "+" and "-" buttons, then click the "Set" button.


1.12 Main Interface/Config Interface/Machine Interface

/Advanced settings Interface

The screenshot shows a dark-themed interface for advanced settings. On the left, there are two dropdown menus under the label 'Options:'. The first dropdown is set to 'language' and has a red '1' next to it. A red arrow points from this dropdown to a list of settings on the right. The second dropdown is set to 'displayLanguage'. Below these is a 'Value :' section with a text input containing 'english' and a red '2' next to it. To the right of the input is a blue 'set' button. Below the input is a message: 'Restart this program after value modified. In this dialog, config file is modified directly.' At the bottom left is a blue 'set default' button with a red '3' next to it. At the bottom right is a blue 'back' button. On the right side, there is a vertical list of settings: 'language', 'machine', 'IO', 'reader', 'socket', 'socketToServer', 'server' (highlighted in blue), 'server2', 'oss', and 'post'.


- 1) Options: Use the dropdown menu to select a specific setting you want to modify, such as language, server, or post.
- 2) Value: After selecting an option, choose or enter the desired value (e.g., "english" for language) and click "set" to apply the setting. Note: After making changes, you need to restart the program for the modifications to take effect.
- 3) Set Default: If needed, click this button to revert the settings to their default values.

1.13 Main Interface/Config Interface/About Interface

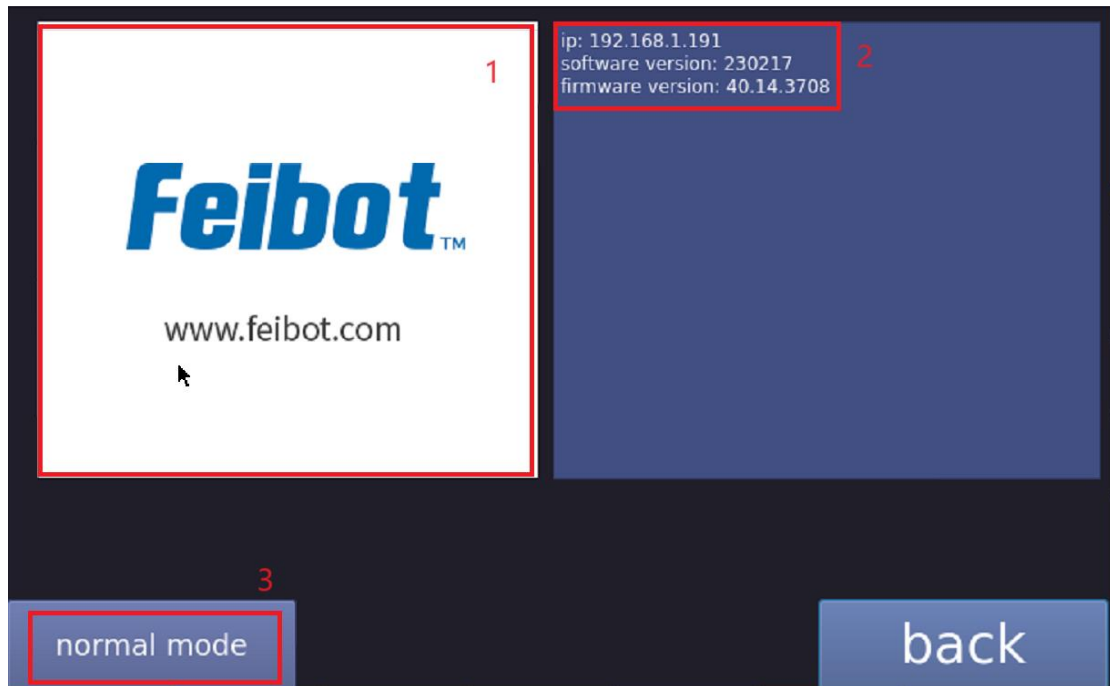

- 1) Our company website
- 2) Info about This Device: IP address, software version, firmware version, commit ID, branch version ID.
- 3) Click to select "Test Mode" or "Normal Mode". Choose Test Mode for software upgrades, and switch to Normal Mode after ensuring version stability.

1.14 Main Interface/Config Interface/Shutdown Interface

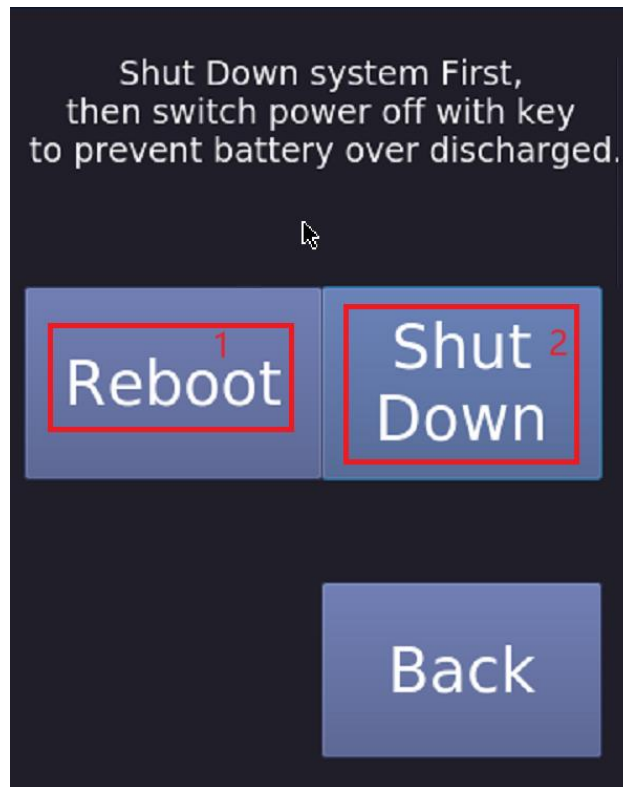

- 1) Reboot: Click to restart the system.
- 2) Shutdown: This function is used and as the first step when you want to switch off power of the reader. Therefore, shut down the system firstly, then switch off power with a power key promptly. (Please note that lacking the two steps could bring damage to the device.)

1.15 Main Interface/Config Interface/Extended Config

Interface

Click “Config” to bring up an Extended Config Interface on the right side

- 1) Open the application
- 2) Open Wi-Fi connection
- 3) Start the software
- 4) Terminate the software
- 5) Open the keyboard
- 6) Open the terminal
- 7) Open files stored in the device
- 8) Advanced network settings
- 9) Upgrade to the latest stable version
- 10) Upgrade to the latest testing version
- 11) Power off the device



2. Common Functions

2.1 Turn on/off the reader

Config/Machine/Passive system/Start or Stop

Config

2024长武半程马拉松

Event Id 2952 Machine Id U044

Position CP3|11468 Bat Life 68%

DataInWait 0 Tag Total 0

Local T. 16:38:42 Tag Diff 0

Passed T. --- Server Connected

Gun Time -----

CH1234 Stopped CH5678 Stopped

Gun Start Gun Reset Clear Display Display Channels Config

Release Mode / 3708 10m31s

cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431

This is a Feibot product
www.feibot.com
email: g@feibot.com

ip: 192.168.1.191
firmware: 40.14.3708=40.14
required lowest.

remote master version:
remote dev version:

16:28:30 data file upload successful
4/4

0

0

0

0

0

0

0

0

0

0

Machine

event

machine

about shut down

back Config

10m31s

cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431

U044

68%

0

0

Connected

Stopped

This is a Feibot product
www.feibot.com
email: g@feibot.com

ip: 192.168.1.191
firmware: 40.14.3708=40.14
required lowest.

remote master version:
remote dev version:

16:28:30 data file upload
4/4

Feibot

0 0

0 0

0 0

0 0

0 0


0 0

0 0


0 0

0 0

Passive system

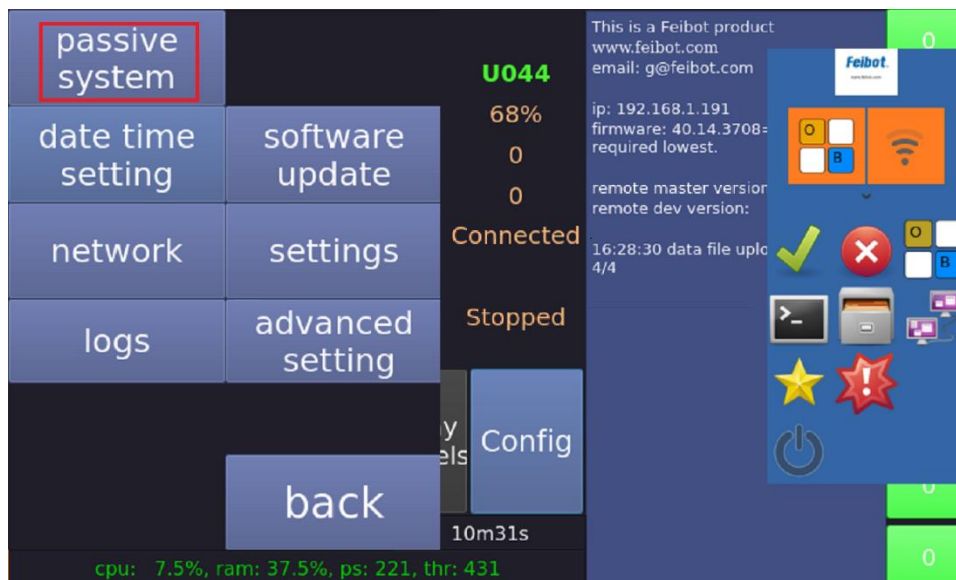


Click “Start” or “Stop” to turn on/off the reader

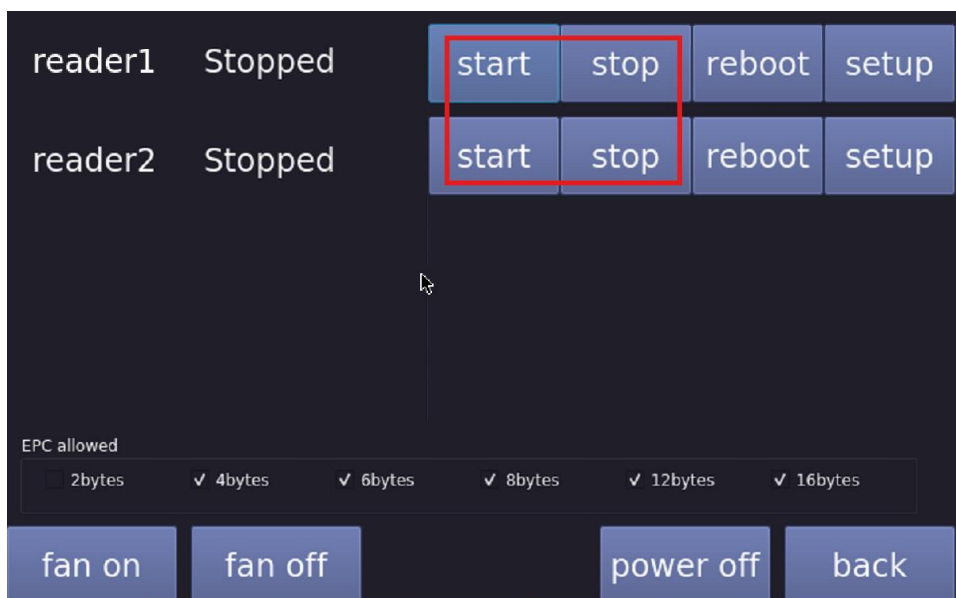


2.2 Set languages

Config/Machine/Advanced setting/Option: Language/value
/Set/Restart the system



Config

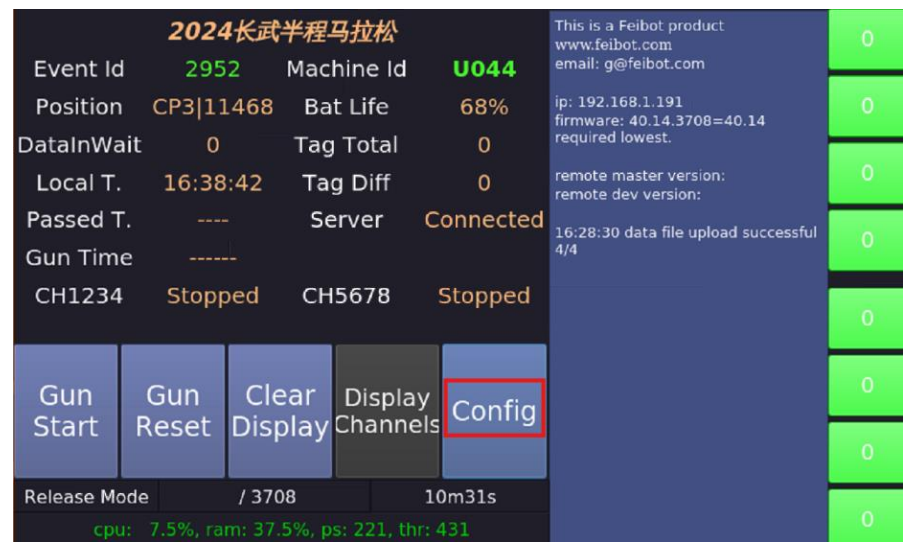

Machine

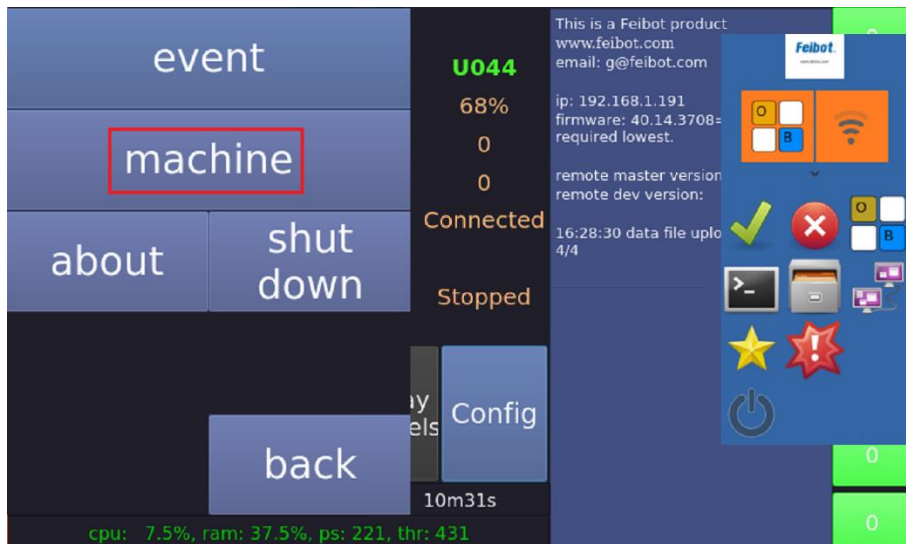


Advanced setting

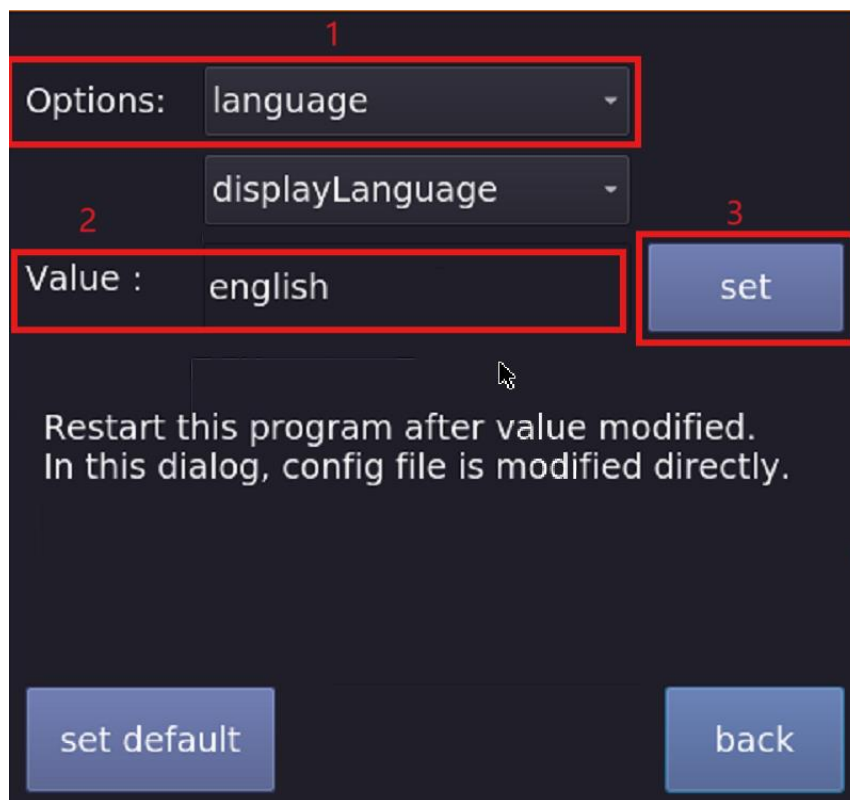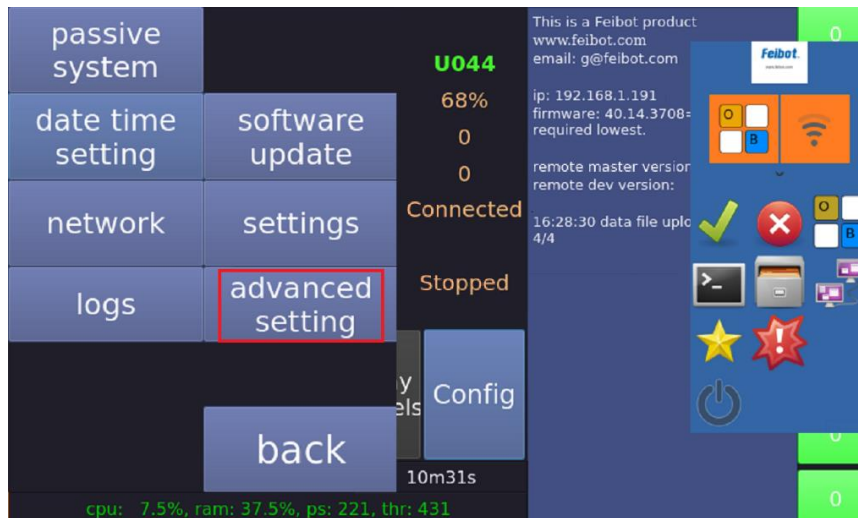

1. Choose language from the option dropdown menu.
2. Enter your language.
3. Click “set” to apply your settings.

Back to the previous page, then restart the system by clicking the two icons on the right side in sequence.


(Restarting the system is for the modifications to take effect)

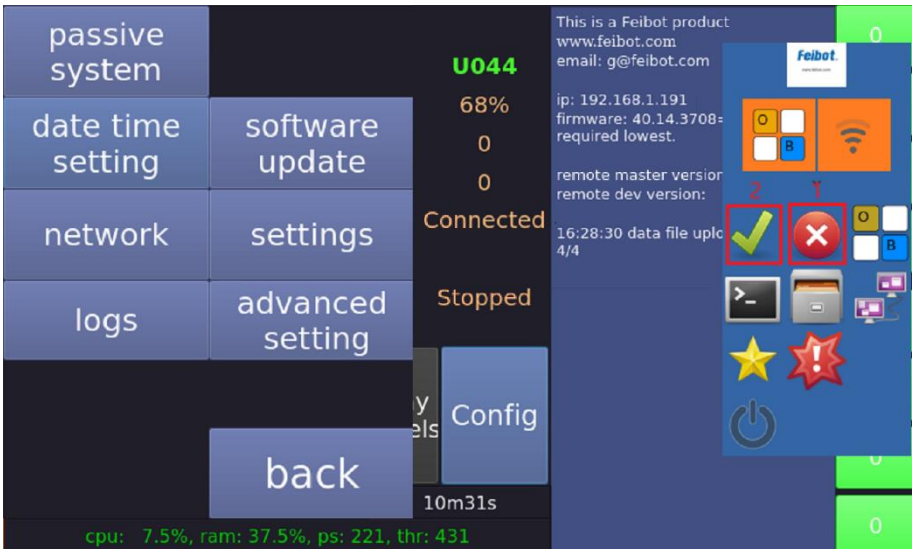


2.3 Set time zone

Config/Machine/Settings/Time zone/Set


Config

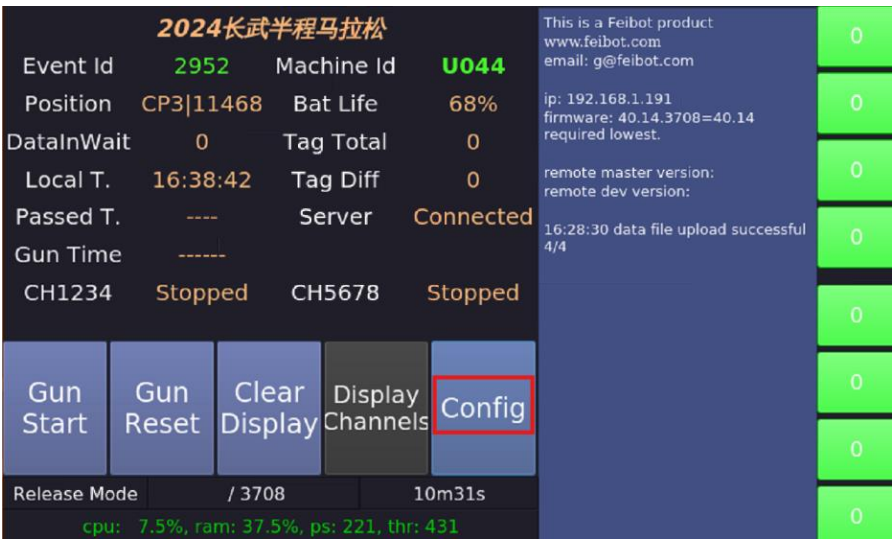


Machine

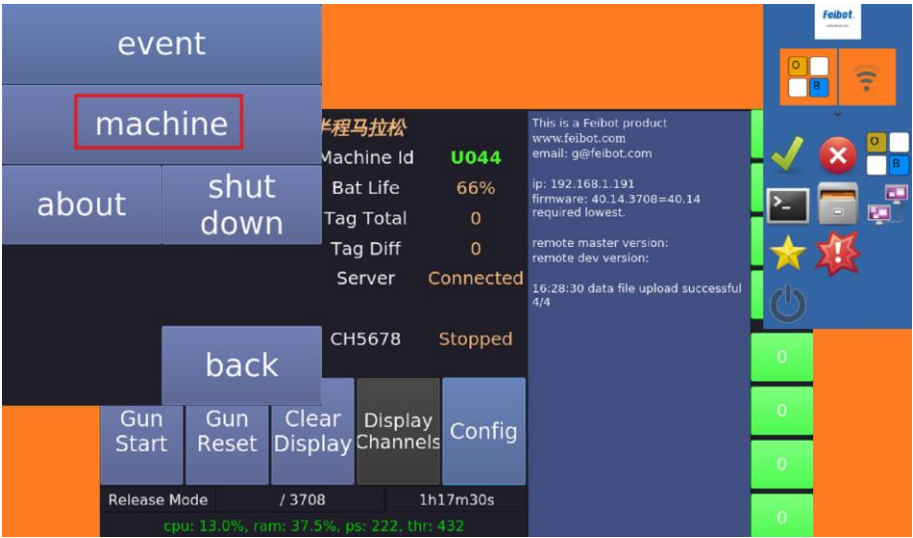

Settings

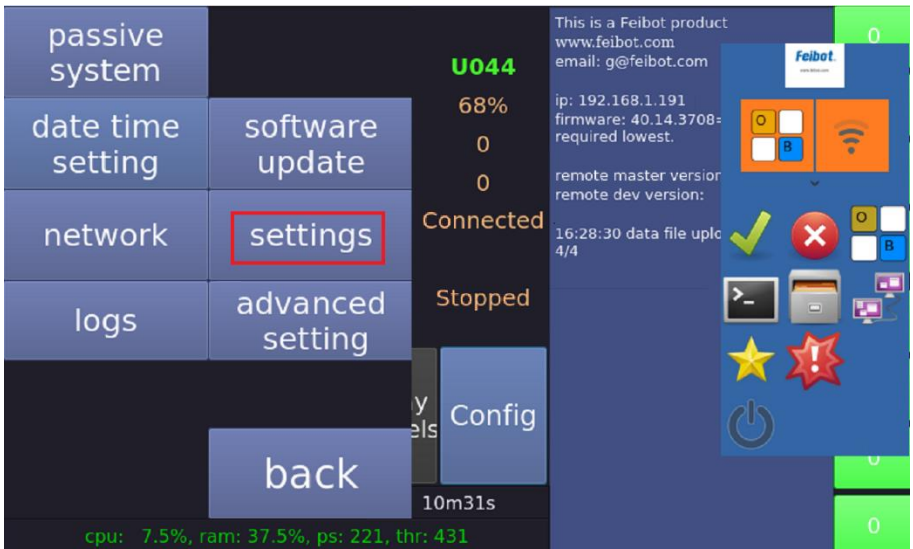

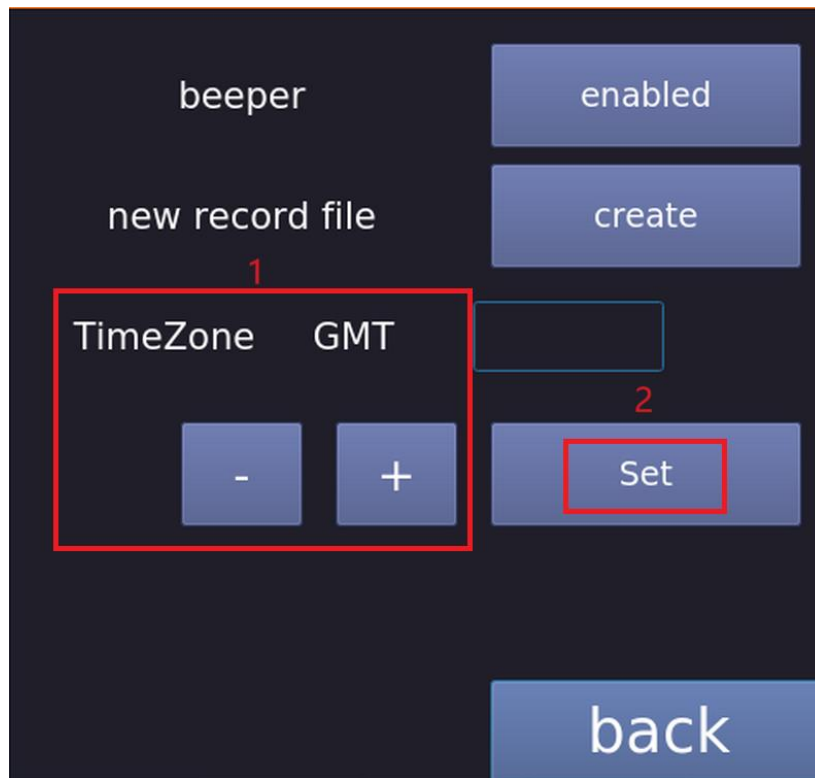

1. Click “+” or “-” buttons to set the time zone.
2. Click “Set” to apply your settings.

2.4 Time setting

Config/Machine/Date time setting/A. Modify time or B. Set Linux time or C. Wireless time set or D. Change Linux time

Config

2024长武半程马拉松

Event Id	2952	Machine Id	U044
Position	CP3 11468	Bat Life	68%
DataInWait	0	Tag Total	0
Local T.	16:38:42	Tag Diff	0
Passed T.	----	Server	Connected
Gun Time	-----		
CH1234	Stopped	CH5678	Stopped

Release Mode / 3708 10m31s
cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431

This is a Feibot product
www.feibot.com
email: g@feibot.com
ip: 192.168.1.191
firmware: 40.14.3708=40.14 required lowest.
remote master version:
remote dev version:
16:28:30 data file upload successful 4/4

Buttons: Gun Start, Gun Reset, Clear Display, Display Channels, **Config**

Machine

半程马拉松


Machine Id	U044
Bat Life	66%
Tag Total	0
Tag Diff	0
Server	Connected
CH5678	Stopped

Release Mode / 3708 1h17m30s
cpu: 13.0%, ram: 37.5%, ps: 222, thr: 432

This is a Feibot product
www.feibot.com
email: g@feibot.com
ip: 192.168.1.191
firmware: 40.14.3708=40.14 required lowest.
remote master version:
remote dev version:
16:28:30 data file upload successful 4/4

Buttons: event, machine, about, shut down, back, Gun Start, Gun Reset, Clear Display, Display Channels, Config

Date time setting

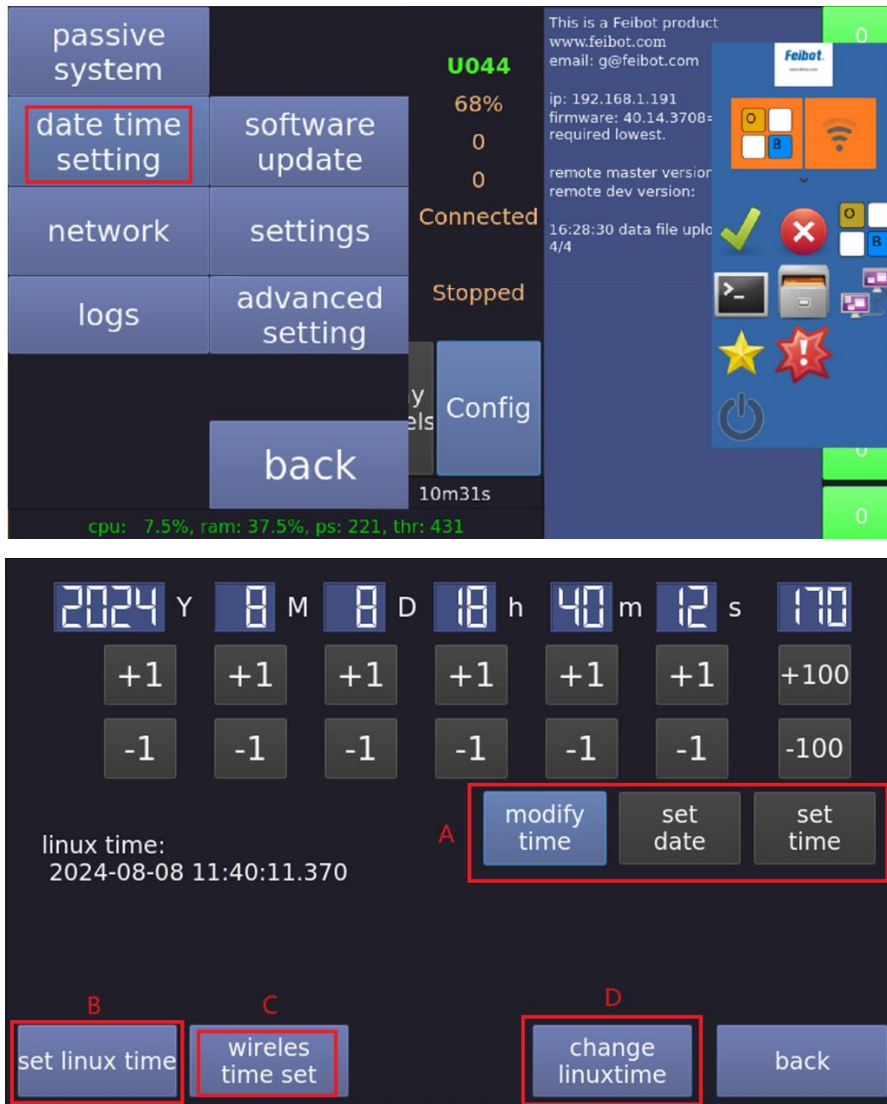

- A. Click “modify time” to open time setting function, then click “+” or “-” buttons to adjust date and time. Click “set date” or “set time” to apply your settings.
- B. Click “set Linux time” to set the time displayed on the interface to match Linux/network time. (If you want to set network time, please set time zone firstly, next set Linux time.)
- C. Click “wireless time set” to synchronize nearby devices with the current time of this device.

D. Click “change Linux time” to synchronize Linux time with the time you manually adjusted above.

2.5 Network setting

Config/Machine/Network/Protocol/Local IP and listening port

Config

2024长武半程马拉松

Event Id 2952 Machine Id U044

Position CP3|11468 Bat Life 68%

DataInWait 0 Tag Total 0

Local T. 16:38:42 Tag Diff 0

Passed T. ---- Server Connected

Gun Time -----

CH1234 Stopped CH5678 Stopped

Gun Start Gun Reset Clear Display Channels Config

Release Mode / 3708 10m31s

cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431

This is a Feibot product
www.feibot.com
email: g@feibot.com

ip: 192.168.1.191
firmware: 40.14.3708=40.14
required lowest.

remote master version:
remote dev version:

16:28:30 data file upload successful
4/4

0

0

0

0

0

0

0

0

0

0

Machine

event

machine

about shut down

back Config

10m31s

cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431

U044

68%

0

0

Connected

Stopped

This is a Feibot product
www.feibot.com
email: g@feibot.com

ip: 192.168.1.191
firmware: 40.14.3708=
required lowest.



remote master version
remote dev version:

16:28:30 data file uplo
4/4

0

0

Network

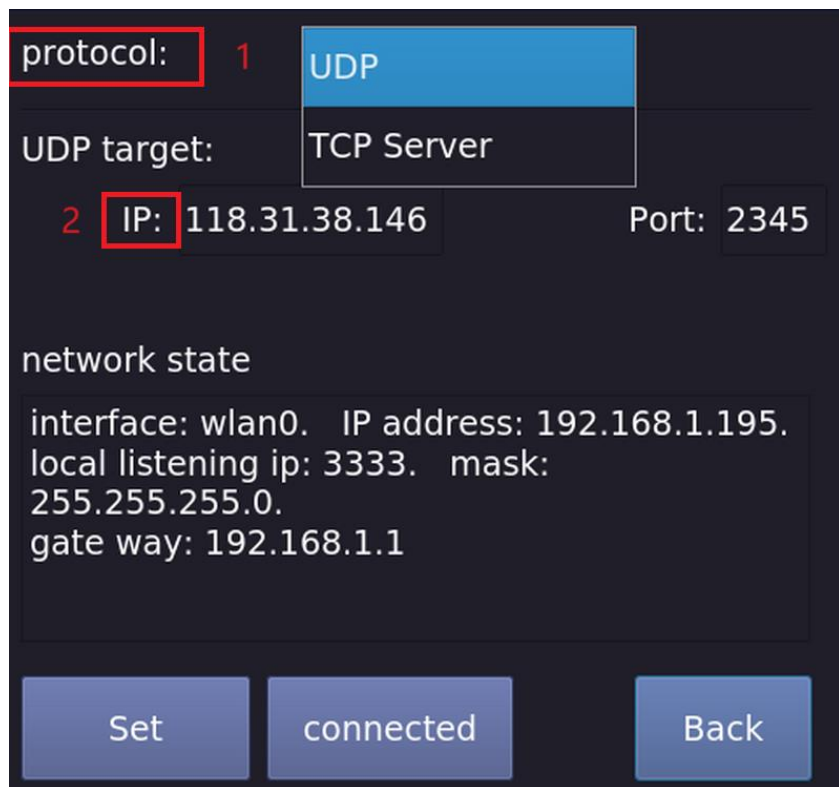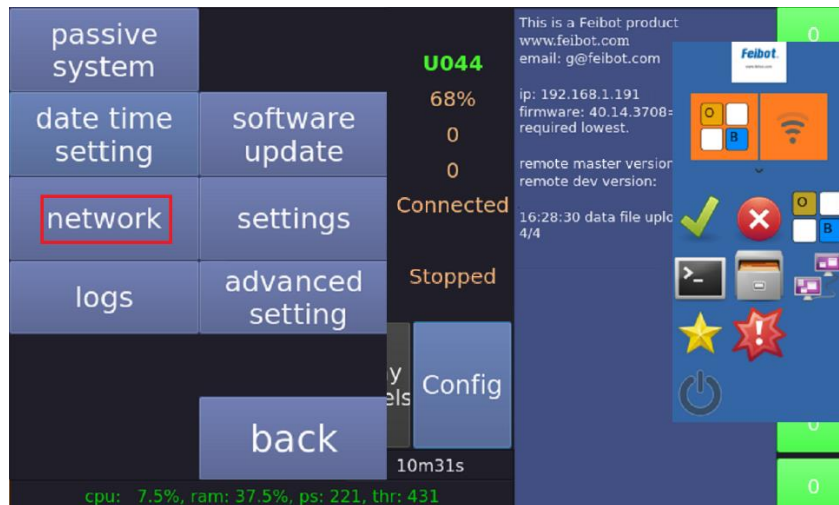

1. Choose the network protocol: UDP or TCP from the dropdown menu.
2. Enter the local IP address and port number.

2.6 Adjust power


Config/Machine/Passive system/Setup/Reader power/Set
power

Config

Machine

The screenshot displays the FeiBot web interface. The top navigation bar includes 'event', 'machine' (highlighted with a red box), and 'shut down'. The main content area is divided into two columns. The left column shows system information: 'Machine Id' (U044), 'Bat Life' (66%), 'Tag Total' (0), 'Tag Diff' (0), 'Server' (Connected), and 'CH5678' (Stopped). The right column displays product information: 'This is a FeiBot product', 'www.feibot.com', 'email: g@feibot.com', 'ip: 192.168.1.191', 'firmware: 40.14.3708=40.14 required lowest', 'remote master version:', 'remote dev version:', and '16:28:30 data file upload successful 4/4'. At the bottom, there are buttons for 'Gun Start', 'Gun Reset', 'Clear Display', 'Display Channels', and 'Config'. The status bar at the very bottom shows 'Release Mode / 3708 1h17m30s' and system resources: 'cpu: 13.0%, ram: 37.5%, ps: 222, thr: 432'. On the right side, there is a vertical toolbar with icons for a checkmark, a red X, a terminal, a folder, a star, a red exclamation mark, a power button, and a series of green buttons with the number 0.

Passive system

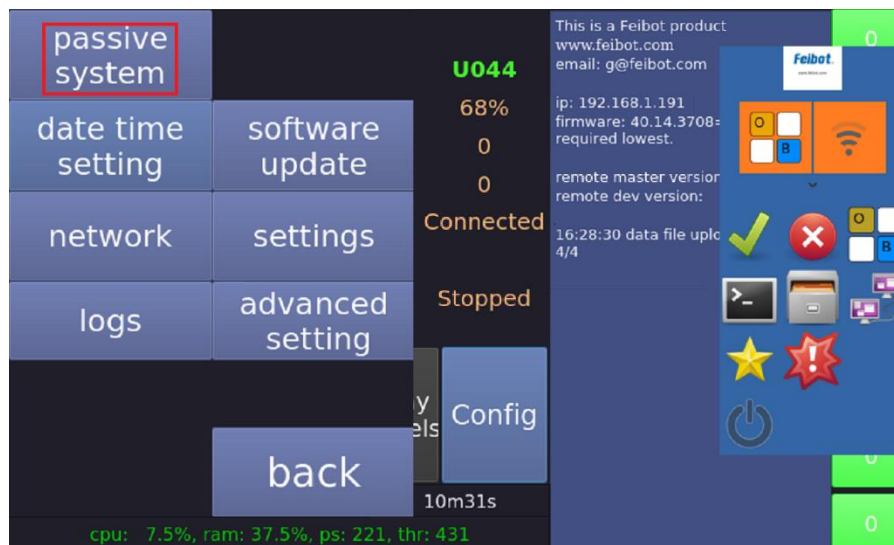

Setup




1. Set reader power by clicking “+” and “-” buttons.
2. Click “set power” to apply your settings.

2.7 Set frequency


Config/Machine/Passive system/Setup/ Working band/Set band

Config

Machine

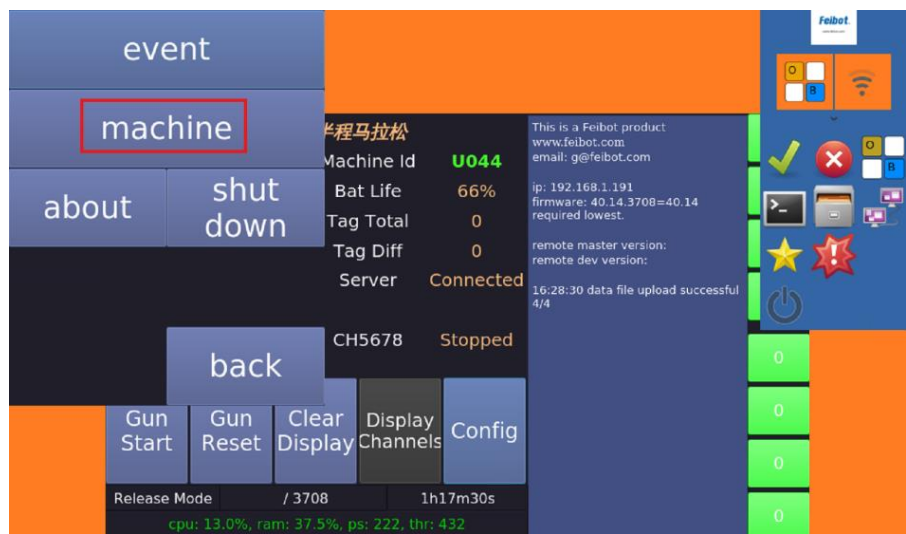

Passive system

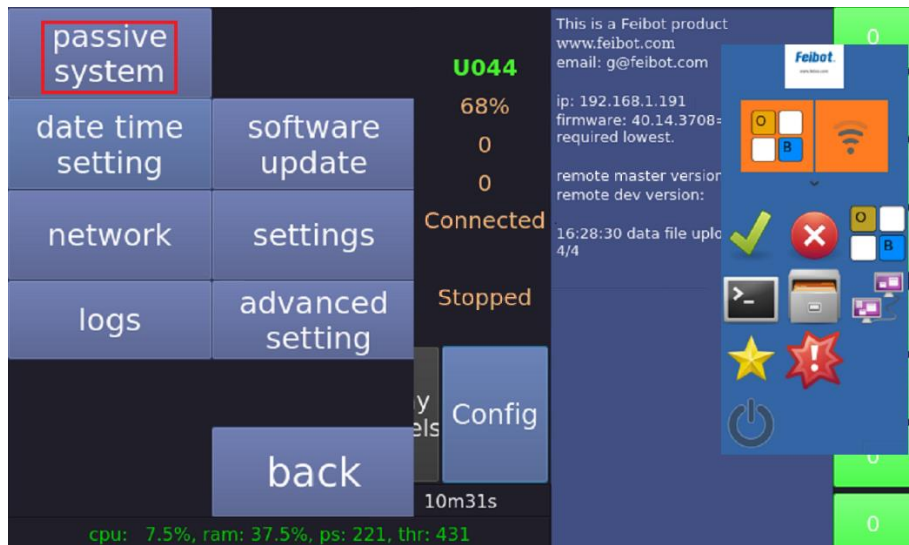

Setup

The screenshot displays a 'Setup' interface with two main sections. The top section shows two readers, 'reader1' and 'reader2', both in a 'Stopped' state. For each reader, there are four buttons: 'start', 'stop', 'reboot', and 'setup'. The 'setup' buttons for both readers are highlighted with a red rectangle. Below this, there is a section for 'EPC allowed' with radio button options for 2bytes, 4bytes, 6bytes, 8bytes, 12bytes, and 16bytes. At the bottom of this section are buttons for 'fan on', 'fan off', 'power off', and 'back'. The bottom section of the interface is for configuring a specific reader. It shows 'reader power (dbm):' set to 33, with '+' and '-' buttons for adjustment, and 'set power' and 'read power' buttons. Below this, the 'working band:' is set to 'CHN:920~925MHz' in a dropdown menu, with 'set band' and 'read band' buttons. The 'reader type:' is set to 'D, white reader' in a dropdown menu, with 'set type' and 'read type' buttons. A timestamp '19:12:22: Read reader 1&2 band' is displayed, and a 'back' button is at the bottom right.

reader1	Stopped	start	stop	reboot	setup
reader2	Stopped	start	stop	reboot	setup

EPC allowed

☐ 2bytes ☒ 4bytes ☒ 6bytes ☒ 8bytes ☒ 12bytes ☒ 16bytes

fan on fan off power off back

reader power (dbm): 33 + - set power read power

working band: CHN:920~925MHz set band read band

reader type: D, white reader set type read type

19:12:22: Read reader 1&2 band


back

1. Select the working band from the dropdown menu, which should match the regulatory standards of the region you are operating in.
2. Click “set band” to apply your settings.

2.8 Connect to WIFI

Config/WIFI icon

Config

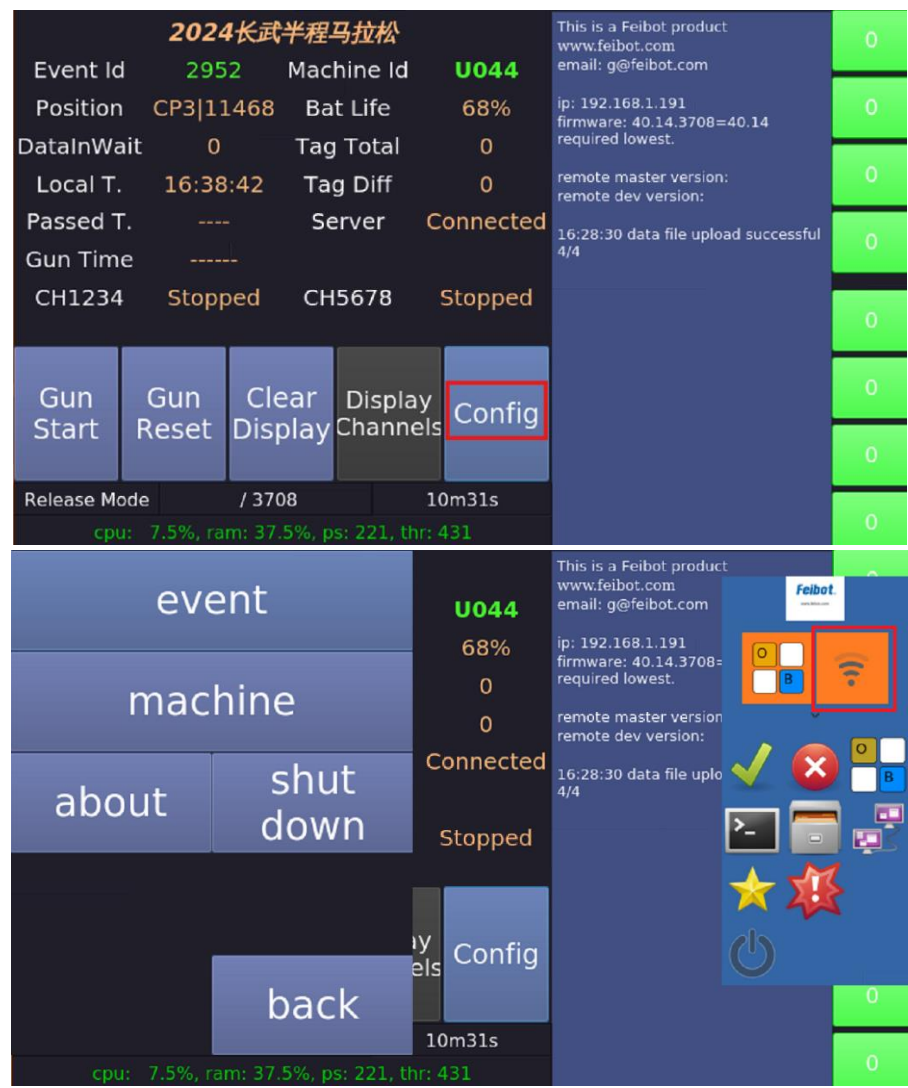


Click WIFI icon on the right interface and choose the network you want to connect to.


2.9 Download race config file

Config/Event/Download config file.

Config

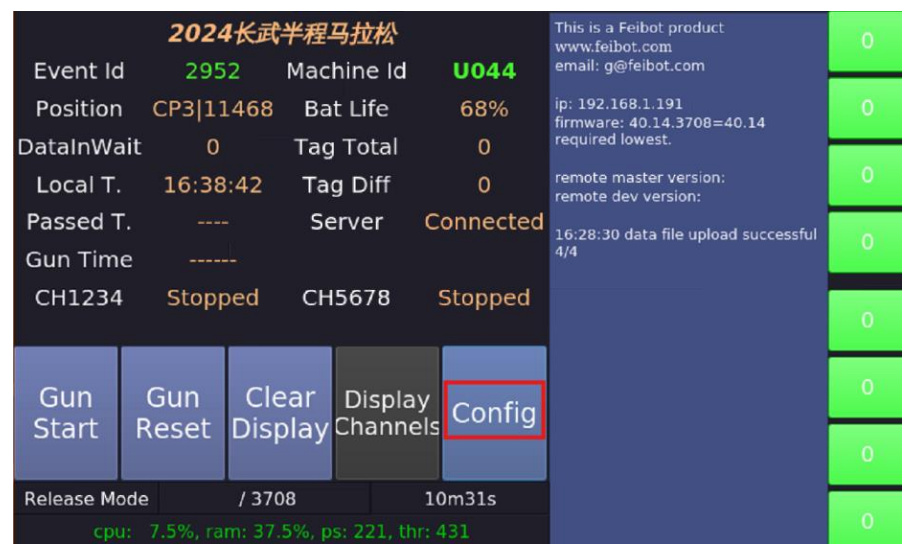

Event

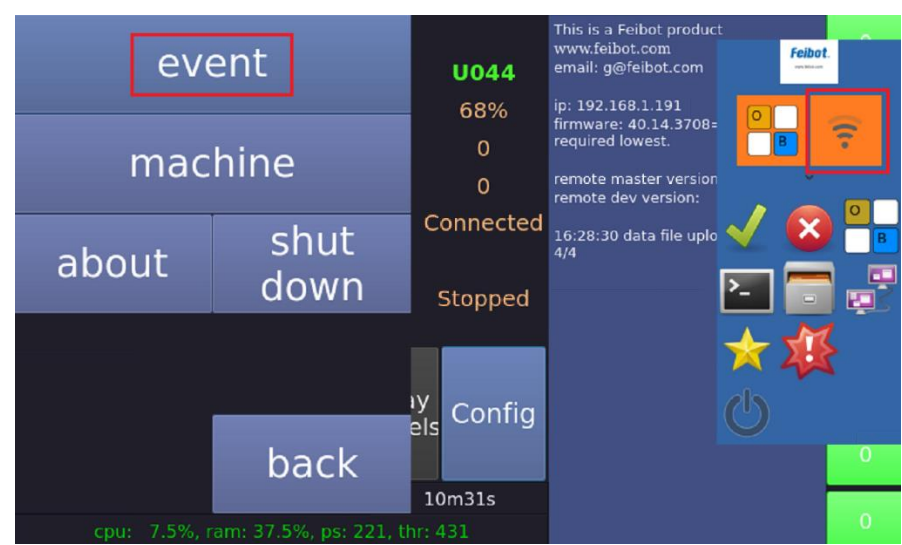

Event Id	2952
Event Name	2024长武半程马拉松
machine Pos.	CP3 11468
Config File	/home/feibot/platform/configFiles/ec_2952.ecg
Record File	/home/feibot/data/U044_2952

export all data

Read config file from disk

export event data

download config file

upload all data files

back

Download config file (After successfully downloading config file, you will see the updated race info above.)

2.10 Beep sound control

Config/Machine/Settings/Beeper: enable or disable

Config

2024长武半程马拉松				This is a Feibot product www.feibot.com email: g@feibot.com		0
Event Id	2952	Machine Id	U044	ip: 192.168.1.191		0
Position	CP3 11468	Bat Life	68%	firmware: 40.14.3708=40.14 required lowest.		0
DataInWait	0	Tag Total	0	remote master version:		0
Local T.	16:38:42	Tag Diff	0	remote dev version:		0
Passed T.	----	Server	Connected	16:28:30 data file upload successful 4/4		0
Gun Time	-----					0
CH1234	Stopped	CH5678	Stopped			0

Gun Start

Gun Reset

Clear Display

Display Channels

Config


Release Mode

/ 3708


10m31s

cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431


Machine

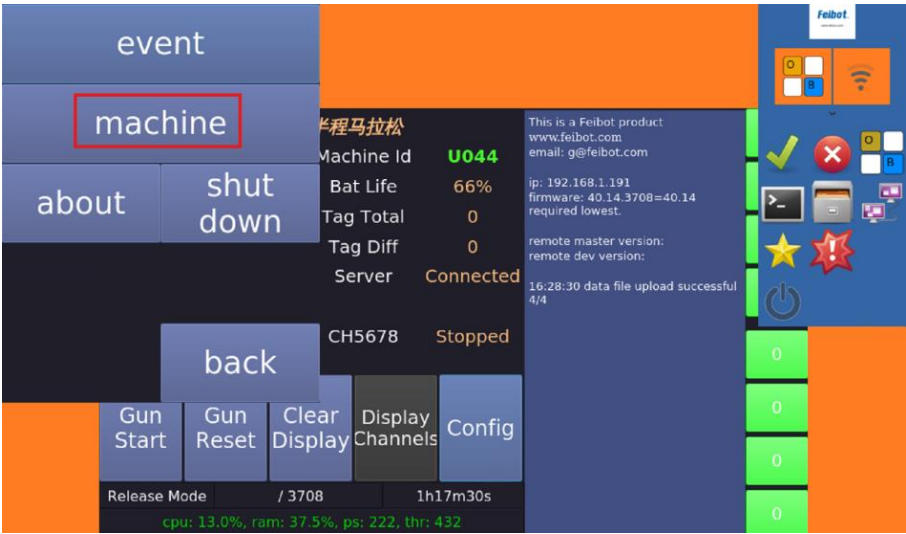

Settings

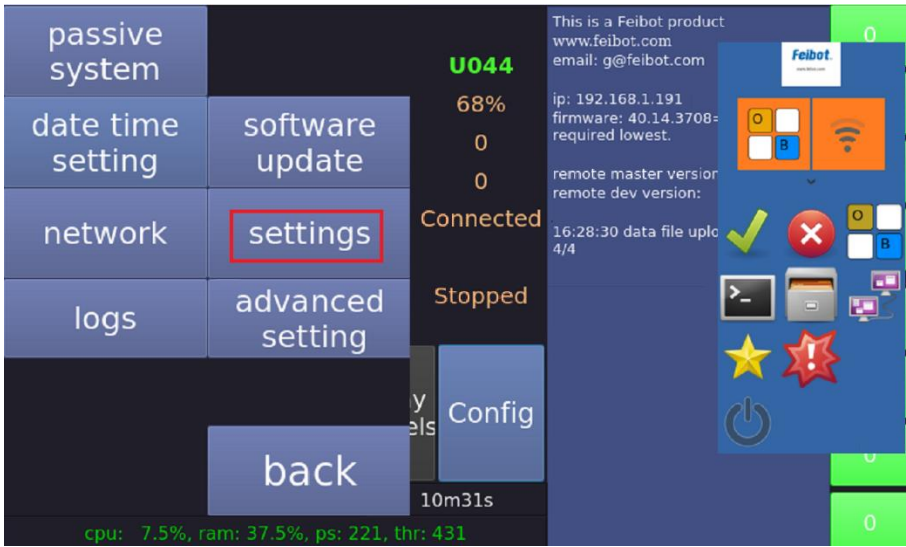

Click “enable” or “disable” to control the beep sound

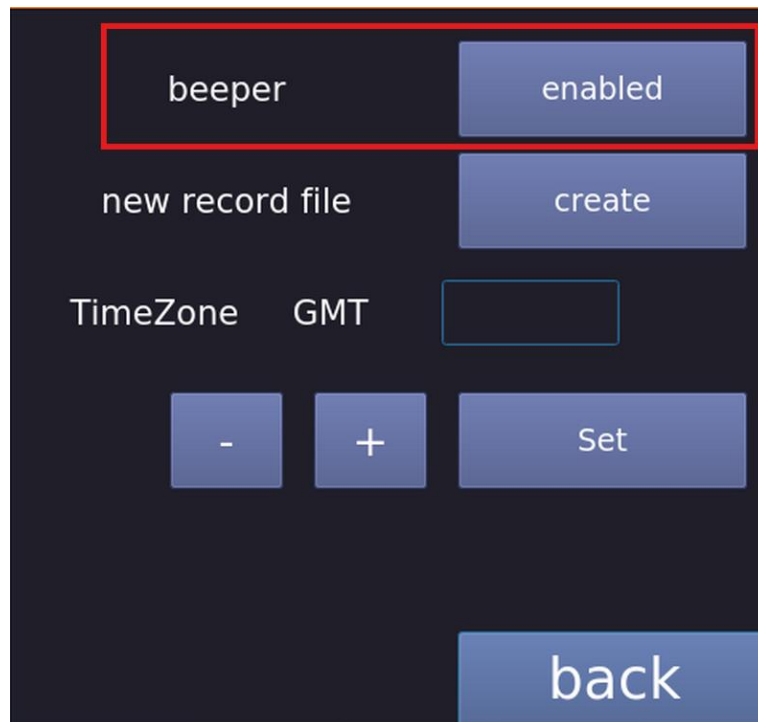


2.11 Keyboard

Config/keyboard icon

Config

2024长武半程马拉松				This is a Feibot product www.feibot.com email: g@feibot.com		0
Event Id	2952	Machine Id	U044	ip: 192.168.1.191 firmware: 40.14.3708=40.14 required lowest.		0
Position	CP3 11468	Bat Life	68%	remote master version: remote dev version:		0
DataInWait	0	Tag Total	0	16:28:30 data file upload successful 4/4		0
Local T.	16:38:42	Tag Diff	0			0
Passed T.	----	Server	Connected			0
Gun Time	-----					0
CH1234	Stopped	CH5678	Stopped			0
Gun Start	Gun Reset	Clear Display	Display Channels	Config	0	
Release Mode		/ 3708	10m31s			0
cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431						0

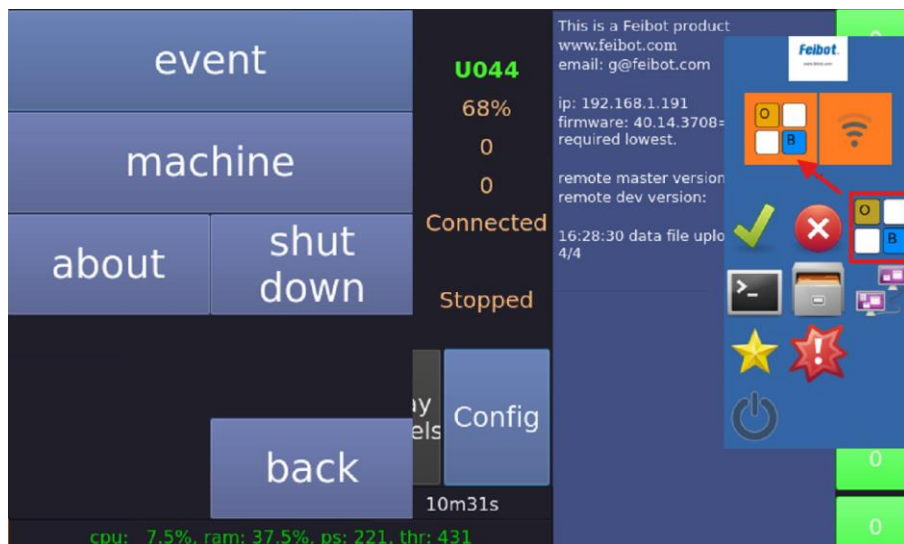

Click keyboard icon in the red box to bring up a same icon at the top, then click the one at the top to start using the keyboard.


2.12 Change server address

Config/Machine/Advanced setting /Options:
server/Value/Set/Restart the system


Config



Machine

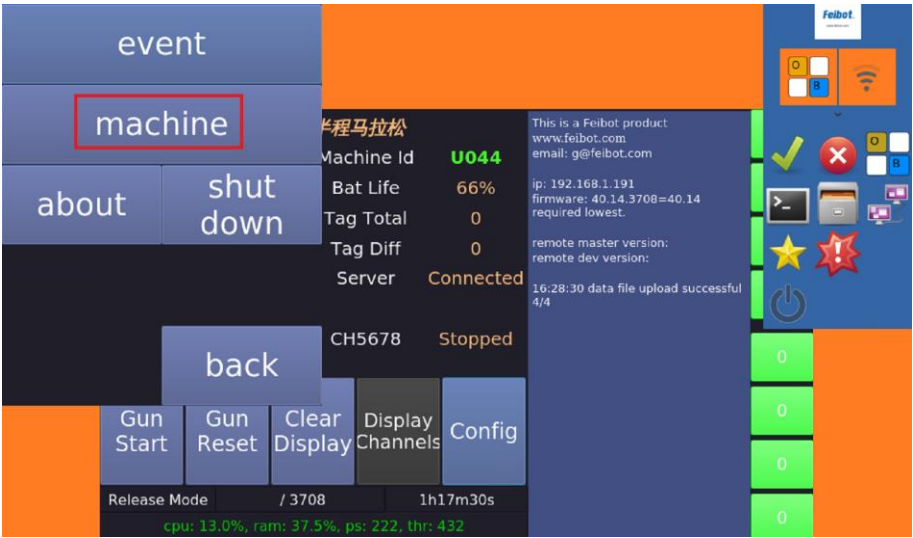


Advanced setting

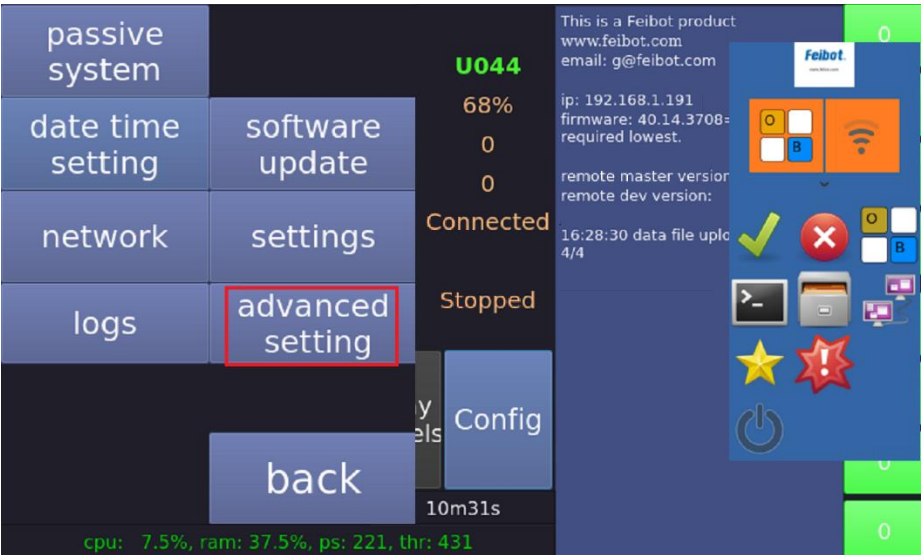


2.13 View files


Config/File icon

Config

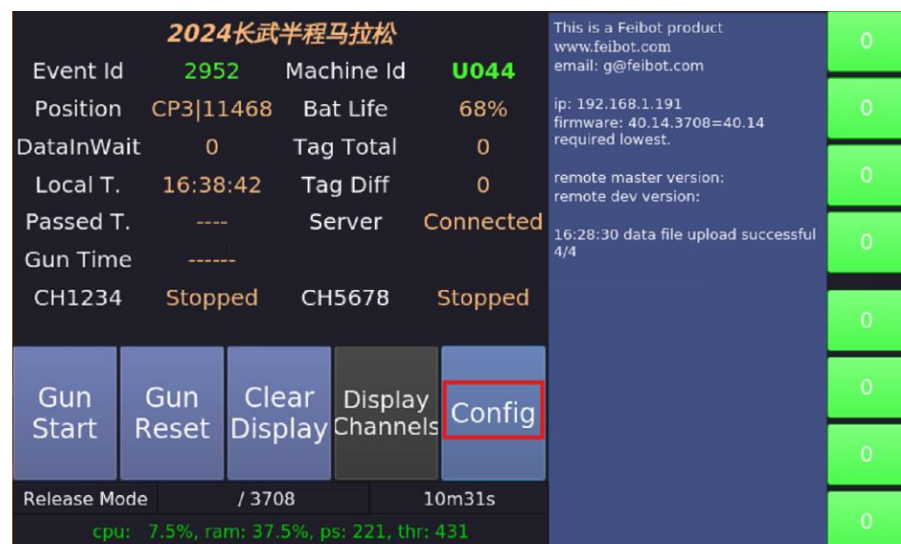

Click File icon to check the file stored in the device

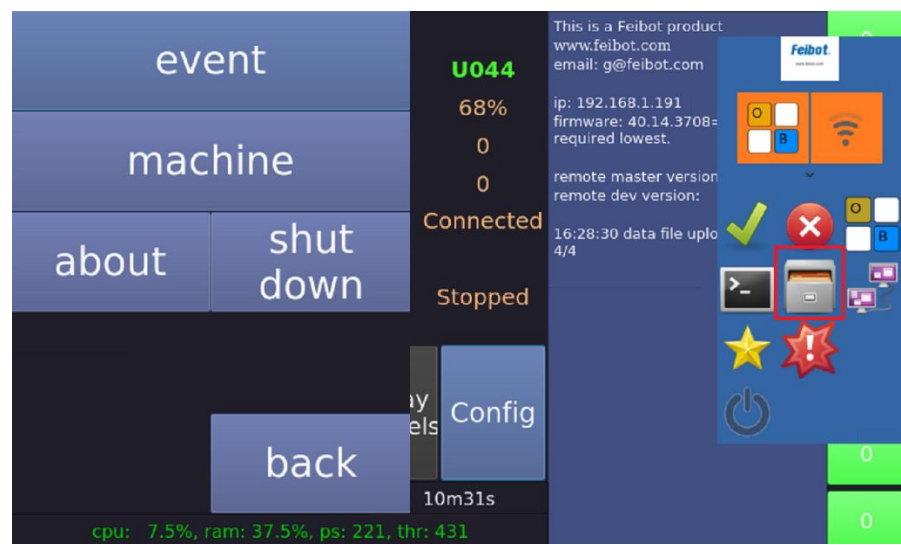

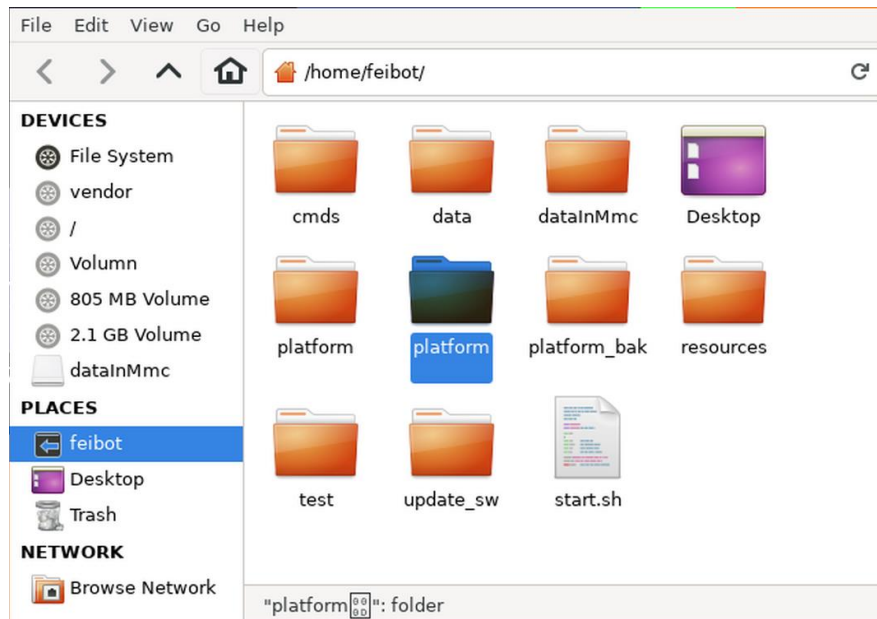

2.14 Firmware update


Config/Machine/Software update/Select firmware/program

firmware/Restart the system


Config


2024长武半程马拉松				This is a Feibot product www.feibot.com email: g@feibot.com	
Event Id	2952	Machine Id	U044	ip: 192.168.1.191	0
Position	CP3 11468	Bat Life	68%	firmware: 40.14.3708=40.14 required lowest.	0
DataInWait	0	Tag Total	0	remote master version:	0
Local T.	16:38:42	Tag Diff	0	remote dev version:	0
Passed T.	----	Server	Connected	16:28:30 data file upload successful 4/4	0
Gun Time	-----				0
CH1234	Stopped	CH5678	Stopped		0
Gun Start	Gun Reset	Clear Display	Display Channels	Config	0
Release Mode	/ 3708	10m31s			0
cpu: 7.5%, ram: 37.5%, ps: 221, thr: 431					0

Machine

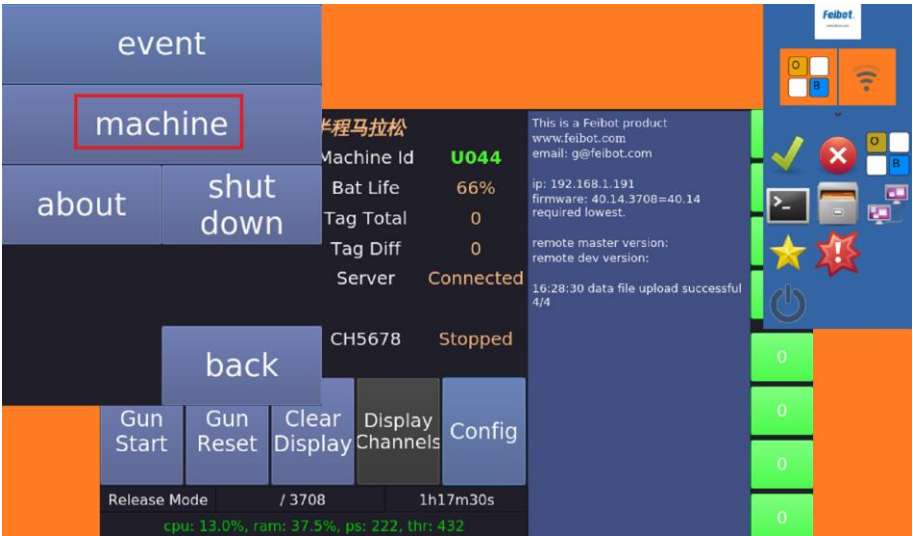


Software update

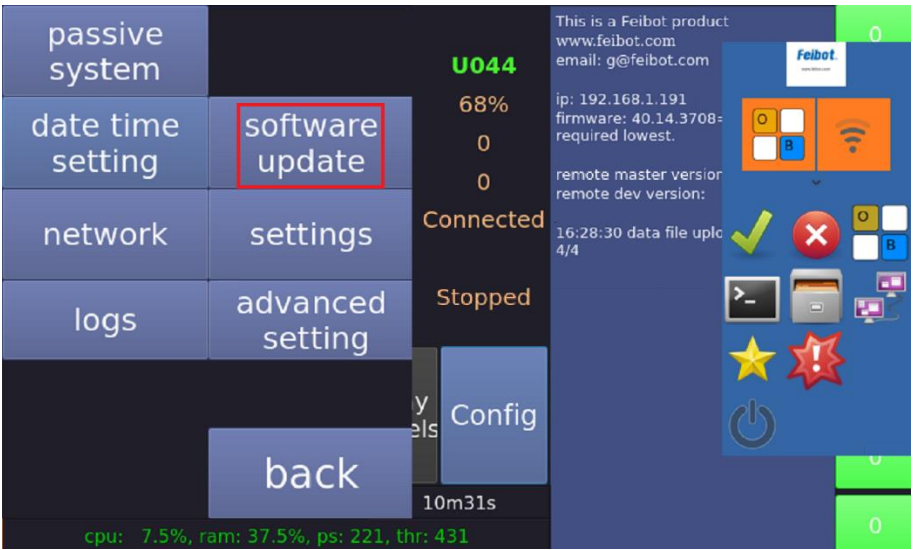

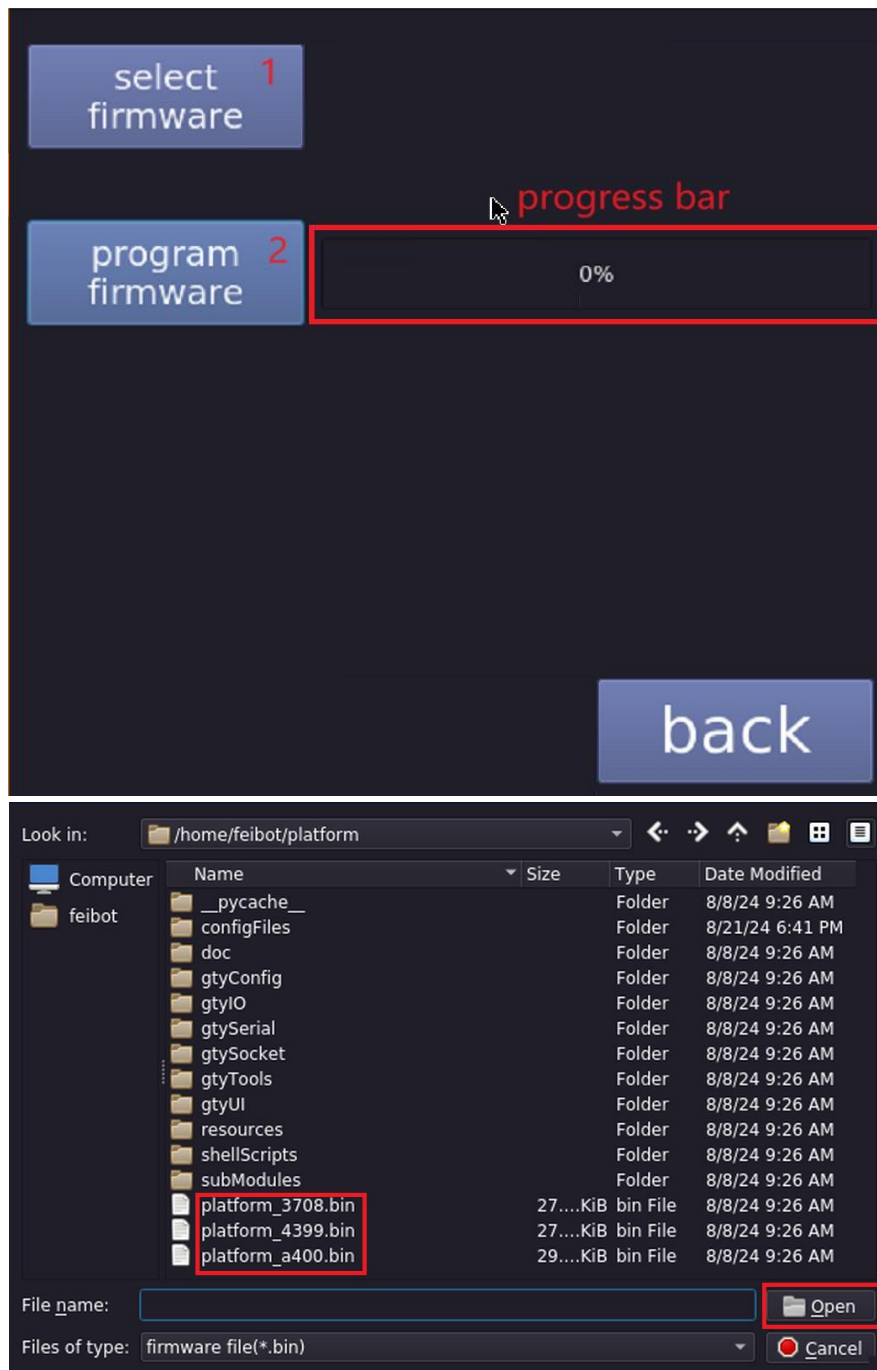

1. Click "select firmware" to select the firmware to be upgraded from the file list, then click "open".
2. Click "program firmware" to apply the firmware and wait for the progress bar to reach 100%. Then restart the system.

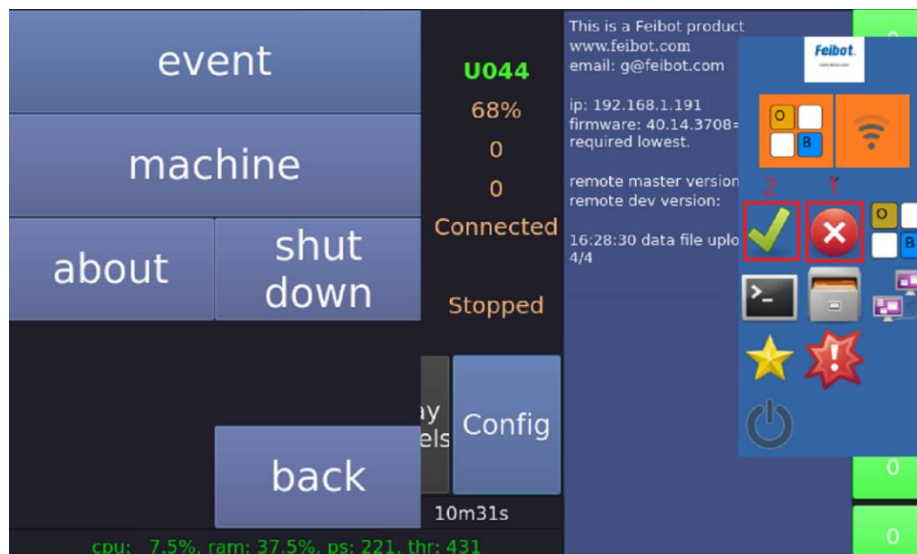


2.15 Software upgrade

Config/About/Debug mode/Software upgrade icon/Upgrade


Config




About

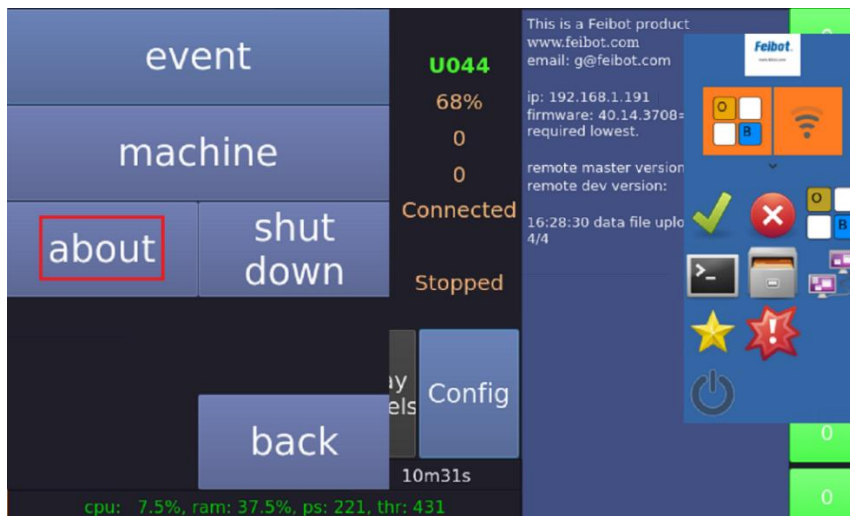

Debug mode

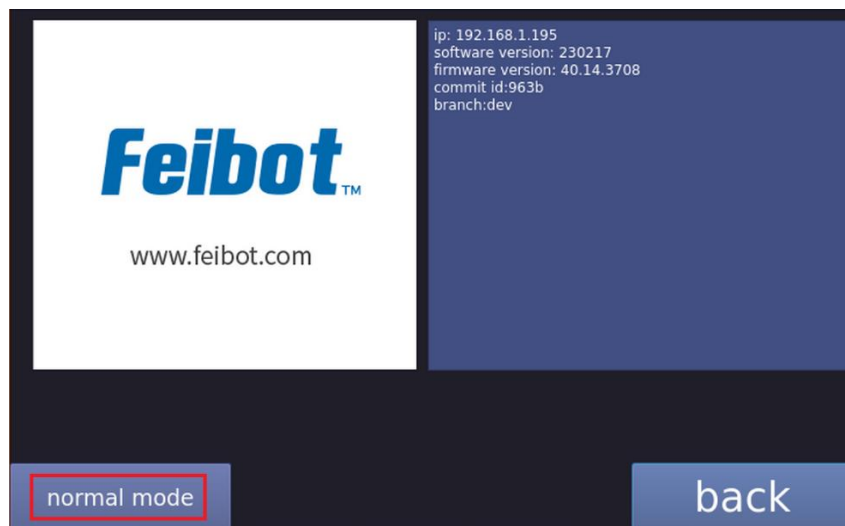

Back to the previous page and click the icon circled

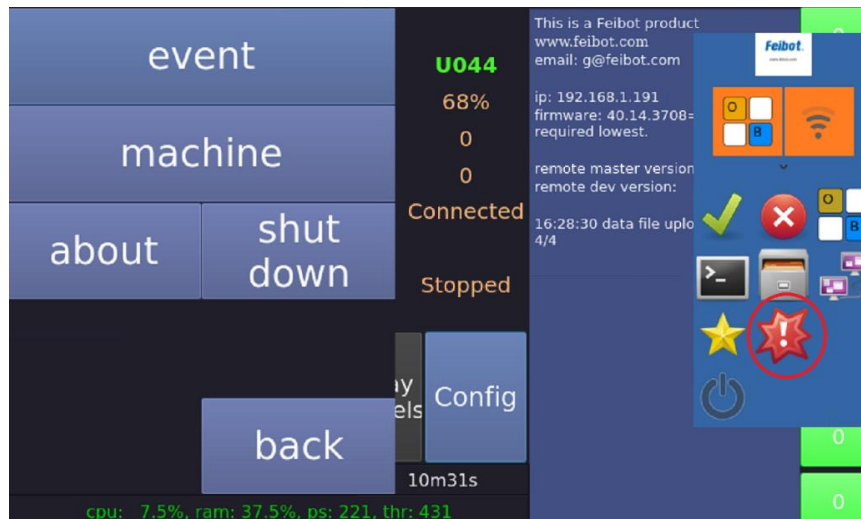

Click “upgrade” to upgrade the software to the latest version

