STANDARD OPERATING PROCEDURES

OFP C172 FR

Flight Planning Application
User Manual

DOCUMENT	OFP-SOP – Application User Manual
REVISION	Rev. 2 – DRAFT for review (figures updated to the 2026 interface)
DATE	09 OCT 2026
AIRCRAFT	Reims Cessna “Reims Rocket” – I-CCAF (FR172J), I-CCAB (FR172H)
OPERATIONS	VFR flight planning
OUTPUTS	Operational Flight Plan (OFP, A4) · NAV-FLIGHTPLAN (A5)

> This manual describes how to operate the application. It does not replace the Aircraft Flight Manual, the Operations Manual or the flight school SOPs. The documents produced are an aid to planning: responsibility for the flight remains with the Pilot in Command.

Contents

Conventions 3

Abbreviations 3

SECTION 1 General 5

1.1 Purpose 5

1.2 Scope and applicability 5

1.3 System overview 5

1.4 Data sources 5

1.5 Responsibilities 5

1.6 Data storage 6

SECTION 2 Data Ingestion – Import Page 7

2.1 Pre-requisites 7

2.2 Procedure 7

SECTION 3 Pre-flight Data Entry – Wizard 9

3.0 Wizard navigation 9

3.1 Step 1 – Flight & Aircraft 9

3.2 Step 2 – Route & Fuel 11

3.3 Step 3 – Mass & Balance 14

3.4 Step 4 – Performance 15

3.5 Step 5 – Navlog 17

3.6 Step 6 – Destination Charts 18

3.7 Step 7 – Briefing 18

3.8 Step 8 – NOTAM & Weather 20

SECTION 4 System Outputs & Dispatch 22

4.1 Menu 22

4.2 Operational Flight Plan (A4) 22

4.3 NAV-FLIGHTPLAN (A5) 26

4.4 Dashboard – Saved flights 29

SECTION 5 Operational Notes – Safety & Performance Limits 31

5.1 Aircraft applicability 31

5.2 Performance limits 31

5.3 Fuel planning as implemented 31

5.4 Navigation data 31

5.5 Daylight check 32

5.6 Documents and storage 32

APPENDIX A Pre-Departure Cross-Check 33

Conventions

PROCEDURE VERBS

LOAD	Upload a file (drag and drop or tap the drop zone).
INPUT	Type a value.
SELECT	Choose from a list, tab, tick box or menu.
VERIFY	Check that a value filled in by the application is present and plausible.
CROSS-CHECK	Compare a value with an independent source (AIP, AFM, briefing, ForeFlight).
CORRECT	Overwrite a value filled in by the application.
REVIEW	Read every message shown and act on each one.

FIELD CLASSIFICATION

M MANDATORY	Pilot input required. Without it the related output is missing or wrong.
A AUTO	Imported or computed by the application. Editable unless shown greyed out. Must be VERIFIED.
O OPTIONAL	Not required for a valid output.

The application does not block progress on empty fields. The classification above is the operating standard of this manual, not a software lock.

FIGURES AND CALLOUTS

Figures are taken from the application in the light theme, with a real flight (LILN – T&G LILE – LILN, alternate LIMF). Lettered markers **A** **B** … identify the elements described in the legend under each figure and in the procedure that cites it. The figure button ⤢ enlarges a figure on screen.

NOTES, CAUTIONS AND WARNINGS

WARNING
Could affect the safety of the flight if ignored.

CAUTION
Could produce a wrong or incomplete document.

NOTE
Additional information.

ABBREVIATIONS

AFM	Aircraft Flight Manual	**AIP**	Aeronautical Information Publication
ALTN	Alternate aerodrome	**ARR / DEST**	Arrival / destination aerodrome
ATO	Actual time over	**BEW**	Basic empty weight
CG	Centre of gravity	**C/S**	Callsign
DA / PA	Density / pressure altitude	**DEP**	Departure aerodrome
ECT	End of evening civil twilight	**EET**	Estimated elapsed time (leg)
ETO	Estimated time over	**FF**	Fuel flow
FOB	Fuel on board	**GS**	Ground speed
LDA	Landing distance available	**MAP**	Manifold pressure
MLAW / MTOW	Maximum landing / take-off weight	**OFP**	Operational flight plan

PIC	Pilot in command	**POB**	Persons on board
POH	Pilot's Operating Handbook	**SR / SS**	Sunrise / sunset
T&G	Touch and go	**TAS**	True airspeed
TEM	Threat and error management	**TOC**	Top of climb
TODA / TORA	Take-off distance / run available	**TOW**	Take-off weight
UTC	Coordinated universal time	**ZFW**	Zero fuel weight

SECTION 1 General


1.1 Purpose

The application converts the route prepared in ForeFlight and the weather briefing into the two documents carried in flight: the **Operational Flight Plan (OFP)** and the **NAV-FLIGHTPLAN**. All performance, fuel and mass figures are computed from the AFM of the selected aircraft; every intermediate result is shown so that it can be checked.

1.2 Scope and applicability

- Aircraft: Reims Cessna "Reims Rocket", Continental IO-360-D: **I-CCAF** (FR172J, AFM Edition 3) and **I-CCAB** (FR172H, AFM Edition 2). The two AFMs differ only in VR, VY, stall speeds and VA: the application uses those of the aircraft selected in Step 1.
- Operations: VFR flight planning. Final reserve is selectable for VFR (30 min) or IFR (45 min).
- Units: fuel in **litres**, fuel flow in **L/h**, speeds in **MPH** (as in the AFM), distances in **NM**, times in **UTC**.

1.3 System overview

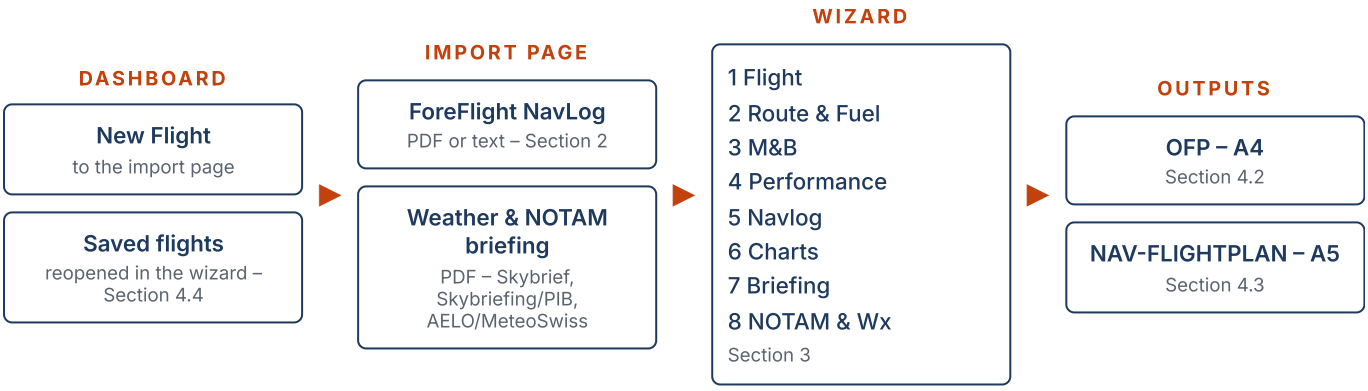

1.4 Data sources

DATA	SOURCE
Cruise power, TAS, fuel flow	AFM fig. 5-1, interpolated between 2500 / 5000 / 7500 / 10000 / 15000 ft
Climb time, fuel (incl. start-up and take-off)	AFM fig. 5-6, 1157 kg; climb distance derived from the same data
Take-off / landing distances	AFM fig. 5-4 / 5-5
Basic empty weight, moments, arms	Flying club W. & B. Loading Form (Rev. 17)
Aerodrome position, elevation, runways, frequencies	OurAirports database (physical runway length only)
Route, checkpoints, tracks, distances	ForeFlight NavLog
METAR, SPECI, TAF, NOTAM, SIGMET/AIRMET, charts	Weather briefing PDF

1.5 Responsibilities

The PIC is responsible for the correctness of every input, for every cross-check required by this manual, and for the decision to fly. The application does not navigate, does not decide and does not replace the AFM or the AIP.

1.6 Data storage

Access is restricted: accounts are created by the administrator (Section 2.1). Flights are stored only when the pilot uses **Save to Standby** (Section 4.4). They are saved to the pilot's account, are available on any device after signing in and are not visible to other users. A copy is kept on the device in use, so work can continue without a connection: changes are sent when the connection is restored.

SECTION 2 Data Ingestion – Import Page

2.1 Pre-requisites


1. **INPUT** the e-mail and password provided by the administrator to sign in. At the first sign-in, replace the temporary password with your own (at least 10 characters). The **Dashboard** opens (Section 4.4).
2. **PREPARE** the route in ForeFlight and export the **NavLog** (PDF or text).
3. **DOWNLOAD** the **weather and NOTAM briefing** PDF covering departure, destination, alternate and route.
4. **SELECT** **New Flight** on the Dashboard: the Import page opens. ← **Dashboard** at the top of the Import page goes back without importing.

2.2 Procedure

1. **LOAD** the ForeFlight NavLog in the NavLog drop zone (A). Load it first: its ICAO codes are used to sort the briefing.
2. **VERIFY** the NavLog summary (B): number of waypoints, total distance and the waypoint table. For a return flight the application states that DEP and ARR are the same aerodrome.

> **NOTE**
> Only airports, route and distance are taken from the NavLog. ForeFlight speeds and fuel figures are not used: the AFM figures take precedence.

Figure 2.1 – NavLog Ingestion

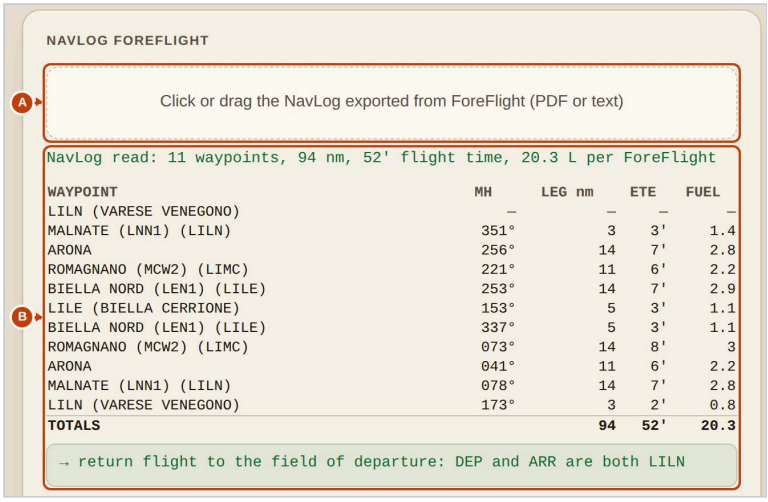


NavLog read: 11 waypoints, 94 NM, return flight to the departure aerodrome.

A	**NavLog drop zone**	LOAD the ForeFlight NavLog
B	**NavLog summary and waypoint table**	VERIFY waypoints and distance

3. **LOAD** the briefing PDF in the briefing drop zone (A).
4. **VERIFY** the briefing summary (B): issue date and time (UTC) and, for each aerodrome, the availability of METAR, TAF and the number of NOTAMs. `N/A` means not contained in the briefing.

Figure 2.2 – Weather Briefing Ingestion

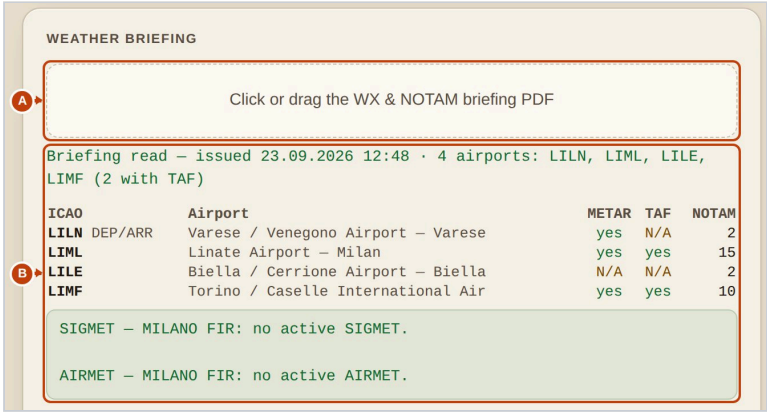


Four aerodromes found in the briefing, two of them with TAF.

A	**Briefing drop zone**	LOAD the briefing PDF
B	**Briefing summary and aerodrome table**	VERIFY issue time and coverage

5. **CONFIRM** both STATUS items are green (A).
6. **SELECT Continue** (B) to open the wizard.

> **CAUTION**
> **Skip and enter manually** (C) opens the wizard without imported data. Route, distances and all weather and NOTAM fields must then be entered by hand.

Figure 2.3 – Import Status

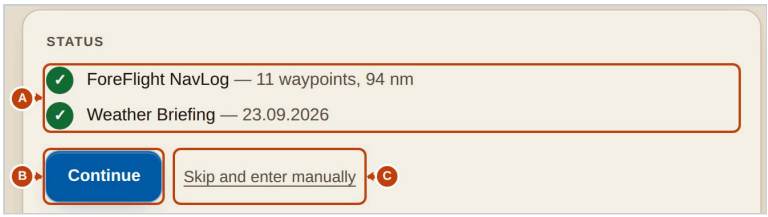

Both files read: the wizard can be opened.

A	**Status**	CONFIRM both items green
B	**Continue**	SELECT to proceed
C	**Skip and enter manually**	Manual entry only

SECTION 3


Pre-flight Data Entry – Wizard

3.0 Wizard navigation

1. **SELECT** a step pill (A) to go to any step, or use **Back** / **Next** at the bottom of the page.
2. **SELECT** the theme button (B) to switch between dark and light display. It does not affect the documents.
3. **SELECT** the menu (C) for documents and saved flights (Section 4.1).

> **CAUTION**
> A tick on a step pill only means that the step is behind the current one. It does **not** mean that the step is complete or correct.

Figure 3.1 – Wizard Header

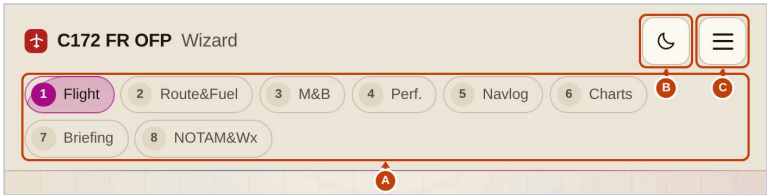

Step pills, theme button and menu.

A	**Step pills 1–8**	Navigate between steps
B	**Theme button**	Dark / light display
C	**Menu**	Documents and flights


3.1 Step 1 – Flight & Aircraft

DATA ENTRY

FIELD	CLASS	SOURCE	PILOT ACTION
DEP / ARR	A	NavLog	VERIFY
Aerodrome data (name, position, elevation, runways)	A	OurAirports	VERIFY
ALTN	M	Pilot	INPUT
Touch & Go + ICAO	O	Proposed from route	SELECT if landing en route
Aircraft (registration)	M	I-CCAF default; Other = typed by the pilot	SELECT
Flight Mission	O	Pilot	INPUT
Route	A	NavLog	VERIFY
OFF, TO (UTC)	M	Pilot	SELECT
LDG, BLOCK, FLT	A	Computed	VERIFY
ON	A	Proposed, editable	VERIFY / CORRECT

1. **VERIFY** DEP and ARR (A) as imported from the NavLog.
2. **VERIFY** the aerodrome data line next to each code (B): name, coordinates, elevation and runways. The line appears automatically when the four-letter code is complete. No line = code not found: CROSS-CHECK the ICAO code.
3. **INPUT** the alternate ICAO code (C). Its weather, NOTAMs, distance and runway data are filled in automatically.
4. **SELECT Touch & Go** (D) only if a landing en route is planned. The application proposes the aerodromes found along the route (E).
5. **SELECT** the aircraft (F). Mass & Balance (Step 3) follows this choice. Select **Other** only for an aircraft not in the list or after a re-weighing: type its registration in the box that appears.
6. **INPUT** the flight mission (G) (optional).

Figure 3.2 – Aerodromes and Mission

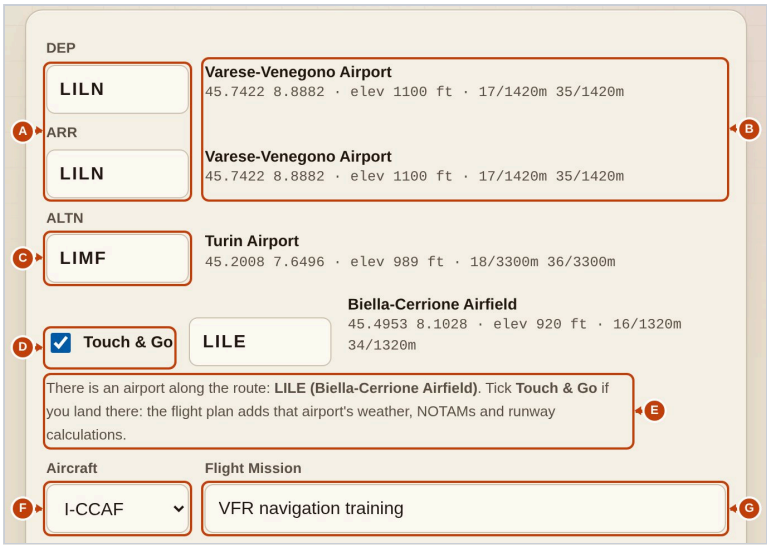


Aerodrome codes with the data looked up automatically.

A	**DEP / ARR**	VERIFY
B	**Aerodrome data line**	VERIFY elevation and runways
C	**ALTN**	INPUT
D	**Touch & Go**	SELECT if applicable
E	**Aerodromes along the route**	Information
F	**Aircraft**	SELECT
G	**Flight Mission**	INPUT (optional)

6. **SELECT** the off-blocks time OFF (A) and the take-off time TO (B), in UTC, 5-minute steps.
7. **VERIFY** LDG (C) = TO + Flight Time computed in Step 2.
8. **VERIFY** ON (D) = LDG + the departure taxi time. CORRECT it if required: once set by hand it no longer updates; set it back to `--:--` to restore automatic mode.
9. **VERIFY** BLOCK = ON − OFF and FLT = LDG − TO (E).
10. **REVIEW** the DAYLIGHT check (F). It requires the flight date (Step 8).

> **WARNING**
> Times are **UTC**. Times entered in local time make the daylight check wrong by the UTC offset.

Figure 3.3 – Estimated Times and Daylight Check

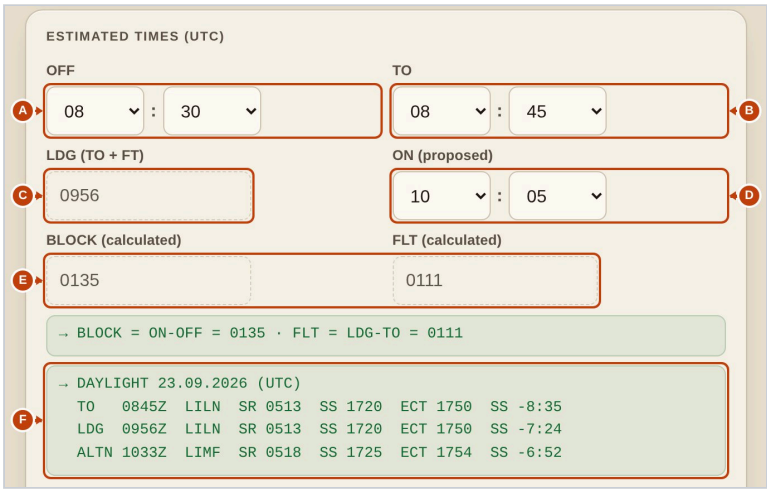

Take-off, landing at destination and landing at the alternate, each checked against its own aerodrome.

A	**OFF**	SELECT (UTC)
B	**TO**	SELECT (UTC)
C	**LDG**	VERIFY
D	**ON**	VERIFY / CORRECT
E	**BLOCK / FLT**	VERIFY
F	**DAYLIGHT check**	REVIEW

DAYLIGHT CHECK – STATUS

INDICATION	MEANING	ACTION
`SS -h:mm`	Daylight; margin to sunset	VERIFY margin
`AFTER SUNSET (+h:mm)` / `BEFORE SUNRISE`	Within civil twilight (amber)	REVIEW plan
`NIGHT`	After end / before start of civil twilight (red)	REVIEW plan
`not computed`	Date, TO time, Trip time or coordinates missing	INPUT missing data


3.2 Step 2 – Route & Fuel

DATA ENTRY

FIELD	CLASS	SOURCE	PILOT ACTION
Cruise Altitude	M	Pilot	INPUT
RPM, MAP	M	AFM fig. 5-1 combinations only	SELECT
Trip distance	A	NavLog	VERIFY
Cruise GS	A	TAS of the selected setting (still air)	CORRECT for wind
Trip fuel flow	A	AFM fig. 5-1	VERIFY
Alternate distance	A	Great circle ARR–ALTN	VERIFY / CORRECT
Alternate altitude	M	Pilot	INPUT
Alternate GS, FF, Flight Time	A	22 inHg / 2400 RPM, locked	VERIFY
Flight Rules	M	VFR default	SELECT
Taxi time and fuel	A	Step 1 times, 7.5 L/h	VERIFY
Fuel On Board	O	Pilot (actual uplift)	INPUT
Extra (L)	O	Pilot, if FOB empty	INPUT

1. **INPUT** the cruise altitude (A). RPM and MAP stay greyed out until it is entered.
2. **SELECT** RPM and MAP (B). Only the combinations published by the AFM at that altitude are offered.
3. **VERIFY** the power line (C): % power, TAS and fuel flow.
4. **VERIFY** the climb line (D): from DEP elevation to cruise altitude, time, distance and fuel (start-up and take-off included).

Figure 3.4 – Cruise Power Setting

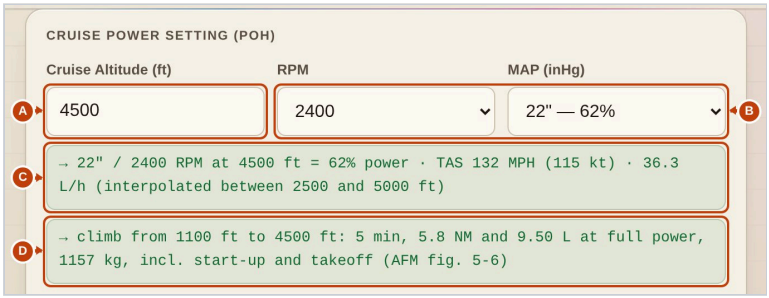

Selecting the setting fills in Trip GS and fuel flow.


A	**Cruise Altitude**	INPUT
B	**RPM / MAP**	SELECT
C	**Power line**	VERIFY
D	**Climb line**	VERIFY

5. **VERIFY** the Trip distance (A) from the NavLog.
6. **CORRECT** the cruise GS (B) for the forecast wind. The proposed value is the TAS of the setting.
7. **VERIFY** the fuel flow (C).
8. **VERIFY** the Trip line (D): climb + cruise = Trip time and fuel, and the TOC position.

WARNING
An uncorrected GS assumes still air. With a headwind, Trip time and fuel are underestimated.

CAUTION
If the climb is longer than the trip, the line reads **Cruise altitude not reached**. REVIEW altitude or distance.

Figure 3.5 – Trip

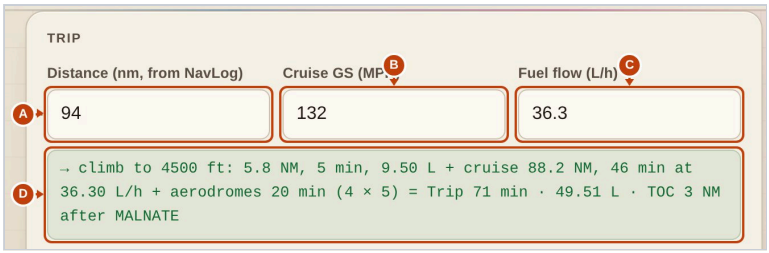


Trip = climb (AFM fig. 5-6) + cruise from the top of climb.

A	**Distance**	VERIFY
B	**Cruise GS**	CORRECT for wind
C	**Fuel flow**	VERIFY
D	**Trip line and TOC**	VERIFY

9. **VERIFY** the alternate distance (A) (great circle ARR–ALTN). CORRECT it for the planned routing.
10. **INPUT** the alternate altitude (B).
11. **VERIFY** GS and fuel flow (C), fixed at 22 inHg / 2400 RPM, and the computed Flight Time (D).
12. **VERIFY** the alternate line (E): setting, time and fuel.

Figure 3.6 – Alternate

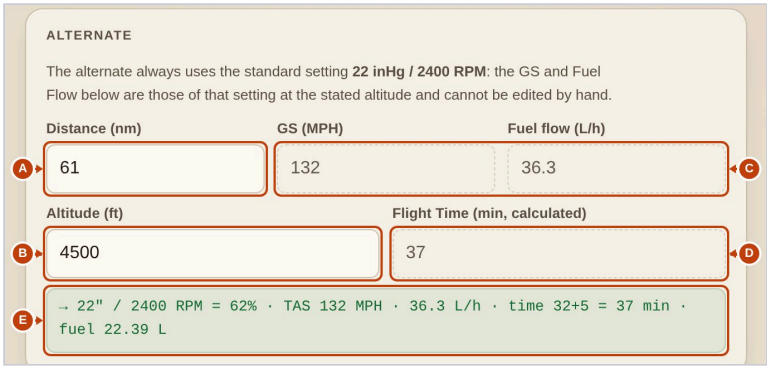


The alternate always uses 22 inHg / 2400 RPM.

A	**Distance**	VERIFY / CORRECT
B	**Altitude**	INPUT
C	**GS / fuel flow (locked)**	VERIFY
D	**Flight Time (calculated)**	VERIFY
E	**Alternate line**	VERIFY

13. **SELECT** the flight rules (A): VFR = 30 min final reserve, IFR = 45 min.
14. **VERIFY** the reserves line (B): Contingency = max(5% of Trip, 15 min); Final Reserve at cruise fuel flow.
15. **VERIFY** the Plan Block against the 174 L usable (C).
16. **VERIFY** the taxi time and fuel (D), derived from OFF–TO and LDG–ON at 7.5 L/h.

> **CAUTION**
> **ABOVE the 174 L usable** on the Plan Block line: the plan exceeds tank capacity.

Figure 3.7 – Reserves & Margins

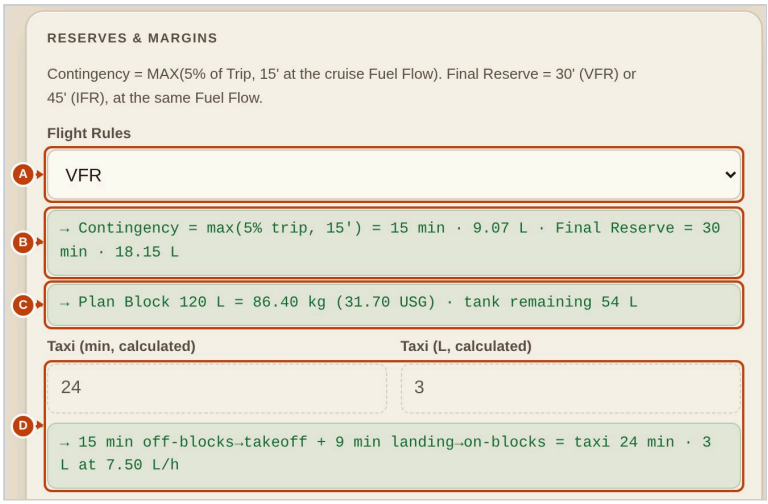


Reserves, tank capacity and taxi are computed, not entered.

A	**Flight Rules**	SELECT
B	**Contingency / Final Reserve**	VERIFY
C	**Plan Block vs usable fuel**	VERIFY
D	**Taxi**	VERIFY

17. **INPUT** the fuel on board after uplift (A) (optional). It is used only to compute the extra fuel and is not printed.
18. **INPUT** the extra fuel (B) by hand if FOB is left empty.
19. **VERIFY** the line (C): minimum required, extra litres and minutes.

> **WARNING**
> **FOB ... INSUFFICIENT** in red: the fuel on board is below the minimum required.

Figure 3.8 – Fuel On Board & Extra

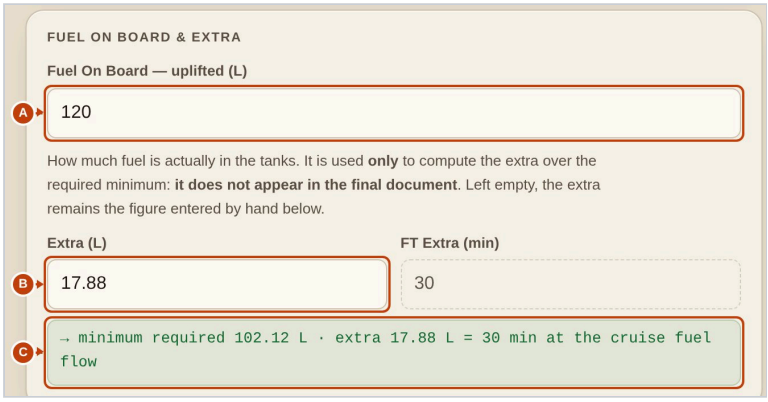

With FOB entered, the extra is FOB minus the minimum required.

A	**Fuel On Board**	INPUT (optional)
B	**Extra (L)**	INPUT if FOB empty
C	**Minimum / extra line**	VERIFY


3.3 Step 3 – Mass & Balance

DATA ENTRY

FIELD	CLASS	SOURCE	PILOT ACTION
Aircraft	A	Selected in Step 1	VERIFY
Basic Empty Weight, Moment	A	Club W&B form; editable only with Other	VERIFY
Pilot + front pax	M	Pilot	INPUT
Rear pax	O	Pilot	INPUT if carried
Baggage (max 91 kg)	O	Pilot	INPUT if carried
EPOB / POB	M	Pilot	INPUT
Fuel masses	A	Step 2 (1 L = 0.72 kg)	VERIFY
MZFW, MTOW, MLAW	A	AFM limits	VERIFY
Remarks (M&B)	O	Pilot	INPUT

1. **VERIFY** the aircraft (A), selected in Step 1. Empty weight and moment (B) are filled in and locked. With **Other** (Step 1) they are entered by hand, for example after a re-weighing.

Figure 3.9 – Aircraft and Empty Weight

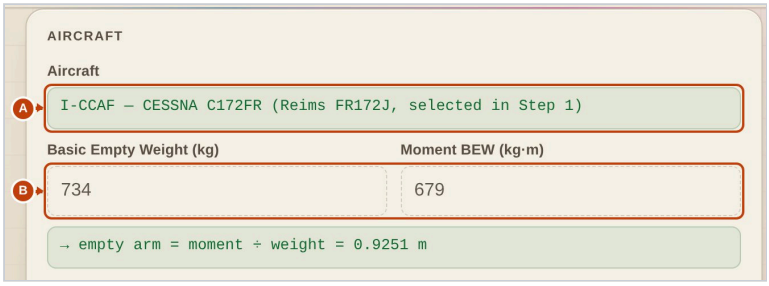


Empty weight and moment from the flying club form.

A	**Aircraft (from Step 1)**	VERIFY
B	**BEW / moment (locked)**	VERIFY

2. **INPUT** pilot and front passenger mass (A).
3. **INPUT** rear passengers (B) and baggage (C) if carried. Baggage limit 91 kg.
4. **INPUT** persons on board (D).
5. **VERIFY** the ZFW line (E).

Figure 3.10 – Loading

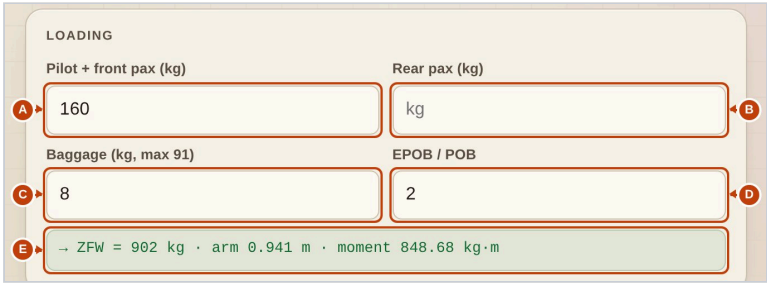


Fuel is not entered here: it comes from Step 2.

A	**Pilot + front pax**	INPUT
B	**Rear pax**	INPUT if carried
C	**Baggage**	INPUT if carried
D	**EPOB / POB**	INPUT
E	**ZFW line**	VERIFY

6. **VERIFY** the mass check (A): **masses within limits.**
7. **VERIFY** the CG check (B): CG at take-off within the envelope and the category available (UTILITY / NORMAL).
8. **VERIFY** the CG envelope chart: take-off, destination landing and alternate landing points inside the envelope.

> **WARNING**
> Any mass or CG message other than **within limits** must be resolved before flight.

Figure 3.11 – Mass & Balance Result

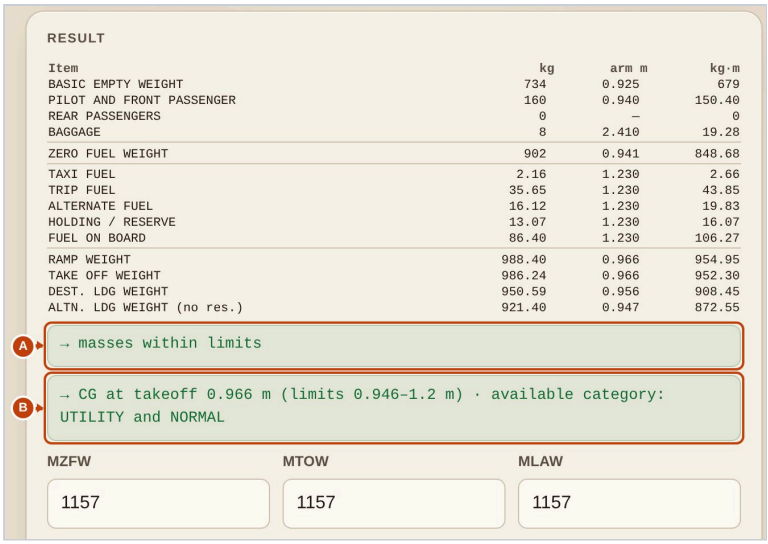

Loading sheet with the arms of the club form and the AFM limits.

A	**Mass check**	VERIFY
B	**CG and category**	VERIFY

3.4 Step 4 – Performance

DATA ENTRY

FIELD	CLASS	SOURCE	PILOT ACTION
Display Unit	O	MPH default	SELECT (display only)
Runway Surface	M	Asphalt, dry default	SELECT
Runway (each aerodrome)	M	None pre-selected	SELECT
Elevation, RWY heading	A	OurAirports	VERIFY
TORA / TODA / LDA	A	OurAirports physical length	CROSS-CHECK with AIP
QNH, Temp, Wind	A	Own METAR (or nearest station)	VERIFY
Runway (OFP)	A	Runway selected	VERIFY

1. **SELECT** the display unit (A) (MPH or knots). Calculations do not change.
2. **SELECT** the runway surface (B): asphalt dry, grass dry, or wet / contaminated.

> **CAUTION**
> Wet / contaminated: the AFM publishes no data and no increment is applied. A red warning is shown.

Figure 3.12 – Speeds and Surface




A	**Display Unit**	SELECT
B	**Runway Surface**	SELECT

Each phase has its own tab (A): **DEP** (take-off), **ARR** (landing), **ALT** (alternate landing) and **ENR** (touch and go, shown only when selected in Step 1). A dot on a tab indicates a warning for that phase.

3. **SELECT** each tab (A) in turn and carry out items 4 to 8.
4. **SELECT** the runway (B). No runway is pre-selected: select it from the wind of the day.

5. **VERIFY** the elevation (C) and the runway heading.
6. **CROSS-CHECK** TORA and TODA (LDA for landing) (D) with the AIP. They are pre-filled with the physical runway length.
7. **VERIFY** QNH, temperature and wind (E), and their source (F).
8. **VERIFY** the result card (G): pressure and density altitude, head/crosswind against the limit, distances required and margin.

Figure 3.13 – Take-off and Landing Data – DEP Tab

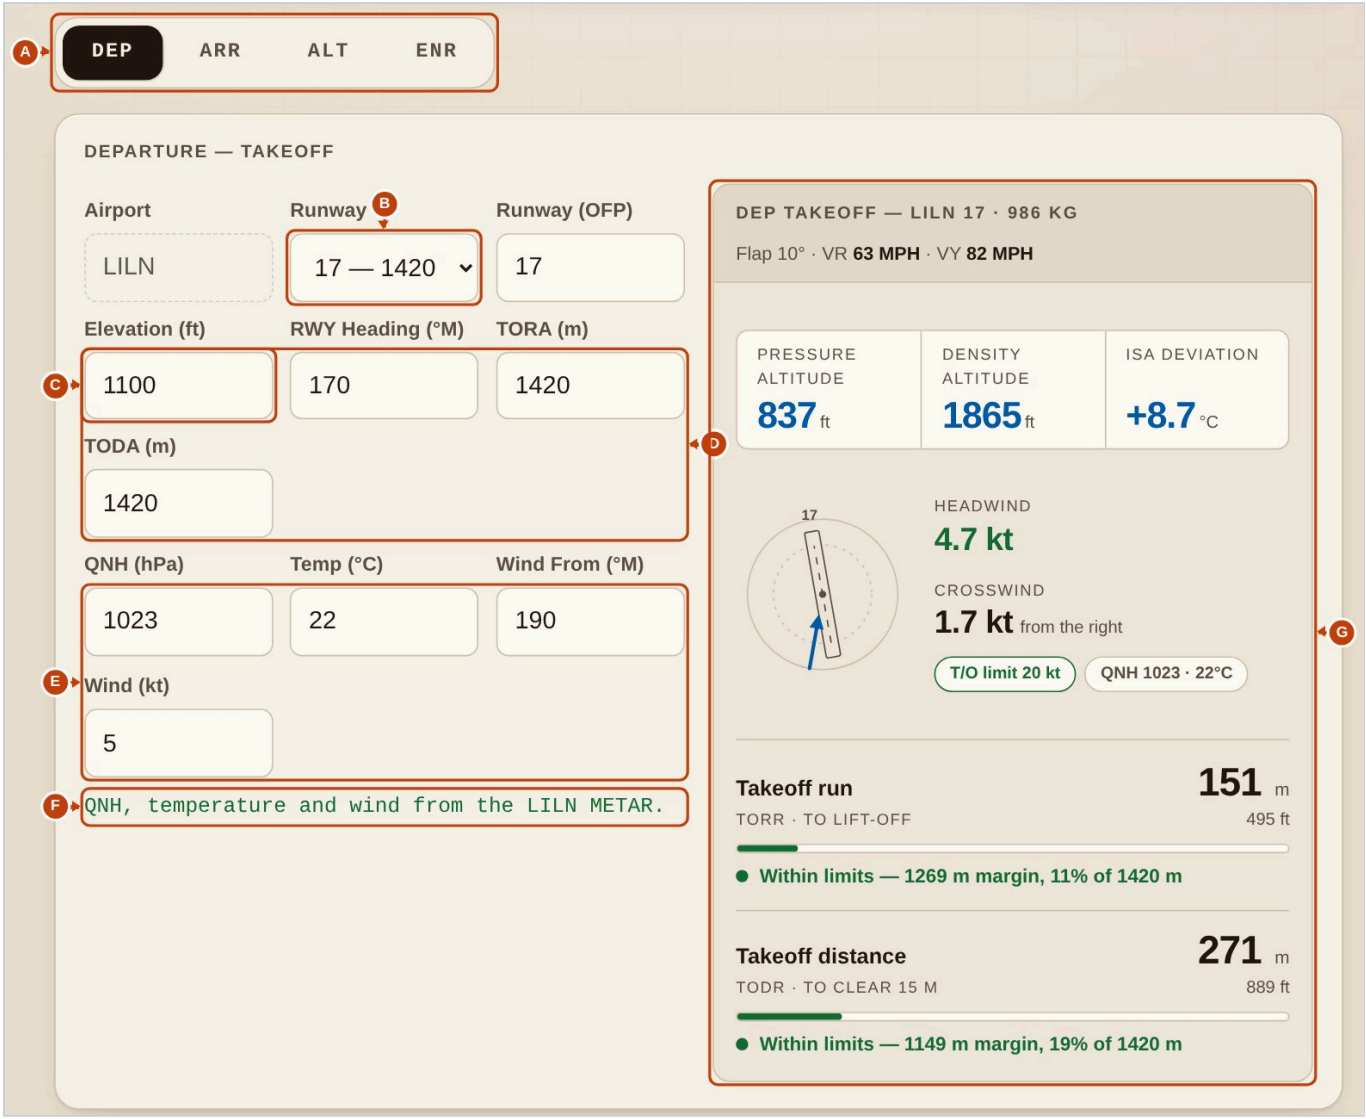

Inputs on the left, result card on the right. Wind, QNH and temperature come from the LILN METAR.


(A) **Phase tabs DEP / ARR / ALT / ENR**	SELECT each	(B) **Runway**	SELECT
(C) **Elevation**	VERIFY	(D) **TORA / TODA**	CROSS-CHECK with AIP
(E) **QNH / Temp / Wind**	VERIFY	(F) **Weather source**	VERIFY
(G) **Result card**	VERIFY margins		

9. **REVIEW** every message in **Checks & Warnings** (A). Red = the result does not cover the condition (e.g. tailwind, wet runway, standard weather used).

NOTE
An aerodrome without METAR uses standard values (1013 hPa, 15 °C, calm) and is marked in red. If a station with METAR exists within 30 NM, a button offers its values.

NOTE
Touch and go: landing and take-off are both computed with the take-off mass (conservative).

Figure 3.14 – Checks & Warnings

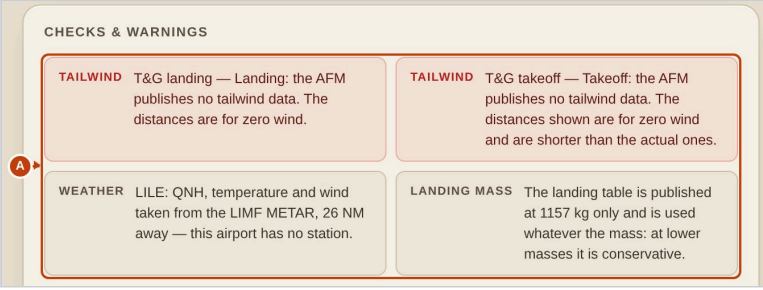

Example: tailwind on the T&G runway and weather taken from a nearby station.

A	**Checks & Warnings**	REVIEW every item


3.5 Step 5 – Navlog

DATA ENTRY

FIELD	CLASS	SOURCE	PILOT ACTION
GS / fuel flow navplan	O	Step 2 values if empty	INPUT only to override
Freq.	A	OurAirports (number only)	VERIFY
C/S	O	Pilot	INPUT
Checkpoint, MT, Dist.	A	NavLog	VERIFY
Alt.	A	Cruise altitude	VERIFY / CORRECT per waypoint
EET, ETO, Fuel	A	Computed	VERIFY
Remarks	O	Pilot	INPUT

1. **VERIFY** GS and fuel flow (A) (B). Leave empty to use the Step 2 values.

Figure 3.15 – Navlog Speed & Fuel Flow

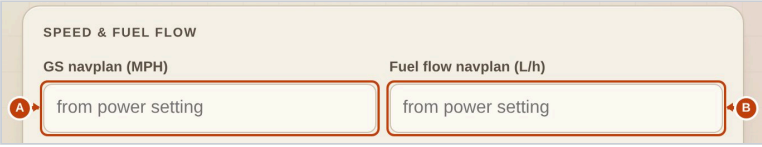

A	**GS navplan**	Leave empty or INPUT
B	**Fuel flow navplan**	Leave empty or INPUT

2. **SELECT** + Row (A) to add a checkpoint, × to delete one.
3. **SELECT** Fill Frequencies (B) to repeat the frequency look-up. VERIFY frequencies (C).
4. **INPUT** callsigns (D) (not in any database).
5. **VERIFY** checkpoints, magnetic tracks and distances (E).
6. **VERIFY** the altitude of each waypoint (F); CORRECT where different from cruise.
7. **VERIFY** EET per leg, ETO (minutes after TO) and fuel (G). A leg from or to an aerodrome reads e.g. `7/+5`: 7 min en route + 5 aerodrome minutes (Section 5.3), already included in ETO, Trip and fuel.
8. **INPUT** remarks (H) (optional).
9. **CROSS-CHECK** the totals line (I) with the Trip of Step 2: time and fuel must be the same.

Figure 3.16 – Navlog Legs



Times and fuel are recomputed from the selected power setting, not copied from ForeFlight; the climb is split over the legs by distance.

A	**+ Row**	Add checkpoint	
B	**Fill Frequencies**	Repeat look-up	
C	**Freq.**	VERIFY	
D	**C/S**	INPUT	
E	**Checkpoint / MT / Dist.**	VERIFY	
F	**Alt.**	VERIFY / CORRECT	
G	**EET / ETO / Fuel**	VERIFY	
H	**Remarks**	INPUT (optional)	
I	**Totals line**	CROSS-CHECK with Trip	

> **NOTE**
> A leg longer than 10 minutes shows an advisory message (turning points ideally every 6–8 minutes). It does not block the wizard and does not change the navlog.

3.6 Step 6 – Destination Charts

1. **LOAD** up to 2 images or PDFs (aerodrome or approach charts) (optional).
2. **INPUT** the operational notes as required: Track, Runway, Altitudes, Clearance, Timing, On ground, Radios, Specials (optional).

Charts and notes are printed on the DEST CHARTS page of the OFP. Graphic pages of the briefing (e.g. significant weather, wind charts) are added to the OFP automatically, one per page.

3.7 Step 7 – Briefing


A briefing by phase of flight, written before departure, that gives a structure to everything that has to be done in flight. All fields are optional free text and nothing is checked by the application; they are printed on the BRIEFING page of the OFP (Section 4.2).

DATA ENTRY

FIELD	CLASS	SOURCE	PILOT ACTION
Procedure (DEP, ENR, T&G, DEST, ALTN)	O	Pilot	INPUT
Possible threats	O	Pilot	INPUT
Mitigation	O	Pilot	INPUT
Aircraft status	O	Pilot	INPUT if equipment is inoperative
Remarks	O	Pilot	INPUT if applicable

1. **INPUT** for the phase the **procedure** (A): what will be flown, e.g. runway, routing, reporting points, altitudes, frequencies.
2. **INPUT** the **possible threats** (B) of that phase, e.g. weather, terrain, traffic, airspace, aircraft, pilot.
3. **INPUT** the **mitigation** (C): what will be done to keep each threat under control.
4. **INPUT** the same three fields for Enroute, Touch & Go, Destination and Alternate. The Touch & Go block is shown only when Touch & Go is selected in Step 1; each heading shows the aerodrome code.

Figure 3.17 – Briefing – Departure

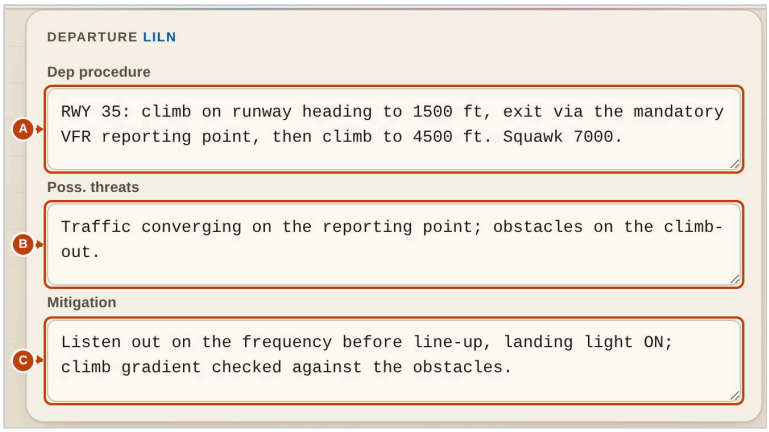


Example. Every phase has the same three fields.

A	**Procedure**	INPUT
B	**Possible threats**	INPUT
C	**Mitigation**	INPUT

1. **INPUT Aircraft status** (A) only when instruments or equipment are temporarily inoperative, stating which aids will therefore not be available in flight.
2. **INPUT Remarks** (B) only for important information on the conduct of the flight that is not related to the routing: exam flight, solo flight, dual command, SPIC flight.

> **NOTE**
> Keep the text short and in the order it will be used: the BRIEFING page is read in flight.

Figure 3.18 – Aircraft Status and Remarks

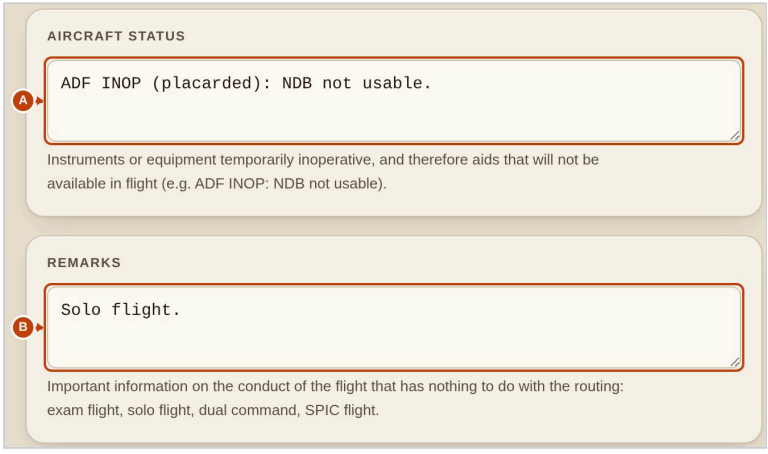

Example.

A	**Aircraft status**	INPUT if applicable
B	**Remarks**	INPUT if applicable

3.8 Step 8 – NOTAM & Weather


DATA ENTRY

FIELD	CLASS	SOURCE	PILOT ACTION
Briefing PDF	A	Loaded at import; can be reloaded	LOAD only to update
Date (DD.MM.YYYY)	M	Briefing	VERIFY / INPUT
Time (UTC), Validity	A	Briefing	VERIFY
METAR, SPECI, TAF, NOTAM per aerodrome	A	Briefing	VERIFY
Enroute NOTAMs, SIGMET / AIRMET	A	Briefing	VERIFY
PIC name	M	Pilot	INPUT

1. **LOAD** a newer briefing (A) only to update the weather.
2. **VERIFY** the status line (B): aerodromes found and those not on the route.
3. **VERIFY** the date (C). It is printed on the OFP and used by the daylight check. INPUT it if no briefing was loaded.
4. **VERIFY** issue time (D) and validity (E).

> **NOTE**
> If the briefing was issued on the day before the flight, the date shown is the issue date.

Figure 3.19 – Briefing Data

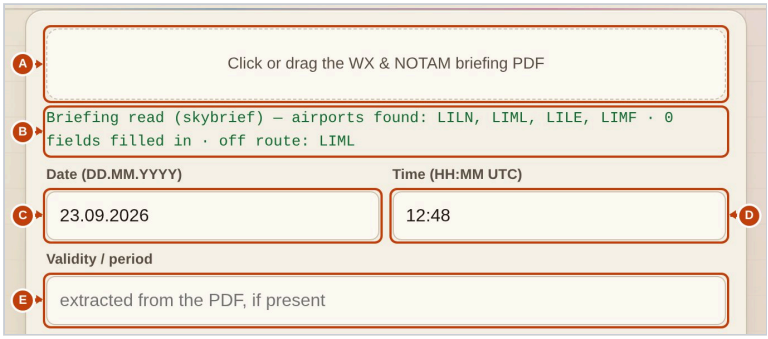

A	**Briefing drop zone**	LOAD to update
B	**Status line**	VERIFY
C	**Date**	VERIFY / INPUT
D	**Time (UTC)**	VERIFY
E	**Validity**	VERIFY

5. **VERIFY** for each aerodrome (DEP, ARR, T&G, ALTN) METAR (A), SPECI (B), TAF (C) and NOTAM (D): correct aerodrome, current issue.
6. **VERIFY** the Enroute NOTAM and SIGMET / AIRMET boxes. An absence must be stated (e.g. “no active SIGMET”): an empty box is not information.
7. **INPUT** the PIC name. It is printed on every page of the OFP and on the NAV-FLIGHTPLAN.

> **NOTE**
> `N/A – not available in the briefing` is an explicit statement that the report is not contained in the briefing.

Figure 3.20 – Aerodrome Weather & NOTAM



One block per aerodrome. Text edited by hand is not overwritten by a later import.

A	METAR	VERIFY
B	SPECI	VERIFY
C	TAF	VERIFY
D	NOTAM	VERIFY


SECTION 4 System Outputs & Dispatch

4.1 Menu

	ITEM	FUNCTION
A	Dashboard	Back to the Dashboard (Section 4.4). The flight plan stays open.
B	New Flight Plan	Closes the flight plan and opens the import page. Unsaved data is lost.
C	Save to Standby	Saves the flight to your account
D	Document Preview	Shows the OFP on screen
E	Download OFP PDF	A4 OFP. To print it, use the print function of the PDF viewer.
F	Download Navlog PDF	A5 NAV-FLIGHTPLAN (separate document)
G	Navlog Aeroclub Varese	The flying club Navigation Log, two A4 pages (Section 4.3)
H	User Manual	This manual, in a new tab

Below these items the menu shows the signed-in user, **Users** (administrator only), **Change password** and **Sign out**. Users and Change password open in a new tab. On the Dashboard the menu shows only New Flight Plan, User Manual and the account items.

Figure 4.1 – Main Menu

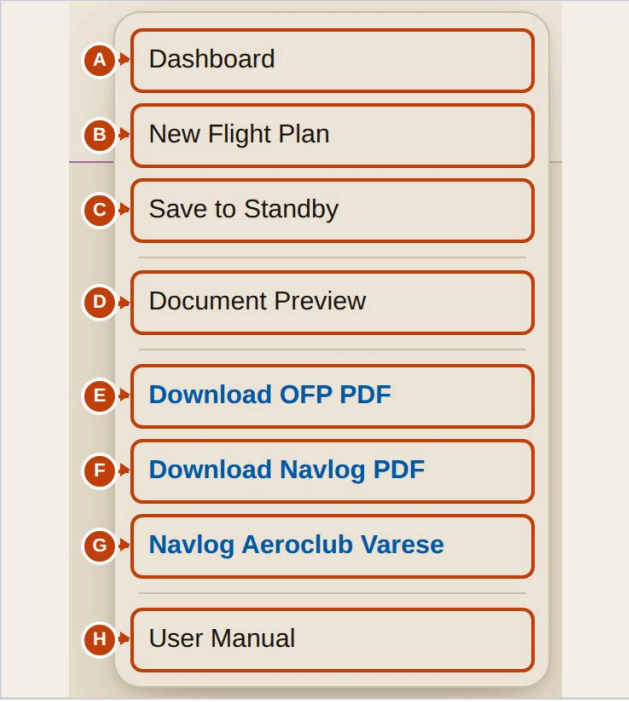


Menu at the top right of the wizard.

4.2 Operational Flight Plan (A4)

OFP PAGE STRUCTURE (NUMBER OF PAGES VARIES WITH NOTAMS AND CHARTS)

PAGE	CONTENT
OFP	Flight data, estimated / actual times, route, cruise altitude, fuel plan, alternate summary, daylight check
MASS AND BALANCE	Loading sheet, limits, CG envelope chart, remarks, PIC signature
PERFORMANCE	Masses, V-speeds, take-off and landing distances and margins, cruise power setting, TOC, AFM cruise table
DEST CHARTS	Charts and operational notes (Step 6)
BRIEFING	Briefing by phase (DEP, ENR, T&G, DEST, ALTN): procedure, threats, mitigation; aircraft status, remarks (Step 7)
WEATHER	METAR / SPECI / TAF by aerodrome, SIGMET / AIRMET
NOTAM	NOTAM by aerodrome and enroute
Charts	Graphic pages of the briefing, if any

Figure 4.2 – OFP – Page 1

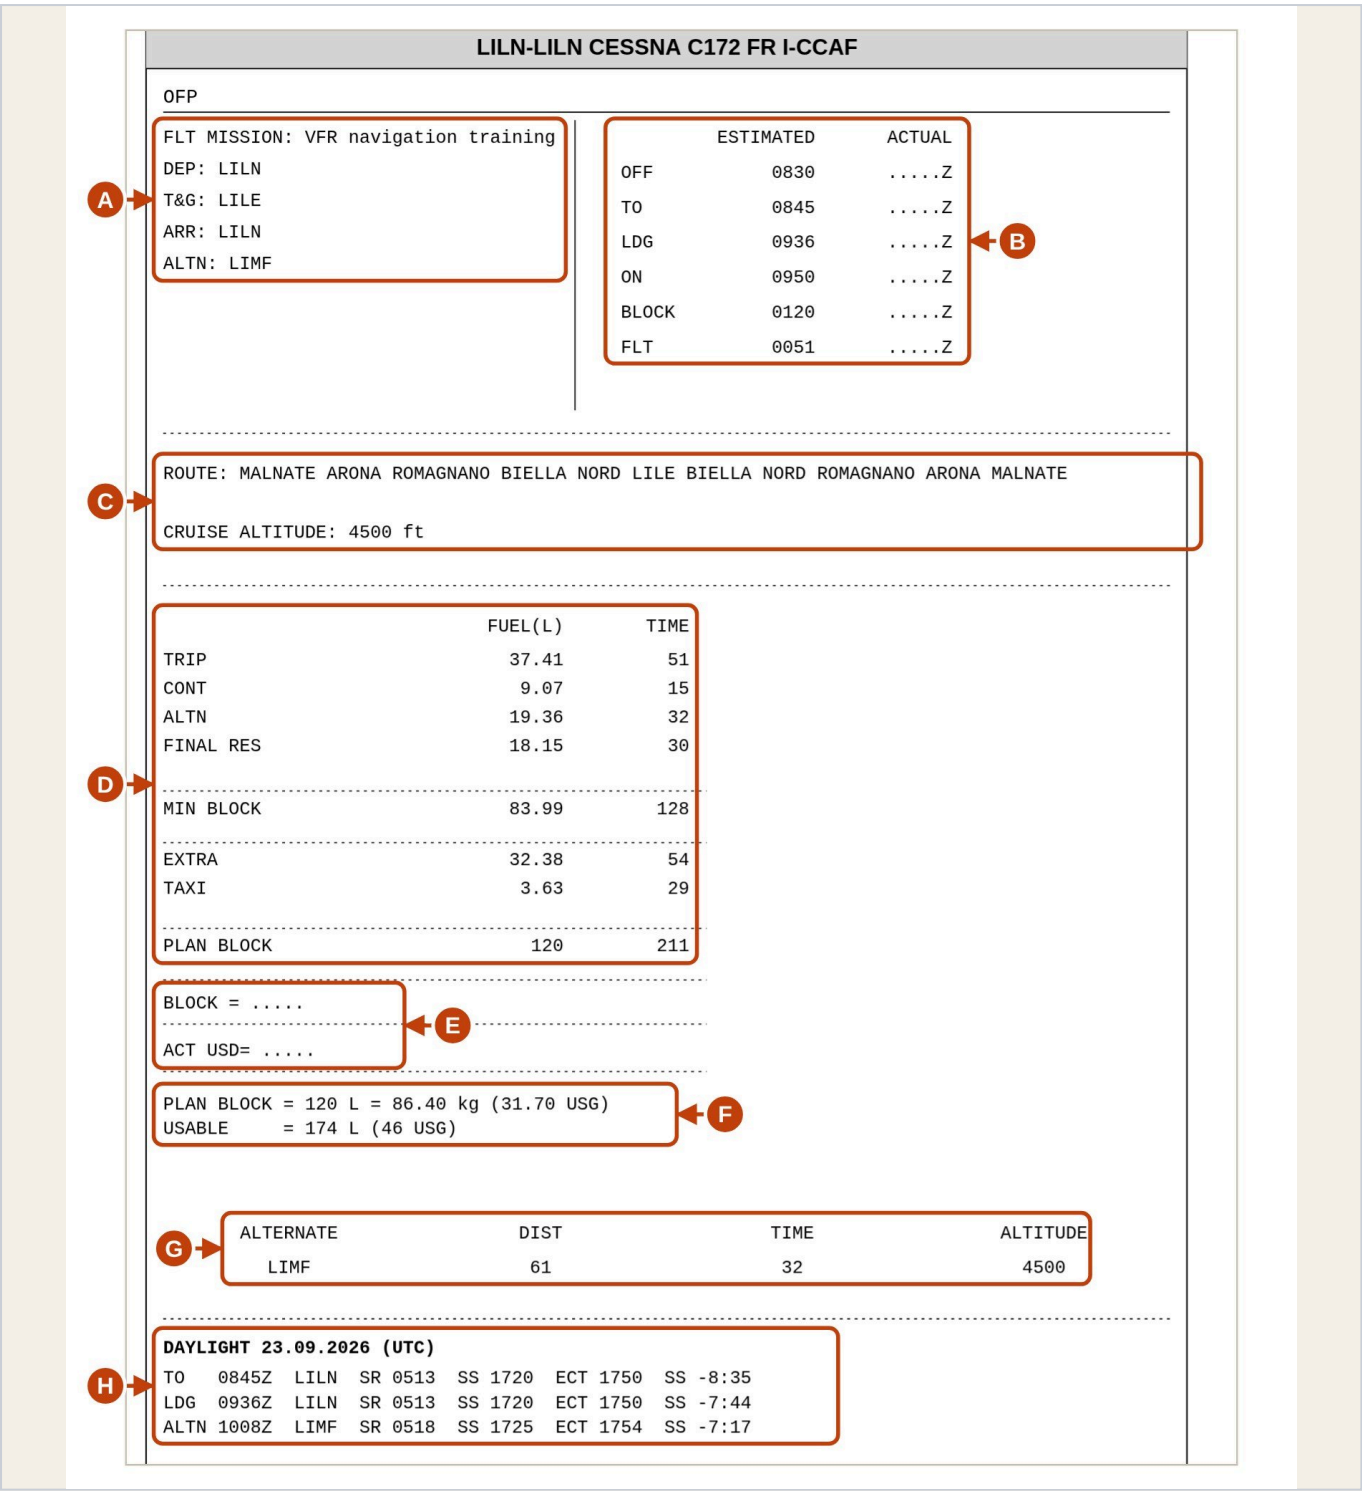

```
                    LILN-LILN CESSNA C172 FR I-CCAF

OFP

FLT MISSION: VFR navigation training
DEP: LILN
T&G: LILE
ARR: LILN
ALTN: LIMF

          ESTIMATED      ACTUAL
OFF           0830       .....Z
TO            0845       .....Z
LDG           0936       .....Z
ON            0950       .....Z
BLOCK         0120       .....Z
FLT           0051       .....Z

ROUTE: MALNATE ARONA ROMAGNANO BIELLA NORD LILE BIELLA NORD ROMAGNANO ARONA MALNATE

CRUISE ALTITUDE: 4500 ft

                          FUEL(L)        TIME
TRIP                        37.41          51
CONT                         9.07          15
ALTN                        19.36          32
FINAL RES                   18.15          30
MIN BLOCK                   83.99         128
EXTRA                       32.38          54
TAXI                         3.63          29
PLAN BLOCK                    120         211

BLOCK = .....
ACT USD= .....

PLAN BLOCK = 120 L = 86.40 kg (31.70 USG)
USABLE     = 174 L (46 USG)


ALTERNATE              DIST                TIME              ALTITUDE
   LIMF                  61                  32                  4500

DAYLIGHT 23.09.2026 (UTC)
TO   0845Z  LILN  SR 0513  SS 1720  ECT 1750  SS -8:35
LDG  0936Z  LILN  SR 0513  SS 1720  ECT 1750  SS -7:44
ALTN 1008Z  LIMF  SR 0518  SS 1725  ECT 1754  SS -7:17
```

The ACTUAL column and the BLOCK / ACT USD lines are completed by hand.

A **Flight data**	DEP / T&G / ARR / ALTN	**B** **Estimated / actual times**	Record ACTUAL in flight (UTC)
C **Route and cruise altitude**	VERIFY	**D** **Fuel plan**	CROSS-CHECK with Step 2
E **BLOCK / ACT USD**	Complete by hand	**F** **Plan block mass, usable fuel**	VERIFY
G **Alternate summary**	VERIFY	**H** **Daylight check**	REVIEW

Figure 4.3 – OFP – Mass and Balance

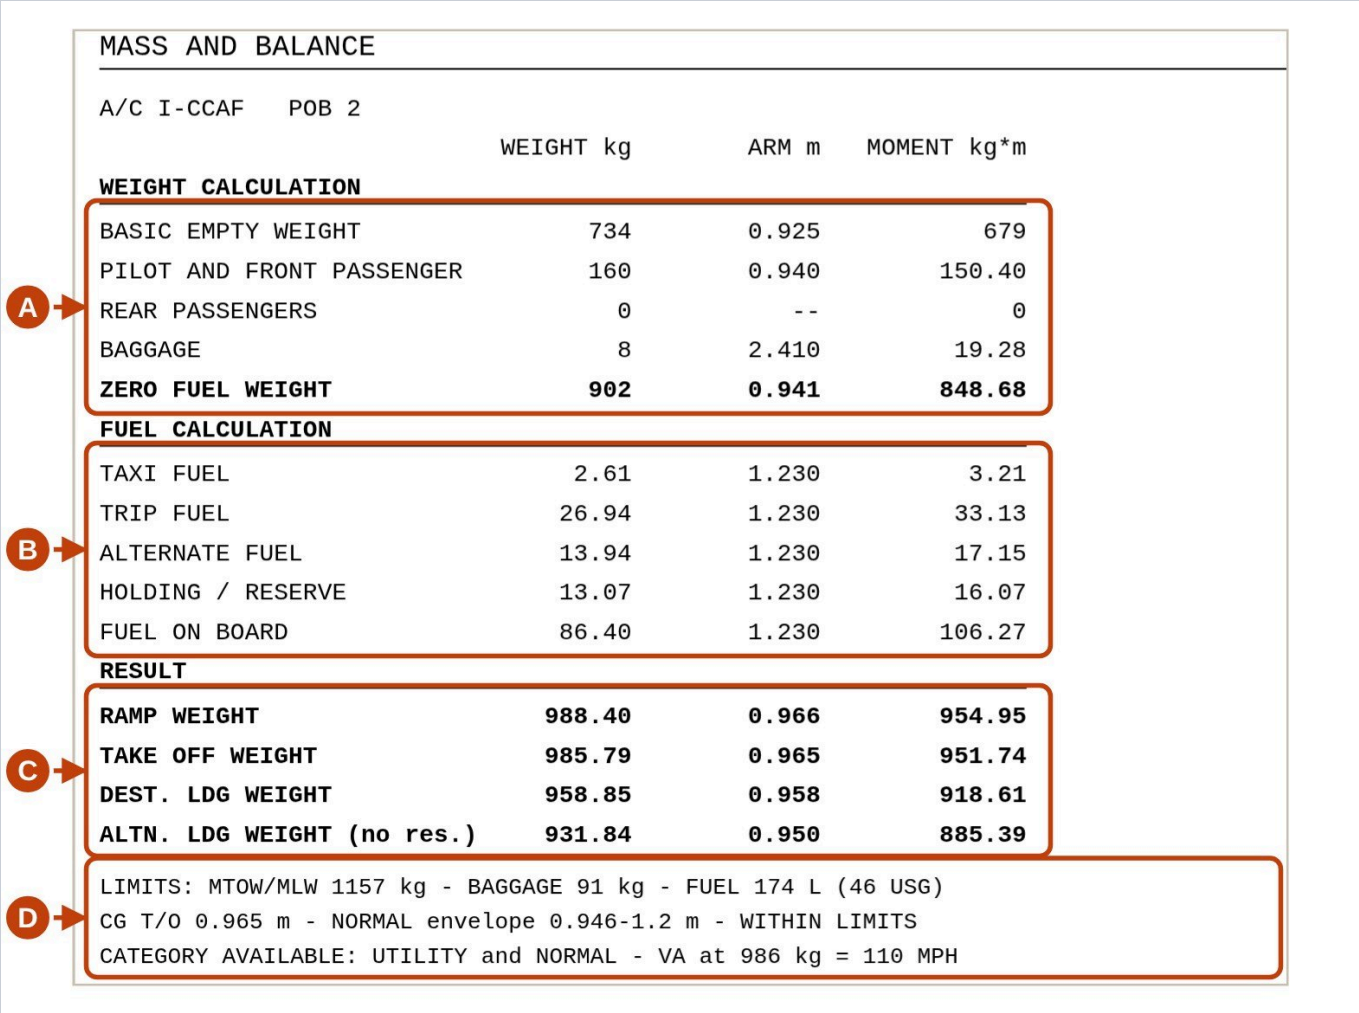

MASS AND BALANCE

A/C I-CCAF POB 2


	WEIGHT kg	ARM m	MOMENT kg*m
WEIGHT CALCULATION			
BASIC EMPTY WEIGHT	734	0.925	679
PILOT AND FRONT PASSENGER	160	0.940	150.40
REAR PASSENGERS	0	--	0
BAGGAGE	8	2.410	19.28
ZERO FUEL WEIGHT	**902**	**0.941**	**848.68**
FUEL CALCULATION			
TAXI FUEL	2.61	1.230	3.21
TRIP FUEL	26.94	1.230	33.13
ALTERNATE FUEL	13.94	1.230	17.15
HOLDING / RESERVE	13.07	1.230	16.07
FUEL ON BOARD	86.40	1.230	106.27
RESULT			
RAMP WEIGHT	**988.40**	**0.966**	**954.95**
TAKE OFF WEIGHT	**985.79**	**0.965**	**951.74**
DEST. LDG WEIGHT	**958.85**	**0.958**	**918.61**
ALTN. LDG WEIGHT (no res.)	**931.84**	**0.950**	**885.39**

LIMITS: MTOW/MLW 1157 kg - BAGGAGE 91 kg - FUEL 174 L (46 USG)
CG T/O 0.965 m - NORMAL envelope 0.946-1.2 m - WITHIN LIMITS
CATEGORY AVAILABLE: UTILITY and NORMAL - VA at 986 kg = 110 MPH

Followed on the same page by the CG envelope chart, remarks and PIC signature.

A **Weight calculation**	VERIFY	B **Fuel calculation**	VERIFY
C **Result**	VERIFY	D **Limits and CG**	VERIFY within limits

Figure 4.4 – OFP – Performance

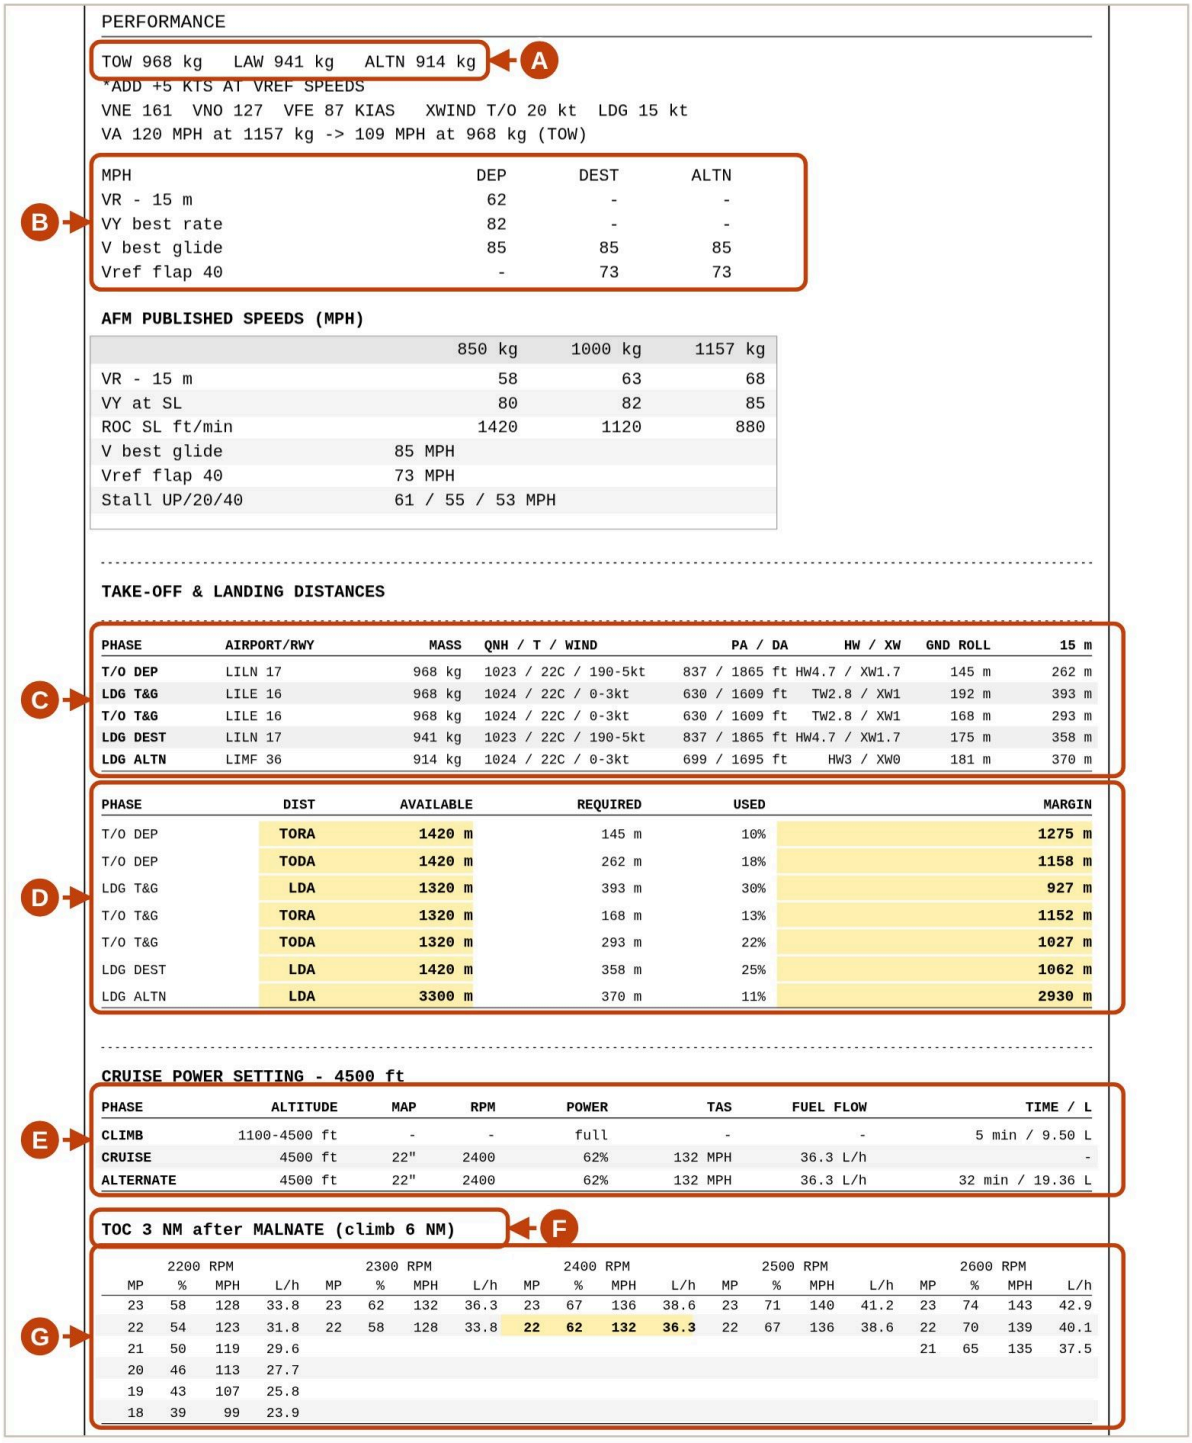

PERFORMANCE

TOW 968 kg LAW 941 kg ALTN 914 kg (A)
*ADD +5 KTS AT VREF SPEEDS
VNE 161 VNO 127 VFE 87 KIAS XWIND T/O 20 kt LDG 15 kt
VA 120 MPH at 1157 kg -> 109 MPH at 968 kg (TOW)

(B)

MPH	DEP	DEST	ALTN
VR - 15 m	62	-	-
VY best rate	82	-	-
V best glide	85	85	85
Vref flap 40	-	73	73

AFM PUBLISHED SPEEDS (MPH)

	850 kg	1000 kg	1157 kg
VR - 15 m	58	63	68
VY at SL	80	82	85
ROC SL ft/min	1420	1120	880
V best glide	85 MPH		
Vref flap 40	73 MPH		
Stall UP/20/40	61 / 55 / 53 MPH		

TAKE-OFF & LANDING DISTANCES

(C)

PHASE	AIRPORT/RWY	MASS	QNH / T / WIND	PA / DA	HW / XW	GND ROLL	15 m
T/O DEP	LILN 17	968 kg	1023 / 22C / 190-5kt	837 / 1865 ft	HW4.7 / XW1.7	145 m	262 m
LDG T&G	LILE 16	968 kg	1024 / 22C / 0-3kt	630 / 1609 ft	TW2.8 / XW1	192 m	393 m
T/O T&G	LILE 16	968 kg	1024 / 22C / 0-3kt	630 / 1609 ft	TW2.8 / XW1	168 m	293 m
LDG DEST	LILN 17	941 kg	1023 / 22C / 190-5kt	837 / 1865 ft	HW4.7 / XW1.7	175 m	358 m
LDG ALTN	LIMF 36	914 kg	1024 / 22C / 0-3kt	699 / 1695 ft	HW3 / XW0	181 m	370 m

(D)

PHASE	DIST	AVAILABLE	REQUIRED	USED	MARGIN
T/O DEP	TORA	1420 m	145 m	10%	1275 m
T/O DEP	TODA	1420 m	262 m	18%	1158 m
LDG T&G	LDA	1320 m	393 m	30%	927 m
T/O T&G	TORA	1320 m	168 m	13%	1152 m
T/O T&G	TODA	1320 m	293 m	22%	1027 m
LDG DEST	LDA	1420 m	358 m	25%	1062 m
LDG ALTN	LDA	3300 m	370 m	11%	2930 m

CRUISE POWER SETTING - 4500 ft

(E)

PHASE	ALTITUDE	MAP	RPM	POWER	TAS	FUEL FLOW	TIME / L
CLIMB	1100-4500 ft	-	-	full	-	-	5 min / 9.50 L
CRUISE	4500 ft	22"	2400	62%	132 MPH	36.3 L/h	-
ALTERNATE	4500 ft	22"	2400	62%	132 MPH	36.3 L/h	32 min / 19.36 L

TOC 3 NM after MALNATE (climb 6 NM) (F)

(G)


2200 RPM				2300 RPM				2400 RPM				2500 RPM				2600 RPM			
MP	%	MPH	L/h	MP	%	MPH	L/h	MP	%	MPH	L/h	MP	%	MPH	L/h	MP	%	MPH	L/h
23	58	128	33.8	23	62	132	36.3	23	67	136	38.6	23	71	140	41.2	23	74	143	42.9
22	54	123	31.8	22	58	128	33.8	**22**	**62**	**132**	**36.3**	22	67	136	38.6	22	70	139	40.1
21	50	119	29.6													21	65	135	37.5
20	46	113	27.7																
19	43	107	25.8																
18	39	99	23.9																

A Masses (TOW / LAW / ALTN)	VERIFY	**B** V-speeds by aerodrome	VERIFY
C Take-off and landing distances	VERIFY	**D** Distances available / required / margin	CROSS-CHECK
E Cruise power setting	VERIFY	**F** TOC position	VERIFY
G AFM cruise table	Reference		

4.3 NAV-FLIGHTPLAN (A5)

1. **SELECT** **Download Navlog PDF** from the menu. It is a separate document and never part of the OFP.
2. **VERIFY** the header (A): aircraft, pilot, date, GS, QNH and runway.
3. **RECORD** off-blocks and on-blocks times (B) by hand.
4. **VERIFY** the legs (C).
5. **RECORD** ATO (D) in flight at each checkpoint.
6. **VERIFY** the alternate row (E) and the fuel calculation box (F).

Figure 4.5 – NAV-FLIGHTPLAN

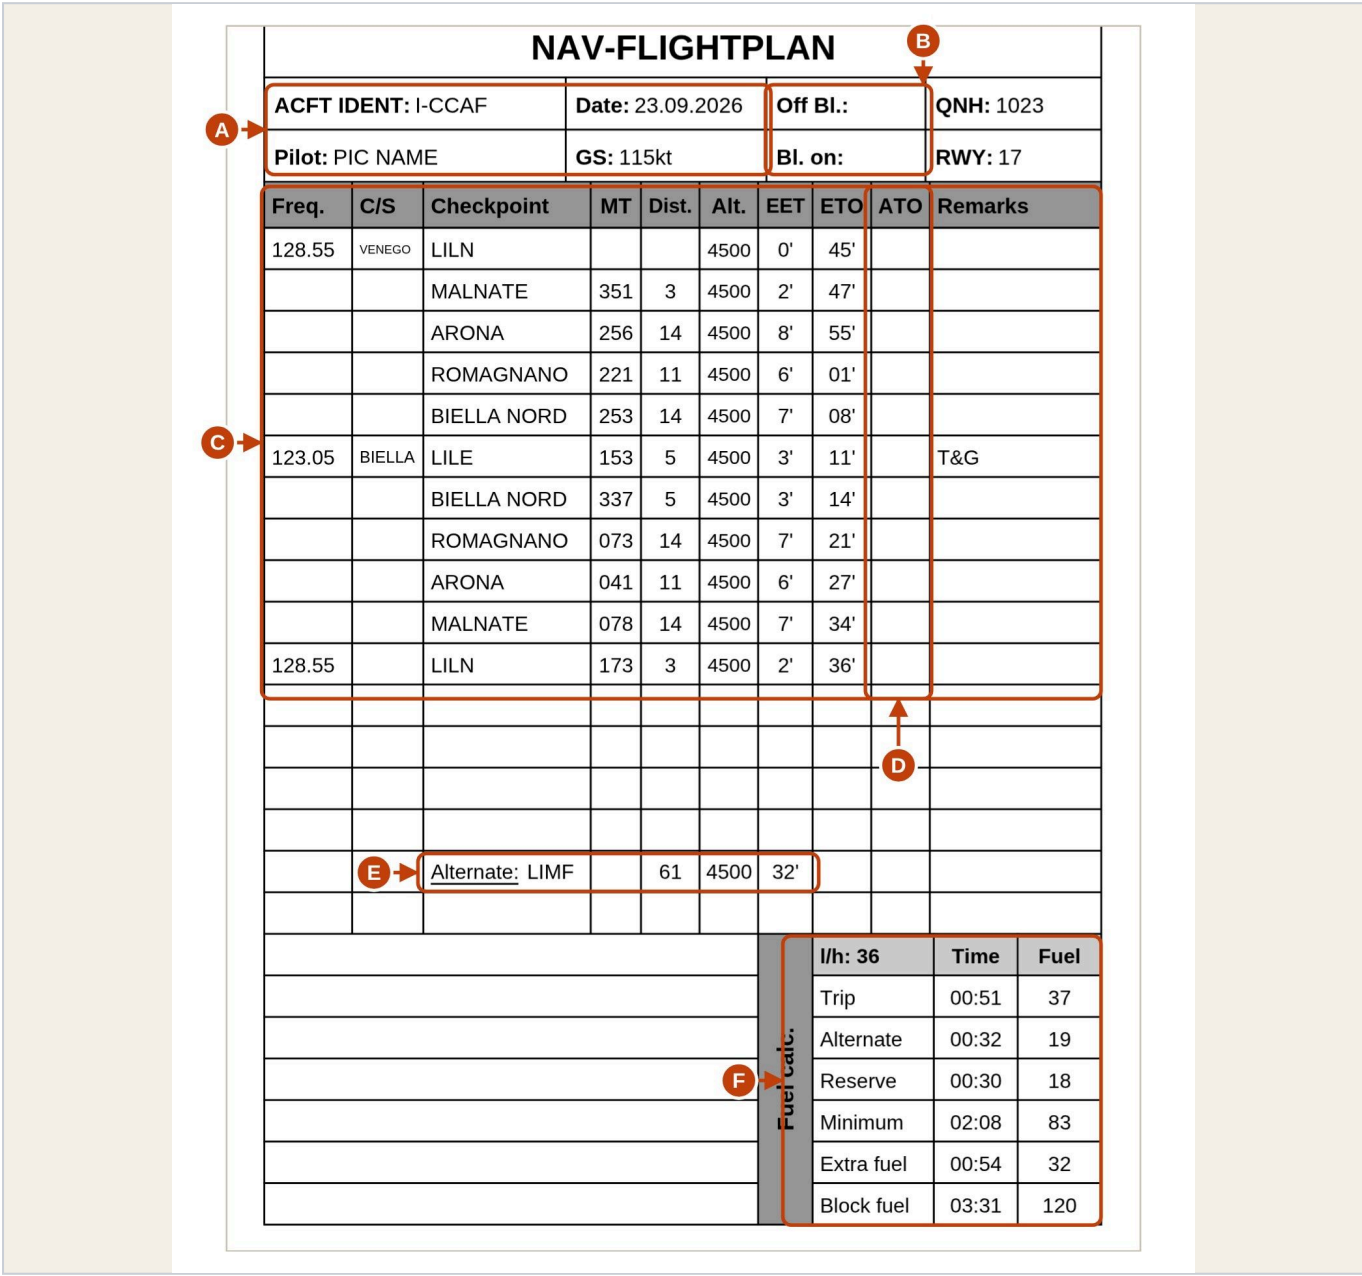

A5 document for the cockpit.

(A) **Header**	VERIFY	(B) **Off Bl. / Bl. on**	Record by hand
(C) **Legs**	VERIFY	(D) **ATO**	Record in flight
(E) **Alternate row**	VERIFY	(F) **Fuel calculation**	VERIFY


Navlog Aeroclub Varese produces the same navigation log on the flying club form (Aeroclub di Varese, Navigation Log): one PDF of two A4 landscape pages, front and back, to be printed double-sided. It does not replace the NAV-FLIGHTPLAN, which remains the navigation log of the application.

1. **SELECT** **Navlog Aeroclub Varese** from the menu.
2. **VERIFY** the main table (right side of the front): checkpoints, NAV AIDS (Ident = callsign, Freq), MC, ALT, DIST and FUEL per leg and remaining, ETE and ETO, as in the NAV-FLIGHTPLAN. Up to 13 checkpoints fit; up to 6 more continue in the left table, above the Dest. Airport row.
3. **VERIFY** the alternate (left side of the front): one leg from destination to alternate. The MC is computed from the great circle and the WMM2025 magnetic variation, and is marked as to be verified.
4. **VERIFY** the back: weather by aerodrome from the METAR; weight and balance with the take-off fuel; fuel calculation; take-off data (DEP) and landing data (DEST).
5. **RECORD** block times, RETO and ATO by hand.

> **NOTE**
> Differences from the club form as printed by hand: CLIMB fuel is the AFM fig. 5-6 block (start-up and take-off included), so no rate is given; DESC. is not published in the AFM; APP. is the 5 minutes per aerodrome; the contingency, which the form does not have, is included in MINIMUM FOB and stated in the Note. ASDA (required) is the take-off ground roll plus the landing ground roll. Emax is the best glide speed. ASDA declared, VX, VLO and VLE are left blank. All values are whole numbers: distances, leg fuel and masses to the nearest unit; in the fuel calculation the required quantities are rounded up and each total is the sum of the figures printed, so the columns add up. Arms stay in metres with three decimals.

> **CAUTION**
> The form is an aid to flight preparation and does not replace the AFM, the SOP or the AIP. Every pre-filled value must be verified by the pilot before use.

Figure 4.6 – Club Navlog – Front

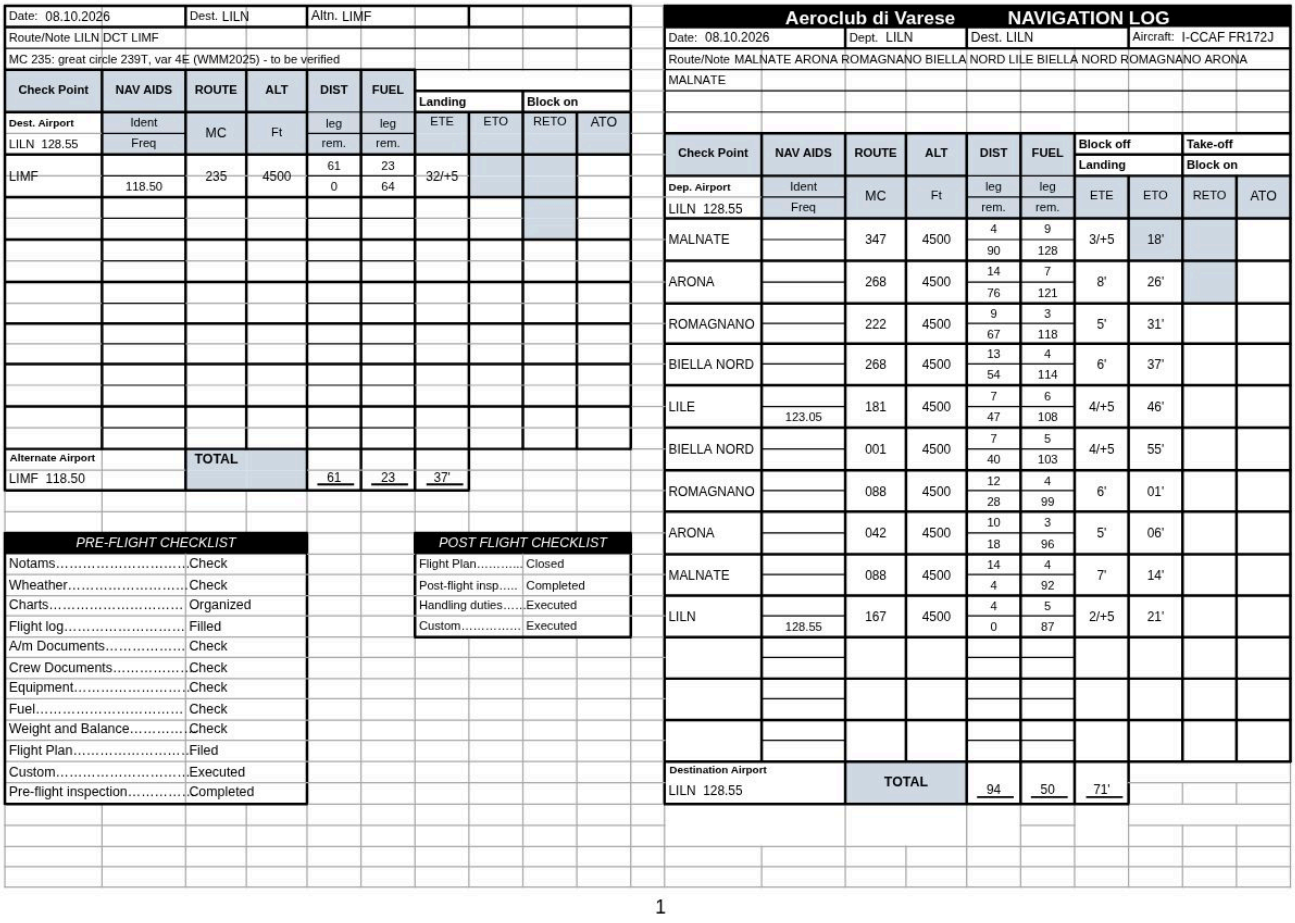

Date: 08.10.2026	Dest. LILN	Altn. LIMF							
Route/Note LILN DCT LIMF									
MC 235: great circle 239T, var 4E (WMM2025) - to be verified									
Check Point	**NAV AIDS**	**ROUTE**	**ALT**	**DIST**	**FUEL**	**Landing**		**Block on**	
Dest. Airport	Ident	MC	Ft	leg	leg	ETE	ETO	RETO	ATO
LILN 128.55	Freq			rem.	rem.				
LIMF		235	4500	61	23	32/+5			
	118.50			0	64				
Alternate Airport		**TOTAL**							
LIMF 118.50				61	23	37'			

PRE-FLIGHT CHECKLIST	
Notams	Check
Wheather	Check
Charts	Organized
Flight log	Filled
A/m Documents	Check
Crew Documents	Check
Equipment	Check
Fuel	Check
Weight and Balance	Check
Flight Plan	Filed
Custom	Executed
Pre-flight inspection	Completed

POST FLIGHT CHECKLIST	
Flight Plan	Closed
Post-flight insp.	Completed
Handling duties	Executed
Custom	Executed

Aeroclub di Varese — NAVIGATION LOG


Date: 08.10.2026	Dept. LILN	Dest. LILN	Aircraft: I-CCAF FR172J
Route/Note MALNATE ARONA ROMAGNANO BIELLA NORD LILE BIELLA NORD ROMAGNANO ARONA MALNATE			

Check Point	**NAV AIDS**	**ROUTE**	**ALT**	**DIST**	**FUEL**	**Block off**		**Take-off**	
						Landing		**Block on**	
Dep. Airport	Ident	MC	Ft	leg	leg	ETE	ETO	RETO	ATO
LILN 128.55	Freq			rem.	rem.				
MALNATE		347	4500	4	9	3/+5	18'		
				90	128				
ARONA		268	4500	14	7	8'	26'		
				76	121				
ROMAGNANO		222	4500	9	3	5'	31'		
				67	118				
BIELLA NORD		268	4500	13	4	6'	37'		
				54	114				
LILE		181	4500	7	6	4/+5	46'		
	123.05			47	108				
BIELLA NORD		001	4500	7	5	4/+5	55'		
				40	103				
ROMAGNANO		088	4500	12	4	6'	01'		
				28	99				
ARONA		042	4500	10	3	5'	06'		
				18	96				
MALNATE		088	4500	14	4	7'	14'		
				4	92				
LILN		167	4500	4	5	2/+5	21'		
	128.55			0	87				
Destination Airport		**TOTAL**							
LILN 128.55				94	50	71'			

1

Main table on the right, alternate on the left.

Figure 4.7 – Club Navlog – Back

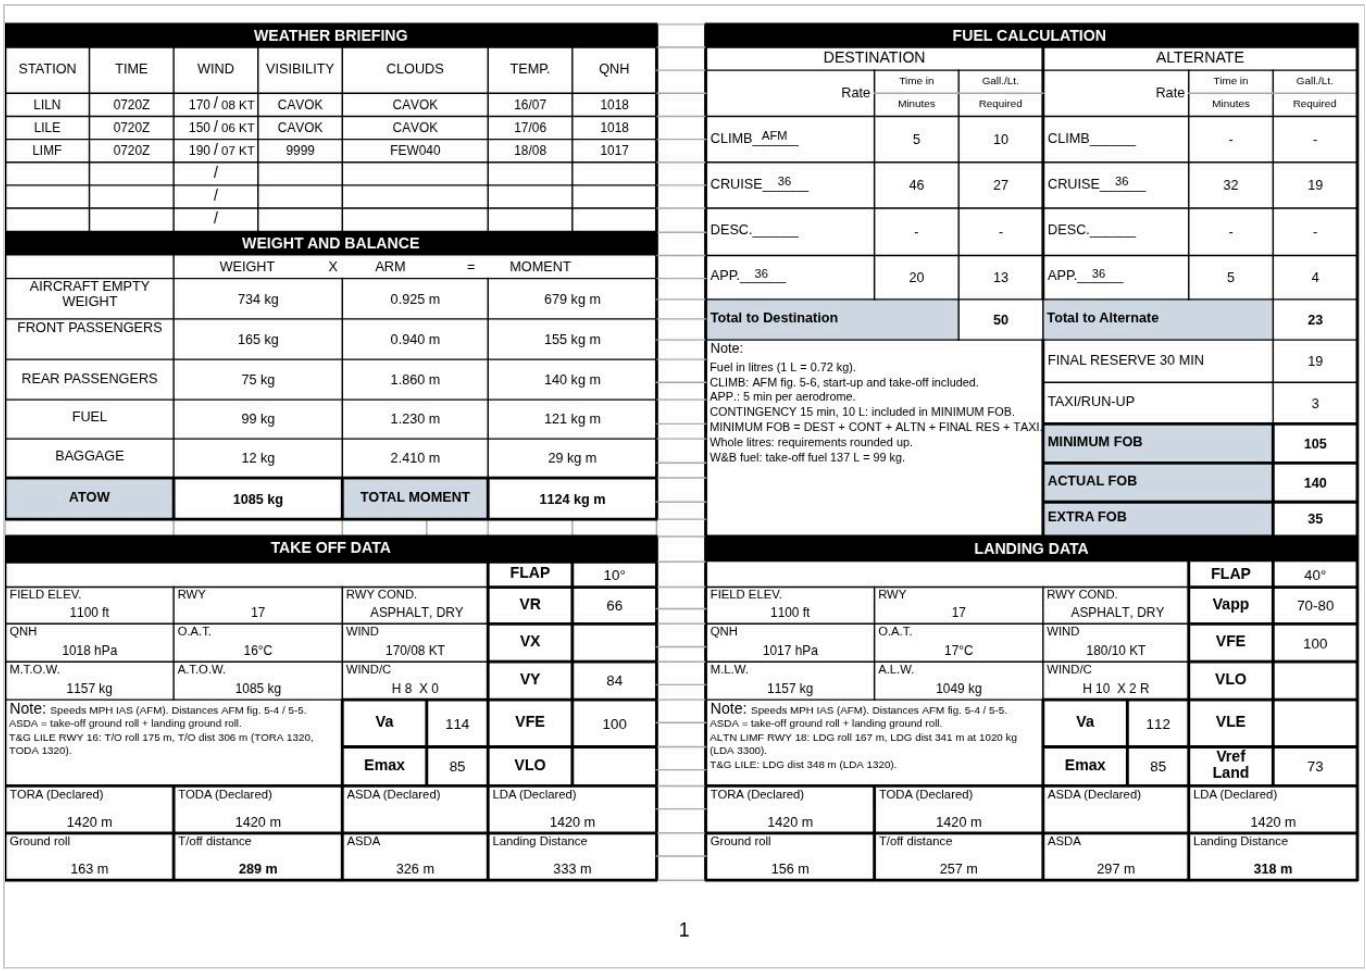

WEATHER BRIEFING

STATION	TIME	WIND	VISIBILITY	CLOUDS	TEMP.	QNH
LILN	0720Z	170 / 08 KT	CAVOK	CAVOK	16/07	1018
LILE	0720Z	150 / 06 KT	CAVOK	CAVOK	17/06	1018
LIMF	0720Z	190 / 07 KT	9999	FEW040	18/08	1017
		/				
		/				
		/				

WEIGHT AND BALANCE

	WEIGHT	X	ARM	=	MOMENT
AIRCRAFT EMPTY WEIGHT	734 kg		0.925 m		679 kg m
FRONT PASSENGERS	165 kg		0.940 m		155 kg m
REAR PASSENGERS	75 kg		1.860 m		140 kg m
FUEL	99 kg		1.230 m		121 kg m
BAGGAGE	12 kg		2.410 m		29 kg m
ATOW	**1085 kg**		**TOTAL MOMENT**		**1124 kg m**

TAKE OFF DATA

					FLAP	10°
FIELD ELEV. 1100 ft	RWY 17	RWY COND. ASPHALT, DRY			**VR**	66
QNH 1018 hPa	O.A.T. 16°C	WIND 170/08 KT			**VX**	
M.T.O.W. 1157 kg	A.T.O.W. 1085 kg	WIND/C H 8 X 0			**VY**	84
Note: Speeds MPH IAS (AFM). Distances AFM fig. 5-4 / 5-5. ASDA = take-off ground roll + landing ground roll. T&G LILE RWY 16: T/O roll 175 m, T/O dist 306 m (TORA 1320, TODA 1320).			**Va**	114	**VFE**	100
			Emax	85	**VLO**	
TORA (Declared) 1420 m	TODA (Declared) 1420 m	ASDA (Declared)			LDA (Declared) 1420 m	
Ground roll 163 m	T/off distance **289 m**	ASDA 326 m			Landing Distance 333 m	

FUEL CALCULATION

DESTINATION Rate	Time in Minutes	Gall./Lt. Required	ALTERNATE Rate	Time in Minutes	Gall./Lt. Required
CLIMB AFM	5	10	CLIMB	-	-
CRUISE 36	46	27	CRUISE 36	32	19
DESC.	-	-	DESC.	-	-
APP. 36	20	13	APP. 36	5	4
Total to Destination		**50**	**Total to Alternate**		**23**

Note:
Fuel in litres (1 L = 0.72 kg).
CLIMB: AFM fig. 5-6, start-up and take-off included.
APP.: 5 min per aerodrome.
CONTINGENCY 15 min, 10 L: included in MINIMUM FOB.
MINIMUM FOB = DEST + CONT + ALTN + FINAL RES + TAXI.
Whole litres: requirements rounded up.
W&B fuel: take-off fuel 137 L = 99 kg.

FINAL RESERVE 30 MIN	19
TAXI/RUN-UP	3
MINIMUM FOB	**105**
ACTUAL FOB	**140**
EXTRA FOB	**35**

LANDING DATA

					FLAP	40°
FIELD ELEV. 1100 ft	RWY 17	RWY COND. ASPHALT, DRY			**Vapp**	70-80
QNH 1017 hPa	O.A.T. 17°C	WIND 180/10 KT			**VFE**	100
M.L.W. 1157 kg	A.L.W. 1049 kg	WIND/C H 10 X 2 R			**VLO**	
Note: Speeds MPH IAS (AFM). Distances AFM fig. 5-4 / 5-5. ASDA = take-off ground roll + landing ground roll. ALTN LIMF RWY 18: LDG roll 167 m, LDG dist 341 m at 1020 kg (LDA 3300). T&G LILE: LDG dist 348 m (LDA 1320).			**Va**	112	**VLE**	
			Emax	85	**Vref Land**	73
TORA (Declared) 1420 m	TODA (Declared) 1420 m	ASDA (Declared)			LDA (Declared) 1420 m	
Ground roll 156 m	T/off distance 257 m	ASDA 297 m			Landing Distance **318 m**	

1

Weather, weight and balance, fuel calculation, take-off and landing data.

4.4 Dashboard – Saved flights

The Dashboard is the first page after signing in. **New Flight** opens the Import page (Section 2); saved flights are reopened from their cards. While a flight plan is open in the wizard, **Back to the open flight plan** returns to it. Reloading the page also shows the Dashboard first.

1. **SELECT Save to Standby** to store the flight, for example while waiting for the weather. The Dashboard opens.
2. **LOAD** the briefing PDF on the standby card (B) to finalise the flight: it moves to READY TO FLY (D).
3. **SELECT Edit data** (C) to reopen a standby flight in the wizard.
4. **LOAD** a newer briefing on a completed card (E) to update its weather.
5. **SELECT View OFP** (F) to reopen a completed flight in the wizard.

> **NOTE**
> Opening a saved flight or starting a new one closes the flight plan open in the wizard: save it first with **Save to Standby**.

> **CAUTION**
> Saved flights are stored in your account. On a shared device, select **Sign out** at the end of the session: it removes the local copy from the device. Graphic weather charts are not stored with the flight.

Figure 4.8 – Dashboard



A	**Standby badge**	Awaiting weather
B	**Load briefing**	Finalise
C	**Edit data**	Reopen
D	**Ready to fly badge**	Weather loaded
E	**Update WX**	LOAD newer briefing
F	**View OFP**	Reopen

SECTION 5 Operational Notes – Safety & Performance Limits

5.1 Aircraft applicability

> **WARNING**
> AFM data are those of the Reims FR172J (I-CCAF) and FR172H (I-CCAB); empty masses and moments are those of the two aircraft. With **Other**, speeds are those of the FR172J. Used for any other aircraft the results are not approximate: they are wrong.

5.2 Performance limits

ITEM	LIMITATION	EFFECT
Declared distances	TORA / TODA / LDA pre-filled with the physical runway length (OurAirports)	**Must** be corrected from the AIP where stopway, clearway or displaced threshold exist, or NOTAM changes apply
Tailwind	The AFM publishes no tailwind data	Distances are for zero wind and **shorter than actual** (red warning)
Wet / contaminated runway	No AFM data	No increment applied (red warning)
Grass runway	AFM grass increment	Applied when “Grass, dry” is selected
Landing mass	Landing table published at 1157 kg only	Conservative at lower masses
Touch and go	Computed with the take-off mass	Conservative
Headwind credit	Limited to the range of the AFM table / note	Grey advisory when limited
V-speeds	AFM table, no interpolation, conservative rounding	—
Weather for performance	Own METAR; nearest station within 30 NM on request; otherwise ISA standard values	Standard values flagged in red

5.3 Fuel planning as implemented

ITEM	METHOD
Trip	Climb from DEP elevation to cruise altitude (AFM fig. 5-6, 1157 kg, start-up and take-off included) + cruise over the remaining distance at the selected GS and fuel flow. Descent is not modelled separately (included in cruise). + **aerodrome minutes**: 5 min for each leg from or to an aerodrome (first and last leg; the two legs around an en-route aerodrome only if Touch & Go is selected), at cruise fuel flow.
Contingency	max(5% of Trip, 15 min at cruise fuel flow)
Alternate	Cruise, 22 inHg / 2400 RPM at the alternate altitude, over the alternate distance, + 5 aerodrome minutes. No climb allowance.
Final reserve	30 min (VFR) or 45 min (IFR) at cruise fuel flow
Taxi	(TO − OFF) + (ON − LDG) at 7.5 L/h
Units	1 L = 0.72 kg; 174 L (46 USG) usable

5.4 Navigation data

- Cruise GS is TAS (still air) until corrected for wind by the pilot.
- The alternate distance is a great-circle distance.

- Frequencies are the number only, from OurAirports: CROSS-CHECK with current charts / AIP.
- Navlog times and fuel are recomputed by the application; their totals equal the Trip.

5.5 Daylight check

- Sunrise / sunset: upper limb at −0.833°; civil twilight: centre at −6° (night as defined in Regulation (EU) 923/2012).
- Rounded conservatively: sunset and end of twilight to the minute before, sunrise to the minute after.
- Uses the flight date of Step 8 and the UTC times of Step 1. No elevation correction (as in published tables).

5.6 Documents and storage

- The OFP is printed from the downloaded PDF, with the PDF viewer.
- Saved flights are stored in the pilot's account and are visible only to that pilot. On a shared device, **Sign out** at the end of the session.
- The A5 NAV-FLIGHTPLAN is a separate document and must be downloaded separately.

The documents produced are an aid to planning. Responsibility for the flight remains with the Pilot in Command.

APPENDIX A Pre-Departure Cross-Check

Carry out before printing the documents. Each item refers to the section where the check is described.

ITEM	CHECK	REF.	✓
Times	OFF / TO in UTC; LDG, ON, BLOCK, FLT plausible	3.1	☐
Daylight	TO, LDG and ALTN landing reviewed; no unaccepted AFTER SUNSET / NIGHT	3.1	☐
Cruise	Altitude, RPM, MAP selected; GS corrected for wind	3.2	☐
Climb	Cruise altitude reached; TOC position plausible	3.2	☐
Alternate	ALTN entered; distance and altitude verified	3.2	☐
Fuel	Plan Block within 174 L usable; FOB not INSUFFICIENT	3.2	☐
Mass & balance	Masses within limits; CG within envelope at take-off and both landings	3.3	☐
Runways	Runway selected on every tab; TORA / TODA / LDA cross-checked with AIP and NOTAM	3.4	☐
Performance	All margins positive; every Checks & Warnings item reviewed	3.4	☐
Navlog	Totals equal Trip time and fuel; frequencies verified	3.5	☐
Weather & NOTAM	Correct aerodrome and current issue in every box; SIGMET / AIRMET box not empty	3.8	☐
Date / PIC	Flight date and PIC name entered	3.8	☐
Documents	OFP and NAV-FLIGHTPLAN downloaded / printed; OFP signed	4.2 / 4.3	☐