
CMC RESCUE®

MPD™

Multi-Purpose Device

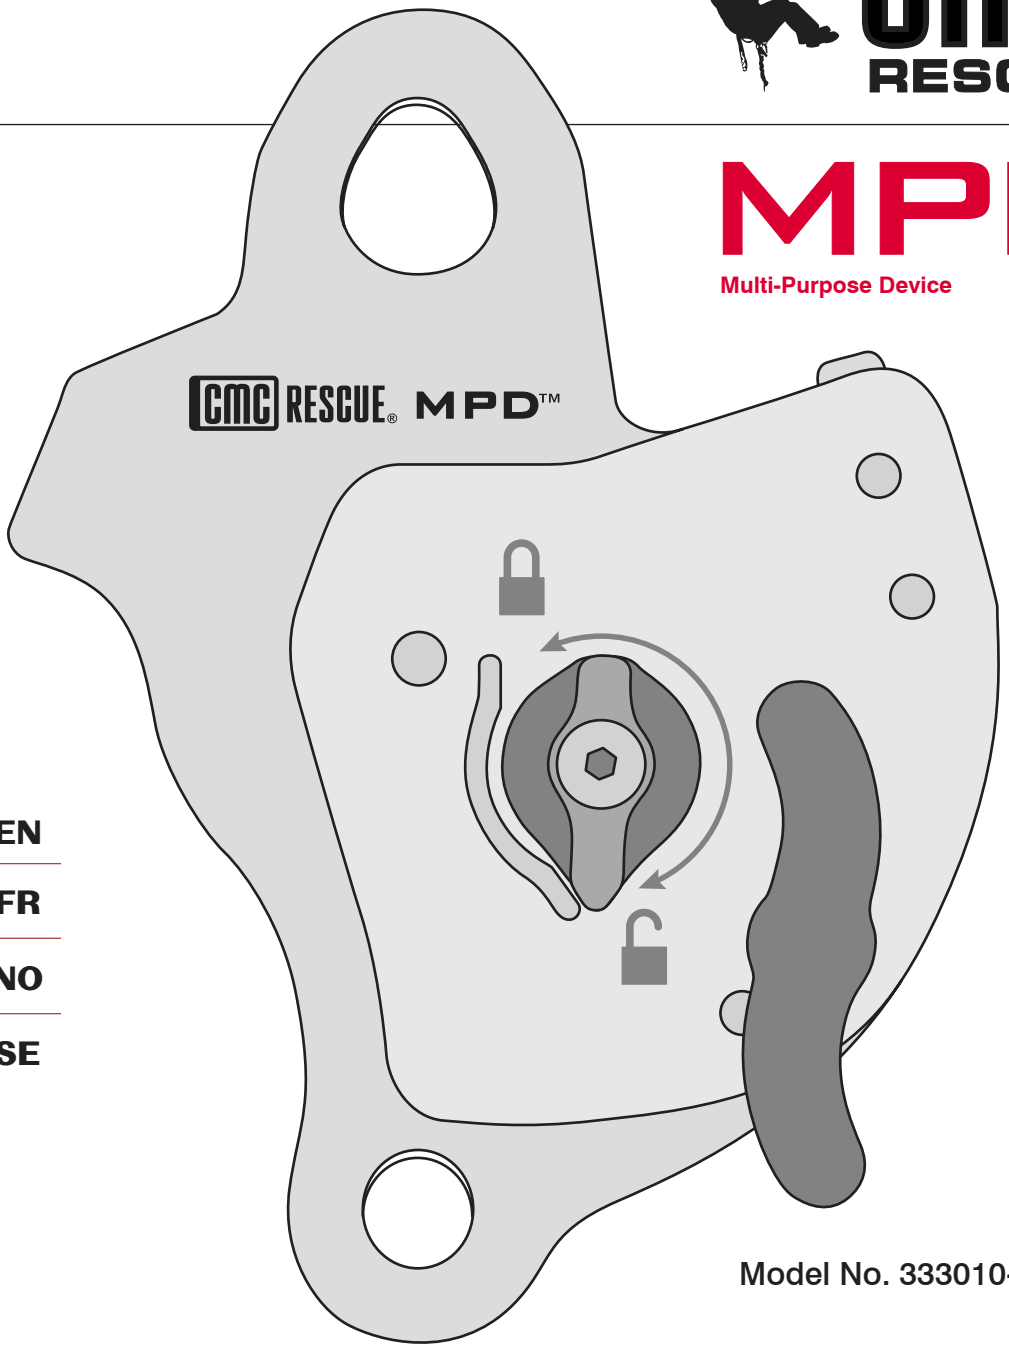

EN

FR

NO

SE

Model No. 333010-CE

Pulley / Descender / Belay Device

CE 1019
EN 12278:2007
EN 341:2011/2A
EN 12841:2006/C

MADE IN USA
Patented

⚠ WARNING


Activities involving the use of this device are potentially dangerous. You are responsible for your own actions and decisions.

Before using this device, you must:

- Read and understand these user instructions and warnings;
- Get specific training in its proper use;
- Familiarize yourself with its capabilities and limitations;
- Understand and accept the risks involved.

FAILURE TO HEED ANY OF THESE WARNINGS MAY RESULT IN SEVERE INJURY OR DEATH.

0 Traceability and Markings

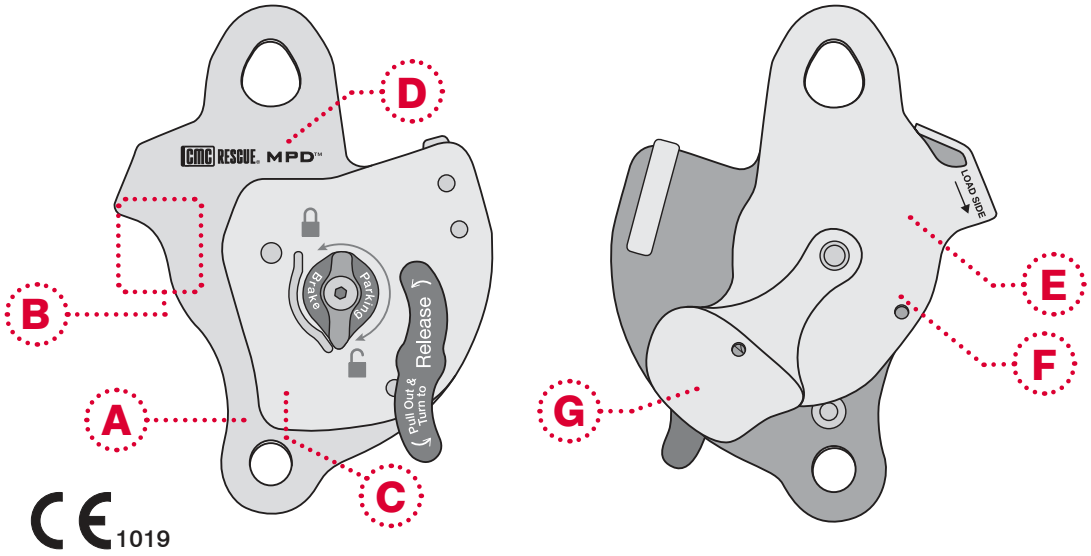

A. Body controlling production of this PPE

No. 1019
VVUÚ, a.s.
Pikartská 1337/7
716 07 Ostrava - Radvanice
Czech Republic

B. Standards

C. Carefully read the instructions for use

D. Model identification

E. Individual number

00 000 M 0000

- Unit serial number
- Control
- Day of manufacture
- Year of manufacture

F. Anchor/load end of rope

G. Free end of rope


1 Field of Application

See Text

4 Inspection, Points to Verify

See Text

2 Breaking Strength

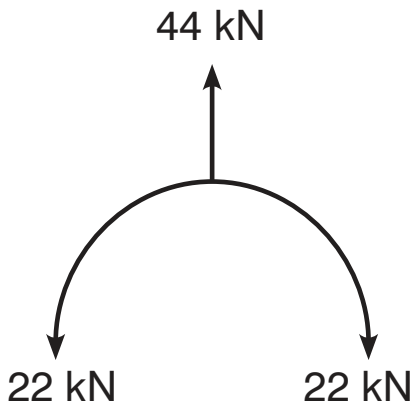

5 Compatibility




Ø 11 mm


(EN) Rope (core + sheath) static, semi-static (EN 1891) type A




3 Nomenclature of Parts

See Text

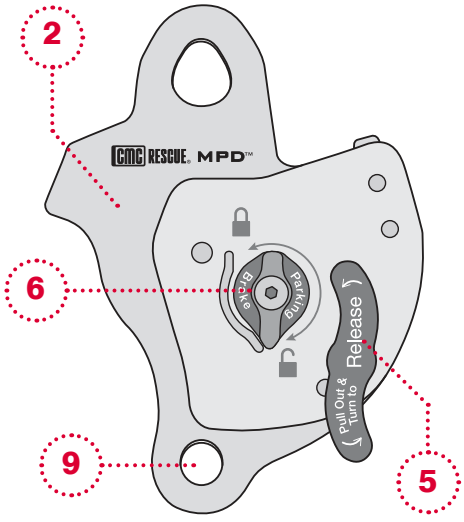


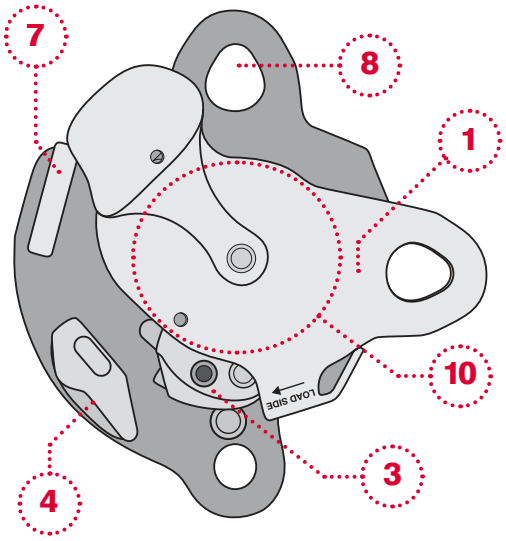


6 Installing the Rope

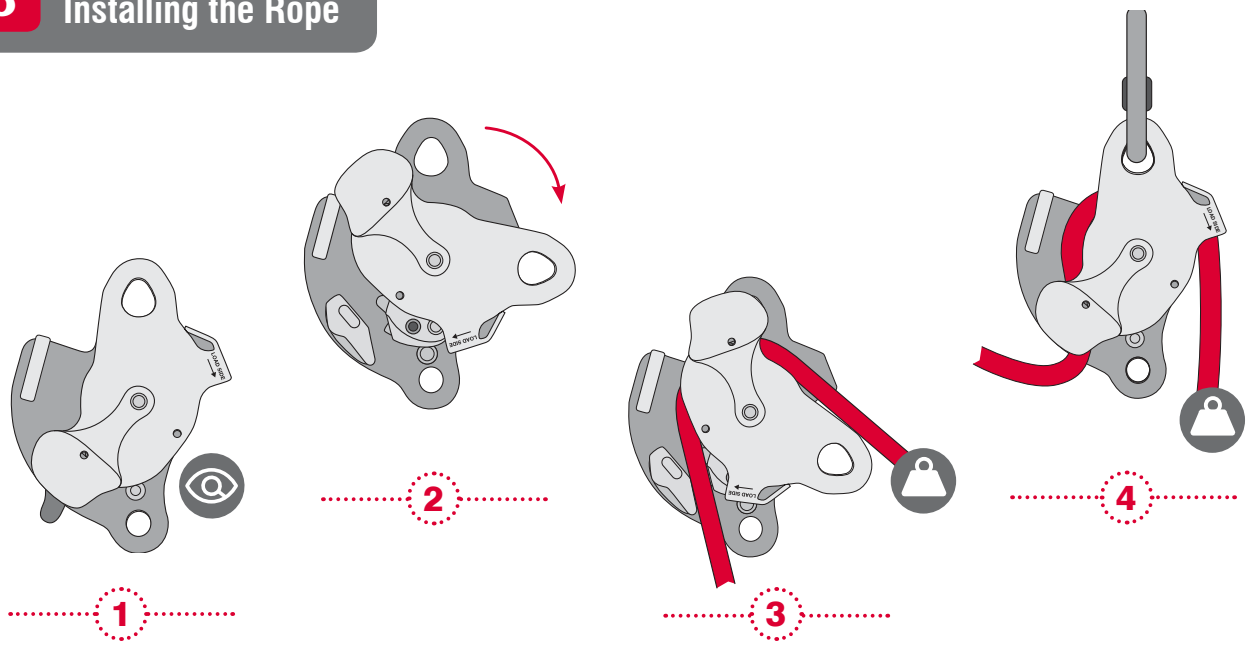

7 Function Test

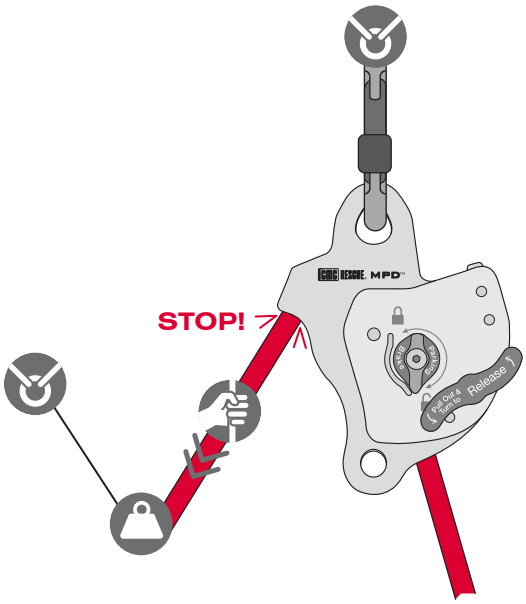


8 Securing

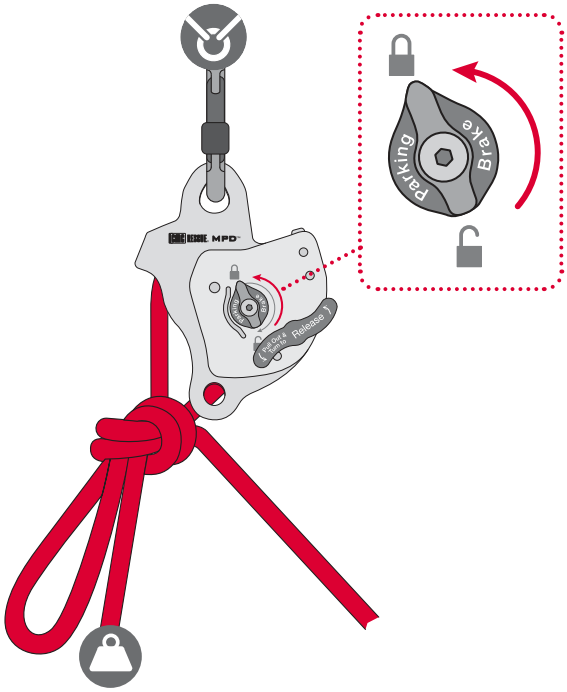


9a EN 341:2011/2A Rescue Descender

Maximum Descent Height: 200 m
Minimum/Maximum Working Load: 30–240 kg
Maximum Descent Rate: 2 m/s


Descent—Two People

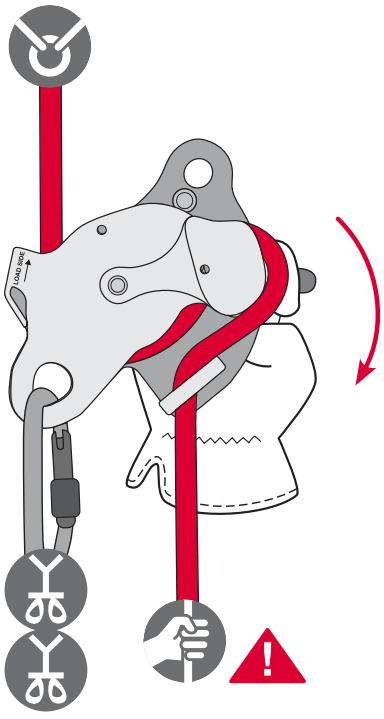

Lowering From Anchor—One Person

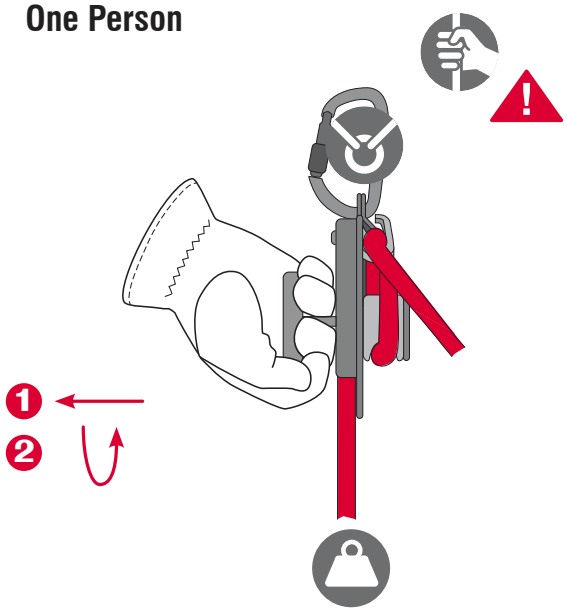


Lowering From Anchor—Two People

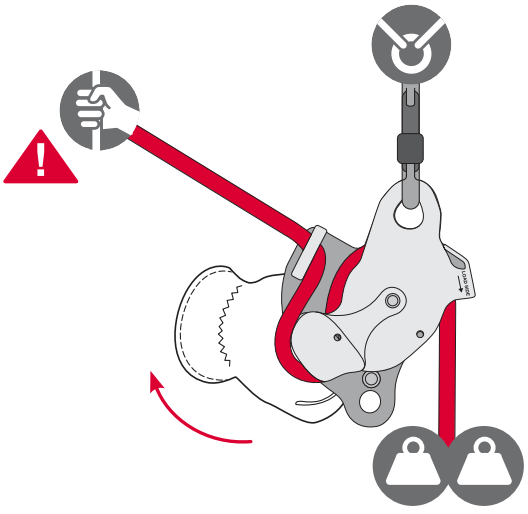


9b Hauling a Load


Simple 3:1 MA System

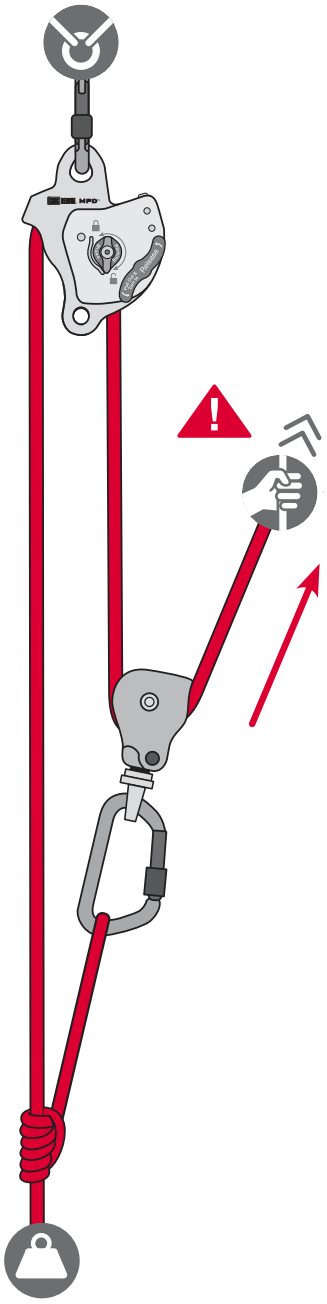


Simple 5:1 MA System

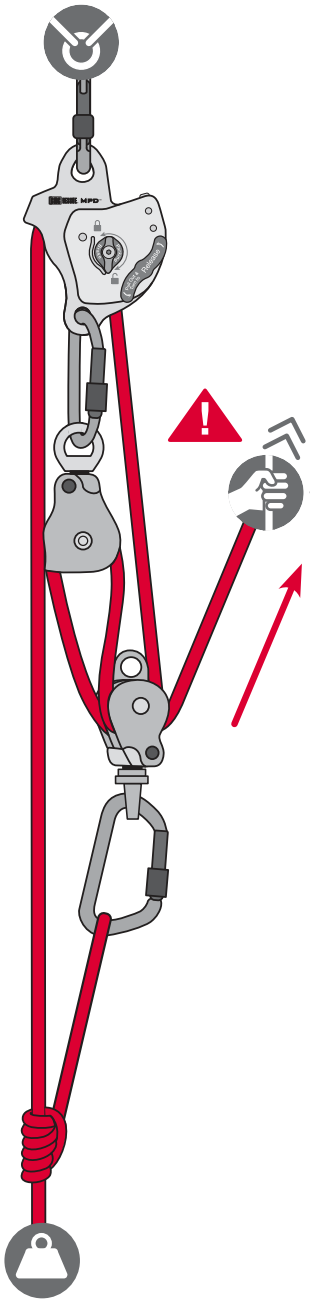

9c Belaying

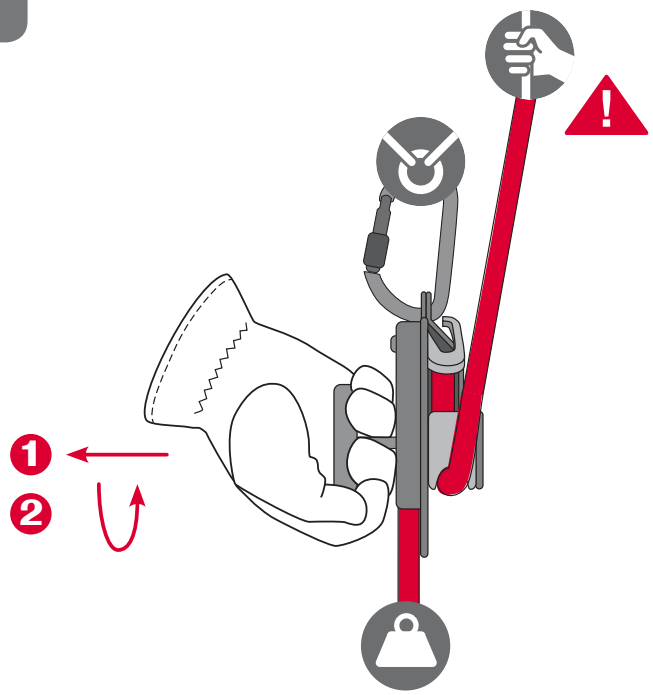


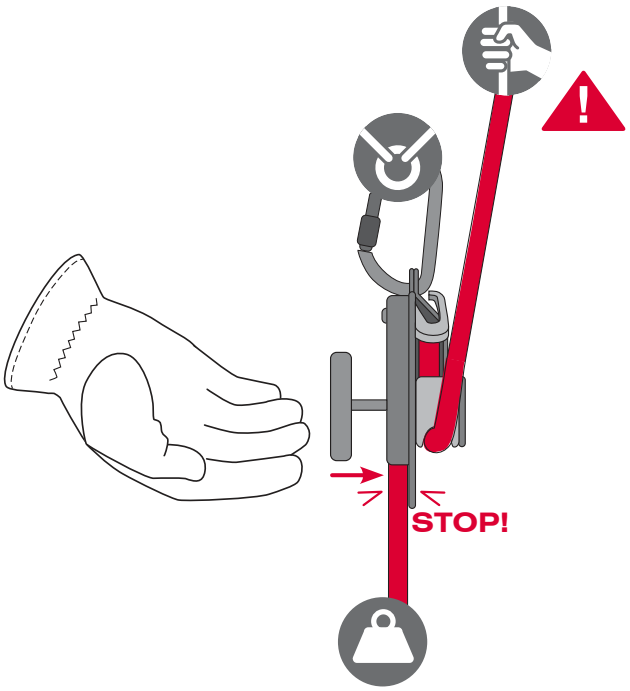


9d EN 12841:2006/C Rope Adjustment Device

Maximum Descent Height: 200 m
Minimum/Maximum Working Load: 30–240 kg
Maximum Descent Rate: 2 m/s

Descent — One Person

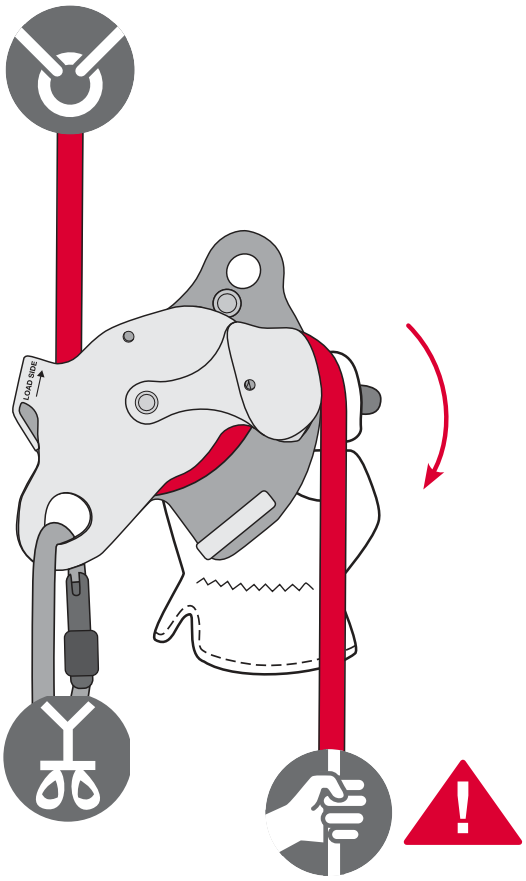

Work Positioning — Secured Stop

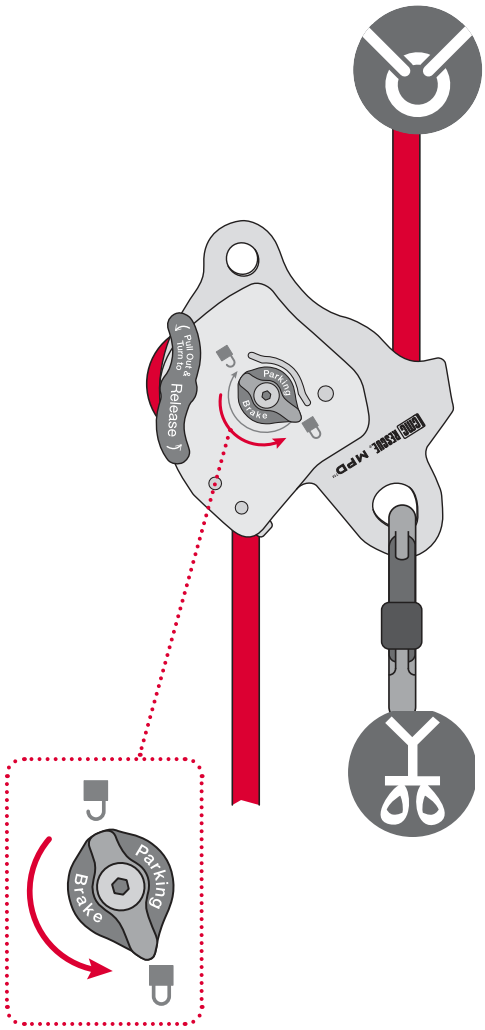


10 Heavy Loads, Expert Use Only

Ø 11.0 mm


10a Heavy Loads, Expert Use Only - Descent / Lower

Maximum load: 272 kg
Rope Ø 11 mm

Descent—Two People

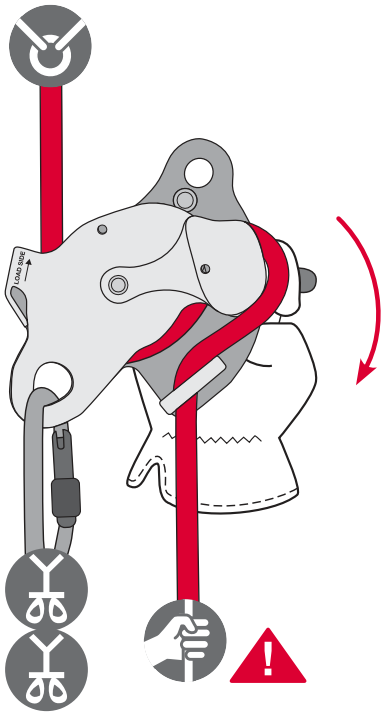



Lowering From Anchor—Two People

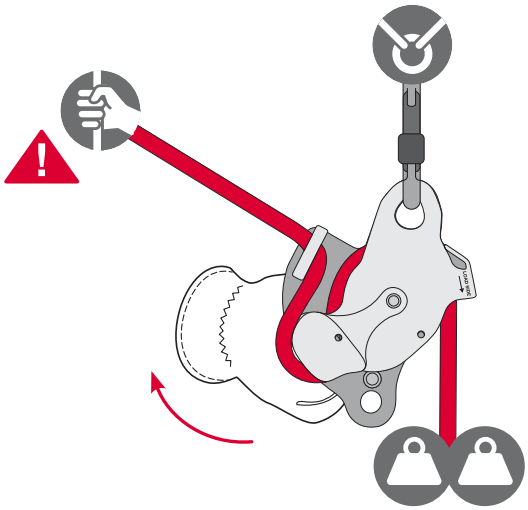

10b Heavy Loads, Expert Use Only - Belaying

Maximum load: 272 kg
Rope ∅ 11 mm

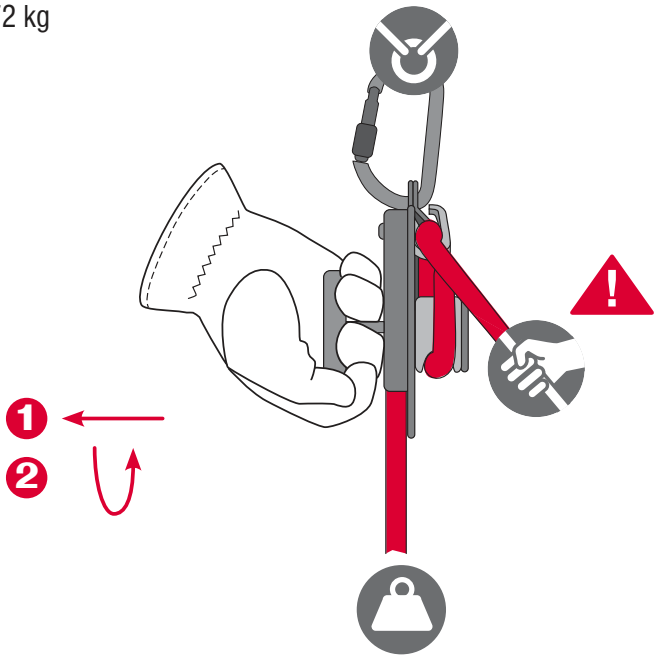

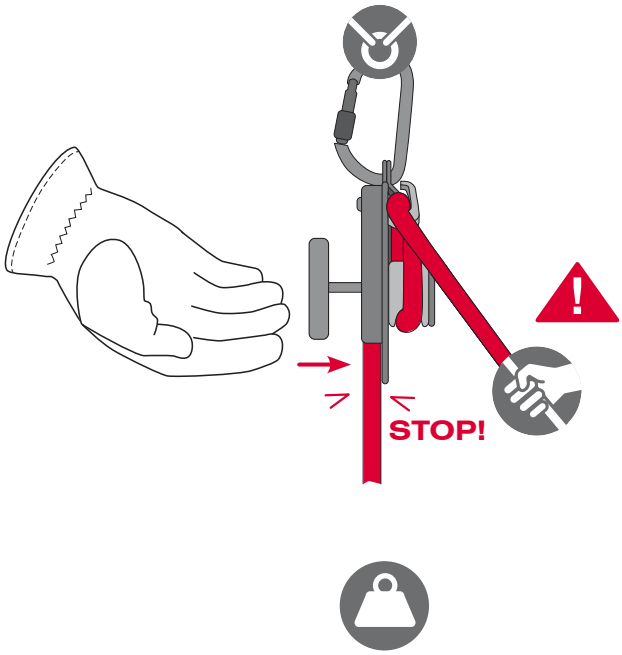


11 Additional Information

A. Lifetime



B. Acceptable T°

+80°C
-40°C



C. Precaution for Use



D. Cleaning





+30°C Max


E. Drying



+30°C Max

F. Storage/Transport

+80°C
-40°C

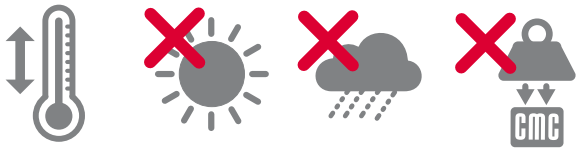

G. Maintenance



H. Modifications/Repairs



I. Questions/Contact



12 Legend



Examine/ Check | Rappeller | Anchor | Load | Grip | Grip and Pull

1. Field of Application

Personal Protective Equipment (PPE)

Pulley EN 12278

Rescue Descender EN 341 Type 2A

Rope Adjustment Device EN 12841 Type C

Belay Device

This device must not be loaded beyond its strength rating, nor be used for any purpose other than that for which it is designed.

Responsibility

WARNING: Activities involving the use of this device are potentially dangerous. You are responsible for your own actions and decisions.

Before using this device, you must:

- Read and understand these user instructions and warnings;
- Get specific training in its proper use;
- Familiarize yourself with its capabilities and limitations;
- Understand and accept the risks involved;
- Have a rescue plan in place to deal with any emergencies that could arise during use of the device.

FAILURE TO HEED ANY OF THESE WARNINGS MAY RESULT IN SEVERE INJURY OR DEATH.

Specific training in the activities defined in the field of application is essential before use. This device must only be used by competent and responsible persons, or those placed under the direct and visual control of a competent and responsible person. Gaining an adequate apprenticeship in appropriate techniques and methods of protection is your own responsibility.

You personally assume all risks and responsibilities for all damage, injury or death which may occur during or following incorrect use of this device in any manner whatsoever. If you are not able, or not in a position to assume this responsibility or to take this risk, do not use this equipment.

2. Strength

Breaking strength: 44 kN
Becket strength: 33 kN

3. Nomenclature of Parts

(1) Moving side plate
(2) Fixed side plate
(3) Moving brake
(4) Fixed brake with V-groove
(5) Release handle
(6) Parking brake
(7) Secondary friction post
(8) Anchor attachment hole
(9) Becket
(10) Sheave

Principle materials: aluminum alloy, stainless steel.

4. Inspection, Points to Verify

CMC Rescue recommends a detailed inspection by a competent person at least once every 12 months. Record the date of the inspection and the results in the equipment log.

Before Each Use

Verify that the device has no cracks, deformation, marks, excessive wear, corrosion, etc. Check that the Sheave is in good condition and working properly. Verify the mobility of the Moving brake and the effectiveness of the return spring. Verify that the Release handle engages and disengages smoothly and turns freely. Verify that the Parking brake moves smoothly through the entire range. Verify that all markings are legible.

During Each Use

Make sure that all pieces of equipment in the system are correctly positioned with respect to each other. It is important to regularly monitor the condition of the device and its connections to other equipment in the system. Do not allow anything to interfere with the operation of the device or its components (Sheave, Moving brake, etc.). Keep foreign objects out of the device. To reduce the risk of a free fall keep all slack out of the rope between the device and the load. Warning: braking/locking effectiveness can vary depending on the state of the rope (wear, mud, moisture, ice, etc.)

5. Compatibility

Verify that this device is compatible with the other elements of the system in your application (compatible = good functional interaction).

Ropes

WARNING: Certain ropes may be slippery: new ropes, small diameter ropes, wet or frozen ropes. Contact CMC Rescue if you are uncertain about the compatibility of your equipment.

6. Installing the Rope

(1) Review the diagram on the Moving side plate for proper loading.

(2) Rotate Moving side plate fully open.

(3) Load rope according to diagram. Parking brake must be unlocked to load rope.

(4) Close and secure to an appropriate anchor with a locking connector through both side plates.

7. Function Principle and Test

The MPD allows the rope to be pulled through in one direction, but friction of the rope on the Sheave in the other direction causes the Moving brake to pivot and capture the rope between the Moving and Fixed brakes. By holding the braking side of the rope, the brake hand helps engage the Moving brake.

Always perform a safety check by unlocking the Parking brake and giving a quick tug on the load end of the rope to ensure proper rigging prior to committing a live load over an edge. When rigged properly, the MPD will lock up. The MPD must be properly rigged prior to use.

WARNING: DANGER OF DEATH

Do not allow anything to interfere with the operation of the device or its components (Sheave, Moving brake, etc.). Any constraint on the device may negate the braking function.

8. Securing

NOTE: the Parking brake is intended to temporarily secure the MPD when it is necessary for the operator to release their grip on the running end of the rope. If the MPD is to be left unattended, or if you need to release your grip on the running end of the rope for more than a short time, lock the Parking brake first and then secure the MPD by tying off the running end of the rope around the load end with an appropriate tie-off method.

9. Instructions for Use

The device has been designed to be used in weather conditions that can normally be withstood by humans (operating temperature range between +40°C and -40°C).

All the materials and treatments are hypoallergenic and do not cause skin irritation or sensitivity. During use, it is essential for your own safety, that the device and the anchor points are always correctly placed, and that the work is organized in such a way, to minimize the risk of a fall from a height. Always ensure enough clearance to avoid impacts with the ground or obstacles in case of a fall. Use only anchor points that comply with EN 795 (minimum strength 12 kN or 18 kN for non-metallic anchors) that do not have sharp edges. The anchor point for the system should preferably be located above the user's position to minimize potential free fall distance.

9a. EN 341:2011/2A Rescue Descender

Lowering/Descent: Firmly grip the running end rope and apply friction over the Fixed brake. Maintain an "S-shaped" bend in rope. Pull out and rotate Release handle fully. Braking is regulated by varying the friction of the rope on the Fixed brake. Release the handle to activate the self-braking function.

For heavy loads, add additional friction with the Secondary friction post.

WARNING: FOR RESCUE USE ONLY.

- **Always maintain firm grip on the running end of the rope. Do not lose control during descent; loss of control may be difficult to recover.**
- Always tie a knot at the end of the rope.
- The device can overheat and damage the rope during descent.
- Equipment left in place must be protected from the weather.

Technical specifications of rope used for testing. Sheath slippage - 0,5%; Elongation - 3%; Weight of sheath - 27 g/m; Weight of core - 45 g/m; Weight of rope - 72 g/m; Shrinkage - 3,7%; Material - Polyamide.

9b. Hauling

Add an appropriate rope grab and travelling pulley to the working rope, and if desired a second change of direction pulley to the Becket of the MPD, to build simple or compound MA systems. The one-way pulley inside the MPD acts as a progress capture and effectively locks the rope during pulley system resets.

9c. Belaying

To belay a lowering system: firmly grip the running end of the rope and bring it back toward the anchor, parallel to the load end, creating an "S-shaped" bend in the rope as it passes through the MPD. Unlock the Parking brake, then pull out and rotate the Release handle until the Moving brake is fully open. **If there is a sudden change in speed or tension on the rope running through the MPD, the belayer must immediately let go of the Release handle (disengage) while maintaining a firm grip on the running end of the rope to ensure the braking mechanism activates and arrests the load in the shortest distance possible.**

WARNING: YOU MUST LET GO OF THE RELEASE HANDLE WHILE MAINTAINING A FIRM GRIP ON THE RUNNING END OF THE ROPE TO ACTIVATE THE BELAY!

Belaying a raising system: simply pull the rope hand over hand through the device, keeping a firm grip on the running end at all times.

The MPD has been third party tested and certified, and meets the belay device (auxiliary equipment) requirements of, NFPA 1983. The MPD will yield a peak impact force of less than 15 kN and a belay system extension of less than 1 m when a 136 kg mass is dropped 60 cm on 300 cm of rope. Please contact CMC Rescue for more details.

9d. EN 12841:2006/C Rope Adjustment Device

Descent: Firmly grip the running end rope and apply friction over the Fixed brake. Maintain an "S-shaped" bend in rope. Pull out and rotate Release handle fully. Braking is regulated by varying the friction of the rope on the Fixed brake. Release the handle to activate the self-braking function.

Use the same technique for sloping or horizontal terrain. For heavy loads, add additional friction with the Secondary friction post.

Use EN 1891 type A (core + sheath) static or semi-static ropes, ∅11 mm. (Note: certification testing was performed with Teufelberger PATRON ∅ 11 mm rope.)

ATTENTION: EN 12841 rope adjusters must not be used in fall arrest systems. An anchor rope loaded with the full weight of a user is a working line. A type A back-up device connected to a safety line must be used. Ensure that the back-up system is never loaded onto the working line. Any overloading or dynamic loading may damage the anchor rope.

Attach the descender directly to your harness using an EN 362 locking carabiner. Never use lanyards or extensions of any type to connect the descender to your harness. Any equipment used with your descender must be in compliance with current standards.

10. Heavy Loads, Expert Use Only

For expert users specifically trained in this use, the MPD can be used for loads up to 272 kg. In these cases users should take caution and always maintain a firm grip on the running end of the rope.

10a. Heavy Loads, Expert Use Only - Descent/Lower

The MPD can be used to descend and lower loads up to 272 kg. For these high loads cases it is required to use the secondary friction post.

10b. Heavy Loads, Expert Use Only - Belaying

The MPD can be used to belay loads up to 272 kg. The MPD has been tested at CMC to meet the BCCTR belay test criteria. Under this test the MPD will yield a peak impact force of less than 15 kN and a belay system extension of less than 1m when a 272 kg mass is dropped 1 m on 3 m of rope.

11. Additional Information

A. Lifetime: Indefinite

When to retire your equipment

WARNING: An exceptional event can lead you to retire a device after only one use, depending on the type and intensity of usage and the environment of usage (harsh environments, marine environment, sharp edges, extreme temperatures, chemical products, etc.)

A device must be retired when:

- It has been subjected to a major fall (or load);
- It fails to pass inspection. You have any doubt as to its reliability;
- You do not know its full usage history;
- When it becomes obsolete due to changes in legislation, standards, technique or incompatibility with other equipment, etc. Destroy retired equipment to prevent further use.

B. Acceptable Temperatures

C. Usage Precautions

D. Cleaning

E. Drying

F. Storage/Transport

G. Maintenance

H. Modifications/Repairs

(prohibited outside of CMC Rescue facilities)

I. Questions/Contact:

CMC Rescue, Inc.
6740 Cortona Drive, Goleta CA 93117, USA
805-562-9120 / 800-235-5741
cmcrescue.com / info@cmcrescue.com

The instructions for use must be provided to users of this equipment in the language of the country in which it is to be used.

1. Domaine d'application et normes d'usage

Equipement de Protection Individuelle (EPI)

Poulies EN 12278

Descendeur de secours EN 341 Type 2A

Dispositifs de réglage de corde pour maintien au poste de travail EN 12841 Type C

Dispositif d'assurage

Cet équipement ne doit pas être utilisé au-delà de sa valeur de résistance et ne doit pas être utilisé pour un tout autre usage pour lequel il n'a pas été conçu.

Responsabilité

ATTENTION : Les activités au cours desquelles l'utilisation de ce produit est indiquée sont potentiellement dangereuses. Vous êtes responsable de vos actions et décisions.

Avant d'utiliser ce produit, vous devez:

- Lire et comprendre ces instructions et mises en garde.
- Obtenir la formation approprié pour un usage correct.
- Vous familiariser avec ses capacités et limitations.
- Comprendre et accepter les risques encourus.
- Avoir un plan de secours prêt pour faire face à toute situation d'urgence qui pourraient survenir lors de l'utilisation de l'appareil.

LE NON-RESPECT DE CES AVERTISSEMENTS PEUT ENTRAINER DES BLESSURES GRAVES OU MORTELLES.

Une formation spécifique aux activités décrites pour l'utilisation de ce produit est indispensable avant toute utilisation. Ce produit doit être utilisé uniquement par des personnes responsables et compétentes, ou placées sous le contrôle direct et visuel d'une personne compétente et responsable. L'apprentissage des techniques adéquates et des méthodes de protection appropriées est de votre propre responsabilité.

Vous assumez personnellement tous les risques et la responsabilité de tout dommages, blessures ou décès qui pourraient survenir durant ou après une mauvaise utilisation de ce produit de quelque manière que ce soit. Si vous ne voulez ou ne pouvez pas assumer cette responsabilité ou prendre ce risque, vous ne devez pas utiliser ce produit.

2. Résistance

Résistance à la rupture : 44 kN
Résistance du point d'attachement inférieur : 33 kN

3. Nomenclature des éléments

(1) Surface ouvrable
(2) Surface fixe
(3) Frein mobile
(4) Frein fixe avec gorge en V
(5) Poignée de débrayage
(6) Verrouillage
(7) Renvoi pour freinage supplémentaire
(8) Point d'ancrage principal
(9) Point d'attache inférieur
(10) Réa

Matières : alliage d'aluminium, acier inoxydable.

4. Inspection, Points de vérification

CMC Rescue recommande une inspection détaillée par une personne compétente au minimum une fois tous les 12 mois. La date de contrôle doit-être reportée sur la fiche de suivi du produit.

Avant chaque utilisation

Vérifier que le produit ne présente aucune fissure, déformations, marque, usure excessive, corrosion, etc… Vérifier que le réa est en bon état et fonctionne correctement. Vérifier la mobilité du *Frein mobile*, son efficacité et le bon fonctionnement du mécanisme. Vérifier que la *poignée de débrayage* s'enclenche et se libère de façon fluide et tourne librement. Vérifier que le *mécanisme de Verrouillage* tourne correctement sur toute sa plage. Vérifier que toutes les inscriptions soient lisibles.

Au cours de chaque utilisation

S'assurer que toutes les pièces de l'ensemble du dispositif sont correctement positionnées. Il est important de contrôler régulièrement l'état du produit et ses connexions aux autres équipements. Ne permettre à rien d'interférer avec le fonctionnement du produit ou de ses composants (réa, frein mobile, etc…). Ne pas faire pénétrer de corps étrangers dans le produit. Pour réduire tout risque de chute libre maintenir sous tension la corde entre le produit et la charge. ATTENTION : le freinage/blocage peut varier en fonction de l'état de la corde (usure, boue, humidité, glace etc…).

5. Compatibilité

Vérifier que ce produit est compatible avec les autres éléments du system de cordage pour votre application (compatibilité = bonne interaction).

Cordes

ATTENTION : Certaines cordes peuvent être plus glissantes : cordes neuves, petit diamètre, mouillées ou glacées. Contacter CMC Rescue ou un de ses représentants si vous n'êtes pas sûr de la compatibilité de votre équipement.

6. Mise en place de la corde

(1) Pour une mise en place correcte, suivre le diagramme sur le flasque mobile.
(2) Ouvrir totalement le flasque mobile.
(3) Mettre en place la corde conformément au diagramme. Le Mécanisme de Verrouillage doit-être désactivé pour insérer la corde.
(4) Fermer la surface mobile et connecter à un ancrage adapté avec un connecteur de sécurité en passant dans les deux surfaces.

7. Principes de fonction et tests

Le MPD permet la corde d'être tirée dans un sens, mais la simple friction de la corde sur le réa dans le sens inverse fait pivoter le *Frein mobile* et bloque la corde entre le *frein mobile* et le *frein fixe*. Tenir la corde du côté frein par l'opérateur entraînera un blocage encore plus rapide.

Avant de commettre un secouriste sur une falaise, toujours procéder à un contrôle de sécurité en débloquant le mécanisme de verrouillage et tirant la corde d'un coup sec du côté de la charge. Lorsqu'il est correctement installé, le MPD doit bloquer la corde immédiatement. Le MPD doit-être correctement assemblé dans le system de cordage avant toute utilisation.

ATTENTION : DANGER DE MORT

Ne permettre à rien d'interférer avec le fonctionnement du produit ou de ses composants (réa, frein mobile, etc…). Toute contrainte sur le produit peut interférer avec la fonction de blocage.

8. Sécurisation

NOTE: le mécanisme de *Verrouillage* est conçu pour sécuriser temporairement le MPD lorsqu'il est nécessaire que l'opérateur lâche la corde. Si le MPD doit-être laissé sans surveillance, ou si vous devez lâcher la corde plus qu'un court instant, tourner le *mécanisme de verrouillage* puis sécuriser le MPD en effectuant une clé d'arrêt appropriée avec la corde libre autour de la corde de charge.

9. Instructions d'utilisation

Le produit a été conçu pour être utilisé dans des conditions climatiques supportables pour des humains (la plage de température d'utilisation est de +40°C à -40°C). Tous les matériaux et traitements sont hypoallergéniques et ne causent pas d'irritation cutanée. Durant l'utilisation il est essentiel pour votre propre sécurité que le produit et les points d'ancrage soient correctement placés et que le poste de travail soit configuré de manière à minimiser les risques de chute. Toujours assurer un dégagement suffisant pour éviter tout impact avec des objets ou le sol (tirant d'air). Toujours utiliser des points d'ancrage répondant à la norme EN 795 (résistance minimum 12 kN ou 18 kN pour les ancrages non métalliques) ne présentant pas d'arête vives. Le point d'ancrage devrait de préférence se trouver au-dessus de la position de l'utilisateur afin de réduire les chances de chute libre possible.

9a. EN 341:2011/2A Descendeur de secours

Assurage/Descente : Tenir fermement le brin libre de la corde et le faire frotter contre le frein fixe. Conserver un « S » avec la corde. Tirer et tourner complétement la poignée de débrayage. Le freinage est régulé par variation de la friction de la corde sur le frein fixe. Relâchez la poignée pour activer la fonction d'auto - blocage.

Pour les charges lourdes, ajouter un point de friction supplémentaire au moyen du dispositif prévu à cet effet.

ATTENTION : POUR USAGE DE SAUVETAGE UNIQUEMENT.

- **Toujours tenir fermement le brin libre de la corde. Ne pas perdre le contrôle durant la descente ; en cas de perte de contrôle du freinage il peut être difficile de le retrouver.**
- Toujours avoir un nœud d'arrêt en bout de corde.
- Un équipement restant en place longtemps doit-être protégé des intempéries.

Caractéristiques techniques de la corde utilisée pour les tests : Glissement gaine : 0,5%; Allongement : 3%; Poids gaine : 27g/m; Poids de l'âme : 45 g/m; Poids de la corde : 72 g/m; Rétractation : 3,7%; Matière : Polyamide.

9b. Levage

Rajouter un bloqueur et une poulie appropriés sur la corde en charge. La mise en place d'une deuxième poulie (changement de direction) sur le point d'attachement inférieur permet d'obtenir rapidement un dispositif de démultiplication de force. La poulie bloqueur à l'intérieur du MPD bloque la corde immédiatement lors de chaque retour vers la charge du bloqueur de tête.

9c. Assurage

Pour assurer un système de descente : tenir fermement le brin libre de la corde et l'amener vers l'arrière (du côté de l'ancrage) parallèlement à la corde en charge, en faisant former un « S » à la corde qui passe dans le MPD. Débloquer la fonction *verrouillage*, puis tirer et tourner la *poignée de débrayage* jusqu'à ce que *le frein* mobile soit totalement libéré. **Si un changement de vitesse ou de tension est ressenti dans la corde qui sort du MPD (brin libre), l'opérateur doit immédiatement relâcher la *poignée de débrayage* tout en maintenant fermement le brin libre de la corde pour s'assurer que le mécanisme autobloquant s'active et stoppe la charge sur une distance la plus courte possible.**

ATTENTION : POUR ACTIVER LE MECANISME D'ASSURAGE, RELACHEZ LA POIGNEE DE DEBRAYAGE ET MAINTENEZ LA CORDE FERMEMENT.

Assurer un dispositif de levage : faire passer simplement la corde au travers de l'appareil, et maintenir fermement en permanence la corde du côté brin libre.

Le MPD a été testé et certifié, et répond aux exigences des dispositifs d'assurage (équipements complémentaires) NFPA 1983. Le MPD produira une force d'impact maximale inférieure à 15 kN et un allongement du système d'assurage de moins de 1 m quand une masse de 136 kg chute de 60 cm sur 300 cm de corde. Pour plus de détails contacter CMC Rescue.

9d. EN 12841:2006/C Dispositif d'ajustement de corde

Descente: Tenir fermement le brin libre de la corde et le faire frotter sur le *frein fixe*. Maintenir une forme « S » à la corde. Tirer et tourner totalement la *poignée de débrayage*. Le freinage est régulé en faisant varier le frottement de la corde sur le *frein fixe*. Relâcher la poignée pour activer la fonction d'auto blocage.

Utiliser la même technique pour les terrains en pentes légères ou horizontales. Pour les charges lourdes, utiliser la *patte de renvoi de freinage supplémentaire*.

Utiliser des cordes de type EN 1891 type A (âme + gaine) statiques ou semi-statiques, Ø 11 mm. (Note: la certification à été effectuée avec des cordes Teufelberger PATRON Ø 11 mm).

ATTENTION: selon la norme EN 12841 les systèmes d'accès par cordes ne doivent pas être utilisés dans les systèmes d'arrêt des chutes. Un ancrage de corde en charge avec le poids total de l'utilisateur est une corde de travail. Un dispositif d'arrêt des chutes de type A connecté à une corde de sécurité doit-être utilisé. Toute surcharge ou choc peut endommager l'ancrage de la corde.

Attacher le descendeur directement au harnais au moyen d'un mousqueton de sécurité EN 362. Ne jamais utiliser de longes ou extensions de quelque type que ce soit pour connecter le descendeur au harnais. Tout équipement utilisé avec votre descendeur doit-être compatible avec les normes en vigueur.

10. Charges lourdes, utilisation experte seulement

Pour les utilisateurs experts spécialement formés à cette utilisation, le MPD peut être utilisé pour des charges allant jusqu'à 272 kg. Dans ces cas, les utilisateurs doivent prendre des précautions et maintenir une prise ferme sur le bout de la corde.

10a. Charges lourdes, utilisation experte seulement - Descente/ abaissement

Le MPD peut être utilisé pour descendre ou abaisser des charges jusqu'à 272 kg. Pour ces cas de charges élevées, il est nécessaire d'utiliser le poste de friction secondaire.

10b. Fortes charges, utilisation experte uniquement - Assurer

Le MPD peut être utilisé pour assurer des charges jusqu'à 272 kg. Le MPD a été testé à CMC pour satisfaire aux critères du test d'assurage BCCTR. Au cours de ce test, le MPD produit une force d'impact maximale de moins de 15 kN et une extension du système d'assurage de moins de 1 m lorsqu'une masse de 272 kg tombe de 1 m sur 3 m de corde.

11. Informations complémentaires

A. Durée de vie: illimitée

Quand mettre au rebus votre produit ?

ATTENTION: Un évènement exceptionnel peut vous amener à retirer un produit seulement après une utilisation ; selon le type, l'intensité et l'environnement de l'utilisation (environnements extrêmes, environnements marin, arrêtes tranchantes, températures extrêmes, produits chimiques, etc…).

Un produit doit-être retiré lorsque :

- Il a subi une chute importante (ou choc),
- Il ne passe pas le contrôle. Vous avez des doutes sur sa fiabilité.
- Vous ne connaissez pas son historique d'utilisation.
- Quand il devient dépassé suite à des changements de législation, normes, techniques ou d'incompatibilité avec d'autres équipements, etc…Détruire et retirer le produit pour empêcher son utilisation.

B. Températures admissibles

C. Précautions d'usage

D. Nettoyage

E. Séchage

F. Stockage/Transport

G. Maintenance

H. Modifications/Réparations

(interdites en dehors du réseau CMC Rescue)

I. Questions/Contact:

CMC Rescue, Inc.,
6740 Cortona Drive,
Goleta CA 93117
USA 805-562-9120 / 800-235-5741
cmcrescue.com / info@cmcrescue.com

HORIZON VERTICAL:
211 rue de la gare
Heiligenberg gare
67129 MOLSHEIM Cedex – France
+33 (0)3 88 48 00 48
www.hove.fr
contact@cmcrescue.fr

Les instructions d'usage doivent être fournies aux utilisateurs de cet équipement dans la langue du pays dans lequel il est utilisé.

Equipment Record

Product Name, Model	MPD, 333010-CE
Product Type	Pulley / Descender / Belay
Patent No.	7,658,264
Manufacturer	CMC Rescue, Inc. 6740 Cortona Drive Goleta CA 93117 USA
Tel, Fax, Email and Website	Tel: 800-235-5741 / 805-562-9120 Fax: 800-235-8951 / 805-562-9870 Email: info@cmcrescue.com Web: www.cmcrescue.com
User (company, name, and address)	
Individual Product Number	
Year of Manufacture	
Purchase Date	
Date of First Use	
Expiration Date	
Notified Body that Performed the CE Check: No. 1019 VVUÚ, a.s. Pikartská 1337/7 716 07 Ostrava - Radvanice Czech Republic	**Notified Body that Controls Production:** No. 1019 VVUÚ, a.s. Pikartská 1337/7 716 07 Ostrava - Radvanice Czech Republic

Device Periodic Check Sheet

No.	Date	Reason for Check	Notes (damage, defects, excessive wear or other relevant data)	Check Results	Name and Signature of Competent Person Performing Check	Date of Next Check
1		○ Periodic check ○ Additional check		○ Device suitable for use ○ Device NOT suitable for use ○ Secondary check required		
2		○ Periodic check ○ Additional check		○ Device suitable for use ○ Device NOT suitable for use ○ Secondary check required		
3		○ Periodic check ○ Additional check		○ Device suitable for use ○ Device NOT suitable for use ○ Secondary check required		
4		○ Periodic check ○ Additional check		○ Device suitable for use ○ Device NOT suitable for use ○ Secondary check required		
5		○ Periodic check ○ Additional check		○ Device suitable for use ○ Device NOT suitable for use ○ Secondary check required		
6		○ Periodic check ○ Additional check		○ Device suitable for use ○ Device NOT suitable for use ○ Secondary check required		
7		○ Periodic check ○ Additional check		○ Device suitable for use ○ Device NOT suitable for use ○ Secondary check required		

WARNING: It is essential for safety that equipment be withdrawn from use immediately if any doubt should arise about its condition for safe use or if it has been used to arrest a fall, and that it not be used again until confirmed in writing by a competent person that it is acceptable to do so.