



LYNK ACCESS TECHNICAL USER GUIDE



Table of Contents

- [Disclaimer](#)
- [Accessing Configuration File](#)
- [Engineering Mode](#)
- [CLI- Max Charge Delta Voltage](#)




Disclaimer

This document contains proprietary information and should not be distributed without the prior consent of Bloom Power. It includes materials such as engineering mode that can alter the settings of Bloom Power products. Misuse of these settings may result in equipment damage that is not covered under warranty. Please ensure to use this document strictly in accordance with the instructions provided by Bloom Power.

Accessing Configuration File

To access configuration file of LYNK Access:


- Open LYNK Access and click on “Settings”
- Right click on the app data file path and select “Open App Data Folder”

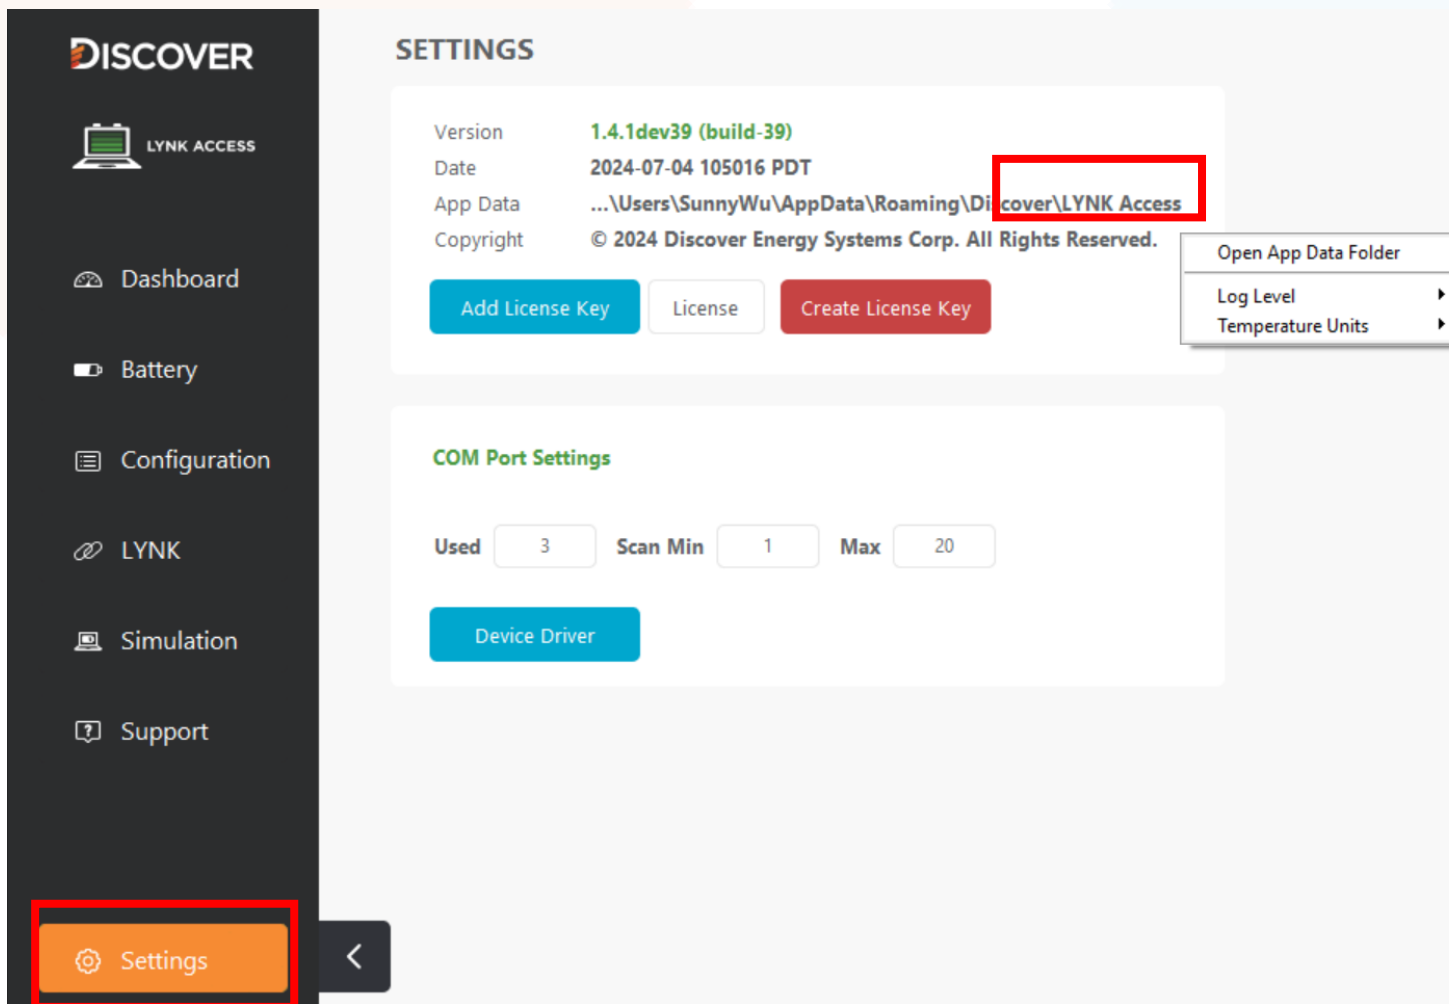

The screenshot displays the LYNK Access application interface. On the left is a dark sidebar with the 'DISCOVER' logo at the top. Below the logo are icons and labels for 'LYNK ACCESS', 'Dashboard', 'Battery', 'Configuration', 'LYNK', 'Simulation', and 'Support'. The 'Settings' option at the bottom of the sidebar is highlighted with a red rectangle. The main content area is titled 'SETTINGS' and contains a version information section with fields for Version (1.4.1dev39 (build-39)), Date (2024-07-04 105016 PDT), App Data (...\\Users\\SunnyWu\\AppData\\Roaming\\Discover\\LYNK Access), and Copyright (© 2024 Discover Energy Systems Corp. All Rights Reserved.). The 'App Data' path is highlighted with a red rectangle. To the right of this path is a context menu with options: 'Open App Data Folder', 'Log Level', and 'Temperature Units'. Below the version information are three buttons: 'Add License Key', 'License', and 'Create License Key'. Further down is a 'COM Port Settings' section with input fields for 'Used' (3), 'Scan Min' (1), and 'Max' (20), along with a 'Device Driver' button.

Accessing Configuration File

- Close the LYNK Access app. note: settings may be overwritten if LYNK Access is not closed
- Right click on “lynk_access” configuration settings and edit with note pad

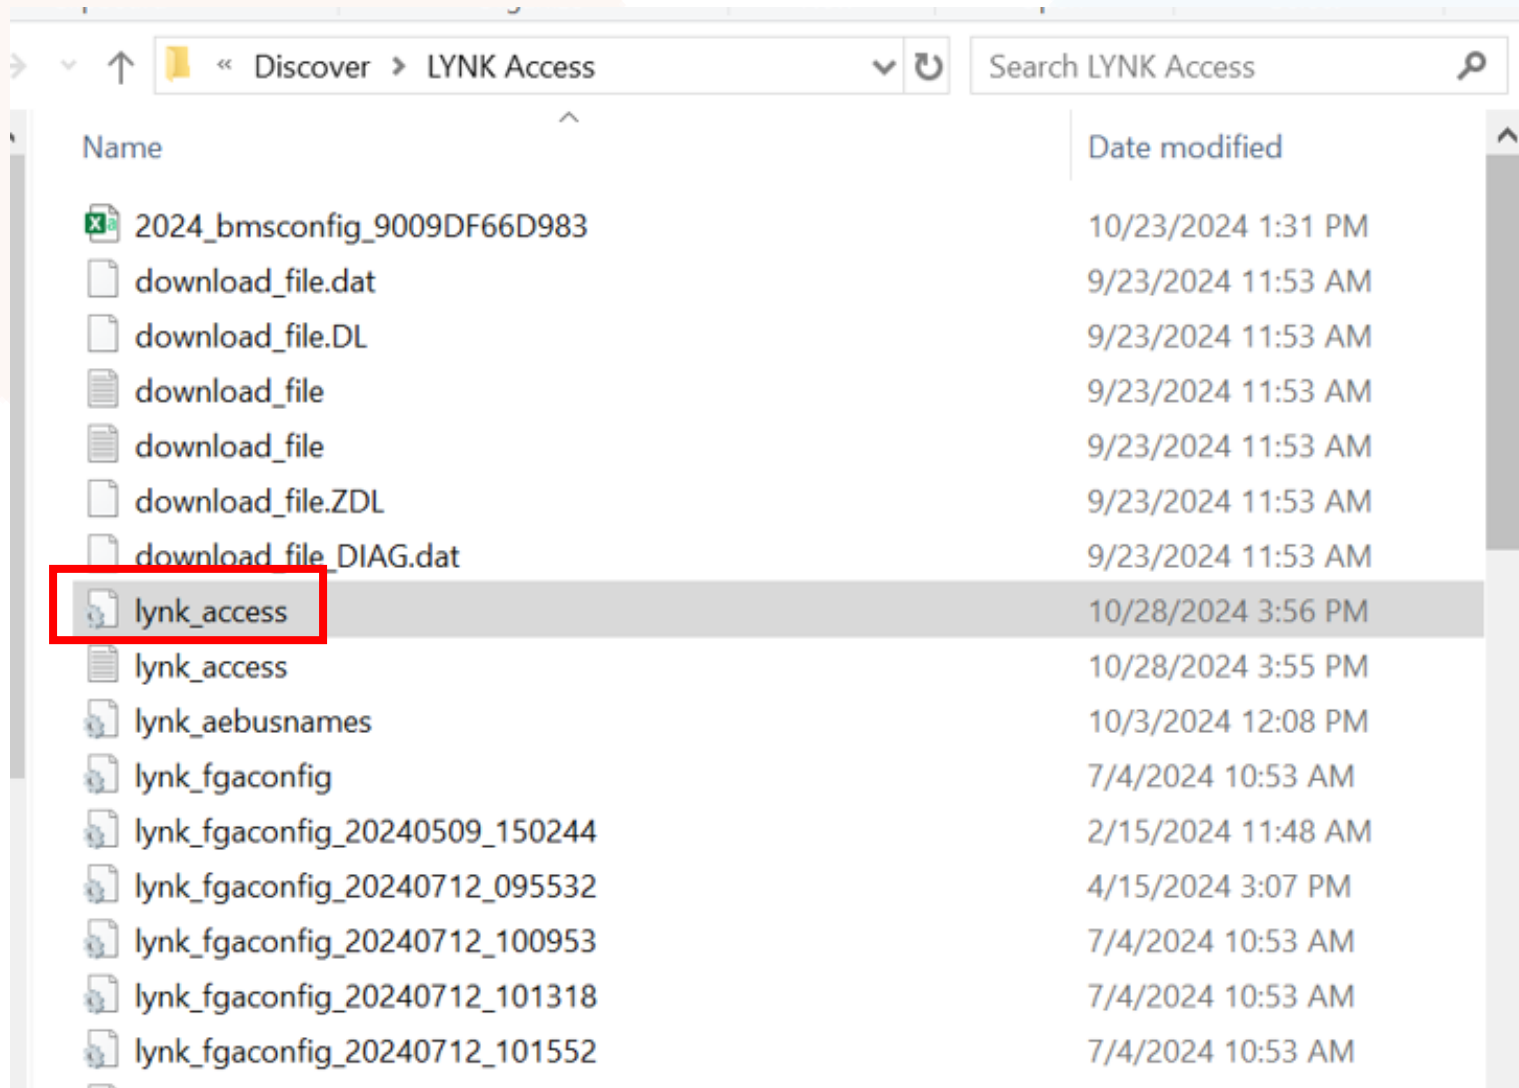

File Explorer window showing the 'LYNK Access' folder. The file 'lynk_access' is highlighted with a red box.

Name	Date modified
2024_bmsconfig_9009DF66D983	10/23/2024 1:31 PM
download_file.dat	9/23/2024 11:53 AM
download_file.DL	9/23/2024 11:53 AM
download_file	9/23/2024 11:53 AM
download_file	9/23/2024 11:53 AM
download_file.ZDL	9/23/2024 11:53 AM
download_file_DIAG.dat	9/23/2024 11:53 AM
lynk_access	10/28/2024 3:56 PM
lynk_access	10/28/2024 3:55 PM
lynk_aebusnames	10/3/2024 12:08 PM
lynk_fgaconfig	7/4/2024 10:53 AM
lynk_fgaconfig_20240509_150244	2/15/2024 11:48 AM
lynk_fgaconfig_20240712_095532	4/15/2024 3:07 PM
lynk_fgaconfig_20240712_100953	7/4/2024 10:53 AM
lynk_fgaconfig_20240712_101318	7/4/2024 10:53 AM
lynk_fgaconfig_20240712_101552	7/4/2024 10:53 AM


- Either change “diagnostics = off” to “diagnostics = on” or add “diagnostics = on” if line does not exist
- Save and close the file

```
lynk_access - Notepad
File Edit Format View Help
[DEFAULT]
diagnostics = on
loglevel = info
portused = 3
portscan_min = 1
portscan_max = 20
diagnostics_force = on

[GLOBAL]
winmain_collapsed = no
winmain_lasttab = 7
winmain_ribbon = chargetargetsettings
licensekey_path = C:/Users/SunnyWu/Downloads/LYNKAccessLicense_SunnyWu.lic
portused = 3
hardwaretype = Lynk II-2
```

Engineering mode allows the users to utilize CLI commands to set certain parameters in the system.

- Open LYNK Access
- Right click on LYNK Access icon and select “Engineering” or use hot key Ctrl + E
- CLI commands can now be entered

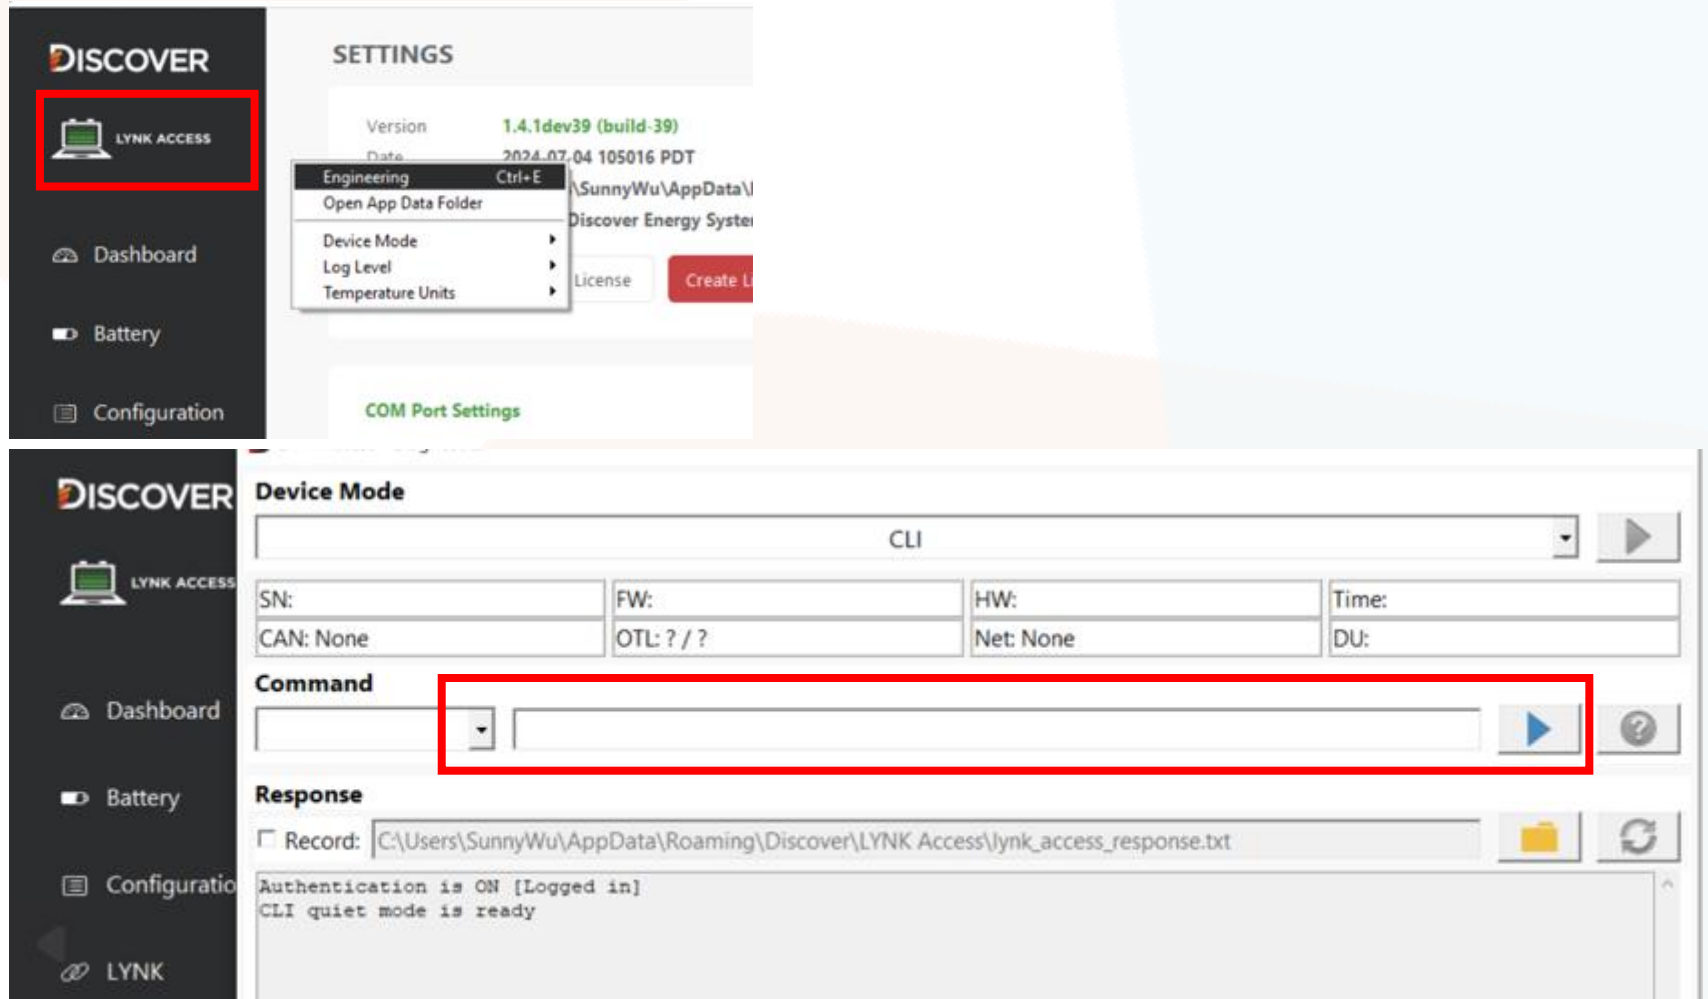

The screenshot displays the DISCOVER application interface. On the left, a dark sidebar contains the DISCOVER logo and navigation icons for LYNK ACCESS, Dashboard, Battery, and Configuration. The LYNK ACCESS icon is highlighted with a red rectangle. A right-click context menu is open over this icon, showing options: Engineering (with Ctrl+E shortcut), Open App Data Folder, Device Mode, Log Level, and Temperature Units. The main window shows the SETTINGS page with fields for Version (1.4.1dev39), Date (2024-07-04 10:50:16 PDT), and a License section. Below this, the COM Port Settings section is visible. The bottom portion of the screenshot shows the Device Mode interface. It features a CLI dropdown menu and a Command input field, both highlighted with a red rectangle. The Command field contains a dropdown arrow and a text input area. To the right of the Command field is a blue play button icon. Below the Command field is the Response section, which includes a Record checkbox and a text area displaying the message: "Authentication is ON [Logged in] CLI quiet mode is ready".



CLI- Max Charge Delta Voltage

- Use command [set_chargeMaxVDelta <mV>] to set max charge delta voltage in mV.
- Example: setting the max charge delta to 2000mV. Enter “config set_chargeMaxVDelta 2000” in the command window
- Double check settings with command “config”
- Close and Restart LYNK Access

Command

Response

☐ Record: C:\Users\SunnyWu\AppData\Roaming\Discover\LYNK Access\lynk_access_response.txt

```
$config set_chargeMaxVDelta 2000
Max charge voltage delta set to 2000 mV
$config
Application FW Version 1.7.1.0
Product Configuration:
  EEPROM Schema Version 2.1.0.0
  Serial Number: DEZLK02240019000
  Model Data:
    CAN 0 Termination enabled = 1
    CAN 1 Termination enabled = 1
    Max Charge V delta: 2000 mV
    SoC Charge Limit: disabled
    Min Cell Charge voltage: 3400 mV
```



The End