HOW TO USE

1 Mount The Machine



Secure the machine to a workbench using the 4 included screws before use.

2 Choose The Right Guide Hole



Match the cable outside diameter to the closest front guide hole.

3 Set Light Blade Pressure



Turn both top knobs evenly until the blade just touches the insulation.

4 Insert The Wire



Feed the wire straight through the selected front hole and keep it centered.

5 Strip The Wire



Turn the hand crank or use a drill on the side shaft. Test with a short scrap wire first.

6 Use A Drill (Optional)



Remove the drill bit first. Tighten the drill chuck onto the black drive shaft. Adjust the chuck size to lock the shaft securely.

Cable O.D.	Conductor Size (mm²)	Approx. AWG
3–5 mm	0.5–2.5	20–13
7 mm	4–6	11–10
9 mm	10–16	8–5
12 mm	25–35	3–2
17 mm	50–60	1/0–2/0

Cable O.D. is the main reference. Conductor size and AWG may vary by insulation thickness.

BLADE REPLACEMENT & TROUBLESHOOTING

1 Loosen The Two Top Knobs



2 Remove The Front Panel, Nuts, And Springs

Remove the front panel, nuts, and springs. Keep all small parts together.



3 Lift Out The Blade Assembly

Use the included hex keys to pry up both sides and lift the complete blade assembly out along the slots.



4 Remove The Left Bearing Block And Replace The Blade

Remove the left bearing block to expose the blade assembly.




Complete blade assembly



Left bearing block removed

5 Wrench Positions For Blade Removal

Hold the shaft at the groove near the gear with one wrench. Use the other wrench to loosen the hex nut.

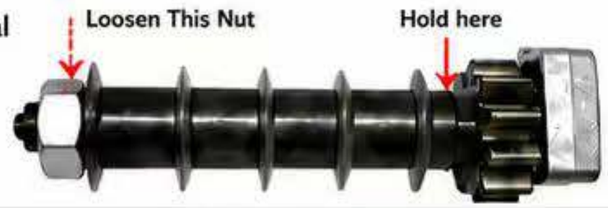

6 Reassemble In Reverse Order

Reinstall the blade assembly, springs, nuts, front panel, and top knobs. Test with a short wire.



Problem	Possible Cause	Solution
Insulation not cut	Blade pressure too light	Lower both top knobs evenly
Copper is nicked or cut	Blade pressure too high	Raise both top knobs evenly
Wire feeds off-center	Wrong guide hole or crooked feed	Use the closest hole and feed straight
Blade feels dull	Blade worn or damaged	Replace the HSS blade

⚠ Wear gloves and keep hands away from the blade and rollers.