Manual Wire Stripping Machine

6 guide holes / Hand crank or optional drill drive



Designed for controlled insulation removal

Select a guide hole by the cable outside diameter, adjust blade pressure, and test a short scrap piece before stripping a longer length.

Main parts
Two top adjustment knobs
Front guide-hole panel
Blade and feed-roller assembly
Side drive shaft and hand crank
Base with mounting holes

01 Safety before every use

- Work only on disconnected, de-energized wire. Never strip a live cable.
- Secure the base to a stable workbench before operating. Wear eye protection.
- Keep fingers clear of guide holes, blades, rollers and the drive shaft. Keep loose clothing, jewelry, hair and gloves away from rotating parts.
- Stop the machine before any adjustment or cleaning. Remove the drill battery or unplug the drill before attaching, detaching or servicing it.
- Blades are sharp. Use cut-resistant gloves only when handling stationary blades. Keep children and bystanders away.

First-use rule: Start with light blade pressure and a short scrap wire. The blade should slit the insulation without nicking the conductor.

Set up, test, then strip

Make small adjustments. Re-test whenever the cable size or insulation changes.

01 Mount the machine



Fasten the base securely to a stable workbench through its mounting holes. Check that the machine cannot move.

02 Choose a guide hole



Use the closest-fitting hole that accepts the cable without forcing it. Choose by outside diameter, not AWG alone.

03 Set light blade pressure



Adjust both top knobs evenly until the blade just contacts the insulation. Start light; excessive pressure can cut the conductor.

04 Feed a short test piece



Feed straight through the selected front hole and keep the wire centered. Keep fingers clear of the inlet and blade area.

05 Turn the hand crank



Turn slowly in the direction that draws the wire through. Stop and inspect the cut. Adjust pressure until the insulation is slit cleanly.

06 Optional: use a drill



Remove the hand crank. With the drill disconnected, clamp its chuck securely onto the black side drive shaft. Start at low speed; do not use impact mode.

Blade replacement

Before starting: Remove the drill and hand crank. Keep the machine stationary. Wear cut-resistant gloves when handling blades; never touch the cutting edges.


01 Loosen the top knobs

Loosen both top adjustment knobs evenly. Keep removed hardware together.




02 Remove the front panel

Remove the panel, nuts and springs as needed to access the assembly. Record the position of each part.

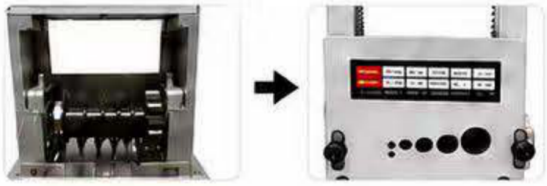

03 Lift out the blade assembly

Support both ends and lift the complete assembly evenly along the slots. Do not pry against the cutting edges.

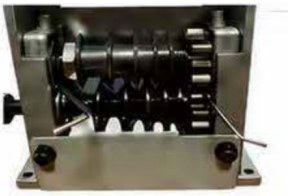


04 Remove the left bearing block

Remove the left bearing block to access the shaft. Note the order and orientation of blades, spacers and washers.



05 Release the retaining nut

Hold the shaft at the groove near the gear with one wrench. Use a second wrench to loosen the retaining nut. Replace the damaged blade with a matching blade.

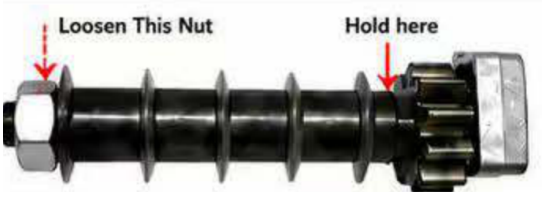

06 Reassemble and test

Reassemble in reverse order. Seat both bearings and align the blades with the roller grooves. Refit the panel and check free rotation by hand before testing scrap wire.



If parts bind or alignment is unclear: Stop and contact support before using the machine.

Keep every cut under control

Stop the machine and disconnect the drill before checking any problem.

02 Troubleshooting

Insulation is not cut	Blade pressure may be too light. Increase pressure slightly and evenly at both knobs, then test again.
Conductor is nicked or cut	Blade pressure may be too high. Reduce pressure evenly and re-test a short scrap piece.
Wire feeds off-center	Check the guide-hole size and feed straight. Inspect blade-to-roller alignment with the machine stopped.
Wire jams or will not feed	Stop immediately. Reduce pressure, check for debris and try the correct guide hole. Do not force or pull against a running machine.
Cut stays uneven or incomplete	Inspect for a dull or damaged blade. Replace it if needed, then check alignment and pressure.

03 Cleaning & storage

Brush away insulation scraps after use with the machine stopped. Do not clear debris with fingers. Keep the machine dry, check for loose hardware, and store it out of reach of children.

Need help with setup or a blade change?

Scan the QR code to contact support on WhatsApp.
Have your order number and a clear photo of the issue ready. You can also contact the seller through your Amazon order.