

Quick Start Guide for Hubo-i

2017-09




Hubo-i NaviCom™

※ <Precautions>

Hubo-i's trademark rights and all copyrights in this document are owned by Rainbow Co., Ltd. Modifications are prohibited without permission of Rainbow Co., Ltd.

Hubo-i NaviCom™

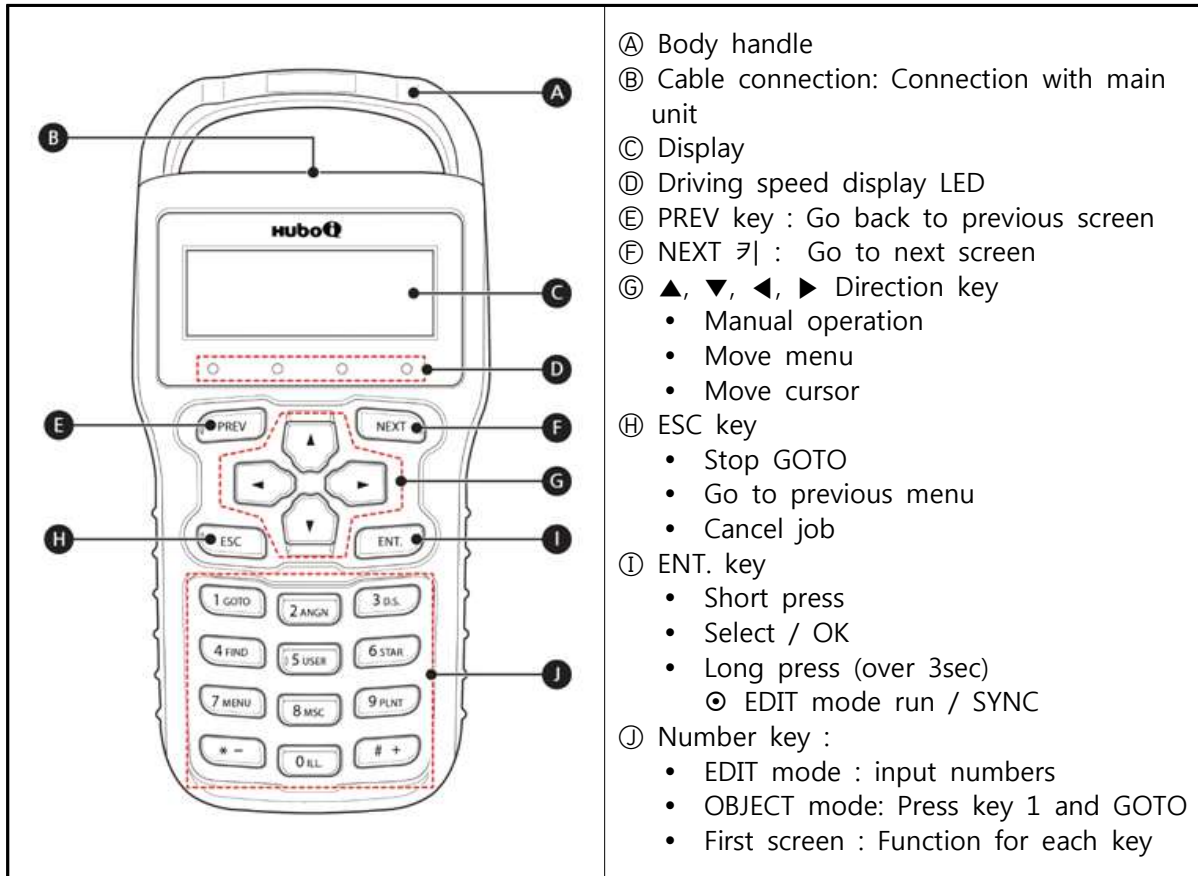

Details of operation button of Hubo-i

1 GOTO	GOTO	7 MENU	Display various setting menus
2 ALGN	Alignment	8 MSC	Set other features
3 D.S.	Access to deep sky information	9 PLNT	Access to planet information
4 FIND	Find nearby destinations	10 ILL.	Rear LED ON/OFF (If you press long(over 3sec) this button to start Homing)
5 USER	The user directly enters astronomical coordinates.	* -	Reduction driving speed
6 STAR	Access to star information	# +	Increase driving speed

I. Pre-use preferences

1. Check your GPS location information

When the power is turned on, the built-in high-performance GPS receives signals from up to 12 GPS satellites and automatically receives the current position.

- ▶ On the first screen **7 MENU** → select <GPS> → **ENT.** → When the GPS signal is received normally, time, latitude and longitude information are displayed on the screen. → **ENT.** press over 3 seconds → GPS data is automatically entered into the product's time and station information and <A> appears in the upper right corner of the display window.

2. Time setting

You can omit the time setting task when the GPS information of the host is automatically received.

- ▶ On the first screen **ENT.** press over 3 seconds → select <Time & Date> → **ENT.** → The current date and time are displayed in the display window. → press over 3 seconds **ENT.** → <Edit> mode → Enter current date and time → press **ENT.** and save.

3. Observatory position setting

Omission when GPS information is received automatically

- ▶ On the first screen, press over 3 seconds **ENT.** → select <Location> and **ENT.** → select observatory position → press over 3 seconds **ENT.** → <Edit> mode → press **ENT.** and save.

4. Tranking mode

- ♦ *Land mode : Tracking off*
- ♦ *Astro mode : Tracking on*
- ♦ *When the power of the mount is turned on, the default value is Land mode, and after Goto, it automatically switches to Astro mode.*

- ▶ On the first screen, press **2 ALGN** → select <Land mode> or <Astro mode(Star)>

5. Tolerant error compensation (Pole Star ALIGNED / Not ALIGNED)

- ♦ *Pole Star Aligned mode : Only the right-angle motor operates when tracking the target*
- ♦ **Pole Star Not Aligned mode(recommend)** : Accuracy of tracking is increased by driving an azimuthal motor according to the error of the polar axis calculated in the alignment process.

- ▶ On the first screen, enter **2 ALGN** → select <Pole Star ALIGNED> → select <Pole Star ALIGNED> or <Pole Star NOT ALIGNED> using **ENT.**

II. Hubo-i 기본 조작

1. Homing

Homing is to find the reference position mechanically. For your safety, the Home search range is limited to 90 ° per working. If homing fails, repeat until homing.

- ▶ Homing start – On the first screen, press over 3 seconds key

2. Alignment

- ♦ *We recommend using a high magnification eyepiece with built-in reticle to increase precision.*
- ♦ *In the <Align star> list, the numbers to the right of each star list are the altitude and azimuth. (For example, if you say <Altair 30 90>, Altair now represents an altitude of 30 degrees, eastbound)The azimuth angle is generally North (0), East (90), South (180), West (270).*

- ▶ On the first screen, enter → select <Align Star> → select one and → → → Use the directional keys to adjust the subject to the center of the screen → press over 3 seconds → enter → Completed count in the top left
- ▶ Repeat 5 times(After completing one time, press to exit to <Align Star list>, select another target and execute it in the same way>

3. Auto Resume

- ♦ *This saves the angle and alignment data the telescope is heading before turning off the unit.*
- ♦ *This feature eliminates the need to rearrange the mounts even if the power is turned off during use.*

- ▶ On the first screen, press over 3 seconds → select <Auto Res.> → You can change the state by pressing the enter key.

4. GOTO

- ▶ On the first screen, select one of → enter → enter then → goto working

5. Parking

- ♦ *<Parking> is to stop the tracking by moving the mount at the pre-set angle after the observation. Parking is recommended before powering off the mount.*

- ▶ On the first screen, enter →select <Parking> then enter → select Parking position → enter then →