

Product Manual

1127 - Precision Light Sensor



Phidgets 1127 - Product Manual For Board Revision 0 © Phidgets Inc. 2009

Contents

4 Product Features

- 4 Connections
- 4 Type of Measurement

5 Getting Started

- 5 Checking the Contents
- 5 Connecting all the pieces
- 5 Testing Using Windows 2000/XP/Vista
- 7 Testing Using Mac OS X

7 Programming a Phidget

- 7 Code Samples
- 7 Coding for your Sensor

8 Technical Information

- 8 General
- 8 Formulas
- 8 Other Interfacing Alternatives
- 8 Analog Input Cable Connectors
- 9 Device Specifications

9 Product History

9 Support

Product Features

- Measures human perceptible light level in lux
- Measures from 1 lux (Moonlight) to 1000 lux (TV studio lighting)

Connections

Designed to connect to a:

- 1010 PhidgetInterfaceKit 8/8/8 Mini-Format
- 1011 PhidgetInterfaceKit 2/2/2
- 1018 PhidgetInterfaceKit 8/8/8
- 1019 PhidgetInterfaceKit 8/8/8 w/6 Port Hub
- 1072 PhidgetSBC2
- 1203 PhidgetTextLCD

Type of Measurement

The sensor uses non-ratiometric measurement.

Checking the Contents

You should have received:


- A Precision Light Sensor
- A Sensor Cable

In order to test your new Phidget you will also need:

- A PhidgetInterfaceKit 8/8/8 or a PhidgetTextLCD
- A USB Cable

Connecting all the pieces

- 1. Connect the Precision Light Sensor to the Analog Input 6 on the PhidgetInterfaceKit 8/8/8 using the sensor cable.
- 2. Connect the PhidgetInterfaceKit to your PC using the USB cable.

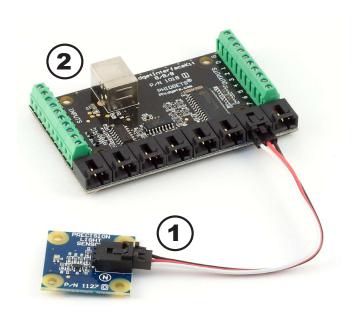

Testing Using Windows 2000/XP/Vista/7

Downloading the Phidgets drivers

Make sure that you have the current version of the Phidget library installed on your PC. If you don't, do the following:

Go to www.phidgets.com >> Drivers

Download and run Phidget21 Installer (32-bit, or 64-bit, depending on your PC)

You should see the tion on the right hand corner of the Task Bar.

Running Phidgets Sample Program

Double clicking on the icon loads the Phidget Control Panel; we will use this program to make sure that your new Phidget works properly. Since the sensor is connected to a 1018, the computer will see only the 1018. The sensor is providing data through the Analog input it is connected to.


The source code for the InterfaceKit-full sample program can be found under C# by clicking on www.phidgets.com >> Programming.

Double Click on the icon to activate the Phidget Control Panel and make sure that the **Phidget InterfaceKit 8/8/8** is properly attached to your PC.



- Double Click on Phidget
 InterfaceKit 8/8/8 in the
 Phidget Control Panel to bring up
 InterfaceKit-full and check that the
 box labelled Attached contains the
 word True.
- 2. Make sure that the Ratiometric box is NOT Ticked.
- 3. Move the Precision Light Sensor around and the amount of human perceivable luminosity is displayed in the Analog in Box.
- 4. You can adjust the input sensitivity by moving the slider pointer.
- 5. Click on the Sensors button to bring up the Advanced Sensor Form.
- MInterfaceKit-full 1 InterfaceKit Info Digital In Attached: True 0 1 2 3 4 5 6 7 Phidget InterfaceKit 8/8/8 Digital Out Serial No.: 76667 0 1 2 3 4 5 6 7 Analog In Version: 826 2 2 2 Digital Inputs: 8 0 6 Y Digital Outputs: 8 ☐ Ratiometric Sensors 10 Analog Inputs: 8

- 1. In the Sensor 6 box, select the 1127 Precision Light Sensor from the drop down menu.
- 2. The amount of luminosity in lux is shown here
- 3. Formula used to convert the analog input SensorValue into lux. The sensor actually outputs in lux.

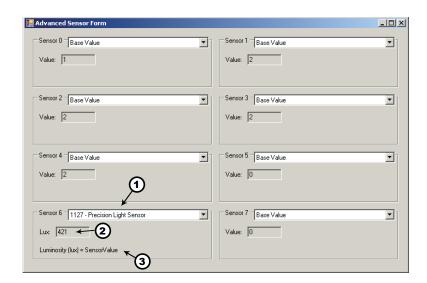

Testing Using Mac OS X

- Click on System Preferences >> Phidgets (under Other) to activate the Preference Pane
- Make sure that the Phidget InterfaceKit 8/8/8 is properly attached.
- Double Click on Phidget InterfaceKit 8/8/8 in the Phidget Preference Pane to bring up the InterfaceKit-Full example. This example will function in a similar way as the Windows version, but note that it does not include an Advanced Sensor Display.

Programming a Phidget

Phidgets' philosophy is that you do not have to be an electrical engineer in order to do projects that use devices like sensors, motors, motor controllers, and interface boards. All you need to know is how to program. We have developed a complete set of Application Programming Interfaces (API) that are supported for Windows, Mac OS X, and Linux. When it comes to languages, we support VB6, VB.NET, C#.NET, C, C++, Flash 9, Flex, Java, LabVIEW, Python, Max/MSP, and Cocoa.

Code Samples

We have written sample programs to illustrate how the APIs are used.

Due to the large number of languages and devices we support, we cannot provide examples in every language for every Phidget. Some of the examples are very minimal, and other examples will have a full-featured GUI allowing all the functionality of the device to be explored. Most developers start by modifying existing examples until they have an understanding of the architecture.

Go to www.phidgets.com >> Programming to see if there are code samples written for your device. Find the language you want to use and click on the magnifying glass besides "Code Sample". You will get a list of all the devices for which we wrote code samples in that language.

If this is your first time writing a program to control a Phidget, you should read the Getting Started Guide for the language you are planning to use.

Coding for your Sensor

Phidget analog sensors do not have their own API, but instead their output is a voltage that is converted to a digital value and accessed through the SensorValue properties and events on a PhidgetInterfaceKit. It is not possible to programmatically identify which sensor is attached to the Analog Input. Your application will need to apply any formulas from this manual to the SensorValue to translate it into usable data.

See the PhidgetInterfaceKit product manual for an overview of its API and a description of our architecture.

Technical Information

General

The human eye is less sensitive to changes in light intensity than the 1127, but is able to see a wider range. The Human eye range is from 50 μ lux (starlight) to 100 klx (extremely bright sunny day). The 1127, on the other hand, is able to measure from 1 lux (Moonlight) to 1000 lux (TV studio lighting)

The 1127 is able to detect higher frequency fluctuations in light levels than the human eye. If you notice noise on the signal that you cannot perceive yourself, it is probably due to incandescent light flicker, or other varying light sources.

The 1127 is Non-Ratiometric which means that you cannot rely on the sensor saturating at 1000 SensorValue. To be conservative, interpret SensorValue over 950 as saturated, with the true light level being unknown.

Formulas

The Formula to translate SensorValue into Luminosity is:

Luminosity (lux) = SensorValue

Other Interfacing Alternatives

If you want maximum accuracy, you can use the RawSensorValue property from the PhidgetInterfaceKit. To adjust a formula, substitute (SensorValue) with (RawSensorValue / 4.095)

If the sensor is being interfaced to your own Analog to Digital Converter and not a Phidget device, our formulas can be modified by replacing (SensorValue) with (Vin * 200). It is important to consider the voltage reference and input voltage range of your ADC for full accuracy and range.

Analog Input Cable Connectors

Each Analog Input uses a 3-pin, 0.100 inch pitch locking connector. Pictured here is a plug with the connections labeled. The connectors are commonly available - refer to the Table below for manufacturer part numbers.



Cable Connectors			
Manufacturer	Part Number	Description	
Molex	50-57-9403	3 Position Cable Connector	
Molex	16-02-0102	Wire Crimp Insert for Cable Connector	
Molex	70543-0002	3 Position Vertical PCB Connector	
Molex	70553-0002	3 Position Right-Angle PCB Connector (Gold)	
Molex	70553-0037	3 Position Right-Angle PCB Connector (Tin)	
Molex	15-91-2035	3 Position Right-Angle PCB Connector - Surface Mount	

Note: Most of the above components can be bought at www.digikey.com

Device Specifications

Characteristic	Value
Device Current Consumption	2 mA
Output Impedance	1K ohms
Bandwidth / Reaction Time	50 Hz
Minimum / Maximum Voltage	3.3VDC to 5.0VDC
Minimum Light Level	1 lux
Maximum Light Level @ 5V power supply	1000 lux
Error / Accuracy (Typical)	5%
Maximum Light Level @ 3.3V power supply	660 lux
Peak Sensitivity Wavelength @ 25°C	580nm

Product History

Date	Board Revision	Comment
May 2008	0	Product Release

Support

Call the support desk at $1.403.282.7335\ 9:00\ AM$ to $5:00\ PM$ Mountain Time (US & Canada) - GMT-07:00 or

E-mail us at: support@phidgets.com