

AR81148
1004-42

19-06-06
2001/06/19

HeyDownloads.com

The information given within this part has been correct at the time of printing and is subject to change without notice. Always refer to your local Perkins outlet for the latest information. Only fully trained personnel should carry out servicing of engines. Before working on any engine always refer to the correct user service and maintenance manual.

Always refer to your local Perkins outlet before purchasing any parts

Subject to any existing rights of third parties, the information given in this document is the property of Perkins Engines Limited and should not be copied, in whole or part, without the prior written consent of the Company.

Contents

1.	Introduction	Pg. 4
2.	How To Use Your Parts Book	Pg. 4
3.	Engine Breakdown	Pg. 5
4.	Symbol Descriptions	Pg. 7
5.	Parts Lists & Illustrations	Pg. 9
6.	Parts Index	Pg. 109

Introduction

The build list of your engine, found on the front page of this parts book, provides a unique reference to the components fitted to your engine; therefore this parts book is **only** applicable to this particular engine

Always quote your build list and engine serial number when contacting your Perkins outlet.

How to use your Parts Book

This parts book has been designed to provide you with all the information you need to identify parts to service your engine. There are several features within the book to make it easy to find the parts you require.

Front Page

This lists your build list number and the date of publication of this book

Symbol Descriptions

Provides a quick reference guide to the symbols used within the book.

Engine Breakdown

Use this to identify all the major sections of your engine and the relevant pages within the book.

Parts Lists & Illustrations

This section shows each major section of your engine broken down into individual part numbers along with an associated illustration for identifying the parts you require.

The illustrations used in this parts book are representational only and should only be used for identification purposes.

For fitting instructions please refer to your engine Service Manual.

Parts Index

Using either the part number or description of the part you require this section will help you locate the page within the **Parts Lists & Illustrations** section where the part appears.

Section	Page	Section	Page
Short Engine ACEA9772	9	Lubricating Oil Filler & Breather HBH02065	49
Cylinder Block ACHA0607	11	Lubricating Oil Filter & Integral Oil Cooler JBH01274	51
Crankshaft, Pistons & Connecting Rods ACHA0607	15	Front End Drive Input KBH00519	53
Cylinder Head ACHA0607	19	Water Pump, Thermostat & Heat Exchanger LBH02176 ● LBHA1879	55
Rocker Shaft ACHA0607	21	Water Outlet & Inlet LDH00592	57
Timing Gear & Camshaft ACHA0607	23	Fan & Extension MDH01085	59
Lubricating Oil Pump & Delivery Housing ACHA0607	27	Alternator & Generator NDH02165	61
Fuel Injection Equipment (Diesel) AFH03865	29	Alternator & Generator NDH02165	63
Fuel Injection Equipment (Diesel) AFH03865	31	Alternator & Generator NDH02165	65
Flywheel Housing CDH00991	35	Gear Drive Auxiliary Drive Option QDH01257 → U953289F	67
Flywheel & Starter Ring DDH01009	37	Gear Drive Auxiliary Drive Option QDH01204 → U953290F	69
Starter Motor EDH00527	39	Induction Manifold TBH00760	71
Starter Motor EDH00527	41	Air Cleaner & Restriction Indicator TDH00293	73
Fan Drive FBH00542	43	Exhaust Manifold UBH00455	75
Lubricating Oil Sump GBH01338	45	Exhaust Outlet Flange UDH00519 ● UDHA0395	77


Engine Breakdown

Section	Page
Low Pressure Fuel System VBH02020	79
Low Pressure Fuel System VBH02020	81
Low Pressure Fuel System VBH02020	83
Cold Start System WDH00300	85
Engine Lifting XBH00430	87
Mountings (Front & Rear) ZCH00879	89
Heater/Starter Switch ZEH01682	91
Lub. Oil Pressure Switch & Gauge ZJH00473	93
Temperature Gauge & Sender ZLH00271 → U953289F	95
Temperature Gauge & Sender ZLH00008 ↳ U953290F	97
Radiator & Cowling ZMH00006	99
Fuel Pre-Lift Pump ZVH00102	101
Application Miscellaneous & Auxiliaries ZZH00875	103
Joints & Gaskets - Top Service Kit SACA0161	105
Joints & Gaskets - Bottom Service Kit SGBA0327	107

Symbols and Notes

Symbol	Description
	From Engine Number
	Upto Engine Number
	Repairs and Replaces
	See Appropriate Section - Reference Number
	Alternative
	Order
	Remanufactured Part
	New for Old Part
	Number of Teeth
	Thickness
	Bottom
	Top
	Left Hand
	Right Hand
	Reference for Detailed Breakdown
	Other Service Options Available
	Cylinder Number
	See History Section


ACEA9772

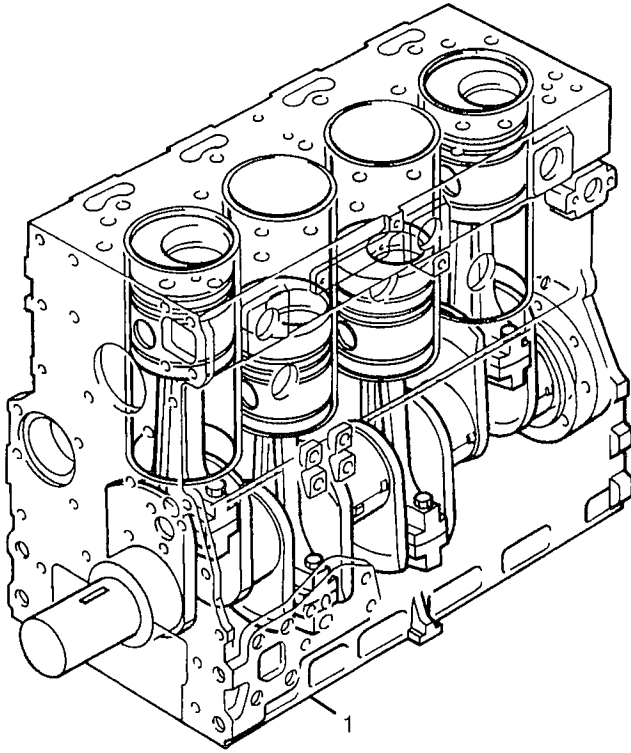

ACEA9772

Item	Part No.	References	Qty.	Description	Notes
1	AR39772		1	SHORT ENGINE	
2			1	CYLINDER BLOCK	(A)
2			4	LINER	
2			1	CRANKSHAFT	
2			4	PISTON	
2			4	PISTON RING	
2			4	CONROD	
2			10	MAIN BEARING	
2			8	BIG END BEARING	
2			4	THRUST WASHER	
2			1	SEAL	
2			1	HOUSING	
Footnotes					
(A)	COMPLETE WITH PLUGS				


ACHA0607

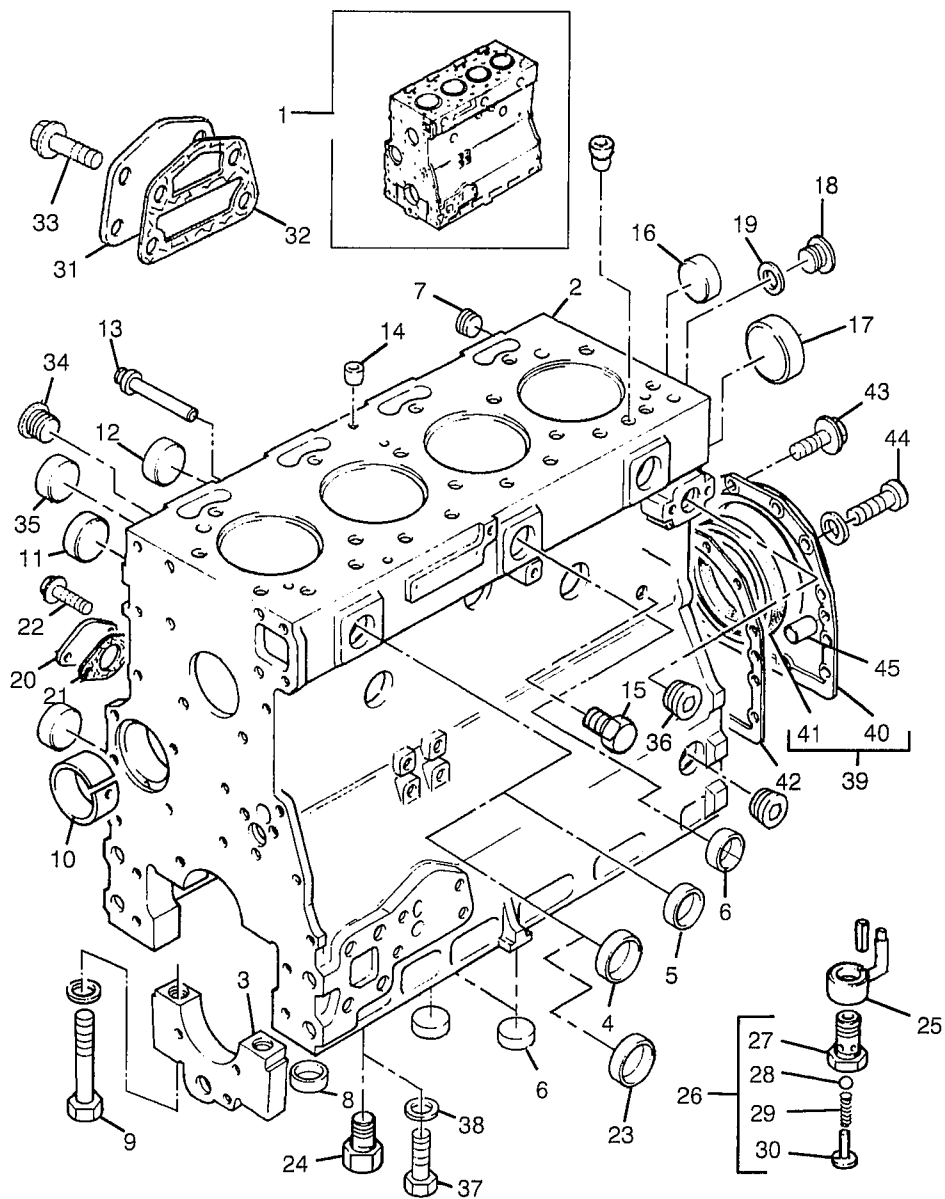

ACHA0607

Item	Part No.	References	Qty.	Description	Notes
1	ZZ50280	 a.	1	CYLINDER BLOCK KIT	
2	—		1	BLOCK	
3	—		5	BEARING CAP	
4	—0650710		5	PLUG	(A)
5	—0650713		1	PLUG	(B)
6	—0650710		1	PLUG	(C)
7	—0650588		1	PLUG	(D)
8	—33142111		10	THIMBLE	
9	—32166329		10	SCREW	
10	—31134165		1	CAMSHAFT BUSH	
11	—32418122		4	PLUG	(D)
12	—32416118		3	PLUG	(E)
13	—2485A204		1	PLUG	(F)
14	—32417134		1	PLUG	(G)
15	—32161114		2	PLUG	(H,I)
16	—32418122		2	PLUG	(J)
17	—32416119		1	PLUG	(K)
18	—32168212		1	PLUG	(L)
19	—3311R003		1	WASHER	(L)
20	—36171131	 c.	1	PLATE	
21	—36832144		1	JOINT	
22	—2314H033		2	SCREW	
23	—3314A103	● U3312R016	1	PLUG	(B)
24	—3278A003	 b.	4	PLUG	
25	—3861A027	 a.	4	PISTON COOLING JET	
26	—4138A017	 1	1	VALVE	
27	—	 4138A017	1	VALVE BODY	
28	—2538753		1	BALL	
29	—3174A004		1	SPRING	
30	—3271A003		1	RETAINER	
31	—3623H008		1	PLATE	
32	—3686T006		1	JOINT	
33	—2314J033		4	SCREW	
34	—3212T006		2	PLUG	(M)
35	—32417145		1	PLUG	(M)
36	—0650588		1	PLUG	(C)
37	—2182110		3	SCREW	(N,O)


ACHA0607

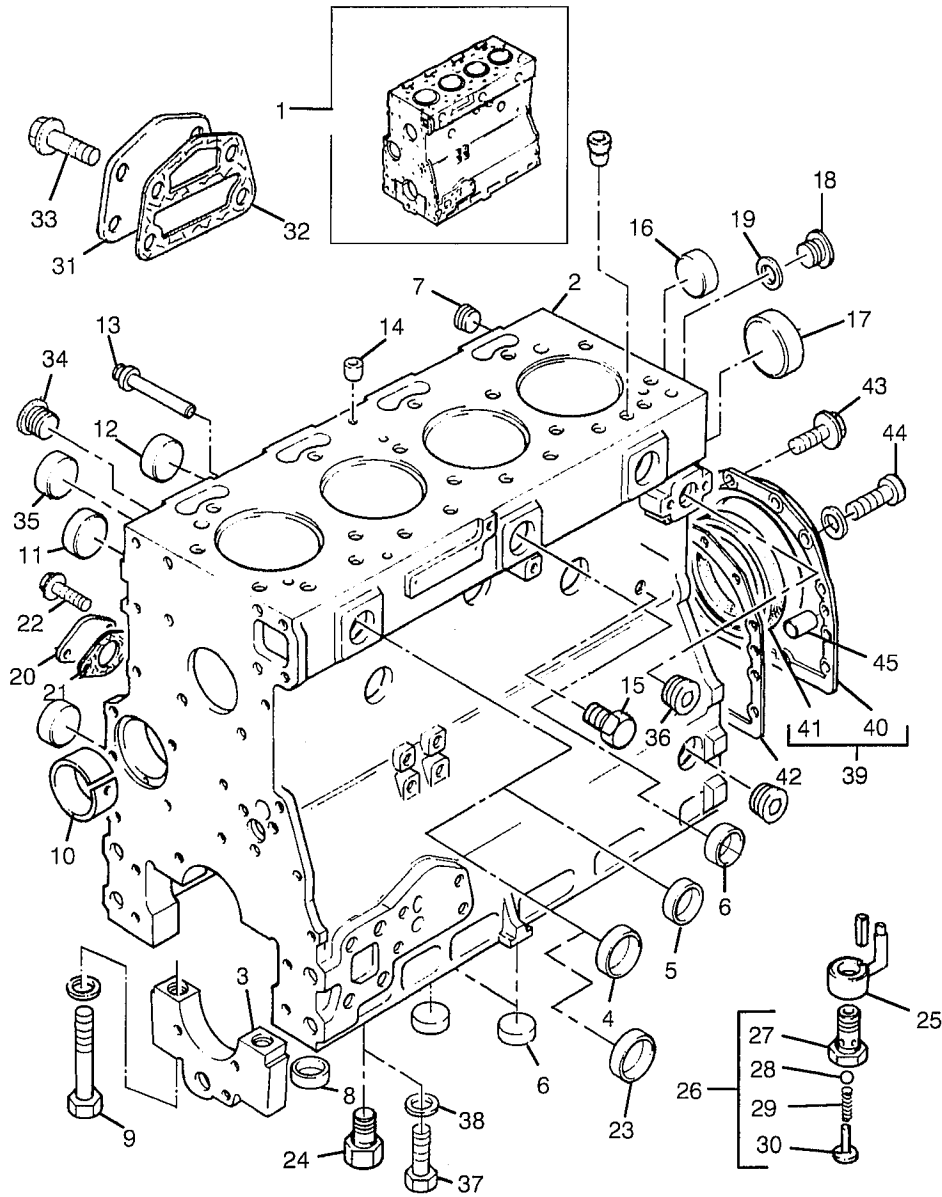

ACHA0607

Item	Part No.	References	Qty.	Description	Notes
38	└ 0920469		3	SPACER	(N,O)
39	4142V066		1	REAR OIL SEAL HOUSING	
40	└	⇒ 4142V066	1	REAR OIL SEAL HOUSING	
41	└ 2418F475		1	REAR OIL SEAL	
42	3681T018	● 3681T012	1	JOINT	
43	2314H003		12	SCREW	
44	3212V002		2	SCREW	
45	0350009		2	DOWEL	
History					
a.					
1	ZZ50280		1	CYLINDER BLOCK KIT	
25	└ 4126X124	□ 1	1	JET	
b.					
24	└ 2487001		4	PLUG	
c. General History Section					
20	└ 36171121		1	PLATE	
Footnotes					
(A)	WATER JACKET,LEFT HAND SIDE				
(B)	INNER HOLES				
(C)	WATER JACKET,LEFT HAND SIDE,TOP CENTRE HOLE				
(D)	WATER JACKET,RIGHT HAND SIDE				
(E)	TAPPET CHAMBER				
(F)	ROCKER OIL FEED DRILLING,RIGHT HAND SIDE				
(G)	ROCKER OIL FEED DRILLING, TOP FACE				
(H)	CYLINDER BLOCK WATER DRAIN RIGHT HAND SIDE				
(I)	CYLINDER BLOCK WATER DRAIN LEFT HAND SIDE				
(J)	WATER JACKET,REAR FACE				
(K)	CAMSHAFT CHAMBER,REAR END				
(L)	LUBRICATING OIL PRESSURE RAIL,REAR END				
(M)	TURBOCHARGER DRAIN POSITION TAPPINGS				
(N)	PISTON COOLING PRESSURE RAIL				
(O)	WAS 2487001 - USE 2182110/0920469				


ACHA0607

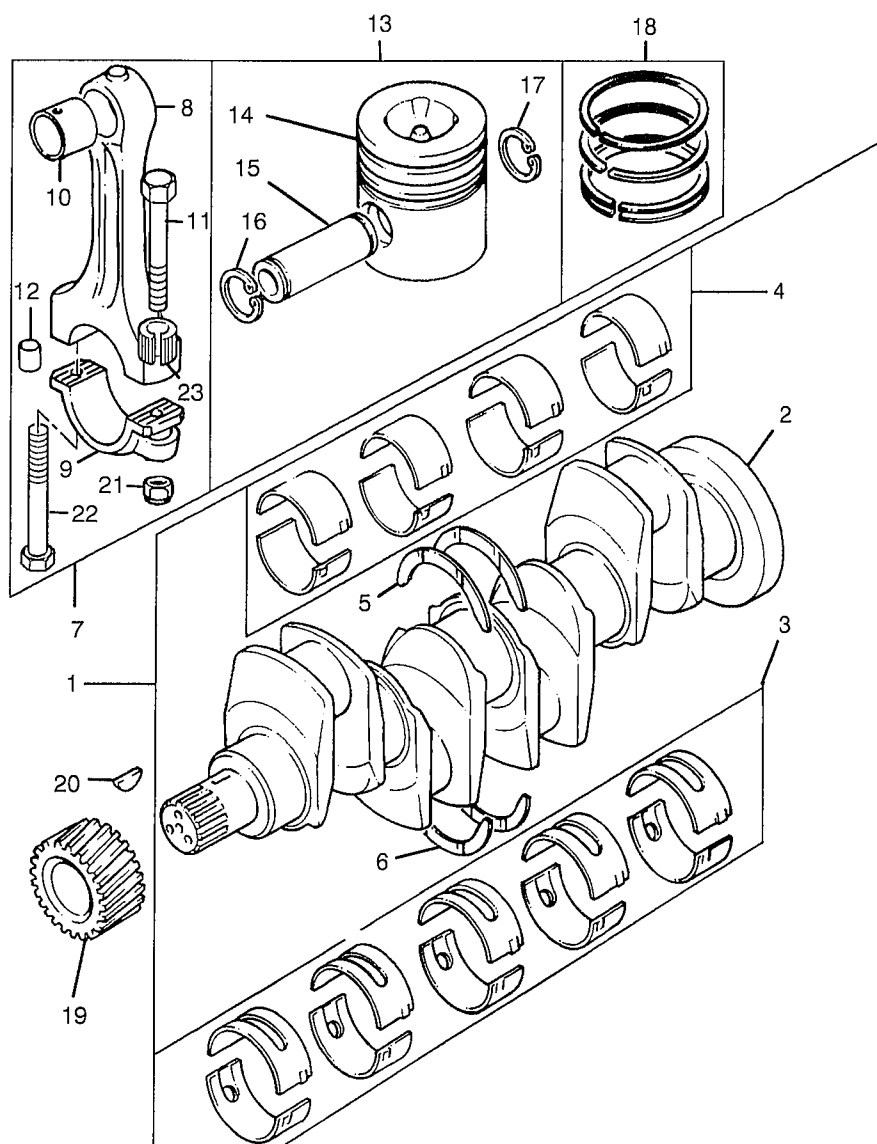

ACHA0607

Item	Part No.	References	Qty.	Description	Notes
1	ZZ90145		1	CRANKSHAFT KIT	
2		⇒ REF.1	1	CRANKSHAFT	
3	81558	Ⓢ	1	BEARING KIT	(A)
3	81558A	≡ (-)0.010"	X	OVERSIZE MAIN BEARING	(A)
3	81558B	≡ (-)0.020"	X	OVERSIZE MAIN BEARING	(A)
3	81558C	≡ (-)0.030"	X	OVERSIZE MAIN BEARING	(A)
4	U5ME0006	Ⓢ	1	BEARING KIT	(A)
4	U5ME0006A	≡ (-)0.010"	X	BEARING KIT	(A)
4	U5ME0006B	≡ (+)0.020"	X	BEARING KIT	(A)
4	U5ME0006C	≡ (-)0.030"	X	BEARING KIT	(A)
5	31137551	Ⓢ	2	THRUST WASHER	
5	31137312	≡ (+)0.007"	X	THRUST WASHER	
6	31137561	Ⓢ	2	THRUST WASHER	
6	31137322	≡ (+)0.007"	X	THRUST WASHER	
7	ZZ90188		4	CONROD KIT	(B) HIGH GRADE GRADE H
7	ZZ90189		4	CONROD KIT	(B) INT.GRADE GRADE J
7	ZZ90190		4	CONROD KIT	(B) INT.GRADE GRADE K
7	ZZ90191		4	CONROD KIT	(B) LOW GRADE GRADE L
8		⇒ REF.7	1	CONROD	
9		⇒ REF.7	1	CAP	
10	3112E011		1	BUSH	(B)
11	32762145		2	CON ROD BOLT	
21	33221328		2	CON ROD NUT	
23	2135A001		2	THIMBLE	
13	U5LP0058		4	PISTON KIT	STD.
13	U5LP0058B	≡ (0.5MM)	4	PISTON KIT	
13	U5LP0058D	≡ (+1.0MM)	4	PISTON KIT	
14		⇒ REF.13	1	PISTON	
15		⇒ REF.13	1	PIN	
16	2721332		1	CIRCLIP	
17	2721332		1	CIRCLIP	
18	U4181A045		4	PISTON RING KIT	STD.
18	U4181A046	≡ (+0.5MM)	4	PISTON RING KIT	
18	U4181A047	≡ (+1.0MM)	4	PISTON RING KIT	

ACHA0607

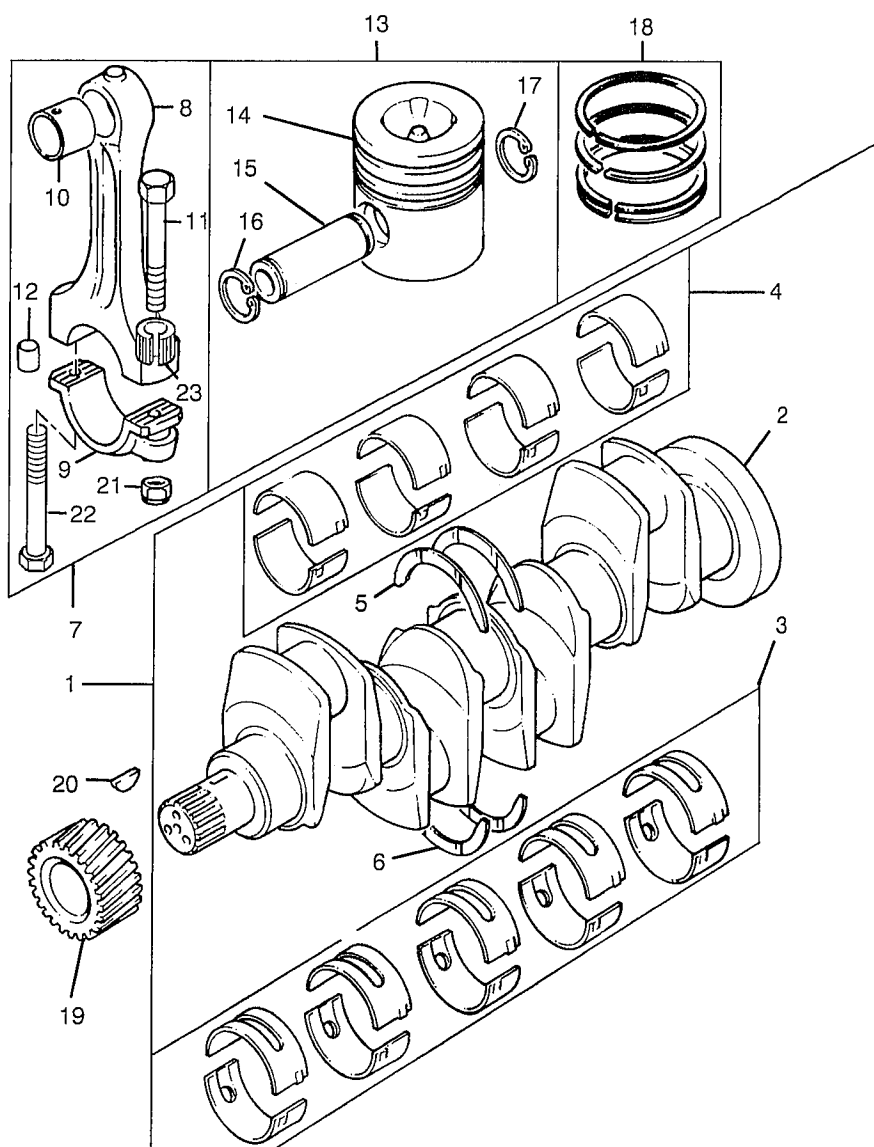


ACHA0607

Item	Part No.	References	Qty.	Description	Notes
19	3117C061		1	CRANKSHAFT GEAR	
20	0500012		1	WOODRUFF KEY	

Footnotes

(A)	PRE-FINISHED
(B)	SEE SERVICE BULLETIN NO.81

ACHA0607

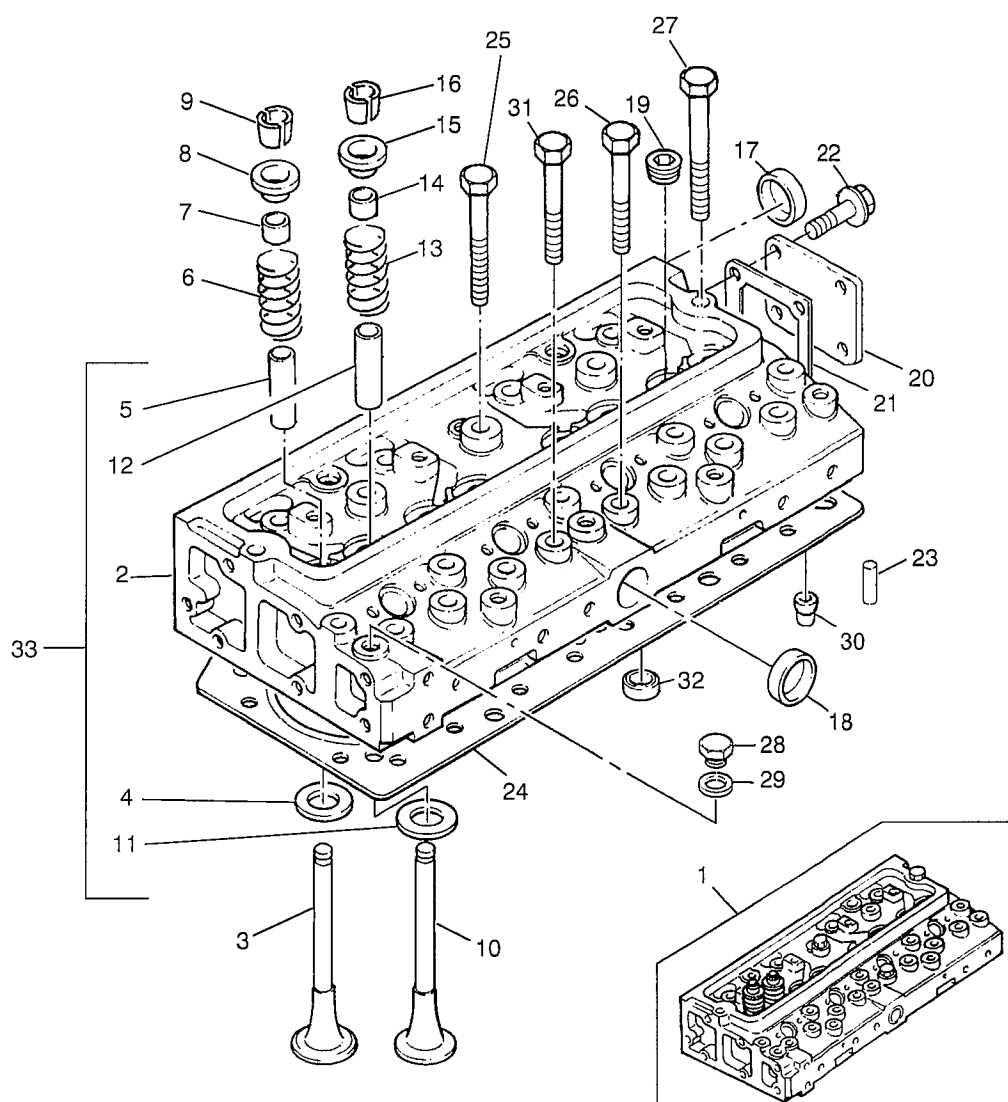


ACHA0607

Item	Part No.	References	Qty.	Description	Notes
1	ZZ80255	●○ ZZ80247	1	CYLINDER HEAD KIT	
2	—	⇒ REF.1	1	CYLINDER HEAD	
3	—3142H041		4	INLET VALVE	
4	—3314A101		4	INLET VALVE SEAT INSERT	
5	—3313A012	●○ 3313E021	4	INLET VALVE GUIDE	
6	—3174P412		4	VALVE SPRING	
7	—2418M507		4	VALVE STEM SEAL	
8	—3342N011		4	VALVE CAP	
9	—3142W004		8	COTTER	
10	—3142D061		4	EXHAUST VALVE	
11	—3314A102		4	EXHAUST VALVE SEAT INSERT	
12	—3318A705		4	GUIDE	
13	—3174P412		4	VALVE SPRING	
14	—2418M505		4	VALVE STEM SEAL	
15	—3342N011		4	VALVE CAP	
16	—3142W004		8	COTTER	
17	—32418122		1	PLUG	
18	—0650710		1	PLUG	
19	—2431A054		4	PLUG	
28	—0650203		1	PLUG	
29	—2411157		1	WASHER	
30	—29990001		2	DOWEL	(A)
20			1	COVER	(B)
21			1	JOINT	(B)
22			4	SCREW	(B)
23	3244A009		2	DOWEL	
24	3681E042	●○ U3681E042 ●○ U3681E039	1	HEAD GASKET	
25	3218J303		8	SCREW	
26	3218J606		8	SCREW	
27	3218J607		2	SCREW	
31	32166221		4	SCREW	

Footnotes

- | | |
|-----|------------------------|
| (A) | LOCATING DOWELS |
| (B) | SEE WATER PUMP SECTION |

ACHA0607

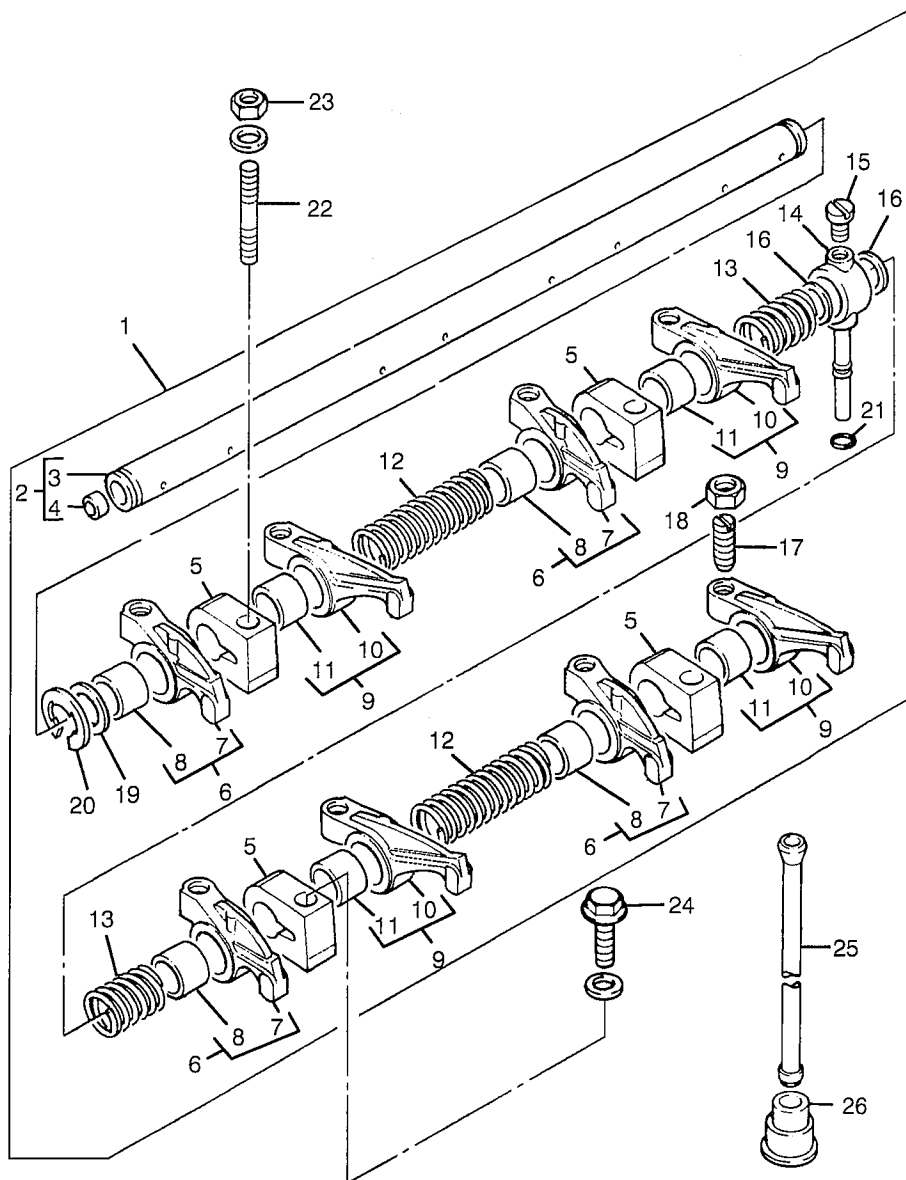

ACHA0607

Item	Part No.	References	Qty.	Description	Notes
1	ZZ90184	 a.	1	ROCKER SHAFT	
		 a.			
2	— ZZ90172		1	ROCKER SHAFT	
3	— 		1	ROCKER SHAFT	
4	—  0650507		2	PLUG	
5	— 3818X901		4	BRACKET	
6	— 4115R007	 a.	4	LEVER	
7	— 	 4115R007	1	LEVER	
8	—  3112A003		1	BUSH	
9	— 4115R008	 a.	4	LEVER	
10	— 	 4115R008	1	LEVER	
11	—  3112A003	 c.	1	BUSH	
12	— 31744123		2	SPRING	
13	— 31743108		2	SPRING	
14	— 3775E012		1	CONNECTION	
15	— 2233022		1	SCREW	
16	— 3311K015	 b.	2	SHIM	
17	— 32114145	 0720579	8	SCREW	
18	— 0576052		8	NUT	
19	— 3311K012		2	WASHER	
20	— 0170151		2	CIRCLIP	
21	— 33811113		1	OLIVE	
22	2313H331		3	STUD	
23	2318A605		3	NUT	
24	2314J607		1	SCREW	
25	31434307		8	PUSHROD	
26	3142U031		8	TAPPET	

History

a.

1, 1	ZZ90184		1	ROCKER SHAFT	
6	— 4115R005		4	ROCKER ARM ASSEMBLY	
9	— 4115R006		4	ROCKER ARM ASSEMBLY	


b.

16	— 33117426		2	SHIM	
----	------------	--	---	------	--

c. General History Section

11	— 31134166		4	BUSH	
----	------------	--	---	------	--


Timing Gear & Camshaft		Plate A
		ACHA0607

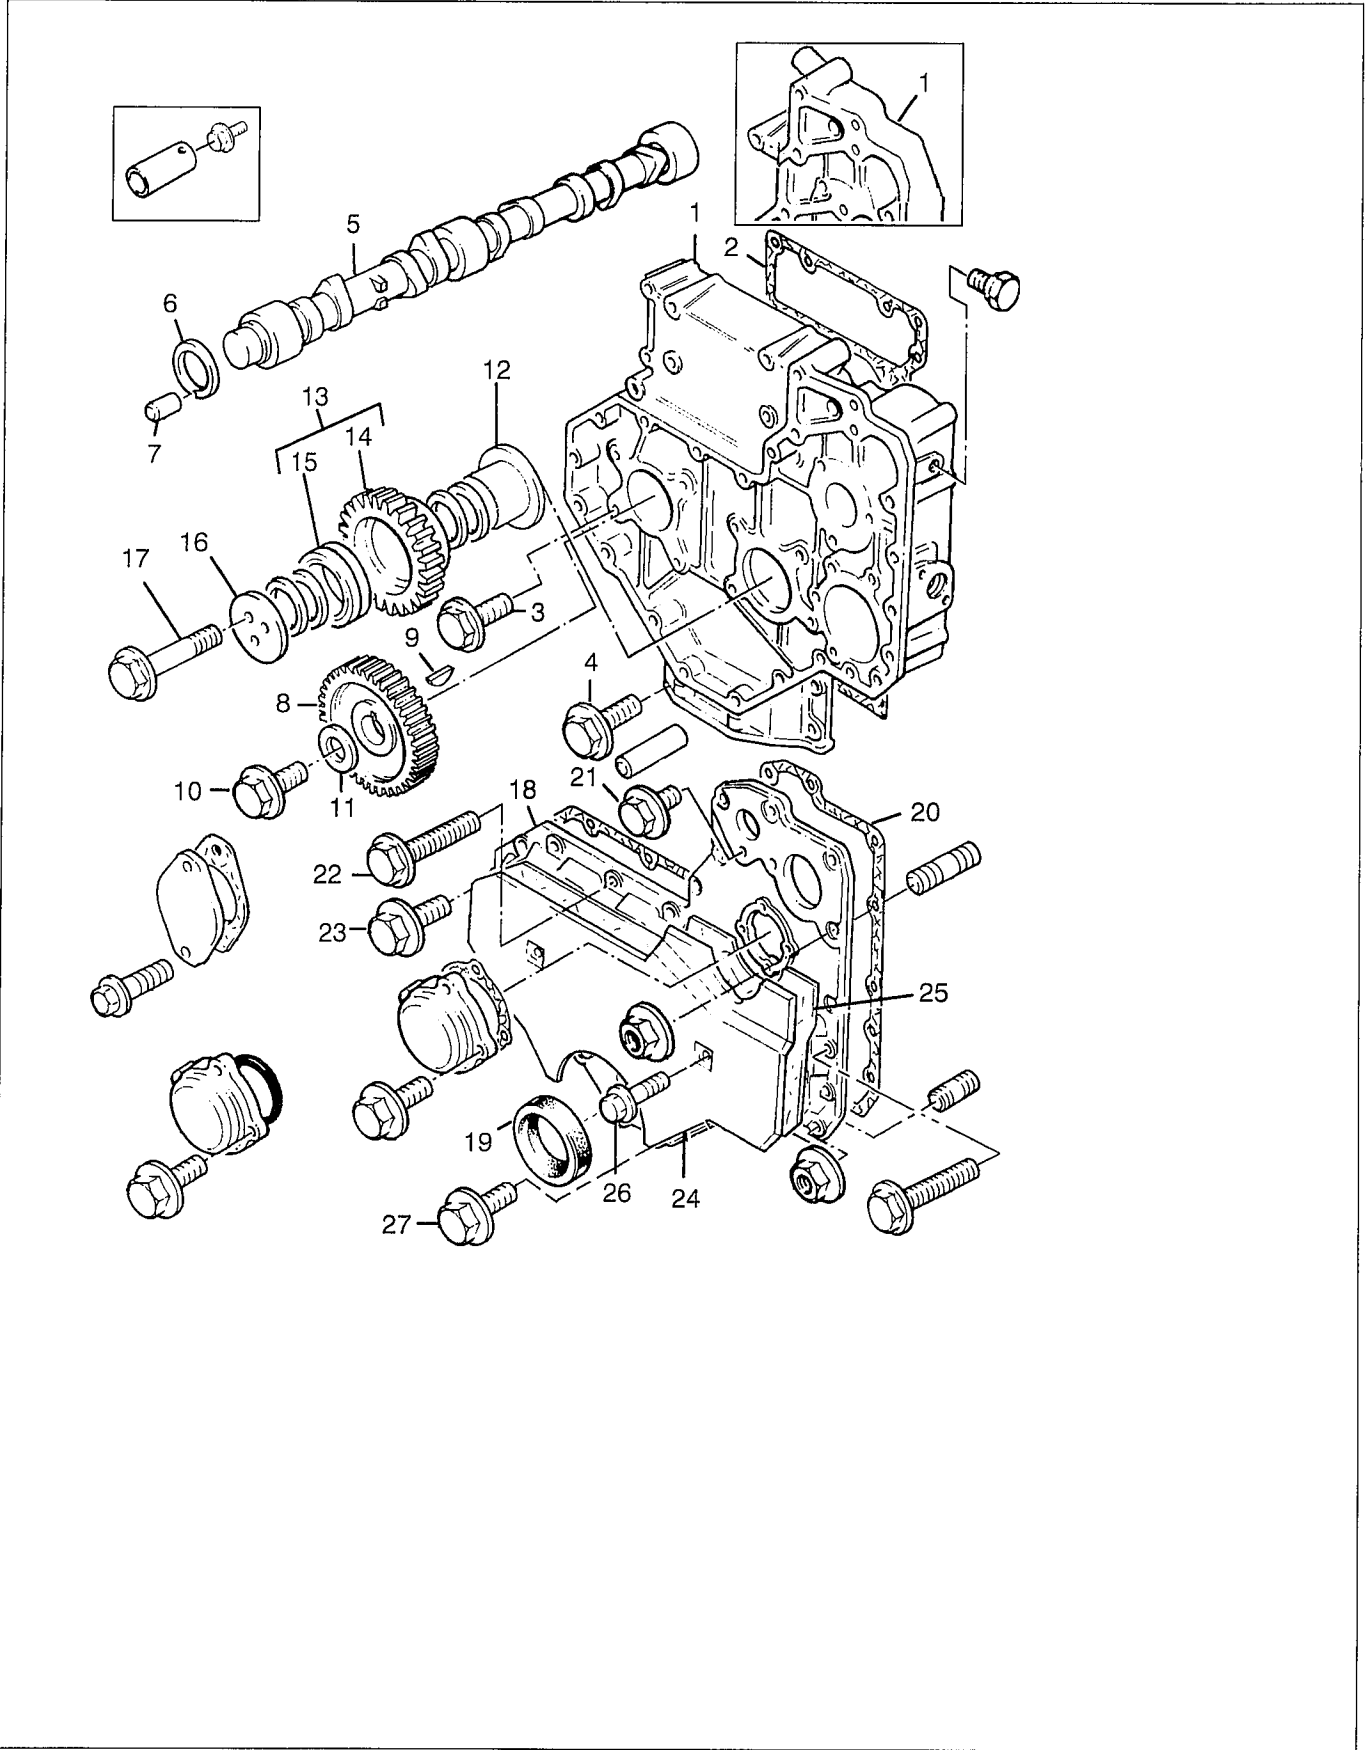

ACHA0607

Item	Part No.	References	Qty.	Description	Notes
1	3716C163		1	TIMING CASE	
2	3681P009		1	TIMING CASE JOINT	
3	2314H003		8	SCREW	
4	2314H034		4	SCREW	
5	3141D171		1	CAMSHAFT	
6	33153121	 a.	1	WASHER	
7	2116053		1	DOWEL	
8	3117L023		1	CAMSHAFT GEAR	
9	0500012		1	WOODRUFF KEY	
10	2314J606		1	SCREW	
11	3321A003		1	WASHER	
12	33426161		1	HUB	
13	4111A013		1	IDLER GEAR	
14	 4111A013		1	IDLER GEAR	
15	 0050345	 b.	2	BUSH	
16	3241H009		1	PLATE	
17	2314J010		3	SCREW	
18	4142A415	 4142A404  U4142A404  b.	1	TIMING COVER	
19	 2418F436		1	FRONT OIL SEAL	
20	3681P038		1	TIMING CASE COVER JOINT	
21	2314H013		6	SCREW	
22	2314H004		1	SCREW	
23	2314H005		7	SCREW	
24	3781N043		1	SHIELD	
25	3781N042		1	DAMPER	
26	2314F003		2	SCREW	
27	2314H034		2	SCREW	(A,B)
Service Options					
2	21826405		1	TIMING CASE COVER JOINT	
History					
a.					
6	33153135		1	WASHER	
b. General History Section					
15	 0050345		1	BUSH	
18	4142A404	 U4142A404	1	COVER	

ACHA0607

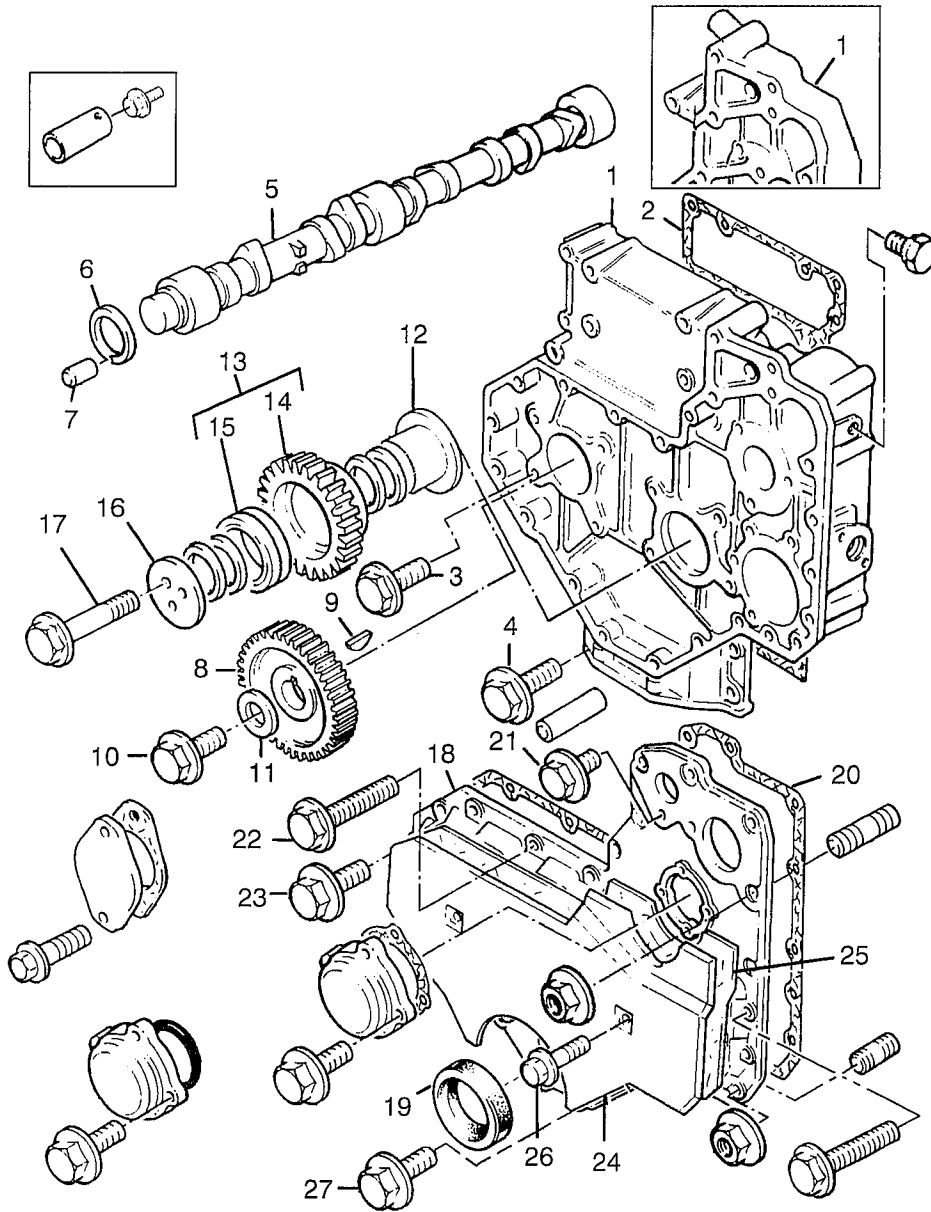


ACHA0607

Footnotes

(A) REPLACES 2313M059,2318A063

(B) BOTTOM TWO HOLES


ACHA0607

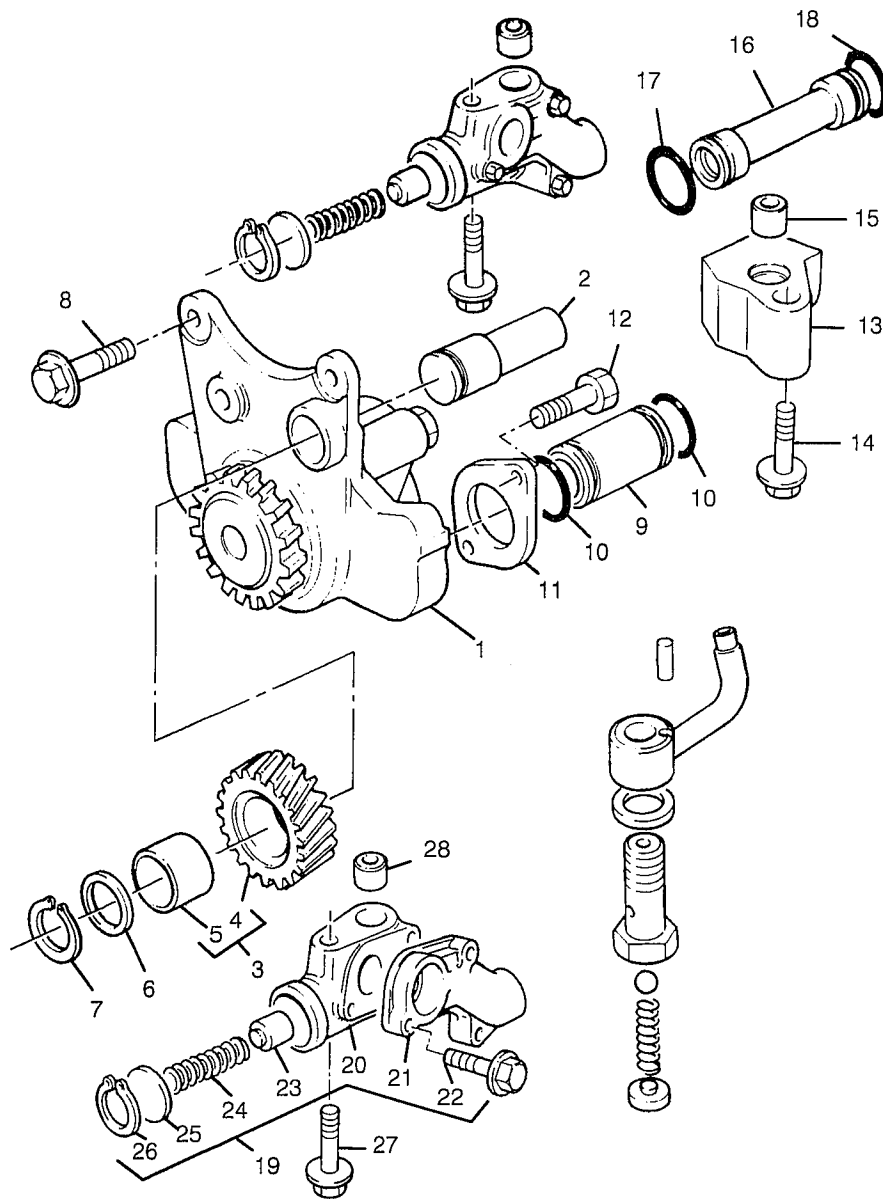

ACHA0607

Item	Part No.	References	Qty.	Description	Notes
1	4132F051		1	OIL PUMP	
2	3271H004		1	SHAFT	
3	4111A021		1	IDLER GEAR	
4		 4111A021	1	IDLER GEAR	
5	 2511437		1	BUSH	
6	33123125		1	WASHER	
7	2722A206		1	CIRCLIP	
8	2314H005		3	SCREW	
9	3343F012		1	OIL PIPE	
10	2415H201		2	O RING	
11	3748C011		1	FLANGE	
12	2314H004		2	SCREW	
13	3763W011		1	ADAPTOR	
14	2314J008		1	SCREW	
15	33137409		1	THIMBLE	
16	3343M307		1	OIL PIPE	
17	2415H201		1	O RING	
18	2415H201		1	O RING	
19	4138A053	 a.	1	VALVE ASSEMBLY	
20			1	VALVE BODY	
21			1	VALVE COVER	
22	 2314F907		3	SCREW	
23	 32712726		1	PLUNGER	
24	 3174A012	 b.	1	SPRING	
25	 32712111		1	SEAT	
26	 2721130		1	CIRCLIP	
27	2314J011		1	SCREW	
28	33137409		1	THIMBLE	
History					
a.					
19	4138A036		1	RELIEF VALVE	
b. General History Section					
24	 3174L003		1	SPRING	


AFH03865

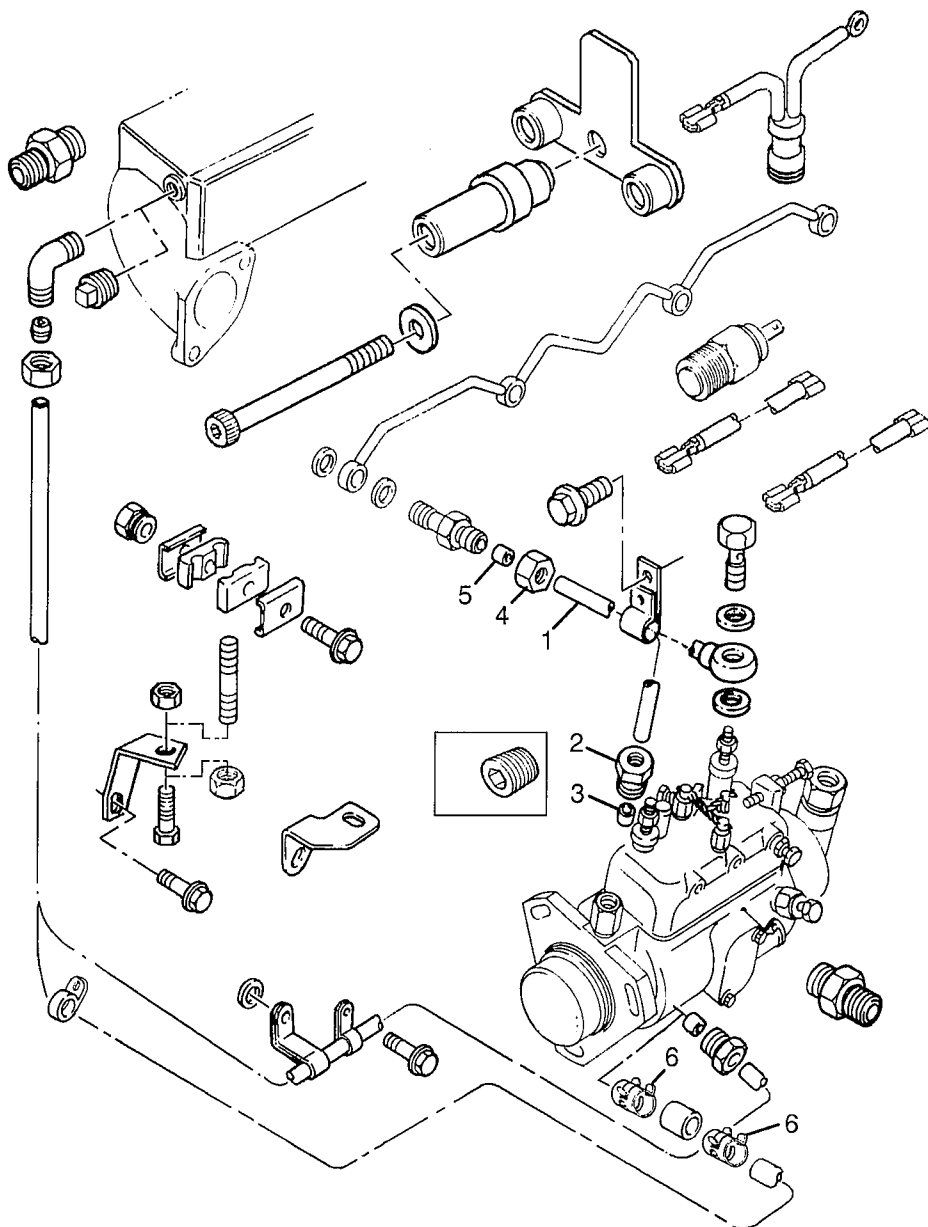

AFH03865

Item	Part No.	References	Qty.	Description	Notes
1	4124C072		1	AIR PIPE	
2	└ 3353D004		1	UNION NUT	
3	└ 3381A002		1	OLIVE	
4	33225412		1	UNION NUT	
5	33811112		1	OLIVE	
6	K138AF02		1	CLIP	


AFH03865

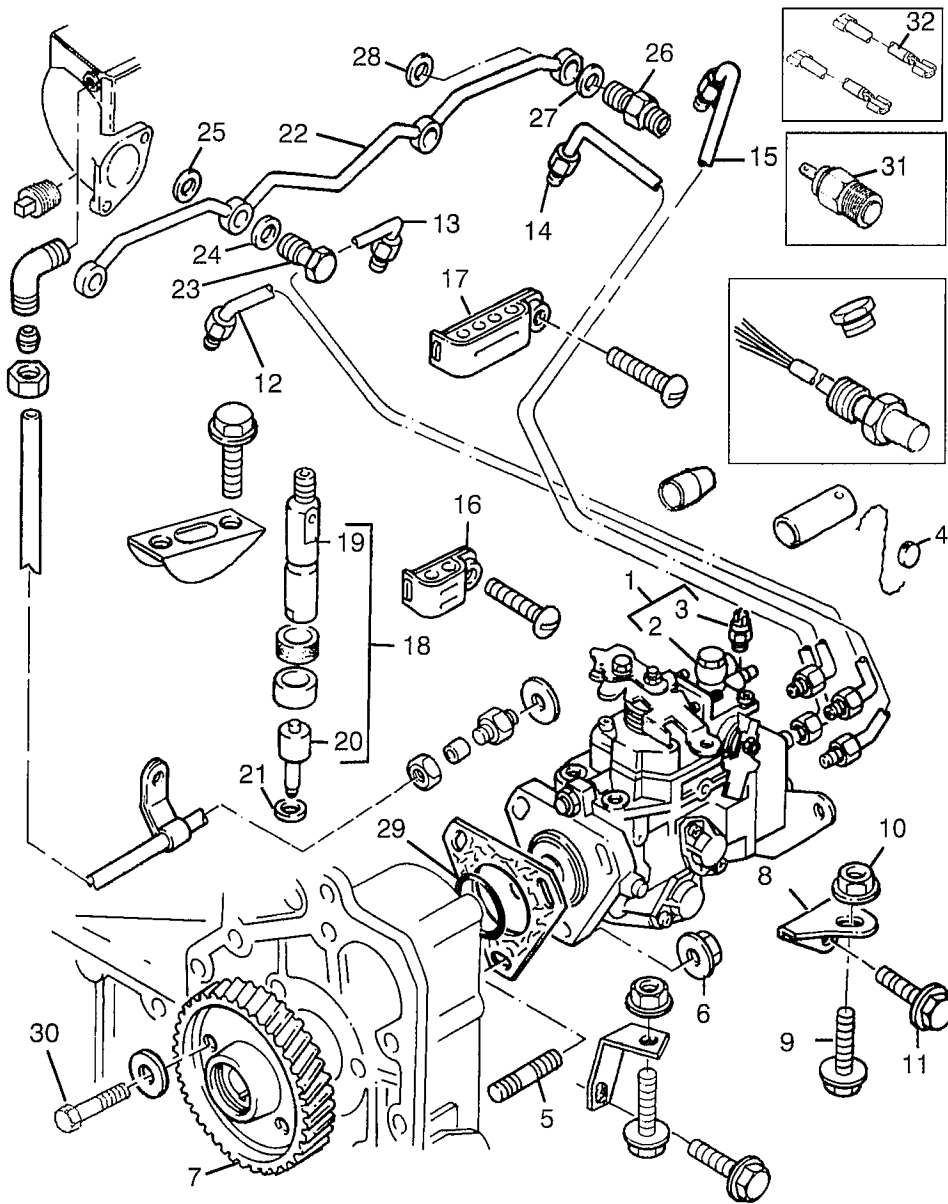

AFH03865

Item	Part No.	References	Qty.	Description	Notes
1.	2644G741	 b.	1	FUEL INJECTION PUMP	
		 c.			
		 f.			
2		 2644G741	1	FUEL INJECTION PUMP	
3	 26420469		1	SOLENOID	
4	2648A123	  e.	1	CAP	
5	3211P004		3	STUD	
6	2318A603		3	NUT	
7	3117L212		1	FUEL INJECTION PUMP GEAR	
8	3644Y004		1	BRACKET	
9	2314H003		1	SCREW	
10	2318A603		1	NUT	
11	2314J002		1	SCREW	
12	3521H065	 1	1	FUEL INJECTION PIPE	
13	3521H083	 a.	1	FUEL INJECTION PIPE - NO 2	
14	3521H067	 3	1	FUEL INJECTION PIPE	
15	3521H068	 4	1	FUEL INJECTION PIPE	
16	2646E017		2	CLIP	
17	2646E019		1	CLIP	
18	U2645A058		4	ATOMISER	
19	 2645A311		1	HOLDER	
20	 2645K609		1	NOZZLE	
21	L311FF02		4	INJECTOR WASHER	
22	3558X051		1	ATOMISER LEAK-OFF PIPE	
23	3355V002		1	CONNECTION	
24	2415D051	 d.	1	PLAIN WASHER	
25	2415D051	 d.	1	PLAIN WASHER	
26	3218R005		3	BANJO BOLT	
27	2415D051	 d.	3	PLAIN WASHER	
28	2415D051	 d.	3	PLAIN WASHER	
29	26420318		1	O RING	
30	2314H002		4	SCREW	
31	2848A121	 g.	1	SENDER	
32	3161C005		1	CABLE	
Service Options					
4	2648A124		1	CAP	


AFH03865

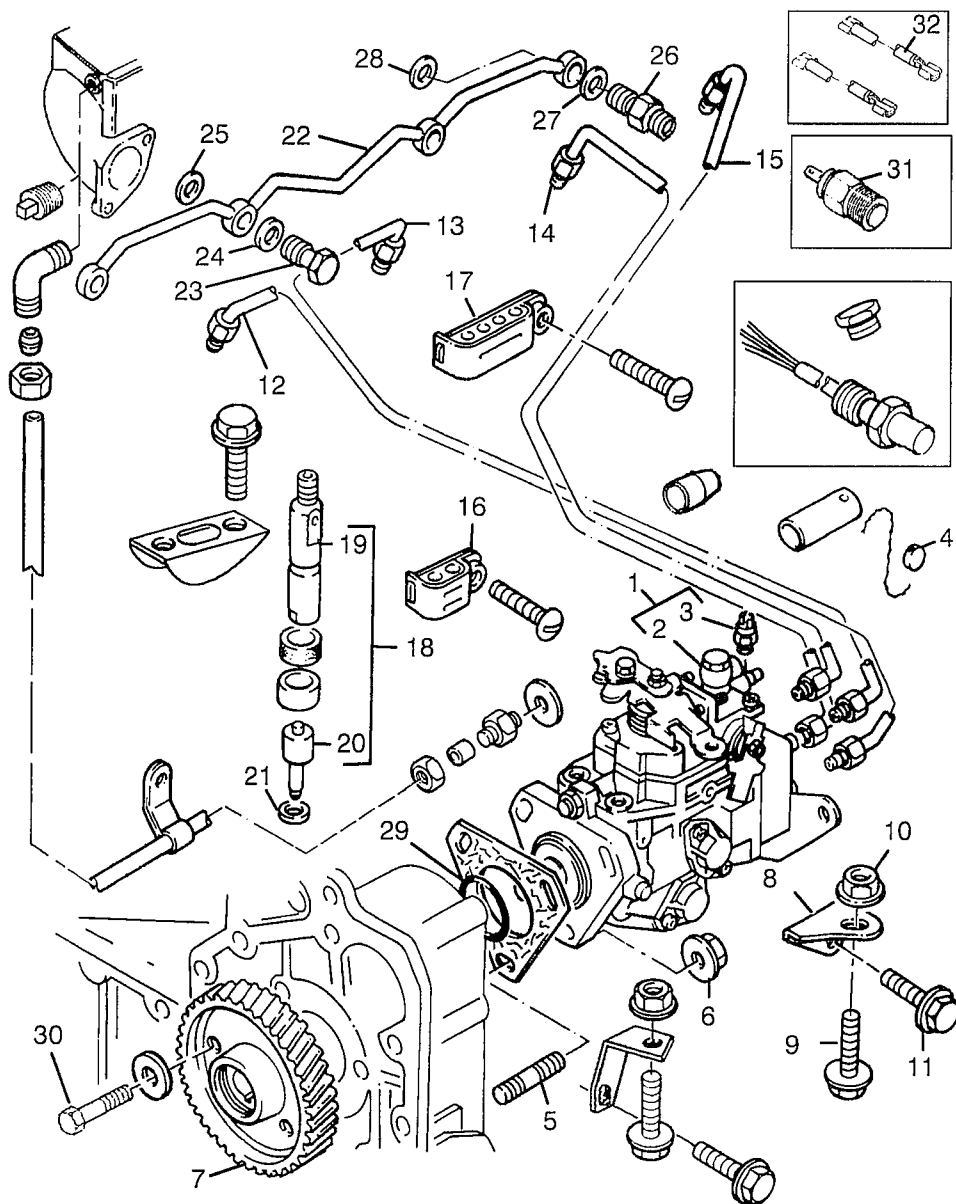

Fuel Injection Equipment (Diesel)		Plate K
		AFH03865

Item	Part No.	References	Qty.	Description	Notes
History					
a.					
13	3521H066	 2	1	FUEL INJECTION PIPE	
b.					
1	2644G731		1	FUEL INJECTION PUMP	
c.					
1	2644G721		1	FUEL INJECTION PUMP	
d.					
24	3311A001		1	WASHER	
25	3311A001		1	WASHER	
27	3311A001		3	WASHER	
28	3311A001		3	WASHER	
e.					
4	2648A116		1	CAP	
f.					
1	U2644G721		1	FUEL INJECTION PUMP	
g.					
31	2755A009		1	SENDER	

CDH00991

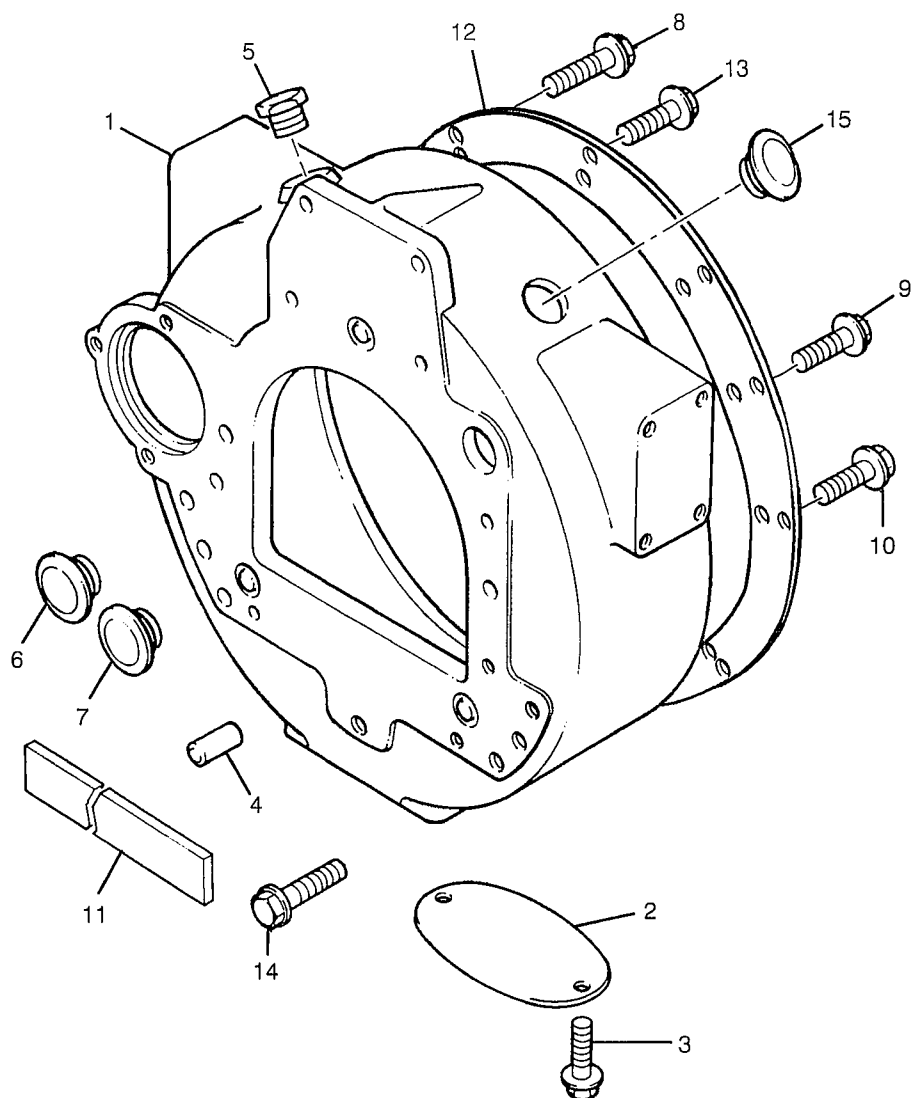


Flywheel Housing

Plate A

CDH00991

Item	Part No.	References	Qty.	Description	Notes
1	3713K063		1	FLYWHEEL HOUSING	
4	0350025		2	DOWEL	
5	2487215	● 2487218	1	PLUG	
6	2487204		3	PLUG	
7	32712723		1	PLUG	
8	2314J204		6	SCREW	
9	2314J603		2	SCREW	
11	36843154		1	SEAL	

Flywheel & Starter Ring		Plate A
	DDH01009	

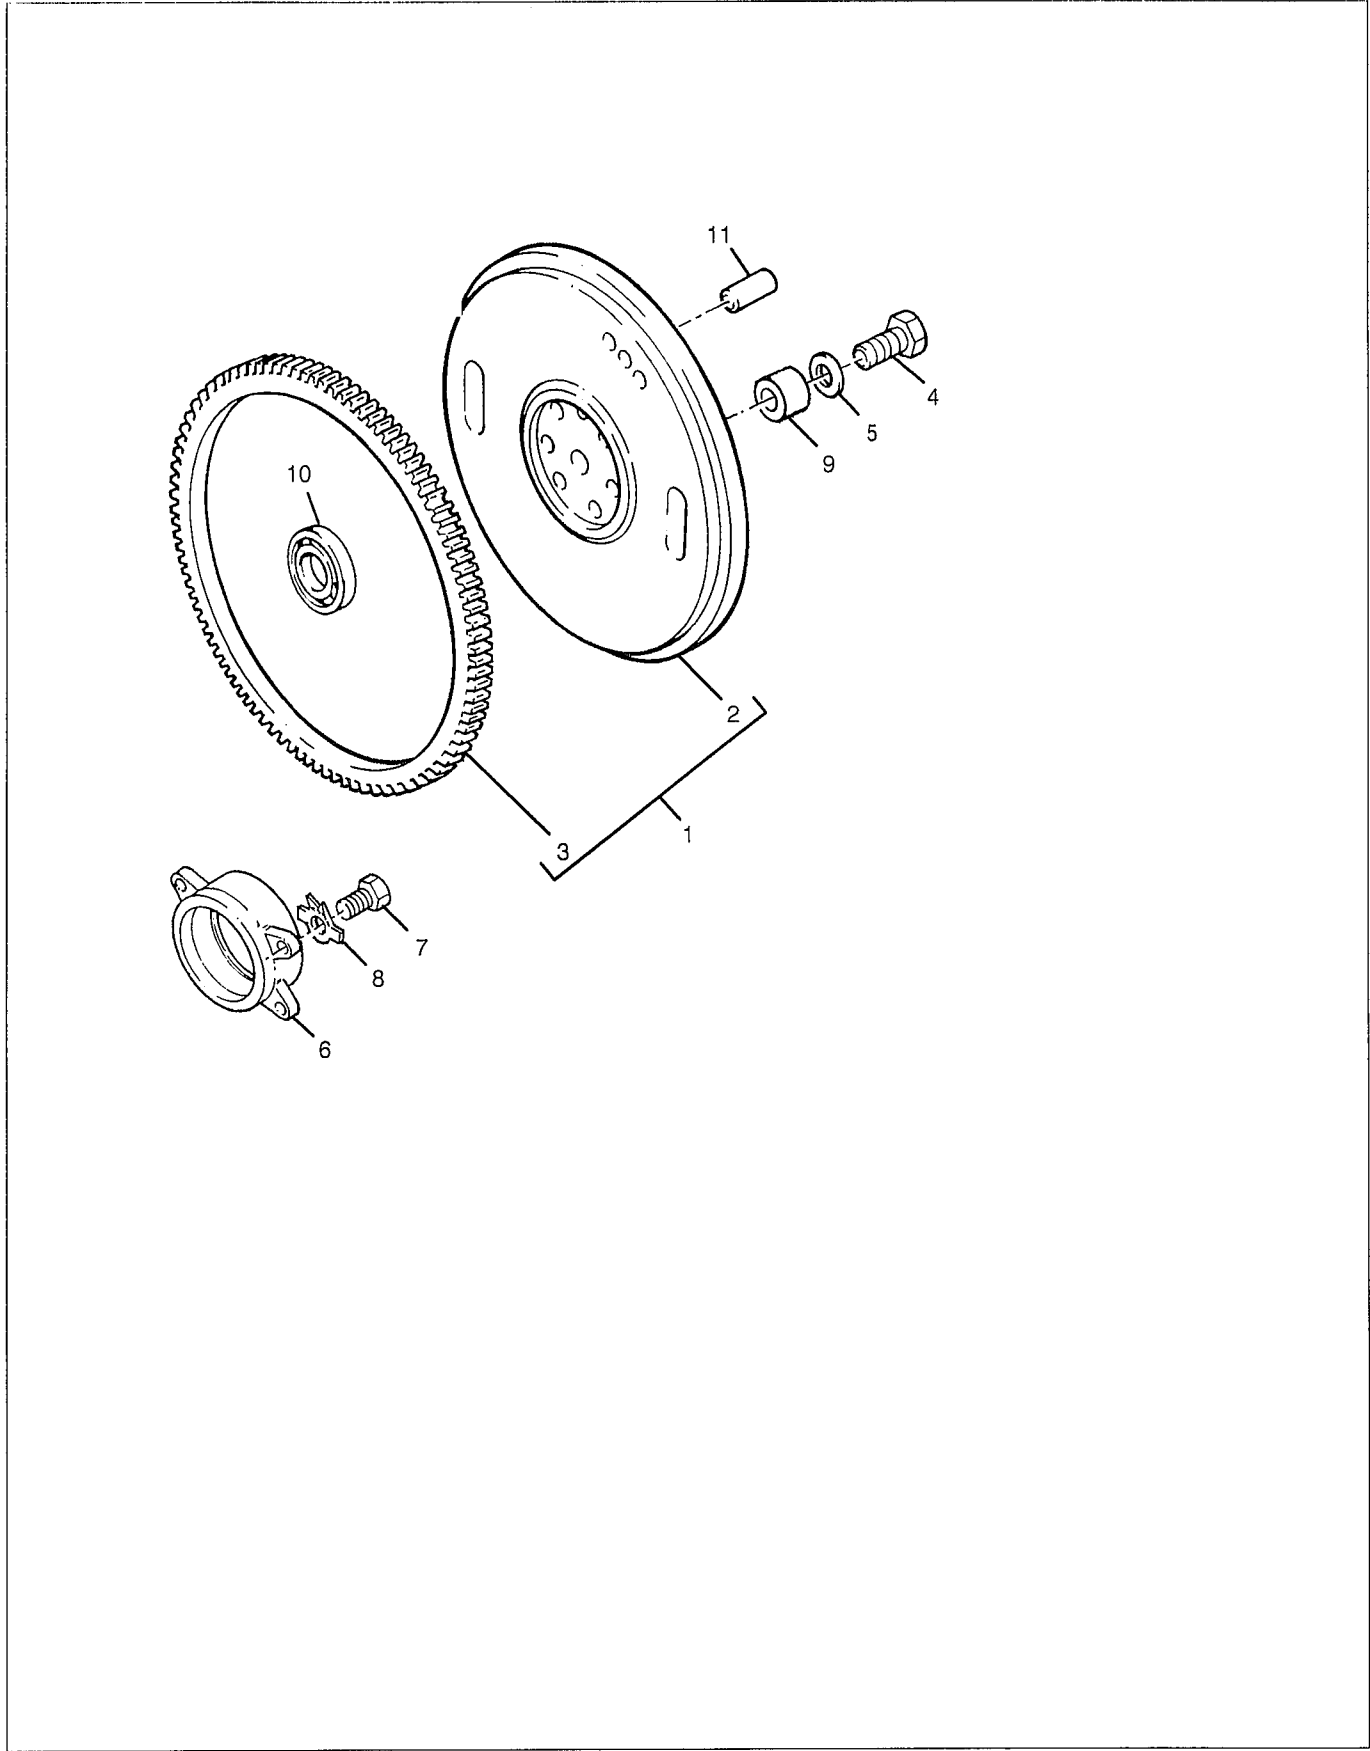


Flywheel & Starter Ring

Plate A

DDH01009

Item	Part No.	References	Qty.	Description	Notes
1	4111D127		1	FLYWHEEL ASSEMBLY	
2	└─	⇒ REF.1	1	FLYWHEEL	
3	└─ 31162121		1	STARTER RING GEAR	
4	0746853		2	SCREW	(A)
5	33117127		4	WASHER	
Footnotes					
(A)	FOR TRANSPORTATION PURPOSES ONLY				


EDH00527

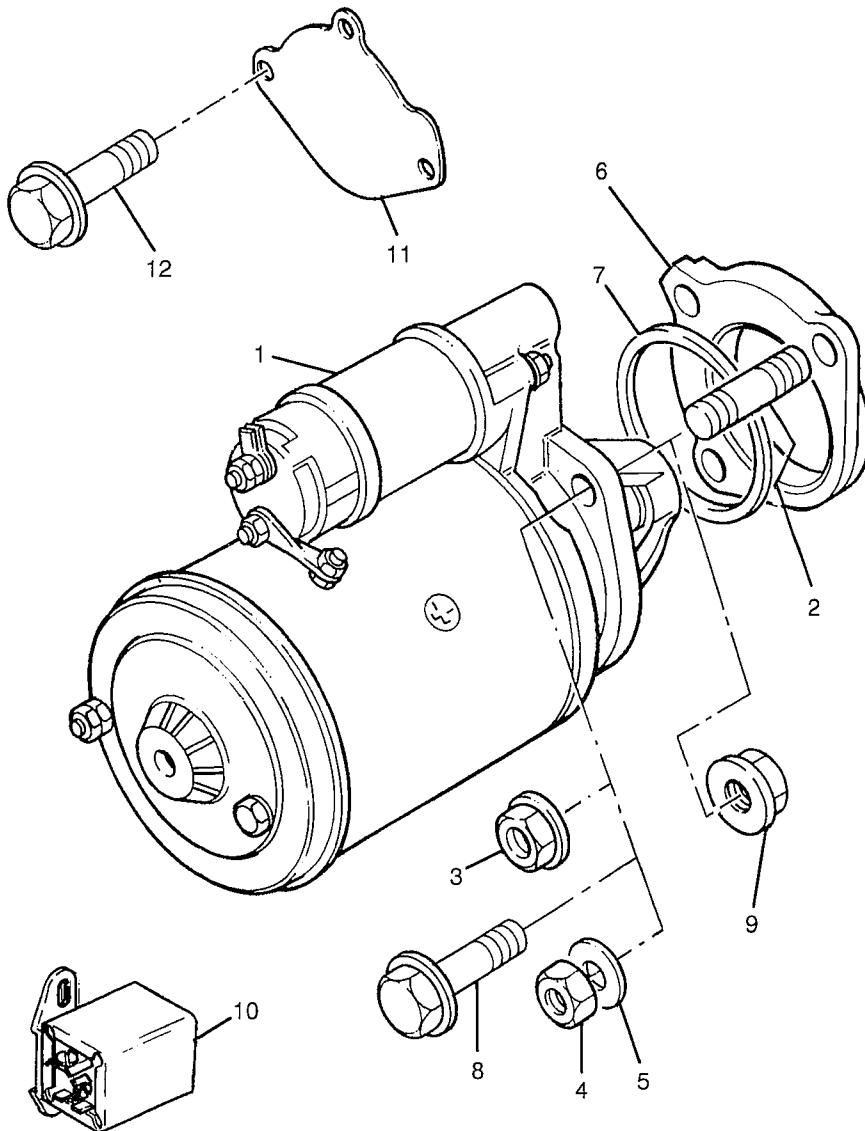

Starter Motor		Plate A
		EDH00527

Item	Part No.	References	Qty.	Description	Notes
1	2873B071		1	STARTERMOTOR	
2	2313C077		3	STUD	
3	2318A604		3	NUT	

EDH00527

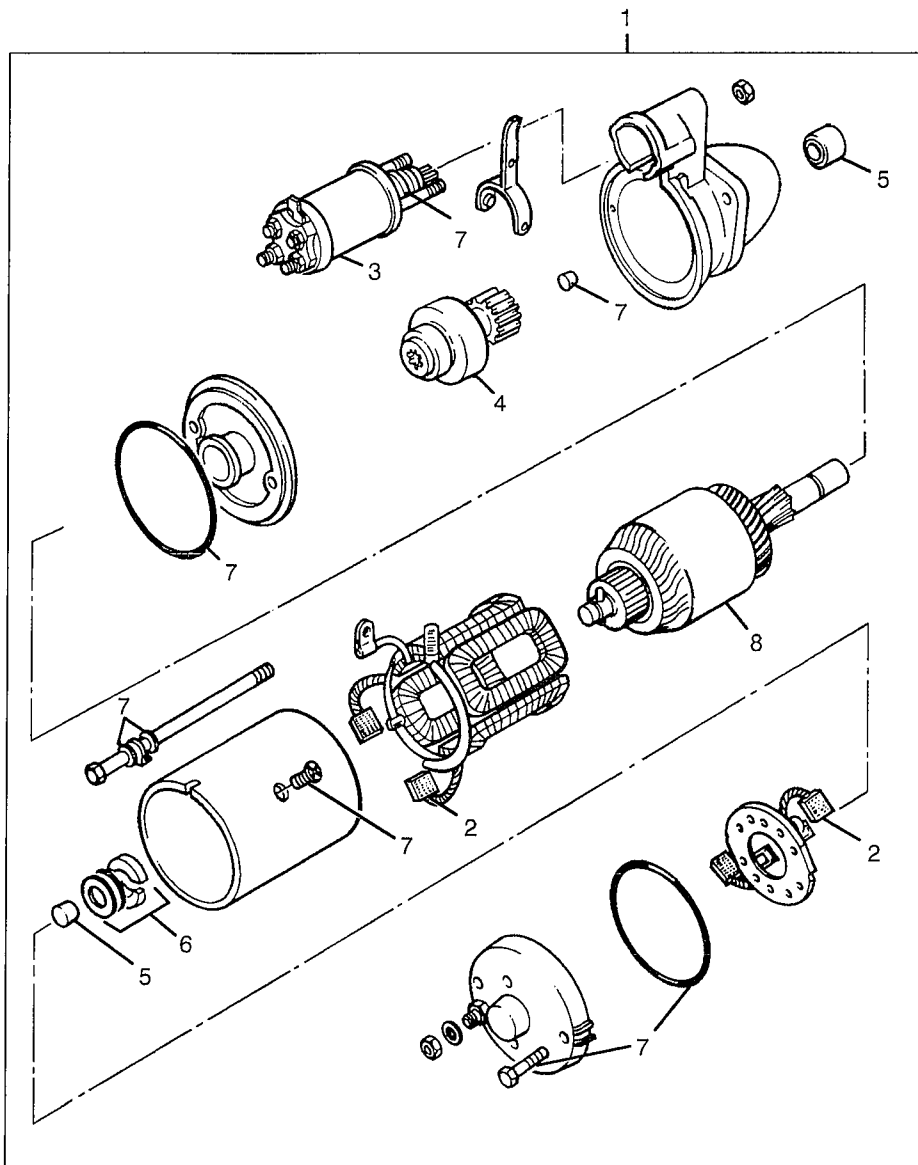


Starter Motor

Plate B

EDH00527

Item	Part No.	References	Qty.	Description	Notes
1	2873B071		1	STARTERMOTOR	
5	└ 28730238	●○ 28730192	1	BUSH KIT	
6	└ 28730193		1	BRAKE KIT	
2	28730201		1	BRUSH KIT	
4	28730267		1	DRIVE	
5	28730238		1	BUSH KIT	
7	28730209		1	REPAIR KIT	

FBH00542

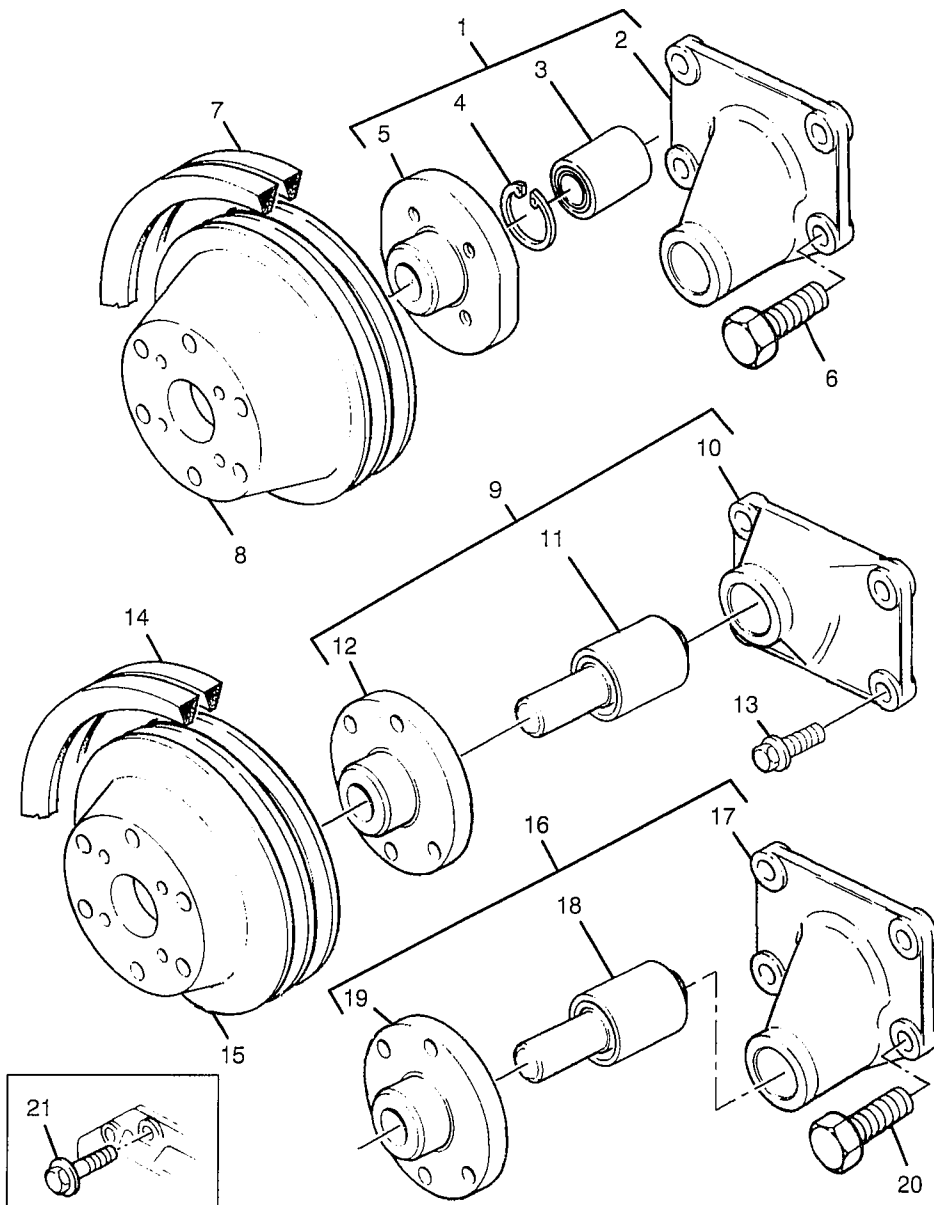


Fan Drive		Plate C
		FBH00542

Item	Part No.	References	Qty.	Description	Notes
14	2614B669		1	FANBELT	(A)
15	3115C111		1	FAN PULLEY	
16	4113H073		1	FAN DRIVE HOUSING	
17		⇒ REF 16	1	HOUSING	
18		⇒ REF 16	1	BEARING	
19		⇒ REF 16	1	HUB	
20	2314J014		4	SCREW	

Footnotes	
(A)	SERVICED IN PAIRS


GBH01338

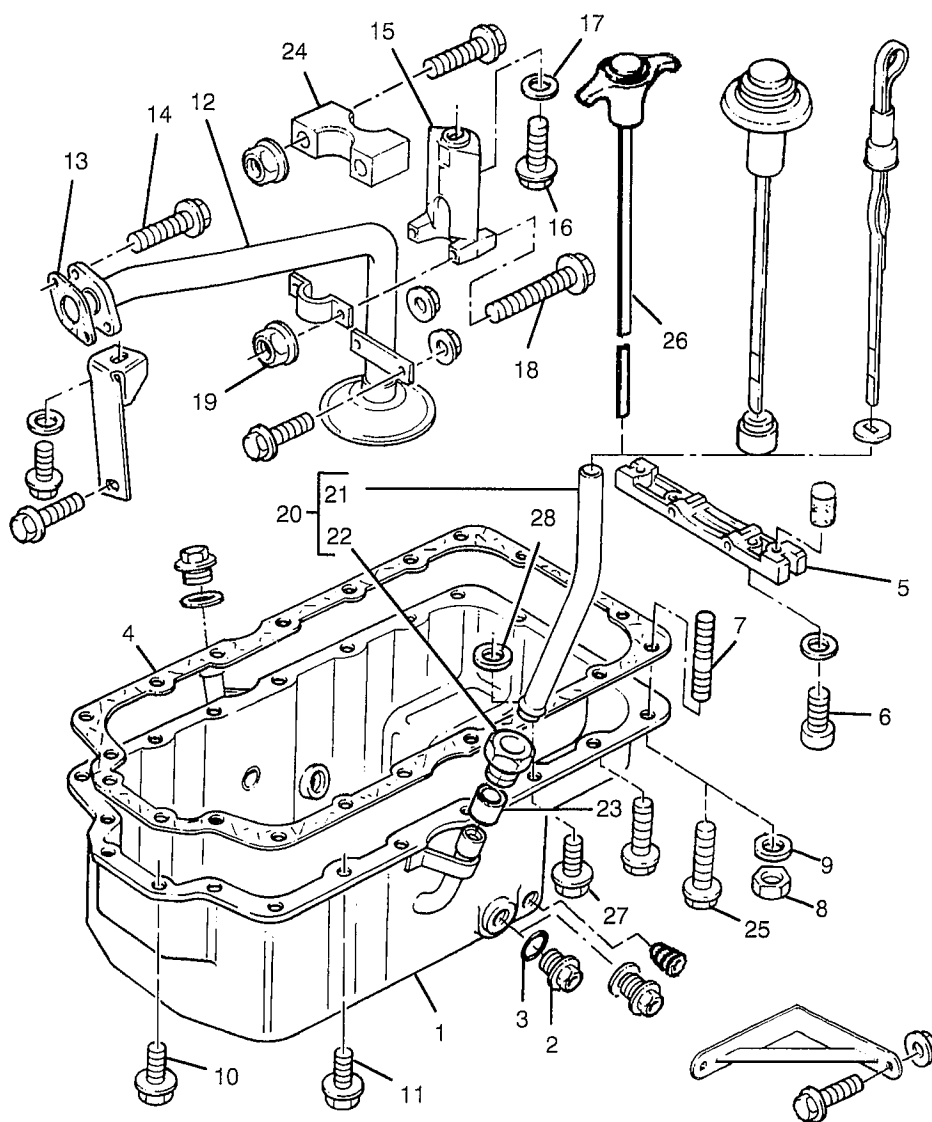

GBH01338

Item	Part No.	References	Qty.	Description	Notes
1	3717Y002		1	SUMP	
2	32186405		2	PLUG	
3	2415715		2	O RING	
4	3681K005	●○ 36815715	1	SUMP JOINT	
5	3627P023	●○ 3627P022 ●○ 3627P021 ●○ 36277824	1	BRIDGE PIECE	
6	2311D039		2	SCREW	
7	3254H007		2	STUD	(A)
8	2318A603		2	NUT	(A)
9	2131A008		2	WASHER	(A)
10	2314H002		4	SCREW	
11	2314H002		13	SCREW	(B)
12	3575A018		1	OIL PIPE	
13	36832118		1	JOINT	
14	2314H007		2	SCREW	
15	3824A021	●○ 3824A001	1	BRACKET	(C)
16	2314H004		1	SCREW	
17	0330807		1	SPACER	
18	2314F016	●○ 2314F014	2	SCREW	
19	2318D802		2	NUT	
20	3577A125		1	TUBE ASSEMBLY	(D)
21		⇒ 3577A125	1	TUBE	
22	3353D005		1	NUT	
23	33812116		1	OLIVE	
24	3735A011	●○ 3611V002	1	CLAMP	(E)
25	2314H031		2	SCREW	(F)
26	3178C077	●○ 3178C007	1	DIPSTICK	(G)
27	2314H003		1	SCREW	
28	33134418	 a.	1	SPACER	
History					
a.					
28	0920460		1	SPACER	
Footnotes					
(A)	USED ONLY WITH CAST IRON BRIDGE PIECE PART NO.36277824				
(B)	QUANTITY WAS 14				


GBH01338

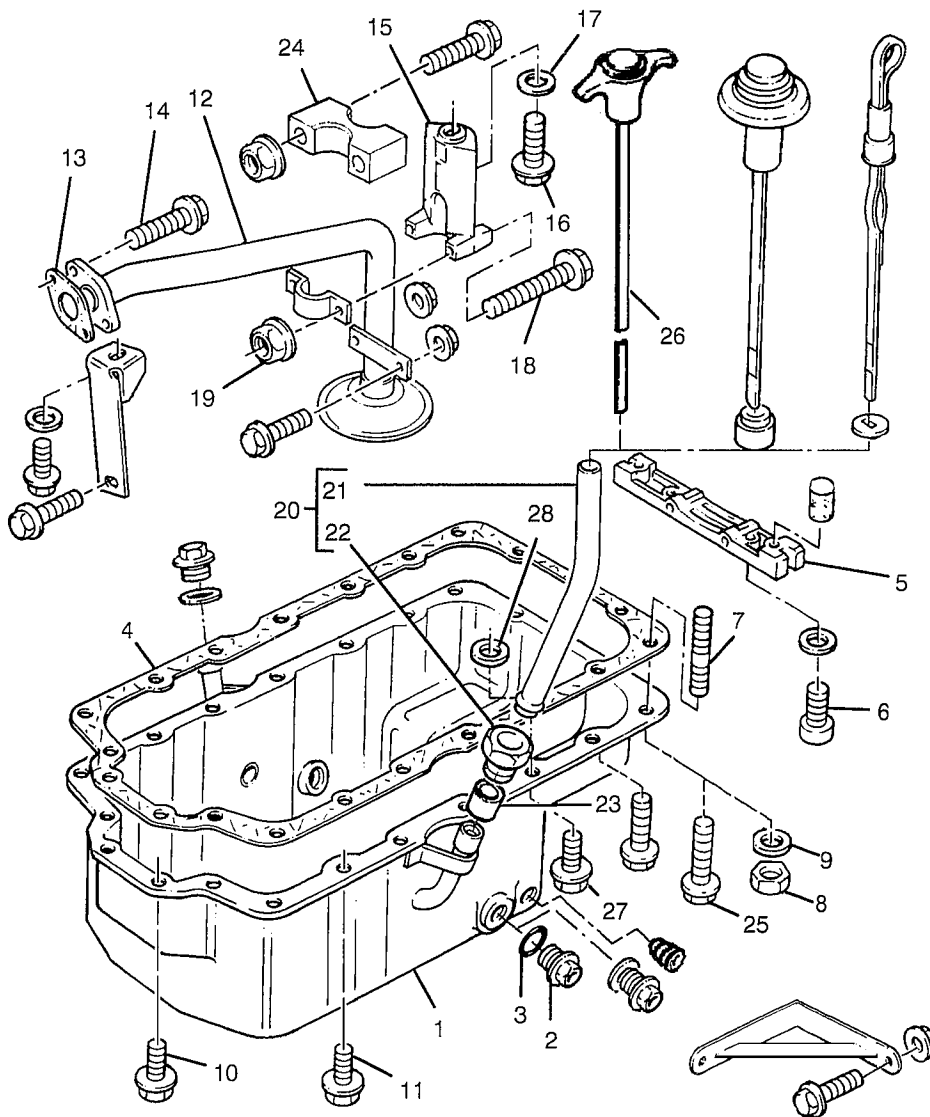

GBH01338

(C)	WAS 3824A001 USE 3824A021 WITH 3735A011,2314F016 (2)
(D)	WAS 3577A115 USE 3577A125,3178C077
(E)	WAS 3611V002 USE 3735A011 WITH 3824A021,2314F016 (2)
(F)	USED ONLY WITH CAST IRON BRIDGE PIECE PART NO.3627P021
(G)	WAS 3178C607,USE 3178C077,3577A125


HBH02065

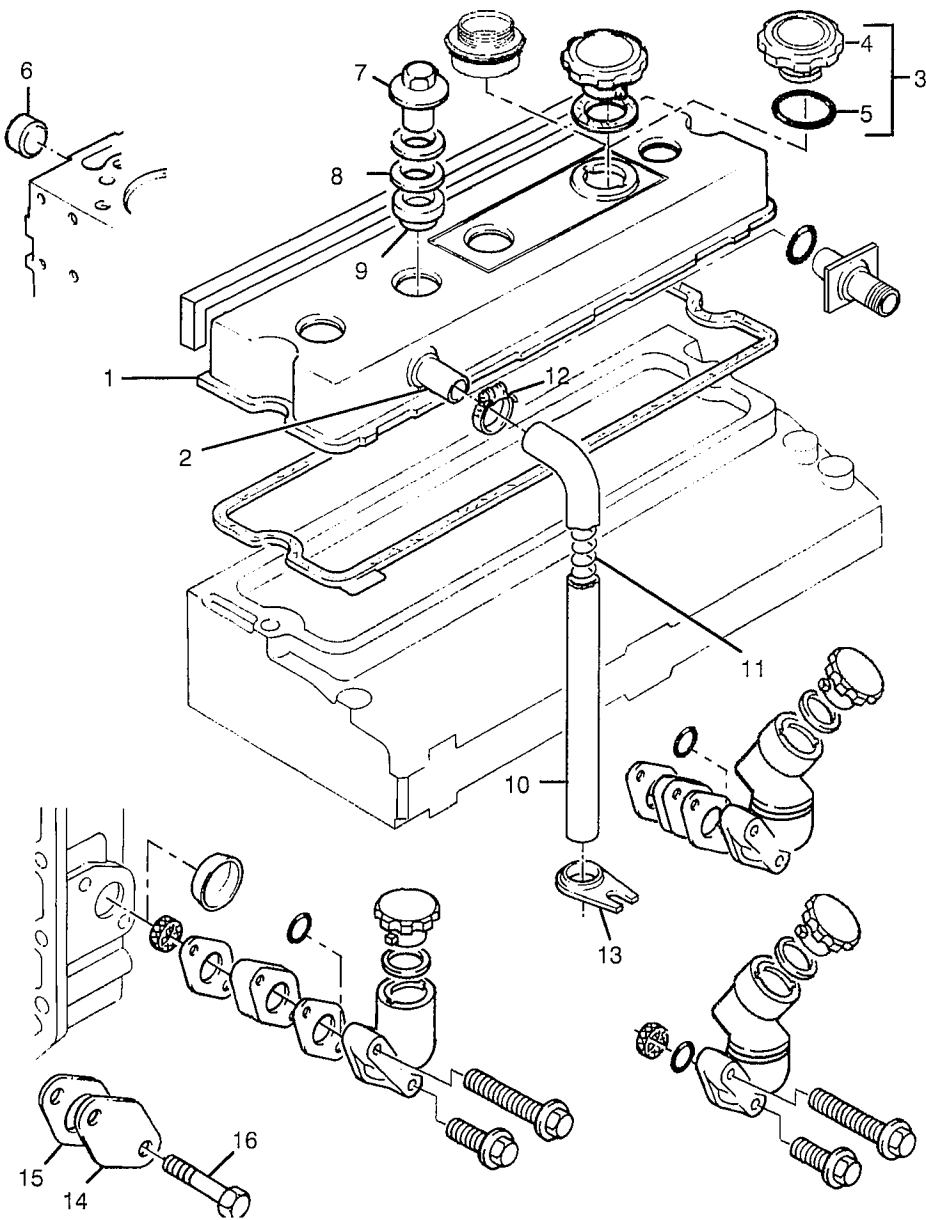

HBH02065

Item	Part No.	References	Qty.	Description	Notes
1	4142X187	 U4142X124  U3781F344  a.	1	CYLINDER HEAD COVER	(A)
2	└ 3681A047	 a.	1	ROCKER COVER JOINT	
3	└ 4142X099		1	OIL FILLER CAP	
4	└	 4142X099	1	OIL FILLER CAP	
5	└ 2415731		1	O RING	
6	32416118		1	PLUG	(B)
7	3274A003	 b.	3	NUT	
8	0920009		3	WASHER	
9	33817135		3	SEAL	
10	33872525		1	BREATHER PIPE	
11	3175P003		1	SPRING	
12	2481877	 2481884	1	HOSE CLIP	
13	36241123		1	SUPPORT BRACKET	
14	3617A001		1	PLATE	
15	3683H006		1	JOINT	
16	2314H003		2	SCREW	
History					
a.					
1	4142X187	 U4142X124  U3781F344	1	CYLINDER HEAD COVER	(A)
2	└ 3688X012		1	CYLINDER HEAD JOINT	
b.					
7	3274P003		3	NUT	
c. General History Section					
	└ 3688X012	 U3688X011  U3688X007	1	CYLINDER HEAD JOINT	
Footnotes					
(A)	WAS U4142X124 USE 4142X187 WITH 2481884				
(B)	CYLINDER BLOCK ALTERNATIVE LUBRICATING OIL FILLER FACING (FITTED RIGHT HAND SIDE)				


JBH01274

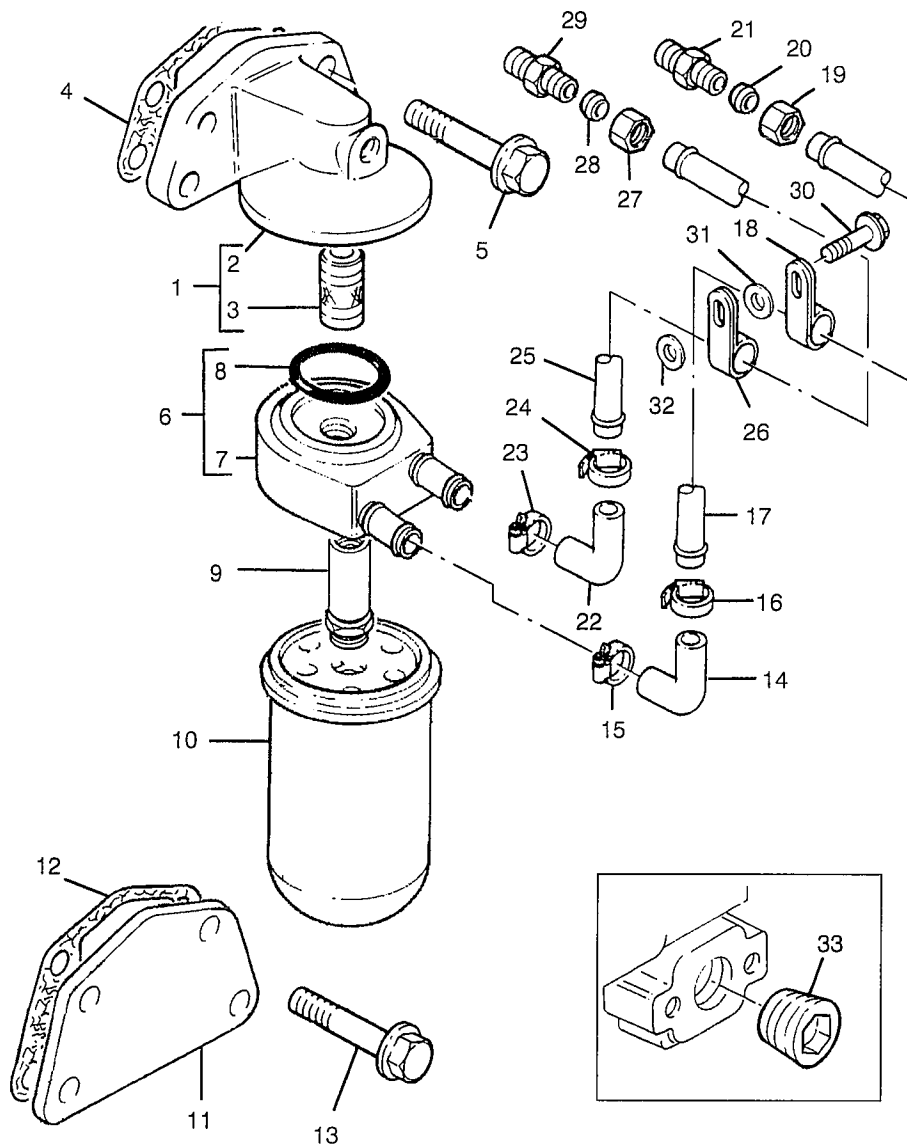

JBH01274

Item	Part No.	References	Qty.	Description	Notes
1	3773K004		1	OIL FILTER HEAD	
2		⇒ REF.1	1	FILTER HEAD	
3		⇒ REF.1	1	CONNECTION	
4	3686T004		1	JOINT	
5	2314J034		4	SCREW	
10	2654403		1	OIL FILTER	
11	3623H008		1	PLATE	
12	3686T004		1	JOINT	
13	2314J033		4	SCREW	
33	0650588		1	PLUG	

KBH00519

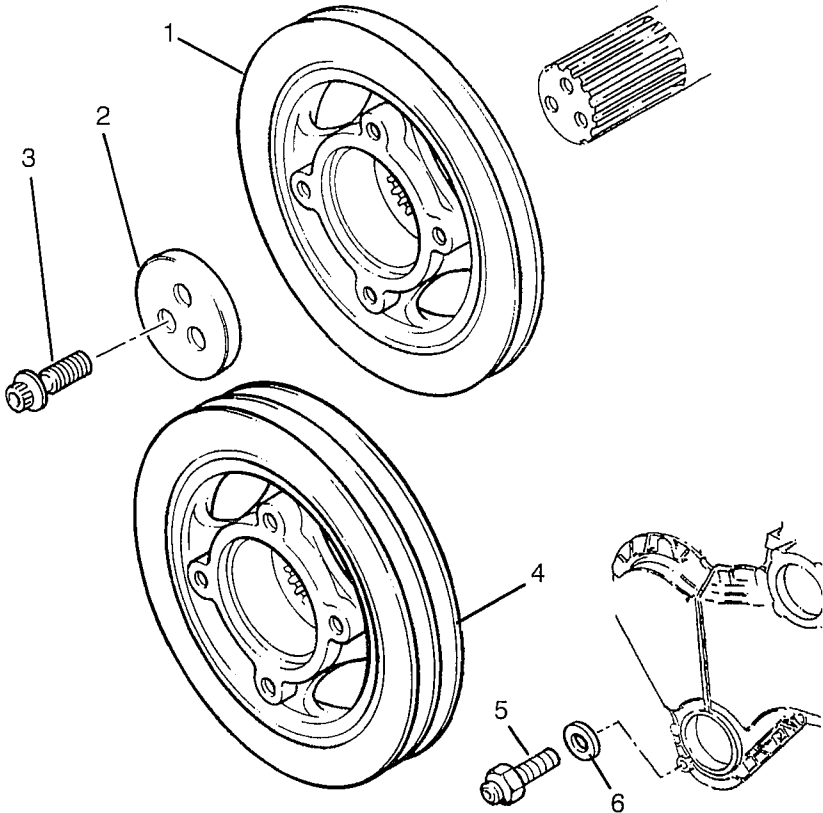


Front End Drive Input**Plate A**

KBH00519

Item	Part No.	References	Qty.	Description	Notes
1	3114V041		1	CRANKSHAFT PULLEY	
2	3241N001		1	BLOCK	
3	32186137		3	BOLT	

● ○ LBHA1879

LBH02176

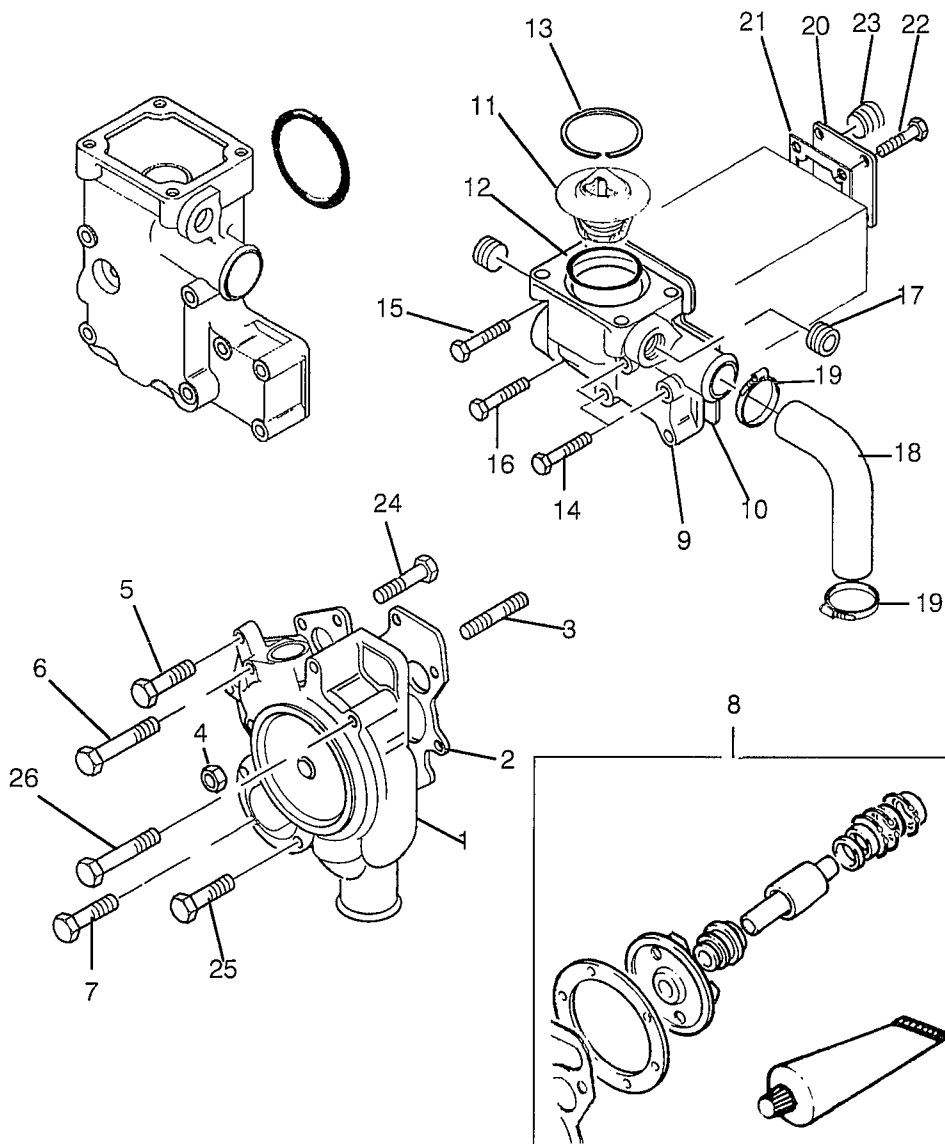


● LBHA1879

LBH02176

Item	Part No.	References	Qty.	Description	Notes
1	U5MW0178		1	WATER PUMP KIT	
2	└ 3687Y016		1	JOINT	
3			1	STUD	(A)
4			1	NUT	(A)
5	2314K159		1	SCREW	
6	2314H017		3	SCREW	
7	2314H034		3	SCREW	
8	U7LW0161	 b.	1	WATER PUMP REPAIR KIT	
9	3771K251		1	HOUSING	
10	3686D007		1	JOINT	
11		 LDH	1	THERMOSTAT	
12		 LDH	1	O RING	
13		 LDH	1	CLIP	
14	2314H008		3	SCREW	
15			1	SCREW	(A)
16	2314K161		3	SCREW	
17			1	PLUG	(A)
18	U5MH0056		1	HOSE KIT	
19	0180067		2	CLIP	
20	3623H024		1	COVER	
21	3685R009		1	JOINT	
22			4	SCREW	(B)
23			1	PLUG	(A)
24	2314H012		2	SCREW	
25			1	SCREW	(A)
26	2314K166		1	SCREW	
History					
a.					
	2431154		1	PLUG	
b. General History Section					
8	U7LW0161		X	WATER PUMP REPAIR KIT	
Footnotes					
(A)	NOT REQUIRED FOR THIS APPLICATION				
(B)	REFER TO RELEVANT OPTION ACCESSORY PACKS				


LDH00592

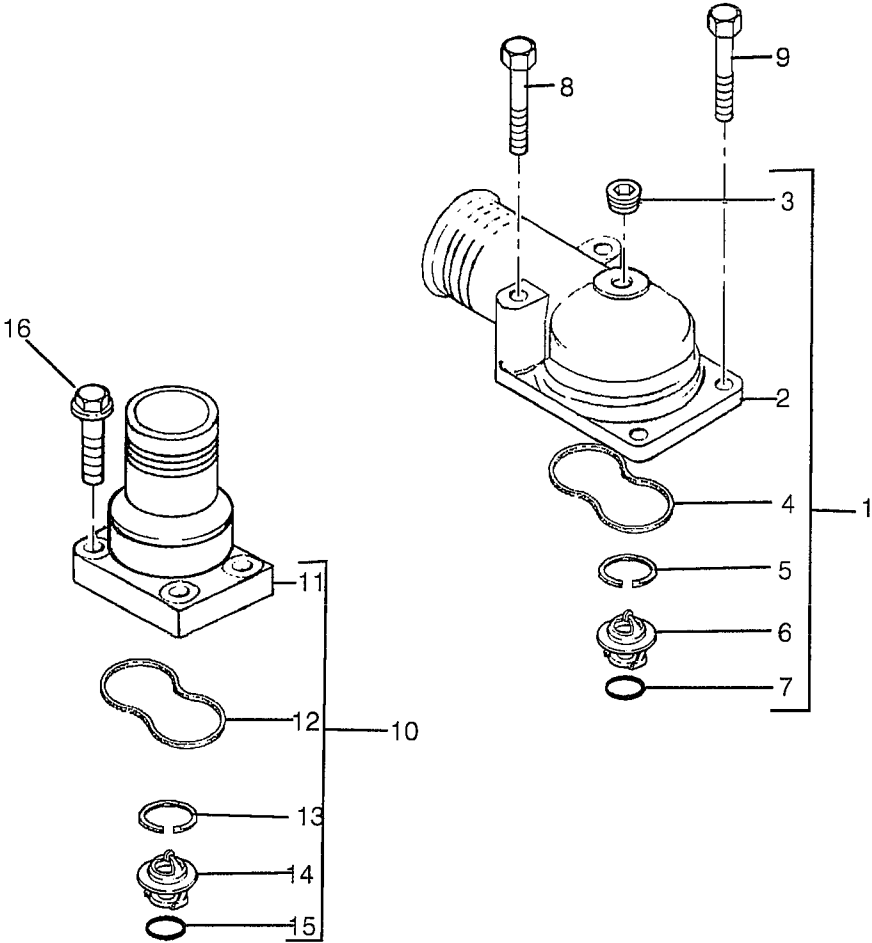

LDH00592

Item	Part No.	References	Qty.	Description	Notes
1	4133L017	↳ U892126D	1	CONNECTION	
2	—	↳ U892126D	1	CONNECTION	
3	— 3781A503	↳ U892126D	1	PLUG	
4	— 2415H492	↳ U892126D	1	O RING	
5	— 3381J008	↳ U892126D	1	RING	
6	— 2485C025	↳ U892126D	1	THERMOSTAT	
7	— 2415A090	↳ U892126D	1	O RING	
8	2314K161	↳ U892126D	2	SCREW	
9	2314H004	↳ U892126D	2	SCREW	


MDH01085

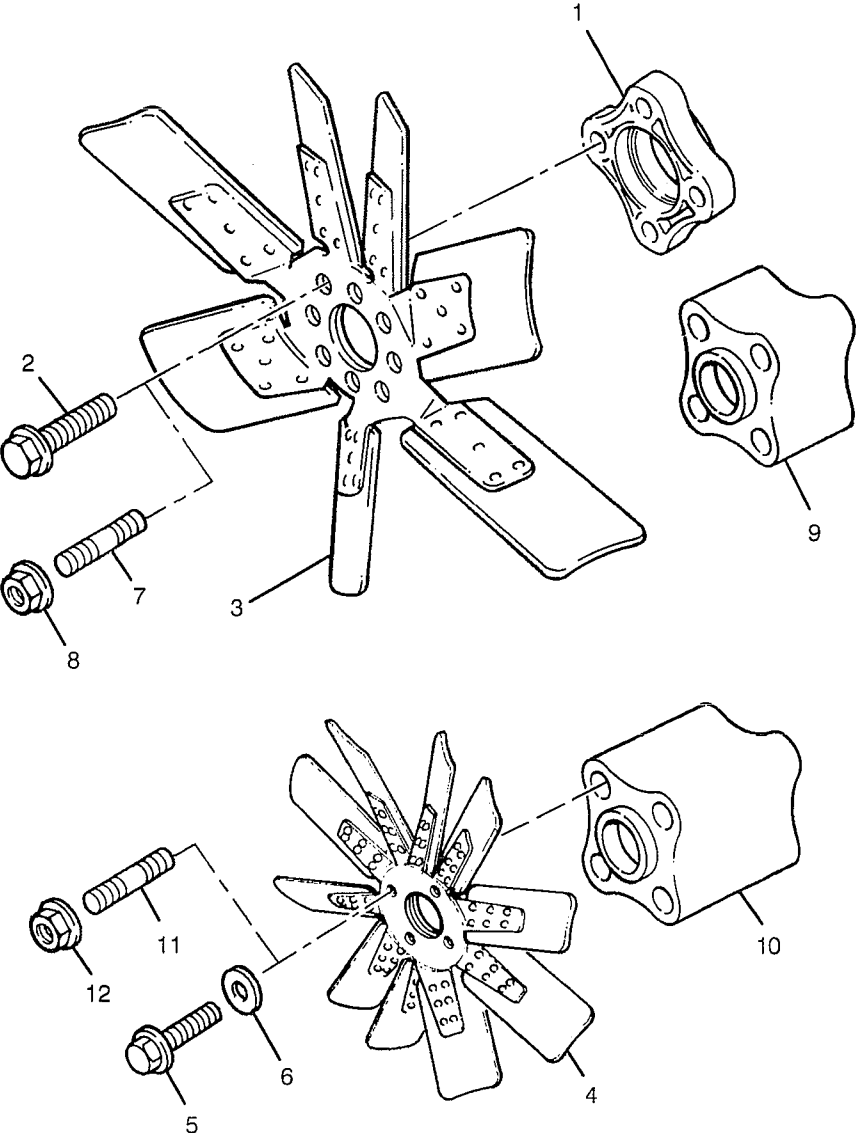

MDH01085

Item	Part No.	References	Qty.	Description	Notes
4	2485C518		1	FAN	
7	2313H229		4	STUD	
8	2318D208		4	NUT	
9	3748W223		1	EXTENSION	


NDH02165

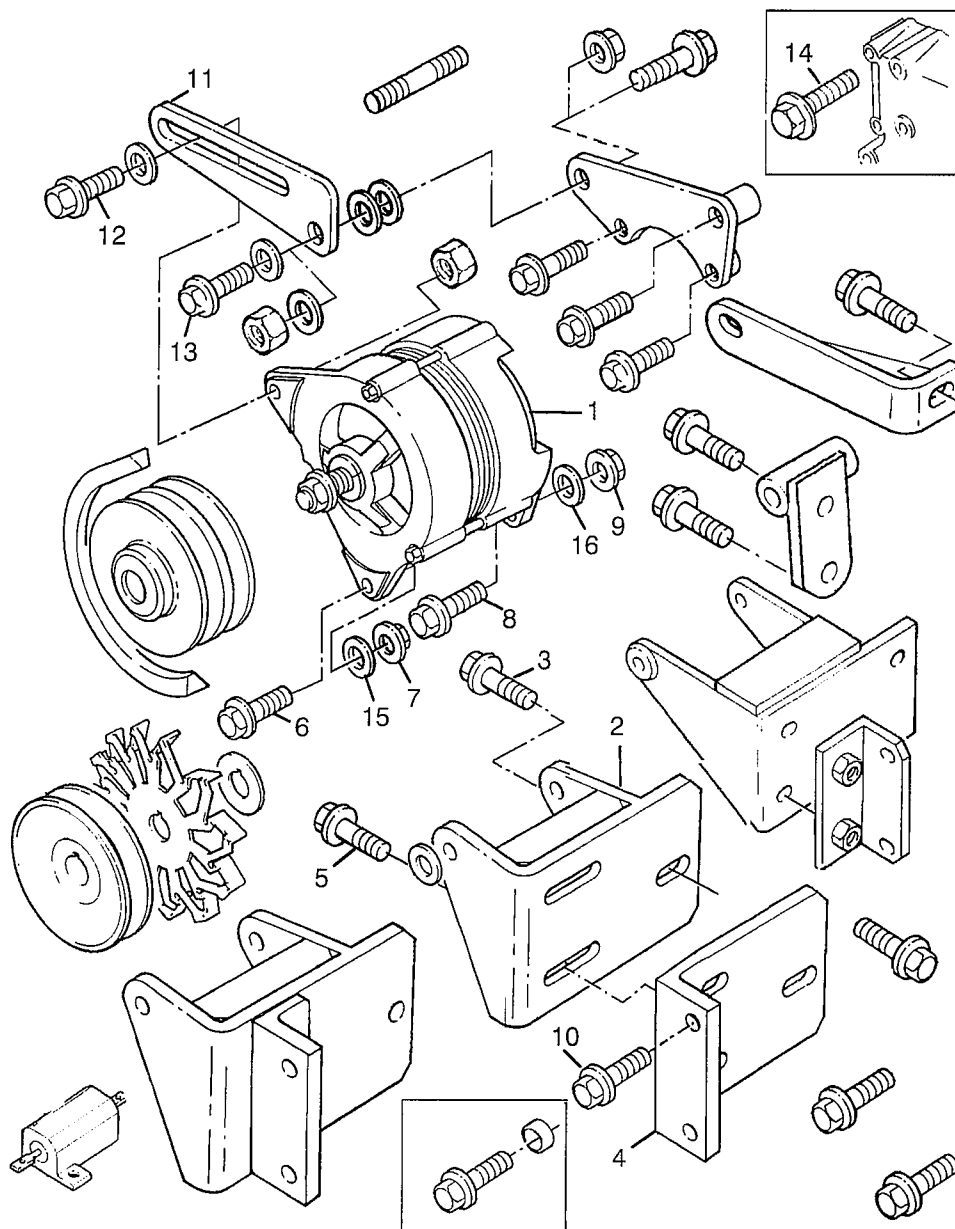

NDH02165

Item	Part No.	References	Qty.	Description	Notes
1		NDHA-C	1	ALTERNATOR	
2	3828D016	U3828D016	1	BRACKET	
3	2314J003		1	SCREW	
4	U3641V013		1	BRACKET	
5	2314H002	2314H003	4	SCREW	
6	2314H006		1	SCREW	
7	2318D208		1	NUT	
8	2314H008		1	SCREW	
9	2318D208		1	NUT	
10	2314H013		2	SCREW	
11	3615Y006		1	LEVER	
12	2314H004		1	SCREW	
13	2314J602		1	SCREW	
14	2314H005		3	SCREW	(A)
15	2131A008		1	WASHER	
16	2131A008		1	WASHER	
History					
a.					
	3113H001		1	ALTERNATOR PULLEY	
Footnotes					
(A)	FRONT COVER TO TIMING CASE				


NDH02165

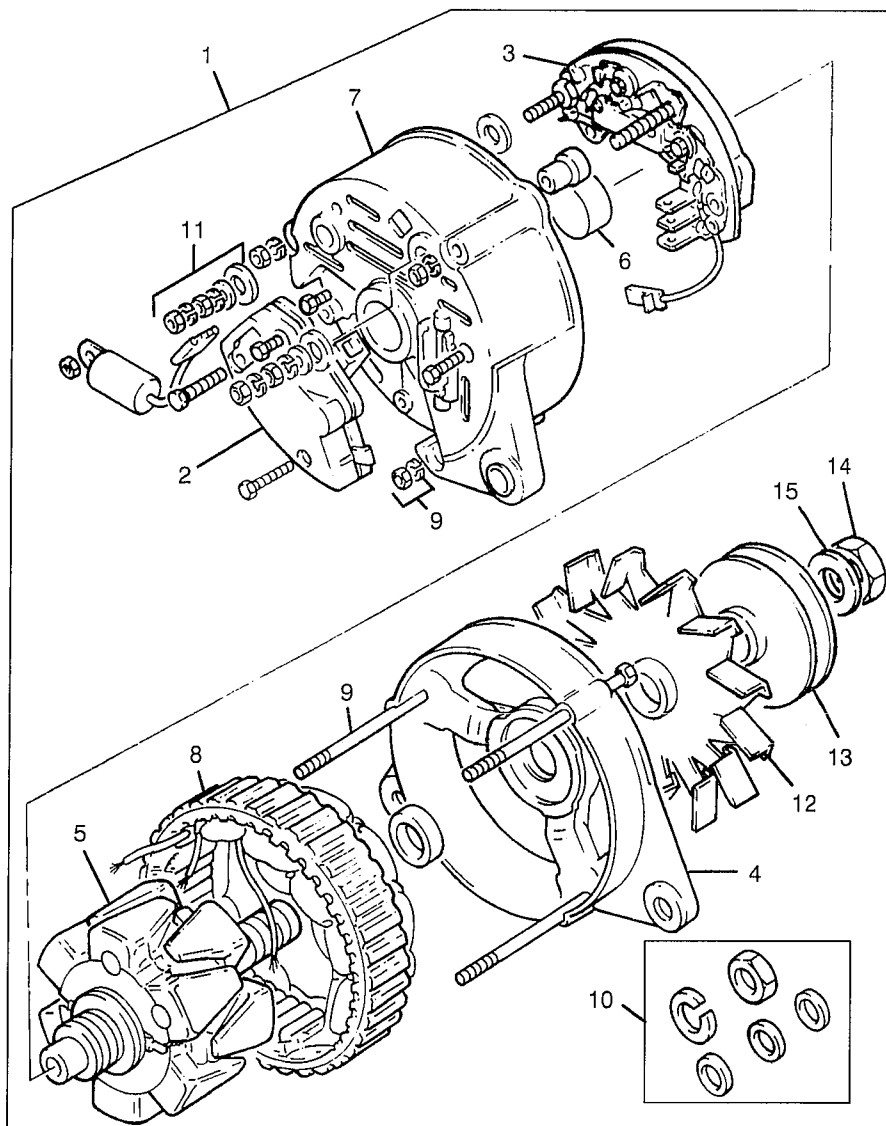

NDH02165

Item	Part No.	References	Qty.	Description	Notes
1	2871A163		1	ALTERNATOR	
2	— 28710252		1	REGULATOR	
3	— 28710355		1	RECTIFIER	
4	— 28710254		1	BRACKET	
5	— 28710352		1	ROTOR	
8	— 28710353		1	STATOR	

NDH02165

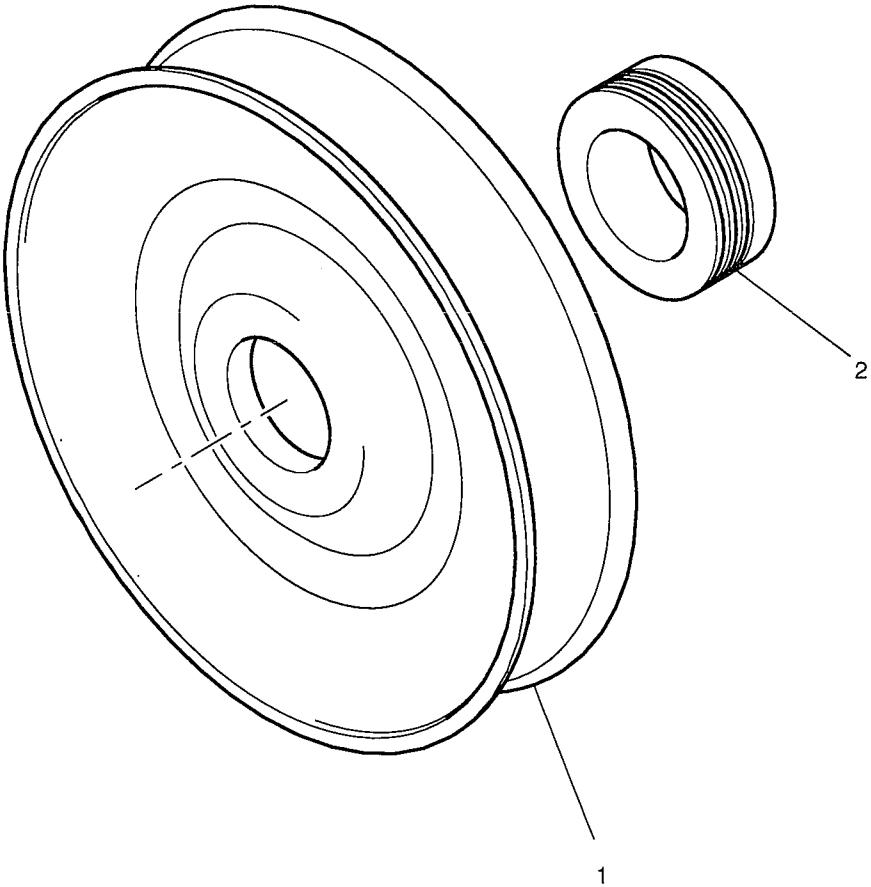


Alternator & Generator**Plate Z****NDH02165**

Item	Part No.	References	Qty.	Description	Notes
1	3113D001		1	1 GROOVE ALTERNATOR PUL-	
2	2871W013		1	SPACER	

→ U953289F

QDH01257

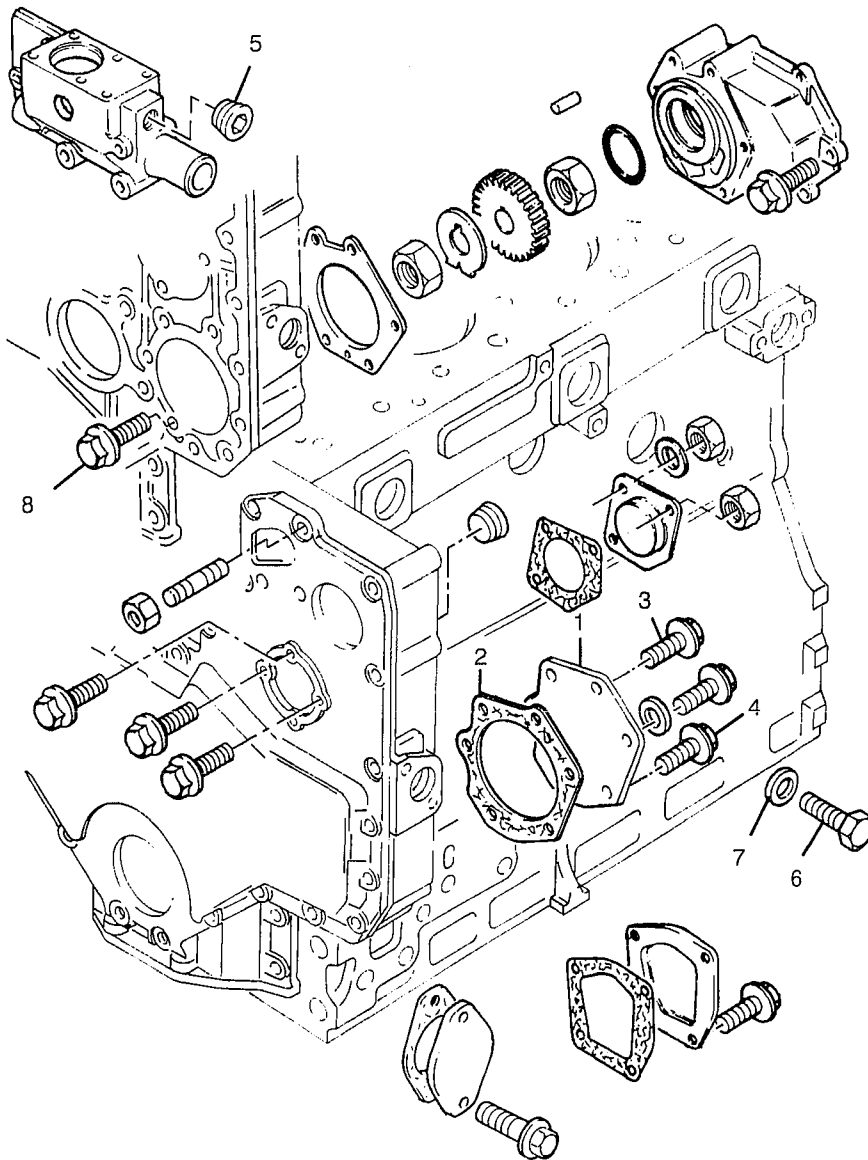


→ U953289F

QDH01257

Item	Part No.	References	Qty.	Description	Notes
1	3753V018		1	PLATE	
2	3687H019	 a.	1	JOINT	
3	2314H032		5	SCREW	
4	2314J002		1	SCREW	
5	2431154		1	PLUG	
6	2314C049		1	SCREW	
7	0920155		1	WASHER	
8	2314J004		1	SCREW	
History					
a.					
2	3687H005		1	JOINT	

→ U953290F

QDH01204

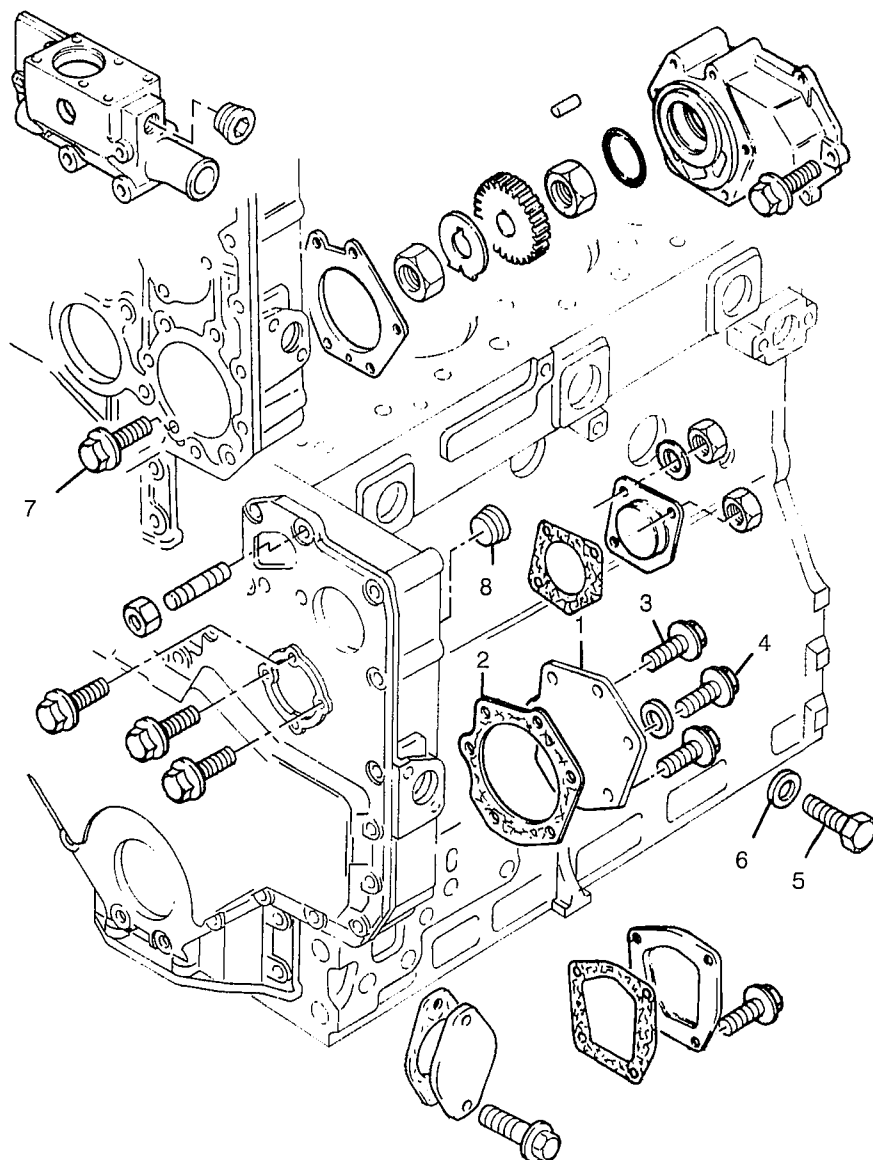


U953290F

QDH01204

Item	Part No.	References	Qty.	Description	Notes
1	3753V018		1	PLATE	
2	3687H019	 a.	1	JOINT	
3	2314H032	 2314H031	5	SCREW	
4	2314J002		1	SCREW	
5	2314C049		1	SCREW	(A)
6	0920155		1	WASHER	
7	2314J004		1	SCREW	(B)
8	2431154		1	PLUG	(C)
History					
a.					
2	3687H005		1	JOINT	
b.					
	2431154		1	PLUG	
Footnotes					
(A)	LOCATES IN COMPRESSOR/EXHAUSTER OIL FEED HOLE				
(B)	FRONT COVER TO TIMING CASE				
(C)	LOCATES IN WATER BY-PASS CONNECTION				


TBH00760

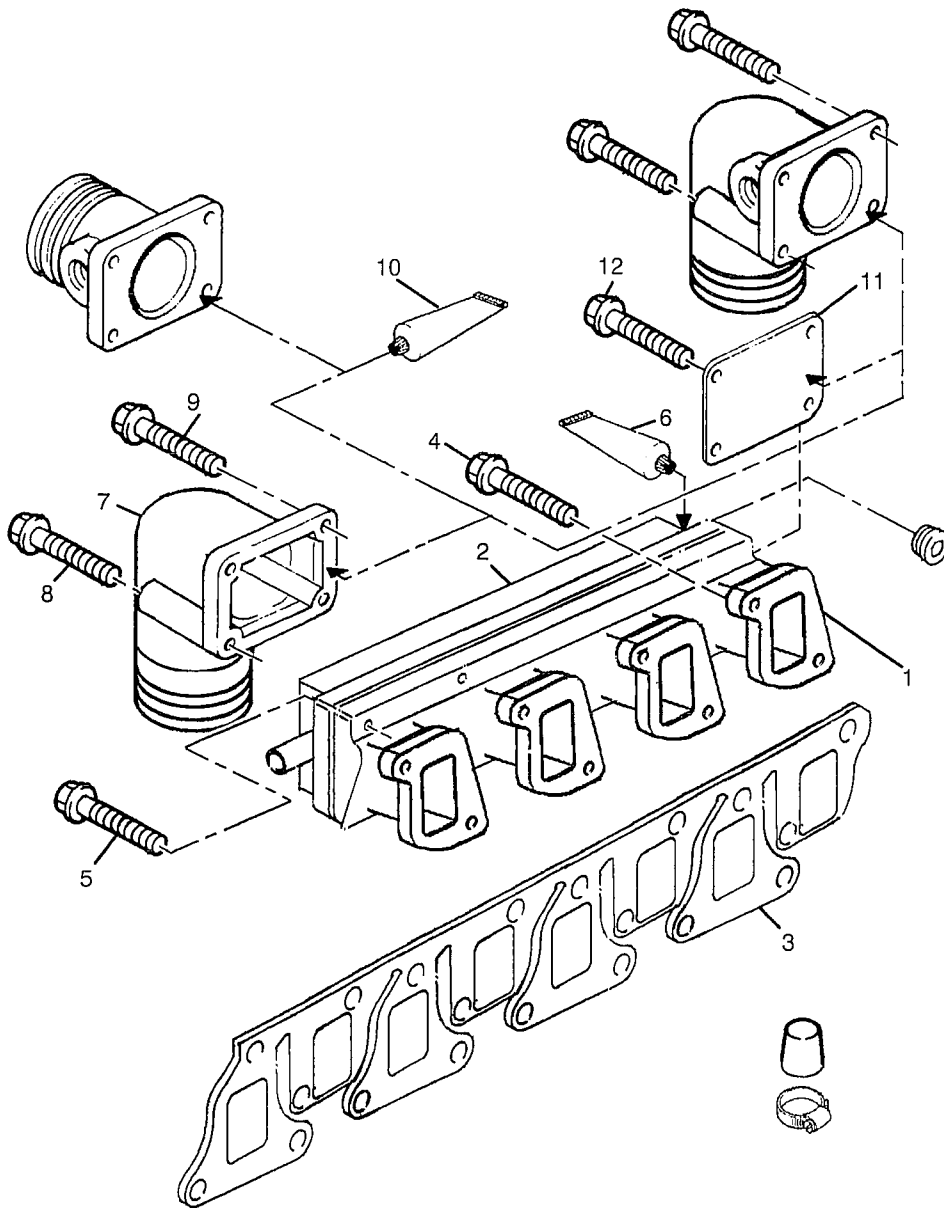

TBH00760

Item	Part No.	References	Qty.	Description	Notes
1	3777R081	●○ U3777R111	1	INDUCTION MANIFOLD	
2	3777R122	 a.	1	INDUCTION MANIFOLD	
3	U3681V012		1	JOINT	
4	2314H607	●○ 2316A317	8	SCREW	
5	2314H003	●○ 2314H005	8	SCREW	
		●○ 2316A117			
6	3681X001		1	SEALING COMPOUND	(A)
7	3766T073		1	ELBOW	
8	2314H004		2	SCREW	
9	2314H017		2	SCREW	
10	3681X002		1	SEALING COMPOUND	(B)
11	3611M009		1	PLATE	
12	2316T050	 b.	4	SCREW	
History					
a.					
2	3777R121	●○ U3777R092	1	INDUCTION MANIFOLD	
	3281A001	→ U170804H	1	CAP	
	21825195	→ U170804H	1	CLIP	
b.					
12	2316T049		4	SCREW METRIC	
c. General History Section					
	3211P002		1	PLUG	(C)
Footnotes					
(A)	INDUCTION MANIFOLD INNER HALF TO OUTER HALF ONLY				
(B)	USED ONLY WITH INDUCTION MANIFOLD AIR INLET ELBOW				
(C)	USED ONLY WITH U3777R092				


TDH00293

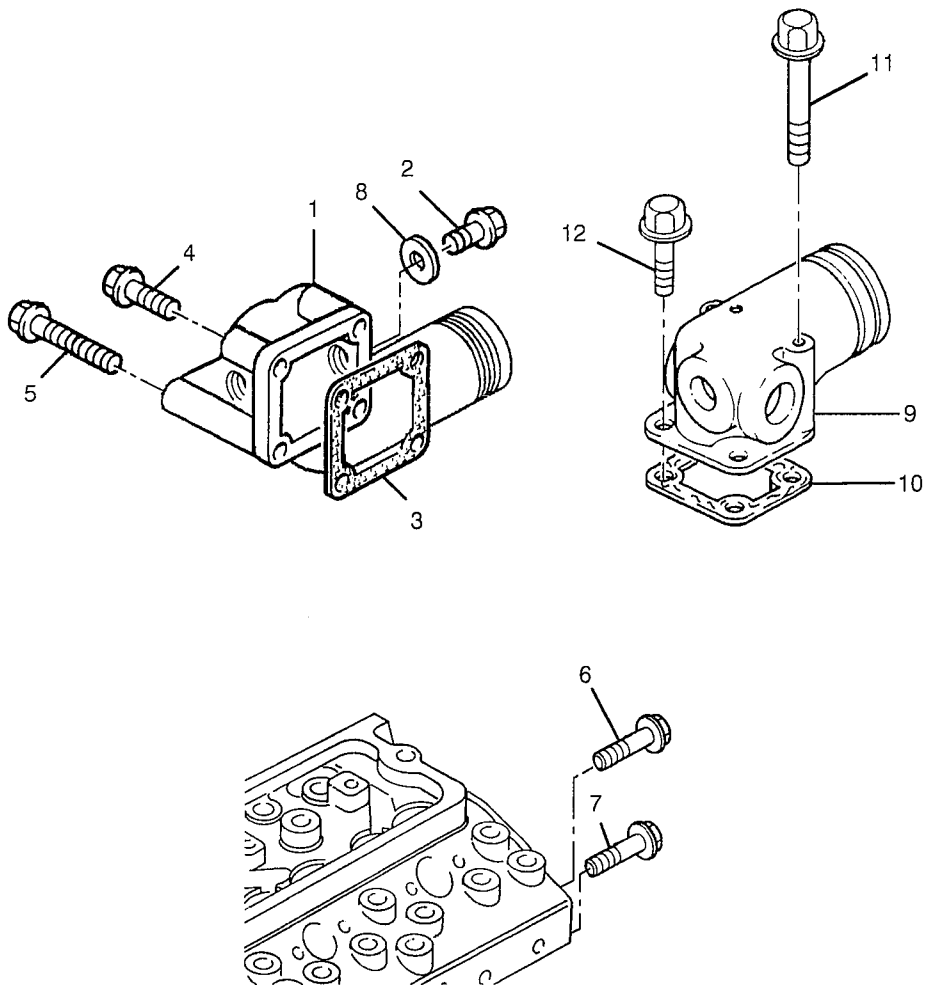

TDH00293

Item	Part No.	References	Qty.	Description	Notes
6	2314H002		3	SCREW	

UBH00455

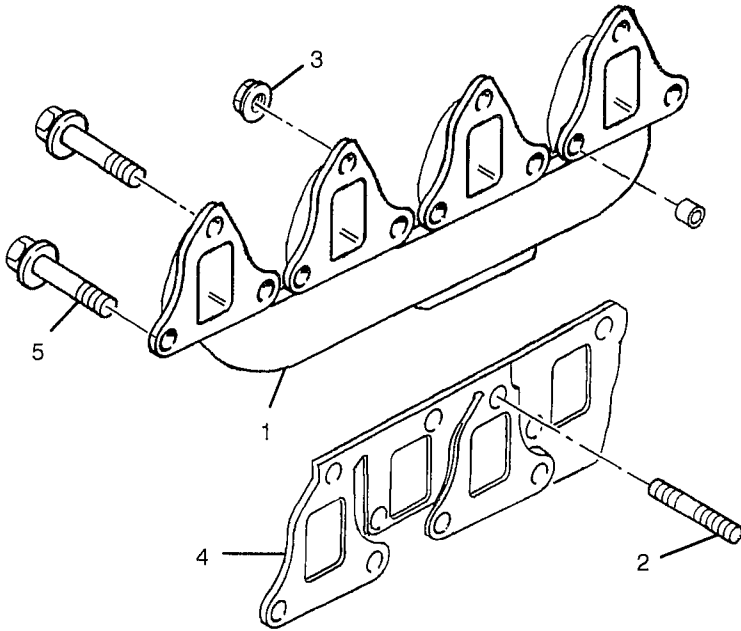

Exhaust Manifold


Plate D

UBH00455

Item	Part No.	References	Qty.	Description	Notes
1	3778E111	 a.	1	EXHAUST MANIFOLD	
2	3218J013	 3211P018	12	SCREW	
History					
a.					
1	U3778E111		1	EXHAUST MANIFOLD	

● UDHA0395

UDH00519

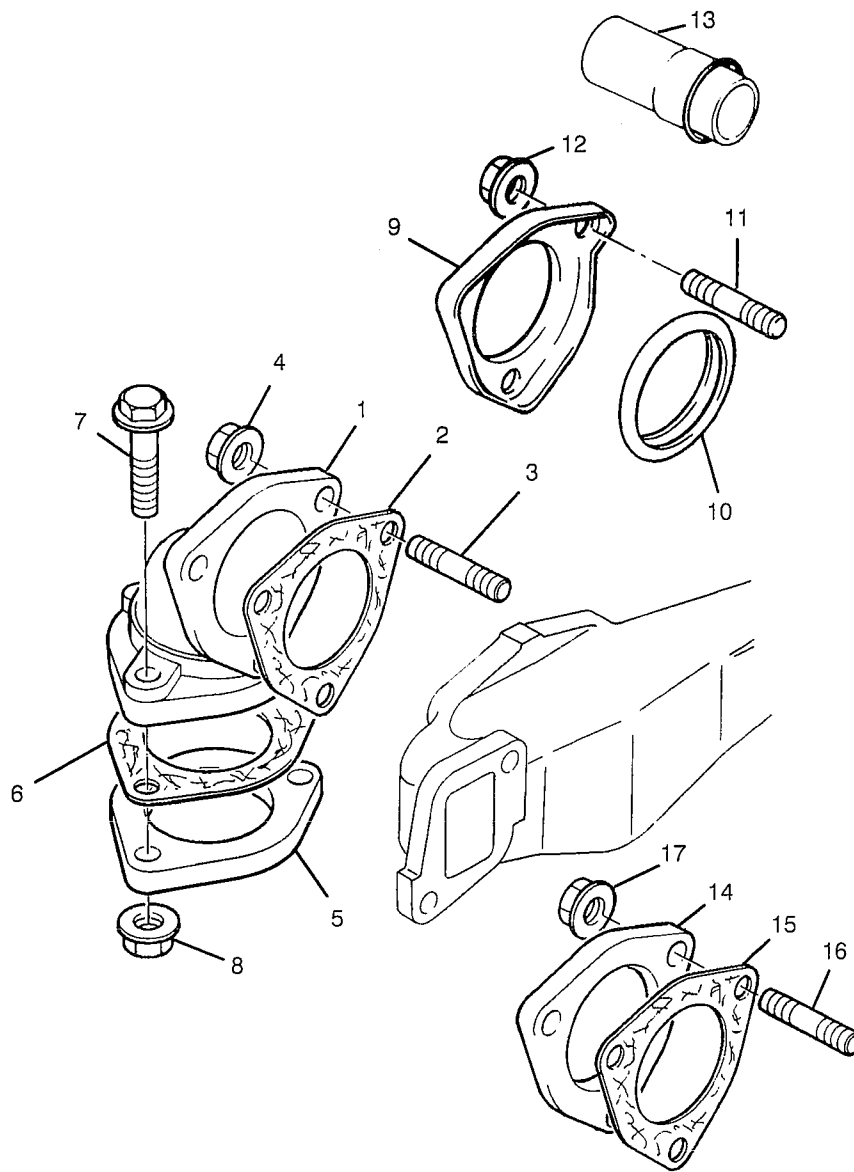


Exhaust Outlet Flange**Plate A**

● UDHA0395

UDH00519

Item	Part No.	References	Qty.	Description	Notes
3	2313C077		3	STUD	
4	2318A634		3	NUT	
5	3623E006		1	FLANGE	
6	3688C018		1	JOINT	


VBH02020

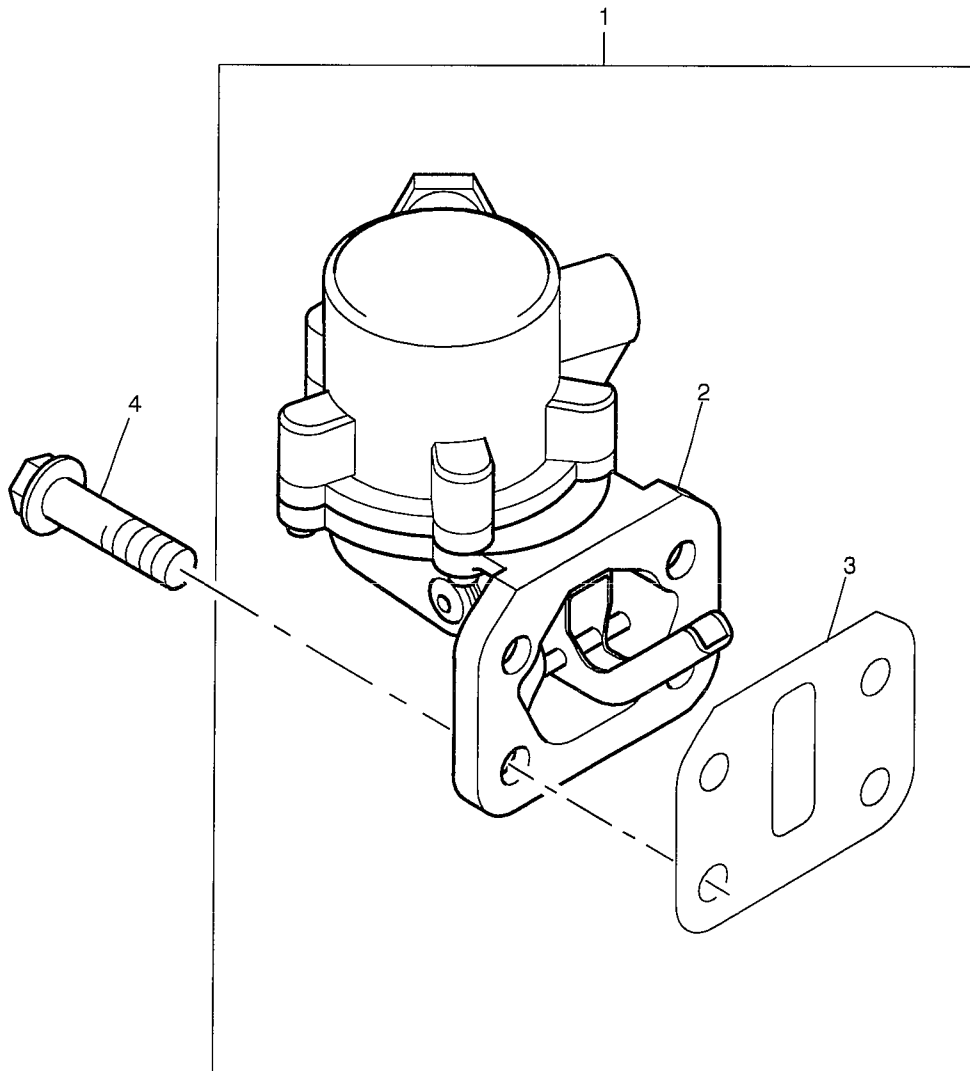

VBH02020

Item	Part No.	References	Qty.	Description	Notes
1	ULPK0034	 a.	1	LIFT PUMP	(A)
2	 36851123	 ULPK0034	1	LIFT PUMP	
3			1	JOINT	
4			4	SCREW	
History					
a.					
1	ULPK0005		1	LIFT PUMP	
	ULPR0001		X	REPAIR KIT	
b. General History Section					
	2314H033		4	SCREW	
	 36851123		1	JOINT	
Footnotes					
(A)	NO SERVICED PARTS				

VBH02020

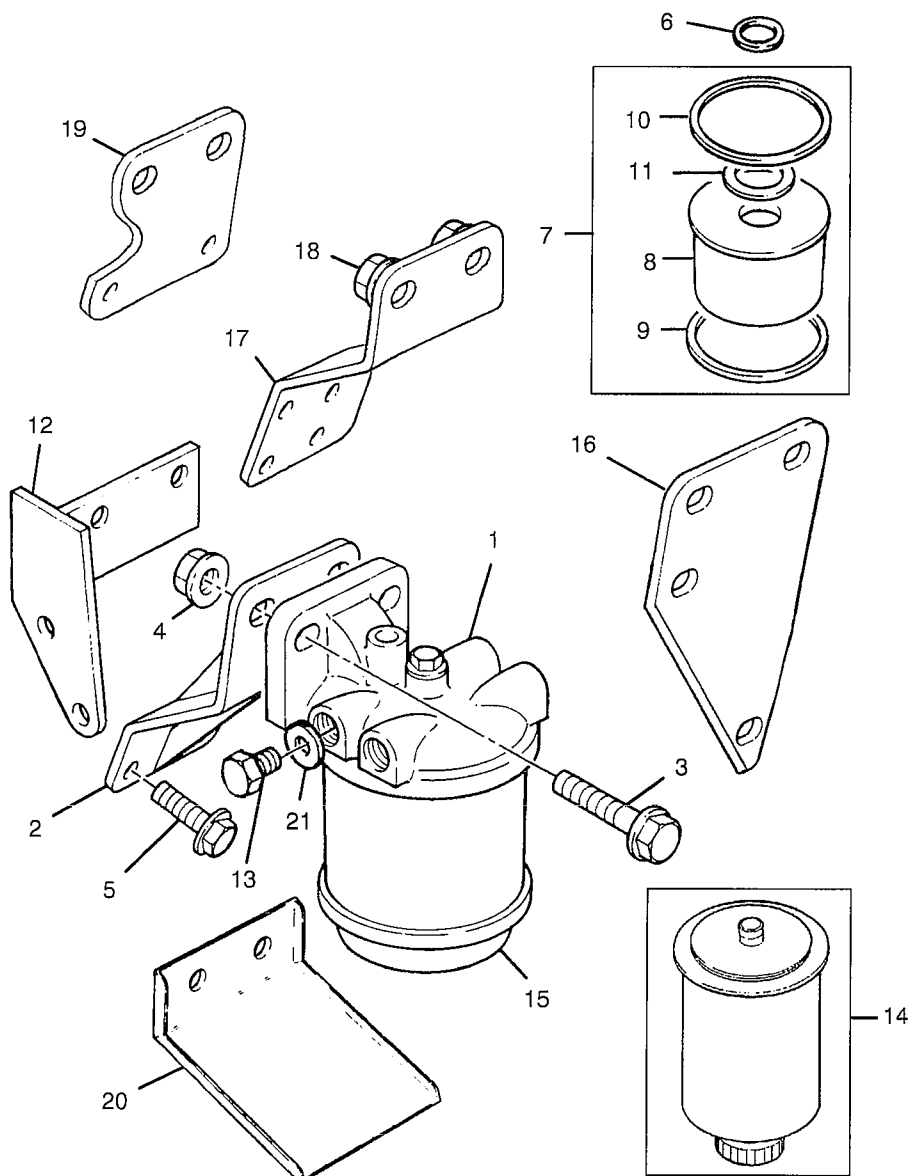


VBH02020

Item	Part No.	References	Qty.	Description	Notes
1	2656613		1	FUEL FILTER	
6	26560016		1	WASHER	
7	26560017	 26561117	X	FILTER ELEMENT KIT	
7	26561117	 26560017	X	FILTER ELEMENT KIT	
8		 REF.7	1	ELEMENT	
9	0490786		1	O RING	
10	0490786		1	O RING	
11	26560014		1	SEAL	
2	3654W011		1	BRACKET	(A)
3	2314J004		2	SCREW	
4	2318A604		2	NUT	
5	2314J002		2	SCREW	
20	38112141		1	TRAY	

Footnotes

(A) ILLUSTRATION SHOWN MAY NOT RESEMBLE ACTUAL PART

VBH02020

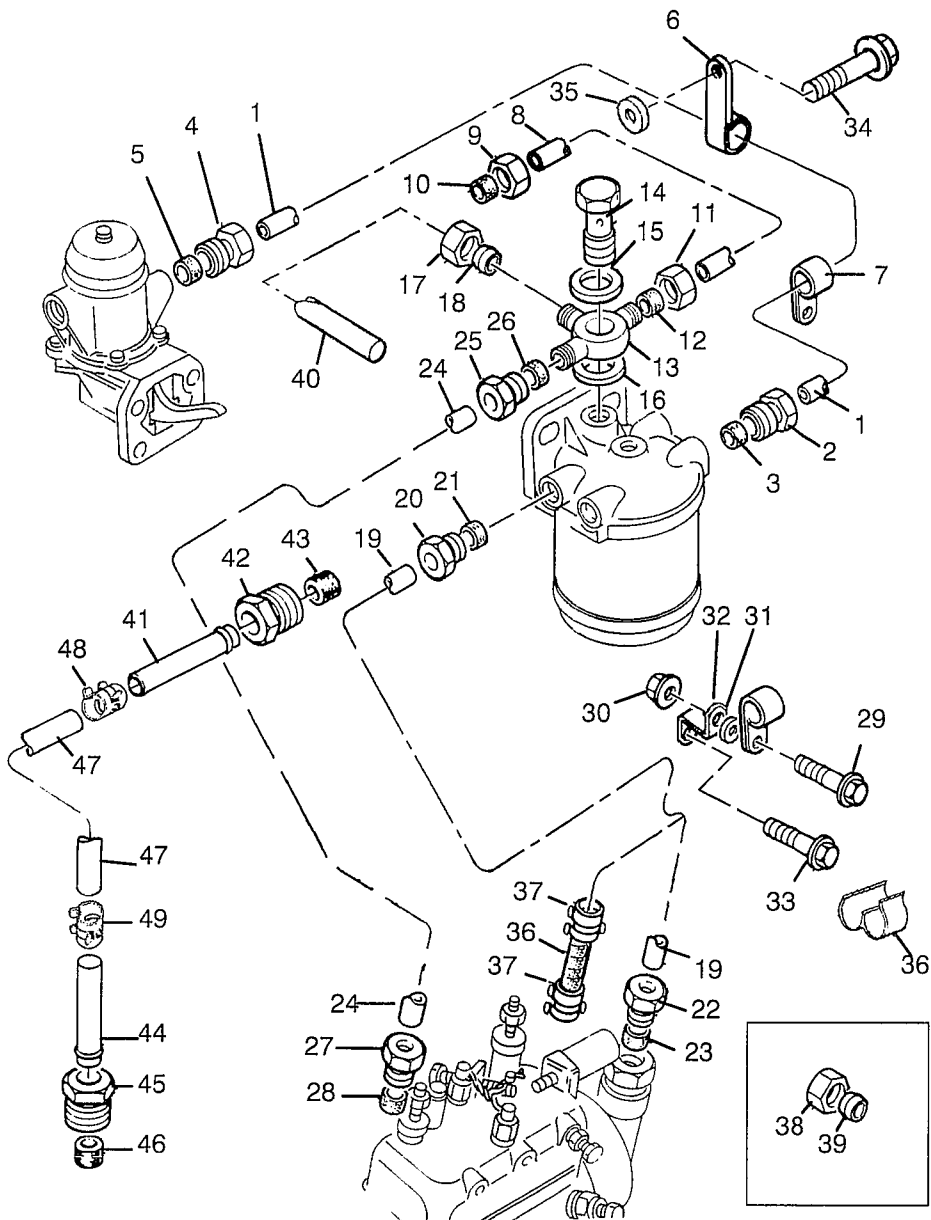


VBH02020

Item	Part No.	References	Qty.	Description	Notes
1	4125A008	●○ 4125T015	1	FUEL PIPE	
2	— 33532129		1	NUT	
3	— 33811114		1	OLIVE	
4	— 33532129		1	NUT	
5	— 33811114		1	OLIVE	
6	— 3656P008		1	CLIP	
7			1	CLIP	(A)
8	3435A012	●○ 3421A009	1	FUEL PIPE	
9	33225412		1	UNION NUT	
10	33811112		1	OLIVE	
11	33225412		1	UNION NUT	
12	33811112		1	OLIVE	
13	3172X004		1	CONNECTION	
14	0095344		1	BOLT	
15	0920146		1	WASHER	
16	0920146		1	WASHER	
17	0576112		1	NUT	
18	0566003		1	OLIVE	
19	4122T009		1	FUEL PIPE	
20	— 33532129		1	NUT	
21	— 33811114		1	OLIVE	
22	— 33532129		1	NUT	
23	— 33811114		1	OLIVE	
24	4122M017		1	FUEL PIPE	
25	— 33532129		1	NUT	
26	— 33811114		1	OLIVE	
27	— 33532129		1	NUT	
28	— 33811114		1	OLIVE	
36	2481D302		1	CLIP	

Footnotes

(A) NOT REQUIRED FOR THIS APPLICATION

WDH00300

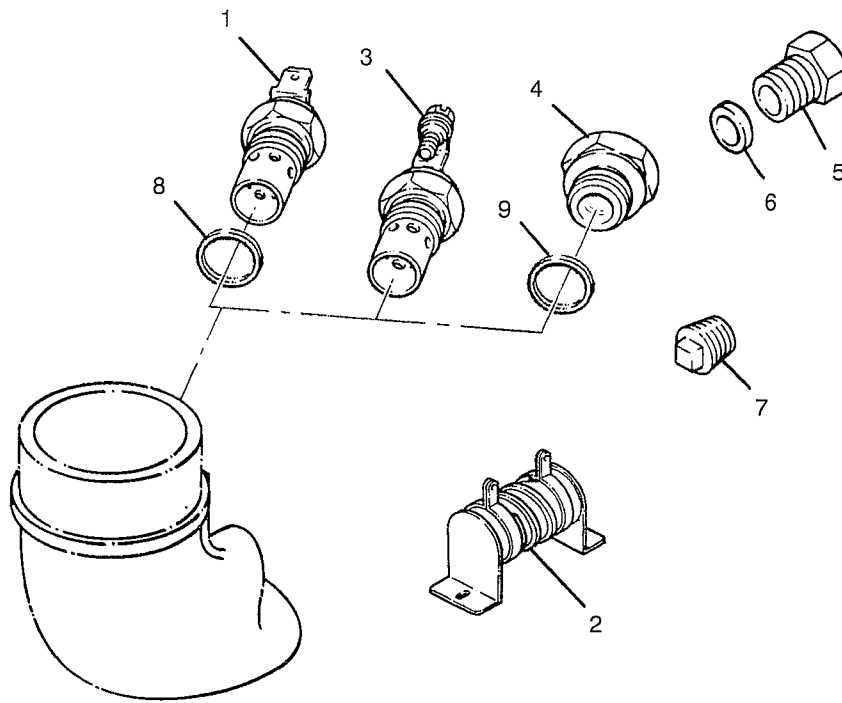


Cold Start System

Plate A

WDH00300

Item	Part No.	References	Qty.	Description	Notes
3	2666A015		1	HEATER	(A)
Footnotes					
(A)	ILLUSTRATION SHOWN MAY NOT RESEMBLE ACTUAL PART				

XBH00430

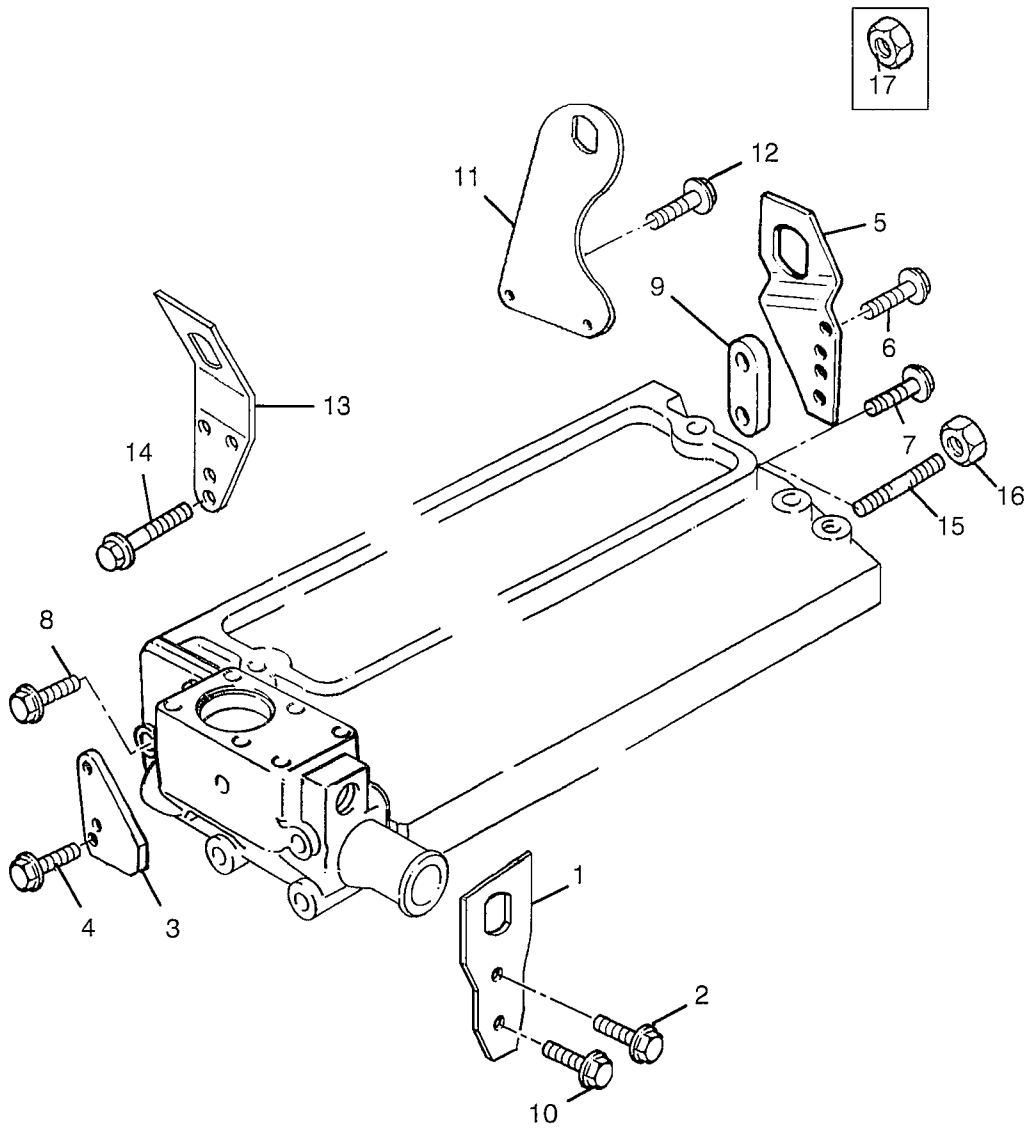


Engine Lifting

Plate B

XBH00430

Item	Part No.	References	Qty.	Description	Notes
1	U3648C008		1	PLATE	
2	2314J003		2	SCREW	
5	3654W007		1	PLATE	
6	2314J003		2	SCREW	

ZCH00879

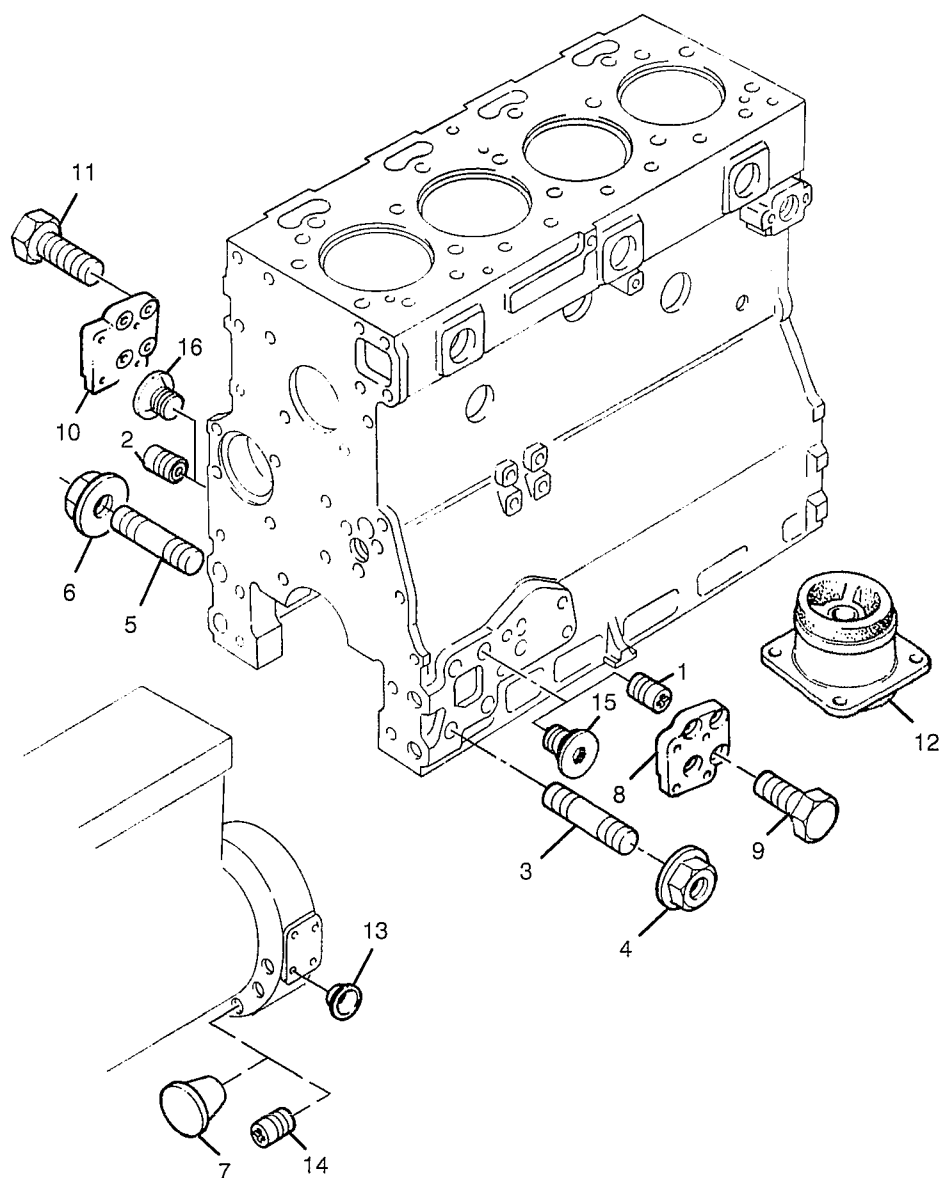


Mountings (Front & Rear)

Plate A

ZCH00879

Item	Part No.	References	Qty.	Description	Notes
3	2313M101		7	STUD	
4	2318A605		7	NUT	
5	2313M101		1	STUD	
6	2318A605		1	NUT	
7	2487208		10	PLUG	(A)
Footnotes					
(A)	LOCATES IN FLYWHEEL HOUSING				


ZEH01682

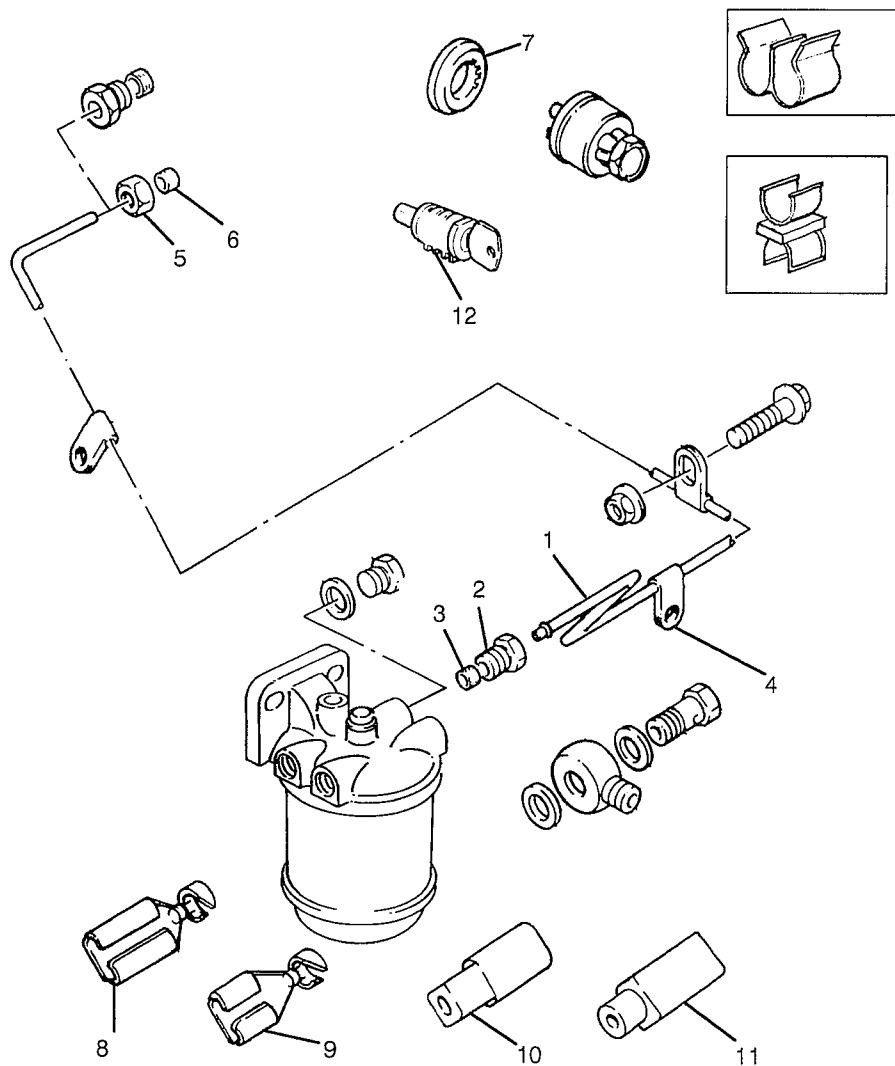

ZEH01682

Item	Part No.	References	Qty.	Description	Notes
1	4124A078		1	FUEL PIPE	
2	└ 33532148		1	NUT	
3	└ 3381A002		1	OLIVE	
4	└ 36568133	 a.	1	CLIP	
5	33225412		1	UNION NUT	
6	33811112		1	OLIVE	
7	31812163		1	PLATE	
8	2815651		1	CONNECTOR	
9	2815512		6	CONNECTOR	
10	35684		1	SLEEVE	
11	35683		6	SLEEVE	
12	2846130		1	SWITCH	
History					
a.					
4	└ 3656X014		1	CLIP	

ZJH00473

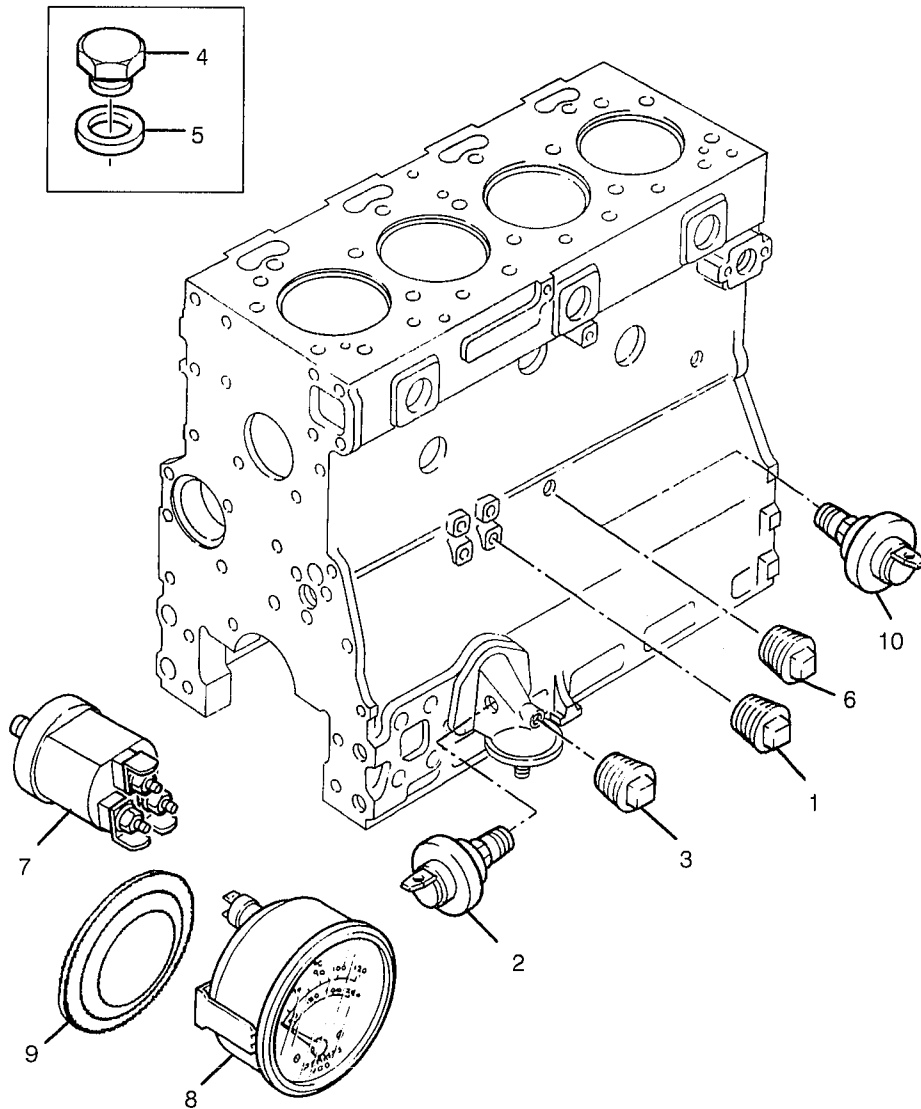


Lub. Oil Pressure Switch & Gauge**Plate A****ZJH00473**

Item	Part No.	References	Qty.	Description	Notes
1	0650594		1	PLUG	
2	2848062		1	SWITCH	(A)
Footnotes					
(A)	LOCATES IN LUBRICATING FILTER HEAD - SIDE HOLE				

→ U953289F

ZLH00271

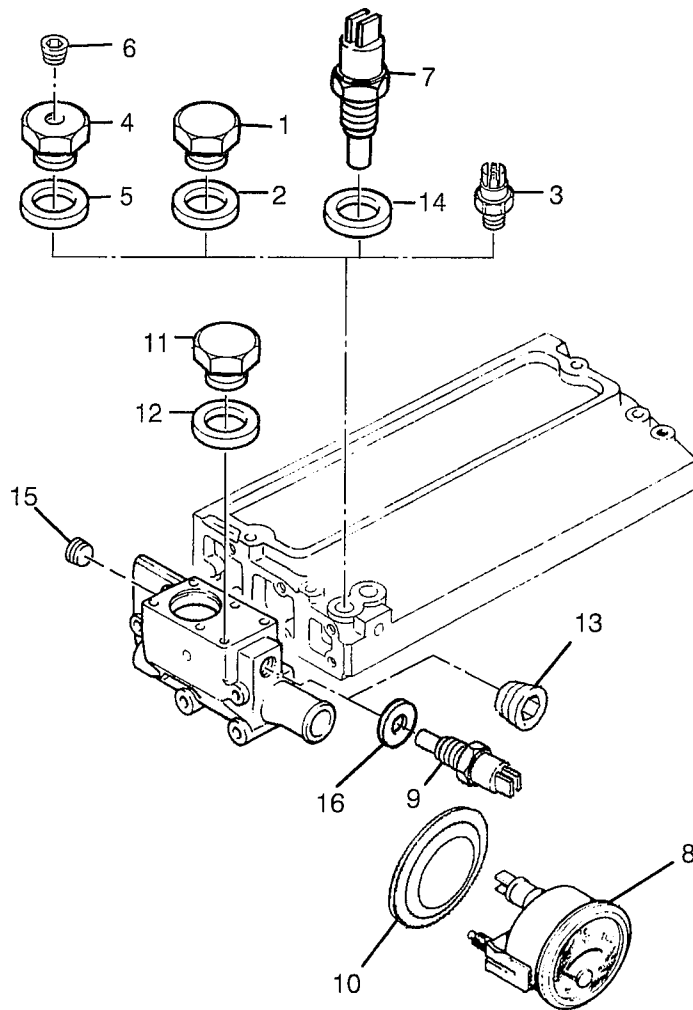

Temperature Gauge & Sender

Plate A


→ U953289F

ZLH00271

Item	Part No.	References	Qty.	Description	Notes
1	0650203		1	PLUG	
2	2411157		1	WASHER	
9	2848A111		1	SENDER	

→ U953290F

ZLH00008

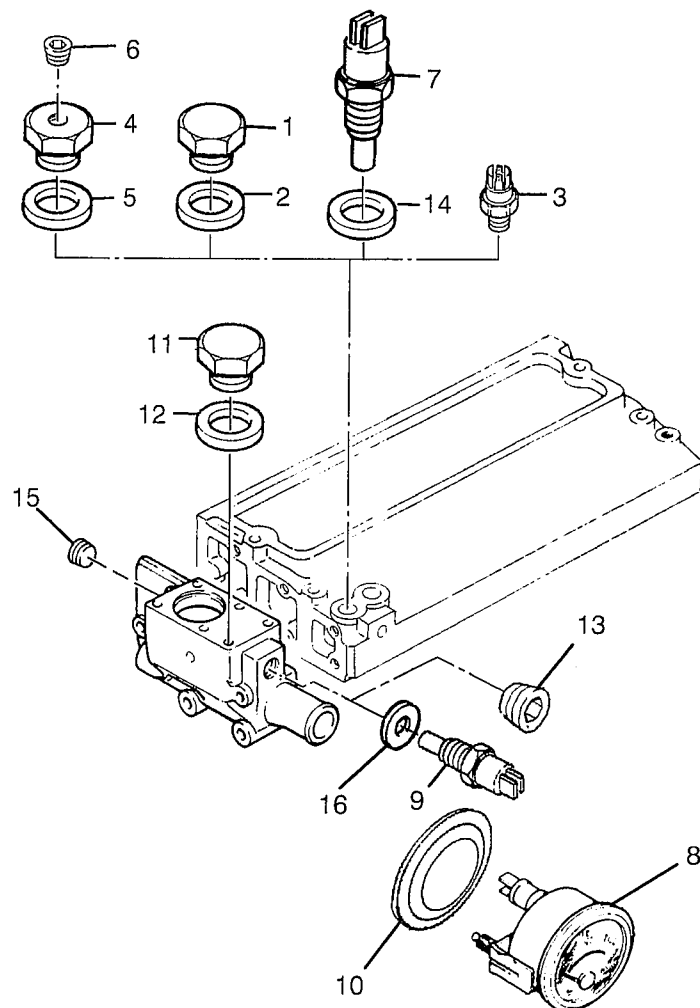


Temperature Gauge & Sender	Plate A
----------------------------	---------

↳ U953290F	ZLH00008
------------	----------

Item	Part No.	References	Qty.	Description	Notes
1	0650203		1	PLUG	
2	2411157		1	WASHER	


ZMH00006

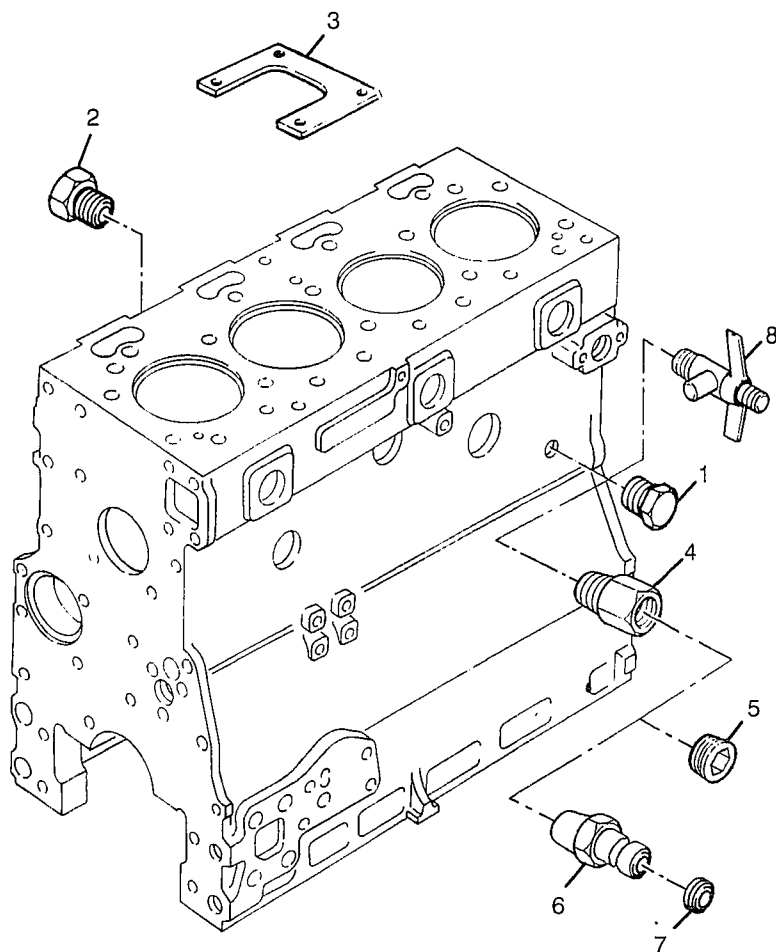

ZMH00006

Item	Part No.	References	Qty.	Description	Notes
1	32161114		1	PLUG	
2	32161114		1	PLUG	


ZVH00102

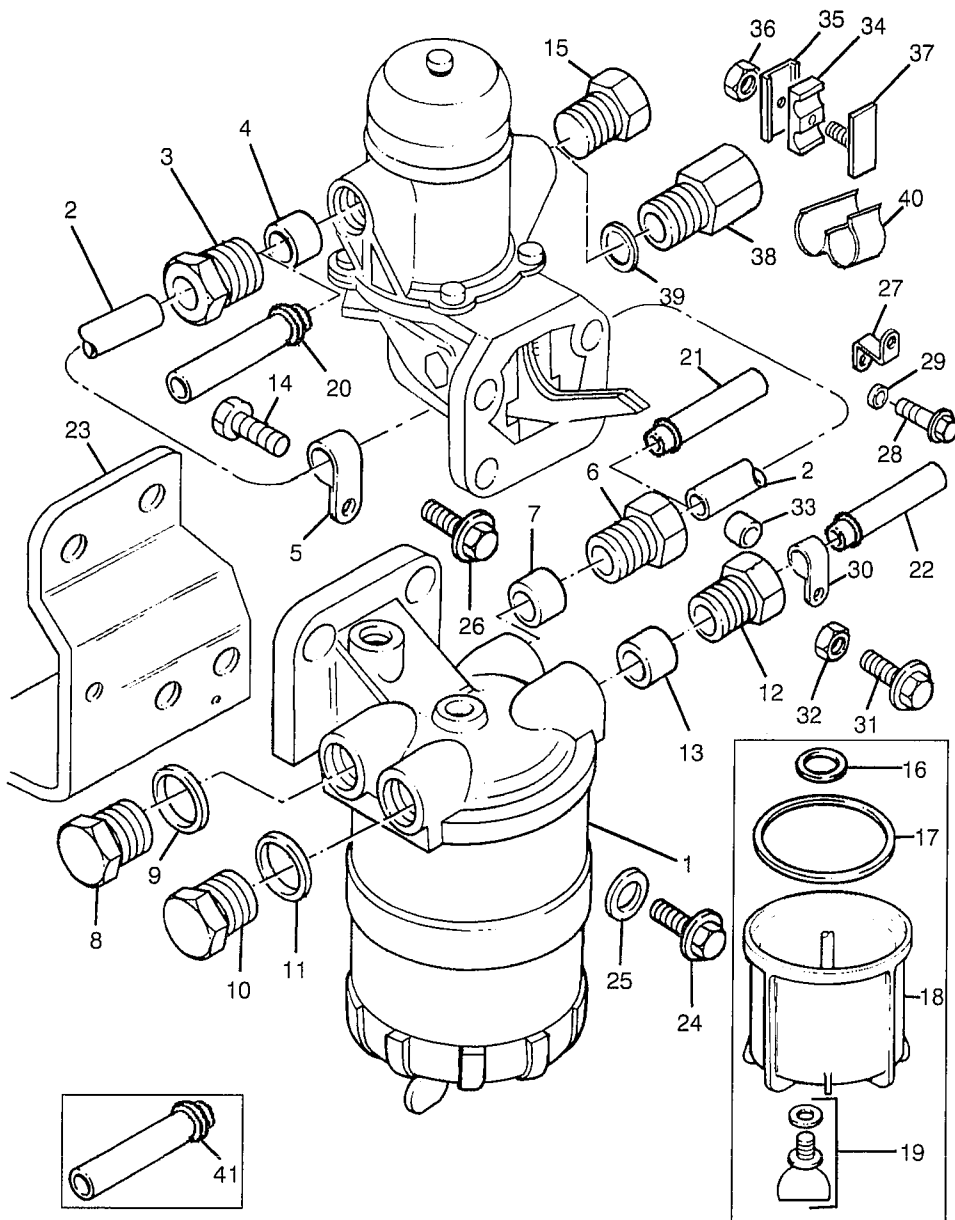

Fuel Pre-Lift Pump
Plate A
ZVH00102

Item	Part No.	References	Qty.	Description	Notes
1	2656086		1	FUEL FILTER	
16	— 26560016		1	WASHER	
17	— 0490786		2	O RING	
18	— 26560075		1	CONTAINER	
19	— 26560614		1	PLUG	
3	33532129	●○ 0571346	1	NUT	
4	0566004		1	OLIVE	
6	33532129	●○ 0571346	1	NUT	
7	0566004		1	OLIVE	
8	0650204		1	PLUG	
9	0920154		1	WASHER	
10	0650204		1	PLUG	
11	0920154		1	WASHER	
12	33532129	●○ 0571346	1	NUT	
13	0566004		1	OLIVE	


ZZH00875

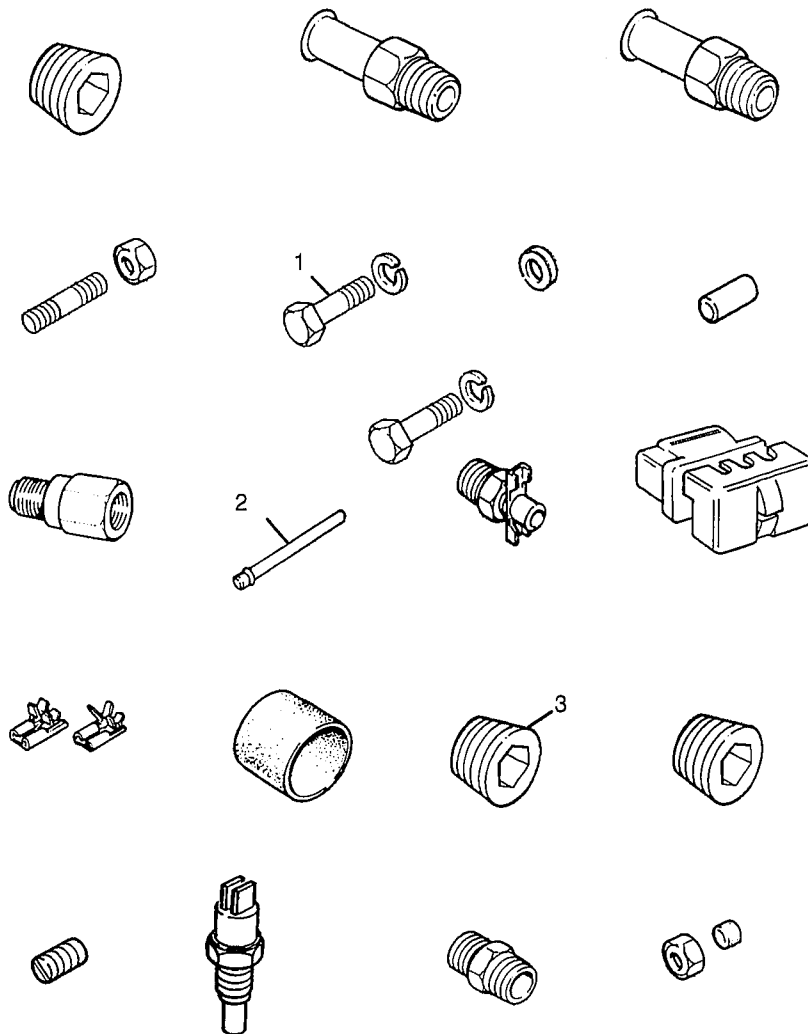

ZZH00875

Item	Part No.	References	Qty.	Description	Notes
1	0096833		1	SCREW	
2	33435146		1	FUEL PIPE	
3	2431154		1	PLUG	
4	35131136		1	FUEL PIPE	
History					
a.	2431154		1	PLUG	

SACA0161

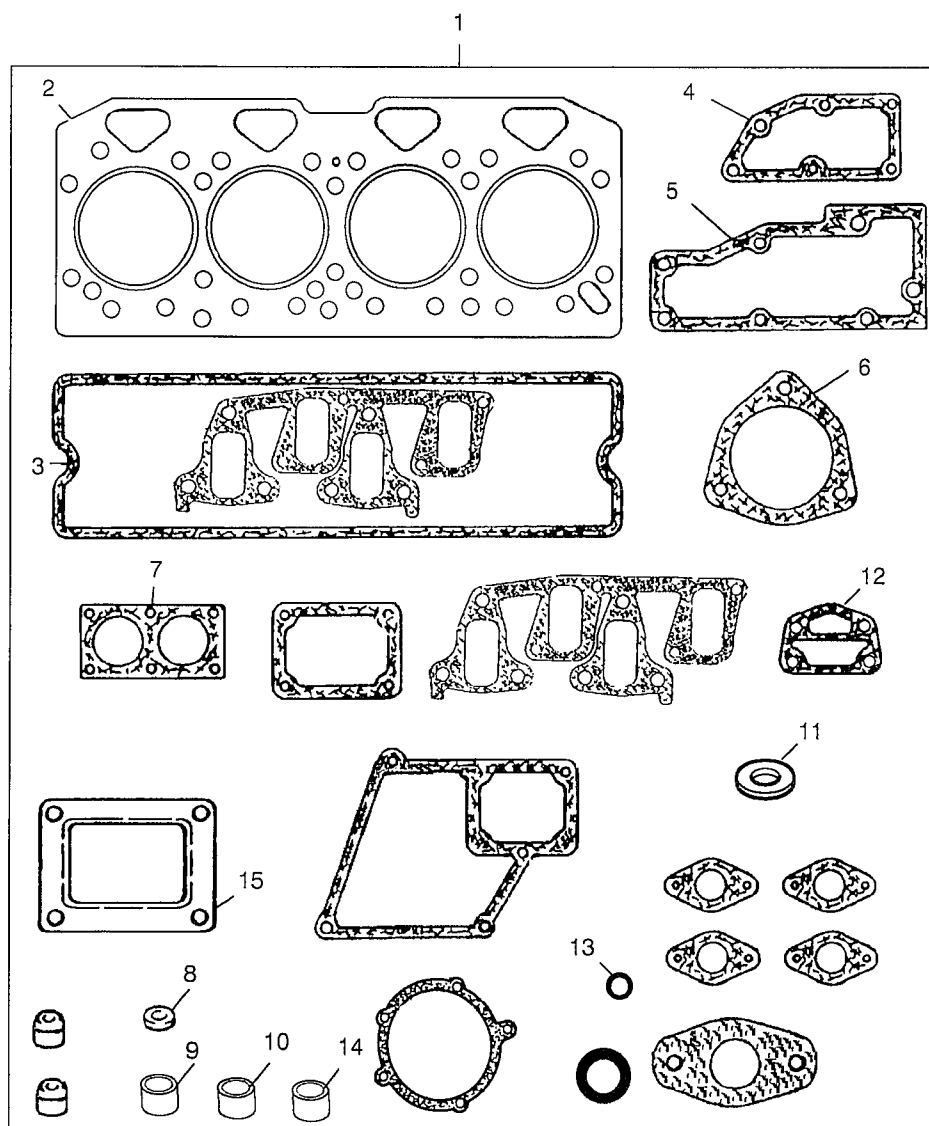

SACA0161

Item	Part No.	References	Qty.	Description	Notes
1	U5LT0317	 a.	1	JOINTS AND GASKET KIT	
2	— 3681E042		1	HEAD GASKET	
3	— 3688X012		1	CYLINDER HEAD JOINT	
4	— 3686D007		1	JOINT	
5	— 3685A013		1	JOINT	
6	— 3688C018		1	JOINT	
7	— 3683R009		1	JOINT	
8	— 2415D051	 a.	8	PLAIN WASHER	
9	— 33811112		1	OLIVE	
10	— 0566003		1	OLIVE	
11	— L311FF02		4	INJECTOR WASHER	
12	— 3684N017		1	JOINT	
13	— 2415A090		1	O RING	
14	— 33811114		6	OLIVE	
15	— 3684N503	 b.	1	JOINT	


History**a.**

1	U5LT0317	1	JOINTS AND GASKET KIT
8	— 3311A001	8	WASHER

b. General History Section

15	— 2415A090	1	O RING
	— 3684N017	1	JOINT
	— 3685N503	1	JOINT
	— U2418M505	4	SEAL
	— U2418M507	4	SEAL
	— U3681V012	1	JOINT

SGBA0327

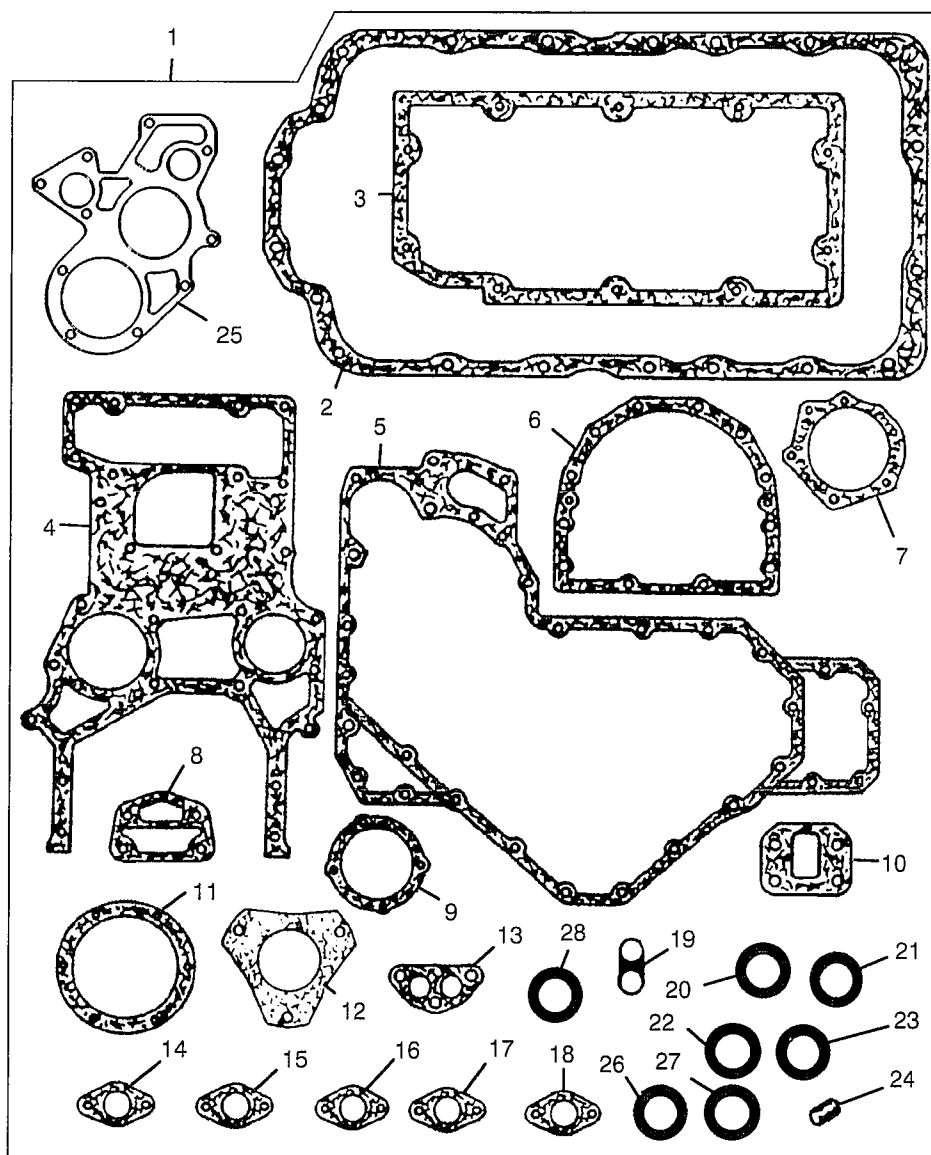

SGBA0327

Item	Part No.	References	Qty.	Description	Notes
1	U5LB0327		1	JOINTS AND GASKET KIT	ASBESTOS FREE
2	— 3681K005		1	SUMP JOINT	
3	— 3685F004		1	JOINT	
4	— 3681P009	S	1	TIMING CASE JOINT	
5	— 3681P038		1	TIMING CASE COVER JOINT	
6	— 3681T012		1	JOINT	
7	— 3687H005		1	JOINT	
8	— 3687W008		2	JOINT	
9	— 3683H006		1	JOINT	
10	— 36851123		1	JOINT	
14	— 36832137		1	JOINT	
15	— 36832144		1	JOINT	
16	— 3686A509		1	JOINT	
20	— 2415715		1	O RING	
21	— 26420318		1	O RING	
22	— 2415B148		1	O RING	
23	— 26420348		1	SEAL	
25	— 3687Y016		1	JOINT	
26	— 2415H031		2	O RING	
27	— 2415B402		4	O RING	

Description	Part No.	Page.	Description	Part No.	Page.
ADAPTOR	3763W011	27		3112E011	15
AIR PIPE	4124C072	29		31134166	21
ALTERNATOR	2871A163	63	BUSH KIT	28730238	41, 41
ALTERNATOR PULLEY	3113H001	61	CABLE	3161C005	31
ATOMISER	U2645A058	31	CAMSHAFT	3141D171	23
ATOMISER LEAK-OFF PIPE	3558X051	31	CAMSHAFT BUSH	31134165	11
BALL	2538753	11	CAMSHAFT GEAR	3117L023	23
BANJO BOLT	3218R005	31	CAP	2648A116	33
BEARING KIT	81558	15		2648A123	31
	U5ME0006	15		2648A124	31
	U5ME0006A	15		3281A001	71
	U5ME0006B	15	CIRCLIP	0170151	21
	U5ME0006C	15		2721130	27
BLOCK	3241N001	53		2721332	15, 15
BOLT	0095344	83		2722A206	27
	32186137	53	CLAMP	3735A011	45
BRACKET	28710254	63	CLIP	0180067	55
	3644Y004	31		21825195	71
	3654W011	81		2481D302	83
	3818X901	21		2646E017	31
	3824A021	45		2646E019	31
	3828D016	61		36568133	91
	U3641V013	61		3656P008	83
				3656X014	91
BRAKE KIT	28730193	41		K138AF02	29
BREATHER PIPE	33872525	49	CONNECTION	3172X004	83
BRIDGE PIECE	3627P023	45		3355V002	31
BRUSH KIT	28730201	41		3775E012	21
BUSH	0050345	23, 23		4133L017	57
	2511437	27	CONNECTOR	2815512	91
	3112A003	21, 21		2815651	91

Parts Index

Description	Part No.	Page.	Description	Part No.	Page.
CON ROD BOLT	32762145	15	EXTENSION	3748W223	59
CONROD KIT	ZZ90188	15	FAN	2485C518	59
	ZZ90189	15	FANBELT	2614B669	43
	ZZ90190	15	FAN DRIVE HOUSING	4113H073	43
	ZZ90191	15	FAN PULLEY	3115C111	43
CON ROD NUT	33221328	15	FILTER ELEMENT KIT	26560017	81
CONTAINER	26560075	101		26561117	81
COTTER	3142W004	19, 19	FLANGE	3623E006	77
COVER	3623H024	55		3748C011	27
	4142A404	23	FLYWHEEL ASSEMBLY	4111D127	37
CRANKSHAFT GEAR	3117C061	17	FLYWHEEL HOUSING	3713K063	35
CRANKSHAFT KIT	ZZ90145	15	FRONT OIL SEAL	2418F436	23
CRANKSHAFT PULLEY	3114V041	53	FUEL FILTER	2656086	101
CYLINDER BLOCK KIT	ZZ50280	11, 13		2656613	81
CYLINDER HEAD COVER	4142X187	49, 49	FUEL INJECTION PIPE	3521H065	31
CYLINDER HEAD JOINT	3688X012	49, 49, 105		3521H066	33
CYLINDER HEAD KIT	ZZ80255	19		3521H067	31
DAMPER	3781N042	23		3521H068	31
DIPSTICK	3178C077	45	FUEL INJECTION PIPE - NO 2 CYL	3521H083	31
DOWEL	0350009	13	FUEL INJECTION PUMP	2644G721	33
	0350025	35		2644G731	33
	2116053	23		2644G741	31
	29990001	19		U2644G721	33
	3244A009	19	FUEL INJECTION PUMP GEAR	3117L212	31
DRIVE	28730267	41	FUEL PIPE	33435146	103
ELBOW	3766T073	71		3435A012	83
EXHAUST MANIFOLD	3778E111	75		35131136	103
	U3778E111	75		4122M017	83
EXHAUST VALVE	3142D061	19		4122T009	83
EXHAUST VALVE SEAT INSERT	3314A102	19		4124A078	91

Description	Part No.	Page.	Description	Part No.	Page.
	4125A008	83		3685A013	105
1 GROOVE ALTERNATOR PULLEY	3113D001	65		3685F004	107
GUIDE	3318A705	19		3685N503	105
HEAD GASKET	3681E042	19, 105		3685R009	55
HEATER	2666A015	85		3686A509	107
HOLDER	2645A311	31		3686D007	55, 105
HOSE CLIP	2481877	49		3686T004	51, 51
HOSE KIT	U5MH0056	55		3686T006	11
HOUSING	3771K251	55		3687H005	67, 69, 107
HUB	33426161	23		3687H019	67, 69
IDLER GEAR	4111A013	23		3687W008	107
	4111A021	27		3687Y016	55, 107
INDUCTION MANIFOLD	3777R081	71		3688C018	77, 105
	3777R121	71		U3681V012	71, 105
	3777R122	71	JOINTS AND GASKET KIT	U5LB0327	107
INJECTOR WASHER	L311FF02	31, 105		U5LT0317	105, 105
INLET VALVE	3142H041	19	LEVER	3615Y006	61
INLET VALVE GUIDE	3313A012	19		4115R007	21
INLET VALVE SEAT INSERT	3314A101	19		4115R008	21
JET	4126X124	13	LIFT PUMP	ULPK0005	79
JOINT	3681T012	107		ULPK0034	79
	3681T018	13	NOZZLE	2645K609	31
	36832118	45	NUT	0576052	21
	36832137	107		0576112	83
	36832144	11, 107		2318A603	31, 31, 45
	3683H006	49, 107		2318A604	39, 81
	3683R009	105		2318A605	21, 89, 89
	3684N017	105, 105		2318A634	77
	3684N503	105		2318D208	59, 61, 61
	36851123	79, 79, 107		2318D802	45

Parts Index

Description	Part No.	Page.	Description	Part No.	Page.
	3274A003	49	OVERSIZE MAIN BEARING	2415H492	57
	3274P003	49		26420318	31, 107
	33532129	83, 83, 83, 83, 83, 83, 101, 101, 101		81558A	15
	33532148	91		81558B	15
	3353D005	45		81558C	15
OIL FILLER CAP	4142X099	49	PISTON COOLING JET	3861A027	11
OIL FILTER	2654403	51	PISTON KIT	U5LP0058	15
OIL FILTER HEAD	3773K004	51		U5LP0058B	15
OIL PIPE	3343F012	27		U5LP0058D	15
	3343M307	27	PISTON RING KIT	U4181A045	15
	3575A018	45		U4181A046	15
OIL PUMP	4132F051	27		U4181A047	15
OLIVE	0566003	83, 105	PLAIN WASHER	2415D051	31, 31, 31, 31, 105
	0566004	101, 101, 101	PLATE	31812163	91
	33811112	29, 83, 83, 91, 105		3241H009	23
	33811113	21		3611M009	71
	33811114	83, 83, 83, 83, 83, 83, 105		36171121	13
	33812116	45		36171131	11
	3381A002	29, 91		3617A001	49
				3623H008	11, 51
				3654W007	87
O RING	0490786	81, 81, 101		3753V018	67, 69
	2415715	45, 107		U3648C008	87
	2415731	49	PLUG	0650203	19, 95, 97
	2415A090	57, 105, 105		0650204	101, 101
	2415B148	107		0650507	21
	2415B402	107		0650588	11, 11, 51
	2415H031	107		0650594	93
	2415H201	27, 27, 27		0650710	11, 11, 19
				0650713	11

Description	Part No.	Page.	Description	Part No.	Page.
	2431154	55, 67, 69, 69, 103, 103		ULPR0001	79
	2431A054	19	RETAINER	3271A003	11
	2485A204	11	RING	3381J008	57
	2487001	13	ROCKER ARM ASSEMBLY	4115R005	21
	2487204	35		4115R006	21
	2487208	89	ROCKER COVER JOINT	3681A047	49
	2487215	35	ROCKER SHAFT	ZZ90172	21
	26560614	101		ZZ90184	21, 21
	3211P002	71	ROTOR	28710352	63
	3212T006	11	SCREW	0096833	103
	32161114	11, 99, 99		0746853	37
	32168212	11		2182110	11
	32186405	45		2233022	21
	32416118	11, 49		2311D039	45
	32416119	11		2314C049	67, 69
	32417134	11		2314F003	23
	32417145	11		2314F016	45
	32418122	11, 11, 19		2314F907	27
	32712723	35		2314H002	31, 45, 45, 61, 73
	3278A003	11		2314H003	13, 23, 31, 45, 49, 71
	3314A103	11		2314H004	23, 27, 45, 57, 61, 71
	3781A503	57		2314H005	23, 27, 61
PLUNGER	32712726	27		2314H006	61
PUSHROD	31434307	21		2314H007	45
REAR OIL SEAL	2418F475	13		2314H008	55, 61
REAR OIL SEAL HOUSING	4142V066	13		2314H012	55
RECTIFIER	28710355	63		2314H013	23, 61
REGULATOR	28710252	63		2314H017	55, 71
RELIEF VALVE	4138A036	27		2314H031	45
REPAIR KIT	28730209	41			

Parts Index

Description	Part No.	Page.	Description	Part No.	Page.
	2314H032	67, 69	SCREW METRIC	2316T049	71
	2314H033	11, 79, 79	SEAL	26420348	107
	2314H034	23, 23, 55		26560014	81
	2314H607	71		33817135	49
	2314J002	31, 67, 69, 81		36843154	35
	2314J003	61, 87, 87		U2418M505	105
	2314J004	67, 69, 81		U2418M507	105
	2314J008	27	SEALING COMPOUND	3681X001	71
	2314J010	23		3681X002	71
	2314J011	27	SEAT	32712111	27
	2314J014	43	SENDER	2755A009	33
	2314J033	11, 51		2848A111	95
	2314J034	51		2848A121	31
	2314J204	35	SHAFT	3271H004	27
	2314J602	61	SHIELD	3781N043	23
	2314J603	35	SHIM	33117426	21
	2314J606	23		3311K015	21
	2314J607	21	SHORT ENGINE	AR39772	9
	2314K159	55	SLEEVE	35683	91
	2314K161	55, 57		35684	91
	2314K166	55	SOLENOID	26420469	31
	2316T050	71	SPACER	0330807	45
	32114145	21		0920460	45
	3212V002	13		0920469	13
	32166221	19		2871W013	65
	32166329	11		33134418	45
	3218J013	75	SPRING	31743108	21
	3218J303	19		31744123	21
	3218J606	19		3174A004	11
	3218J607	19		3174A012	27
				3174L003	27

Description	Part No.	Page.	Description	Part No.	Page.
	3175P003	49	TUBE ASSEMBLY	3577A125	45
STARTERMOTOR	2873B071	39, 41	UNION NUT	33225412	29, 83, 83, 91
STARTER RING GEAR	31162121	37		3353D004	29
STATOR	28710353	63	VALVE	4138A017	11
STUD	2313C077	39, 77	VALVE ASSEMBLY	4138A053	27
	2313H229	59	VALVE CAP	3342N011	19, 19
	2313H331	21	VALVE SPRING	3174P412	19, 19
	2313M101	89, 89	VALVE STEM SEAL	2418M505	19
	3211P004	31		2418M507	19
	3254H007	45	WASHER	0920009	49
SUMP	3717Y002	45		0920146	83, 83
SUMP JOINT	3681K005	45, 107		0920154	101, 101
SUPPORT BRACKET	36241123	49		0920155	67, 69
SWITCH	2846130	91		2131A008	45, 61, 61
	2848062	93		2411157	19, 95, 97
TAPPET	3142U031	21		26560016	81, 101
THERMOSTAT	2485C025	57		33117127	37
THIMBLE	2135A001	15		3311A001	33, 33, 33, 33, 105
	33137409	27, 27		3311K012	21
	33142111	11		3311R003	11
THRUST WASHER	31137312	15		33123125	27
	31137322	15		33153121	23
	31137551	15		33153135	23
	31137561	15		3321A003	23
TIMING CASE	3716C163	23	WATER PUMP KIT	U5MW0178	55
TIMING CASE COVER JOINT	21826405	23	WATER PUMP REPAIR KIT	U7LW0161	55, 55
	3681P038	23, 107	WOODRUFF KEY	0500012	17, 23
TIMING CASE JOINT	3681P009	23, 107			
TIMING COVER	4142A415	23			
TRAY	38112141	81			

