

UNIVERSAL GARAGE DOOR OPENER REMOTE CONTROL



Smart/Learn button or DIP Switches are located on motor unit or external receiver. Refer to owner's manual if necessary.

The products are intended to be used only with garage door openers manufactured after 1993 that utilize photo-eyes safety sensors. These are always located on or near the bottom of the door track. If your garage door does not have the sensors attached and working, the opener is not compliant with current federal safety regulations and should be replaced.

Proceed with instructions according to your type of garage door opener.


WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

PROGRAMMING THE REMOTE CONTROL

- 1 Press and hold the program button the remote control until the LED on the front of the remote control turns on.

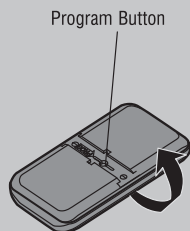


- 2 Press and release the remote control button you wish to use the number of times that corresponds with the garage door opener type:

Opener ID	Brand	Type/Learn Button
01	Linear	MegaCode 318MHz 1997-Current
02	Chamberlain/Liftmaster/Craftsman	Red/Orange button 390MHz 1997-2005
03	Chamberlain/Liftmaster/Craftsman	Purple button 315MHz 2005-Current
04	Chamberlain/Liftmaster/Craftsman	Green button 390MHz 1993-1996
05	Genie Overhead Door	IntelliCode I, 315MHz 1995-Current
06	Genie Overhead Door	IntelliCode I, 390MHz 2005-Current
07	Stanley	Security code 310MHz 1998-Current
08	Chamberlain/Liftmaster/Craftsman	Yellow button 310/315/390MHz 2011-Current
09	Wayne Dalton	Rolling code 372.5MHz 1999-Current



- 3 To exit programming mode, press any remote control button **except** the button that was just programmed.

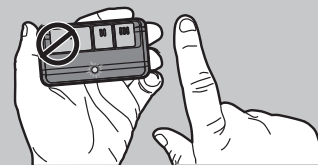


Linear MegaCode Program

- 4 Locate the garage receiver and determine the location of the LEARN button on your opener.
- 5 Push the learn button on the opener. Light will blink.
- 6 Press the remote control button programmed in step 2.
- 7 Light on opener will stop blinking.
- 8 The remote is now programmed.


Remark : if can not program successful please repeat the step1 step2 step 3, then program to receiver or opener again.

Liftmaster /Chamberlain /Merik Program

- 4 Press and release the Learn button on the garage door opener.
- 5 Press the remote control button programmed in step 2 until the garage door opener lights flash or two clicks are heard.
- 6 To test, press the programmed button on the remote control...

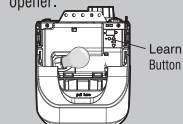

The Learn LED will light. Within 30 seconds...

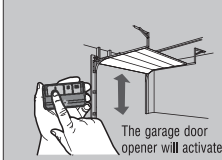

Stanley Program

- 4 Press and release the Remote "R" button located on the rear of the power unit. The red LED indicator above the Remote "R" button and lights on the power unit will come on, indicating the power unit is now in the LEARN mode. See Figure 1.
- Note:** Some power units have a "LEARN" button instead of a Remote "R" button.
- 5 While standing near the back of the power unit, press the button on the remote programmed in step 2 to operate the garage door. The lights on the power unit will blink two times then turn off. See Figure 2.
- 6 Press this SAME button on the remote again. This will activate the door opener.

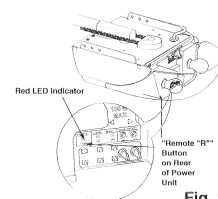


Fig. 1

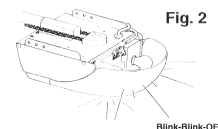



Fig. 2

Wayne Dalton Program

- 4 Place the emergency disconnect handle in the manual door operated position. This is for safety reasons.
- 5 Press program button on DoorMaster™ light fixture, idrive™, Quantum™ or Classic drive™ powerhead. LED will light or idrive™ powerhead will beep once indicating that it is ready to learn a remote.
- 6 Within 30 seconds, press and hold the remote control button programmed in step 2; LED will turn off or idrive™ powerhead will beep once. On the DoorMaster™ only, release the remote button and press again. LED will light briefly then turn off.
- 7 Return the emergency disconnect handle to motor operated position.
- 8 Press same remote button(s) again; door should operate.


Remote is now programmed to operator.

NOTE: idrive™ model only: The first transmitter command after programming will only open the door through a six inch up/down cycle. Normal door operation will then occur on all subsequent transmitter commands.

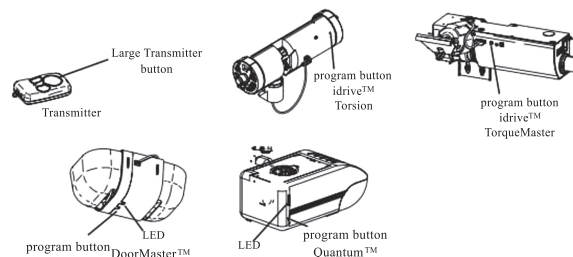

Genie IntelliCode I Program


- 4 Putting Opener into Programming Mode New Genie® Openers

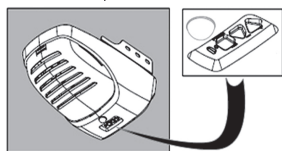


- 1.Pess and hold the program button until the round LED turns blue, then release.



- 2.The round LED will go out and the long LED will begin flashing purple.

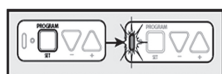

Genie® Openers and External Receivers Manufactured between 1995 to 2011

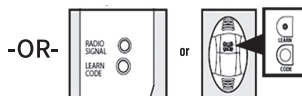


- 5 Programming a Remote to your Opener

NOTE: Once in programming mode, you will have approximately 30 seconds to perform this step.

- 1.Slowly press and release the remote button programmed in step 2.The opener LEDs will flash and go off, indicating you have successfully programmed your remote.



2. Press and relase the same button a third time and door will open or close. It is possible to press the remote button too quickly or lightly. If the LEDs do not go OFF, press the remote button several more times to achieve confirmation.

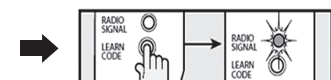

- 1.Pess & Release Learn Code button once. The red LED will begin to flash.