

Programming Introduction

Checking the code of the remote control

Brand Name	Frequency	Indicator Light	Garage Door Opener Type
For Genie® Intellicode I	Rolling code 315/390Mhz	RED LED Keep on	New/Old Genie® openers
For Genie® Intellicode II	Rolling code 315/390Mhz	GREEN LED Keep on	New Genie® Openers

Press the remote control button and see the LED color to fix whether it is the right code you need. The RED LED keep on is for Genie Intellicode I, the GREEN LED keep on is for Genie Intellicode II. If it is not the right code you need then change the code.


How to change the code:

**Press and hold the remote control Button I about 10 seconds until RED LED and GREEN LED keep on, then release. (Button II and Button III are the same as this step.)*


**Press the same button 2 times again, RED LED will flash and go off, indicating you have successfully changing the code*

1 Putting Opener into Programming Mode


New Genie® Openers

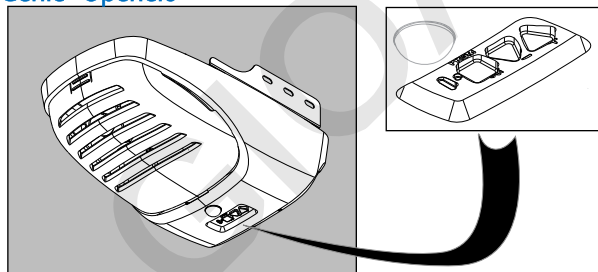

1. Press and hold the program button until the round LED turns blue, then release.

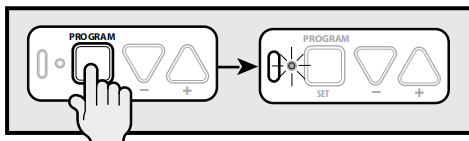


2. The round LED will go out and the long LED will begin flashing purple.

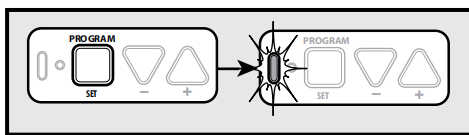

Proceed to step 2.

-OR-

Genie® Openers and External Receivers Manufactured between 1995 to 2011

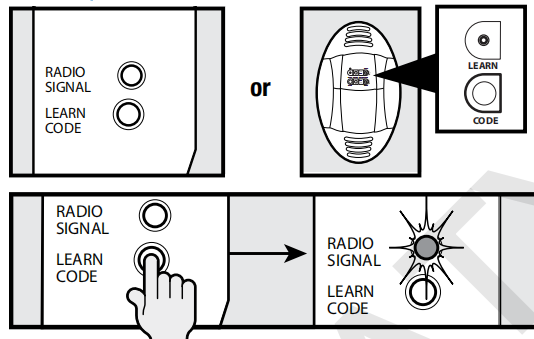


1. Press & Release Learn Code button once. The red LED will begin to flash.

Proceed to step 2.


2 Programming a Remote to your Opener

NOTE: Once in programming mode, you will have approximately **30 seconds** to perform this step.

Note: While programing remote buttons, stand at **least 5 feet away from the opener**. This ensures you have proper communication between the remote and the opener.



1. Slowly press and release the remote button of your choice **two times**. The opener LEDs will flash and go off, indicating you have successfully programmed your remote.




2. Press and release the same button a third time and door will open or close. It is possible to press the remote button too quickly or lightly. If the LEDs do not go OFF, press the remote button several more times to achieve confirmation.


3 Lost or Stolen Remote/Erasing all Remotes

New Genie® Openers

1. Press and hold the program button until the round LED turns blue, then release.

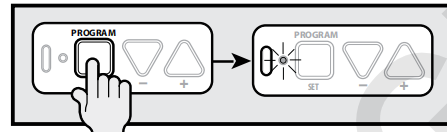

2. Press and hold the Up(+) Down (-) buttons at the same time, until the both LEDs flash blue and go OFF.

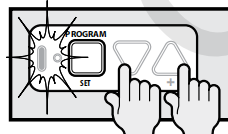

Genie® Openers and External Receivers Manufactured between **1995 to 2011**


- To erase all remote devices from all other types of Genie® openers, Press and hold the Learn Code Button until the LED stops blinking.

Start at step 1 to reprogram your remotes.

NOTE: Clearing remote control memory from the power head will clear ALL programmed remotes and keypads. Your opener will no longer recognize any signal from any remote device, including a missing remote device.

4 Battery Replacement

- Turn Transmitter upside down
- Gently push straight IN on Tab as shown - use ball point pen or small screwdriver.
- battery cover snaps open.
- Install new battery in same position, (12V 27A)
- Press on battery cover until it snaps closed.

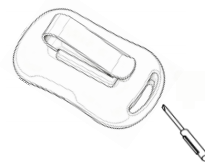

5 Troubleshooting

Solution1: Maybe the memory of opener is full, please clear thememory of opener.

Solution2: If one remote control is programmed successfully and the other fails, try clearing the memory and programming again.

Solution3: Your garage door must be closed before you start to program remote, otherwise programming maybe failed.

Solution4:When programming, Please keep remote about **least 5 feet** away from garage door opener then start to sync remote with garage door opener.



least 5 feet

