

Lifetime Tester

Report Analysis User Manual

Document ID: 23-10-051-VTF-CBAIC-UM

Rev.: 1.0

Captronics Systems Pvt Ltd

	Name	Signature	Date
Prepared By	Ananth A		
Reviewed By	Prabhakaran T J		
Approval By	Midhunseelan O S		

Customer

	Name	Signature	Date
Reviewed By	Abhay Kumar		01 April 2025
Approved By			

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 1

Document ID	23-10-051-VTF-CBAIC-UM
Document Name:	Report Analysis User Manual
Document No.:	R/PP-03/25
Project/Product Name:	Lifetime Tester
Project/Product Code:	23-10-051-VTF-CBAIC
Revision Status:	1.0

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 2

Change Summary

Release No.	Date	Changed By	Change Description
Version 1.0	04-01-2025	Ananth A	Initial Version



Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 03-02-2025
Type of document: User Manual		Page 3

Table of Contents

Change Summary.....	2
Table of Contents	3
List of Figures.....	5
1 Introduction.....	6
2 Scope	6
3 Tools Overview.....	6
4 Software Details.....	7
4.1 How to Launch LTT Application	7
4.2 User Interface Flow	7
4.3 Main Screen	8
5 Test Log Import and Export Details.....	9
5.1 Test Log Import/ Export Screen Detail.....	9
5.2 Procedure to Import the Test Log	10
5.2.1 Browse Test Log file	11
5.2.2 Start Importing.....	12
5.2.3 Import in Progress.....	13
5.2.4 Import Successful.....	14
5.2.5 Import Status Update	15
5.3 Procedure to Export theTest Log	16
5.3.1 Browse for Folder Selection.....	17
5.3.2 Export Test log and Status	18
5.3.3 Export Successfully Completed Message.....	19
6 Test Log Selection.....	20
Select 'Test Log' as the option, because only then will the 'Other Data Analysis' button be enabled. This allows you to view and simulate post-analysis, enabling access to the data view.....Error! Bookmark not defined.	
6.1 Selected the Test Log Name.....	20
7 Test Information	21
7.1 Test Info View:.....	21

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 4

8	<i>Errors Log</i>	22
8.1	Analyzing Error Log	22
8.2	Test Socket wise Errors	23
8.2	Signal Selected and View Data	24
8.3	Procedure for Error Log – Selected the Test Mode Filter based Data View..Error! Bookmark not defined.	
8.4	Selected the Cycle Number based Filter	25
8.5	View the FE and FF Frames for any Error	26
9	<i>FE and FF frames</i>	27
9.1	FE and FF Frame Data Window	27
9.2	Apply the Data Filter	28
9.3	Apply the Time Based Filter	29
9.4	View Selected the Frame	30
9.5	FE and FF Frame- Mode Filter	31
9.6	Export the Selected Data	32
10	<i>Plot Signals</i>	33
10.1	Procedure for Plot Signals:	33
10.2	Procedure for Validation of the Signals:	34
11	<i>Export Data</i>	35
11.1	Export the Data Window	35
11.2	Select the Table	36
11.3	Export the Data	37

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 03-02-2025
Type of document: User Manual		Page 5

List of Figures

Figure 1: Lifetime Tester Data Analyser Splash Screen	7
Figure 2: User Interface Flow.....	7
Figure 3: Main Screen.....	8
Figure 4: Import and Export Screen.....	9
Figure 5: Import Database File.....	10
Figure 6: Import Data Selection.....	11
Figure 7: Import Data File Displayed.....	12
Figure 8: Import Data Inprograss.....	13
Figure 9: Import File Successful	14
Figure 10: Import Status Show for successfully Completed.....	15
Figure 11: Export the Database File.....	16
Figure 12: Export Database File Folder Selection	17
Figure 13: Export of the Selected Database File Displayed.	18
Figure 14: Export the Database file Successfully Completed.	19
Figure 15: Test Log Selected	21
Figure 16: Test Information View.....	21
Figure 17: Procedure for Error Log	22
Figure 18: Error Log – Test Socket and Signal Listed.....	23
Figure 19: Error Log Selected Signal and View Data	24
Figure 20: Error Log Selected Mode and Data View.....	Error! Bookmark not defined.
Figure 21: Error Log – Selected Cycle and Data View.....	25
Figure 22: Error Log – Display FE and FF frames.....	26
Figure 23: FE and FF Frames	27
Figure 24: FE and FF Frames All Data Filter.....	28
Figure 25: FE and FF Frame Date and Time Filter	29
Figure 26: FE and FF Frame Selection Filter	30
Figure 27: FE and FF Frame and Test mode Filters.....	31
Figure 28: FE and FF Frame Export Data	32
Figure 29: Procedure for Plot Signals	33
Figure 30: Plot Signals - Validation.....	34
Figure 31: Procedure the Export Data.....	35
Figure 32: Export Data – Selected Table and Show Data.	36
Figure 33: Export Data as File Format	37

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 6

1 Introduction

The purpose of this document is to outline the user instructions for the Test Result Log, referred to as the “Report Analysis Tool for Lifetime Tester,” which is developed for analysis, verification, and validation purposes.

The core of the system is built on LabVIEW and SQL-based data acquisition within the Console Module. The console panel includes features such as Test Log Import and Export, Test Information, Error Log, FE FF Frame, Signal Plotting, and Export. It also supports report analysis, validation, and verification of the test systems.

2 Scope

The scope of this document is limited to describing the tool functionality of the Product Lifetime Tester Data analysis tool.

The system is designed to offer the following features to the user.

1. Executing the developed LabVIEW Environment
2. Generating reports for storage and management of SQL data.

3 Tools Overview

The report analysis tool is designed to review test logs recorded during the design or process validation (DV/PV) of a product in a lifetime tester (LTT). This tool provides an overview of the test, including test information, errors logged during the test, and graphical data visualizations. Additionally, it allows users to export data in Excel or CSV formats.

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 7

4 Software Details

4.1 How to Launch LTT Application

- Run the Data Analysis.exe application as an administrator; it's located as a shortcut on the PC desktop. Splash screen figure 1 appears in the desktop for few seconds.
- Application Locate in the "C:\Program Files\NI LTT\Data Analyzer Exe\Data Analysis.exe"



Figure 1: Lifetime Tester Data Analyser Splash Screen

4.2 User Interface Flow

The main screen of the Lifetime Tester provides the Report Analysis tool, allowing the user to access various software features of the system, such as data export and import, test information, error log, FE FF frame, signal plotting, and export. The software user interface flow is depicted in the schematic.

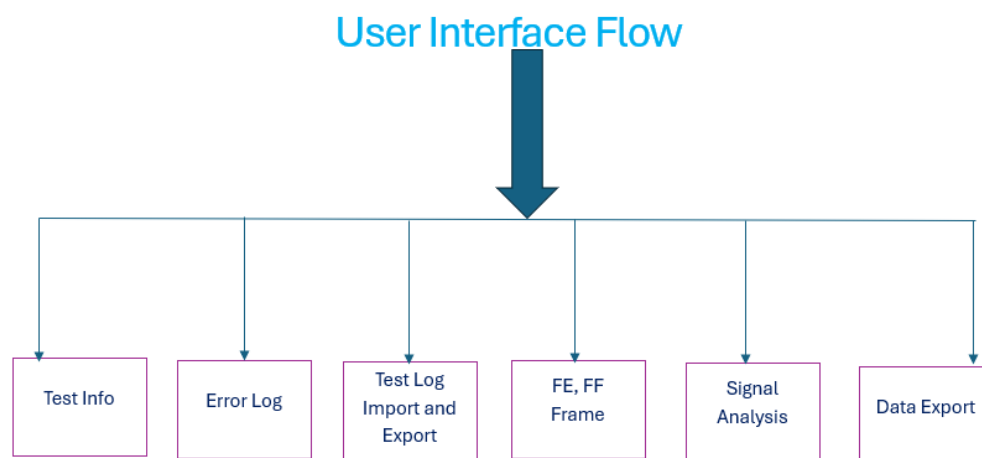


Figure 2: User Interface Flow

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 8

4.3 Main Screen

The main screen of the Report Analysis tool has the following buttons, as shown below. Only the Application Close, Test Log Import and Export button options are enabled.

- 1) Select the Test Log button, if data is available, the options will be listed, referring to Section 6.
- 2) If the Test Log button does not list any data, refer to Section 5.
- 3) Option to select the **Product** Filter for Test Log.
- 4) Option to select the **Test Phase** Filter for Test Log.
- 5) Option to select the **Test Name** Filter for Test Log.
- 6) Option to **Refresh the Database Name List**.
- 7) Option to **Delete the Listed Database Name**.
- 8) Option to select **Frame Type** (FE Frame and FF Frame) Filter.
- 9) Option to select the **Test Socket** Filter.
- 10) Option to select the **Test Mode** Filter.
- 11) Option to set the **Test Start and Stop Cycles** Filter.
- 12) Option to **Reset the Values** for Test Sockets, Test Mode, Start Cycle, and Stop Cycles.
- 13) Select the display mode for the Report View screen from the following options: Test Info, Error Log, FE FF Frame, Signal Analysis, Data Export, and Test Log Import/Export.

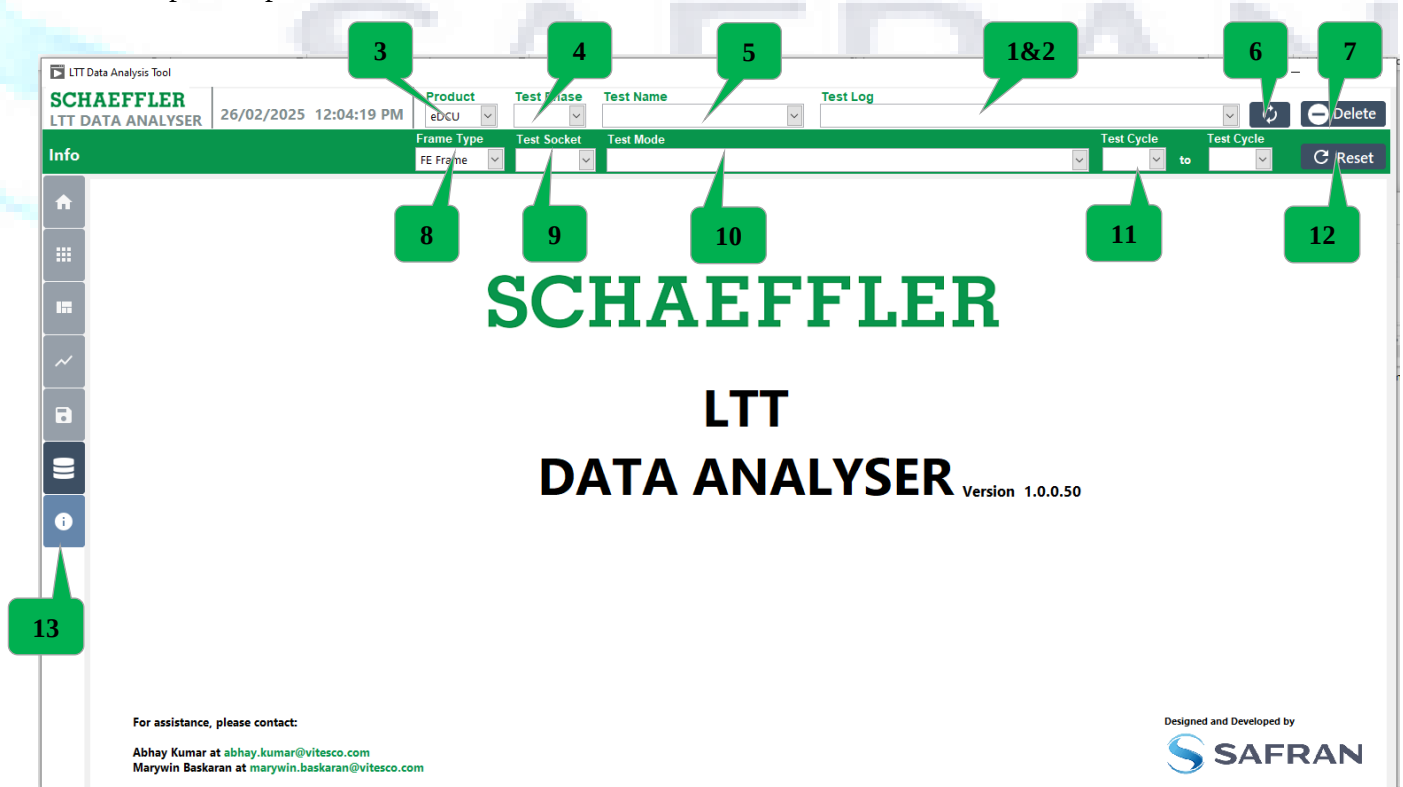


Figure 3: Main Screen

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 9

5 Test Log Import and Export Details

The Test Log Import and Export feature allows users to import and export SQL dump files for analysis purposes.

Typically, the Export Test Log is performed in the LTT System to export data, while the Import Feature is used in any system where the test log needs to be reviewed.

Test Log Import/ Export Screen Detail

1. Click on  icon to open the Test Log Import/Export screen.
2. To import the database, click the "Import" tab button.
3. To export the database, click the "Export" tab button.
4. The status of the import and export process will be updated with relevant messages.

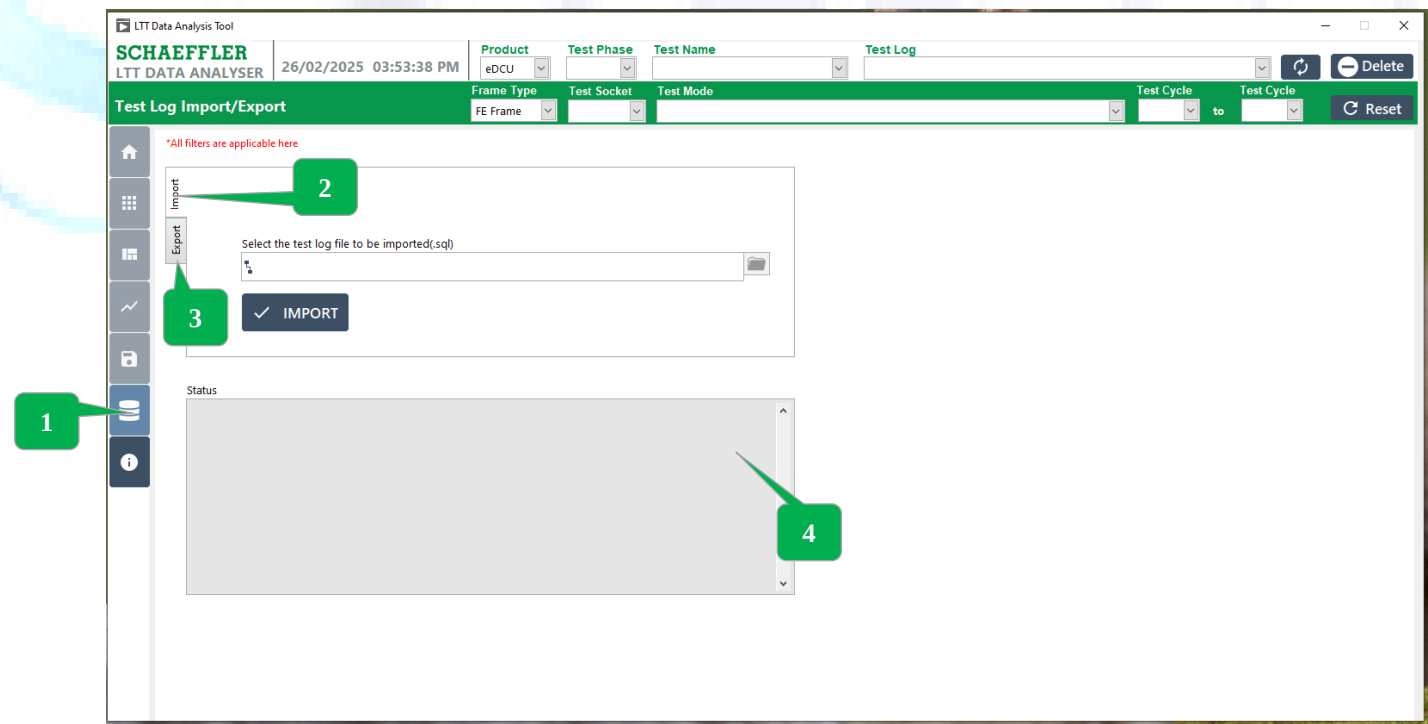


Figure 4: Import and Export Screen

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 10

5.1 Procedure to Import the Test Log

1. Click on  icon to open the Test Log Import/Export screen.
2. Click the "Import" tab button.
3. Click the  icon to browse the test log file.

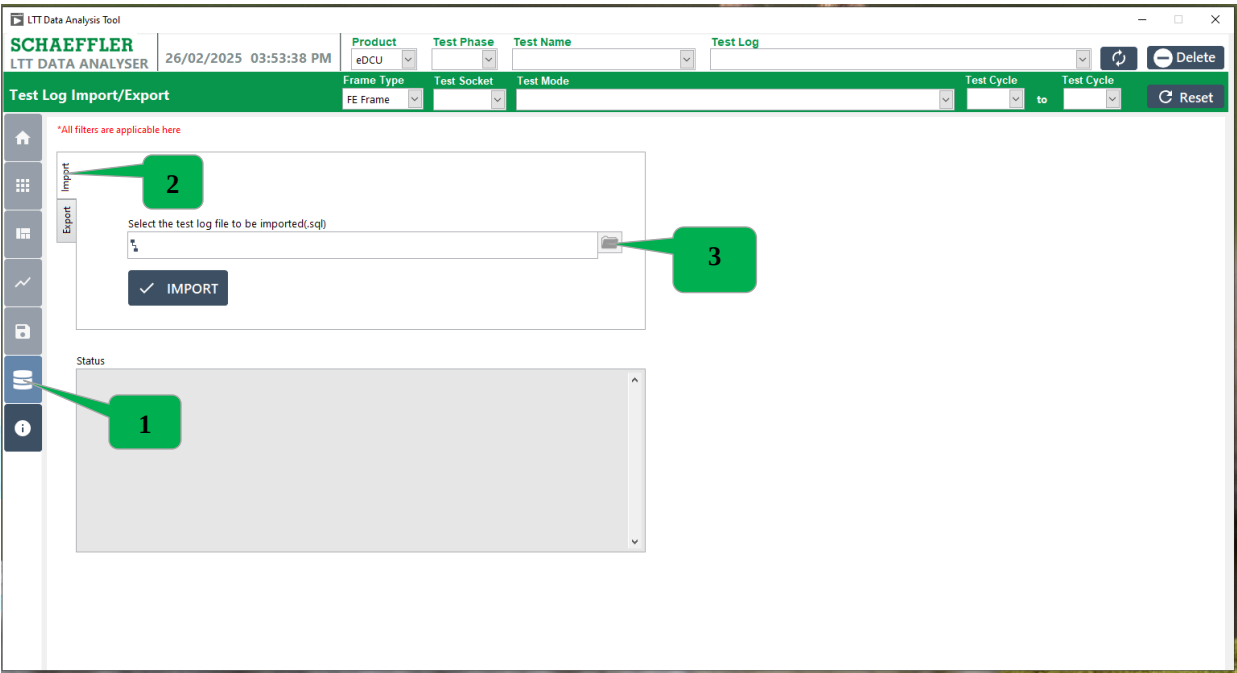


Figure 5: Import Database File

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 11

5.1.1 Browse Test Log file

1. Select the test log file (.SQL) you need to import.
2. The selected file name will be displayed.
3. Click the "OK" button to proceed.

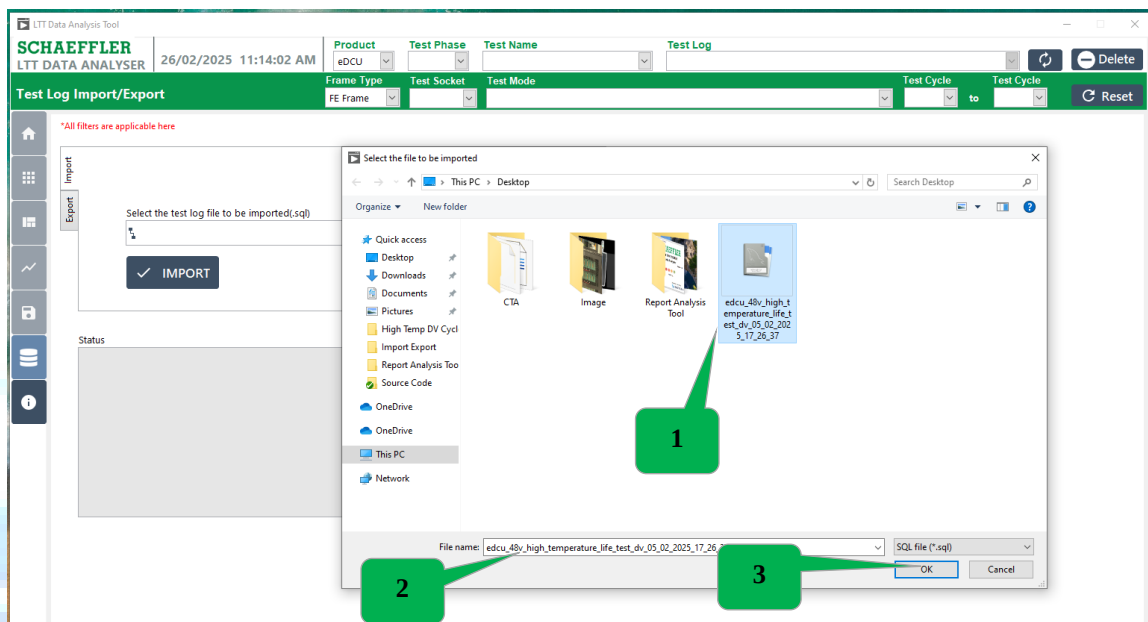


Figure 6: Import Data Selection

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 12

5.1.2 Start Importing

- 1) The selected file name will be displayed.
- 2) Click the Import Button.

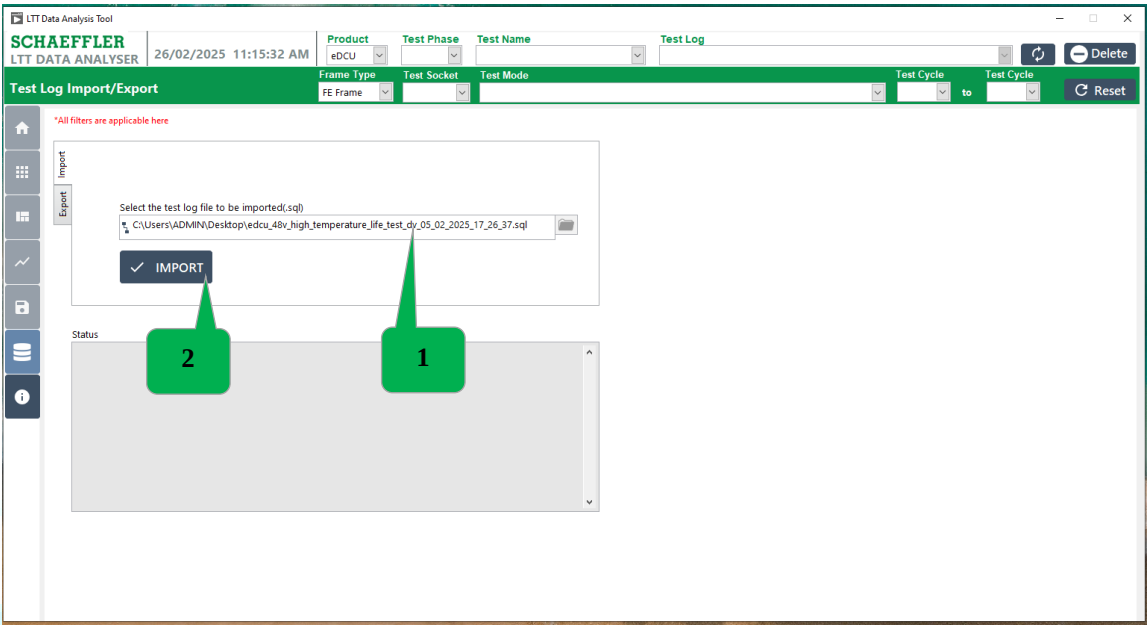


Figure 7: Import Data File Displayed.

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 13

5.1.3 Import in Progress

- 1) After clicking the "Import" button,
- 2) The status for the import file will be displayed, showing the progress of the import process. It may take couple of minutes depending on file size

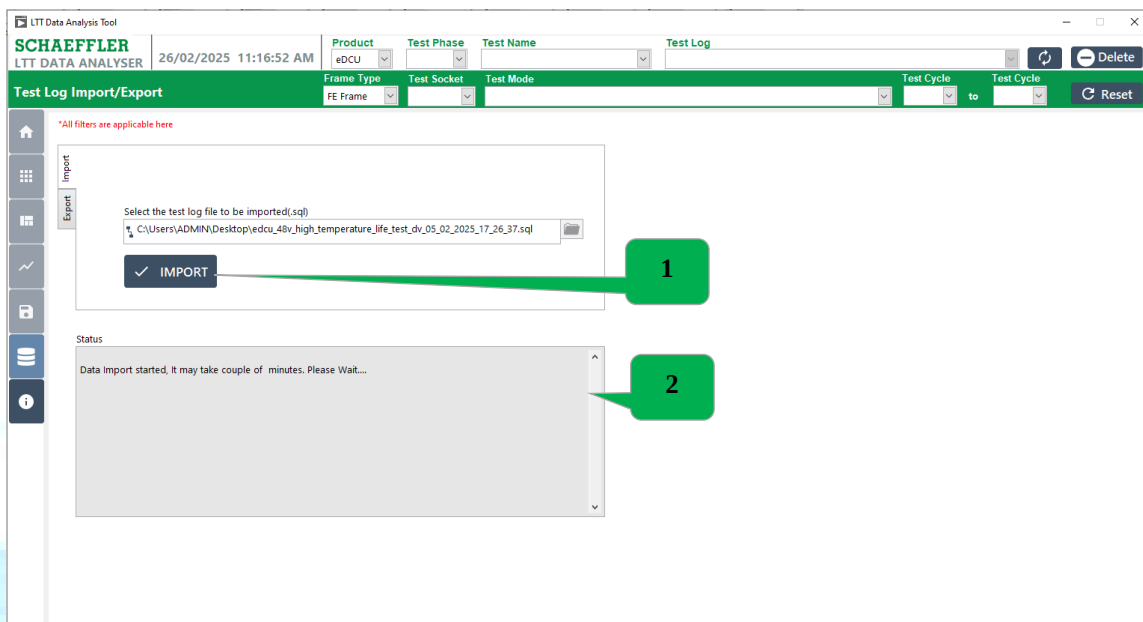


Figure 8: Import Data Inprogress

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 14

5.1.4 Import Successful

- 1) A pop-up will appear confirming that the import has been completed successfully.
- 2) Click the "OK" button to acknowledge and close the pop-up.

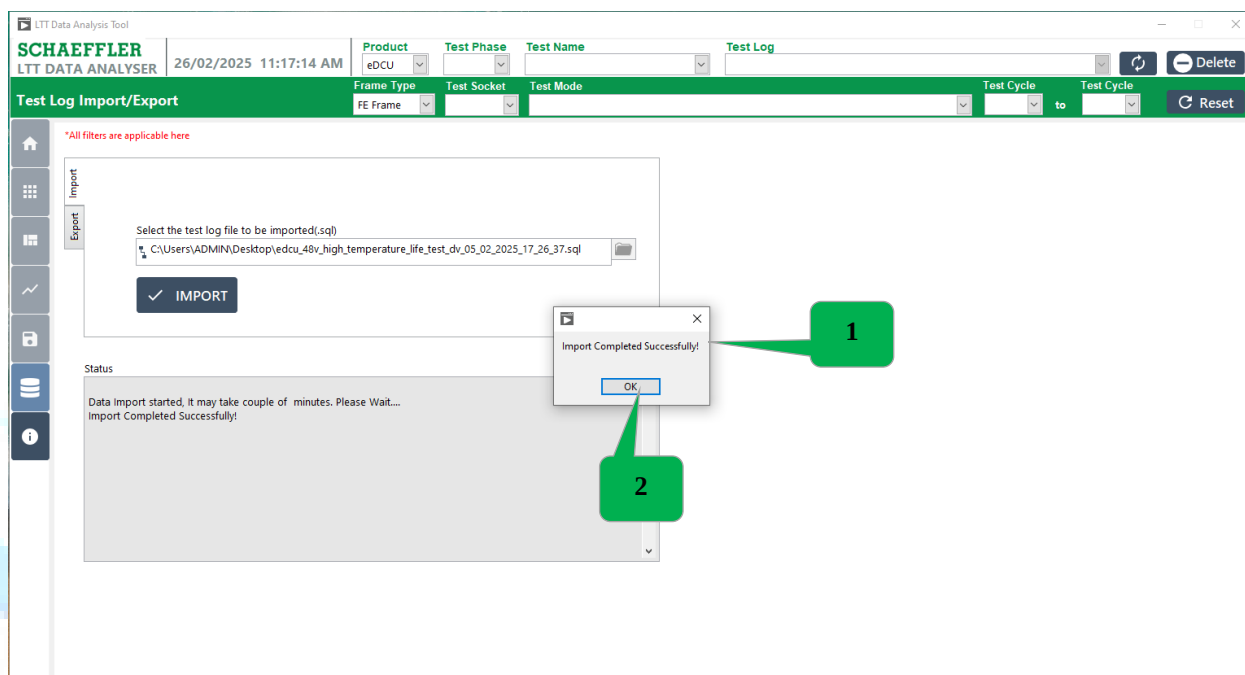


Figure 9: Import File Successful

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 15

5.1.5 Import Status Update

- 1) A message will appear confirming that the import status is completed.

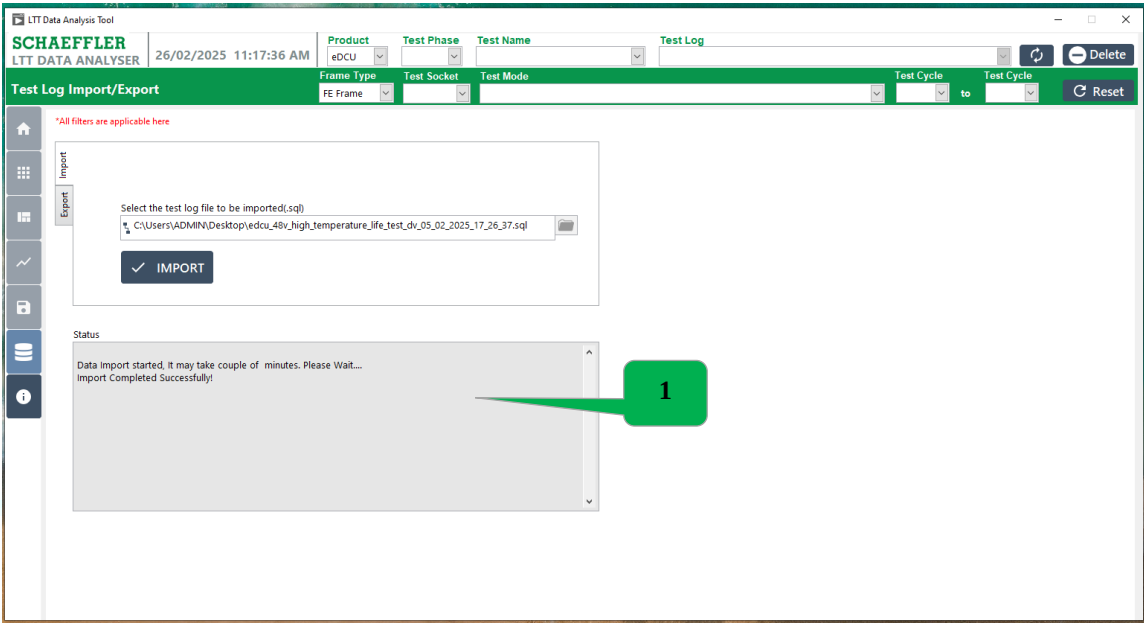


Figure 10: Import Status Show for successfully Completed

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 16

5.2 Procedure to Export the Test Log

- 1) Click the "Import and Export" button to display the screen.
- 2) Click the "Export" tab button.
- 3) **Select the Test Log Name** from the available list.
- 4) **Select the export folder path** where the file will be saved.
- 5) After selecting the Test Log Name and the folder path, **click the "Export" button** to complete the export process.
- 6) The status of the import and export process will be updated with relevant messages.

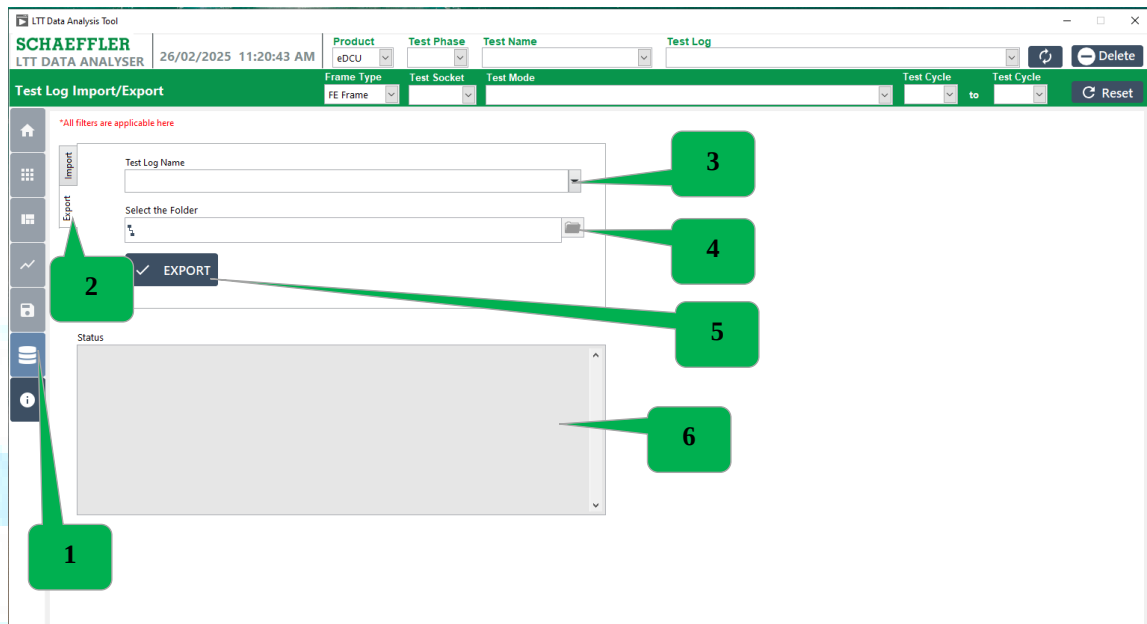


Figure 11: Export the Database File

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 17

5.2.1 Browse for Folder Selection

- 1) **Select the respective folder path** where you want to export the file.
- 2) **Click the "Select Folder" button** to confirm the selected folder and proceed with the export.

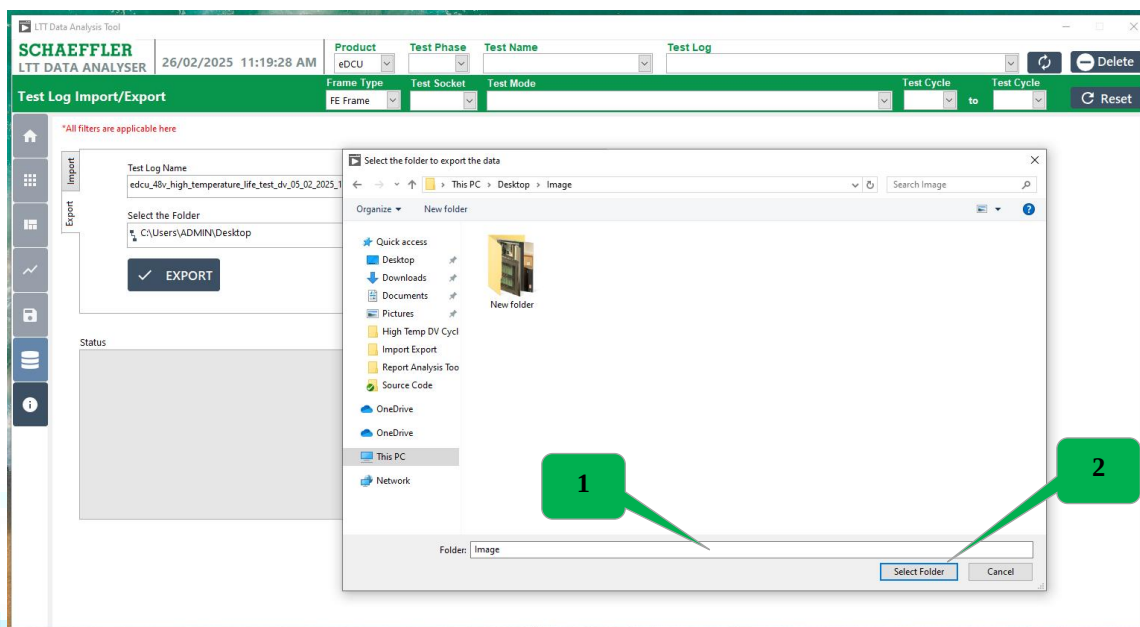


Figure 12: Export Database File Folder Selection

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 18

5.2.2 Export Test log and Status

- 1) The selected file name will be displayed in the **Test Log Name** field.
- 2) The selected folder name will be displayed in the **Export Folder** field.
- 3) Click the **Export** button to start the export process.
- 4) The **Export Status** will be shown, indicating the progress of the exports.

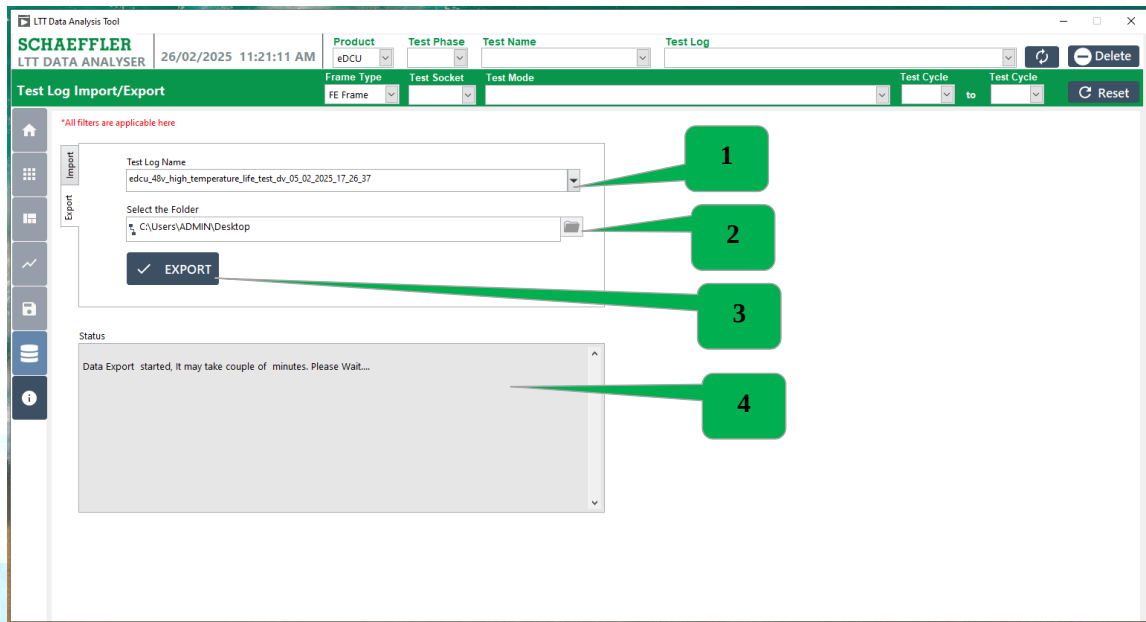


Figure 13: Export of the Selected Database File Displayed.

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 19

5.2.3 Export Successfully Completed Message

- 1) A message will appear confirming that the import status is completed, such as.

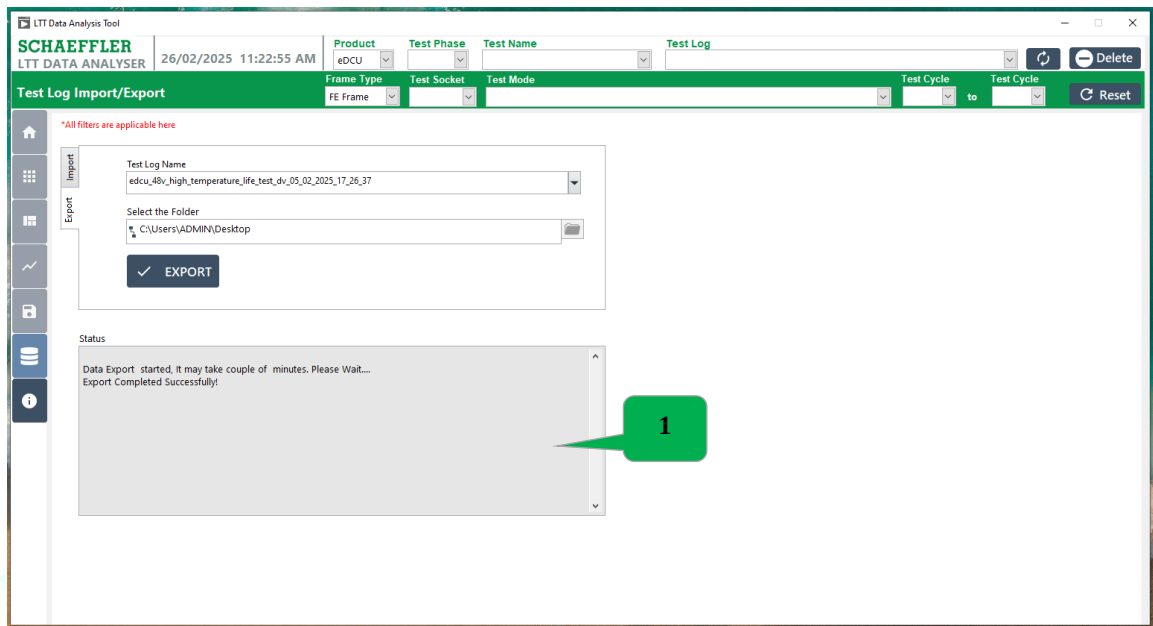


Figure 14: Export the Database file Successfully Completed.

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 20

6 Test Log Selection


Choose 'Test Log' to activate the 'Other Data Analysis' button. This will let you view the data by granting access to the data view.

Users can apply filters for Product, Test Phase, and Test Name before selecting the test log. This helps in narrowing down the search efficiently.

6.1 Selected the Test Log Name

- 1) **Select the Test Log Name**, and once selected, **enable all control buttons** on the screen to allow full functionality.
- 2) Once the Test Log Name is selected, **all control buttons** will be enabled, allowing access to the following options.

- Test Log Import and Export
- Test Info
- Error Log
- FE FF Frame
- Plot Signals
- Export

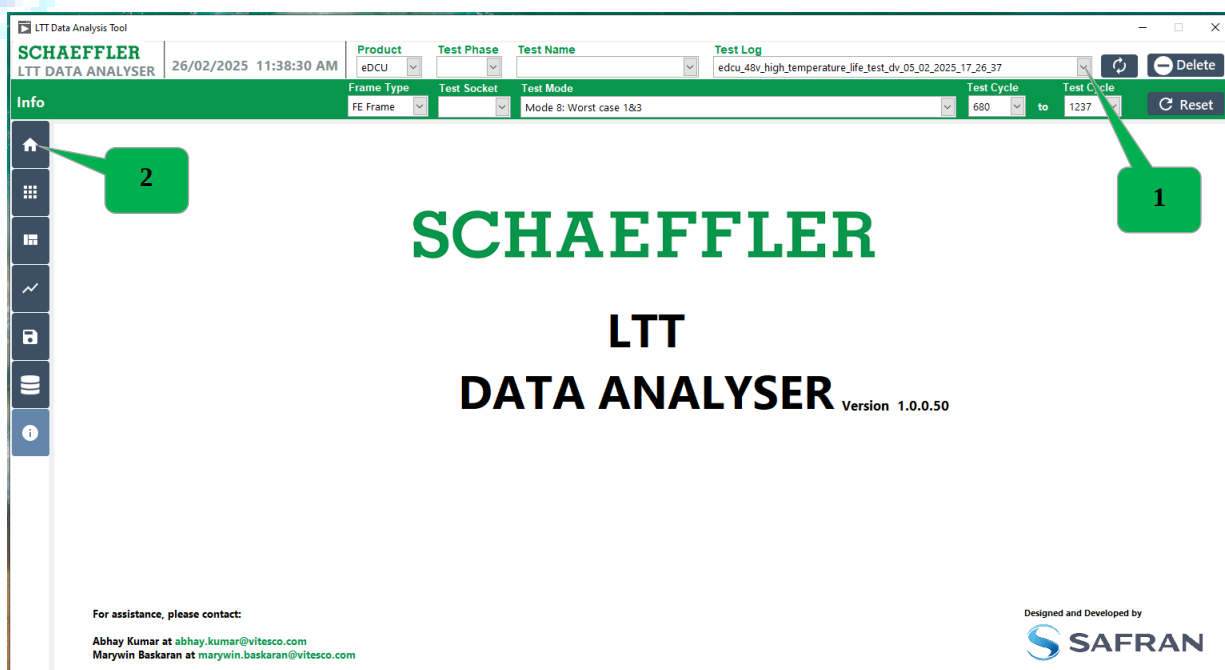

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 21

Figure 15: Test Log Selected

7 Test Information

7.1 Test Info View

- 1) Click the "Test Info" button, which is represented by the Home Symbol.
- 2) The screen will display the following Date and Time details:

- Test Start Date
- Estimated Completion Date
- Remaining Time
- Completed Time

- 3) The screen will show the Cycles and Percent details:

- Total Cycles
- Cycles Completed
- Remaining Cycles
- Completed Percentage

- 4) Test information data will be displayed, including the above details, providing an overview of the test's progress and status.

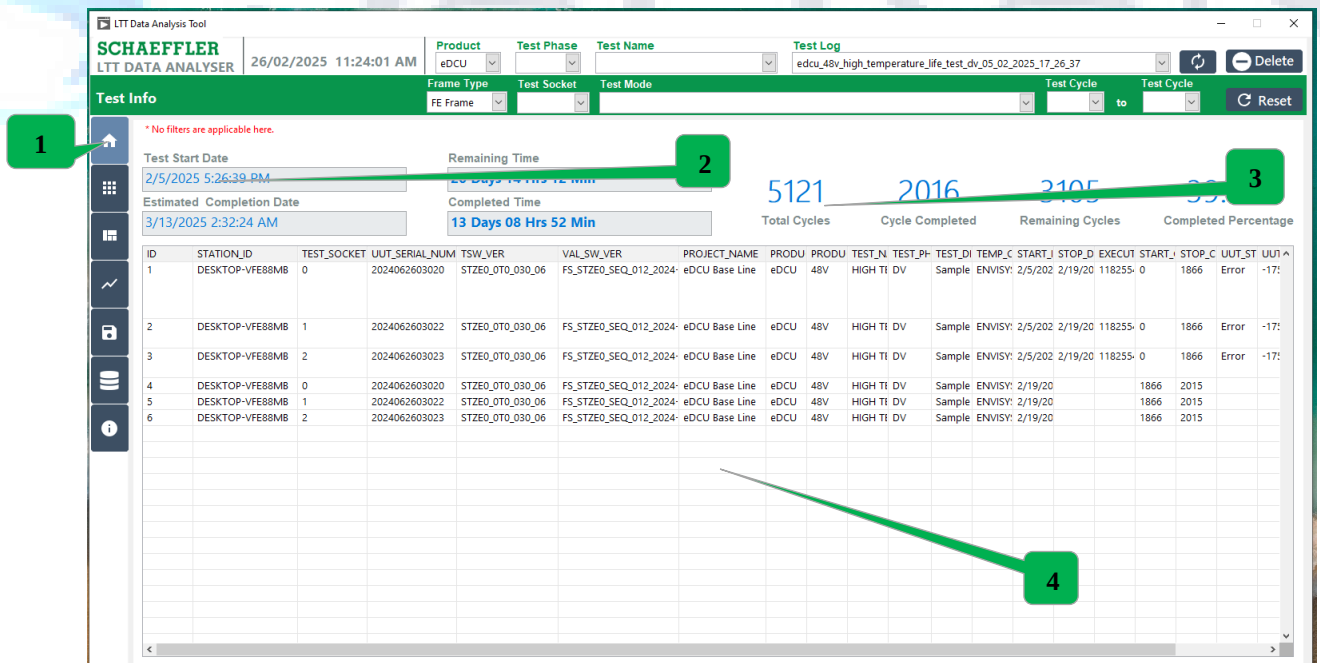


Figure 16: Test Information View

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 22

8 Errors Log

In the Error Log View, users can see an overview of all signals that are out of range, categorized by test socket. The view also displays the failure counts. Users can click on any signal to see more details about it, such as limits, cycle, mode, etc., in a tabular format.

8.1 Analyzing Error Log

- 1) Click the "Error Log" button, represented by the Dial Symbol.
- 2) The Test Log has already been selected, and the Errors List Table is updated to show the Socket, Error Signal, and Error Count for each specified Socket.
- 3) The Error Log filter is applied for both the Start Test Cycle and Stop Test Cycle.
- 4) Click "Refresh Data" to display the error data.
- 5) The specified errors will be displayed accordingly.

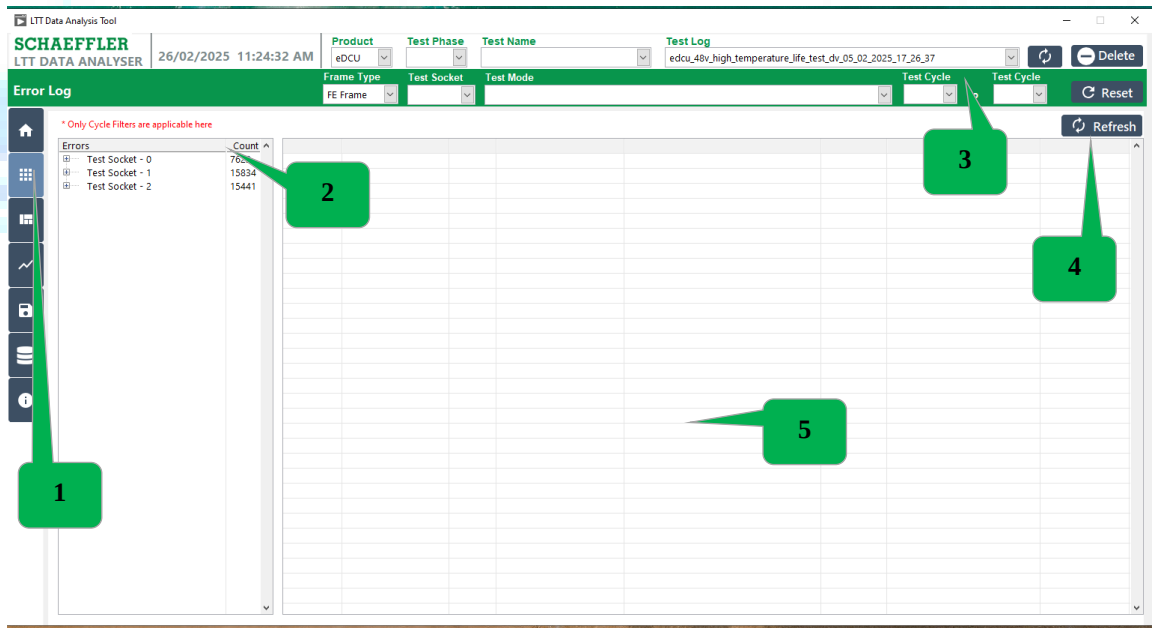


Figure 17: Procedure for Error Log

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 23

8.2 Test Socket wise Errors

- 1) Click on the Test Socket to list the associated Error Signals.
- 2) Display the Error Signals.

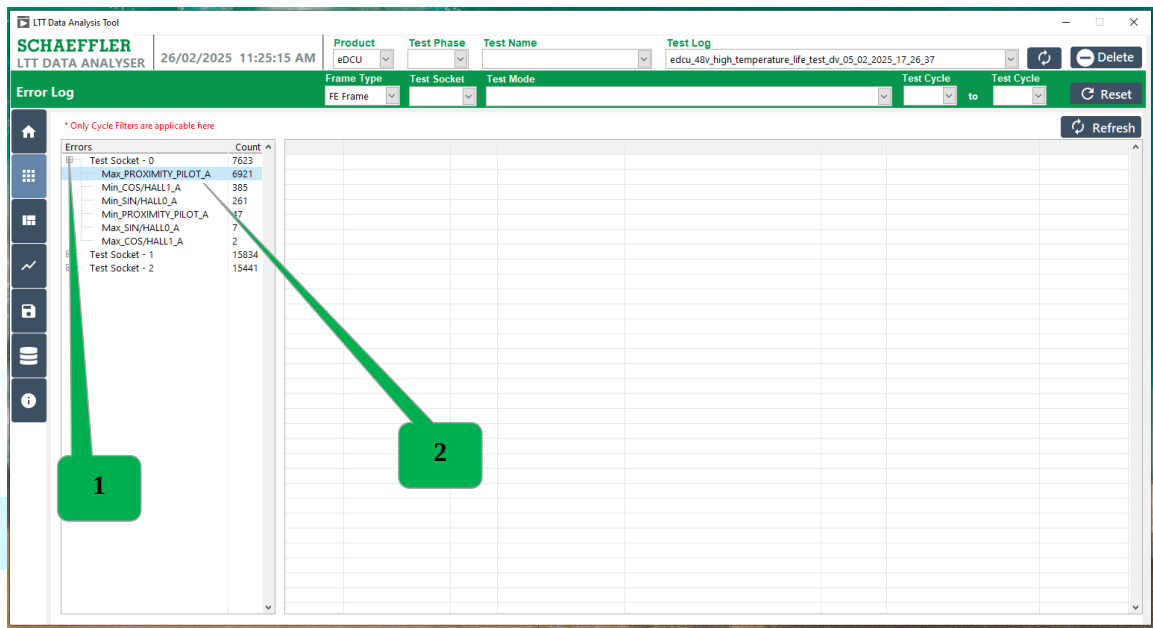


Figure 18: Error Log – Test Socket and Signal Listed

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 24

8.2 Signal Selected and View Data

- 1) Click the Selected Signal and Show the Error Count specify signal.
- 2) Selected Signal data Showing the Displayed.

LTT Data Analysis Tool
SCHAEFFLER
LTT DATA ANALYSER

26/02/2025 11:25:41 AM

Product: eDCU Test Phase: Test Name: Test Log: edcu_48v_high_temperature_life_test_dr_05_02_2025_17_26_37

Frame Type: FE Frame Test Socket: Test Mode: Test Cycle: to Test Cycle: Reset

* Only Cycle Filters are applicable here

Errors	Count	SOCKET	DATE TIME	CYCLE NL	TEST MODE	SIGNAL NAME	SIGNAL VALUE UNIT	COMPARISON VALI
Test Socket - 0	7623	0	2/8/2025 4:51:57 PM	406	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.355 V	2.360 <= x <= 2.560
Max_PROXIMITY_PILOT_A	6921	0	2/8/2025 6:58:37 PM	418	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.355 V	2.360 <= x <= 2.560
Min_COS/HALL1_A	385	0	2/8/2025 7:19:42 PM	420	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.343 V	2.360 <= x <= 2.560
Min_SIN/HALLO_A	261	0	2/8/2025 8:01:53 PM	424	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.347 V	2.360 <= x <= 2.560
Min_PROXIMITY_PILOT_A	47	0	2/8/2025 8:12:27 PM	425	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.352 V	2.360 <= x <= 2.560
Max_SIN/HALLO_A	1	0	2/8/2025 8:44:07 PM	428	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.358 V	2.360 <= x <= 2.560
Max_COS/HALL1_A	2	0	2/8/2025 10:08:35 PM	436	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.357 V	2.360 <= x <= 2.560
Test Socket - 1	15834	0	2/8/2025 11:23:36 PM	443	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.356 V	2.360 <= x <= 2.560
Test Socket - 2	15441	0	2/9/2025 12:36:31 AM	450	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.358 V	2.360 <= x <= 2.560
		0	2/9/2025 12:57:37 AM	452	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.356 V	2.360 <= x <= 2.560
		0	2/9/2025 2:08:01 AM	459	Mode 8: WMTc Pattern 4	Min_SIN/HALLO_A	2.358 V	2.360 <= x <= 2.560
		0	2/9/2025 3:33:51 PM	535	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.346 V	2.360 <= x <= 2.560
		0	2/9/2025 4:01:48 PM	548	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.339 V	2.360 <= x <= 2.560
		0	2/9/2025 4:52:52 PM	552	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.347 V	2.360 <= x <= 2.560
		0	2/9/2025 5:53:53 PM	553	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.336 V	2.360 <= x <= 2.560
		0	2/9/2025 6:58:58 PM	558	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.357 V	2.360 <= x <= 2.560
		0	2/9/2025 7:57:59 PM	559	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.355 V	2.360 <= x <= 2.560
		0	2/9/2025 7:57:42 PM	560	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.343 V	2.360 <= x <= 2.560
		0	2/9/2025 9:53:44 PM	571	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.350 V	2.360 <= x <= 2.560
		0	2/9/2025 10:14:55 PM	573	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.349 V	2.360 <= x <= 2.560
		0	2/9/2025 10:25:32 PM	574	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.357 V	2.360 <= x <= 2.560
		0	2/9/2025 10:46:41 PM	576	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.349 V	2.360 <= x <= 2.560
		0	2/9/2025 11:28:56 PM	580	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.352 V	2.360 <= x <= 2.560
		0	2/10/2025 12:11:08 AM	584	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.346 V	2.360 <= x <= 2.560
		0	2/10/2025 12:21:43 AM	585	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.345 V	2.360 <= x <= 2.560
		0	2/10/2025 12:32:16 AM	586	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.349 V	2.360 <= x <= 2.560
		0	2/10/2025 12:39:20 AM	587	Mode 5: WMTc Pattern 4	Min_SIN/HALLO_A	2.352 V	2.360 <= x <= 2.560
		0	2/10/2025 12:50:03 AM	591	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.349 V	2.360 <= x <= 2.560
		0	2/10/2025 1:35:37 AM	592	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.321 V	2.360 <= x <= 2.560
		0	2/10/2025 2:07:15 AM	595	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.356 V	2.360 <= x <= 2.560
		0	2/10/2025 2:38:54 AM	598	Mode 8: Worst case 1&3	Min_SIN/HALLO_A	2.352 V	2.360 <= x <= 2.560

Figure 19: Error Log Selected Signal and View Data

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 25

8.3 Selected the Cycle Number based Filter

- 1) Select either the Start Cycle or Stop Cycle to list the errors.
- 2) Click the Refresh Button.
- 3) Choose the Error List from the Signals and Count.
- 4) Display the selected either the Start Cycle or Stop Cycle and Signal.

Errors	Count	SOCKET	DATE TIME	CYCLE NL	TEST MODE	SIGNAL NAME	SIGNAL VALUE	UNIT	COMPARISON VALUE
Test Socket - 0	6985	0	2/8/2025 2:34:38 PM	393	Mode 8: Worst case 183	Min_COS/HALL1_A	2.361	V	2.365<=x<=2.565
Max_PROXIMITY_PILOT_A	6354	0	2/8/2025 4:51:57 PM	406	Mode 8: Worst case 183	Min_COS/HALL1_A	2.360	V	2.365<=x<=2.565
Min_COS/HALL1_A	348	0	2/8/2025 6:48:05 PM	417	Mode 8: Worst case 183	Min_COS/HALL1_A	2.363	V	2.365<=x<=2.565
Min_SIN/HALL0_A	233	0	2/8/2025 7:19:42 PM	420	Mode 8: Worst case 183	Min_COS/HALL1_A	2.341	V	2.365<=x<=2.565
Min_PROXIMITY_PILOT_A	47	0	2/8/2025 7:40:46 PM	422	Mode 8: Worst case 183	Min_COS/HALL1_A	2.345	V	2.365<=x<=2.565
Max_SIN/HALL0_A	2	0	2/8/2025 8:01:53 PM	424	Mode 8: Worst case 183	Min_COS/HALL1_A	2.344	V	2.365<=x<=2.565
Max_COS/HALL1_A	1	0	2/8/2025 8:12:27 PM	425	Mode 8: Worst case 183	Min_COS/HALL1_A	2.352	V	2.365<=x<=2.565
Test Socket - 1	5662	0	2/8/2025 8:33:33 PM	427	Mode 8: Worst case 183	Min_COS/HALL1_A	2.362	V	2.365<=x<=2.565
Test Socket - 2	6731	0	2/8/2025 8:44:07 PM	428	Mode 8: Worst case 183	Min_COS/HALL1_A	2.362	V	2.365<=x<=2.565
		0	2/8/2025 10:08:35 PM	436	Mode 8: Worst case 183	Min_COS/HALL1_A	2.350	V	2.365<=x<=2.565
		0	2/8/2025 10:30:52 PM	440	Mode 8: Worst case 183	Min_COS/HALL1_A	2.357	V	2.365<=x<=2.565
		0	2/8/2025 11:01:28 PM	441	Mode 8: Worst case 183	Min_COS/HALL1_A	2.357	V	2.365<=x<=2.565
		0	2/8/2025 11:22:36 PM	443	Mode 8: Worst case 183	Min_COS/HALL1_A	2.357	V	2.365<=x<=2.565
		0	2/9/2025 12:15:24 AM	448	Mode 8: Worst case 183	Min_COS/HALL1_A	2.356	V	2.365<=x<=2.565
		0	2/9/2025 12:22:29 AM	449	Mode 5: WMTC Pattern 4	Min_COS/HALL1_A	2.362	V	2.365<=x<=2.565
		0	2/9/2025 12:25:58 AM	449	Mode 8: Worst case 183	Min_COS/HALL1_A	2.363	V	2.365<=x<=2.565
		0	2/9/2025 12:47:03 AM	451	Mode 8: Worst case 183	Min_COS/HALL1_A	2.360	V	2.365<=x<=2.565
		0	2/9/2025 1:29:15 AM	455	Mode 8: Worst case 183	Min_COS/HALL1_A	2.360	V	2.365<=x<=2.565
		0	2/9/2025 2:08:01 AM	459	Mode 5: WMTC Pattern 4	Min_COS/HALL1_A	2.354	V	2.365<=x<=2.565
		0	2/9/2025 3:14:48 AM	465	Mode 8: Worst case 183	Min_COS/HALL1_A	2.358	V	2.365<=x<=2.565
		0	2/9/2025 3:55:55 PM	521	Mode 8: Worst case 183	Min_COS/HALL1_A	2.361	V	2.365<=x<=2.565
		0	2/9/2025 2:30:27 PM	529	Mode 8: Worst case 183	Min_COS/HALL1_A	2.355	V	2.365<=x<=2.565
		0	2/9/2025 3:33:51 PM	535	Mode 8: Worst case 183	Min_COS/HALL1_A	2.350	V	2.365<=x<=2.565
		0	2/9/2025 5:51:07 PM	548	Mode 8: Worst case 183	Min_COS/HALL1_A	2.343	V	2.365<=x<=2.565
		0	2/9/2025 6:33:18 PM	552	Mode 8: Worst case 183	Min_COS/HALL1_A	2.358	V	2.365<=x<=2.565
		0	2/9/2025 6:43:50 PM	553	Mode 8: Worst case 183	Min_COS/HALL1_A	2.333	V	2.365<=x<=2.565
		0	2/9/2025 6:52:32 PM	554	Mode 5: WMTC Pattern 4	Min_COS/HALL1_A	2.357	V	2.365<=x<=2.565
		0	2/9/2025 7:26:03 PM	557	Mode 8: Worst case 183	Min_COS/HALL1_A	2.341	V	2.365<=x<=2.565
		0	2/9/2025 7:36:36 PM	558	Mode 8: Worst case 183	Min_COS/HALL1_A	2.356	V	2.365<=x<=2.565
		0	2/9/2025 7:47:09 PM	559	Mode 8: Worst case 183	Min_COS/HALL1_A	2.325	V	2.365<=x<=2.565
		0	2/9/2025 7:57:42 PM	560	Mode 8: Worst case 183	Min_COS/HALL1_A	2.336	V	2.365<=x<=2.565

Figure 20: Error Log – Selected Cycle and Data View

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 27

9 FE and FF frames

The FE and FF Frame Data View enables users to review FE/FF Frame data based on selected frames. Filters can be applied by Socket, Test mode, Test Cycles and date, time. Additionally, users have the option to export the data in .csv and .xls formats.

9.1 FE and FF Frame Data Window

- 1) Click the "FE / FF Frames " button, represented by the Settings Symbol.
- 2) The Test Log has already been selected, and the available filter options include Frame Type, Test Sockets, Test Mode, and Test Start or Stop Cycles.
- 3) Option to apply all data.
- 4) Option to view data by date.
- 5) Option to choose file format (.csv, .xlsx).
- 6) Option to export and save data.
- 7) Display the data after applying the filter.

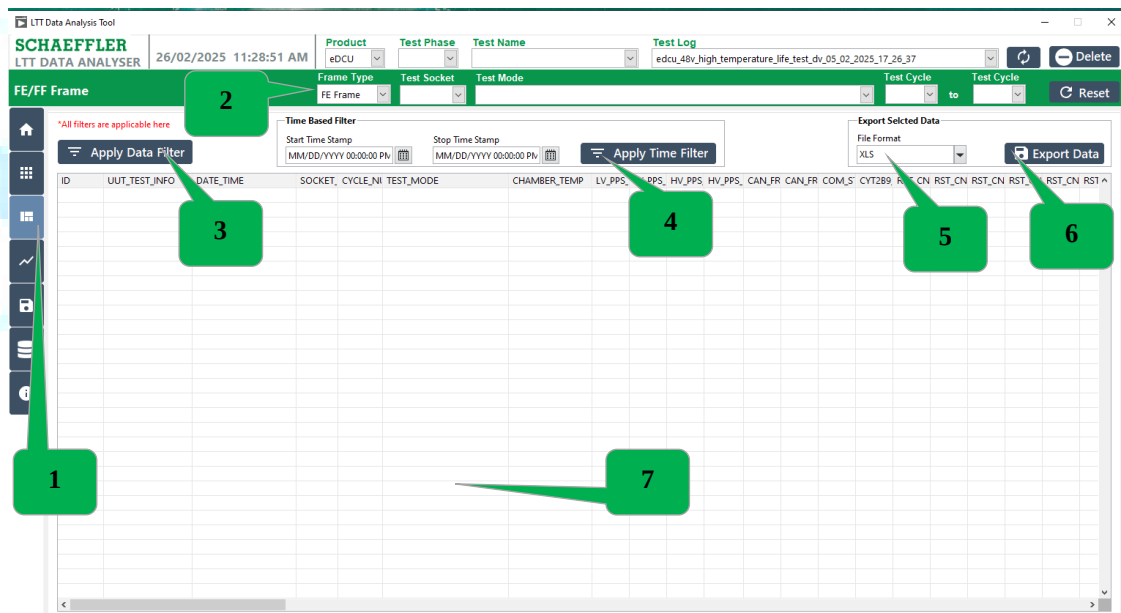


Figure 22: FE and FF Frames

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 28

9.2 Apply the Data Filter

- 1) Click the 'Apply Data Filter' button.
- 2) Display all the data.

The screenshot shows the LTT Data Analysis Tool interface. At the top, there's a header bar with 'SCHAEFFLER LTT DATA ANALYSER' and a timestamp '26/02/2025 11:29:22 AM'. Below this, there are tabs for 'Product', 'Test Phase', 'Test Name', and 'Test Log'. The 'Test Log' tab is active, showing a test log entry: 'educu_48v_high_temperature_life_test_dv_05_02_2025_17_26_37'. Below the tabs, there's a 'FE/FF Frame' section with a dropdown menu set to 'FE Frame'. To the right of this, there are 'Frame Type', 'Test Socket', and 'Test Mode' dropdowns. Further right, there are 'Test Cycle' and 'Test Cycle' dropdowns. Below these, there's a 'Time Based Filter' section with 'Start Time Stamp' and 'Stop Time Stamp' fields, both set to 'MM/DD/YYYY 00:00:00 Ph'. To the right of this, there's an 'Export Selected Data' section with a 'File Format' dropdown set to 'XLS' and an 'Export Data' button. The main part of the interface is a data table with columns: ID, UUT_TEST_IN, DATE_TIME, SOCKET, CYCLE_NI, TEST_MODE, CHAMBER_TEMP, LV_PPS, LV_PPS, HV_PPS, HV_PPS, CAN_FR, CAN_FR, COM_S, CYT2B9, RST_CN, RST_CN, RST_CN, RST_CN, RST_CN, RST_CN. The table contains 15 rows of data. A green arrow labeled '1' points to the 'Apply Data Filter' button. Another green arrow labeled '2' points to the 'Export Data' button.

Figure 23: FE and FF Frames All Data Filter

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 29

9.3 Apply the Time Based Filter

- 1) Select the Start and Stop Time, then fill in the Date and Time to filter the data.
- 2) Click the "Apply Time Filter" button.
- 3) Display all the data based on the Timestamp filter.

The screenshot shows the LTT Data Analysis Tool interface. At the top, there's a header with 'SCHAEFFLER LTT DATA ANALYSER' and a date/time stamp '26/02/2025 11:30:05 AM'. Below this is a filter bar with 'FE/FF Frame' and 'FE Frame' selected. The main area features a 'Time Based Filter' section with 'Start Time Stamp' (2/5/2025 11:29:40 AM) and 'Stop Time Stamp' (2/8/2025 11:29:47 AM) fields. A green arrow points to the 'Apply Time Filter' button. To the right, an 'Export Selected Data' section shows 'File Format' set to 'XLS' and an 'Export Data' button. The bottom section displays a table of test data with columns for ID, UUT_TEST_INFO, DATE_TIME, SOCKET, CYCLE, NI, TEST_MODE, CHAMBER_TEMP, and various LV_PPS, HV_PPS, and CAN_FR parameters. A green box labeled '1' highlights the 'DATE_TIME' column, and a green box labeled '2' highlights the 'Apply Time Filter' button. A green box labeled '3' highlights the 'Export Data' button.

Figure 24: FE and FF Frame Date and Time Filter

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 30

9.4 View Selected the Frame

- 1) Select the Frame Type as either FE Frame or FF Frame.
- 2) Click either the "Apply Time Filter" or "Apply Frame Filter" button.
- 3) Display all the data based on the selected FE or FF Frame filter.

The screenshot displays the LTT Data Analysis Tool interface. The top header shows the project name 'SCHAEFFLER LTT DATA ANALYSER', the date '26/02/2025 11:31:35 AM', and the product 'eDCU'. The test phase is 'Test Log' and the test name is 'edcu_48v_high_temperature_life_test_dv_05_02_2025_17_26_37'. The 'FE/FF Frame' dropdown is set to 'FF Frame'. The 'Apply Data Filter' button is highlighted with a green callout box labeled '2'. The 'Export Selected Data' button is highlighted with a green callout box labeled '3'. The data table below shows 15 rows of test data with columns for ID, UUT_TEST_INFO, DATE_TIME, SOCKET, CYCLE, NI, TEST_MODE, CHAMBER_TEMP, CAN_FR, CAN_FR, COM_S, WHO_AI, X_STOC, X_STOF, Y_STOC, Y_STOF, Z_STOC, Z_STOF, X_CONF, Y_CONF, Z_CONF, and OU.

ID	UUT_TEST_INFO	DATE_TIME	SOCKET	CYCLE	NI	TEST_MODE	CHAMBER_TEMP	CAN_FR	CAN_FR	COM_S	WHO_AI	X_STOC	X_STOF	Y_STOC	Y_STOF	Z_STOC	Z_STOF	X_CONF	Y_CONF	Z_CONF	OU
1	2	2/5/2025 5:28:06 PM	1	1		Mode 2: WMTC Pattern 1	62	A0,85,0:	188	160	135	-127	-23	124	-50	-489	36	0.014	0.041	-1.018	353
2	3	2/5/2025 5:28:06 PM	2	1		Mode 2: WMTC Pattern 1	62	A0,85,0:	188	160	135	-125	-18	128	-27	-509	-21	-0.004	0.01	-0.912	353
3	1	2/5/2025 5:28:06 PM	0	1		Mode 2: WMTC Pattern 1	62	A0,85,0:	188	160	135	-127	0	123	-46	-525	-68	0.023	0.012	-0.949	353
4	1	2/5/2025 5:28:59 PM	0	1		Mode 3: WMTC Pattern 2	62	A0,85,0:	188	160	135	-130	2	126	-47	-526	-66	0.031	0.021	-0.944	353
5	2	2/5/2025 5:28:59 PM	1	1		Mode 3: WMTC Pattern 2	62	A0,85,0:	188	160	135	-127	-24	122	-52	-488	32	0.021	0.047	-1.006	353
6	3	2/5/2025 5:29:00 PM	2	1		Mode 3: WMTC Pattern 2	62	A0,85,0:	188	160	135	-130	-16	122	-33	-502	-25	0.004	0.006	-0.904	353
7	3	2/5/2025 5:29:25 PM	2	1		Mode 6: WMTC Pattern 5	62	A0,85,0:	188	160	135	-127	-17	123	-51	-491	-23	-0.004	0.014	-0.912	353
8	1	2/5/2025 5:29:25 PM	0	1		Mode 6: WMTC Pattern 5	62	A0,85,0:	188	160	135	-127	3	123	-48	-488	31	0.027	0.015	-0.965	353
9	2	2/5/2025 5:29:25 PM	1	1		Mode 6: WMTC Pattern 5	62	A0,85,0:	188	160	135	-128	-23	123	-51	-491	31	0.01	0.051	-1.031	353
10	1	2/5/2025 5:30:18 PM	0	1		Mode 4: WMTC Pattern 3	62	A0,85,0:	188	160	135	-127	0	128	-47	-527	-75	0.021	0.017	-0.969	353
11	2	2/5/2025 5:30:18 PM	1	1		Mode 4: WMTC Pattern 3	62	A0,85,0:	188	160	135	-125	-21	123	-48	-488	31	-0.002	0.056	-1.024	353
12	3	2/5/2025 5:30:18 PM	2	1		Mode 4: WMTC Pattern 3	62	A0,85,0:	188	160	135	-126	-14	125	-30	-501	-25	-0.014	0.015	-0.91	353
13	1	2/5/2025 5:32:14 PM	0	1		Mode 7: WMTC Pattern 6	62	A0,85,0:	188	160	135	-130	1	128	-45	-527	-86	0.033	0.015	-0.936	353
14	3	2/5/2025 5:32:14 PM	2	1		Mode 7: WMTC Pattern 6	62	A0,85,0:	188	160	135	-127	-18	122	-31	-503	-27	-0.008	0.012	-0.908	353
15	2	2/5/2025 5:32:14 PM	1	1		Mode 7: WMTC Pattern 6	62	A0,85,0:	188	160	135	-129	-23	123	-48	-491	28	0.006	0.051	-1.031	353

Figure 25: FE and FF Frame Selection Filter

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 31

9.5 FE and FF Frame- Mode Filter

- 1) Select the Frame Type as either FE Frame or FF Frame and choose the Test Mode.
- 2) Click either the "Apply Time Filter" or "Apply Frame Filter" button.
- 3) Choose the test socket.
- 4) Select the test cycle start and stop cycles to apply the filter.
- 5) Display all the data based on the selected FE or FF Frame filter and Test Modes.

The screenshot displays the LTT Data Analysis Tool interface. At the top, there's a navigation bar with dropdowns for 'Product' (eDCU), 'Test Phase', 'Test Name', and 'Test Log' (educu_48v_high_temperature_life_test_dv_05_02_2025_17_26_37). Below this is a filter section with 'Frame Type' (FE/FF Frame), 'Test Socket', 'Test Mode' (Mode 8: Worst case 183), 'Test Cycle' (680), and 'Test Cycle' (1237). A 'Time Based Filter' section includes 'Start Time Stamp' (2/5/2025 11:29:40 AM) and 'Stop Time Stamp' (2/8/2025 11:29:47 AM) with 'Apply Time Filter' buttons. An 'Export Selected Data' section has a 'File Format' dropdown (XLS) and an 'Export Data' button. The main data table lists test results with columns for ID, UUT_TEST_INFO, DATE_TIME, SOCKET, CYCLE, NI, TEST_MODE, CHAMBER_TEMP, CAN_FR, CAN_LR, COMS, WHOAI, X_STOC, X_SF, Y_STOC, Y_SF, Z_STOC, Z_SF, X_CONT, Y_CONT, Z_CONT, and OU. Green callout boxes numbered 1 through 5 point to specific UI elements: 1 points to the 'Test Mode' dropdown, 2 points to the 'Apply Time Filter' button, 3 points to the 'Test Socket' dropdown, 4 points to the 'Test Cycle' dropdown, and 5 points to the 'Test Cycle' dropdown.

Figure 26: FE and FF Frame and Test mode Filters

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 32

9.6 Export the Selected Data

- 1) Click either the "Apply Time Filter" or "Apply Frame Filter" button.
- 2) Display all the data based on the selected FE or FF Frame filter.
- 3) Select the desired file format (.xlsx or .csv).
- 4) Click the "Export" button.
- 5) Choose a folder and click the "Select Folder" button.

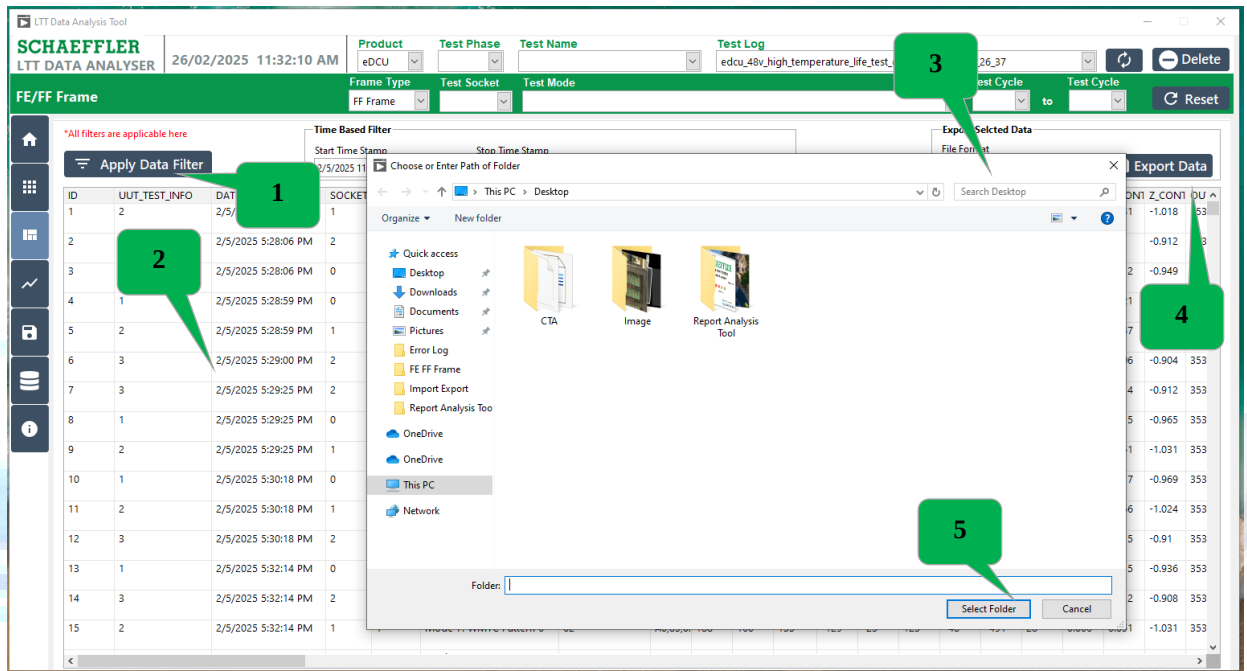


Figure 27: FE and FF Frame Export Data

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 33

10 Plot Signals

The Signal Analysis feature is utilized to visualize any signal across all sockets for a specified mode, with respect to cycles. This helps in identifying any underlying patterns.

10.1 Procedure for Plot Signals:

- 1) Selected the Test Log
- 2) Click the "Plot Signals" button, represented by the Graph Symbol.
- 3) The Test Log has already been selected, this filter is Mandatory Frame Type, Test Mode and the available filter options include Test Sockets, and Test Start or Stop Cycles.
- 4) Select the Signal Name and click the "Apply Plot Signal" button.
- 5) The respective signal graph will be displayed.
- 6) Alternatively, select another Signal Name and click the "Apply Plot Signal" button.
- 7) The respective signal graph for the second signal will be displayed.

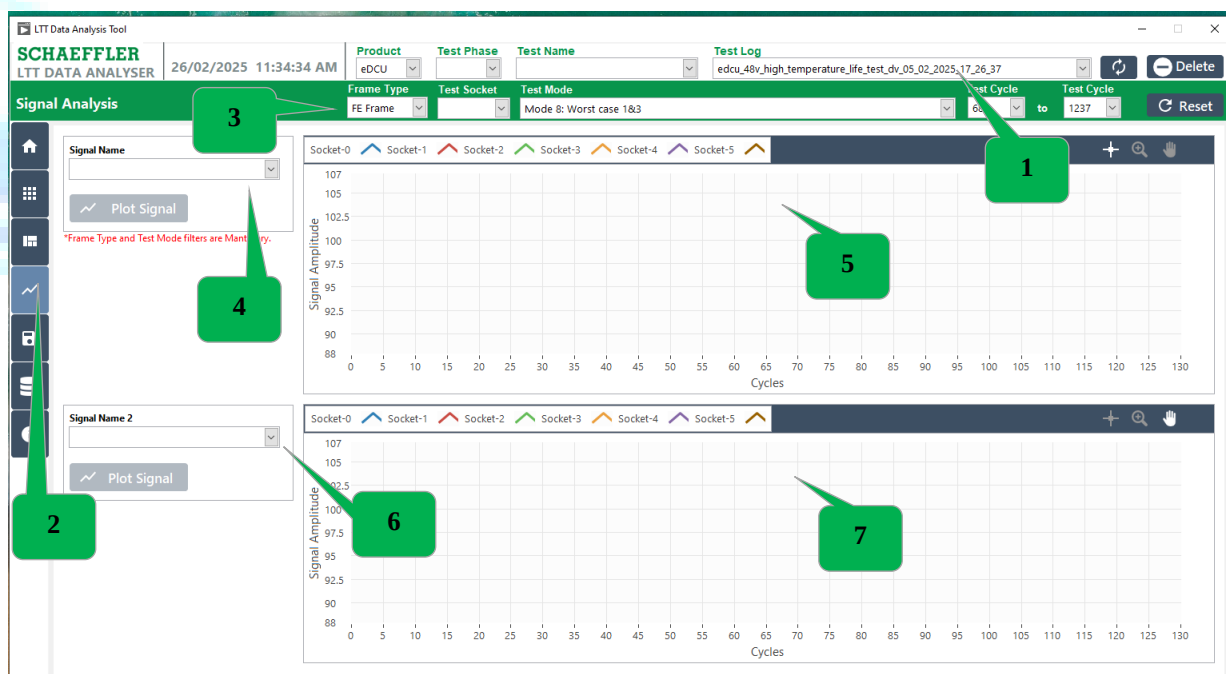


Figure 28: Procedure for Plot Signals

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 34

10.2 Procedure for Validation of the Signals:

- 1) The Test Log has already been selected, this filter is Mandatory Frame Type, Test Mode and the available filter options include Test Sockets, and Test Start or Stop Cycles.
- 2) Select the Signal Name and click the "Apply Plot Signal" button.
- 3) The respective signal graph will be displayed.
- 4) Alternatively, select another Signal Name and click the "Apply Plot Signal" button.
- 5) The respective signal graph for the second signal will be displayed.

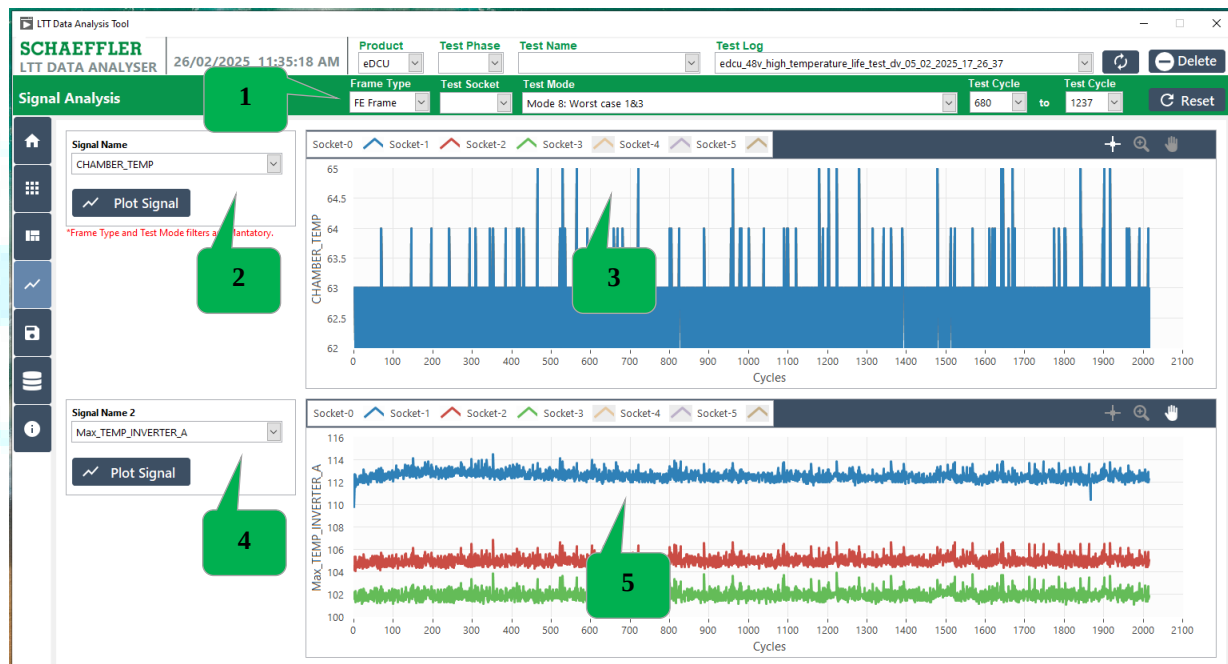


Figure 29: Plot Signals - Validation

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 35

11 Export Data

The Data Export feature allows users to export any table from the test log into .csv or .xls formats. This facilitates easy data sharing and enables further analysis using other tools.

11.1 Export the Data Window

- 1) Selected the Test Log
- 2) Click the "Export Data" button, represented by the File Symbol.
- 3) Select the table name.
- 4) The data for the selected table will be displayed.
- 5) Choose the desired file format (.xlsx or .csv).
- 6) Export the data in the selected file format.

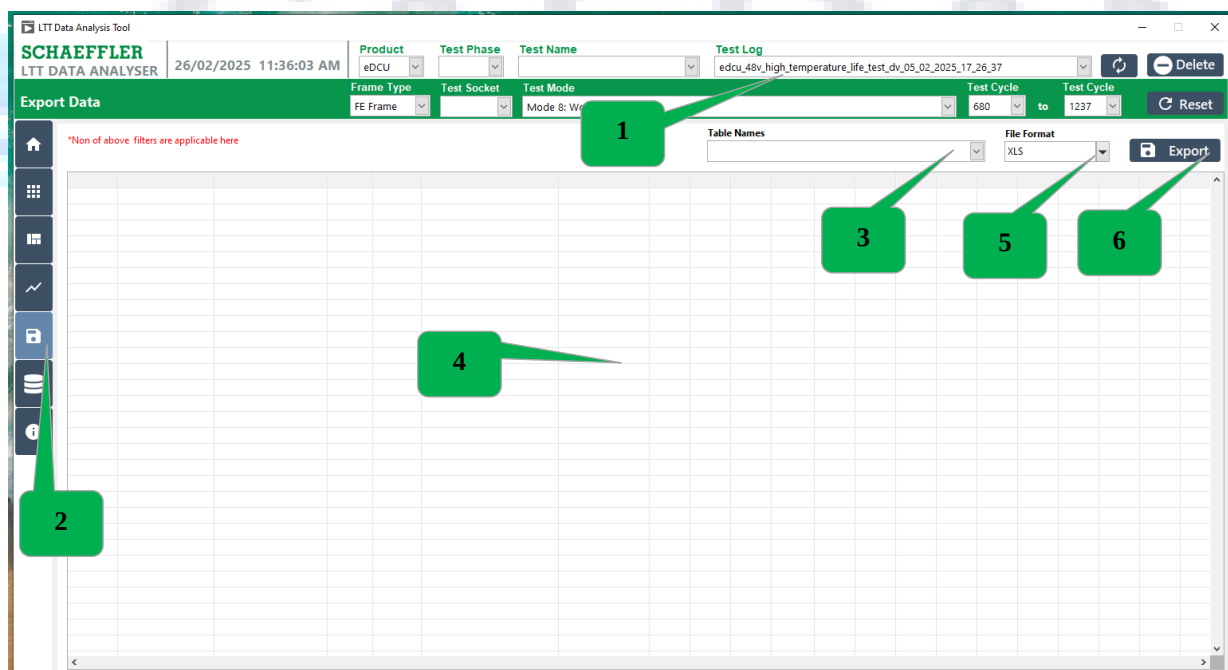


Figure 30: Procedure the Export Data

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 36

11.2 Select the Table

- 1) Select the table name.
- 2) The data for the selected table will be displayed.

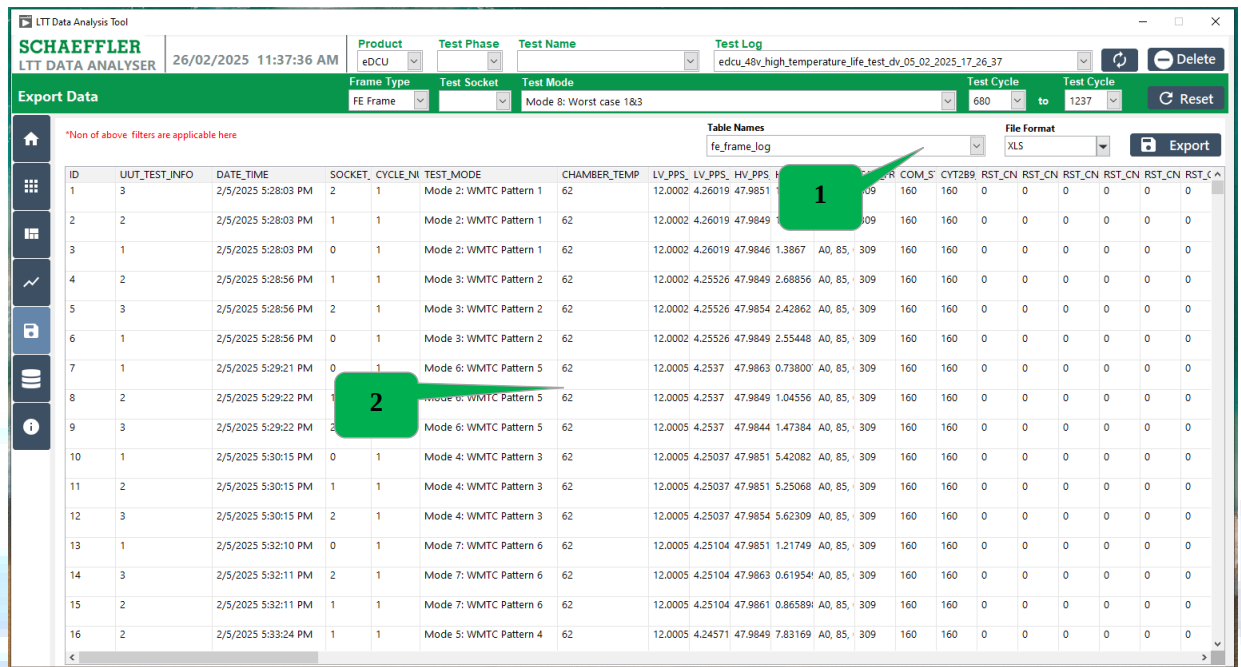


Figure 31 shows the 'Export Data' window in the LTT Data Analysis Tool. The window displays a table of test data. The 'Table Names' dropdown is set to 'fe_frame_log'. The 'File Format' is 'XLS'. The table has 16 rows and 18 columns. The columns are: ID, UUT_TEST_INFO, DATE_TIME, SOCKET, CYCLE_NO, TEST_MODE, CHAMBER_TEMP, LV_PPS, LV_PPS, HV_PPS, CHAMBER_TEMP, COM_S, CYT289, RST_CN, RST_CN, RST_CN, RST_CN, RST_CN, RST_CN. The data is filtered by 'Test Mode' and 'Test Cycle'.

ID	UUT_TEST_INFO	DATE_TIME	SOCKET	CYCLE_NO	TEST_MODE	CHAMBER_TEMP	LV_PPS	LV_PPS	HV_PPS	CHAMBER_TEMP	COM_S	CYT289	RST_CN	RST_CN	RST_CN	RST_CN	RST_CN	RST_CN
1	3	2/5/2025 5:28:03 PM	2	1	Mode 2: WMTc Pattern 1	62	12.0002	4.26019	47.9851	1.3867	A0, 85, 309	160	160	0	0	0	0	0
2	2	2/5/2025 5:28:03 PM	1	1	Mode 2: WMTc Pattern 1	62	12.0002	4.26019	47.9849	2.68856	A0, 85, 309	160	160	0	0	0	0	0
3	1	2/5/2025 5:28:03 PM	0	1	Mode 2: WMTc Pattern 1	62	12.0002	4.25526	47.9849	2.68856	A0, 85, 309	160	160	0	0	0	0	0
4	2	2/5/2025 5:28:56 PM	1	1	Mode 3: WMTc Pattern 2	62	12.0002	4.25526	47.9854	2.42862	A0, 85, 309	160	160	0	0	0	0	0
5	3	2/5/2025 5:28:56 PM	2	1	Mode 3: WMTc Pattern 2	62	12.0002	4.25526	47.9854	2.42862	A0, 85, 309	160	160	0	0	0	0	0
6	1	2/5/2025 5:28:56 PM	0	1	Mode 3: WMTc Pattern 2	62	12.0002	4.25526	47.9849	2.55448	A0, 85, 309	160	160	0	0	0	0	0
7	1	2/5/2025 5:29:21 PM	0	1	Mode 6: WMTc Pattern 5	62	12.0005	4.2537	47.9863	0.73800	A0, 85, 309	160	160	0	0	0	0	0
8	2	2/5/2025 5:29:22 PM	1	1	Mode 6: WMTc Pattern 5	62	12.0005	4.2537	47.9849	1.04556	A0, 85, 309	160	160	0	0	0	0	0
9	3	2/5/2025 5:29:22 PM	2	1	Mode 6: WMTc Pattern 5	62	12.0005	4.2537	47.9844	1.47384	A0, 85, 309	160	160	0	0	0	0	0
10	1	2/5/2025 5:30:15 PM	0	1	Mode 4: WMTc Pattern 3	62	12.0005	4.25037	47.9851	5.42082	A0, 85, 309	160	160	0	0	0	0	0
11	2	2/5/2025 5:30:15 PM	1	1	Mode 4: WMTc Pattern 3	62	12.0005	4.25037	47.9851	5.25068	A0, 85, 309	160	160	0	0	0	0	0
12	3	2/5/2025 5:30:15 PM	2	1	Mode 4: WMTc Pattern 3	62	12.0005	4.25037	47.9854	5.62309	A0, 85, 309	160	160	0	0	0	0	0
13	1	2/5/2025 5:32:10 PM	0	1	Mode 7: WMTc Pattern 6	62	12.0005	4.25104	47.9851	1.21749	A0, 85, 309	160	160	0	0	0	0	0
14	3	2/5/2025 5:32:11 PM	2	1	Mode 7: WMTc Pattern 6	62	12.0005	4.25104	47.9863	0.61954	A0, 85, 309	160	160	0	0	0	0	0
15	2	2/5/2025 5:32:11 PM	1	1	Mode 7: WMTc Pattern 6	62	12.0005	4.25104	47.9861	0.86589	A0, 85, 309	160	160	0	0	0	0	0
16	2	2/5/2025 5:33:24 PM	1	1	Mode 5: WMTc Pattern 4	62	12.0005	4.24571	47.9849	7.83169	A0, 85, 309	160	160	0	0	0	0	0

Figure 31: Export Data – Selected Table and Show Data.

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 37

11.3 Export the Data

- 1) Select the table name.
- 2) The data for the selected table will be displayed.
- 3) Choose the desired file format (.xlsx or .csv).
- 4) Export the data in the selected file format.
- 5) Choose a folder and click the "Select Folder" button.

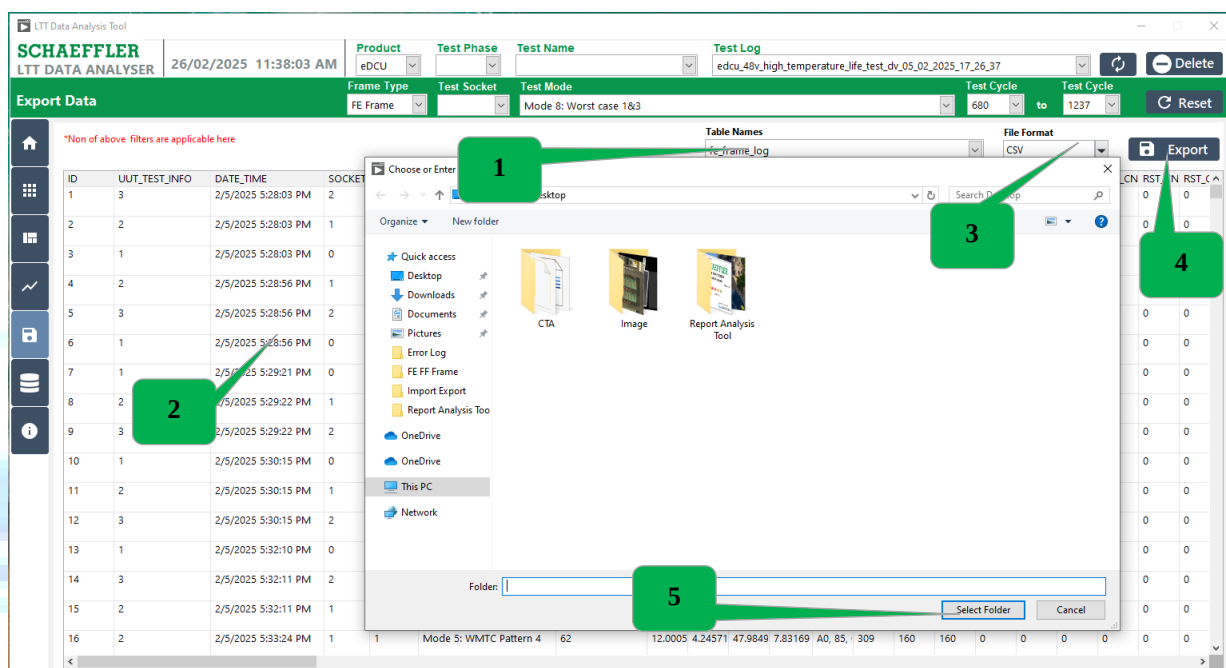


Figure 32: Export Data as File Format

Project Name: Lifetime Tester	Document ID: 23-10-051-VTF-CBAIC-UM	Version:1.0
	PP Form No: R/PP-03/25	Version Date: 27-02-2025
Type of document: Report Analysis User Manual		Page 38

