


How to Configure “Data Integration” ?

How to Configure “Data Integration”

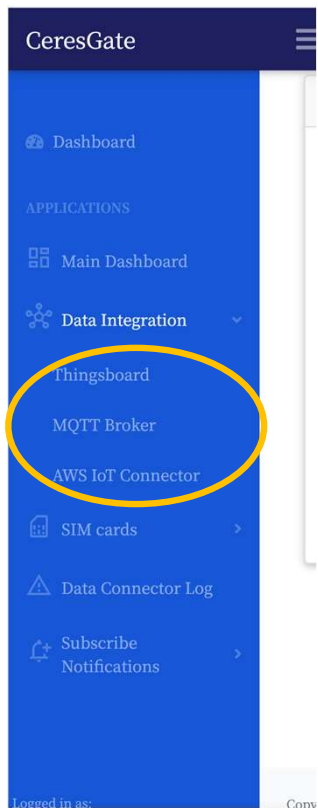

- Please click “Data Integration” menu Item.
- We support 4 different IoT Data Source connectors.
 - MQTT Broker
 - AWS IoT Connector
 - Azure IoT Hub
 - Thingsboard (profession edition)
- Each User Account can only configure 4 different IoT Data Source connectors.

How to Configure “Data Integration” ?

MQTT Broker Connector

How to Configure MQTT Broker Connector?

- Please click “MQTT Broker” menu Item.
- Please input each field for “MQTT Connection” Parameters
- You need to input your own uplink Topic
- **We support two authorization way with MQTT Broker - (1) username & password (2) SSL/TLS – certificate files**

The image shows the CeresGate web interface. On the left, a sidebar menu lists various options: Dashboard, Main Dashboard, Data Integration, Thingsboard, **MQTT Broker** (highlighted with a yellow circle), AWS IoT Connector, SIM cards, Data Connector Log, and Subscribe Notifications. A red arrow points from this menu item to the right, where the 'MQTT Broker Connector' configuration form is displayed. The form has two tabs: 'Set Connector' and 'Binding & Unbinding'. The 'Set Connector' tab is active, showing fields for Client ID, Hostname, User Name, MQTT Version, Keep Alive, Uplink Topic, SSL/TLS toggle, Client CA, URI, Port, Password, Connection Timeout, Qos, Root CA, and Client Key. The 'Uplink Topic' field is populated with 'mytopic/uplink'. The 'SAVE' button is at the bottom left of the form. The footer of the interface includes 'Logged in as: Com', 'Copyright ©2024 CREATIVE5 INC. All rights reserved.', and 'Privacy Policy · Terms & Conditions'.

How to Configure MQTT Broker Connector? (continue.)

- MQTT Version Support 3.1 , 3.1.1 & 5.0
- Connection Timeout & Keep Alive are starting from 600 sec.

The screenshot displays the CeresGate web interface for configuring an MQTT Broker Connector. The left sidebar contains a navigation menu with the following items: Dashboard, Main Dashboard, Data Integration (expanded), Thingsboard, **MQTT Broker** (highlighted with a yellow circle), AWS IoT Connector, SIM cards, Data Connector Log, and Subscribe Notifications. A red arrow points from the 'MQTT Broker' menu item to the configuration form on the right.

The configuration form is titled 'MQTT Broker Connector' and is divided into two tabs: 'Set Connector' and 'Binding & Unbinding'. The 'Set Connector' tab is active. The form contains the following fields and options:

- Client ID :
- Hostname :
- User Name :
- MQTT Version :
- Keep Alive (sec) :
- Uplink Topic :
- URI :
- Port :
- Password :
- Connection Timeout (sec) :
- Qos :
- SSL/TLS : ☐
- Root CA : 未選擇任何檔案
- Client CA : 未選擇任何檔案
- Client Key : 未選擇任何檔案

A blue 'SAVE' button is located at the bottom left of the configuration form.

At the bottom of the page, there is a footer with the text 'Logged in as: Conv' on the left, 'Copyright ©2024 CREATTIVES INC. All rights reserved.' in the center, and 'Privacy Policy · Terms & Conditions' on the right.

How to Configure MQTT Broker Connector? (continue.)

- Support SSL/TLS, Please click "Switch" Button to turn "On" or "Off" SSL/TLS
- You need to upload your own RootCA , ClientCA and ClientKey File to CeresGate
- URI must be "mqtt" or "mqtts"

The screenshot displays the CeresGate web interface for configuring an MQTT Broker Connector. The left sidebar contains a navigation menu with the following items: Dashboard, Main Dashboard, Data Integration, Thingsboard, MQTT Broker (highlighted with a yellow circle), AWS IoT Connector, SIM cards, Data Connector Log, and Subscribe Notifications. A red arrow points from the 'MQTT Broker' menu item to the main configuration panel.

The main configuration panel is titled 'MQTT Broker Connector' and is divided into two tabs: 'Set Connector' and 'Binding & Unbinding'. The 'Binding & Unbinding' tab is active. The configuration fields are as follows:

- Client ID : client_mqtt_01
- Hostname : xxx.example.com
- User Name : Please input username.
- MQTT Version : 5.0
- Keep Alive (sec) : 600
- Uplink Topic : mytopic
- URI : mqtts://
- Port : 8883
- Password : Please input password.
- Connection Timeout (sec) : 600
- Qos : 2
- Root CA : 選擇檔案 (Select File)
- Client Key : 選擇檔案 (Select File)

The 'SSL/TLS' checkbox is checked and circled in red. Blue arrows point to the '選擇檔案' (Select File) buttons for the Root CA and Client Key fields.

At the bottom of the panel, there is a 'SAVE' button. The footer of the interface includes the text 'Copyright ©2024 CREATIVES INC. All rights reserved.' and a link to 'Privacy Policy · Terms & Conditions'.

How to Configure MQTT Broker Connector? (continue.)

- Please click “MQTT Broker” menu Item.
- You need to bind your IMSI with MQTT Broker Connector.

The image shows two screenshots of the CeresGate web interface. The left screenshot shows the main menu with 'MQTT Broker' highlighted by a yellow circle. A red arrow points from this menu item to the right screenshot. The right screenshot shows the 'MQTT Broker' configuration page. At the top, there are two tabs: 'Set Connector' and 'Binding & Unbinding'. A blue arrow points to the 'Binding & Unbinding' tab. Below the tabs, there is a section titled 'IMSI NO. List'. It contains a 'Source IMSI No.' field with the value '901980020001234'. A blue arrow points to this field with the label '(1) click'. Below the 'Source IMSI No.' field is a 'CONFIRM' button. A blue arrow points to this button with the label '(3) click'. To the right of the 'Source IMSI No.' field is an 'Assigned IMSI No.' field. Between these two fields are two circular buttons: an orange one with '>>' and a teal one with '<<'. A blue arrow points to the orange button with the label '(2) click'.

How to Use “Data Connector Log” ?

How to use Data Connector Log?

- Please click “Data Connector Log” menu Item.
- You can use to trace the operation status of Data Connector.
- Connector Type : thingsboard, awsiotcore & mqtt
- Source Payload : {“IMSI”: your imsi number , “Payload”: your payload with hex string format }

CeresGate

Dashboard

APPLICATIONS

Main Dashboard

Data Integration >

SIM cards >

Data Connector Log

Subscribe Notifications >

Logged in as:

Copyright ©2024 CREATIVE5 INC. All rights reserved.

Privacy Policy · Terms & Conditions

Data Connector Log

2025-05-23 QUERY

Show 10 entries

Search:

TimeStamp	Connector Type	Uplink Status	Source Payload
No data available in table			
TimeStamp	Connector Type	Uplink Status	Source Payload

Showing 0 to 0 of 0 entries

Previous Next

We only keep 3 days of data connector log records.

How to Test “Downlink” from
Internet to your Hestia Dongle ?

How to test “Downlink”?

- Please make sure your Host Device and Hestia Dongle is ready to receive the data from satellite network first.
- You need to choose your IMSI No.
- Click “TEST DOWNLINK” Button.
- If it is sent successfully, it will show a successful dialog on the dashboard.
- Your Host Machine will receive a payload sent from Ceresgate Server.

