


6039


LEGOLAND®

LEGO®

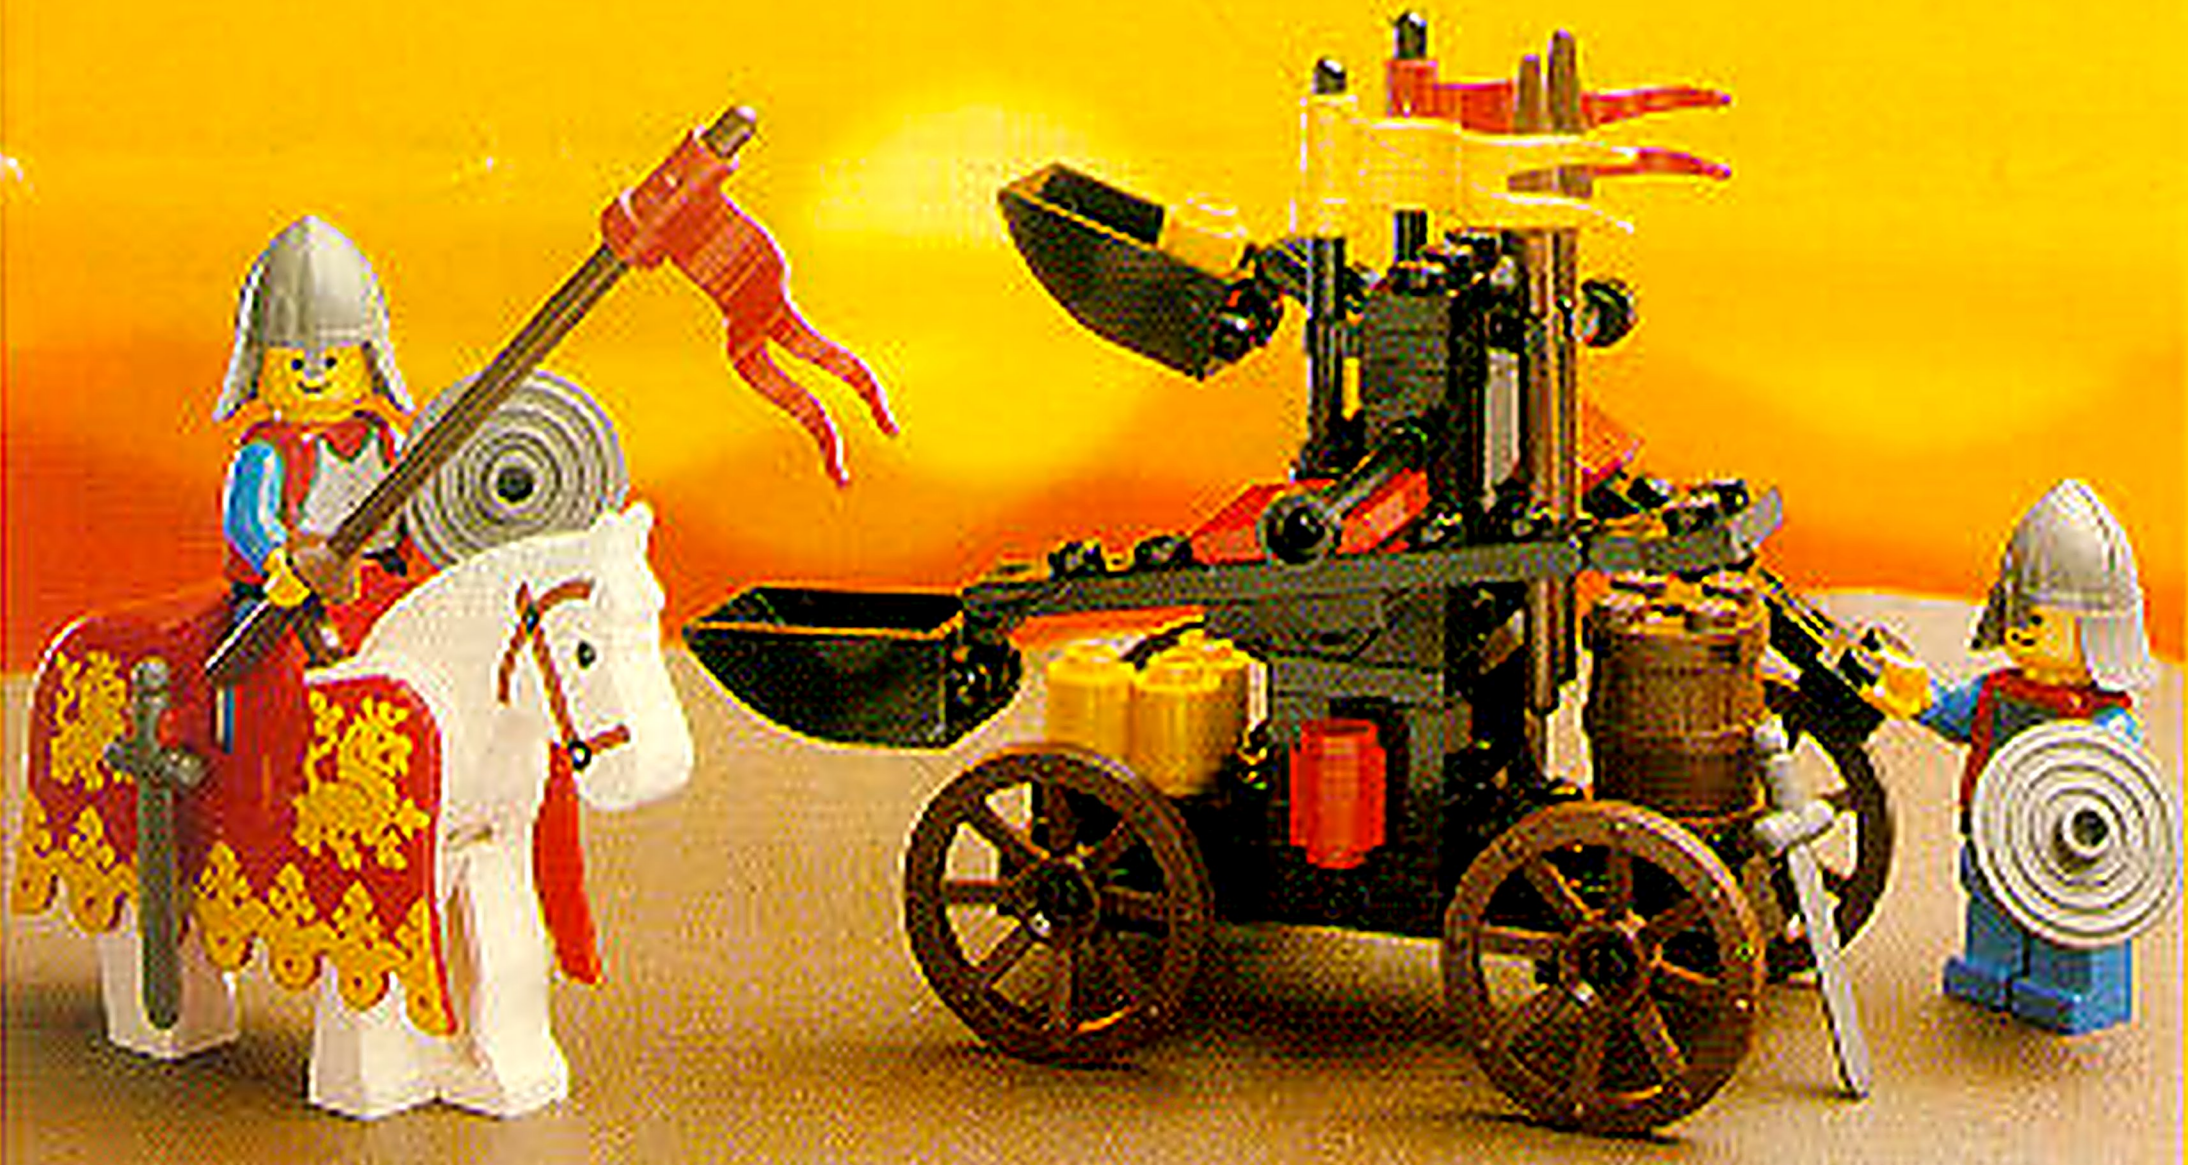

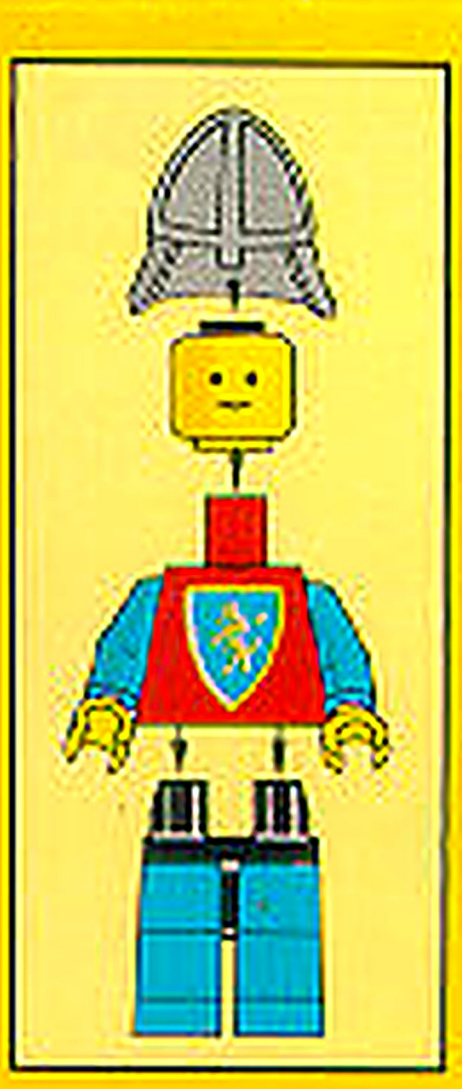

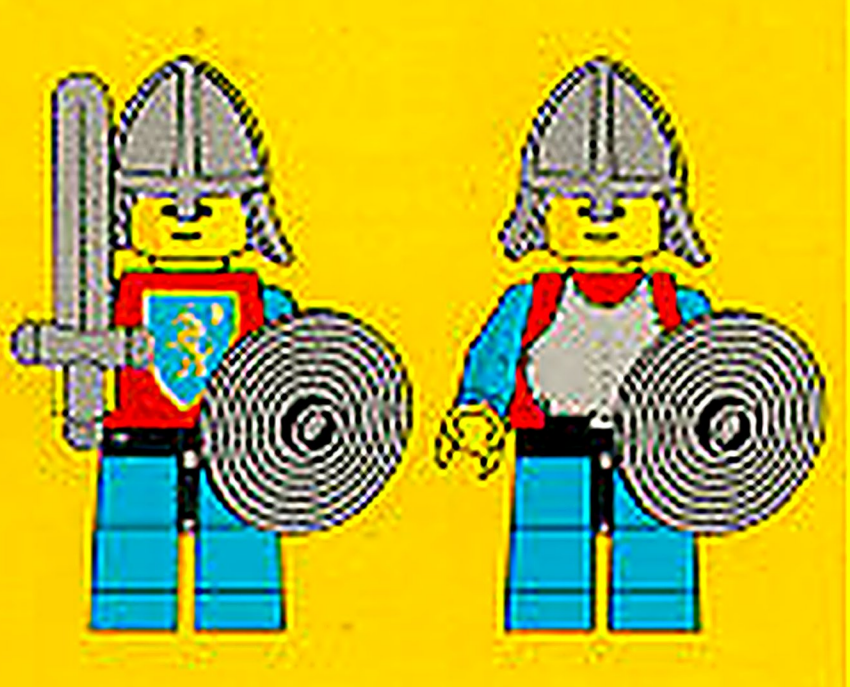

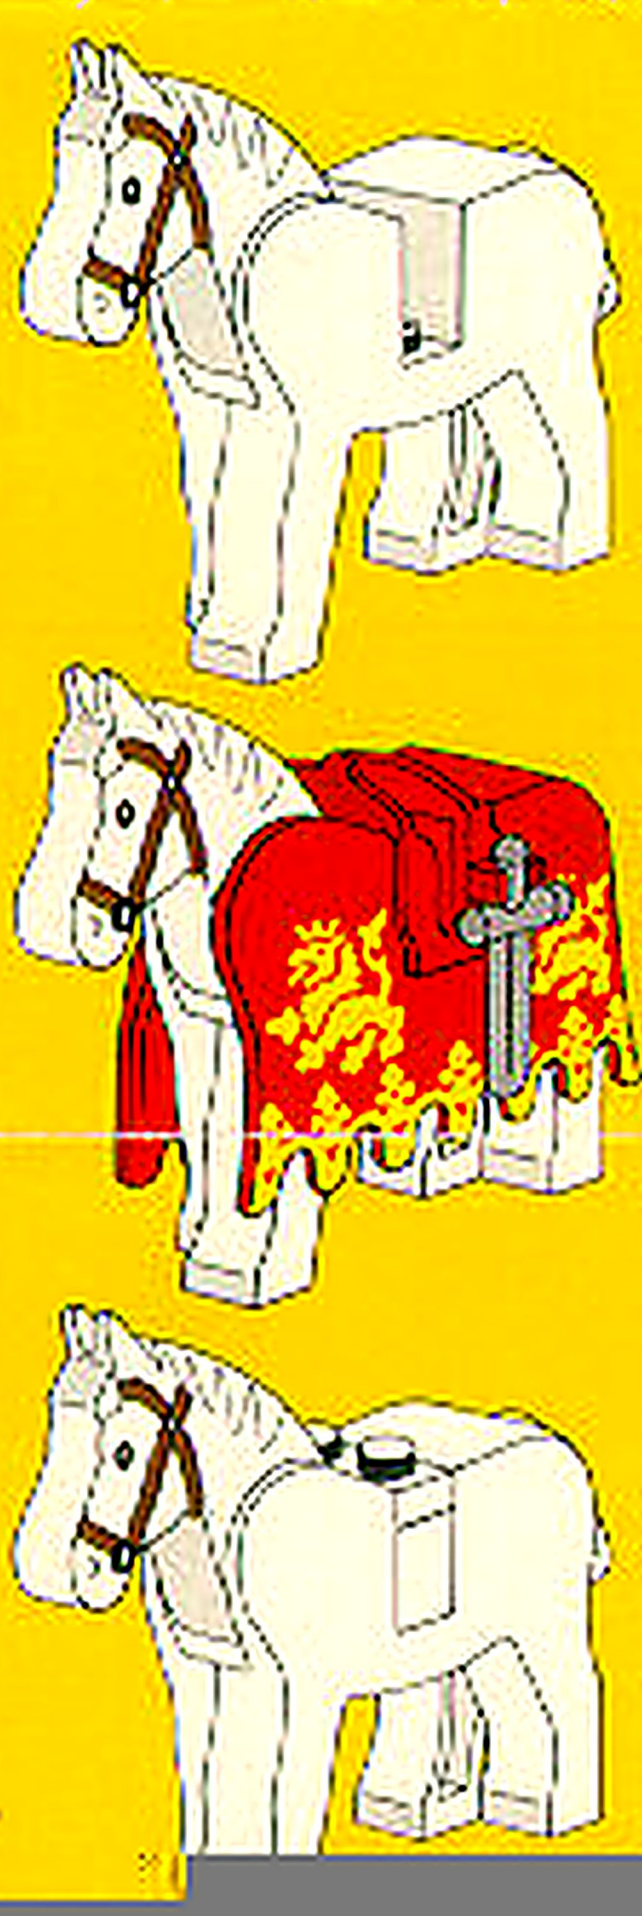




1

2




3

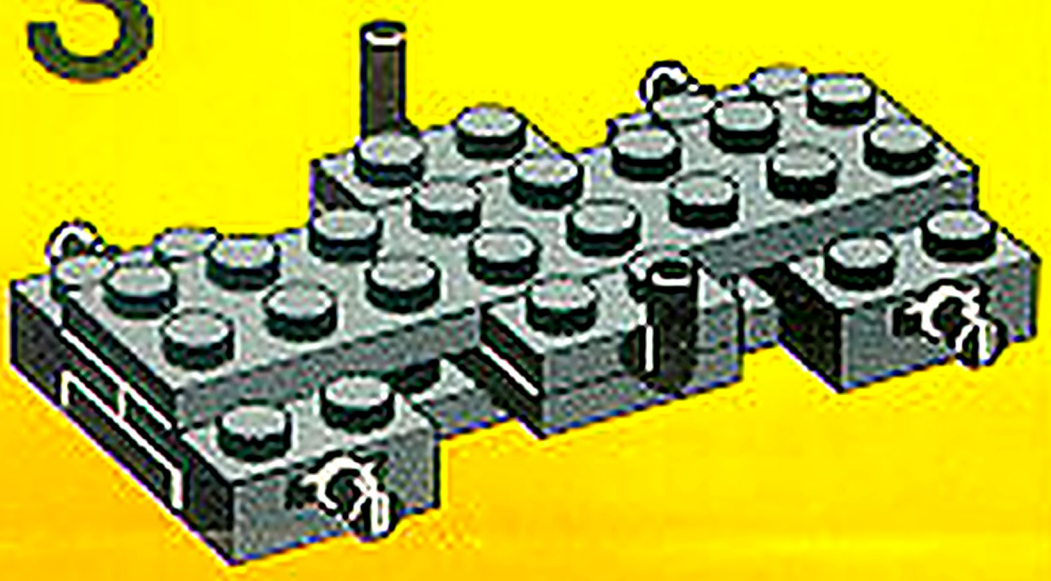


4




5

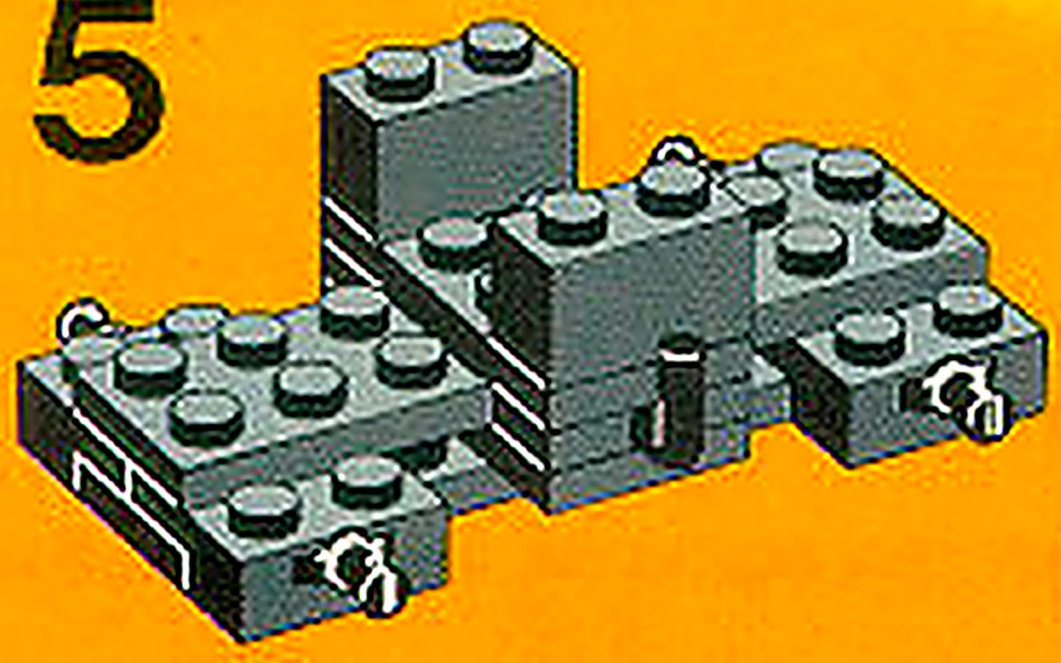


6

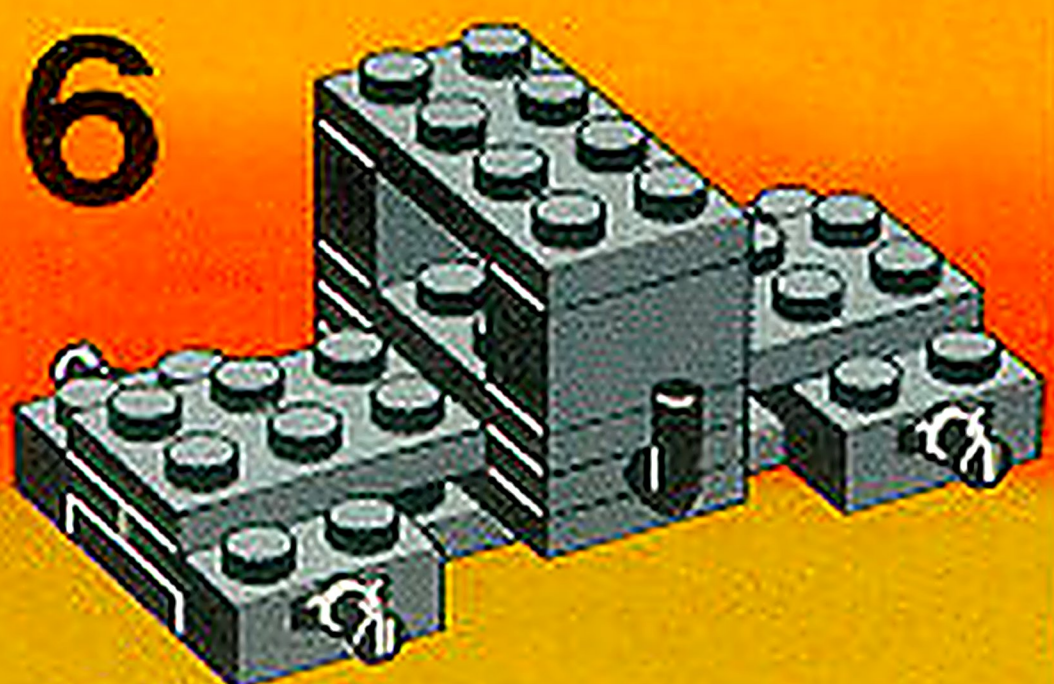


7

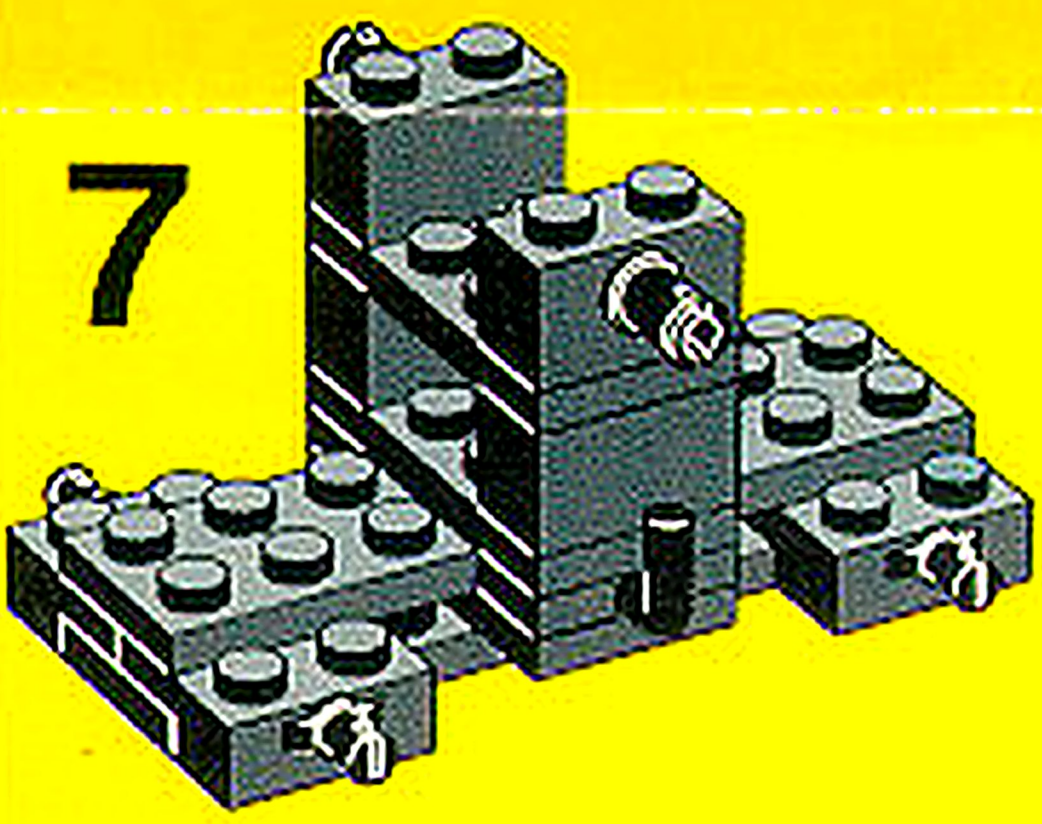


8

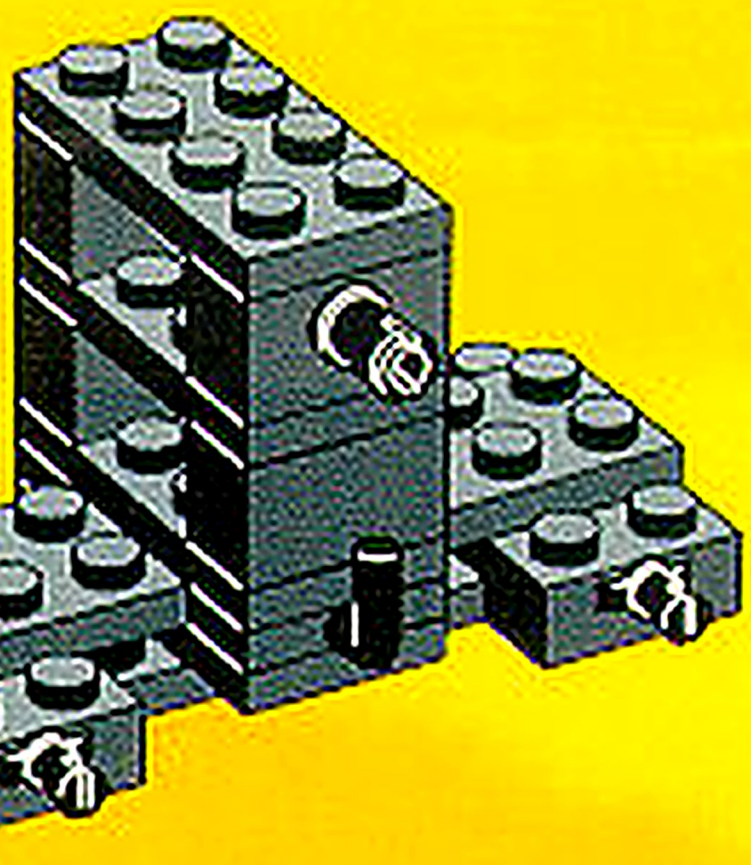

9

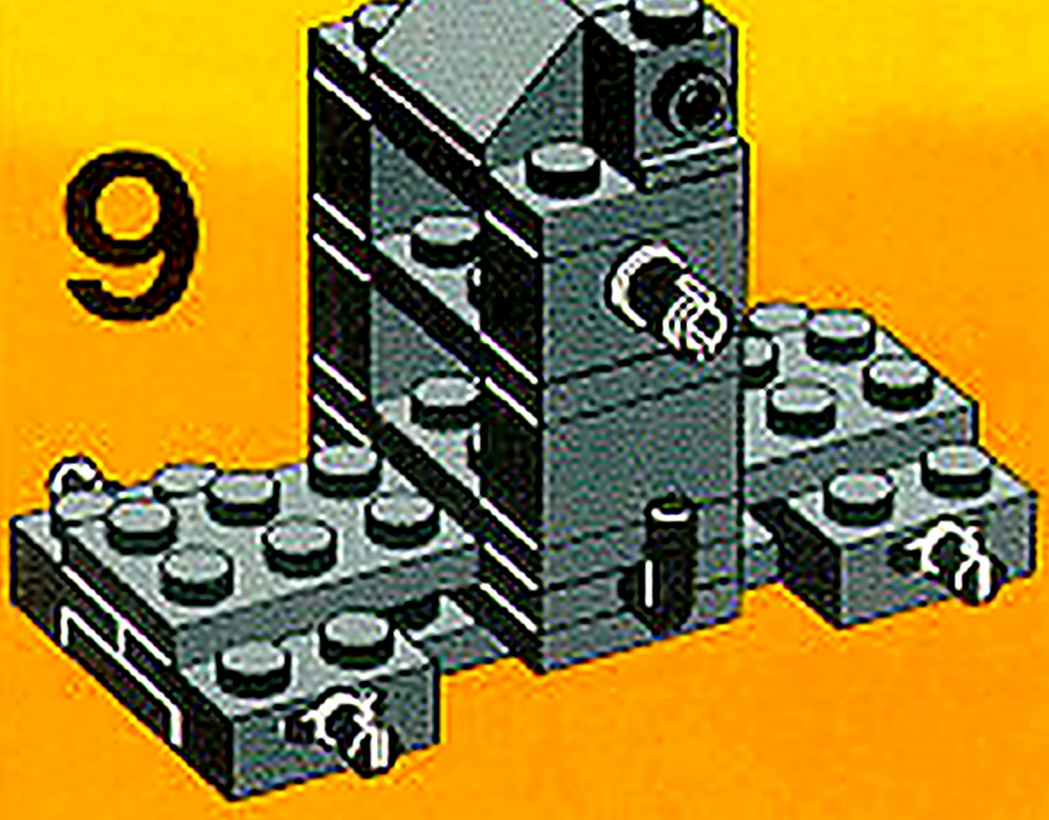

10

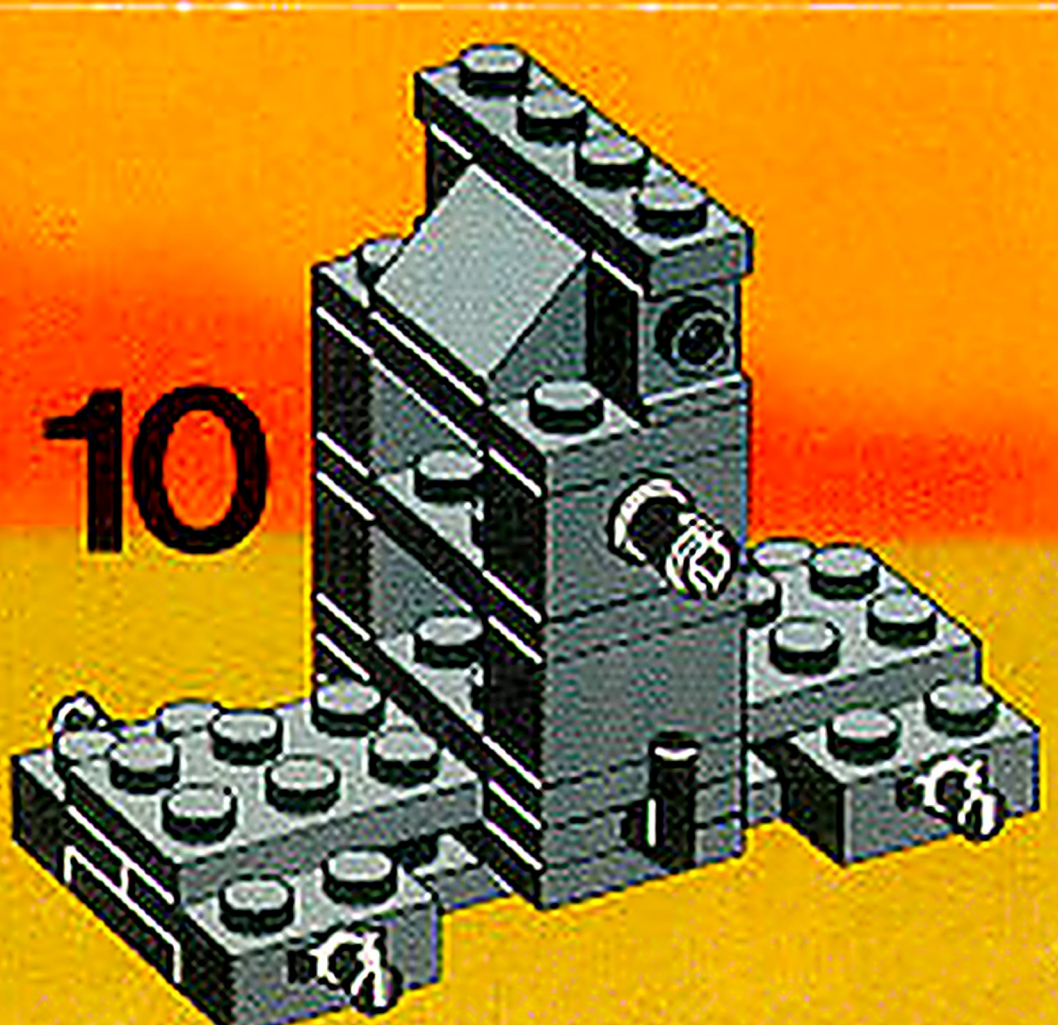



© '93 LEGO Group

11




12

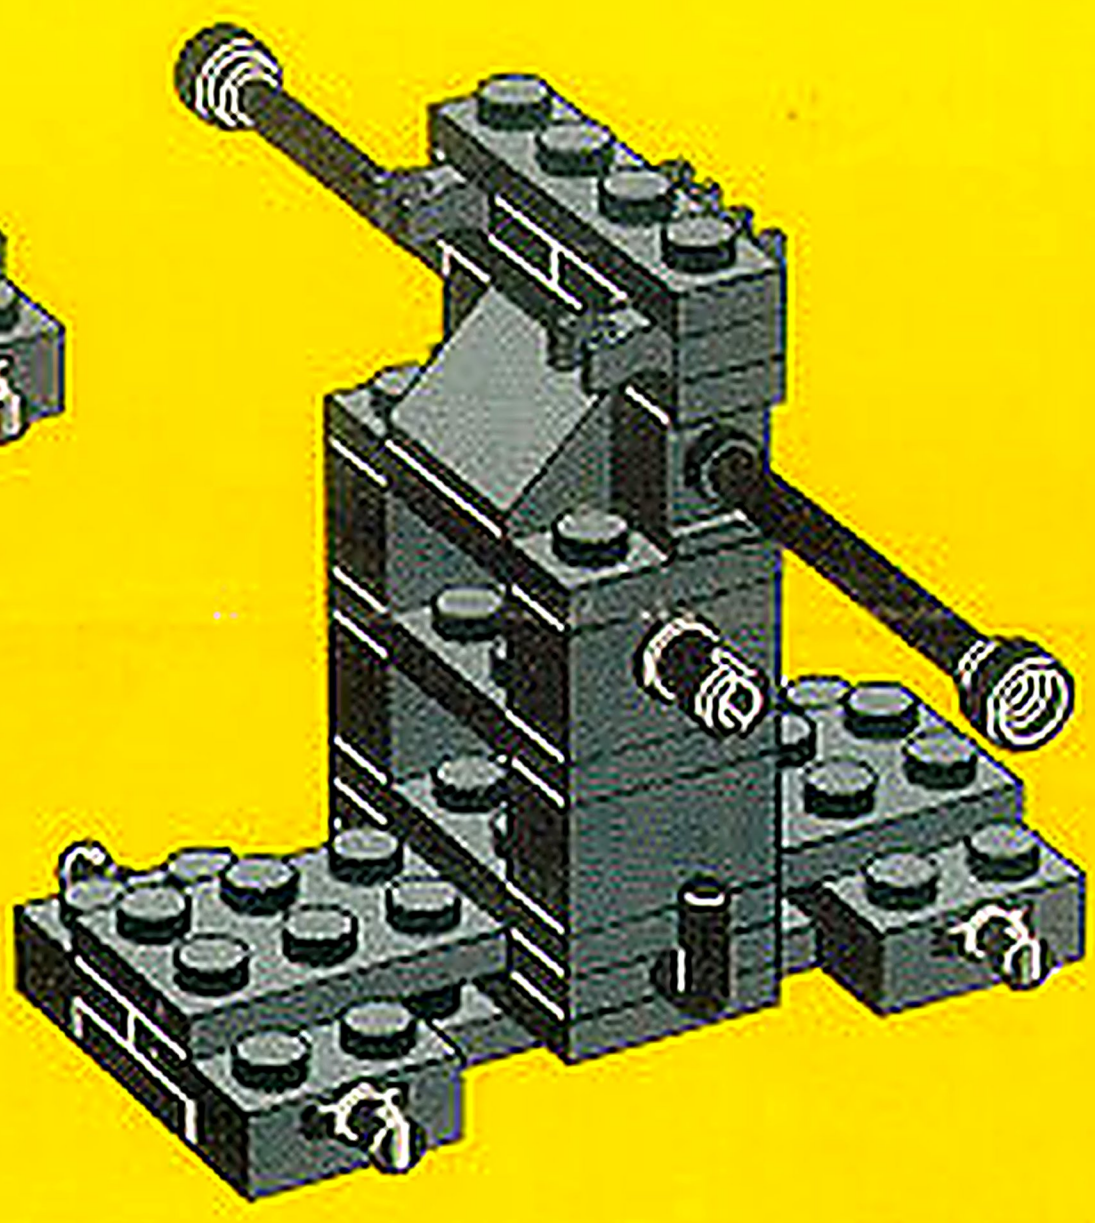


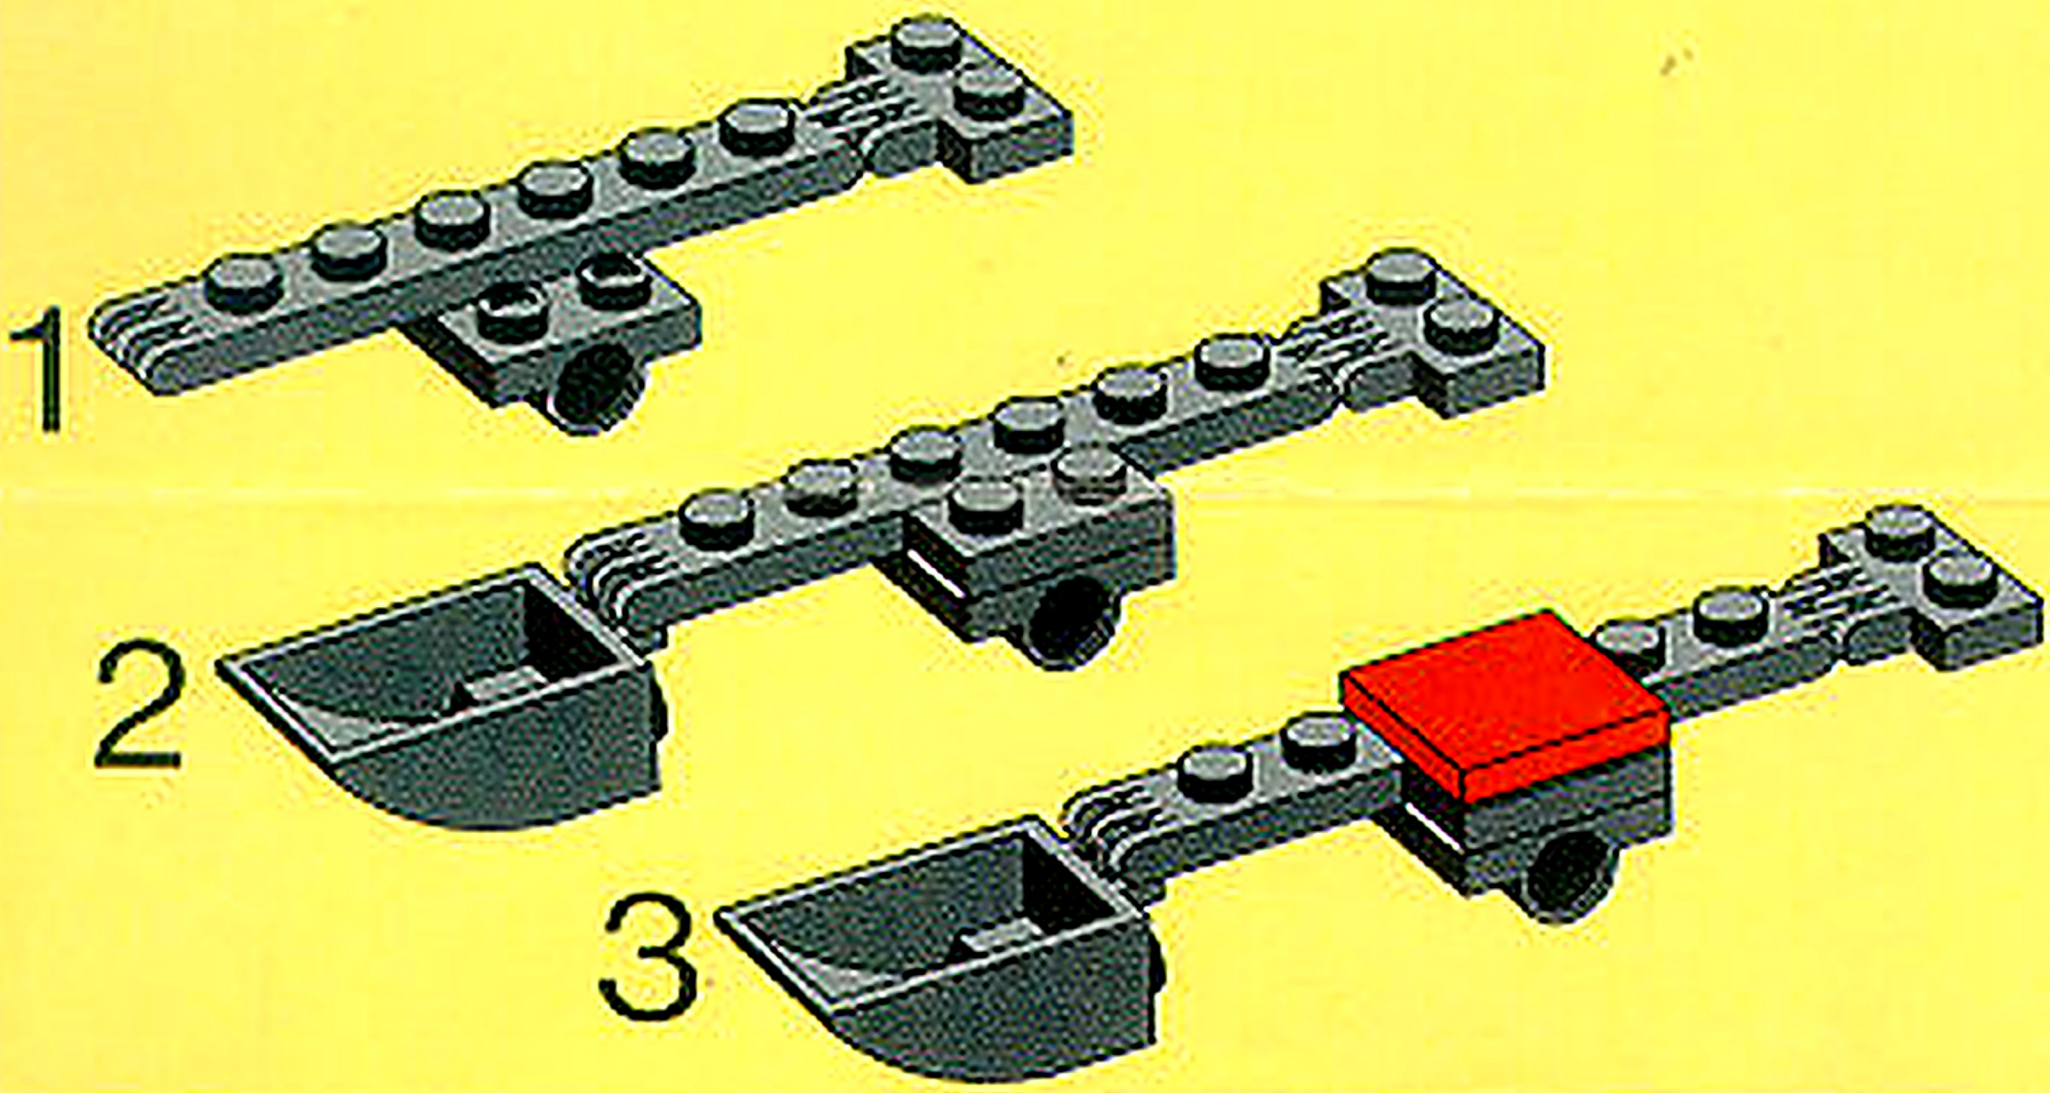


13

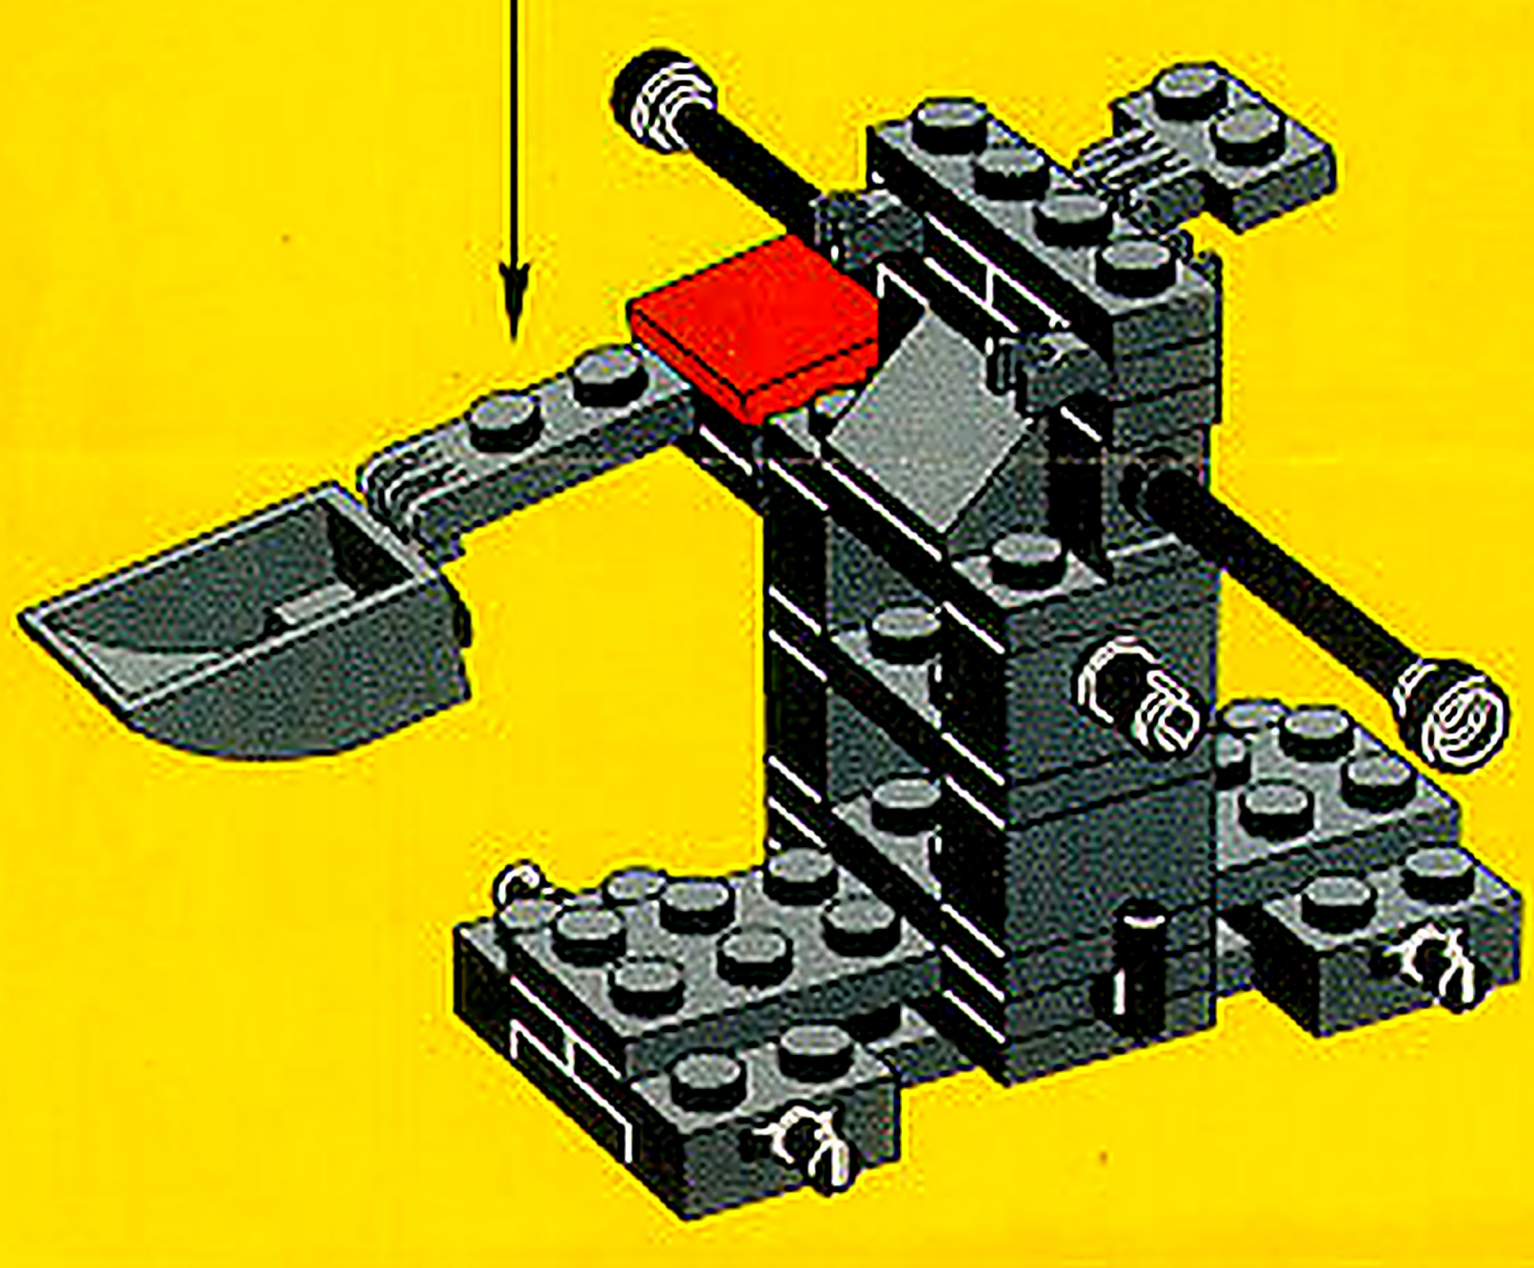


1

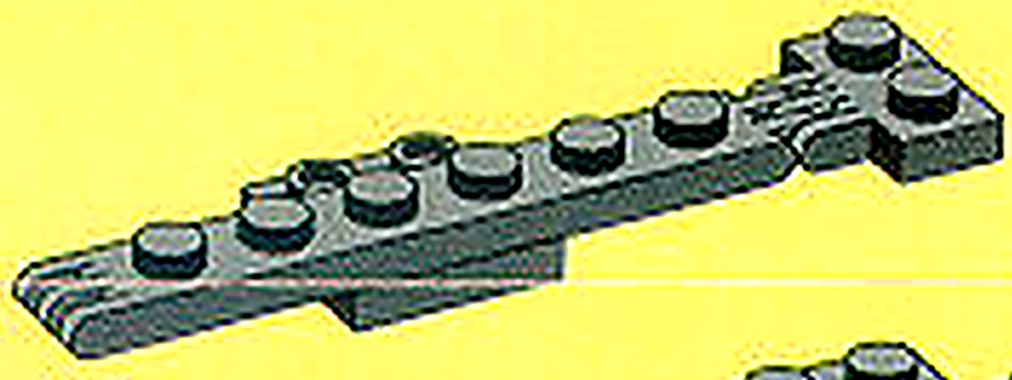


2

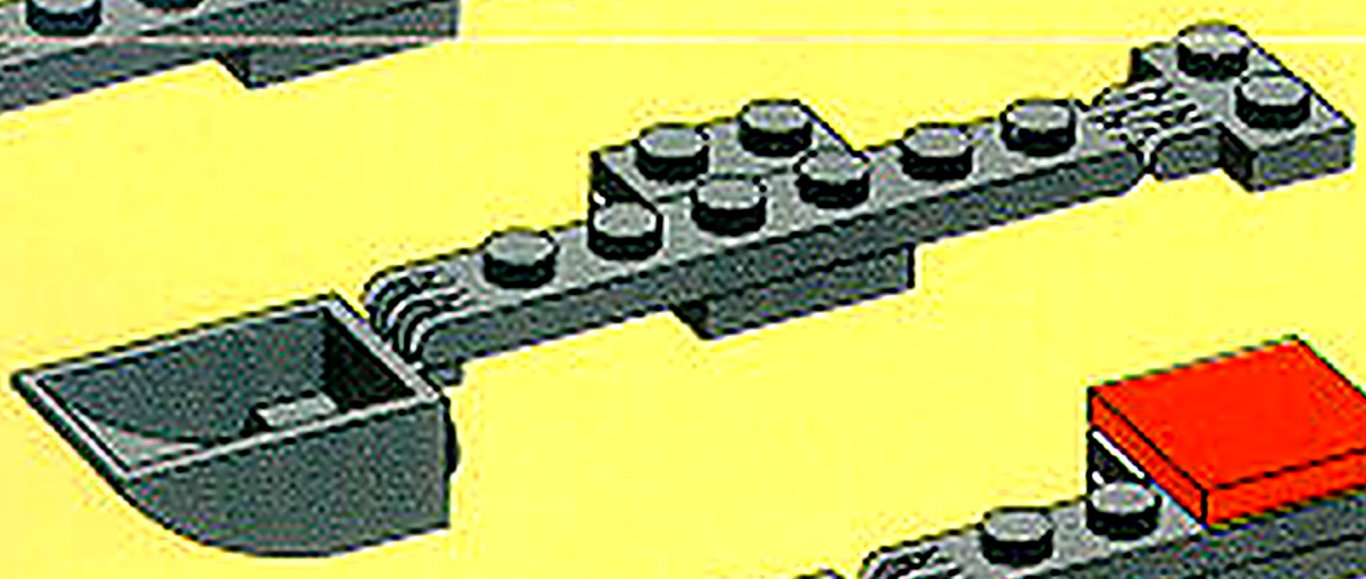

3

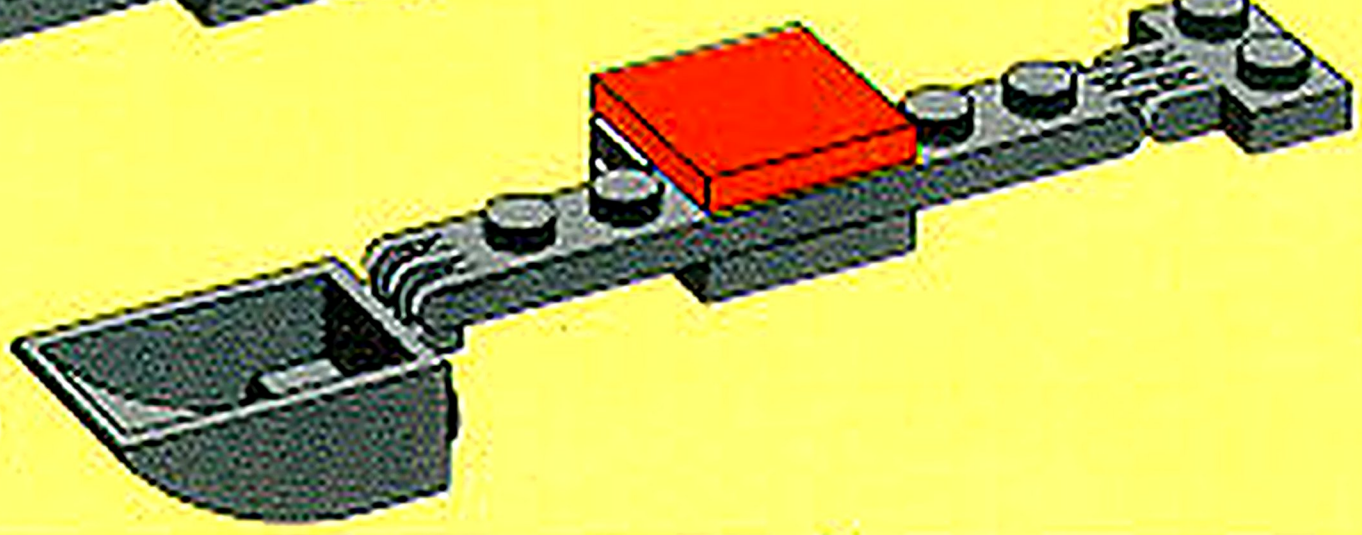


14

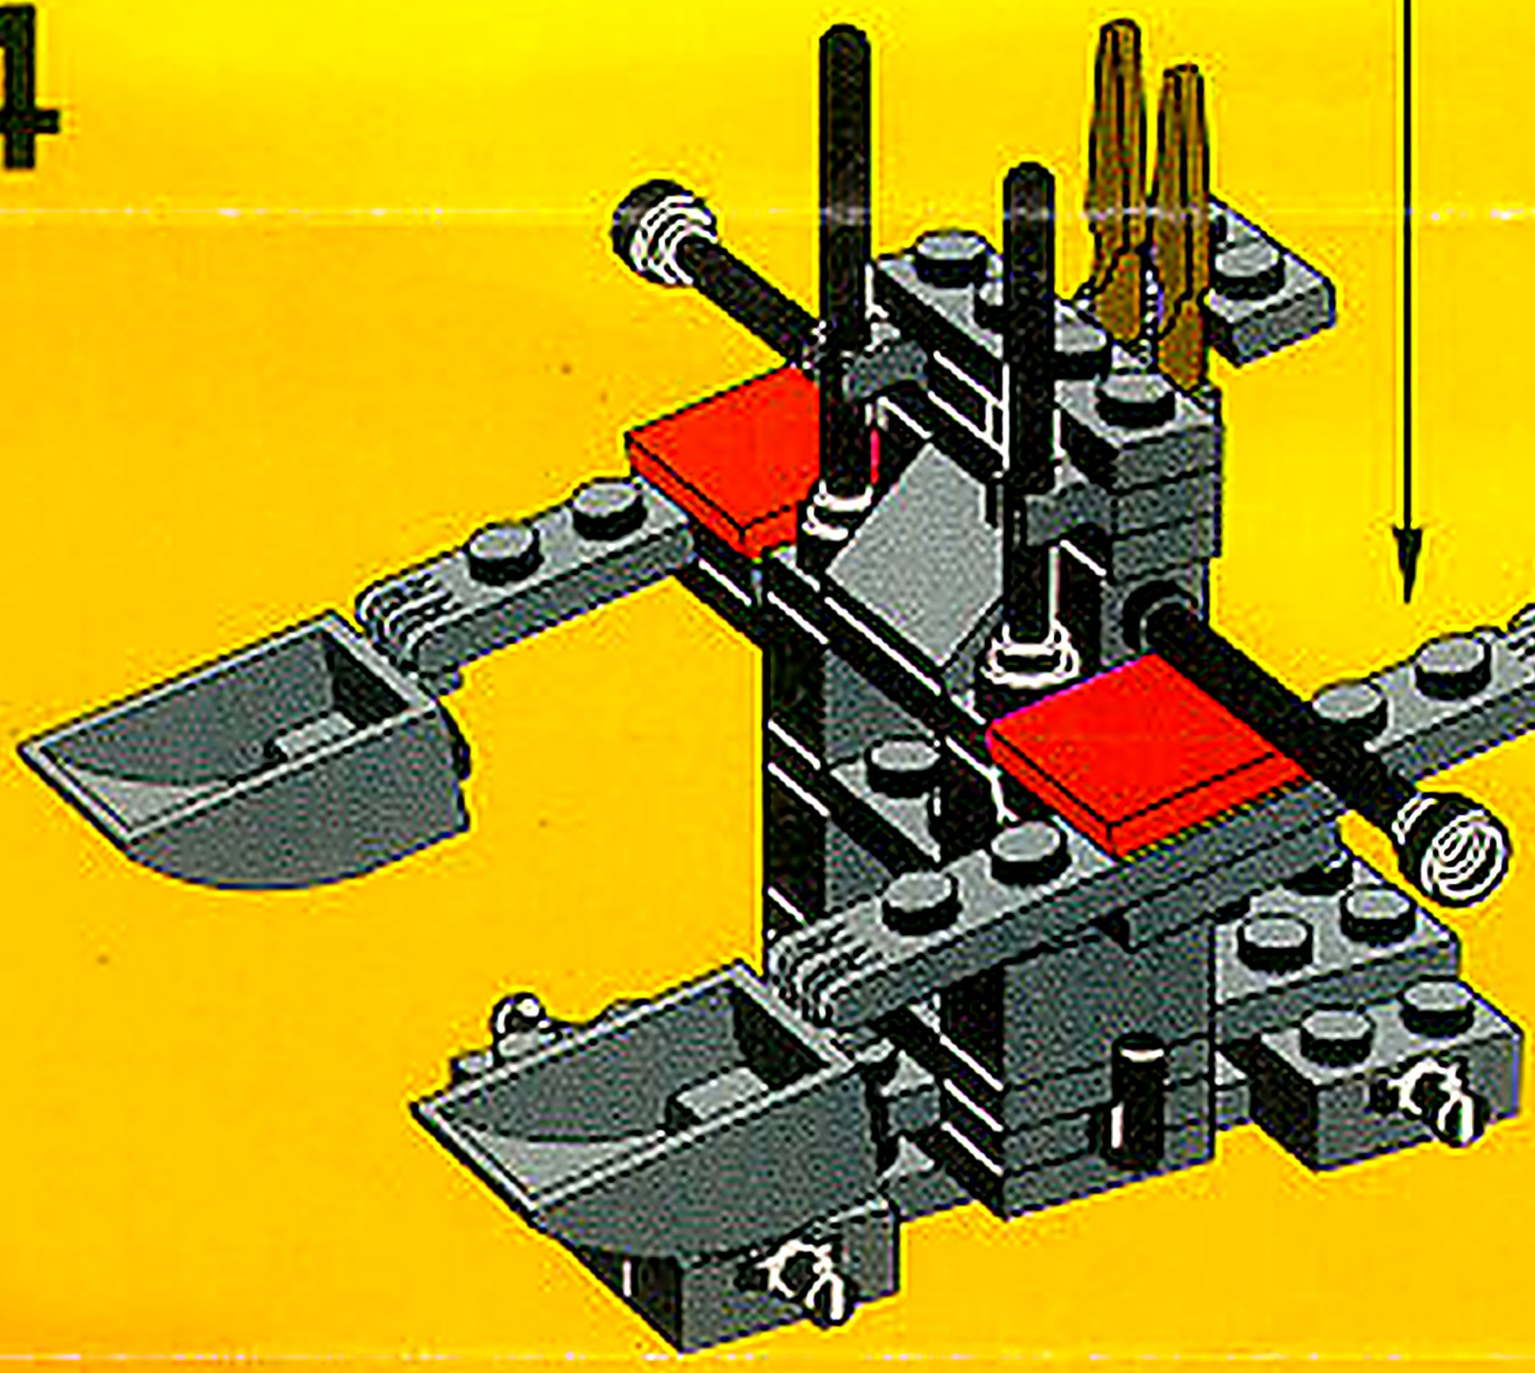




15

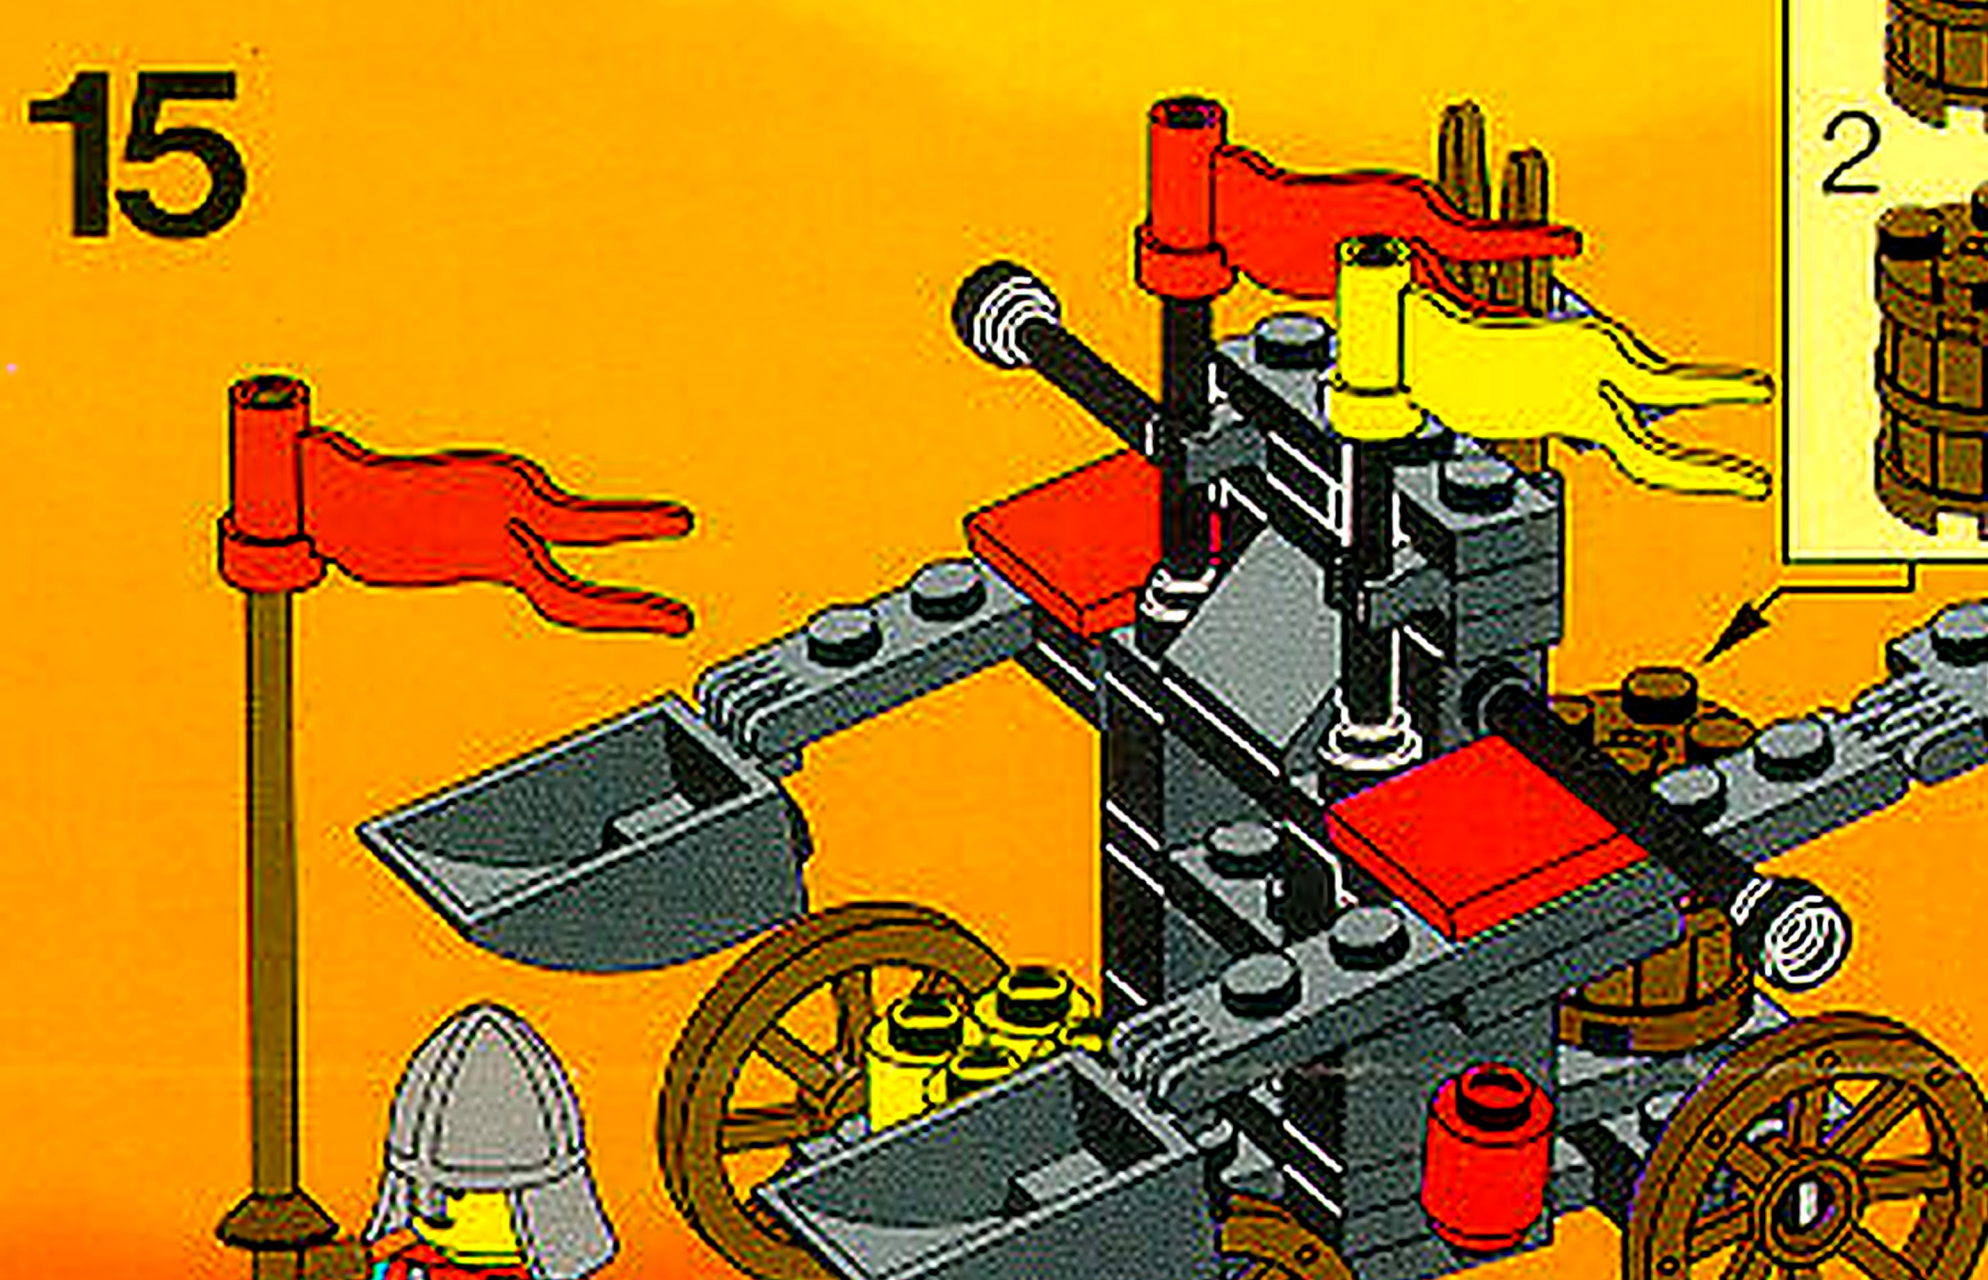

6039 Twin-Arm Launcher - parts list (1/2)



1x 2490px3
Red Animal Horse Barding with Yellow Lions Pattern

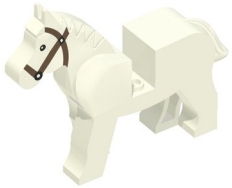

1x 4493c02
White Animal Horse with Brown/Black Tack Pattern




4x 3957
Black Antenna 4H



1x 2489
Brown Barrel 2 x 2 x 2



2x 3062b
Red Brick 1 x 1 Round with Hollow Stud

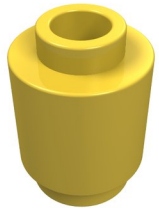


4x 3062b
Yellow Brick 1 x 1 Round with Hollow Stud



2x 4070
Black Brick 1 x 1 with Headlight



2x 3004
Black Brick 1 x 2

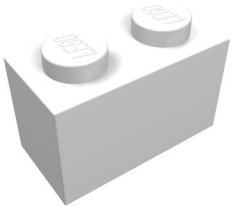

1x 3004
White Brick 1 x 2



2x 2458
Black Brick 1 x 2 with Pin



2x 4626
Black Excavator Bucket 2 x 3



2x 4495
Red Flag 4 x 1



1x 4495
Yellow Flag 4 x 1



2x 2452
Black Hinge Plate 1 x 2 with 3 Fingers on Side



2x 4504
Black Hinge Plate 1 x 6 with 2 and 3 Fingers on Ends



2x 3844
Dark Gray Helmet Castle with Neck Protector



2x 3876
Dark Gray Shield Round



2x 3847a
Dark Gray Sword Shortsword - ABS plastic



2x 3626ap01
Yellow Minifig Head with Solid Stud and Standard Grin Pattern




2x 970c00
Blue Minifig Hips and Legs (Complete) (w/ Black Top)



1x 3849
Brown Minifig Lance



2x 4497
Brown Minifig Spear

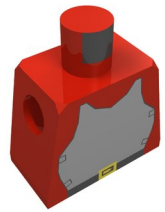

1x 973p40
Red Minifig Torso with Castle Breastplate Pattern (w/ Blue




1x 973px138
Red Minifig Torso with Yellow Lion Shield on Blue Background

6039 Twin-Arm Launcher - parts list (2/2)




2x 4073
Yellow Plate 1 x 1 Round

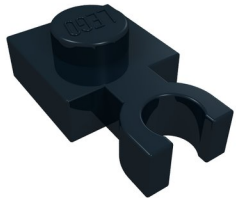

4x 4085b
Black Plate 1 x 1 with Clip Vertical - Type 2



2x 3023
Black Plate 1 x 2



1x 3023
White Plate 1 x 2




2x 4623
Black Plate 1 x 2 with Arm



2x 3710
Black Plate 1 x 4



1x 4032
Brown Plate 2 x 2 Round

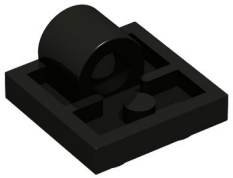

2x 2444
Black Plate 2 x 2 with Hole



4x 4488
Black Plate 2 x 2 with Wheel Holder




4x 3020
Black Plate 2 x 4



2x 3034
Black Plate 2 x 8



1x 3039
Black Slope Brick 45 2 x 2

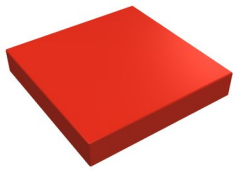

2x 3068b
Red Tile 2 x 2 with Groove



4x 2470
Brown Wheel Spoked 3 & 1/2 x 3 & 1/2